

**Z650**  
**Z650 ABS**

---

**Motorcycle**  
**Service Manual**

---



**Kawasaki**



# Quick Reference Guide

<b>General Information</b>	<b>1</b>
<b>Periodic Maintenance</b>	<b>2</b>
<b>Fuel System (DFI)</b>	<b>3</b>
<b>Cooling System</b>	<b>4</b>
<b>Engine Top End</b>	<b>5</b>
<b>Clutch</b>	<b>6</b>
<b>Engine Lubrication System</b>	<b>7</b>
<b>Engine Removal/Installation</b>	<b>8</b>
<b>Crankshaft/Transmission</b>	<b>9</b>
<b>Wheels/Tires</b>	<b>10</b>
<b>Final Drive</b>	<b>11</b>
<b>Brakes</b>	<b>12</b>
<b>Suspension</b>	<b>13</b>
<b>Steering</b>	<b>14</b>
<b>Frame</b>	<b>15</b>
<b>Electrical System</b>	<b>16</b>
<b>Appendix</b>	<b>17</b>

This quick reference guide will assist you in locating a desired topic or procedure.

- Bend the pages back to match the black tab of the desired chapter number with the black tab on the edge at each table of contents page.
- Refer to the sectional table of contents for the exact pages to locate the specific topic required.







**Z650**  
**Z650 ABS**

# Motorcycle Service Manual

---

All rights reserved. No parts of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic mechanical photocopying, recording or otherwise, without the prior written permission of Quality Assurance Division/Motorcycle & Engine Company/Kawasaki Heavy Industries, Ltd., Japan.

No liability can be accepted for any inaccuracies or omissions in this publication, although every possible care has been taken to make it as complete and accurate as possible.

The right is reserved to make changes at any time without prior notice and without incurring an obligation to make such changes to products manufactured previously. See your Motorcycle dealer for the latest information on product improvements incorporated after this publication.

All information contained in this publication is based on the latest product information available at the time of publication. Illustrations and photographs in this publication are intended for reference use only and may not depict actual model component parts.

## LIST OF ABBREVIATIONS

A	ampere(s)	IC	integrated circuit
ABDC	after bottom dead center	in.	inch(es)
ABS	anti-lock brake system	km/h	kilometers per hour
AC	alternating current	L	liter(s)
Ah	ampere hour	LCD	liquid crystal display
ATDC	after top dead center	LED	light emitting diode
BBDC	before bottom dead center	lb	pound(s)
BDC	bottom dead center	m	meter(s)
BTDC	before top dead center	min	minute(s)
°C	degree(s) Celsius	mmHg	millimeters of mercury
cmHg	centimeters of mercury	mph	miles per hour
CPU	central processing unit	N	newton(s)
cu in.	cubic inch(es)	oz	ounce(s)
DC	direct current	Pa	pascal(s)
DFI	digital fuel injection	PS	horsepower(s)
DOHC	double overhead camshaft	psi	pound(s) per square inch
DOT	department of transportation	qt	quart(s)
ECU	electronic control unit	r	revolution
F	farad(s)	rpm	revolution(s) per minute
°F	degree(s) Fahrenheit	s	second(s)
ft	foot, feet	TDC	top dead center
g	gram(s)	TIR	total indicator reading
gal	gallon(s)	V	volt(s)
h	hour(s)	W	watt(s)
HP	horsepower(s)	Ω	ohm(s)

## COUNTRY AND AREA CODES

AT	Austria	ID	Indonesia
AU	Australia	IN	India
AU LAMS	Australia Learner Approved Motorcycle Scheme	MY	Malaysia
CA	Canada	PH	Philippines
CAL	California	SEA-B1	Southeast Asia B1
CH	Switzerland	SEA-B3	Southeast Asia B3
CN	China	TH	Thailand
DE	Germany	US	United States
EUR	Europe	WVTA (FULL)	WVTA Model (Full Power)

## EMISSION CONTROL INFORMATION

To protect the environment in which we all live, Kawasaki has incorporated crankcase emission (1) and exhaust emission (2) control systems in compliance with applicable regulations of the United States Environmental Protection Agency and California Air Resources Board. Additionally, Kawasaki has incorporated an evaporative emission control system (3) in compliance with applicable regulations of the California Air Resources Board on vehicles sold in California only.

### 1. Crankcase Emission Control System

This system eliminates the release of crankcase vapors into the atmosphere. Instead, the vapors are routed through an oil separator to the intake side of the engine. While the engine is operating, the vapors are drawn into combustion chamber, where they are burned along with the fuel and air supplied by the fuel injection system.

### 2. Exhaust Emission Control System

This system reduces the amount of pollutants discharged into the atmosphere by the exhaust of this motorcycle. The fuel, ignition, and exhaust systems of this motorcycle have been carefully designed and constructed to ensure an efficient engine with low exhaust pollutant levels.

The exhaust system of this model motorcycle manufactured primarily for sale in California includes a catalytic converter system.

### 3. Evaporative Emission Control System

Vapors caused by fuel evaporation in the fuel system are not vented into the atmosphere. Instead, fuel vapors are routed into the running engine to be burned, or stored in a canister when the engine is stopped.

The Clean Air Act, which is the Federal law covering motor vehicle pollution, contains what is commonly referred to as the Act's "tampering provisions".

"Sec. 203(a) The following acts and the causing thereof are prohibited.

(3)(A) for any person to remove or render inoperative any device or element of design installed on or in a motor vehicle or motor vehicle engine in compliance with regulations under this title prior to its sale and delivery to the ultimate purchaser, or for any manufacturer or dealer knowingly to remove or render inoperative any such device or element of design after such sale and delivery to the ultimate purchaser.

(3)(B) for any person engaged in the business of repairing, servicing, selling, leasing, or trading motor vehicles or motor vehicle engines, or who operates a fleet of motor vehicles knowingly to remove or render inoperative any device or element of design installed on or in a motor vehicle or motor vehicle engine in compliance with regulations under this title following its sale and delivery to the ultimate purchaser..."

### NOTE

○ *The phrase "remove or render inoperative any device or element of design" has been generally interpreted as follows.*

1. *Tampering does not include the temporary removal or rendering inoperative of devices or elements of design in order to perform maintenance.*
2. *Tampering could include.*
  - a. *Maladjustment of vehicle components such that the emission standards are exceeded.*
  - b. *Use of replacement parts or accessories which adversely affect the performance or durability of the motorcycle.*
  - c. *Addition of components or accessories that result in the vehicle exceeding the standards.*
  - d. *Permanently removing, disconnecting, or rendering inoperative any component or element of design of the emission control systems.*

**WE RECOMMEND THAT ALL DEALERS OBSERVE THESE PROVISIONS OF FEDERAL LAW, THE VIOLATION OF WHICH IS PUNISHABLE BY CIVIL PENALTIES NOT EXCEEDING \$10 000 PER VIOLATION.**

## **TAMPERING WITH NOISE CONTROL SYSTEM PROHIBITED**

Federal law prohibits the following acts or the causing thereof. (1) The removal or rendering inoperative by any person other than for purposes of maintenance, repair, or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use, or (2) the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

Among those acts presumed to constitute tampering are the acts listed below.

- Replacement of the original exhaust system or muffler with a component not in compliance with Federal regulations.
- Removal of the muffler(s) or any internal portion of the muffler(s).
- Removal of the air box or air box cover.
- Modifications to the muffler(s) or air intake system by cutting, drilling, or other means if such modifications result in increased noise levels.

# Foreword

This manual is designed primarily for use by trained mechanics in a properly equipped shop. However, it contains enough detail and basic information to make it useful to the owner who desires to perform his own basic maintenance and repair work. A basic knowledge of mechanics, the proper use of tools, and workshop procedures must be understood in order to carry out maintenance and repair satisfactorily. Whenever the owner has insufficient experience or doubts his ability to do the work, all adjustments, maintenance, and repair should be carried out only by qualified mechanics.

In order to perform the work efficiently and to avoid costly mistakes, read the text, thoroughly familiarize yourself with the procedures before starting work, and then do the work carefully in a clean area. Whenever special tools or equipment are specified, do not use makeshift tools or equipment. Precision measurements can only be made if the proper instruments are used, and the use of substitute tools may adversely affect safe operation.

**For the duration of the warranty period,** we recommend that all repairs and scheduled maintenance be performed in accordance with this service manual. Any owner maintenance or repair procedure not performed in accordance with this manual may void the warranty.

To get the longest life out of your vehicle.

- Follow the Periodic Maintenance Chart in the Service Manual.
- Be alert for problems and non-scheduled maintenance.
- Use proper tools and genuine Kawasaki Motorcycle parts. Special tools, gauges, and testers that are necessary when servicing Kawasaki motorcycles are introduced by the Service Manual. Genuine parts provided as spare parts are listed in the Parts Catalog.
- Follow the procedures in this manual carefully. Don't take shortcuts.
- Remember to keep complete records of maintenance and repair with dates and any new parts installed.

---

## How to Use This Manual

---

In this manual, the product is divided into its major systems and these systems make up the manual's chapters. The Quick Reference

Guide shows you all of the product's system and assists in locating their chapters. Each chapter in turn has its own comprehensive Table of Contents.

For example, if you want stick coil information, use the Quick Reference Guide to locate the Electrical System chapter. Then, use the Table of Contents on the first page of the chapter to find the Stick Coil section.

Whenever you see symbols, heed their instructions! Always follow safe operating and maintenance practices.

### **DANGER**

**DANGER** indicates a hazardous situation which, if not avoided, will result in death or serious injury.

### **WARNING**

**WARNING** indicates a hazardous situation which, if not avoided, could result in death or serious injury.

### **NOTICE**

**NOTICE** is used to address practices not related to personal injury.

This manual contains four more symbols which will help you distinguish different types of information.

### **NOTE**

○ *NOTE* indicates information that may help or guide you in the operation or service of the vehicle.

- Indicates a procedural step or work to be done.
- Indicates a procedural sub-step or how to do the work of the procedural step it follows. It also precedes the text of a NOTE.
- ★ Indicates a conditional step or what action to take based on the results of the test or inspection in the procedural step or sub-step it follows.

In most chapters an exploded view illustration of the system components follows the Table of Contents. In these illustrations you will find the instructions indicating which parts require specified tightening torque, oil, grease or a locking agent during assembly.



# General Information

## Table of Contents

Before Servicing .....	1-2
Model Identification.....	1-7
General Specifications.....	1-8
Unit Conversion Table .....	1-11

# 1-2 GENERAL INFORMATION


## Before Servicing

Before starting to perform an inspection service or carry out a disassembly and reassembly operation on a motorcycle, read the precautions given below. To facilitate actual operations, notes, illustrations, photographs, cautions, and detailed descriptions have been included in each chapter wherever necessary. This section explains the items that require particular attention during the removal and reinstallation or disassembly and reassembly of general parts.

Especially note the following.


### **Battery Ground**

Before completing any service on the motorcycle, disconnect the battery cables from the battery to prevent the engine from accidentally turning over. Disconnect the ground cable (-) first and then the positive (+). When completed with the service, first connect the positive (+) cable to the positive (+) terminal of the battery then the negative (-) cable to the negative terminal.

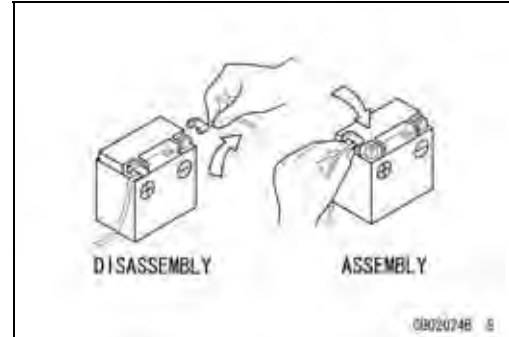

### **Edges of Parts**

Lift large or heavy parts wearing gloves to prevent injury from possible sharp edges on the parts.

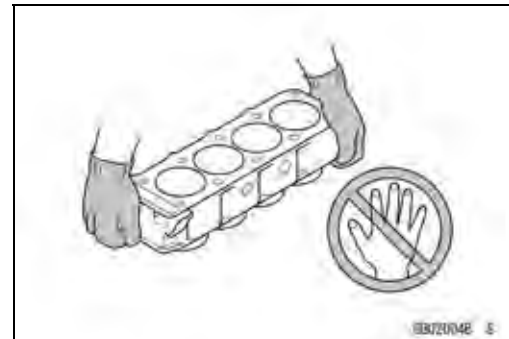

### **Solvent**

Use a high flash-point solvent when cleaning parts. High flash-point solvent should be used according to directions of the solvent manufacturer.



### **Cleaning Vehicle before Disassembly**

Clean the vehicle thoroughly before disassembly. Dirt or other foreign materials entering into sealed areas during vehicle disassembly can cause excessive wear and decrease performance of the vehicle.






## Before Servicing


### **Arrangement and Cleaning of Removed Parts**

Disassembled parts are easy to confuse. Arrange the parts according to the order the parts were disassembled and clean the parts in order prior to assembly.

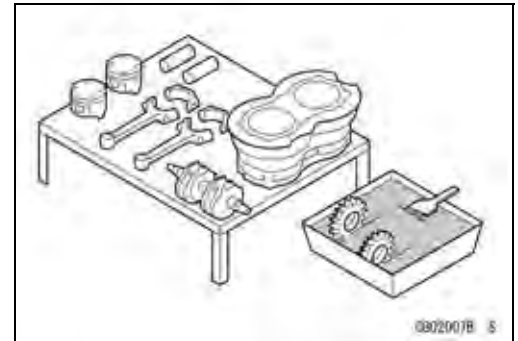

### **Storage of Removed Parts**

After all the parts including subassembly parts have been cleaned, store the parts in a clean area. Put a clean cloth or plastic sheet over the parts to protect from any foreign materials that may collect before re-assembly.

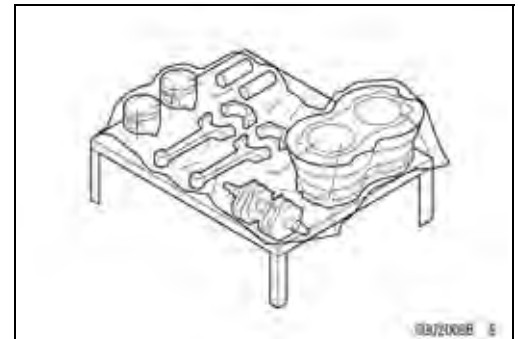


### **Inspection**

Reuse of worn or damaged parts may lead to serious accident. Visually inspect removed parts for corrosion, discoloration, or other damage. Refer to the appropriate sections of this manual for service limits on individual parts. Replace the parts if any damage has been found or if the part is beyond its service limit.




### **Replacement Parts**

Replacement parts must be KAWASAKI genuine or recommended by KAWASAKI. Gaskets, O-rings, oil seals, grease seals, circlips, cotter pins or self-locking nuts must be replaced with new ones whenever disassembled.

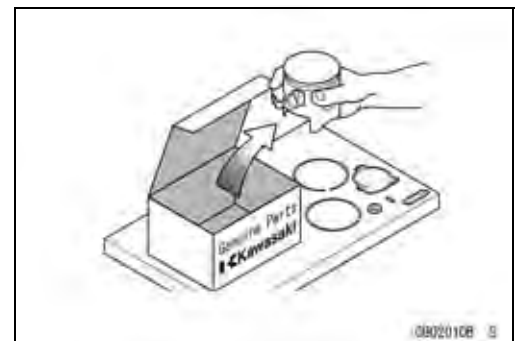

### **Assembly Order**

In most cases assembly order is the reverse of disassembly, however, if assembly order is provided in this Service Manual, follow the procedures given.

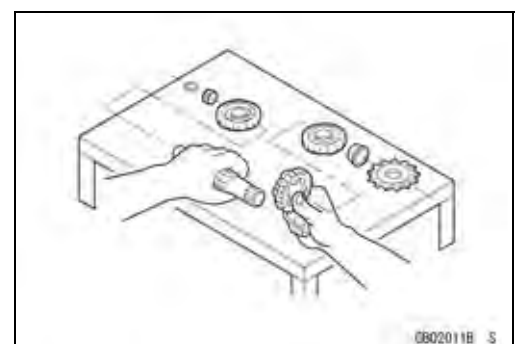


## 1-4 GENERAL INFORMATION

### Before Servicing

#### **Tightening Sequence**


Generally, when installing a part with several bolts, nuts, or screws, start them all in their holes and tighten them to a snug fit. Then tighten them according to the specified sequence to prevent case warpage or deformation which can lead to malfunction. Conversely when loosening the bolts, nuts, or screws, first loosen all of them by about a quarter turn and then remove them. If the specified tightening sequence is not indicated, tighten the fasteners alternating diagonally.

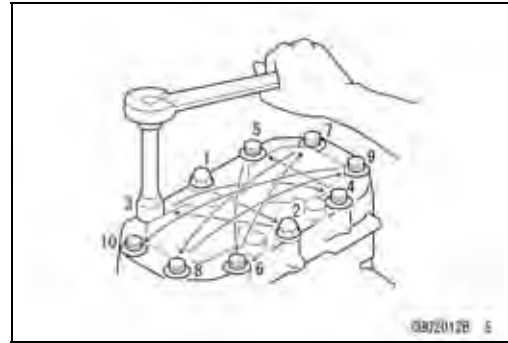

#### **Tightening Torque**


Incorrect torque applied to a bolt, nut, or screw may lead to serious damage. Tighten fasteners to the specified torque using a good quality torque wrench.

All of the tightening torque values are for use with dry, solvent - cleaned threads unless otherwise indicated. If a fastener which should have dry, clean threads gets contaminated with lubricant, etc., applying even the specified torque could damage it.

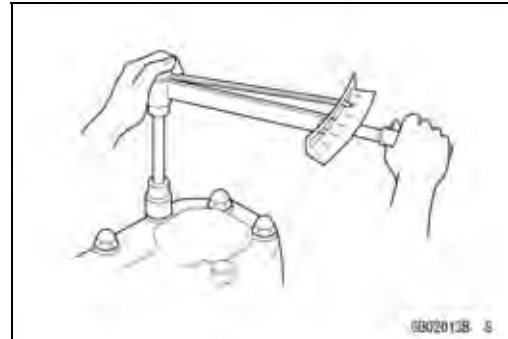


#### **Force**

Use common sense during disassembly and assembly, excessive force can cause expensive or hard to repair damage. When necessary, remove screws that have a non-permanent locking agent applied using an impact driver. Use a plastic-faced mallet whenever tapping is necessary.

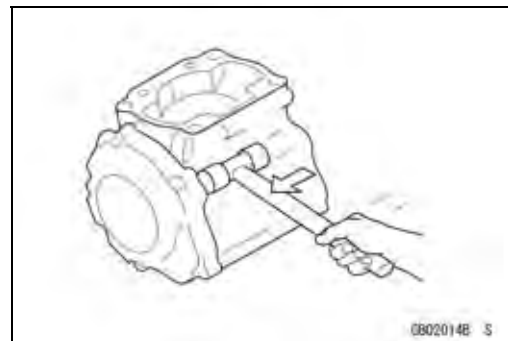

#### **Gasket, O-ring**

Hardening, shrinkage, or damage of both gaskets and O-rings after disassembly can reduce sealing performance. Remove old gaskets and clean the sealing surfaces thoroughly so that no gasket material or other material remains. Install the new gaskets and replace the used O-rings when re-assembling.

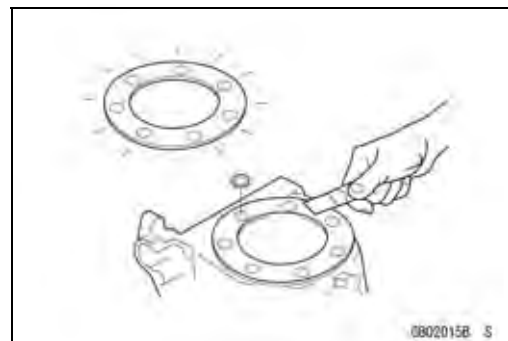

#### **Liquid Gasket, Non-permanent Locking Agent**


For applications that require Liquid Gasket or a Non-permanent Locking Agent, clean the surfaces so that no oil residue remains before applying liquid gasket or non-permanent locking agent. Do not apply them excessively. Excessive application can clog oil passages and cause serious damage.



**Before Servicing**

**Press**


For items such as bearings or oil seals that must be pressed into place, apply small amount of oil to the contact area. Be sure to maintain proper alignment and use smooth movements when installing.

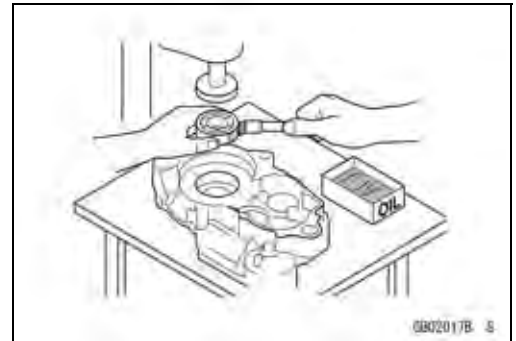

**Ball Bearing and Needle Bearing**


Do not remove pressed ball or needle unless removal is absolutely necessary. Replace with new ones whenever removed. Press bearings with the manufacturer and size marks facing out. Press the bearing into place by putting pressure on the correct bearing race as shown.

Pressing the incorrect race can cause pressure between the inner and outer race and result in bearing damage.

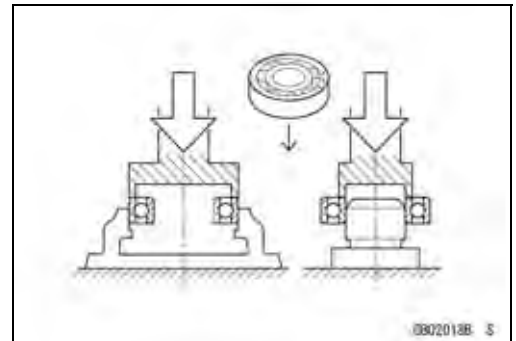


**Oil Seal, Grease Seal**

Do not remove pressed oil or grease seals unless removal is necessary. Replace with new ones whenever removed. Press new oil seals with manufacture and size marks facing out. Make sure the seal is aligned properly when installing.

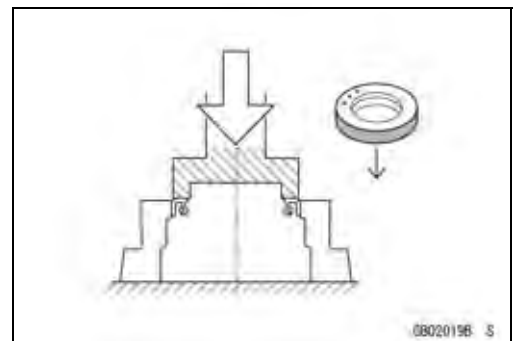


Apply specified grease to the lip of seal before installing the seal.

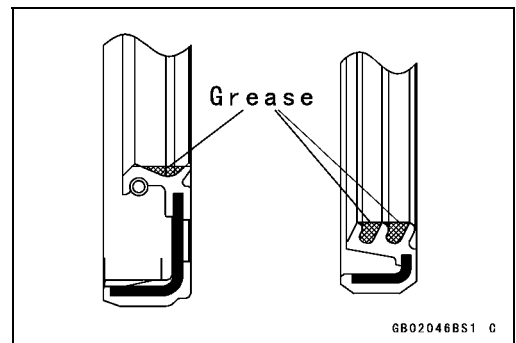

**Circlips, Cotter Pins**

Replace the circlips or cotter pins that were removed with new ones. Take care not to open the clip excessively when installing to prevent deformation.

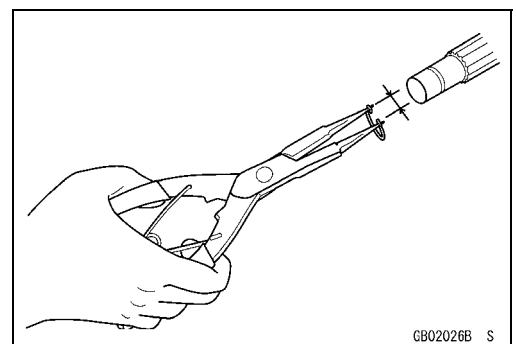


## 1-6 GENERAL INFORMATION

### Before Servicing


#### **Lubrication**

It is important to lubricate rotating or sliding parts during assembly to minimize wear during initial operation. Lubrication points are called out throughout this manual, apply the specific oil or grease as specified.

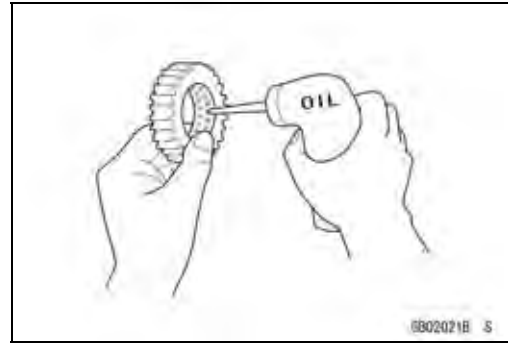


#### **Direction of Engine Rotation**

When rotating the crankshaft by hand, the free play amount of rotating direction will affect the adjustment. Rotate the crankshaft to positive direction (clockwise viewed from output side).

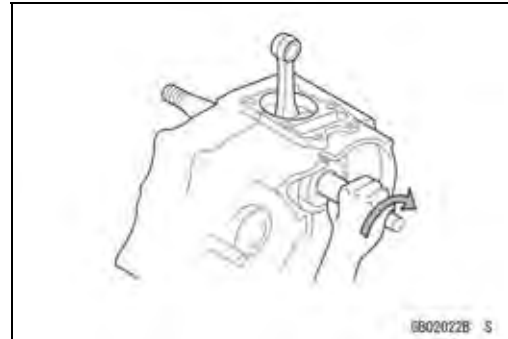


#### **Electrical Wires**

A two-color wire is identified first by the primary color and then the stripe color. Unless instructed otherwise, electrical wires must be connected to those of the same color.

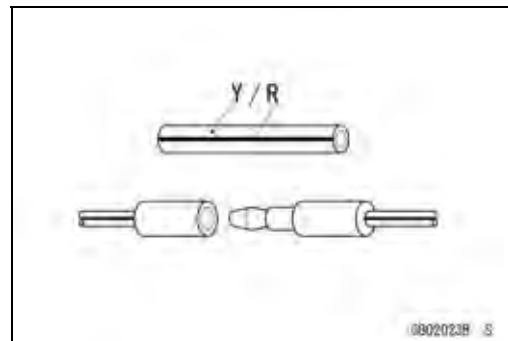

#### **Instrument**

Use a meter that has enough accuracy for an accurate measurement. Read the manufacturer's instructions thoroughly before using the meter. Incorrect values may lead to improper adjustments.

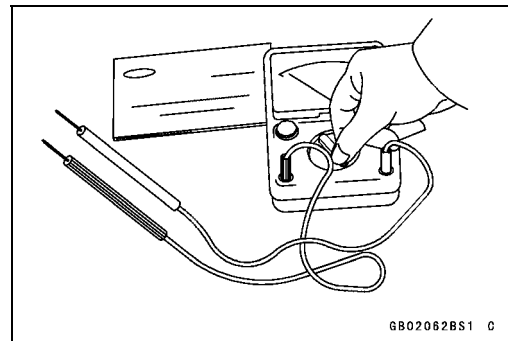

#### **Handling Electronic Parts**

Severe impacts to electronic parts such as the ECU, sensor, and relay can damage them. If dropped on a hard surface, replace such parts with new ones.

If a high voltage that is created by static electricity is applied to the electric parts, it could cause them to fail. To avoid this, touch a non-painted metal surface to discharge any static electricity that is accumulated on your body before inspecting or replacing electric parts.

Be careful not to touch the electrical terminals of the electronic parts. The static electricity discharged from your body could damage them or deform the electrical terminals.

Model Identification

ER650GH/HH Left Side View



ER650GH/HH Right Side View



Frame Number



Engine Number



# 1-8 GENERAL INFORMATION

## General Specifications

Items	ER650GH/HH
<b>Dimensions</b>	
Overall Length	2 055 mm (80.91 in.) (CN, TH, ID, IN, MY, PH) 2 115 mm (83.27 in.)
Overall Width	775 mm (30.5 in.)
Overall Height	1 080 mm (42.52 in.)
Wheel Base	1 410 mm (55.51 in.)
Ground Clearance	130 mm (5.12 in.)
Seat Height	790 mm (31.1 in.)
Curb Mass:	
ER650G	184 kg (406 lb) (CAL, MY, PH) 185 kg (408 lb)
ER650H	187 kg (412 lb) (US, CA, AU, AU LAMS) 186 kg (410 lb) (IN) 190 kg (419 lb)
Front:	
ER650G	93 kg (205 lb) (CAL, MY, PH) 94 kg (207 lb)
ER650H	95 kg (209 lb) (US, CA, AU, AU LAMS) 94 kg (207 lb)
Rear:	
ER650G	91 kg (201 lb)
ER650H	92 kg (203 lb) (IN) 95 kg (209 lb)
Fuel Tank Capacity	15 L (4.0 US gal)
<b>Performance</b>	
Minimum Turning Radius	2.6 m (8.5 ft.)
<b>Engine</b>	
Type	4-stroke, DOHC, 2-cylinder
Cooling System	Liquid-cooled
Bore and Stroke	83.0 × 60.0 mm (3.27 × 2.36 in.)
Displacement	649 cm <sup>3</sup> (39.6 cu in.)
Compression Ratio	10.8:1
Maximum Horsepower	50.2 kW (68 PS) @8 000 r/min (rpm) (AU) 50 kW (68 PS) @8 000 r/min (rpm) (AU LAMS) 37.8 kW (51 PS) @8 000 r/min (rpm) (US, CA, CAL) — — —
Maximum Torque	65.7 N·m (6.7 kgf·m, 48 ft·lb) @6 500 r/min (rpm) (AU) 66 N·m (6.7 kgf·m, 49 ft·lb) @6 500 r/min (rpm) (AU LAMS) 59 N·m (6.0 kgf·m, 44 ft·lb) @6 500 r/min (rpm) (US, CA, CAL) — — —
Fuel System	FI (Fuel injection) KEIHIN TTK36 × 2
Fuel Type:	
Minimum Octane Rating:	
Research Octane number (RON)	91
Antiknock Index (RON + MON)/2	87

**General Specifications**

Items	ER650GH/HH
Starting System Ignition System Timing Advance Ignition Timing Spark Plug Cylinder Numbering Method Firing Order Valve Timing: Intake: Open Close Duration Exhaust: Open Close Duration Lubrication System Engine Oil: Grade Viscosity Capacity	Electric Starter Battery and coil (transistorized) Electronically advanced (IC igniter in ECU) From 10° BTDC @1 300 r/min (rpm) to 47° BTDC @6 000 r/min (rpm) NGK CR9EIA-9 Left to right, 1-2 1-2  26° BTDC 48° ABDC 254°  47° BBDC 19° ATDC 246° Forced lubrication (semi-dry sump) API SG, SH, SJ, SL or SM with JASO MA, MA1 or MA2 SAE 10W-40 2.3 L (2.4 US qt)
<b>Drive Train</b> Primary Reduction System: Type Reduction Ratio Clutch Type Transmission: Type Gear Ratios: 1st 2nd 3rd 4th 5th 6th Final Drive System: Type Reduction Ratio Overall Drive Ratio	Gear 2.095 (88/42) Wet multi disc 6-speed, constant mesh, return shift  2.438 (39/16) 1.714 (36/21) 1.333 (32/24) 1.111 (30/27) 0.966 (28/29) 0.852 (23/27)  Chain drive 3.067 (46/15) 5.473 @Top gear
<b>Frame</b> Type Caster (Rake Angle) Trail	Tubular, diamond 24° 100 mm (3.94 in.)

# 1-10 GENERAL INFORMATION

## General Specifications

Items	ER650GH/HH
<p>Front Tire:</p> <ul style="list-style-type: none"><li>Type</li><li>Size</li><li>Rim Size</li></ul> <p>Rear Tire:</p> <ul style="list-style-type: none"><li>Type</li><li>Size</li><li>Rim Size</li></ul> <p>Front Suspension:</p> <ul style="list-style-type: none"><li>Type</li><li>Wheel Travel</li></ul> <p>Rear Suspension:</p> <ul style="list-style-type: none"><li>Type</li><li>Wheel Travel</li></ul> <p>Brake Type:</p> <ul style="list-style-type: none"><li>Front</li><li>Rear</li></ul>	<p>Tubeless</p> <p>120/70ZR17 M/C (58W)</p> <p>J17M/C x MT3.50</p> <p>Tubeless</p> <p>160/60ZR17 M/C (69W)</p> <p>J17M/C x MT4.50</p> <p>Telescopic fork</p> <p>125 mm (4.92 in.)</p> <p>Swingarm (horizontal back-link)</p> <p>130 mm (5.12 in.)</p> <p>Dual discs</p> <p>Single disc</p>
<p><b>Electrical Equipment</b></p> <p>Battery</p> <p>Headlight:</p> <ul style="list-style-type: none"><li>High Beam</li><li>Low Beam</li></ul> <p>Brake/Tail Light</p> <p>Alternator:</p> <ul style="list-style-type: none"><li>Type</li><li>Maximum Output</li></ul>	<p>12 V 8.6 Ah (10 HR) (ID) 12 V 10 Ah (10 HR)</p> <p>12 V 60 W</p> <p>12 V 55 W</p> <p>LED</p> <p>Three-phase AC</p> <p>14 V – 24 A @5 000 r/min (rpm)</p>

Specifications are subject to change without notice, and may not apply to every country.



**Unit Conversion Table**

**Prefixes for Units:**

Prefix	Symbol	Power
mega	M	× 1 000 000
kilo	k	× 1 000
centi	c	× 0.01
milli	m	× 0.001
micro	μ	× 0.000001

**Units of Mass:**

kg	×	2.205	=	lb
g	×	0.03527	=	oz

**Units of Volume:**

L	×	0.2642	=	gal (US)
L	×	0.2200	=	gal (IMP)
L	×	1.057	=	qt (US)
L	×	0.8799	=	qt (IMP)
L	×	2.113	=	pint (US)
L	×	1.816	=	pint (IMP)
mL	×	0.03381	=	oz (US)
mL	×	0.02816	=	oz (IMP)
mL	×	0.06102	=	cu in.

**Units of Force:**

N	×	0.1020	=	kg
N	×	0.2248	=	lb

---

kg	×	9.807	=	N
kg	×	2.205	=	lb

**Units of Length:**

km	×	0.6214	=	mile
m	×	3.281	=	ft
mm	×	0.03937	=	in.

**Units of Torque:**

N·m	×	0.1020	=	kgf·m
N·m	×	0.7376	=	ft·lb
N·m	×	8.851	=	in·lb

---

kgf·m	×	9.807	=	N·m
kgf·m	×	7.233	=	ft·lb
kgf·m	×	86.80	=	in·lb

**Units of Pressure:**

kPa	×	0.01020	=	kgf/cm <sup>2</sup>
kPa	×	0.1450	=	psi
kPa	×	0.7501	=	cmHg

---

kgf/cm <sup>2</sup>	×	98.07	=	kPa
kgf/cm <sup>2</sup>	×	14.22	=	psi
cmHg	×	1.333	=	kPa

**Units of Speed:**

km/h	×	0.6214	=	mph
------	---	--------	---	-----


**Units of Power:**

kW	×	1.360	=	PS
kW	×	1.341	=	HP

---

PS	×	0.7355	=	kW
PS	×	0.9863	=	HP

**Units of Temperature:**

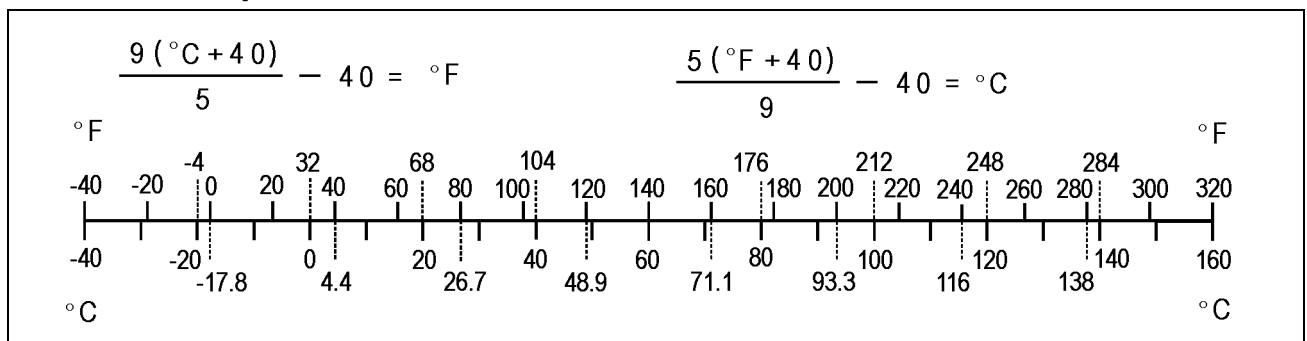



# Periodic Maintenance

## Table of Contents

Periodic Maintenance Chart .....	2-3
Torque and Locking Agent .....	2-5
Specifications .....	2-11
Special Tools .....	2-13
Periodic Maintenance Procedures.....	2-14
Fuel System (DFI).....	2-14
Air Cleaner Element Replacement.....	2-14
Idle Speed Inspection .....	2-15
Idle Speed Adjustment.....	2-15
Throttle Control System Inspection.....	2-16
Engine Vacuum Synchronization Inspection.....	2-16
Fuel System Inspection.....	2-20
Fuel Filter Replacement.....	2-20
Fuel Hose Replacement .....	2-22
Evaporative Emission Control System Inspection (Equipped Models) .....	2-24
Cooling System.....	2-25
Coolant Level Inspection.....	2-25
Cooling System Inspection .....	2-25
Coolant Change .....	2-25
Water Hose and O-ring Replacement.....	2-28
Engine Top End .....	2-28
Valve Clearance Inspection .....	2-28
Valve Clearance Adjustment.....	2-30
Air Suction System Damage Inspection.....	2-33
Clutch.....	2-34
Clutch Operation Inspection .....	2-34
Engine Lubrication System .....	2-35
Engine Oil Change.....	2-35
Oil Filter Replacement .....	2-36
Wheels/Tires.....	2-36
Air Pressure Inspection.....	2-36
Wheels and Tires Inspection.....	2-36
Wheel Bearing Damage Inspection .....	2-37
Final Drive.....	2-38
Drive Chain Lubrication Condition Inspection .....	2-38
Drive Chain Slack Inspection .....	2-39
Drive Chain Slack Adjustment .....	2-39
Wheel Alignment Inspection .....	2-40
Drive Chain Wear Inspection .....	2-41
Chain Guide Wear Inspection .....	2-41
Brakes.....	2-42
Brake System Inspection .....	2-42
Brake Operation Inspection .....	2-43
Brake Fluid Level Inspection.....	2-43
Brake Fluid Change .....	2-44
Brake Hose and Pipe Replacement.....	2-46
Master Cylinder Rubber Parts Replacement .....	2-50
Caliper Rubber Parts Replacement .....	2-51
Brake Pad Wear Inspection .....	2-55
Brake Light Switch Operation Inspection.....	2-55

## 2-2 PERIODIC MAINTENANCE

---

Suspension .....	2-56
Suspension System Inspection .....	2-56
Steering .....	2-58
Steering Play Inspection .....	2-58
Steering Play Adjustment.....	2-58
Steering Stem Bearing Lubrication .....	2-60
Electrical System .....	2-61
Lights and Switches Operation Inspection.....	2-61
Headlight Aiming Inspection .....	2-63
Side Stand Switch Operation Inspection.....	2-64
Engine Stop Switch Operation Inspection.....	2-65
Spark Plug Replacement .....	2-66
Others .....	2-66
Chassis Parts Lubrication .....	2-66
Condition of Bolts, Nuts and Fasteners Tightness Inspection .....	2-67

**Periodic Maintenance Chart**

The scheduled maintenance must be done in accordance with this chart to keep the motorcycle in good running condition. **The initial maintenance is vitally important and must not be neglected.**

**Periodic Inspection**

\*A: Service at number of years shown or indicated odometer reading intervals, whichever comes first.

\*B: For higher odometer readings, repeat at the frequency interval established here.

\*C: Service more frequently when operating in severe conditions: dusty, wet, muddy, high speed, or frequent starting/stopping.

○: Emission Related Item

Q: Inspection

↻: Change or Replace

🔧: Lubrication

Items	year (*A)	Odometer Reading (*B) × 1 000 km (× 1 000 mile)					See Page
		1 (0.6)	6 (3.8)	12 (7.6)	18 (11.4)	24 (15.2)	
<b>Fuel System</b>							
○ Air cleaner element (*C)					↻		2-14
○ Idle speed		Q		Q		Q	2-15
○ Throttle control system (play, smooth return, no drag)	Q:1	Q		Q		Q	2-16
○ Engine vacuum synchronization				Q		Q	2-16
Fuel system	Q:1	Q		Q		Q	2-20
Fuel filter						↻	2-20
Fuel hose	↻:5						2-22
○ Evaporative emission control system (Equipped Models)		Q	Q	Q	Q	Q	2-24
<b>Cooling System</b>							
Coolant level		Q		Q		Q	2-25
Cooling system	Q:1	Q		Q		Q	2-25
Coolant, water hose and O-ring	↻:3	↻: every 36 000 km (22 500 mile)					2-25, 2-28
<b>Engine Top End</b>							
○ Valve clearance (US and CA Models)						Q	2-28
Valve clearance (Other than US and CA Models)		Q: every 42 000 km (26 250 mile)					2-28
○ Air suction system				Q		Q	2-33
<b>Clutch</b>							
Clutch operation (play, engagement, disengagement)		Q		Q		Q	2-34
<b>Engine Lubrication System</b>							
Engine oil (*C) and oil filter	↻:1	↻		↻		↻	2-35, 2-36
<b>Wheels and Tires</b>							
Tire air pressure	Q:1			Q		Q	2-36

## 2-4 PERIODIC MAINTENANCE

### Periodic Maintenance Chart

Items	year (*A)	Odometer Reading (*B) × 1 000 km (× 1 000 mile)					See Page
		1 (0.6)	6 (3.8)	12 (7.6)	18 (11.4)	24 (15.2)	
Wheel and tire	Q:1			Q		Q	2-36
Wheel bearing damage	Q:1			Q		Q	2-37
<b>Final Drive</b>							
Drive chain lubrication condition (*C)		Q: every 600 km (400 mile)					2-38
Drive chain slack (*C)		Q: every 1 000 km (600 mile)					2-39
Drive chain wear (*C)				Q		Q	2-41
Drive chain guide wear				Q		Q	2-41
<b>Brakes</b>							
Brake system	Q:1	Q		Q		Q	2-42
Brake operation (effectiveness, play, no drag)	Q:1	Q		Q		Q	2-43
Brake fluid level	Q:1	Q		Q		Q	2-43
Brake fluid (front and rear)	🌀:2					🌀	2-44
Brake hose	🌀:4						2-46
Rubber parts of brake master cylinder and caliper	🌀:4	🌀: every 48 000 km (30 000 mile)					2-50, 2-51
Brake pad wear (*C)			Q	Q	Q	Q	2-55
Brake light switch operation		Q	Q	Q	Q	Q	2-55
<b>Suspension</b>							
Suspension system	Q:1			Q		Q	2-56
Lubrication of rear suspension						🔧	2-57
<b>Steering</b>							
Steering play	Q:1	Q		Q		Q	2-58
Steering stem bearings	🔧:2					🔧	2-60
<b>Electrical System</b>							
Electrical system	Q:1			Q		Q	2-61
○ Spark plugs				🌀		🌀	2-66
<b>Others</b>							
Chassis parts	🔧:1			🔧		🔧	2-66
Condition of bolts, nuts and fasteners		Q		Q		Q	2-67

**Torque and Locking Agent**

The following tables list the tightening torque for the major fasteners requiring use of a non-permanent locking agent or silicone sealant etc. All of the values are for use with dry solvent - cleaned threads unless otherwise indicated.

Letters used in the “Remarks” column mean:

AL: Tighten the two clamp bolts alternately two times to ensure even tightening torque.

G: Apply grease.

L: Apply a non-permanent locking agent.

LG: Apply liquid gasket.

Lh: Left-hand Threads

MO: Apply molybdenum disulfide oil solution.

(mixture of the engine oil and molybdenum disulfide grease in a weight ratio 10:1)

R: Replacement Parts

S: Follow the specified tightening sequence.

Si: Apply silicone grease.

Fastener	Torque			Remarks
	N·m	kgf·m	ft·lb	
<b>Fuel System (DFI)</b>				
Spark Plugs	15	1.5	11	
Water Temperature Sensor	12	1.2	106 in·lb	
Crankshaft Sensor Bolts	6.0	0.61	53 in·lb	
Intake Air Temperature Sensor Screw	1.2	0.12	11 in·lb	
Air Cleaner Housing Assembly Screws	1.2	0.12	11 in·lb	
Air Cleaner Element Screw	1.2	0.12	11 in·lb	
Oxygen Sensor	25	2.5	18	
Gear Position Sensor Bolt	9.8	1.0	87 in·lb	
Air Cleaner Housing Clamp Bolt	2.0	0.20	18 in·lb	
Switch Housing Screws	3.5	0.36	31 in·lb	
Fuel Pump Assembly Screws	0.98	0.10	8.7 in·lb	R
Fuel Pump Bolts	9.8	1.0	87 in·lb	L, S
Delivery Pipe Assy Mounting Screws	3.4	0.35	30 in·lb	
Purge Valve Mounting Nut	7.0	0.71	62 in·lb	
<b>Cooling System</b>				
Coolant Reserve Tank Bolts	7.9	0.81	70 in·lb	
Radiator Mounting Bolt	7.9	0.81	70 in·lb	
Radiator Fan Bolts	8.4	0.86	74 in·lb	
Thermostat Housing Bolts	12	1.2	106 in·lb	
Water Temperature Sensor	12	1.2	106 in·lb	
Water Pump Impeller Bolt	9.8	1.0	87 in·lb	
Water Pump Cover Bolts, L = 30 mm (1.2 in.)	12	1.2	106 in·lb	
Water Pump Cover Bolts, L = 40 mm (1.6 in.)	12	1.2	106 in·lb	
Coolant Drain Bolt	12	1.2	106 in·lb	
<b>Engine Top End</b>				
Air Suction Valve Cover Bolts	9.8	1.0	87 in·lb	
Cylinder Head Cover Bolts	9.8	1.0	87 in·lb	
Camshaft Sprocket Bolts	15	1.5	11	L
Camshaft Cap Bolts	12	1.2	106 in·lb	S

## 2-6 PERIODIC MAINTENANCE

### Torque and Locking Agent

Fastener	Torque			Remarks
	N-m	kgf-m	ft-lb	
Rear Camshaft Chain Guide Bolt	20	2.0	15	L
Cylinder Head Plugs	19.6	2.00	14.5	L
Camshaft Chain Tensioner Cap Bolt	20	2.0	15	
Camshaft Chain Tensioner Mounting Bolts	9.8	1.0	87 in-lb	L
Throttle Body Assy Holder Bolts	12	1.2	106 in-lb	L
Throttle Body Assy Holder Clamp Bolts	2.0	0.20	18 in-lb	
Cylinder Head Bolt (M10), L = 176 mm (6.9 in.)	see text	–	–	MO, R, S
Cylinder Head Bolts (M6)	12	1.2	106 in-lb	L, S
Cylinder Head Bolts (M10), L = 158 mm (6.2 in.)	see text	–	–	MO, R, S
Cylinder Head Bolts (M10), L = 100 mm (3.9 in.)	see text	–	–	MO, R, S
Cylinder Bolt (M8)	27.5	2.80	20.3	MO, S
Cylinder Bolts (M6)	12	1.2	106 in-lb	L, S
Cylinder Nut	49	5.0	36	MO, S
Exhaust Pipe Holder Nuts	17	1.7	13	S
Muffler Body Mounting Bolt	20	2.0	15	
Muffler Cover Bolts	7.0	0.71	62 in-lb	
Oxygen Sensor	25	2.5	18	
<b>Clutch</b>				
Clutch Lever Holder Clamp Bolts	8.8	0.90	78 in-lb	S
Timing Inspection Cap	3.9	0.40	35 in-lb	
Timing Rotor Bolt Cap	4.9	0.50	43 in-lb	
Clutch Cover Bolts	12	1.2	106 in-lb	S
Oil Pump Chain Guide Bolt, L = 12 mm (0.47 in.)	12	1.2	106 in-lb	L
Oil Pump Chain Guide Bolt, L = 11 mm (0.43 in.)	12	1.2	106 in-lb	
Oil Pump Sprocket Bolt	12	1.2	106 in-lb	L, Lh
Clutch Hub Nut	200	20.4	148	R
Clutch Stopper Bolts	9.8	1.0	87 in-lb	
<b>Engine Lubrication System</b>				
Oil Filter	17.5	1.78	12.9	G
Oil Filter Pipe	25	2.5	18	L
Oil Passage Plug (PT3/8)	20	2.0	15	L
Oil Pressure Switch	15	1.5	11	LG
Oil Pressure Relief Valve	15	1.5	11	L
Oil Pump Cover Bolts	9.8	1.0	87 in-lb	L, S
Oil Pump Chain Guide Bolt, L = 12 mm (0.47 in.)	12	1.2	106 in-lb	L
Oil Pump Chain Guide Bolt, L = 11 mm (0.43 in.)	12	1.2	106 in-lb	
Oil Pump Sprocket Bolt	12	1.2	106 in-lb	L, Lh
Oil Pipe Retaining Plate Bolt	9.8	1.0	87 in-lb	L
Oil Strainer Holder Bolts	9.8	1.0	87 in-lb	L
Oil Pan Bracket Bolts	12	1.2	106 in-lb	L, S (2)
Engine Oil Drain Bolt	30	3.1	22	
Oil Pan Bolts	12	1.2	106 in-lb	S



**Torque and Locking Agent**

Fastener	Torque			Remarks
	N-m	kgf-m	ft-lb	
<b>Engine Removal/Installation</b>				
Adjusting Collar Locknut	49	5.0	36	S
Right Front Engine Mounting Bolt	44	4.5	32	S
Left Front Engine Mounting Bolt	44	4.5	32	S
Adjusting Collar	1.5	0.15	13 in-lb	S
Upper Engine Mounting Bolt	44	4.5	32	R, S
Lower Engine Mounting Bolt	44	4.5	32	R, S
<b>Crankshaft/Transmission</b>				
Connecting Rod Big End Nuts	see the text	–	–	MO
Side Oil Plate Bolts	9.8	1.0	87 in-lb	L
Oil Pipe Bolts	9.8	1.0	87 in-lb	L
Middle Oil Plate Bolts	9.8	1.0	87 in-lb	L
Breather Plate Bolts	9.8	1.0	87 in-lb	L
Oil Passage Plug (M6)	3.5	0.36	31 in-lb	
Oil Passage Plug (PT3/8)	20	2.0	15	L
Starter Motor Clutch Bolts	34	3.5	25	L
Shift Shaft Return Spring Pin	29	3.0	21	L
Bottom Oil Plate Bolts	9.8	1.0	87 in-lb	L
Crankcase Bolts (M8), L = 60 mm (2.4 in.)	see text	–	–	MO, S
Crankcase Bolts (M8), L = 73 mm (2.9 in.)	see text	–	–	MO, S
Crankcase Bolts (M9), L = 113 mm (4.45 in.)	see text	–	–	MO, S
Crankcase Bolt (M8), L = 110 mm (4.33 in.)	27.4	2.79	20.2	S
Crankcase Bolt (M8, Rear), L = 60 mm (2.4 in.)	27.4	2.79	20.2	S
Crankcase Bolts (M6), L = 45 mm (1.8 in.)	19.6	2.00	14.5	S
Crankcase Bolts (M6), L = 38 mm (1.5 in.)	19.6	2.00	14.5	S
Crankcase Bolt (M8), L = 50 mm (2.0 in.)	27.4	2.79	20.2	S
Crankcase Bolt (M6), L = 32 mm (1.3 in.)	19.6	2.00	14.5	S
Crankcase Bolts (M9), L = 83 mm (3.3 in.)	see text	–	–	MO, S
Upper Crankcase Bolt (M8), L = 120 mm (4.72 in.)	27.5	2.80	20.3	S
Upper Crankcase Bolts (M8), L = 110 mm (4.33 in.)	27.5	2.80	20.3	S
Shift Drum Cam Holder Bolt	12	1.2	106 in-lb	L
Shift Drum Holder Bolt	12	1.2	106 in-lb	L
Shift Rod Retaining Plate Bolt	9.8	1.0	87 in-lb	L
Shift Drum Bearing Holder Screws	4.9	0.50	43 in-lb	L
Nozzle	2.9	0.30	26 in-lb	L
Transmission Case Bolts, L = 30 mm (1.2 in.)	20	2.0	15	S
Transmission Case Bolts, L = 26 mm (1.0 in.)	20	2.0	15	S
Gear Positioning Lever Bolt	12	1.2	106 in-lb	L
Race Holder Screw	4.9	0.50	43 in-lb	L
Drive Shaft Bearing Holder Screw	4.9	0.50	43 in-lb	L
Shift Shaft Cover Bolts, L = 30 mm (1.2 in.)	9.8	1.0	87 in-lb	L, S
Shift Shaft Cover Bolts, L = 30 mm (1.2 in.)	12	1.2	106 in-lb	S

## 2-8 PERIODIC MAINTENANCE

### Torque and Locking Agent

Fastener	Torque			Remarks
	N-m	kgf-m	ft-lb	
Shift Shaft Cover Bolts, L = 40 mm (1.6 in.)	12	1.2	106 inlb	S
Shift Shaft Cover Screw	4.9	0.50	43 inlb	L, S
Shift Lever Bolt	12	1.2	106 inlb	
Shift Lever Tie-rod Locknuts	9.8	1.0	87 inlb	Lh(1)
Shift Pedal Bolt	25	2.5	18	
<b>Wheels/Tires</b>				
Front Axle Clamp Bolt	20	2.0	15	
Front Axle	108	11.0	79.7	
Rear Axle Nut	108	11.0	79.7	
<b>Final Drive</b>				
Engine Sprocket Cover Bolt, L = 30 mm (1.2 in.)	9.8	1.0	87 in-lb	
Engine Sprocket Cover Bolt, L = 20 mm (0.8 in.)	9.8	1.0	87 in-lb	
Engine Sprocket Nut	165	16.8	122	MO
Rear Sprocket Nuts	59	6.0	44	R, S
<b>Brakes</b>				
Brake Hose Banjo Bolts	25	2.5	18	
Front Brake Fluid Reservoir Cap Screws	1.5	0.15	13 in-lb	
Brake Lever Pivot Bolt	1.0	0.10	8.9 in-lb	Si
Brake Lever Pivot Bolt Locknut	5.9	0.60	52 in-lb	
Front Master Cylinder Clamp Bolts	11	1.1	97 in-lb	S
Front Brake Light Switch Screw	1.2	0.12	11 in-lb	
Front Caliper Mounting Bolts	25	2.5	18	
Front Caliper Holder Shaft	22	2.2	16	L, Si
Bleed Valve	7.8	0.80	69 in-lb	
Front Brake Pad Pin	17	1.7	13	
Front Brake Disc Mounting Bolts	27	2.8	20	L, S
Rear Caliper Holder Pin Bolt	27	2.8	20	Si
Rear Brake Pad Pin	17	1.7	13	
Rear Caliper Holder Bolt	22	2.2	16	
Rear Master Cylinder Mounting Bolts	25	2.5	18	
Rear Master Cylinder Push Rod Locknut	17	1.7	13	
Rear Wheel Rotation Sensor Bolt	22	2.2	16	
Brake Pedal Bolt	8.8	0.90	78 in-lb	
Rear Brake Disc Mounting Bolts	27	2.8	20	L, S
Brake Pipe Joint Nuts	18	1.8	13	
Front Wheel Rotation Sensor Rotor Bolts	4.2	0.43	37 in-lb	
Front Wheel Rotation Sensor Bolt	8.0	0.82	71 in-lb	L
<b>Suspension</b>				
Upper Front Fork Clamp Bolts	20	2.0	15	
Front Fork Top Plugs	22	2.2	16	
Lower Front Fork Clamp Bolts	20	2.0	15	AL
Front Fork Bottom Allen Bolts	30	3.1	22	L
Upper Rear Shock Absorber Nut	34	3.5	25	R, S

## PERIODIC MAINTENANCE 2-9

### Torque and Locking Agent

Fastener	Torque			Remarks
	N-m	kgf-m	ft-lb	
Swingarm Bracket Bolts	25	2.5	18	S
Tie-Rod Bolt (Lower)	44	4.5	32	S
Side Stand Bracket Bolts	49	5.0	36	L, S
Swingarm Pivot Shaft Nut	108	11.0	79.7	S
Tie-Rod Bolt (Upper)	44	4.5	32	S
Rocker Arm Bolt	59	6.0	44	S
Lower Rear Shock Absorber Bolt	34	3.5	25	S
<b>Steering</b>				
Handlebar Holder Bolts	25	2.5	18	S
Steering Stem Head Bolt	108	11.0	79.7	
Upper Front Fork Clamp Bolts	20	2.0	15	
Lower Handlebar Holder Mounting Nuts	34	3.5	25	R
Switch Housing Screws	3.5	0.36	31 in-lb	
Steering Stem Nut	20	2.0	15	
Lower Front Fork Clamp Bolts	20	2.0	15	AL
<b>Frame</b>				
License Plate Bolts	0.50	0.05	4.4 in-lb	
Meter Cover Bolts	0.50	0.05	4.4 in-lb	
Middle Fairing Bolts, L = 16 mm (0.63 in.)	0.50	0.05	4.4 in-lb	
Seat Cover Bolts	3.0	0.31	27 in-lb	
Battery Holder Bolts, L = 18 mm (0.71 in.)	1.0	0.10	8.9 in-lb	
Rear Reflector Nuts	3.0	0.31	27 in-lb	
Rear Reflector Nuts (CN Model)	4.0	0.41	35 in-lb	
Grab Rail Mounting Bolts	17	1.7	13	
Saree Guard Mounting Bolt	17	1.7	13	
Swingarm Bracket Bolts	25	2.5	18	S
Rear Footpeg Bracket Bolts	25	2.5	18	
Side Stand Switch Bolt	8.8	0.90	78 in-lb	L
Side Stand Bracket Bolts	49	5.0	36	L, S
Side Stand Bolt	29	3.0	21	
Side Stand Nut	44	4.5	32	R
<b>Electrical System</b>				
Turn Signal Light Screw	1.0	0.10	8.9 in-lb	
Tail/Brake Light Bolts	0.50	0.05	4.4 in-lb	
License Plate Light Screws	1.2	0.12	11 in-lb	
Switch Housing Screws	3.5	0.36	31 in-lb	
Front Brake Light Switch Screw	1.2	0.12	11 in-lb	
Starter Motor Cable Terminal Nut	6.0	0.61	53 in-lb	
Starter Relay Terminal Bolts	3.6	0.37	32 in-lb	
Starter Motor Through Bolts	5.0	0.51	44 in-lb	
Brush Holder Screw	3.8	0.39	34 in-lb	
Starter Motor Mounting Bolts	9.8	1.0	87 in-lb	L
Starter Motor Terminal Locknut	11	1.1	97 in-lb	

## 2-10 PERIODIC MAINTENANCE

### Torque and Locking Agent

Fastener	Torque			Remarks
	N-m	kgf-m	ft-lb	
Timing Rotor Bolt	40	4.1	30	
Crankshaft Sensor Bolts	6.0	0.61	53 in-lb	
Alternator Cover Bolts, L = 35 mm (1.4 in.)	12	1.2	106 in-lb	S
Alternator Cover Bolts, L = 25 mm (1.0 in.)	12	1.2	106 in-lb	S
Alternator Cover Bolts, L = 70 mm (2.8 in.)	12	1.2	106 in-lb	S
Stator Coil Bolts	12	1.2	106 in-lb	L
Alternator Lead Holding Plate Bolt	9.8	1.0	87 in-lb	L
Alternator Rotor Bolt	200	20.4	148	MO
Starter Motor Clutch Bolts	34	3.5	25	L
Oil Pressure Switch	15	1.5	11	LG
Engine Ground Terminal Bolt	9.8	1.0	87 in-lb	
Gear Position Sensor Bolt	9.8	1.0	87 in-lb	
Side Stand Switch Bolt	8.8	0.90	78 in-lb	L
Battery Holder Bolts, L = 18 mm (0.71 in.)	1.0	0.10	8.9 in-lb	
Fuel Pump Bolts	9.8	1.0	87 in-lb	L, S
Regulator/Rectifier Bolts	9.8	1.0	87 in-lb	
Regulator/Rectifier Bracket Bolt	9.8	1.0	87 in-lb	
Spark Plugs	15	1.5	11	
Oxygen Sensor	25	2.5	18	
Water Temperature Sensor	12	1.2	106 in-lb	

The table below, relating tightening torque to thread diameter, lists the basic torque for the bolts and nuts. Use this table for only the bolts and nuts which do not require a specific torque value. All of the values are for use with dry solvent-cleaned threads.

### Basic Torque for General Fasteners

Threads Diameter (mm)	Torque		
	N-m	kgf-m	ft-lb
5	3.4 ~ 4.9	0.35 ~ 0.50	30 ~ 43 in-lb
6	5.9 ~ 7.8	0.60 ~ 0.80	52 ~ 69 in-lb
8	14 ~ 19	1.4 ~ 1.9	10 ~ 13.5
10	25 ~ 34	2.6 ~ 3.5	19 ~ 25
12	44 ~ 61	4.5 ~ 6.2	33 ~ 45
14	73 ~ 98	7.4 ~ 10.0	54 ~ 72
16	115 ~ 155	11.5 ~ 16.0	83 ~ 115
18	165 ~ 225	17.0 ~ 23.0	125 ~ 165
20	225 ~ 325	23.0 ~ 33.0	165 ~ 240

**Specifications**

Item	Standard	Service Limit
<b>Fuel System (DFI)</b>		
Throttle Grip Free Play	2 ~ 3 mm (0.08 ~ 0.12 in.)	— — —
Idle Speed	1 300 ±50 r/min (rpm)	— — —
Throttle Body Vacuum	35.3 ±1.3 kPa (265 ±10 mmHg) at idle speed	— — —
Bypass Screws (Turn Out)	0 ~ 2 1/2 (for reference)	— — —
Air Cleaner Element	Viscous paper element	— — —
<b>Cooling System</b>		
Coolant:		
Type (Recommended)	Permanent type of antifreeze	— — —
Color	Green	— — —
Mixed Ratio	Soft water 50%, coolant 50%	— — —
Freezing Point	-35°C (-31°F)	— — —
Total Amount	1.2 L (1.3 US qt)	— — —
<b>Engine Top End</b>		
Valve Clearance:		
Exhaust	0.22 ~ 0.31 mm (0.0087 ~ 0.0122 in.)	— — —
Intake	0.15 ~ 0.21 mm (0.0059 ~ 0.0083 in.)	— — —
<b>Clutch</b>		
Clutch Lever Free Play	2 ~ 3 mm (0.08 ~ 0.12 in.)	— — —
<b>Engine Lubrication System</b>		
Engine Oil:		
Type	API SG, SH, SJ, SL or SM with JASO MA, MA1 or MA2	— — —
Viscosity	SAE 10W-40	— — —
Capacity	1.6 L (1.7 US qt) (When filter is not removed.)	— — —
	1.8 L (1.9 US qt) (When filter is removed.)	— — —
	2.3 L (2.4 US qt) (When engine is completely dry.)	— — —
Level	Between upper and lower level lines (Wait several minutes after idling or running)	— — —
<b>Wheels/Tires</b>		
Tread Depth:		
Front	4 mm (0.16 in.)	1 mm (0.04 in.) (AT, CH, DE) 1.6 mm (0.06 in.)
Rear	5.8 mm (0.23 in.)	Up to 130 km/h (80 mph): 2 mm (0.08 in.) Over 130 km/h (80 mph): 3 mm (0.12 in.)
Tire Air Pressure (when cold):		
Front	Up to 200 kg (441 lb) load: 225 kPa (2.25 kgf/cm <sup>2</sup> , 32 psi)	— — —
Rear	Up to 200 kg (441 lb) load: 250 kPa (2.50 kgf/cm <sup>2</sup> , 36 psi)	— — —


## 2-12 PERIODIC MAINTENANCE

### Specifications


Item	Standard	Service Limit
<b>Final Drive</b>		
Drive Chain Slack	20 ~ 30 mm (0.8 ~ 1.2 in.)	---
Drive Chain Wear (20-link Length)	317.5 ~ 318.2 mm (12.50 ~ 12.53 in.)	319 mm (12.6 in.)
Standard Chain:		
Make	DAIDO	---
Type	DID520VE	---
Link	114 links	---
<b>Brakes</b>		
Brake Fluid:		
Grade	DOT4	---
Brake Pad Lining Thickness:		
Front	4 mm (0.16 in.)	1 mm (0.04 in.)
Rear	5 mm (0.20 in.)	1 mm (0.04 in.)
Brake Light Timing:		
Front	Pulled ON	---
Rear	ON after about 10 mm (0.39 in.) of pedal travel	---
<b>Electrical System</b>		
Spark Plug:		
Type	NGK CR9EIA-9	---
Gap	0.8 ~ 0.9 mm (0.031 ~ 0.035 in.)	---

Special Tools


Inside Circlip Pliers:  
57001-143

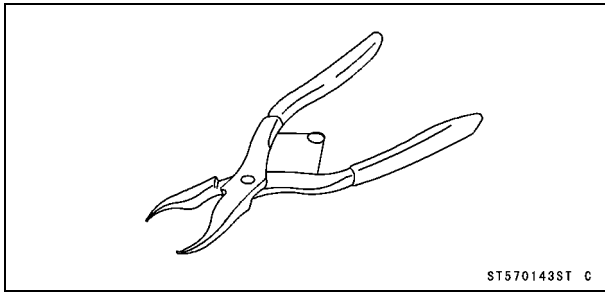


Steering Stem Nut Wrench:  
57001-1100

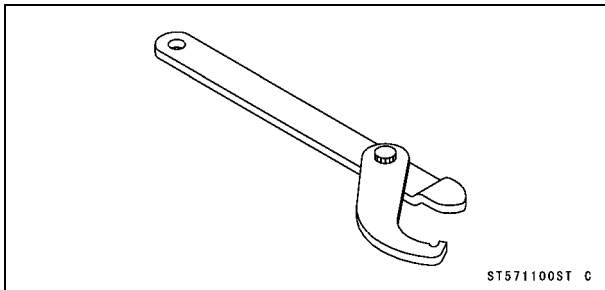


Oil Filter Wrench:  
57001-1249

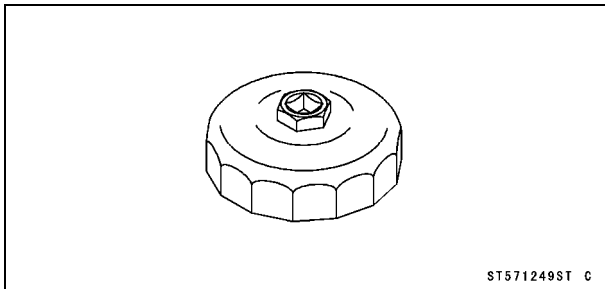


Vacuum Gauge:  
57001-1369

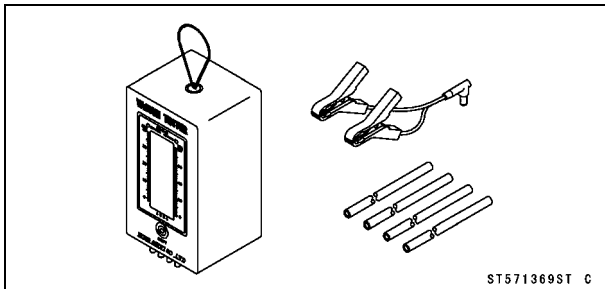


Filler Cap Driver:  
57001-1454

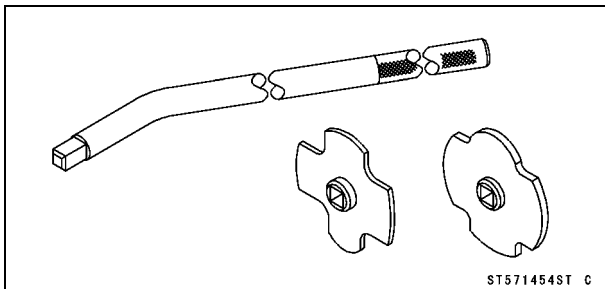


Throttle Sensor Setting Adapter:  
57001-1538

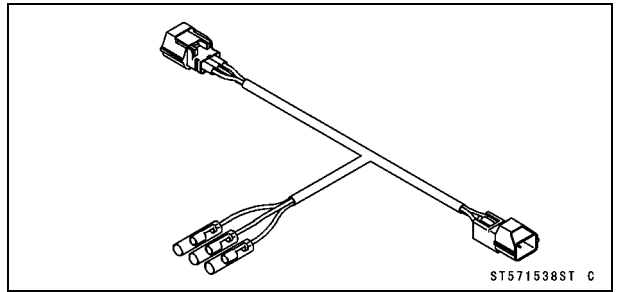


Extension Tube:  
57001-1578

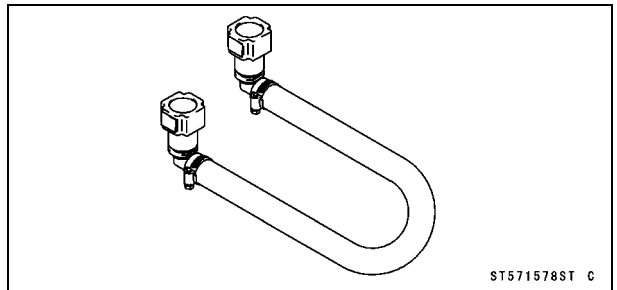


Pilot Screw Adjuster, D:  
57001-1588

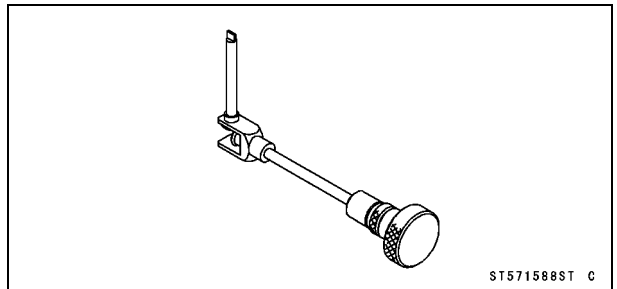

Brake Caliper Piston Pliers (φ16 ~ φ26):  
57001-1861

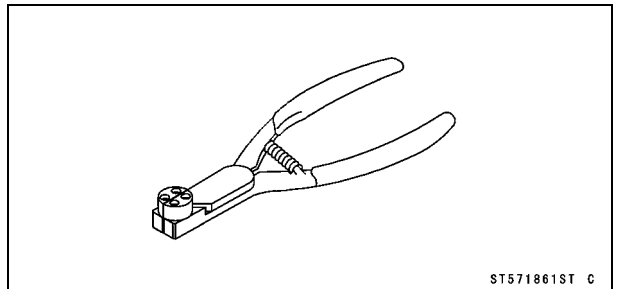

Brake Caliper Piston Pliers (φ26 ~ φ36):  
57001-1862

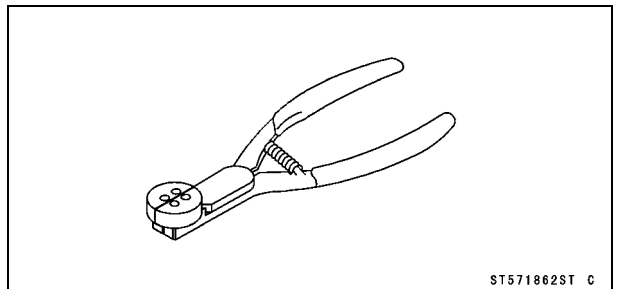

## 2-14 PERIODIC MAINTENANCE

### Periodic Maintenance Procedures

#### Fuel System (DFI)

##### Air Cleaner Element Replacement

###### NOTE

○In dusty areas, the element should be replaced more frequently than the recommended interval.


###### ⚠ WARNING

If dirt or dust is allowed to pass through into the throttle body assy, the throttle may become stuck, possibly causing accident. Replace the air cleaner element according to the maintenance chart.


###### NOTICE

If dirt gets through into the engine, excessive engine wear and possibly engine damage will occur.


- Remove:
  - Fuel Tank (see Fuel Tank Removal in the Fuel System (DFI) chapter)
  - Bolts [A]
  - Clamps [B]
- Take out the ECU with the harness connected from the upper air cleaner housing.

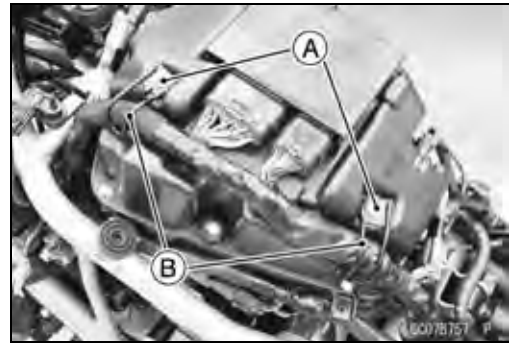

- Remove:
  - Air Cleaner Assembly Screws [A]
- Take out the upper air cleaner housing [B] with the intake air temperature sensor connector and clamps connected.

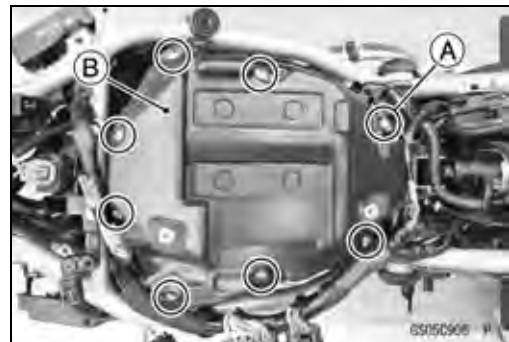


- Remove the air cleaner element screw [A].
- Discard the air cleaner element [B].

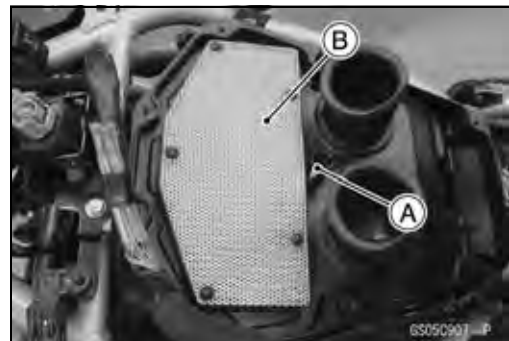



**Periodic Maintenance Procedures**

- Make sure the seals [A] are installed
- Install a new element [B] so that the screen side faces upward.
- Tighten:
  - Torque - Air Cleaner Element Screw [C]: 1.2 N·m (0.12 kgf·m, 11 in·lb)**
- Install:
  - Upper Air Cleaner Housing [D]
- Tighten:
  - Torque - Air Cleaner Housing Assembly Screws [E]: 1.2 N·m (0.12 kgf·m, 11 in·lb)**
- Run the harness and leads correctly (see Cable, Wire, and Hose Routing section in the Appendix chapter).
- Install the clamps, and tighten the bolts.
- Install the removed parts (see appropriate chapters).

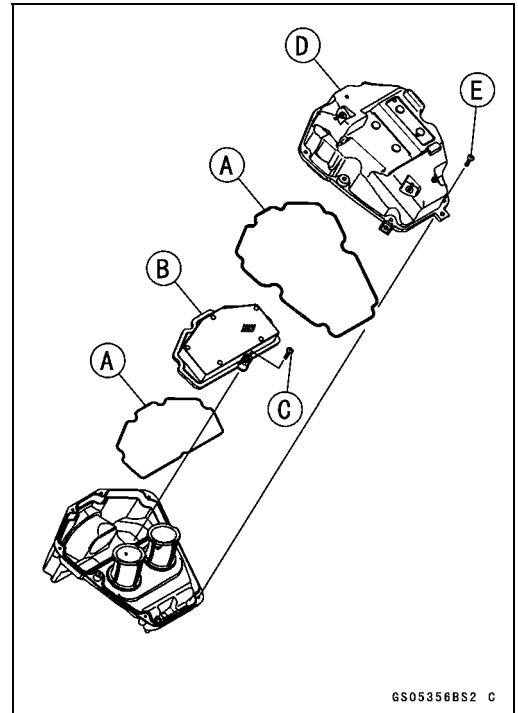

**Idle Speed Inspection**

- Start the engine and warm it up thoroughly.
- With the engine idling, turn the handlebars to both sides [A].
- ★ If handlebars movement changes the idle speed, the throttle cables may be improperly adjusted or incorrectly routed, or damaged. Be sure to correct any of these conditions before riding (see Throttle Control System Inspection and Cable, Wire, and Hose Routing section in the Appendix chapter).



<p><b>⚠ WARNING</b></p> <p><b>Operation with improperly adjusted, incorrectly routed or damaged cables could result in an unsafe riding condition. Follow the service manual to be make sure to correct any of these conditions.</b></p>
--

- Check the idle speed.
- ★ If the idle speed is out of specified range, adjust it.

**Idle Speed**

**Standard: 1 300 ±50 r/min (rpm)**

**Idle Speed Adjustment**

- Start the engine and warm it up thoroughly.
- Turn the adjusting screw [A] until the idle speed is correct.
- Open and close the throttle a few times to make sure that the idle speed is within the specified range. Readjust if necessary.



## 2-16 PERIODIC MAINTENANCE

### Periodic Maintenance Procedures

#### **Throttle Control System Inspection**



- Check that the throttle grip [A] moves smoothly from full open to close, and the throttle closes quickly and completely by the return spring in all steering positions.
- ★ If the throttle grip does not return properly, check the throttle cable routing, grip free play, and cable damage. Then lubricate the throttle cable.
- Check the throttle grip free play [B].

#### **Throttle Grip Free Play**

**Standard:** 2 ~ 3 mm (0.08 ~ 0.12 in.)

- ★ If the free play is incorrect, adjust the throttle cable as follows.
- Loosen the locknut [A] at the upper end of the accelerator cable.
- Turn the adjuster [B] in completely so as to give the throttle grip plenty of play.

- Loosen the locknut [A] at the middle of the decelerator cable.
- Turn the adjuster [B] until there is no play when the throttle grip is completely closed.
- Tighten the locknut.
- Turn the accelerator cable adjuster until 2 ~ 3 mm (0.08 ~ 0.12 in.) of throttle grip free play is obtained.
- Tighten the locknut.
- ★ If the free play can not be adjusted with the adjusters, replace the cable.

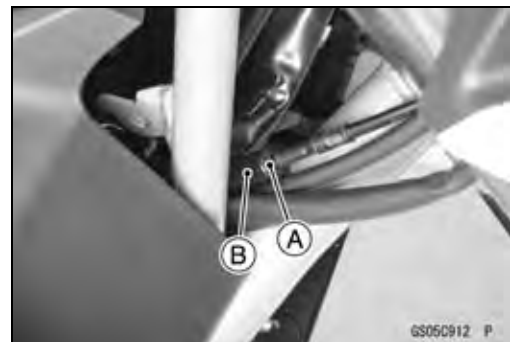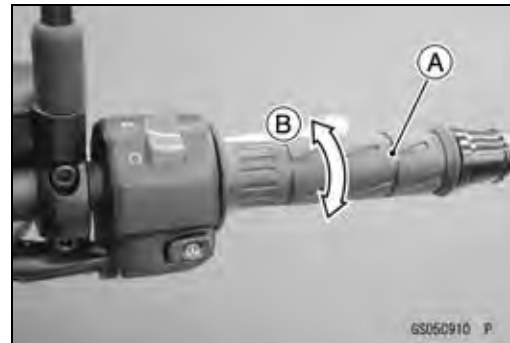

#### **Engine Vacuum Synchronization Inspection**

##### **NOTE**

○ These procedures are explained on the assumption that the intake and exhaust systems of the engine are in good condition.


- Situate the motorcycle so that it is vertical.
- Remove:
  - Fuel Tank (see Fuel Tank Removal in the Fuel System (DFI) chapter)
  - Air Cleaner Housing (see Air Cleaner Housing Removal in the Fuel System (DFI) chapter)
  - Fuel Hose (see Fuel Hose Replacement)

**Periodic Maintenance Procedures**

- Pull off the rubber caps or vacuum hoses [A] from the fittings of each throttle body.
- The evaporative emission control system equipped models are equipped the vacuum hoses.

**NOTE**


○ Do not disconnect the intake air pressure sensor hose [B] on the left side of the throttle body assy.

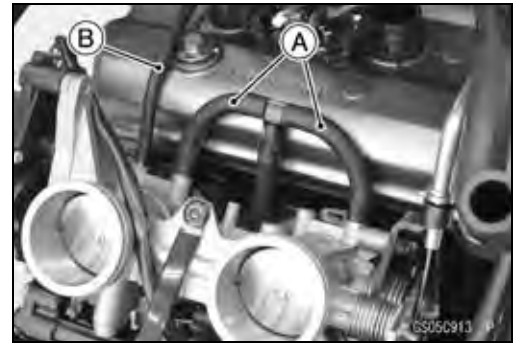


- Connect a vacuum gauge and hoses [A] (Special Tool: 57001-1369) to the fittings on the throttle body.

**Special Tool - Vacuum Gauge: 57001-1369**

- Connect a highly accurate tachometer lead [B] to one of the stick coil primary leads.

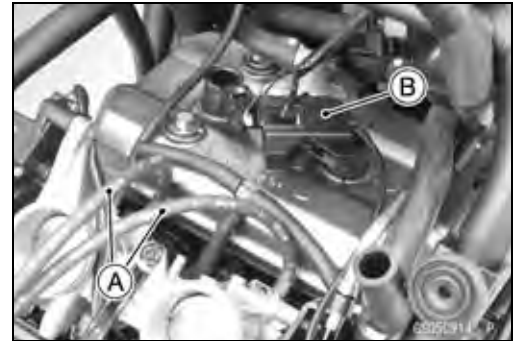


- Plug the air switching valve hose end [A] and air cleaner housing fitting [B].

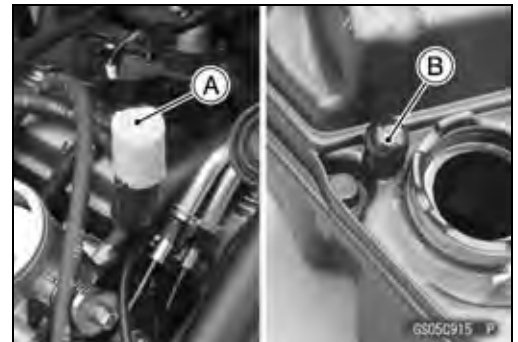

- Install the air cleaner housing (see Air Cleaner Housing Installation in the Fuel System (DFI) chapter).
- Connect the following parts temporarily.
  - Fuel Pump Lead Connector [A]
  - Extension Tube [B]

**Special Tool - Extension Tube: 57001-1578**

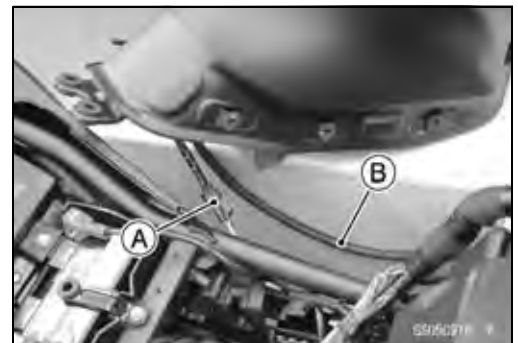

## 2-18 PERIODIC MAINTENANCE

### Periodic Maintenance Procedures

- Start the engine and warm it up thoroughly.
- Check the idle speed using a highly accurate tachometer.

#### Idle Speed

Standard: 1 300 ±50 r/min (rpm)

- ★ If the idle speed is out of the specified range, adjust it with the adjusting screw (see Idle Speed Adjustment).

#### NOTE

○ Do not measure the idle speed by the tachometer of the meter unit.

- While idling the engine, inspect the throttle body vacuum, using the vacuum gauge.

#### Throttle Body Vacuum

Standard: 35.3 ±1.3 kPa (265 ±10 mmHg) at idle speed

- ★ If any vacuum is not within specifications, turn the bypass screws [A].

Special Tool - Pilot Screw Adjuster, D [B]: 57001-1588



#### NOTICE

Do not over-tighten the bypass screw. The tapered portion of the bypass screw could be damaged.

- Adjust the each vacuum (#1, #2) to the standard value.
- Open and close the throttle valves after each measurement.
- Check the vacuums as before.
- ★ If all vacuums are within the specification range, finish the engine vacuum synchronization.
- ★ If any vacuum can not be adjusted within the specification, replace the bypass screws #1 and #2 with new ones, refer to the following procedure.


#### NOTE

○ In this photo, the air cleaner housing have been removed for clarity.

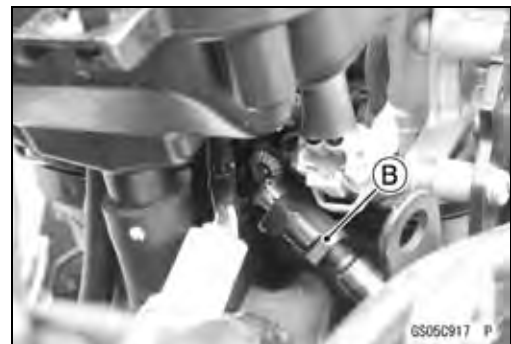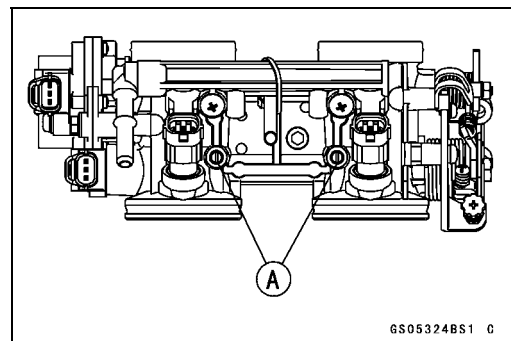

**Periodic Maintenance Procedures**

- Remove the throttle body assy (see Throttle Body Assy Removal in the Fuel System (DFI) chapter).
- Turn in the bypass screw [A] with counting the number of turns until it seals fully but not tightly. Record the number of turns.
- Remove:
  - Bypass Screw
  - Spring [B]
  - Washer [C]
  - O-ring [D]
- Check the bypass screw hole in the throttle body for carbon deposits.
- ★ If any carbons accumulate, wipe the carbons off from the hole, using a cotton pad penetrated with a high flash-point solvent.
- Replace the bypass screw, spring, washer and O-ring as a set.
- Turn in the bypass screw until it seats fully but not tightly.

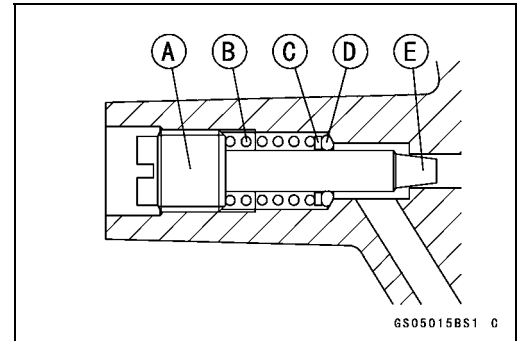

**NOTICE**

**Do not over-tighten the bypass screw. The tapered portion [E] of the bypass screw could be damaged.**

- Back out the same number of turns counted when first turned in. This is to set the screw to its original position.

**NOTE**

○ A throttle body has different “turns out” of the bypass screw for each individual unit. On setting the bypass screw, use the “turns out” determined during disassembly.

- Repeat the same procedure for the other bypass screw.
- Repeat the synchronization.
- ★ If the vacuums are correct, check the output voltage of the main throttle sensor (see Main Throttle Sensor Output Voltage Inspection in the Fuel System (DFI) chapter).

**Special Tool - Throttle Sensor Setting Adapter: 57001-1538**

**Main Throttle Sensor Output Voltage**

**Connections to Adapter:**

**Digital Meter (+) → R (sensor Y/R) lead**

**Digital Meter (-) → W (sensor BR/BK) lead**

**Standard: DC 0.99 ~ 1.05 V at idle throttle opening**

- ★ If the output voltage is out of the standard, check the input voltage of the main throttle sensor (see Main Throttle Sensor Input Voltage Inspection in the Fuel System (DFI) chapter).
- Remove the vacuum gauge hoses and install the rubber caps or vacuum hoses to the original position.
- The evaporative emission control system equipped models are equipped the vacuum hoses.
- Run the vacuum hoses according to Cable, Wire, and Hose Routing section in the Appendix chapter.
- Install the removed parts (see appropriate chapters).

## 2-20 PERIODIC MAINTENANCE

### Periodic Maintenance Procedures

#### Fuel System Inspection

##### Fuel Hose Inspection (fuel leak, damage, installation condition)

○ If the motorcycle is not properly handled, the high pressure inside the fuel line can cause fuel to leak [A] or the hose to burst. Remove the fuel tank (see Fuel Tank Removal in the Fuel System (DFI) chapter) and check the fuel hose.

★ Replace the fuel hose if any fraying, cracks [B] or bulges [C] are noticed.

● Check that the fuel hose is routed according to Cable, Wire, and Hose Routing section in the Appendix chapter.

★ Replace the hose if it has been sharply bent or kinked.

Hose Joints [A]

Fuel Hose [B]

● Check that the fuel hose joints are securely connected.

○ Push and pull [A] the fuel hose joint [B] back and forth more than two times, and make sure it is locked.

#### NOTICE

When pushing and pulling the fuel hose joint, do not apply strong force to the delivery pipe on the nozzle assy and the pipe on the fuel pump. The pipe made from resin could be damaged.

#### ⚠ WARNING

Leaking fuel can cause a fire or explosion resulting in serious burns. Make sure the hose joint is installed correctly on the delivery pipe by sliding the joint.

★ If it does not locked, reinstall the hose joint.




#### Fuel Filter Replacement

#### ⚠ WARNING

Gasoline is extremely flammable and can be explosive under certain conditions, creating the potential for serious burns. Make sure the area is well ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light. Do not smoke. Turn the ignition switch off. Disconnect the battery (-) terminal. To avoid fuel spills, draw it from the tank when the engine is cold. Be prepared for fuel spillage; any spilled fuel must be completely wiped up immediately.


#### NOTICE

Never drop the fuel pump especially on a hard surface. Such a shock to the pump can damage it.

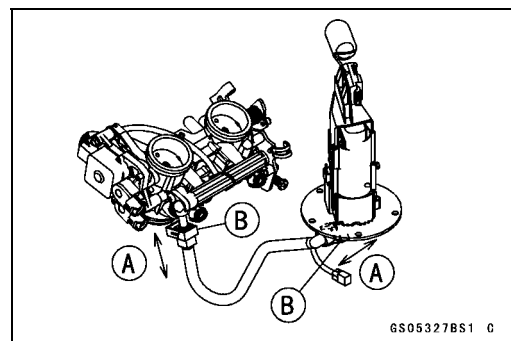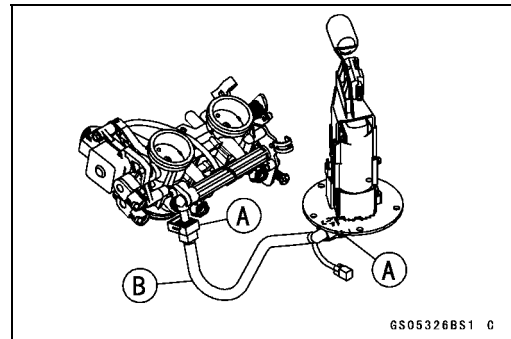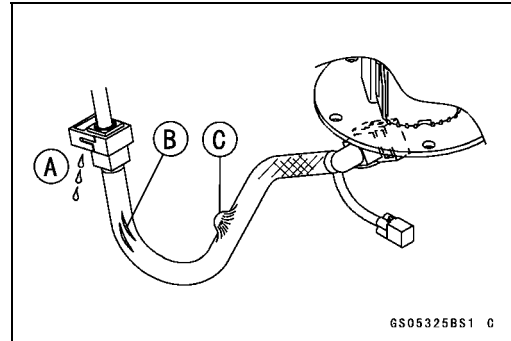


**Periodic Maintenance Procedures**


- Remove:
  - Fuel Pump (see Fuel Pump Removal in the Fuel System (DFI) chapter)
  - Fuel Pump Assembly Screw [A]
  - Lead Terminal [B]
  - Plate Nut [C]
- Disconnect:
  - Lead Terminal (Red) [D]
  - Lead Terminal (Light Blue) [E]

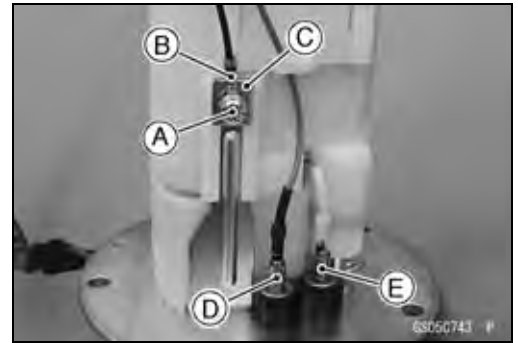


- Remove:
  - Fuel Pump Assembly Screw [A]
  - Lead Terminal [B]
  - Plate Nut [C]

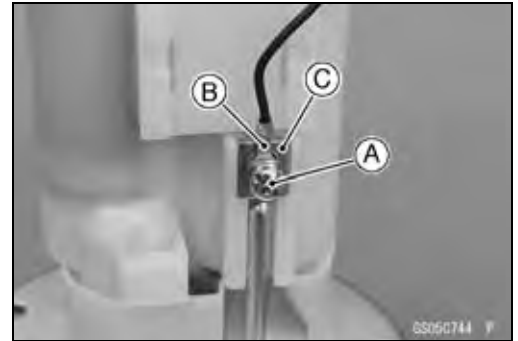


- Using the flat tip screwdriver [A], clear the tabs [B] and remove the fuel pump fitting [C] from the case [D].

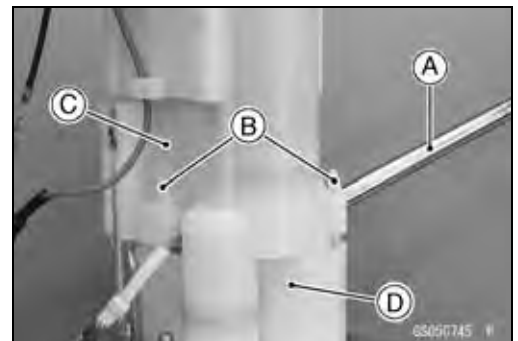

- Remove the fuel pump body [A] with fuel filter [B] from the fitting.

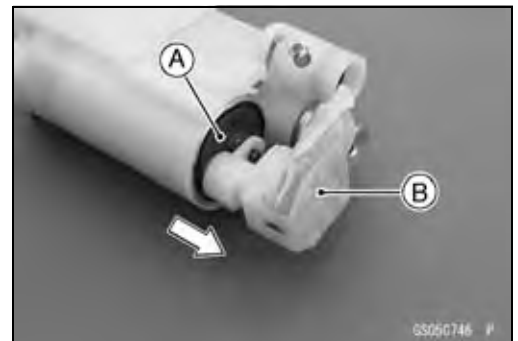

- Wrap the fuel filter [A] with the clean cloth [B], and remove the fuel filter.

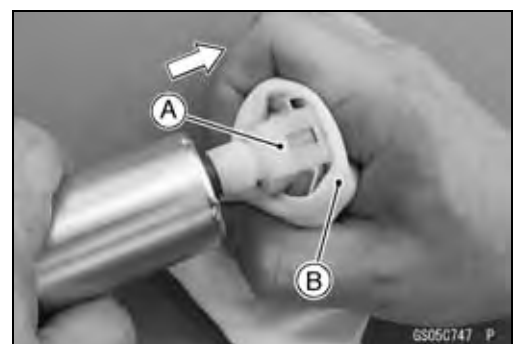

## 2-22 PERIODIC MAINTENANCE

### Periodic Maintenance Procedures

- Replace the fuel filter [A] with a new one.




- Replace the following parts with new ones and install the removed parts in the reverse procedure.

O-rings [A]


Fuel Pump Assembly Screws [B]

- Tighten:

**Torque - Fuel Pump Assembly Screws: 0.98 N·m (0.10 kgf·m, 8.7 in·lb)**

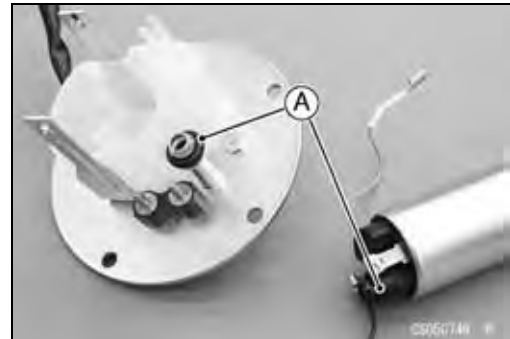


- Run the lead [A] into the guide [B].

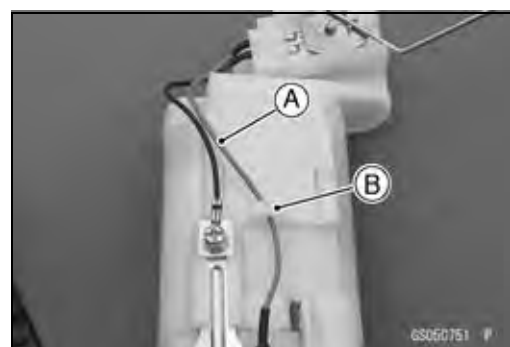

### **Fuel Hose Replacement**

- Remove the fuel tank (see Fuel Tank Removal in the Fuel System (DFI) chapter).
- Be sure to place a piece of cloth around the fuel hose joint.
- Wipe off the dirt of the surface [A] around the connection using a cloth or a soft brush.

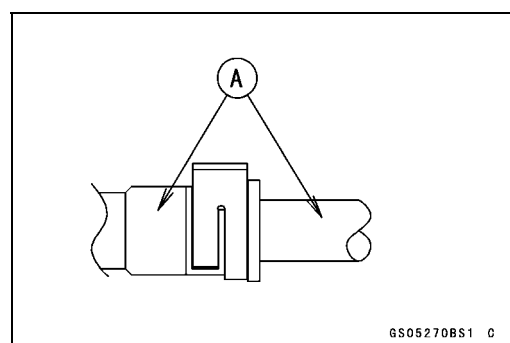




**Periodic Maintenance Procedures**

**When removing with flat tip screwdriver**

- Insert the flat tip screwdriver [A] into slit on the joint lock [B].
- Turn the driver to disconnect the joint lock.

**When removing with fingers**

- Open and push up [C] the joint lock with your fingers.

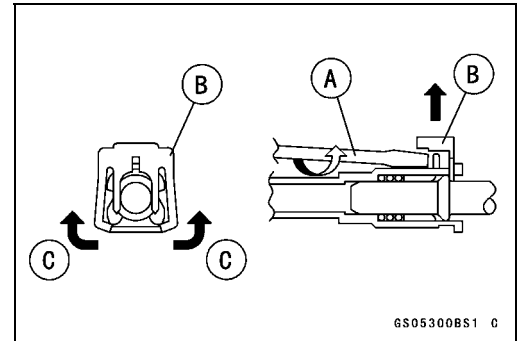

**NOTICE**


**Prying or excessively widening the joint lock ends for fuel hose removal will permanently deform the joint lock, resulting in a loose or incomplete lock that may allow fuel to leak and create the potential for a fire explosion. To prevent fire or explosion from a damaged joint lock, do not pry or excessively widen the joint lock ends when removing the fuel hose. The joint lock has a retaining edge that locks around the housing.**

- Pull the fuel hose joint out of the delivery pipe.


**⚠ WARNING**

**Fuel is flammable and explosive under certain conditions and can cause severe burns. Be prepared for fuel spillage; any spilled fuel must be completely wiped up immediately. When the fuel hose is disconnected, fuel spills out from the hose and the pipe. Cover the hose connection with a clean shop towel to prevent fuel spillage.**

- Clean the delivery pipe.
- Cover the delivery pipe with the vinyl bag to keep it clean.
- Remove the vinyl bag on the pipe.
- Check that there are no flaws, burrs, and adhesion of foreign materials on the delivery pipe [A].

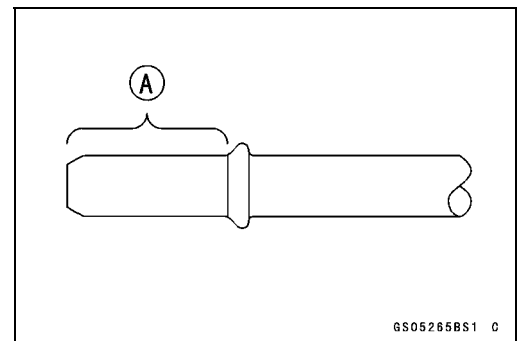

- Replace the fuel hose with a new one.
- Install the new fuel hose.
- Insert the fuel hose joint [A] straight onto the delivery pipe until the hose joint clicks.
- Push [B] the joint lock [C].

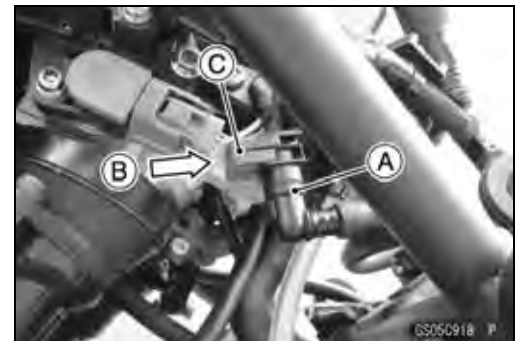

## 2-24 PERIODIC MAINTENANCE

### Periodic Maintenance Procedures

- Push and pull the fuel hose joint [A] back and forth [B] more than two times and make sure it is locked and does not come off.

#### **⚠ WARNING**

**Leaking fuel can cause a fire or explosion resulting in severe burns. Make sure the fuel hose joint is installed correctly on the delivery pipe and that it doesn't leak.**

- ★ If it comes off, reinstall the hose joint.
- Install the removed parts (see appropriate chapters).
- Start the engine and check the fuel hose for leaks.

#### **Evaporative Emission Control System Inspection (Equipped Models)**

- Inspect the canister as follows.

○ Remove:

- Front Seat (see Front Seat Removal in the Frame chapter)
- Battery Holder (see Battery Removal in the Electrical System chapter)
- Screws [A]

○ Remove:



- Cover [A]

- Pull out the canister [A].
- Slide the clamps [B].
- Disconnect the hoses [C].
- Visually inspect the canister for cracks or other damage.
- ★ If the canister has any cracks or bad damage, replace it with a new one.

#### **NOTE**

- *The canister is designed to work well through the motorcycle's life without any maintenance if it is used under normal conditions.*

- Inspect the purge valve (see Purge Valve Inspection in the Fuel System (DFI) chapter).
- Check that the hoses are securely connected and clamps are in position.
- Replace any kinked, deteriorated or damaged hoses.
- Run the hoses according to the Cable, Wire, and Hose Routing section in the Appendix chapter.
- When installing the hoses, avoid sharp bending, kinking, flattening or twisting, and run the hoses with a minimum of bending so that the emission flow will not be obstructed.

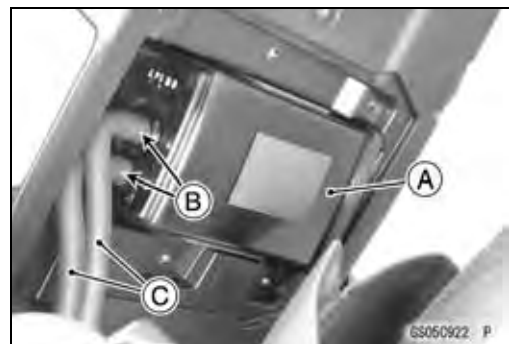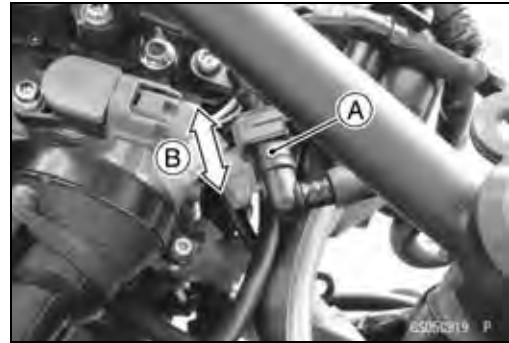

**Periodic Maintenance Procedures**

**Cooling System**

**Coolant Level Inspection**

**NOTE**


○ Check the level when the engine is cold (room or ambient temperature).

● Check the coolant level in the coolant reserve tank with the motorcycle held perpendicular (Do not use the side stand).

★ If the coolant level is lower than the “L” level line [A], unscrew the reserve tank cap and add coolant to the “F” level line [B].

“L”: Low

“F”: Full

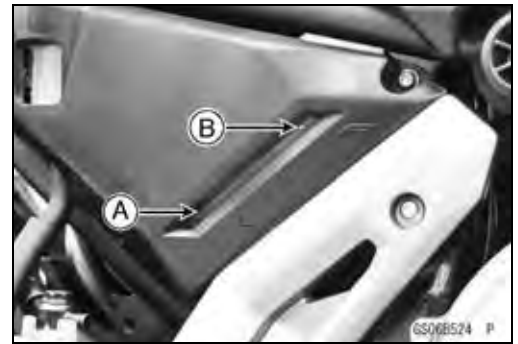

**NOTICE**

For refilling, add the specified mixture of coolant and soft water. Adding water alone dilutes the coolant and degrades its anticorrosion properties. The diluted coolant can attack the aluminum engine parts. In an emergency, soft water alone can be added. But the diluted coolant must be returned to the correct mixture ratio within a few days.

If coolant must be added often or the coolant reserve tank has run completely dry, there is probably leakage in the cooling system. Check the system for leaks.

Coolant damages painted surfaces. Immediately wash away any coolant that spills on the frame, engine, wheels or other painted parts.

**Cooling System Inspection**


**Water Hose and Pipe Inspection (coolant leak, damage, installation condition)**

○ The high pressure inside the water hose can cause coolant to leak [A] or the hose to burst if the line is not properly maintained.

● Visually inspect the hoses for signs of deterioration. Squeeze the hoses. A hose should not be hard and brittle, nor should it be soft or swollen.

★ Replace the hose if any fraying, cracks [B] or bulges [C] are noticed.

● Check that the hoses are securely connected.

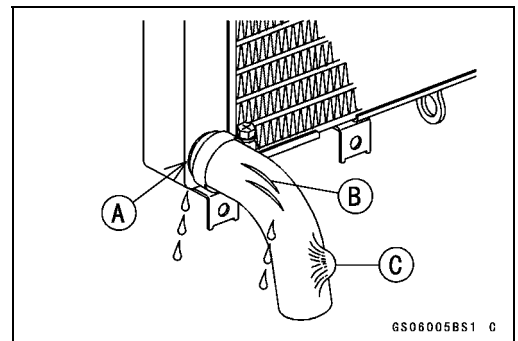

**Coolant Change**

**⚠ WARNING**

Coolant can be extremely hot and cause severe burns, is toxic and very slippery. Do not remove the radiator cap or attempt to change the coolant when the engine is hot; allow it cool completely. Immediately wipe any spilled coolant from tires, frame, engine or other painted parts. Do not ingest coolant.

## 2-26 PERIODIC MAINTENANCE

### Periodic Maintenance Procedures

- Remove:
  - Right Side Cover (see Side Cover Removal in the Frame chapter)
  - Coolant Reserve Tank Bolts [A]



- Disconnect the coolant reserve tank overflow hose [A].
- Remove the cap [B].
- Drain the coolant into a container from the coolant reserve tank.



- Remove the right middle fairing (see Middle Fairing Removal in the Frame chapter).
- Loosen:
  - Radiator Cap Stopper Screw [A]
- Remove:
  - Radiator Cap [B]



- Place a container under the drain bolt [A] of the water pump cover.
- Drain the coolant from the radiator by removing the drain bolt.



**Periodic Maintenance Procedures**

- Connect the coolant reserve tank overflow hose.
- Replace the drain bolt gasket with a new one.
- Tighten:
  - Torque - Coolant Drain Bolt: 12 N·m (1.2 kgf·m, 106 in·lb)
  - Coolant Reserve Tank Bolts: 7.9 N·m (0.81 kgf·m, 70 in·lb)
- When filling the coolant, choose a suitable mixture ratio by referring to the coolant manufacturer's directions.

**NOTICE**

**Soft or distilled water must be used with the antifreeze in the cooling system. If hard water is used in the system, it causes scales accumulation in the water passages, and considerably reduces the efficiency of the cooling system.**

**Water and Coolant Mixture Ratio (Recommended)**

- Soft Water: 50%
- Coolant: 50%
- Freezing Point: -35°C (-31°F)
- Total Amount: 1.2 L (1.3 US qt)

- Fill the radiator up to the filler neck [A] with coolant.

**NOTE**

*○ Pour in the coolant slowly so that it can expel the air from the engine and radiator.*

- Check the cooling system for leaks.
- Tap the water hoses to force any air bubbles caught inside.
- Fill the radiator up to the filler neck with coolant.
- Install the radiator cap and tighten the stopper screw.
- Fill the reserve tank up to the "F" (full) level line [A] with coolant and install the cap.
- Start the engine, warm it up thoroughly until the radiator fan turns on and then stop the engine.
- Check the coolant level in the reserve tank after the engine cools down.
- ★ If the coolant level is lower than the "L" (low) level line [B], add coolant to the "F" level line.

**NOTICE**

**Do not add more coolant above the "F" level line.**

- Install the removed parts (see appropriate chapters).




## 2-28 PERIODIC MAINTENANCE

### Periodic Maintenance Procedures

#### Water Hose and O-ring Replacement

- Drain the coolant (see Coolant Change).
- Remove:
  - Radiator (see Radiator and Radiator Fan Removal in the Cooling System chapter)
  - Right Fuel Tank Side Cover (see Fuel Tank Side Cover Removal in the Frame chapter)
  - Thermostat Housing [A] (see Thermostat Removal in the Cooling System chapter)
  - Water Pump Cover [B] (see Water Pump Removal in the Cooling System chapter)
- Replace the hoses [C] and O-rings [D] with new ones.
- Apply grease to the new O-rings.
- Run the new hoses according to the Cable, Wire, and Hose Routing section in the Appendix chapter.
- Install the removed parts (see appropriate chapters).
- Fill the coolant (see Coolant Change).
- Check the cooling system for leaks.

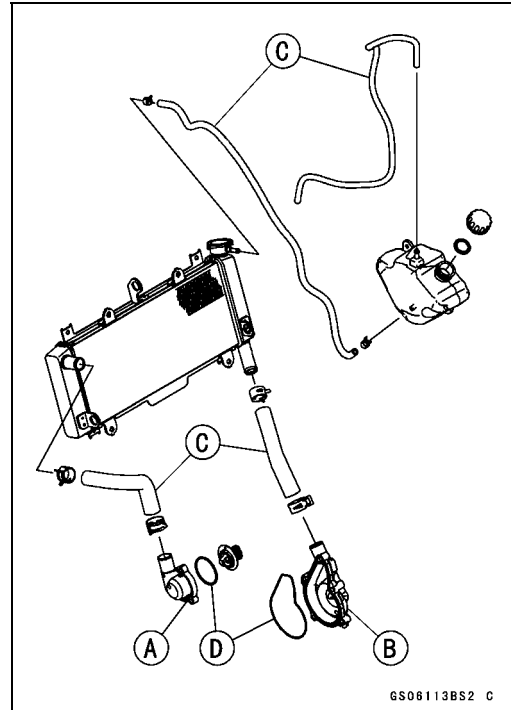

#### Engine Top End

##### Valve Clearance Inspection



###### NOTE

○ Valve clearance must be checked and adjusted when the engine is cold (room temperature).

- Remove:
  - Cylinder Head Cover (see Cylinder Head Cover Removal in the Engine Top End chapter)
  - Timing Inspection Cap [A]
  - Timing Rotor Bolt Cap [B]


**Special Tool - Filler Cap Driver: 57001-1454**

- Check the valve clearance when the pistons are at TDC.
- The pistons are numbered beginning with the engine left side.
- Using a wrench, turn the timing rotor clockwise until the "1/T" or "2/T" [A] mark line aligns with the notch [B] on the timing inspection hole [C].
  - For #1 Cylinder: "1/T" Mark Line
  - For #2 Cylinder: "2/T" Mark Line

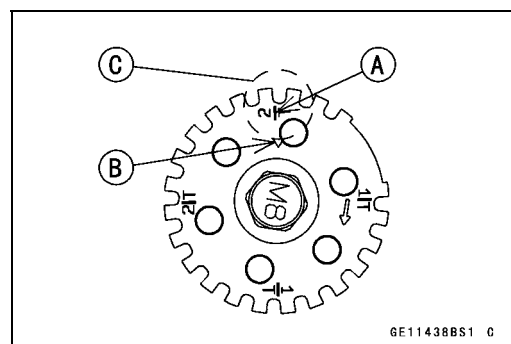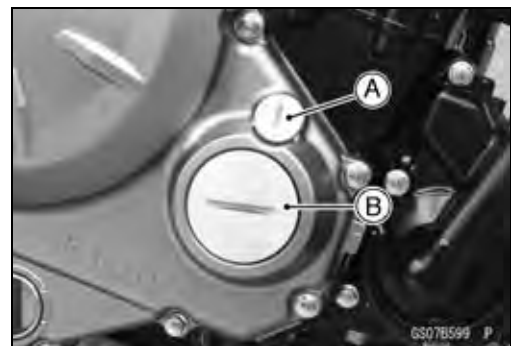

**Periodic Maintenance Procedures**

○ Measure the valve clearance of the valves for which the cams [A] are turned away from each other.

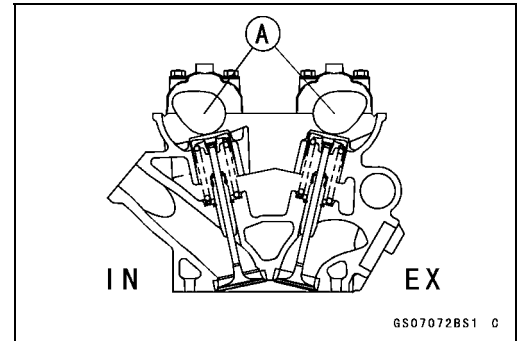


● Using the thickness gauge [A], measure the valve clearance between cam and valve lifter.

**Valve Clearance**

**Standard:**

**Exhaust** 0.22 ~ 0.31 mm (0.0087 ~ 0.0122 in.)

**Intake** 0.15 ~ 0.21 mm (0.0059 ~ 0.0083 in.)

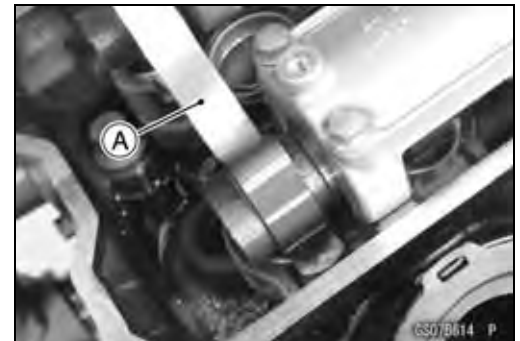

**NOTE**

○ Thickness gauge is horizontally inserted on the valve lifter.

Appropriateness [A]

Inadequacy [B]


Thickness Gauge [C]

Horizontally Inserts [D]

Cam [E]

Valve Lifter [F]

Hits the Valve Lifter Ahead [G]

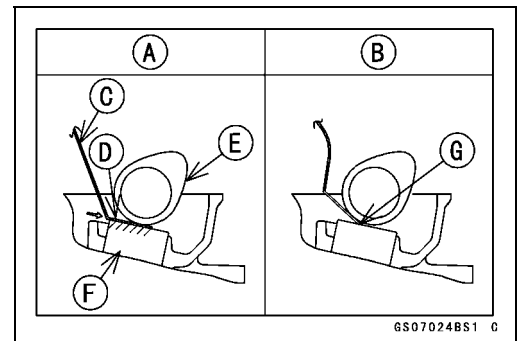

○ Each piston has two intake and two exhaust valves. Measure these two intake or exhaust valves at the same crankshaft position.

**NOTE**

○ Check the valve clearance using this method only. Checking the clearance at any other cam position may result in improper valve clearance.

**Valve Clearance Measuring Position**

**#1 Piston TDC at End of Compression Stroke:**

**Intake Valve Clearances of #1 Piston**

**Exhaust Valve Clearances of #1 Piston**

**#2 Piston TDC at End of Compression Stroke:**

**Intake Valve Clearances of #2 Piston**

**Exhaust Valve Clearances of #2 Piston**

★ If the valve clearance is not within the specified range, first record the clearance, and then adjust it.

## 2-30 PERIODIC MAINTENANCE


### Periodic Maintenance Procedures

#### Valve Clearance Adjustment

- To change the valve clearance, remove the camshaft chain tensioner, camshafts and valve lifters. Replace the shim with one of a different thickness.

#### NOTE

- Mark and record the locations of the valve lifters and shims so that they can be reinstalled in their original positions.

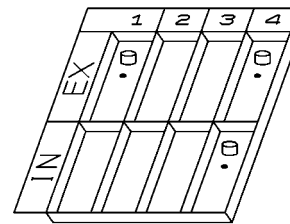

GS07073BS1 C

- Besides the standard shims in the valve clearance adjustment charts, the following shims may be installed at the factory. Although they are not available as spare parts, they can be used to adjust valve clearance.

#### Adjustment Shims

Thickness
2.675 mm
2.725 mm
2.775 mm
2.825 mm
2.875 mm
2.925 mm
2.975 mm
3.025 mm
3.075 mm
3.125 mm
3.175 mm

- Clean the shim to remove any dust or oil.
- Measure the thickness of the removed shim [A].



GS078030 P



Periodic Maintenance Procedures

VALVE CLEARANCE ADJUSTMENT CHART INTAKE VALVE

		PRESENT SHIM																			Example			
PART No. (92180-)	1014	1016	1018	1020	1022	1024	1026	1028	1030	1032	1034	1036	1038	1040	1042	1044	1046	1048	1050	1052	1054			
MARK	50	55	60	65	70	75	80	85	90	95	00	05	10	15	20	25	30	35	40	45	50			
THICKNESS (mm)	2.50	2.55	2.60	2.65	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50			
VALVE CLEARANCE MEASUREMENT	0.00~0.01	-	-	-	-	2.50	2.55	2.60	2.65	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30		
	0.02~0.06	-	-	-	2.50	2.55	2.60	2.65	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35		
	0.07~0.11	-	-	2.50	2.55	2.60	2.65	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40		
	0.12~0.14	-	2.50	2.55	2.60	2.65	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45		
	0.15~0.21	SPECIFIED CLEARANCE/NO CHANGE REQUIRED																						
	0.22~0.24	2.55	2.60	2.65	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50			
	0.25~0.29	2.60	2.65	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50				
	0.30~0.34	2.65	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50					
	0.35~0.39	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50						
	0.40~0.44	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50							
	0.45~0.49	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50								
	0.50~0.54	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50									
	0.55~0.59	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50										
	0.60~0.64	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50											
	0.65~0.69	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50												
	0.70~0.74	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50													
	0.75~0.79	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50														
	0.80~0.84	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50															
	0.85~0.89	3.20	3.25	3.30	3.35	3.40	3.45	3.50																
0.90~0.94	3.25	3.30	3.35	3.40	3.45	3.50																		
0.95~0.99	3.30	3.35	3.40	3.45	3.50																			
1.00~1.04	3.35	3.40	3.45	3.50																				
1.05~1.09	3.40	3.45	3.50																					
1.10~1.14	3.45	3.50																						
1.15~1.19	3.50																							

INSTALL THE SHIM OF THIS THICKNESS (mm)

GS07119BW3 G

1. Measure the clearance (when engine is cold).
2. Check present shim size.
3. Match clearance in vertical column with present shim size in horizontal column.
4. Install the shim specified where the lines intersect. This shim will give the proper clearance.

**Example:** Present shim is **2.95 mm**  
 Measured clearance is **0.45 mm**  
 Replace **2.95 mm** shim with **3.20 mm** shim.

5. Remeasure the valve clearance and readjust if necessary.

# 2-32 PERIODIC MAINTENANCE

## Periodic Maintenance Procedures

### VALVE CLEARANCE ADJUSTMENT CHART EXHAUST VALVE

		PRESENT SHIM															Example						
PART No. (92180-)		1014	1016	1018	1020	1022	1024	1026	1028	1030	1032	1034	1036	1038	1040	1042	1044	1046	1048	1050	1052	1054	
MARK		50	55	60	65	70	75	80	85	90	95	00	05	10	15	20	25	30	35	40	45	50	
THICKNESS (mm)		2.50	2.55	2.60	2.65	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50	
VALVE CLEARANCE MEASUREMENT	Example	0.00~0.04	-	-	-	-	2.50	2.55	2.60	2.65	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	
	0.05~0.09	-	-	-	-	2.50	2.55	2.60	2.65	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	
	0.10~0.14	-	-	-	2.50	2.55	2.60	2.65	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	
	0.15~0.19	-	-	2.50	2.55	2.60	2.65	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	
	0.20~0.21	-	2.50	2.55	2.60	2.65	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	
	0.22~0.31	SPECIFIED CLEARANCE/NO CHANGE REQUIRED																					
	0.32~0.34	2.55	2.60	2.65	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50		
	0.35~0.39	2.60	2.65	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50			
	0.40~0.44	2.65	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50				
	0.45~0.49	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50					
	0.50~0.54	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50						
	0.55~0.59	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50							
	0.60~0.64	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50								
	0.65~0.69	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50									
	0.70~0.74	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50										
	0.75~0.79	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50											
	0.80~0.84	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50												
	0.85~0.89	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50													
	0.90~0.94	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50														
	0.95~0.99	3.20	3.25	3.30	3.35	3.40	3.45	3.50															
	1.00~1.04	3.25	3.30	3.35	3.40	3.45	3.50																
	1.05~1.09	3.30	3.35	3.40	3.45	3.50																	
	1.10~1.14	3.35	3.40	3.45	3.50																		
	1.15~1.19	3.40	3.45	3.50																			
	1.20~1.24	3.45	3.50																				
1.25~1.29	3.50																						

INSTALL THE SHIM OF THIS THICKNESS (mm)

GS071208W3 C

1. Measure the clearance (when engine is cold).
2. Check present shim size.
3. Match clearance in vertical column with present shim size in horizontal column.
4. Install the shim specified where the lines intersect. This shim will give the proper clearance.

**Example:** Present shim is **2.95 mm**.  
 Measured clearance is **0.47 mm**.  
 Replace **2.95 mm** shim with **3.15 mm** shim.

5. Remeasure the valve clearance and readjust if necessary.

## Periodic Maintenance Procedures

### NOTICE

**Be sure to remeasure the clearance after selecting a shim according to the table. If the clearance is out of the specified range, use the additional shim.**

- If there is no valve clearance, use a shim that is a few sizes smaller, and remeasure the valve clearance.
- When installing the shim, face the marked side toward the valve lifter. At this time, apply molybdenum disulfide oil solution to the shim or the valve lifter to keep the shim in place during camshaft installation.

### NOTICE

**Do not put shim stock under the shim. This may cause the shim to pop out at high rpm, causing extensive engine damage.**  
**Do not grind the shim. This may cause it to fracture, causing extensive engine damage.**

- Apply molybdenum disulfide oil solution to the valve lifter surface and install the lifter.
- Install the camshafts (see Camshaft Installation in the Engine Top End chapter).
- Recheck the valve clearance and readjust if necessary.
- Install the removed parts (see appropriate chapters).

### ***Air Suction System Damage Inspection***

- Remove:
  - Fuel Tank (see Fuel Tank Removal in the Fuel System (DFI) chapter)
  - Air Cleaner Housing (see Air Cleaner Housing Removal in the Fuel System (DFI) chapter)
- Bring the air switching valve hose end [A] to the outside of the frame.
- Reinstall:
  - Air Cleaner Housing (see Air Cleaner Housing Installation in the Fuel System (DFI) chapter)
  - Fuel Tank (see Fuel Tank Installation in the Fuel System (DFI) chapter)
- Start the engine and run it at idle speed.
- Plug the air switching valve hose end with your finger and feel vacuum pulsing in the hose.
- ★ If there is no vacuum pulsation, check the hose line for leak. If there is no leak, check the air switching valve (see Air Switching Valve Unit Test in the Electrical System chapter) or air suction valve (see Air Suction Valve Inspection in the Engine Top End chapter).



## 2-34 PERIODIC MAINTENANCE

### Periodic Maintenance Procedures


#### Clutch

##### Clutch Operation Inspection

- Pull the clutch lever just enough to take up the free play [A].
- Measure the gap between the lever and the lever holder.
- ★ If the gap is too wide, the clutch may not release fully. If the gap is too narrow, the clutch may not engage fully. In either case, adjust it.

##### Clutch Lever Free Play



Standard: 2 ~ 3 mm (0.08 ~ 0.12 in.)

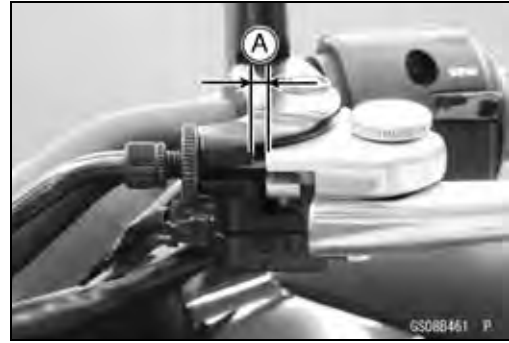

#### **⚠ WARNING**

The engine and exhaust system get extremely hot during normal operation and can cause serious burns. Never touch the engine or exhaust pipe during clutch adjustment.

- Turn the adjuster [A] so that 5 ~ 6 mm (0.20 ~ 0.24 in.) [B] of threads is visible.
- Slide the dust cover [A] at the clutch cable lower end out of place.
- Loosen both adjusting nuts [B] at the clutch cover as far as they will go.
- Pull the clutch outer cable [C] and tighten the adjusting nuts against the clutch cover [D].
- Slip the dust cover back onto place.
- Turn the adjuster at the clutch lever until the free play is correct.

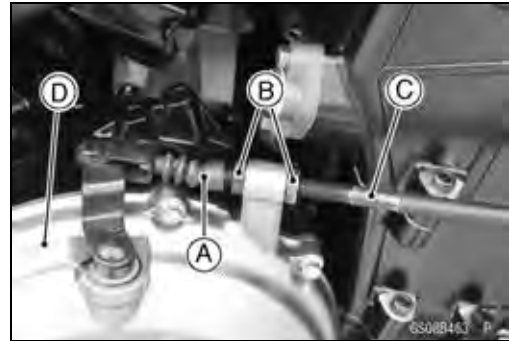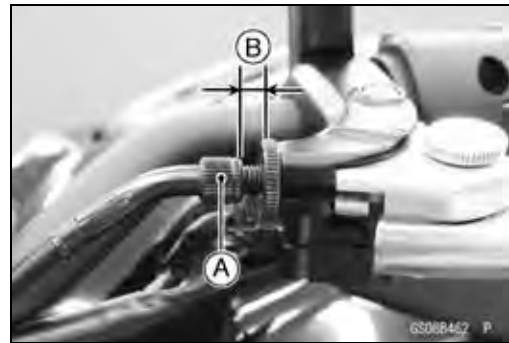

#### **⚠ WARNING**

Too much cable play can prevent clutch disengagement and cause an accident resulting in serious injury or death. When adjusting the clutch or replacing the cable, be sure the upper end of the clutch outer cable is fully seated in its fitting, or it could slip into place later, creating enough cable play to prevent clutch disengagement.

- After the adjustment, start the engine and check that the clutch does not slip and that it releases properly.

Periodic Maintenance Procedures


Engine Lubrication System

Engine Oil Change

- Situate the motorcycle so that it is vertical after warming up the engine.
- Remove the engine oil drain bolt [A] to drain the oil.
- The oil in the oil filter can be drained by removing the filter (see Oil Filter Replacement).
- Replace the drain bolt gasket [B] with a new one.
- Tighten the drain bolt.

**Torque - Engine Oil Drain Bolt: 30 N·m (3.1 kgf·m, 22 ft·lb)**

- Remove the oil filler plug [A].

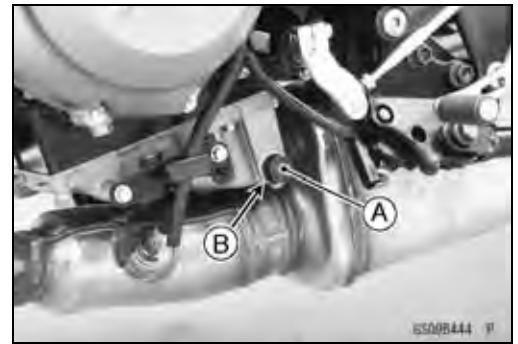


- Pour in the specified type and amount of oil.

**Recommended Engine Oil**

**Type:** API SG, SH, SJ, SL or SM with JASO MA, MA1 or MA2

**Viscosity:** SAE 10W-40

**Capacity:** 1.6 L (1.7 US qt) (When filter is not removed.)  
 1.8 L (1.9 US qt) (When filter is removed.)  
 2.3 L (2.4 US qt) (When engine is completely dry.)

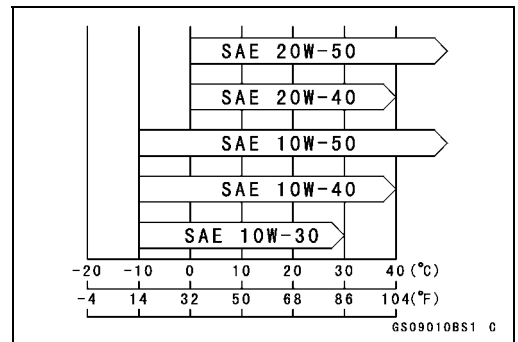

**NOTE**

- Do not add any chemical additive to the oil. Oils fulfilling the above requirements are fully formulated and provide adequate lubrication for both the engine and the clutch.
- Although 10W-40 engine oil is the recommended oil for most conditions, the oil viscosity may need to be changed to accommodate atmospheric conditions in your riding area.

- Replace the O-ring of the oil filler plug with a new one.
- Apply grease to the new O-ring.
- Install the oil filler plug.
- Check the oil level (see Oil Level Inspection in the Engine Lubrication System chapter).

## 2-36 PERIODIC MAINTENANCE

### Periodic Maintenance Procedures

#### Oil Filter Replacement

- Drain the engine oil (see Engine Oil Change).
- Remove the oil filter with the oil filter wrench [A].

**Special Tool - Oil Filter Wrench: 57001-1249**



- Replace the filter with a new one.
- Apply grease to the gasket [A] before installation.
- Tighten the filter with the oil filter wrench.


**Special Tool - Oil Filter Wrench: 57001-1249**

**Torque - Oil Filter: 17.5 N·m (1.78 kgf·m, 12.9 ft·lb)**

#### NOTE

○ Hand tightening of the oil filter can not be allowed since it does not reach to this tightening torque.

- Pour in the specified type and capacity of oil (see Engine Oil Change).

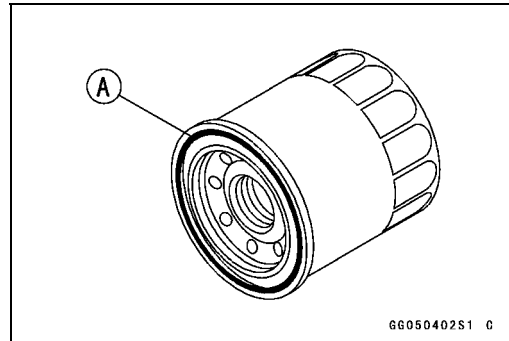

#### Wheels/Tires


##### Air Pressure Inspection

- Remove the air valve cap.
- Measure the tire air pressure with an air pressure gauge [A] when the tires are cold (that is, when the motorcycle has not been ridden more than a mile during the past 3 hours).
- Install the air valve cap.
- ★ Adjust the tire air pressure according to the specifications if necessary.

**Tire Air Pressure (when cold):**

**Front: Up to 200 kg (441 lb) load: 225 kPa (2.25 kgf/cm<sup>2</sup>, 32 psi)**


**Rear: Up to 200 kg (441 lb) load: 250 kPa (2.50 kgf/cm<sup>2</sup>, 36 psi)**

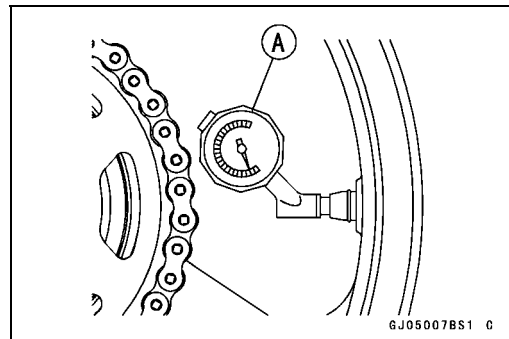

##### Wheels and Tires Inspection

##### Wheel/Tire Damage Inspection

- Remove any imbedded stones [A] or other foreign particles [B] from tread.
- Visually inspect the tire for cracks and cuts, and replace the tire if necessary. Swelling or high spots indicate internal damage, requiring tire replacement.
- Visually inspect the wheel for cracks, cuts and dents damage.
- ★ If any damage is found, replace the wheel if necessary.

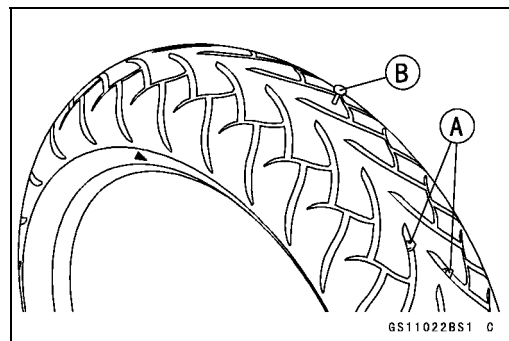


**Periodic Maintenance Procedures**

**Tire Tread Wear Inspection**

As the tire tread wears down, the tire becomes more susceptible to puncture and failure. An accepted estimate is that 90% of all tire failures occur during the last 10% of tread life (90% worn). So it is false economy and unsafe to use the tires until they are bald.

- Measure the tread depth at the center of the tread with a depth gauge [A]. Since the tire may wear unevenly, take measurement at several places.
- ★ If any measurement is less than the service limit, replace the tire (see Tire Removal/Installation in the Wheels/Tires chapter).

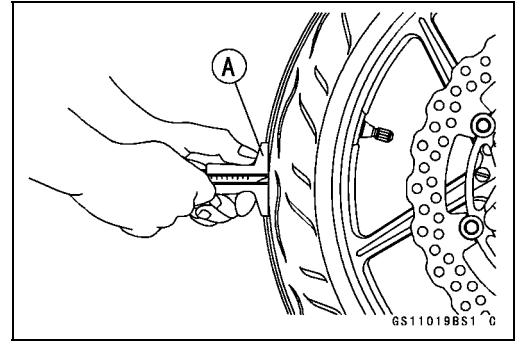

**Tread Depth**

**Standard:**

- Front      4 mm (0.16 in.)
- Rear        5.8 mm (0.23 in.)

**Service Limit:**

- Front      1 mm (0.04 in.)  
              (AT, CH, DE) 1.6 mm (0.06 in.)
- Rear        2 mm (0.08 in.) (Up to 130 km/h (80 mph))  
              3 mm (0.12 in.) (Over 130 km/h (80 mph))

**⚠ WARNING**

Some replacement tires may adversely affect handling and cause an accident resulting in serious injury or death. To ensure proper handling and stability, use only the recommended standard tires for replacement, inflated to the standard pressure.

**NOTE**

- Most countries may have their own regulations a minimum tire tread depth: be sure to follow them.
- Check and balance the wheel when a tire is replaced with a new one.

**Wheel Bearing Damage Inspection**


- Raise the front wheel off the ground with a suitable stand.
- Turn the handlebars all the way to the right or left.
- Inspect the roughness of the front wheel bearing by pushing and pulling [A] the wheel.
- Spin [B] the front wheel lightly, and check for smoothly turn, roughness, binding or noise.
- ★ If roughness, binding or noise is found, remove the front wheel and inspect the wheel bearing (see Front Wheel Removal, Hub Bearing Inspection in the Wheels/Tires chapter).



## 2-38 PERIODIC MAINTENANCE

### Periodic Maintenance Procedures

- Raise the rear wheel off the ground with a stand (see Rear Wheel Removal in the Wheels/Tires chapter).
- Inspect the roughness of the rear wheel bearing by pushing and pulling [A] the wheel.
- Spin [B] the rear wheel lightly, and check for smoothly turn, roughness, binding or noise.
- ★ If roughness, binding or noise is found, remove the rear wheel and inspect the wheel bearing (see Rear Wheel Removal, Hub Bearing Inspection in the Wheels/Tires chapter) and coupling (see Coupling Bearing Inspection in the Final Drive chapter).

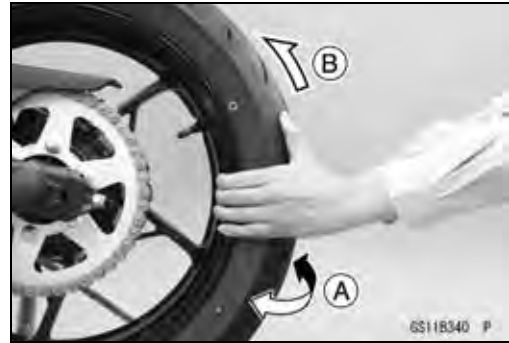

### Final Drive

#### Drive Chain Lubrication Condition Inspection

Lubrication is necessary after riding through rain or on wet roads, or any time that the chain appears dry.


Use a lubricant for sealed chains to prevent deterioration of chain seals. If the chain is especially dirty, clean it using a cleaner for sealed chains following the instructions supplied by the chain cleaner manufacturer.

#### NOTICE

**The O-rings between the side plates seal in the lubricant between the pin and the bushing. To avoid damaging the O-rings and resultant loss of lubricant, observe the following rules.**

**Use only chain cleaner for cleaning of the O-ring of the drive chain. Any other cleaning solution such as gasoline will cause deterioration and swelling of the O-ring. Immediately blow the chain dry with compressed air after cleaning. Complete cleaning and drying the chain within 10 minutes.**

- Apply chain oil to the sides of the rollers so that oil will penetrate to the rollers and bushings. Apply the oil to the O-rings so that the O-rings will be coated with oil.
- Wipe off any excess oil.
  - Oil Applied Areas [A]
  - O-rings [B]
- Wipe off lubricant that gets on the tire surface.

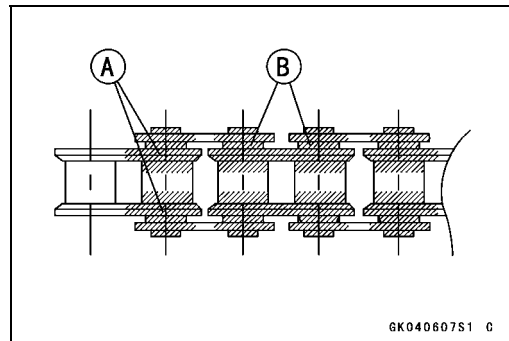



Periodic Maintenance Procedures

**Drive Chain Slack Inspection**



**NOTE**

- Check the slack with the motorcycle setting on its side stand.
- Clean the chain if it is dirty, and lubricate it if it appears dry.

- Check the wheel alignment (see Wheel Alignment Inspection).
- Rotate the rear wheel to find the position where the chain is tightest.
- Measure the vertical movement (chain slack) [A] midway between the sprockets.  
 Measuring Point [B]  
 About 115 mm (4.53 in.) [C]
- ★ If the chain slack exceeds the standard, adjust it.

**Chain Slack**

**Standard: 20 ~ 30 mm (0.8 ~ 1.2 in.)**

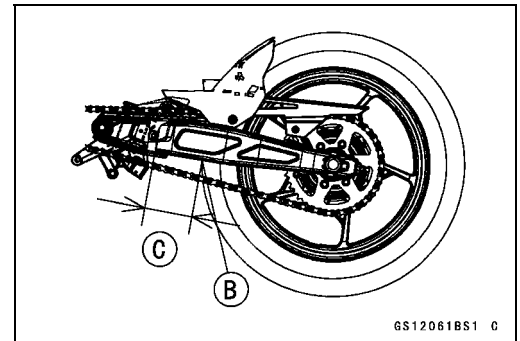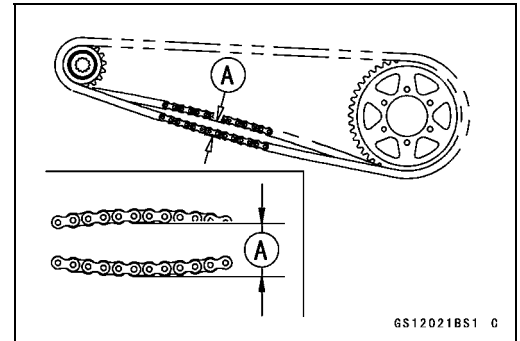


**Drive Chain Slack Adjustment**

- Remove the rubber cap [A].



- Remove the cotter pin [A], and loosen the axle nut [B].
- Loosen the both chain adjuster locknuts [C].
- ★ If the chain is too loose, turn in the right and left chain adjusters [D] evenly.
- ★ If the chain is too tight, turn out the right and left chain adjusters evenly, and kick the wheel forward.
- Turn both chain adjusters evenly until the drive chain has the correct amount of slack. To keep the chain and wheel properly aligned, the left wheel alignment indicator [E] should align with the same swingarm mark [F] that the right wheel alignment indicator aligns with.

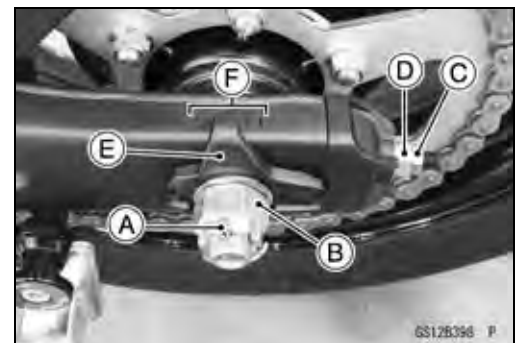

**⚠ WARNING**

**Misalignment of the wheel will result in abnormal wear and may result in an unsafe riding condition. Be sure the wheel is properly aligned.**

- Tighten both chain adjuster locknuts securely.
- Tighten:  
**Torque - Rear Axle Nut: 108 N·m (11.0 kgf·m, 79.7 ft·lb)**
- Turn the wheel, measure the chain slack again at the tightest position, and readjust if necessary.


## 2-40 PERIODIC MAINTENANCE

### Periodic Maintenance Procedures

- Insert a new cotter pin [A].

#### NOTE

- When inserting the cotter pin, if the slots in the nut do not align with the cotter pin hole in the axle, tighten the nut clockwise [B] up to next alignment.
- It should be within 30 degrees.
- Loosen once and tighten again when the slot goes past the nearest hole.

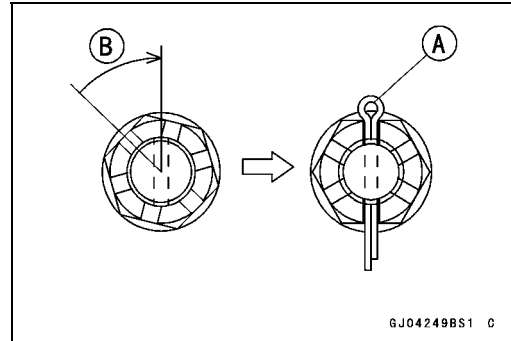


- Bend the cotter pin [A] along the nut [B].

#### **⚠ WARNING**


**A loose axle nut can lead to an accident resulting in serious injury or death. Tighten the axle nut to the proper torque and install a new cotter pin.**

- Install the rubber cap.

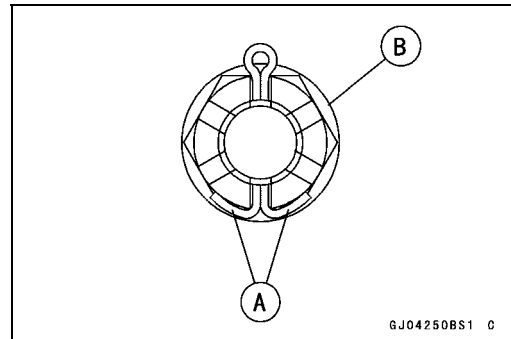

#### Wheel Alignment Inspection


- Remove the rubber cap [A].

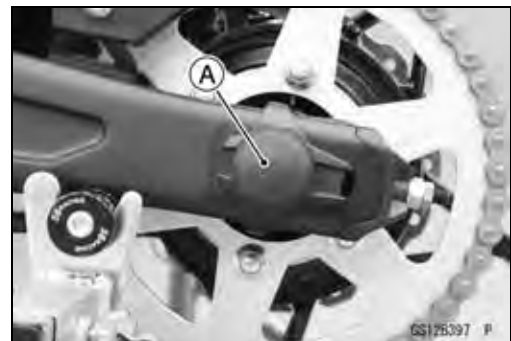

- Check that the left alignment indicator [A] aligns with the same swingarm mark [B] that the right alignment indicator aligns with.
- ★ If they are not, adjust the chain slack and align the wheel alignment (see Drive Chain Slack Adjustment).

#### NOTE

- Wheel alignment can be also checked using the straightedge or string method.

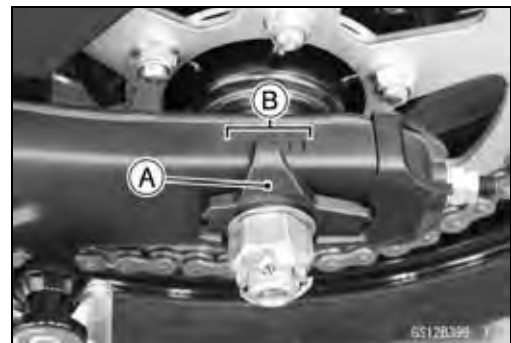

#### **⚠ WARNING**


**Misalignment of the wheel will result in abnormal wear and may result in an unsafe riding condition. Be sure the wheel is properly aligned.**

- Install the rubber cap.

Periodic Maintenance Procedures

**Drive Chain Wear Inspection**

- Remove the mud guard and chain cover (see Mud Guard Removal in the Frame chapter).
- Rotate the rear wheel to inspect the drive chain for damaged rollers, and loose pins and links.
- ★ If there is any irregularity, replace the drive chain.
- ★ Lubricate the drive chain if it appears dry.
- Stretch the chain taut by hanging a 10 kg (22 lb) weight [A] on the chain.
- Measure the length of 20 links [B] on the straight part [C] of the chain from the pin center of the 1st pin to the pin center of the 21st pin. Since the chain may wear unevenly, take measurements at several places.
- ★ If any measurements exceed the service limit, replace the chain. Also, replace the front and rear sprockets when the drive chain is replaced.

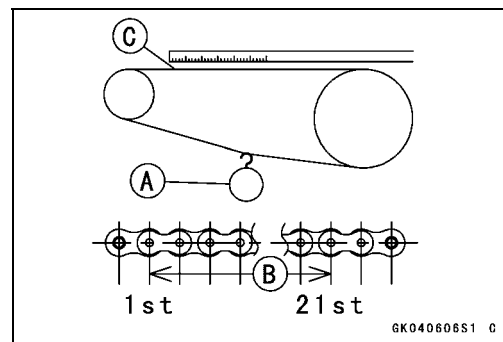

**Drive Chain 20-link Length**

**Standard:** 317.5 ~ 318.2 mm (12.50 ~ 12.53 in.)

**Service Limit:** 319 mm (12.6 in.)

**⚠ WARNING**

A chain that breaks or jumps off the sprockets could snag on the engine sprocket or lock the rear wheel, severely damaging the motorcycle and causing it to go out of control. Inspect the chain for damage and proper adjustment before each ride. If chain wear exceeds the service limit, replace it with the standard chain.

**Standard Chain**

**Make:** DAIDO

**Type:** DID520VE

**Link:** 114 links

- Install the mud guard and chain cover (see Mud Guard Installation in the Frame chapter).

**Chain Guide Wear Inspection**

- Remove the swingarm (see Swingarm Removal in the Suspension chapter).
- Visually inspect the chain guide [A].
- ★ Replace the chain guide if it shows any signs of abnormal wear or damage.



## 2-42 PERIODIC MAINTENANCE




### Periodic Maintenance Procedures

#### Brakes

##### *Brake System Inspection*

##### **Brake Fluid Leak (Brake Hose and Pipe) Inspection**

- Remove the right side cover (see Side Cover Removal in the Frame chapter).
- For ABS equipped models, remove the air cleaner housing (see Air Cleaner Housing Removal in the Fuel System (DFI) chapter).
- Apply the brake lever or pedal and inspect the brake fluid leak from the brake hoses [A], fittings [B] and pipes [C] (ABS equipped models).
- ★ If the brake fluid leaked from any position, inspect or replace the problem part.

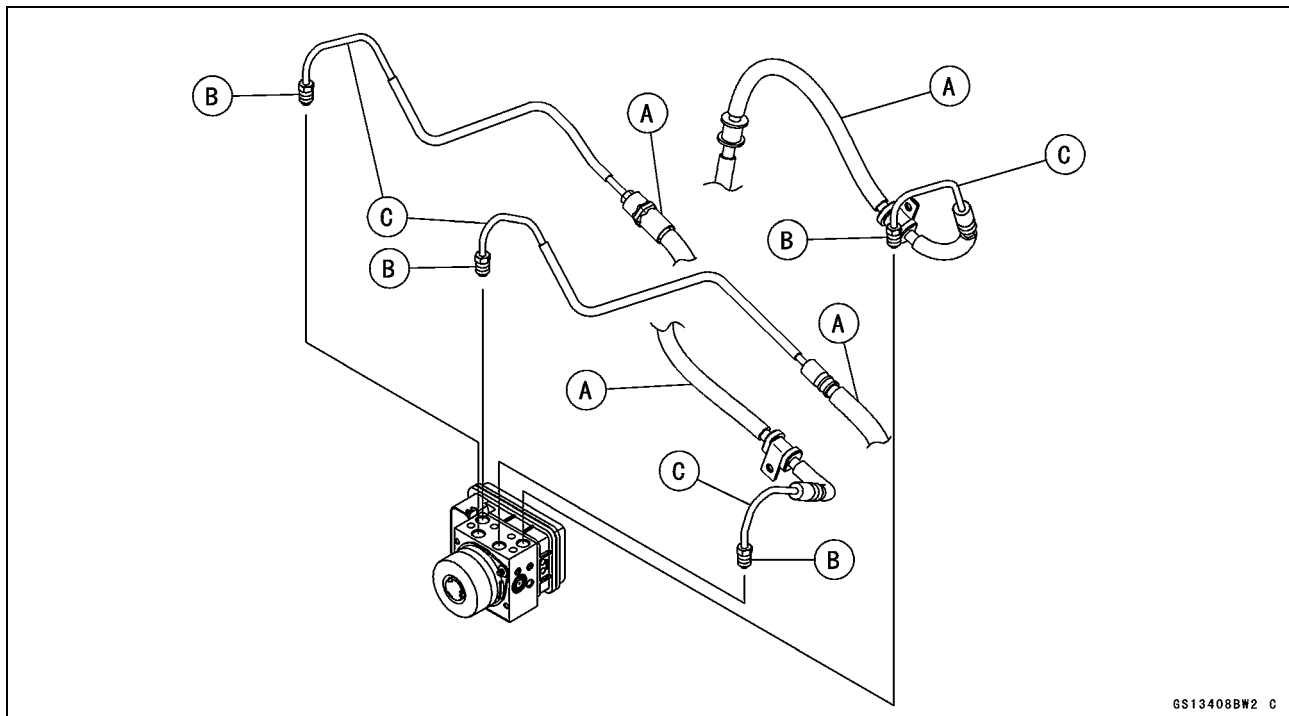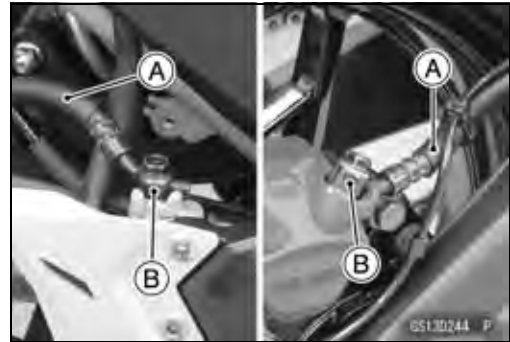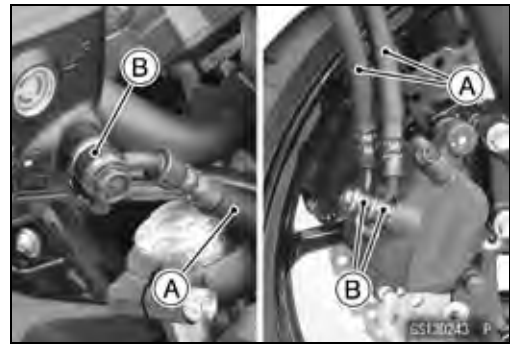

**Periodic Maintenance Procedures**

**Brake Hose and Pipe Damage and Installation Condition Inspection**

- Remove the right side cover (see Side Cover Removal in the Frame chapter).
- For ABS equipped models, remove the air cleaner housing (see Air Cleaner Housing Removal in the Fuel System (DFI) chapter).
- Inspect the brake hoses, pipes and fittings for deterioration, cracks and signs of leakage.
- The high pressure inside the brake line can cause fluid to leak [A] or the hose, pipe (ABS equipped models) to burst if the line is not properly maintained. Bend and twist the rubber hose while examining it.
- ★ Replace the hose and pipe (ABS equipped models) if any crack [B], bulge [C] or leakage is noticed.
- ★ Tighten any brake hose banjo bolts and brake pipe joint nuts.

**Torque - Brake Hose Banjo Bolts: 25 N·m (2.5 kgf·m, 18 ft·lb)**

**Brake Pipe Joint Nuts (ABS Equipped Models): 18 N·m (1.8 kgf·m, 13 ft·lb)**

- Inspect the brake hose and pipe routing.
- ★ If any brake hose and pipe routing is incorrect, run the brake hose and pipe according to Cable, Wire, and Hose Routing section in the Appendix chapter.

**Brake Operation Inspection**

- Inspect the operation of the front and rear brake by running the vehicle on the dry road.
- ★ If the brake operation is insufficiency, inspect the brake system.



<p><b>⚠ WARNING</b></p> <p><b>When test riding the vehicle, be aware of surrounding traffic for your safety.</b></p>
--

**Brake Fluid Level Inspection**

- Check that the brake fluid level in the front brake fluid reservoir [A] is above the lower level line [B].

**NOTE**

- Hold the reservoir horizontal by turning the handlebars when checking brake fluid level.

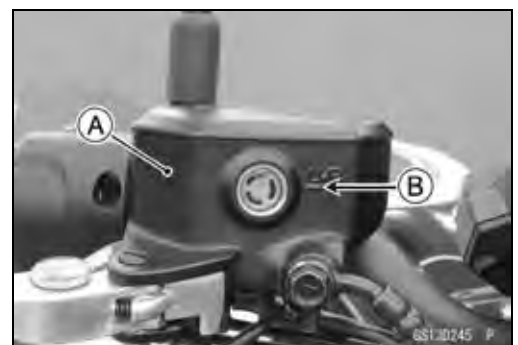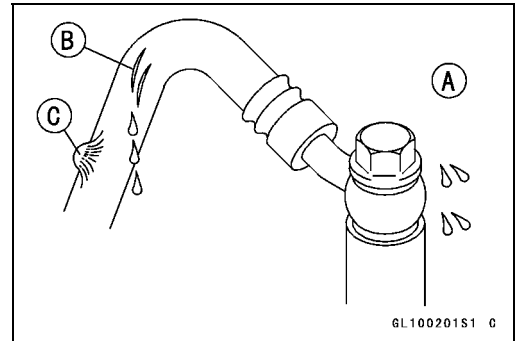


## 2-44 PERIODIC MAINTENANCE

### Periodic Maintenance Procedures

- ★ If the fluid level is lower than the lower level line, remove the reservoir cap and fill the reservoir to the upper level line [A].
- Tighten:
  - Torque - Front Brake Fluid Reservoir Cap Screws: 1.5 N·m (0.15 kgf·m, 13 in·lb)**



- Check that the brake fluid level in the rear brake fluid reservoir [A] is above the lower level line [B].
- ★ If the fluid level is lower than the lower level line, remove the right side cover (see Side Cover Removal in the Frame chapter) fill the reservoir to the upper level line [C].

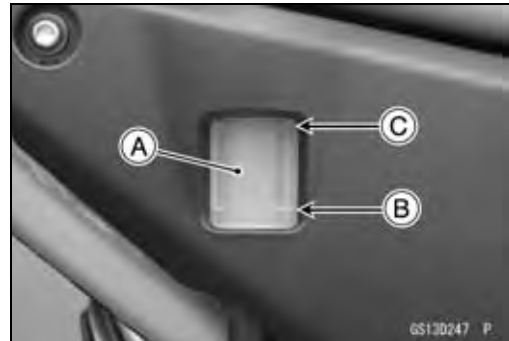


#### **⚠ WARNING**

Mixing brands and types of brake fluid can reduce the brake system's effectiveness and cause an accident resulting in injury or death. Do not mix two brands of brake fluid. Change the brake fluid in the brake line completely if the brake fluid must be re-filled but the type and brand of the brake fluid that is already in the reservoir are unidentified.

#### **Recommended Disc Brake Fluid** Grade: DOT4

- Follow the procedure below to install the rear brake fluid reservoir cap correctly.
- First, tighten the brake fluid reservoir cap [A] clockwise [B] by hand until slight resistance is felt indicating that the cap is seated on the reservoir body [C], then tighten the cap an additional 1/6 turn [D] while holding the brake fluid reservoir body.
- Install the stopper and tighten the screw.

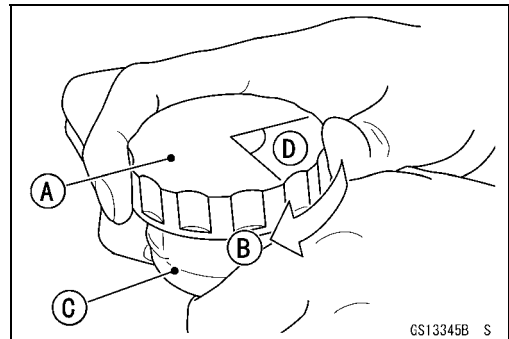


#### **Brake Fluid Change**

##### **NOTE**


- The procedure to change the front brake fluid is as follows. Changing the rear brake fluid is the same as for the front brake.

Periodic Maintenance Procedures

- Level the brake fluid reservoir.
- Remove the reservoir cap, diaphragm plate and diaphragm.
- Remove the rubber cap [A] from the bleed valve on the caliper.
- Attach a clear plastic hose [B] to the bleed valve, and run the other end of the hose into a container.
- Fill the reservoir with fresh specified brake fluid.

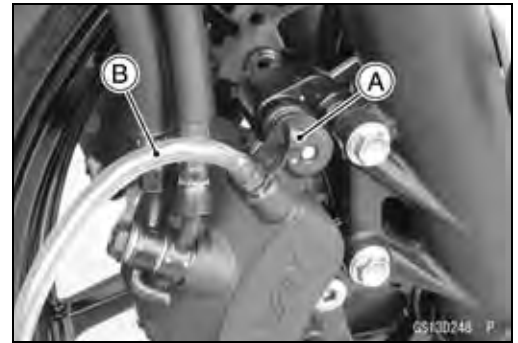

- Change the brake fluid.
- Repeat this operation until fresh brake fluid comes out from the plastic hose or the color of the fluid changes.
  1. Open the bleed valve [A].
  2. Apply the brake and hold it [B].
  3. Close the bleed valve [C].
  4. Release the brake [D].

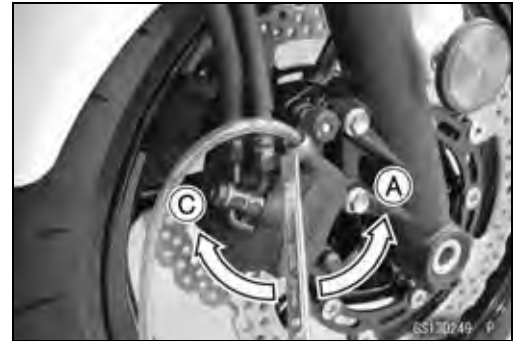

**NOTE**


○ *The fluid level must be checked often during the changing operation and replenished with fresh brake fluid. If the fluid in the reservoir runs out any time during the changing operation, the brakes will need to be bled since air will have entered the brake line.*

- Remove the clear plastic hose.
- Install the diaphragm, diaphragm plate and reservoir cap.
- Tighten:

**Torque - Front Brake Fluid Reservoir Cap Screws: 1.5 N·m (0.15 kgf·m, 13 in·lb)**



- Follow the procedure below to install the rear brake fluid reservoir cap correctly.
- First, tighten the rear brake fluid reservoir cap [A] clockwise [B] by hand until slight resistance is felt indicating that the cap is seated on the reservoir body [C], then tighten the cap an additional 1/6 turn [D] while holding the brake fluid reservoir body.

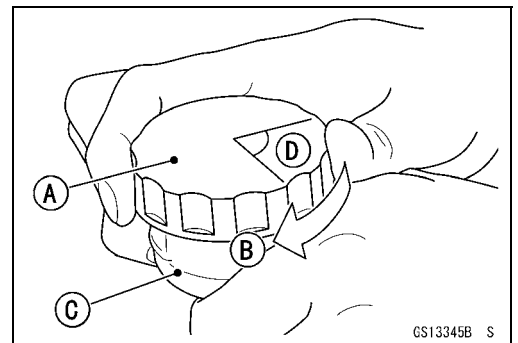

- Tighten the bleed valve, and install the rubber cap.

**Torque - Bleed Valves: 7.8 N·m (0.80 kgf·m, 69 in·lb)**

- After changing the fluid, check the brake for good braking power, no brake drag, and no fluid leakage.

★ If necessary, bleed the air from the lines.

## 2-46 PERIODIC MAINTENANCE






### Periodic Maintenance Procedures

#### Brake Hose and Pipe Replacement

##### NOTICE

Brake fluid quickly damages painted plastic surfaces; any spilled fluid should be completely washed away immediately.

- Remove:
  - Right Side Cover (see Side Cover Removal in the Frame chapter)
  - Mud Guard (see Mud Guard Removal in the Frame chapter)
- Release the brake hoses from the clamps [A].
- Remove the brake hose banjo bolts [B].
- When removing the brake hoses [C], note the following.
  - Take care not to spill the brake fluid on the painted or plastic parts.
  - Temporarily secure the end of the brake hose to some high place to keep fluid loss to a minimum.
  - Immediately wash away any brake fluid that spills.
- When installing the brake hoses, note the following.
  - Avoid sharp bending, kinking, flattening or twisting, and run the hoses according to Cable, Wire, and Hose Routing section in the Appendix chapter.
  - There are washers on each side of the brake hose fitting. Replace them with new ones.
  - Tighten:
    - Torque - Brake Hose Banjo Bolts: 25 N·m (2.5 kgf·m, 18 ft·lb)**
- Fill the brake line after installing the brake hose (see Brake Fluid Change).

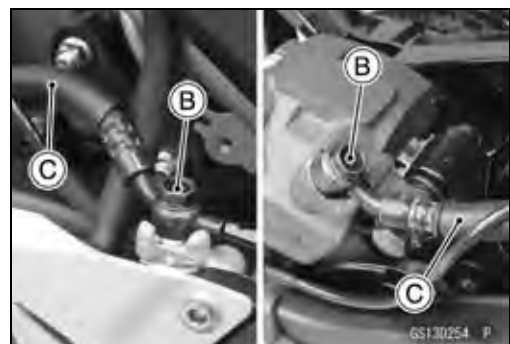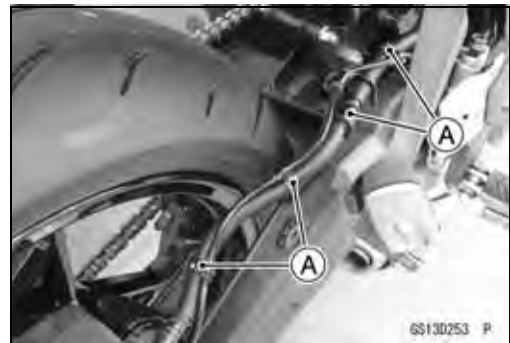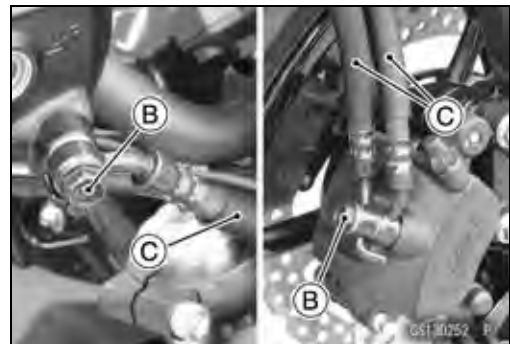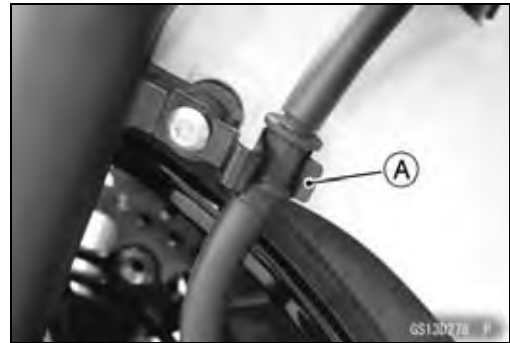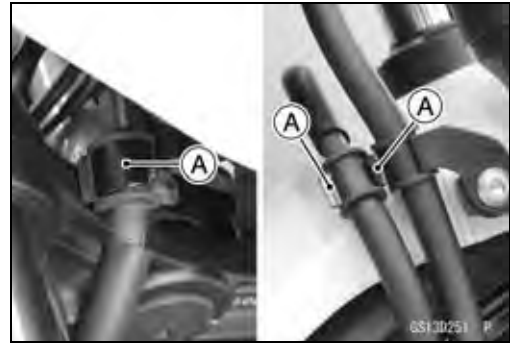



---

## Periodic Maintenance Procedures

---

- For ABS equipped models; note the following.

### NOTE

○ *When removing the brake pipes and hoses on the hydraulic unit, remove them with the flare nut wrench according to each assembly of the exploded view in the Brakes chapter.*

- Remove:
  - Right Side Cover (see Side Cover Removal in the Frame chapter)
  - Mud Guard (see Mud Guard Removal in the Frame chapter)
  - Air Cleaner Housing (see Air Cleaner Housing Removal in the Fuel System (DFI) chapter)
  - Brake Pipe Joint Nuts [A]
  - Brake Hose Banjo Bolts [B]
  - Bolts
  - Brackets
  - Dampers
  - Clamps
- There are washers on each side of the brake hose and pipe fitting. Replace them with new ones when installing.
- Before installing the brake pipe, check to see that there is no damage on the threads of the brake pipe joint nut.
- ★ If there is any damage, replace the damaged parts with new ones.


### NOTE

○ *Tighten the brake pipe joint nut at both ends of the brake pipe temporarily and then tighten them to the specified torque.*


- Install the brake pipes and brake hoses to the specified angle (see Cable, Wire, and Hose Routing section in the Appendix chapter).
- Tighten the brake pipe joint nuts with the flare nut wrench.
- Tighten:
  - Torque - Brake Hose Banjo Bolts: 25 N·m (2.5 kgf·m, 18 ft·lb)**
  - Brake Pipe Joint Nuts: 18 N·m (1.8 kgf·m, 13 ft·lb)**
- Fill the brake line after installing the brake hose and pipe (see Brake Fluid Change).

## 2-48 PERIODIC MAINTENANCE

### Periodic Maintenance Procedures

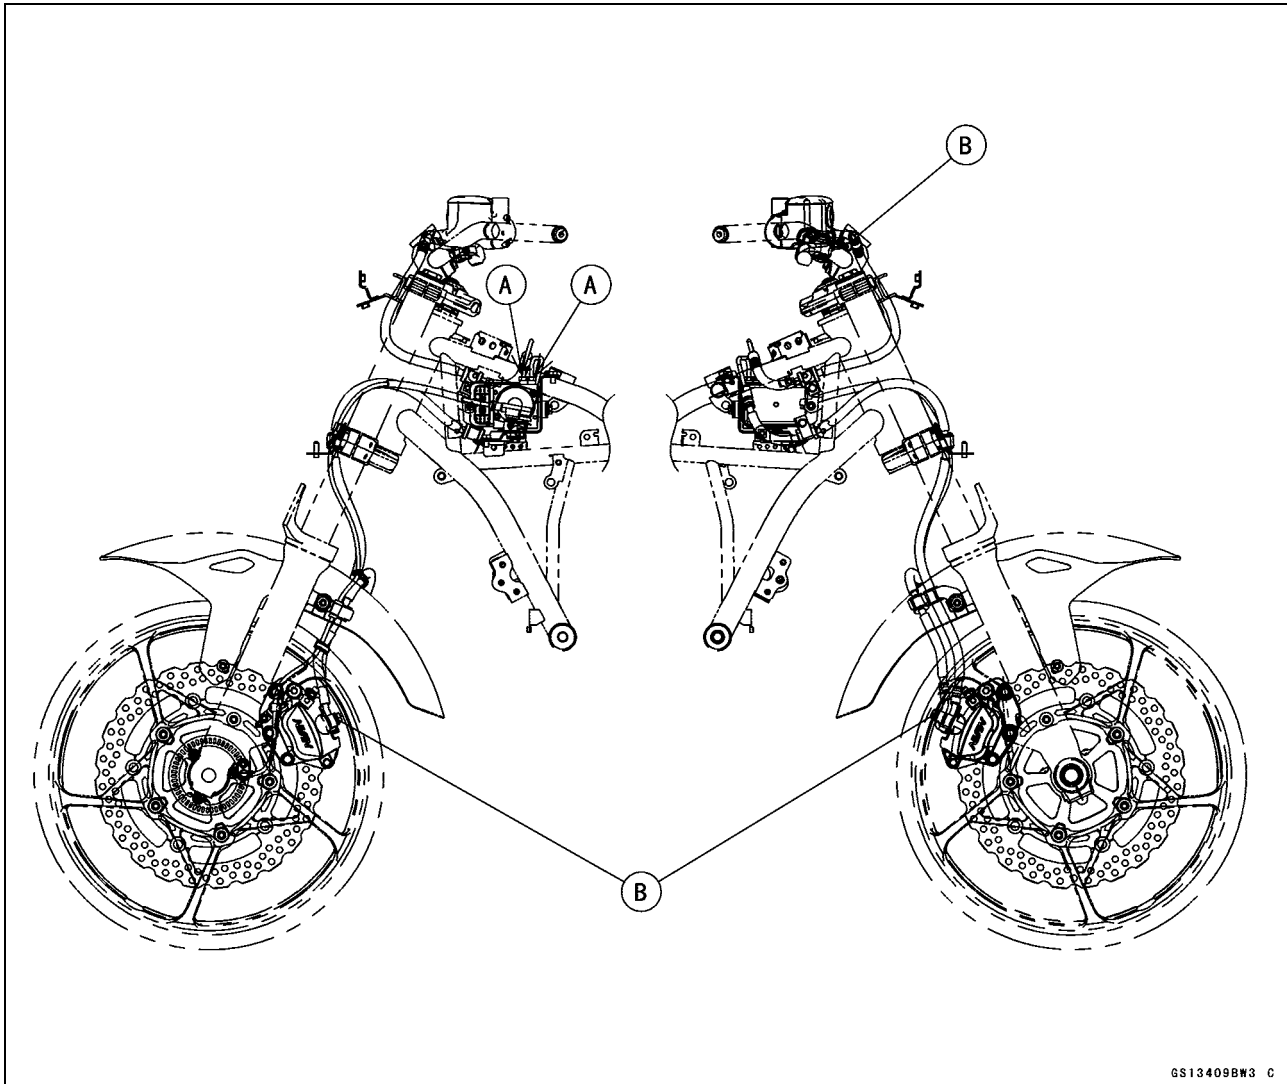

Periodic Maintenance Procedures

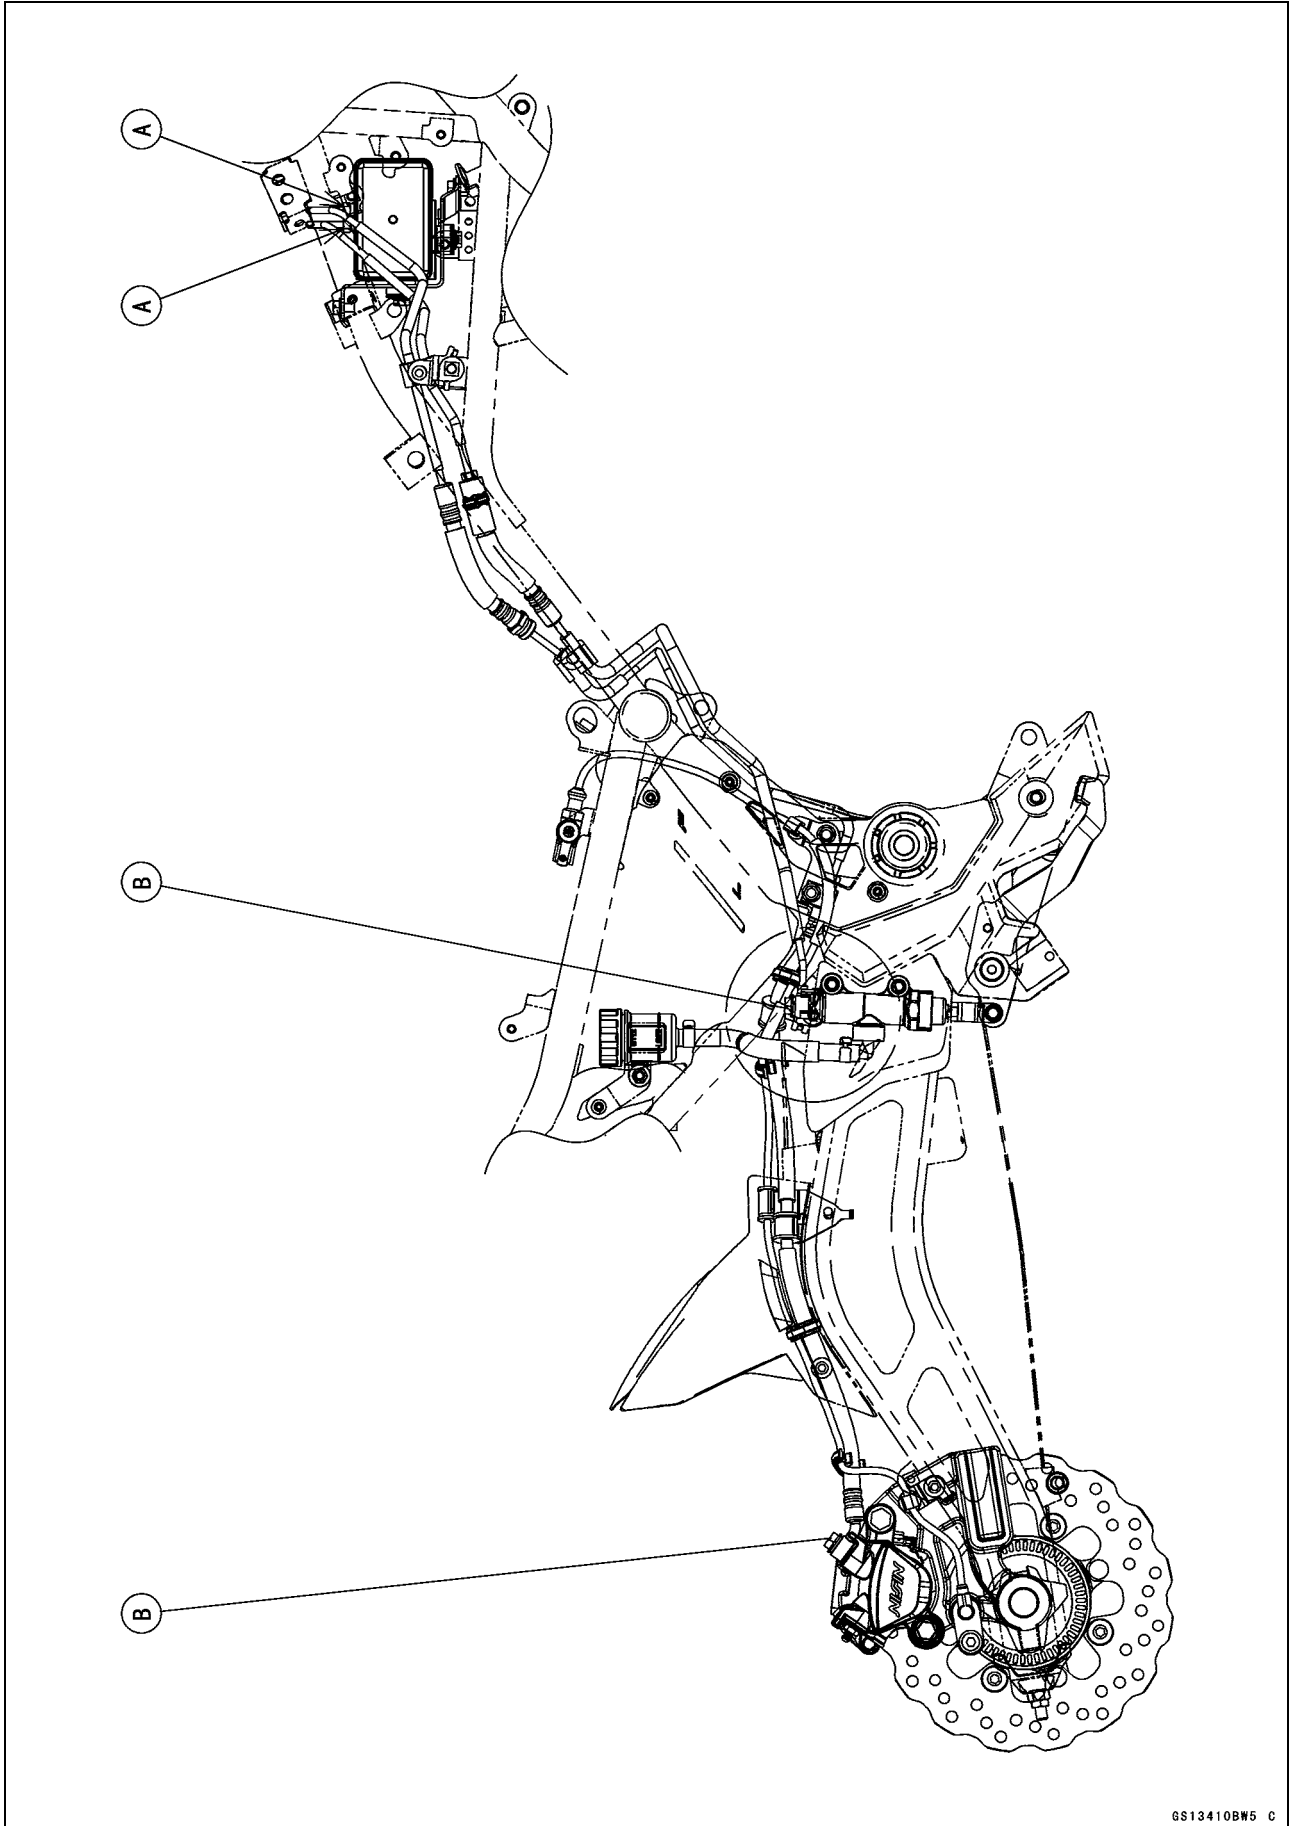

## 2-50 PERIODIC MAINTENANCE

### Periodic Maintenance Procedures

#### Master Cylinder Rubber Parts Replacement

##### Front Master Cylinder Disassembly

- Remove the front master cylinder (see Front Master Cylinder Removal in the Brakes chapter).
- Remove:
  - Front Brake Reservoir Cap Screws [A]
  - Reservoir Cap [B]
  - Diaphragm Plate [C]
  - Diaphragm [D]
- Unscrew the locknut [E] and pivot bolt [F], and remove the brake lever.
- Remove the dust cover [G] and circlip [H].
- **Special Tool - Inside Circlip Pliers: 57001-143**
- Pull out the piston assembly [I].

#### NOTICE

Do not remove the secondary cup from the piston since removal will damage it.

- Replace:
  - Diaphragm [D]
  - Dust Cover [G]
  - Circlip [H]
  - Piston Assembly [I]



##### Rear Master Cylinder Disassembly

- Remove:
  - Rear Master Cylinder (see Rear Master Cylinder Removal in the Brakes chapter)
- Remove the circlip [A], connector [B] and O-ring [C].
- **Special Tool - Inside Circlip Pliers: 57001-143**
- Slide the dust cover [D] out of place, and remove the circlip [E].
- Pull out the push rod assembly [F].
- Remove the piston assembly [G].

#### NOTICE

Do not remove the secondary cup from the piston since removal will damage it.

- Replace:
  - Circlip [A]
  - O-ring [C]
  - Circlip [E]
  - Push Rod Assembly [F]
  - Piston Assembly [G]
  - Diaphragm [H]

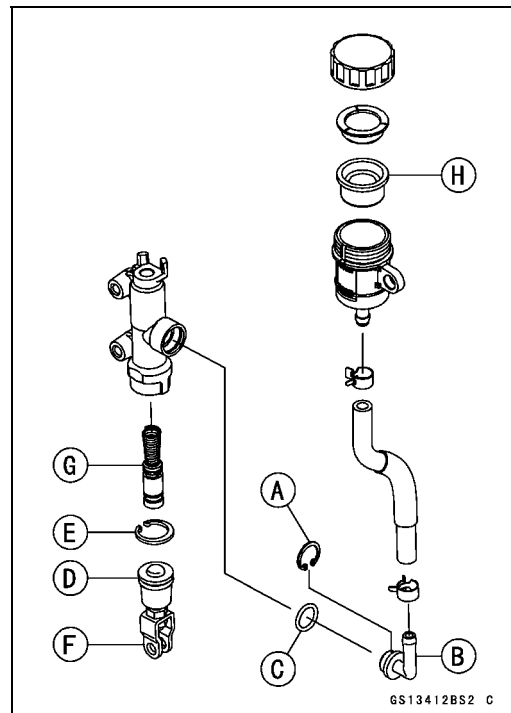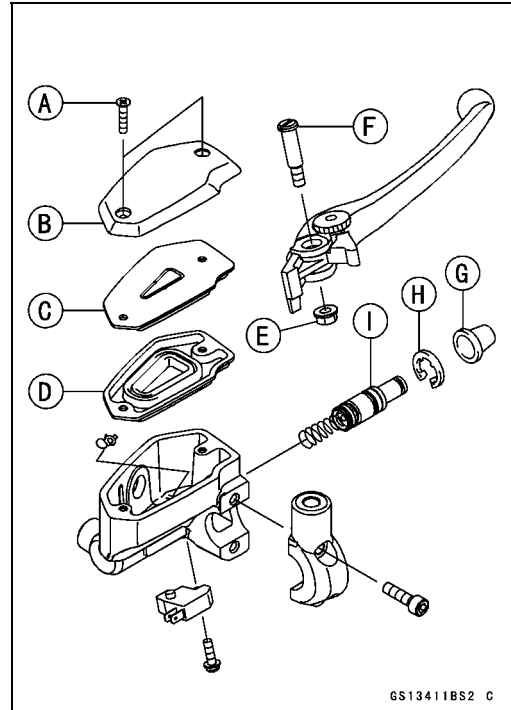

**Periodic Maintenance Procedures**

**Master Cylinder Assembly**

- Before assembly, clean all parts including the master cylinder with brake fluid or alcohol.

**NOTICE**

Except for the disc pads and disc, use only disc brake fluid, isopropyl alcohol, or ethyl alcohol for cleaning brake parts. Do not use any other fluid for cleaning these parts. Gasoline, engine oil, or any other petroleum distillate will cause deterioration of the rubber parts. Oil spilled on any part will be difficult to wash off completely, and will eventually deteriorate the rubber used in the disc brake.

- Apply brake fluid to the new parts and to the inner wall of the cylinder.
- Take care not to scratch the piston or the inner wall of the cylinder.
- Apply silicone grease to the followings.
  - Front: Brake Lever Pivot Bolt
  - Rear: Dust Cover of Push Rod Assembly
- For the front master cylinder, tighten the brake lever pivot bolt and the locknut.

**Torque - Brake Lever Pivot Bolt: 1.0 N·m (0.10 kgf·m, 8.9 in·lb)**

**Brake Lever Pivot Bolt Locknut: 5.9 N·m (0.60 kgf·m, 52 in·lb)**

**Caliper Rubber Parts Replacement**

**Front Caliper Disassembly**


- Remove:
  - Front Caliper (see Front Caliper Removal in the Brakes chapter)
  - Brake Pads (see Front Brake Pad Removal in the Brakes chapter)
  - Front Caliper Holder [A]
  - Pad Spring [B]

- Using compressed air, remove the pistons.
  - Cover the piston area with a clean, thick cloth [A].
  - Blow compressed air [B] into the hole for the banjo bolt to remove the piston.

**⚠ WARNING**

The piston in the brake caliper can crush hands and fingers. Never place your hand or fingers in front of the piston.

- Pull out the piston by hand.

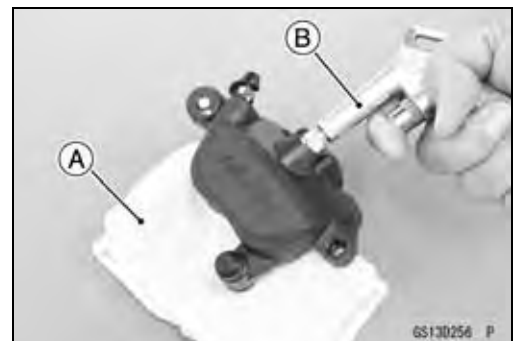


## 2-52 PERIODIC MAINTENANCE


### Periodic Maintenance Procedures

- When compressed air is not used, using the brake caliper piston pliers [A] remove the pistons [B].

**Special Tool - Brake Caliper Piston Pliers ( $\phi 16 \sim \phi 26$ ):**  
57001-1861

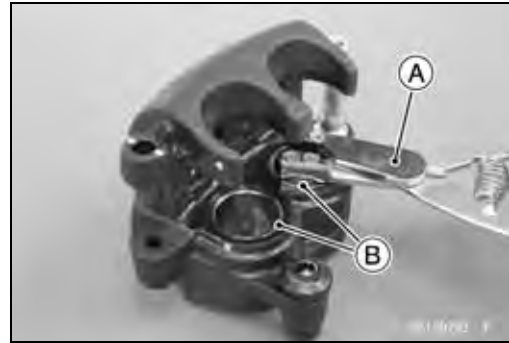

- Remove the dust seals [A] and fluid seals [B].
- Remove the bleed valve [C] and rubber cap [D].

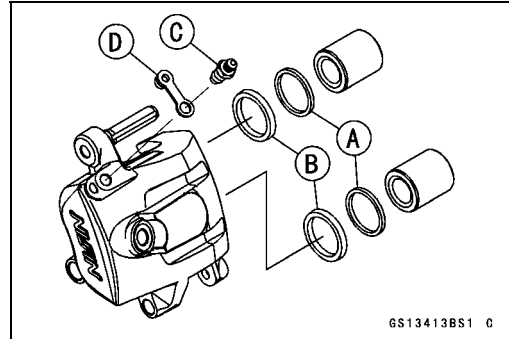

### Front Caliper Assembly

- Clean the caliper parts except for the pads.


#### **NOTICE**

**For cleaning the parts, use only disc brake fluid, isopropyl alcohol, or ethyl alcohol.**

- Install the bleed valve and rubber cap.

**Torque - Bleed Valve: 7.8 N·m (0.80 kgf·m, 69 in·lb)**

- Replace the fluid seals [A] with new ones.
  - Apply silicone grease to the fluid seals, and install them into the cylinders by hand.
- Replace the dust seals [B] with new ones if they are damaged.
  - Apply silicone grease to the dust seals, and install them into the cylinders by hand.

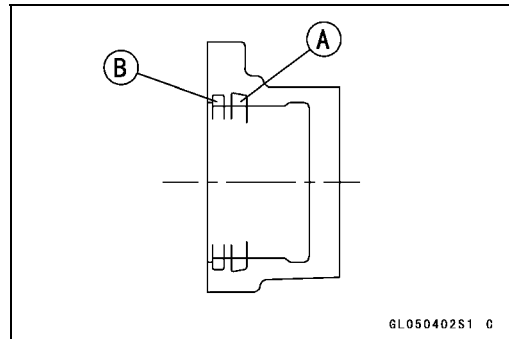

- Apply brake fluid to the outside of the pistons, and push them into each cylinder by hand.
- Check the shaft rubber friction boot [A] and the dust cover [B] replace them with new ones if they are damaged.
- Apply a silicone grease to the caliper holder shafts [C] and the holes [D].




**Periodic Maintenance Procedures**

- Install the pad spring [A].
- Install the removed parts (see appropriate chapters).
- Wipe up any spilled brake fluid on the caliper with wet cloth.



**Rear Caliper Disassembly**


- Remove:
  - Rear Caliper (see Rear Caliper Removal in the Brakes chapter)
  - Brake Pad (see Rear Brake Pad Removal in the Brakes chapter)
- Remove:
  - Pad Spring [A]
  - Sleeve [B]
  - Friction Boot [C]

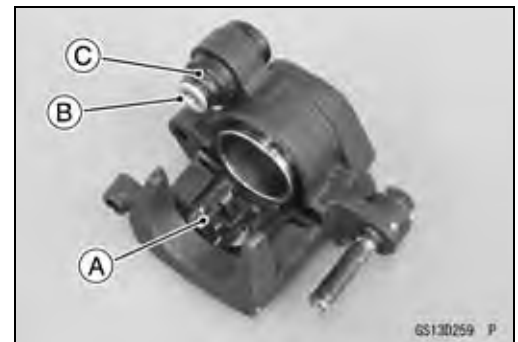


- Using compressed air, remove the piston.
  - Cover the caliper opening with a clean heavy cloth [A].
  - Remove the piston by lightly applying compressed air [B] to where the brake line fits into the caliper.

**⚠ WARNING**

**The piston in the brake caliper can crush hands and fingers. Never place your hand or fingers in front of the piston.**

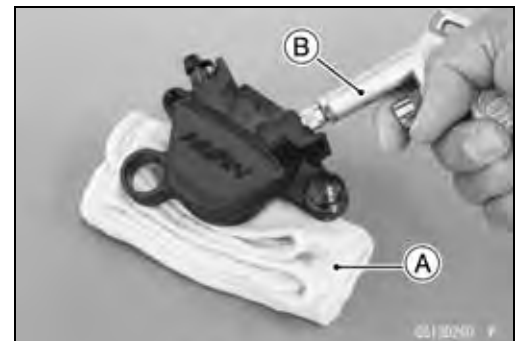

- When compressed air is not used, using the brake caliper piston pliers [A] remove the piston [B].
- Special Tool - Brake Caliper Piston Pliers ( $\phi 26 \sim \phi 36$ ): 57001-1862**

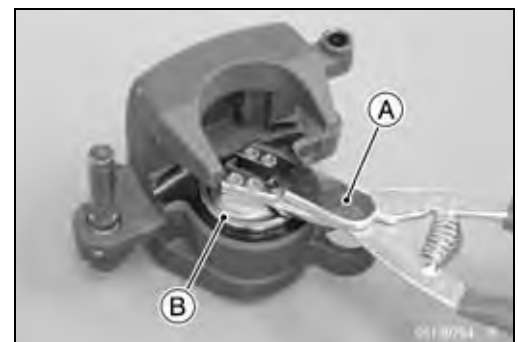

- Remove the dust seal and fluid seal.
- Remove the bleed valve and rubber cap.

## 2-54 PERIODIC MAINTENANCE

### Periodic Maintenance Procedures




#### Rear Caliper Assembly

- Clean the caliper parts except for the pads.

#### NOTICE

**For cleaning the parts, use only disc brake fluid, isopropyl alcohol, or ethyl alcohol.**

- Install the bleed valve and rubber cap.  
**Torque - Bleed Valve: 7.8 N·m (0.80 kgf·m, 69 in·lb)**
- Replace the fluid seal [A] with a new one.
  - Apply silicone grease to the fluid seal, and install it into the cylinder by hand.
- Replace the dust seal [B] with a new one.
  - Apply silicone grease to the dust seal, and install it into the cylinder by hand.
- Replace the friction boot [A] with a new one and install it.
- Install the sleeve [B].
  - Apply a silicone grease to the sleeve.
- Apply brake fluid to the outside of the piston [A], and push it into the cylinder by hand.
- Install the pad spring [B] in the caliper as shown.
- Apply silicone grease to the caliper holder shaft [C].
- Install the removed parts (see appropriate chapters).
- Wipe up any spilled brake fluid on the caliper with wet cloth.

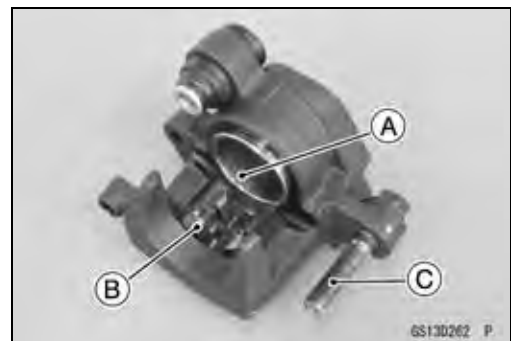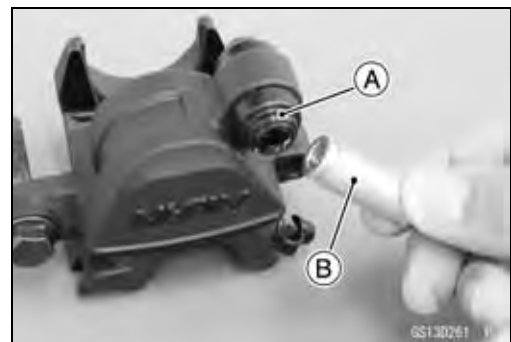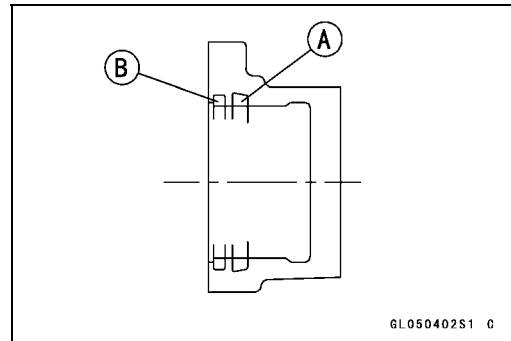



**Periodic Maintenance Procedures**

**Brake Pad Wear Inspection**



- Remove the brake pads (see Front/Rear Brake Pad Removal in the Brakes chapter).
- Check the lining thickness [A] of the pads in each caliper.
- ★ If the lining thickness of either pad is less than the service limit [B], replace both pads in the caliper as a set.

Front Brake Pad [C]  
Rear Brake Pad [D]

**Pad Lining Thickness**

**Standard:**

Front	4 mm (0.16 in.)
Rear	5 mm (0.20 in.)
<b>Service Limit:</b>	<b>1 mm (0.04 in.)</b>

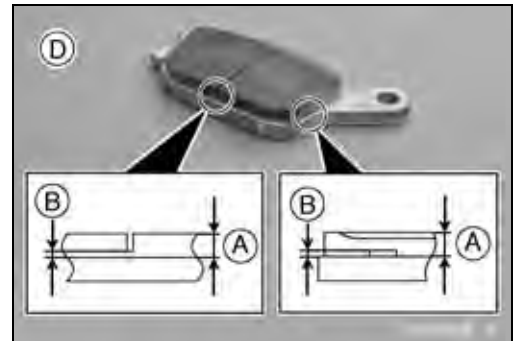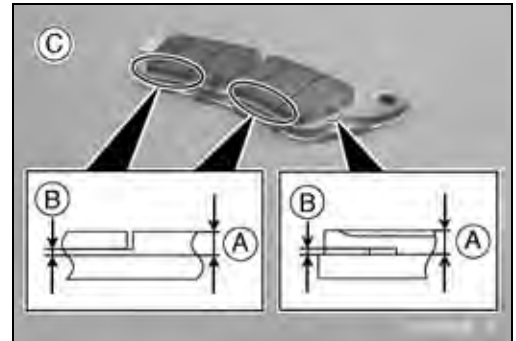


**Brake Light Switch Operation Inspection**

- Turn the ignition switch on.
- The brake light (LED) [A] should go on when the brake lever is applied or after the brake pedal is depressed about 10 mm (0.39 in.).



- ★ If it does not, adjust the brake light switch.
  - While holding the switch body, turn the adjusting nut to adjust the switch.
- Switch Body [A]  
Adjusting Nut [B]  
Light sooner as the body rises [C]  
Light later as the body lowers [D]

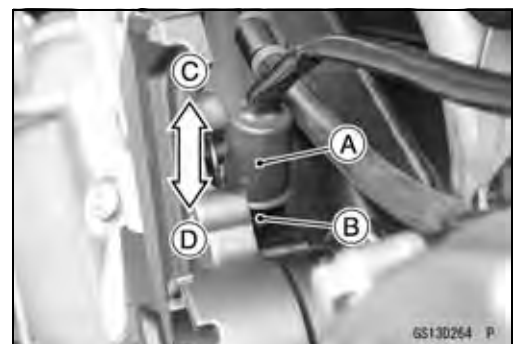

**NOTICE**

**To avoid damaging the electrical connections inside the switch, be sure that the switch body does not turn during adjustment.**

## 2-56 PERIODIC MAINTENANCE

### Periodic Maintenance Procedures

- ★ If it does not go on, inspect or replace the following parts.
  - Battery (see Charging Condition Inspection in the Electrical System chapter)
  - Brake Light (LED) (see Tail/Brake Light (LED) Removal/Installation in the Electrical System chapter)
  - Main Fuse 30 A and Brake Light/Horn Fuse 10 A (see Fuse Inspection in the Electrical System chapter)
  - Front Brake Light Switch [A] (see Switch Inspection in the Electrical System chapter)
  - Rear Brake Light Switch (see Switch Inspection in the Electrical System chapter)
  - Harness (see Wiring Inspection in the Electrical System chapter)




### Suspension

#### Suspension System Inspection


##### Front Forks/Rear Shock Absorber Operation Inspection

- Pump the forks down and up [A] 4 or 5 times, and inspect the smooth stroke.
  - ★ If the forks do not smoothly or noise is found, inspect the fork oil level or fork clamps (see Front Fork Oil Change in the Suspension chapter).
- 
- Pump the seat down and up [A] 4 or 5 times, and inspect the smooth stroke.
  - ★ If the shock absorber does not smoothly stroke or noise is found, inspect the oil leak (see Rear Shock Absorber Oil Leak Inspection).

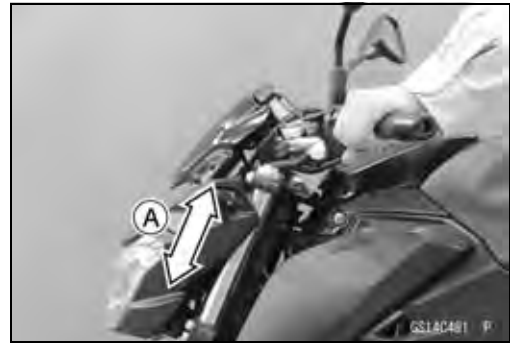

##### Front Fork Oil Leak Inspection

- Visually inspect the front forks [A] for oil leakage.
- ★ Replace any defective parts, if necessary.

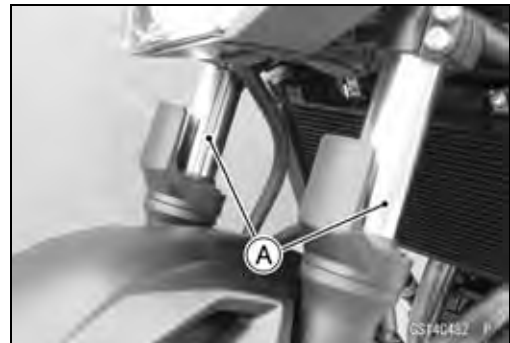

## Periodic Maintenance Procedures

### Rear Shock Absorber Oil Leak Inspection

- Visually inspect the rear shock absorber [A] for oil leakage.
- ★ If the oil leakage is found on it, replace the rear shock absorber with a new one.



### Rocker Arm Operation Inspection

- Pump the seat down and up 4 or 5 times, and inspect the smooth stroke.
- ★ If the rocker arms [A] do not smoothly stroke or noise is found, inspect the fasteners and bearings (see Rocker Arm/Tie-Rod Bearing, Sleeve Inspection in the Suspension chapter).



### Tie-Rod Operation Inspection

- Pump the seat down and up 4 or 5 times, and inspect the smooth stroke.
- ★ If the tie-rod [A] does not smoothly stroke or noise is found, inspect the fasteners and tie-rod bearings (see Rocker Arm/Tie-Rod Bearing, Sleeve Inspection in the Suspension chapter).



### Swingarm Pivot Lubrication

- Remove the swingarm (see Swingarm Removal in the Suspension chapter).
- Remove the sleeve [A].




- Using a high flash-point solvent, clean the old grease out of the left needle bearing [A].
- Apply plenty of grease to the inner surface of the left needle bearing.

#### NOTE

○ Since the right needle bearing [B] is packed with grease and sealed, lubrication is not required.

- Apply thin coat of grease to the lips of the grease seals [C].
- Install the swingarm (see Swingarm Installation in the Suspension chapter).

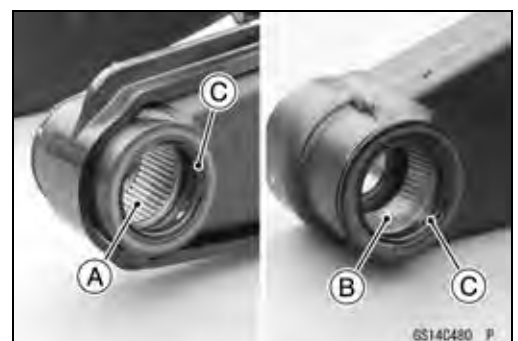

## 2-58 PERIODIC MAINTENANCE

### Periodic Maintenance Procedures

#### Steering

##### Steering Play Inspection


- Raise the front wheel off the ground with a suitable stand.
- With the front wheel pointing straight ahead, alternately tap each end of the handlebars. The front wheel should swing fully left and right from the force of gravity until the fork hits the stop.
- ★ If the wheel binds or catches before the stop, the steering is too tight.
- Feel for steering looseness by pushing and pulling [A] the forks.
- ★ If you feel looseness, the steering is too loose.

##### NOTE

- The cables and wiring will have some effect on the motion of the fork which must be taken into account.
- Be sure the leads and cables are properly routed.
- The bearings must be in good condition and properly lubricated in order for any test to be valid.

##### Steering Play Adjustment

- Remove:
  - Meter Unit (see Meter Unit Removal in the Electrical System chapter)
  - Headlight Unit (see Headlight Unit Removal in the Electrical System chapter)
  - Ignition Switch Cover (see Ignition Switch Cover Removal in the Frame chapter)
- Remove:
  - Upper Harness Bracket Bolts [A]
- Raise the front wheel off the ground with a suitable stand.
- Remove:
  - Plug
  - Steering Stem Head Bolt [A] and Washer
- Loosen:
  - Upper Front Fork Clamp Bolts [B]
- Remove:
  - Steering Stem Head [C]

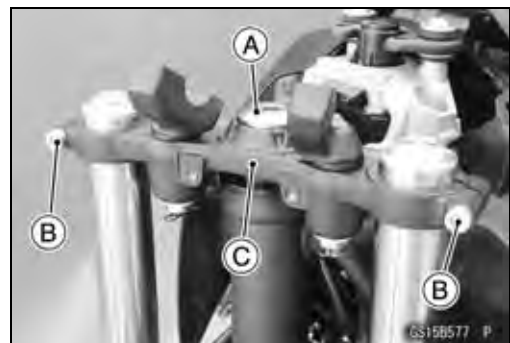

**Periodic Maintenance Procedures**

- Straighten the claws [A] of the washer.
- Remove:
  - Steering Stem Locknut [B]
  - Claw Washer



- Adjust the steering using the steering stem nut wrench [A].

**Special Tool - Steering Stem Nut Wrench: 57001-1100**

- ★ If the steering is too tight, loosen the stem nut [B] a fraction of a turn.
- ★ If the steering is too loose, tighten the stem nut a fraction of a turn.



**NOTE**

○ Turn the stem nut 1/8 turn at time maximum.


- Install the claw washer [A] so that its bent side [B] faces upward, and engage the bent claws with the grooves of stem locknut [C].
- Hand tighten the stem locknut until it touches the claw washer.
- Hand tighten the stem locknut clockwise until the claws are aligned with the second groove of stem nut [D], and bend the 2 claws downward [E].
- Install the steering stem head.
- Install the washer, and temporary tighten the stem head bolt.

**NOTE**

○ Tighten the upper front fork clamp bolts first, next the stem head bolt.

**Torque - Upper Front Fork Clamp Bolts: 20 N·m (2.0 kgf·m, 15 ft·lb)**

**Steering Stem Head Bolt: 108 N·m (11.0 kgf·m, 79.7 ft·lb)**

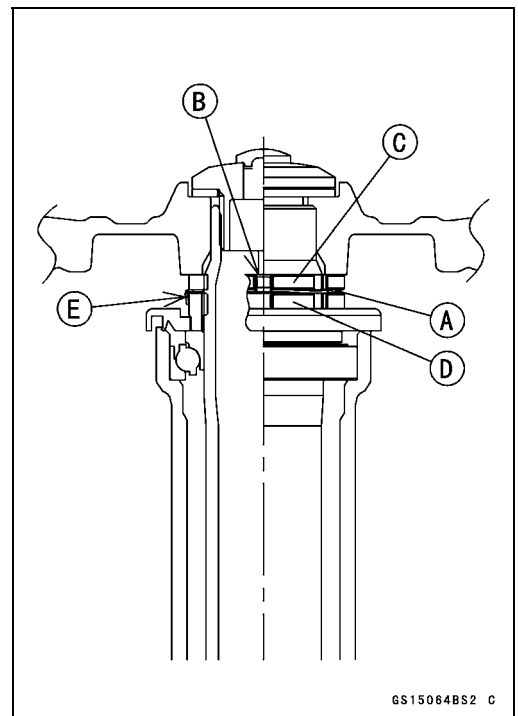

**⚠ WARNING**

**If the handlebars do not turn to the steering stop, they may cause an accident resulting in injury or death. Be sure the cables, harnesses and hoses are routed properly and do not interfere with handlebar movement (see Cable, Wire, and Hose Routing section in the Appendix chapter).**

- Check the steering again.
- ★ If the steering is still too tight or too loose, repeat the adjustment.
- Install the removed parts (see appropriate chapters).

## 2-60 PERIODIC MAINTENANCE

### Periodic Maintenance Procedures

#### ***Steering Stem Bearing Lubrication***

- Remove the steering stem (see Steering Stem, Stem Bearing Removal in the Steering chapter).
- Using a high flash-point solvent, wash the upper and lower ball bearings [A] in the cages, and wipe the upper and lower outer races, which are press-fitted into the frame head pipe, clean off grease and dirt.
- Visually check the outer races and the ball bearings.
- ★ Replace the bearing assemblies if they show wear or damage.
- Pack the upper and lower ball bearings in the cages with grease, and apply a light coat of grease to the upper and lower outer races.
- Install the steering stem (see Steering Stem, Stem Bearing Installation in the Steering chapter).
- Adjust the steering (see Steering Play Adjustment).



Periodic Maintenance Procedures

Electrical System

Lights and Switches Operation Inspection

First Step

- Set the gear position in the neutral position.
- Turn the ignition switch on.
- The following lights should go on according to below table.

City Lights [A]	Goes on
Taillight (LED) [B]	Goes on
License Plate Light [C]	Goes on
Meter Panel Illumination (LED) [D]	Goes on
Meter Panel LCD [E]	Goes on
Green Neutral Indicator Light (LED) [F]	Goes on
Oil Pressure Warning Indicator [G] and Red Warning Indicator (LED) [H]	Goes on
Yellow Engine Warning Indicator Light (LED) [I]	Goes on
Yellow ABS Indicator Light (LED) [J] (ABS Equipped Models)	Goes on

★ If the light does not go on, inspect or replace the following parts.

Battery (see Charging Condition Inspection in the Electrical System chapter)

City Light (see City Light Removal/Installation in the Electrical System chapter)

License Plate Light Bulb (see License Plate Light Bulb Replacement in the Electrical System chapter)

Meter Panel LCD (see Meter Unit Inspection in the Electrical System chapter)

Indicator Lights (LED) (see Meter Unit Inspection in the Electrical System chapter)

Meter Panel Illumination (LED) (see Meter Unit Inspection in the Electrical System chapter)

ECU (see ECU Power Supply Inspection in the Fuel System (DFI) chapter)

Main Fuse 30 A, Meter Fuse 10 A and Brake Light/Horn Fuse 10 A (see Fuse Inspection in the Electrical System chapter)

Ignition Switch (see Switch Inspection in the Electrical System chapter)



Oil Pressure Switch (see Switch Inspection in the Electrical System chapter)

Gear Position Sensor (see Gear Position Sensor Input Voltage Inspection in the Fuel System (DFI) chapter)

Harness (see Wiring Inspection in the Electrical System chapter)

- Turn the ignition switch off.
- The all lights should go off.

★ If the light does not go off, replace the ignition switch.

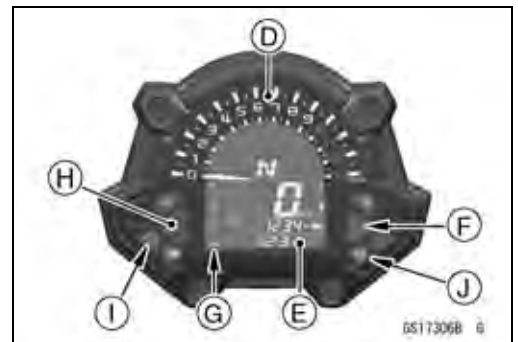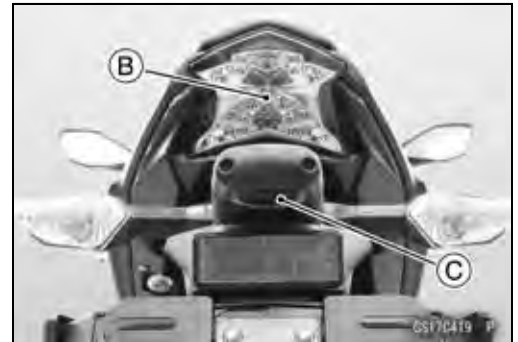

## 2-62 PERIODIC MAINTENANCE

### Periodic Maintenance Procedures

#### Second Step

- Turn the ignition switch to hazard position.
- The all lights should go off.
- ★ If the light goes on, inspect or replace the following item.  
Ignition Switch (see Switch Inspection in the Electrical System chapter)

#### Third Step

- Turn the ignition switch on.
- Turn on the turn signal switch [A] (left or right position).
- The left or right turn signal lights [B] (front and rear) according to the switch position should blink.
- The green turn signal indicator lights (LED) [C] in the meter unit should blink.
- ★ If the each light does not blink, inspect or replace the following parts.

Turn Signal Light Bulb (see Turn Signal Light Bulb Replacement in the Electrical System chapter)

Green Turn Signal Indicator Light (LED) (see Meter Unit Inspection in the Electrical System chapter)

Turn Signal Relay Fuse 10 A (see Fuse Inspection in the Electrical System chapter)

Turn Signal Switch (see Switch Inspection in the Electrical System chapter)

Turn Signal Relay (see Turn Signal Relay Inspection in the Electrical System chapter)

Harness (see Wiring Inspection in the Electrical System chapter)

- Push the turn signal switch.
- The turn signal lights and green turn signal indicator light (LED) should go off.
- ★ If the light does not go off, inspect or replace the following parts.  
Turn Signal Switch (see Switch Inspection in the Electrical System chapter)  
Turn Signal Relay (see Turn Signal Relay Inspection in the Electrical System chapter)

#### Fourth Step

- Set the dimmer switch [A] to low beam position.
- Start the engine.
- The low beam headlight should go on.
- ★ If the low beam headlight does not go on, inspect or replace the following parts.  
Headlight Bulb (see Headlight Bulb Replacement in the Electrical System chapter)  
Headlight Fuse 15 A (see Fuse Inspection in the Electrical System chapter)  
Dimmer Switch (see Switch Inspection in the Electrical System chapter)  
Headlight Relay (see Relay Circuit Inspection in the Electrical System chapter)  
Harness (see Wiring Inspection in the Electrical System chapter)





**Periodic Maintenance Procedures**

- Set the dimmer switch to high beam position.
- The high beam headlights should go on.
- The blue high beam indicator light (LED) [A] should go on.
- ★ If the high beam headlight and/or blue high beam indicator light (LED) does not go on, inspect or replace the following parts.
  - Headlight Bulb (see Headlight Bulb Replacement in the Electrical System chapter)
  - Dimmer Switch (see Switch Inspection in the Electrical System chapter)
- Turn the engine stop switch to stop position.
- The low beam and high beam headlights should stay going on.
- ★ If the headlights and blue high beam indicator light (LED) go off, inspect or replace the headlight relay (see Relay Circuit Inspection in the Electrical System chapter).
- Turn the ignition switch off.
- The headlights and blue high beam indicator light (LED) should go off.



**Headlight Aiming Inspection**


- Inspect the headlight beam for aiming.
- ★ If the headlight beam is off the point, adjust the headlight aiming as following.

**NOTE**

○ The left adjuster [A] and right adjuster [B] can move the direction of the headlight beam to up, down, left and right by turning each adjuster itself as the below table. (In the photo, the headlight unit has been removed for clarity.)

Moving Direction of Headlight Beam [C]  
 Up [D]  
 Down [E]  
 Left [F]  
 Right [G]

- To move the headlight beam leftward, turn the left adjuster clockwise and turn the right adjuster counterclockwise same number as the left adjuster was turned until the beam points straight ahead.
- To move the headlight beam rightward, turn the left adjuster counterclockwise and turn the right adjuster clockwise same number as the left adjuster was turned until the beam points straight ahead.
- To move the headlight beam upward, turn the both adjusters clockwise same number.
- To move the headlight beam downward, turn the both adjusters counterclockwise same number.

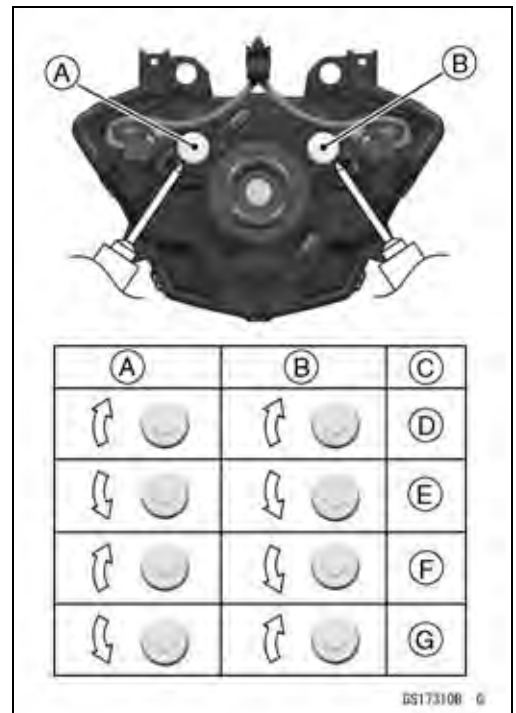

**NOTE**

○ On high beam, the brightest points should be slightly below horizontal with the motorcycle on its wheels and the rider seated. Adjust the headlight to the proper angle according to local regulations.

## 2-64 PERIODIC MAINTENANCE

### Periodic Maintenance Procedures

#### NOTE


○ For US model, the proper angle is 0.4 degrees below horizontal. This is 50 mm (2.0 in.) drop at 7.6 m (25 ft) measured from the center of the headlight with the motorcycle on its wheels and the rider seated.

50 mm (2.0 in.) [A]

Center of Brightest Spot [B]

7.6 m (25 ft) [C]

Height of Headlight Center [D]

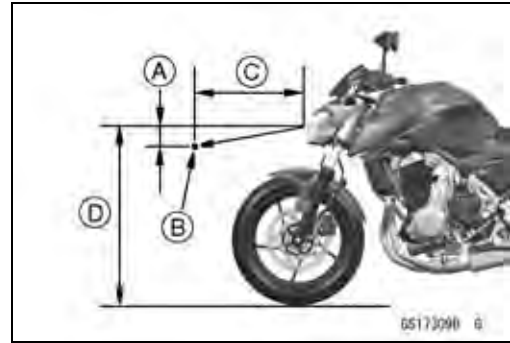

#### Side Stand Switch Operation Inspection

- Raise the rear wheel off the ground with the stand (see Rear Wheel Removal in the Wheels/Tires chapter).
- Inspect the side stand switch [A] operation accordance to below table.

#### Side Stand Switch Operation

Side Stand	Gear Position	Clutch Lever	Engine Start	Engine Run
Up	Neutral	Released	Starts	Continue running
Up	Neutral	Pulled in	Starts	Continue running
Up	In Gear	Released	Does not start	Continue running
Up	In Gear	Pulled in	Starts	Continue running
Down	Neutral	Released	Starts	Continue running
Down	Neutral	Pulled in	Starts	Continue running
Down	In Gear	Released	Does not start	Stops
Down	In Gear	Pulled in	Does not start	Stops




## Periodic Maintenance Procedures

- ★ If the side stand switch operation does not work, inspect or replace the following parts.
  - Battery (see Charging Condition Inspection in the Electrical System chapter)
  - Main Fuse 30 A (see Fuse Inspection in the Electrical System chapter)
  - Ignition Fuse 10 A (see Fuse Inspection in the Electrical System chapter)
  - Ignition Switch (see Switch Inspection in the Electrical System chapter)
  - Side Stand Switch (see Switch Inspection in the Electrical System chapter)
  - Engine Stop Switch (see Switch Inspection in the Electrical System chapter)
  - Starter Button (see Switch Inspection in the Electrical System chapter)
  - Gear Position Sensor (see Gear Position Sensor Input Voltage Inspection in the Fuel System (DFI) chapter)
  - Starter Lockout Switch (see Switch Inspection in the Electrical System chapter)
  - Starter Relay (see Starter Relay Inspection in the Electrical System chapter)
  - Relay Box (see Relay Circuit Inspection in the Electrical System chapter)
  - Starter Circuit Relay (see Relay Circuit Inspection in the Electrical System chapter)
  - Harness (see Wiring Inspection in the Electrical System chapter)
- ★ If the all parts are good condition, replace the ECU (see ECU Removal/Installation in the Fuel System (DFI) chapter).

### Engine Stop Switch Operation Inspection


#### First Step

- Turn the ignition switch on.
- Set the gear position in the neutral position.
- Turn the engine stop switch to stop position [A].
- Push the starter button [B].
- The engine does not start.
- ★ If the engine starts, inspect or replace the engine stop switch (see Switch Inspection in the Electrical System chapter).

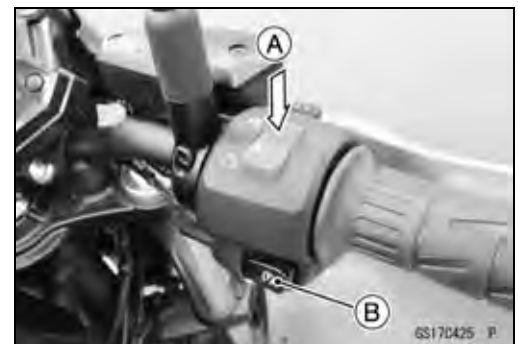

#### Second Step

- Turn the ignition switch on.
- Set the gear position in the neutral position.
- Turn the engine stop switch to run position [A].
- Push the starter button [B] and start the engine.
- Turn the engine stop switch to stop position.
- Immediately the engine should be stop.
- ★ If the engine does not stop, inspect or replace the engine stop switch (see Switch Inspection in the Electrical System chapter).
- ★ If the engine stop switch is good condition, replace the ECU (see ECU Removal/Installation in the Fuel System (DFI) chapter).

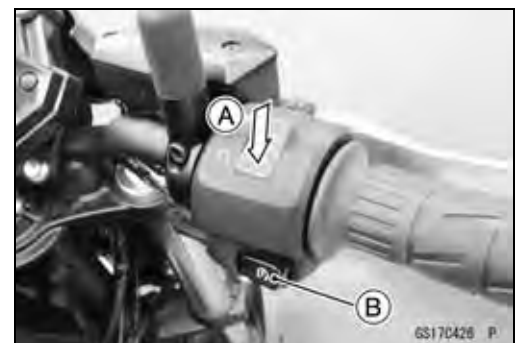

## 2-66 PERIODIC MAINTENANCE

### Periodic Maintenance Procedures

#### Spark Plug Replacement

- Remove the stick coils (see Stick Coil Removal in the Electrical System chapter).
- Remove the spark plugs using the 16 mm (0.63 in.) plug wrench [A] vertically.
- Replace the spark plugs with new ones.

#### Standard Spark Plug

Type: NGK CR9EIA-9

- Insert the spark plug vertically into the spark plug hole with the spark plug installed in the plug wrench [A], and finger-tighten it first.

#### NOTICE

If tightening the spark plug with the wrench inclined, the insulator of the spark plug may break.

- Tighten:  
Torque - Spark Plugs: 15 N·m (1.5 kgf·m, 11 ft·lb)
- Install the stick coils (see Stick Coil Installation in the Electrical System chapter).
- After installation, be sure the stick coils are installed securely by pulling up them lightly.

#### Others

#### Chassis Parts Lubrication

- Before lubricating each part, clean off any rusty spots with rust remover and wipe off any grease, oil, dirt, or grime.
- Lubricate the points listed below with indicated lubricant.

#### NOTE



○ Whenever the vehicle has been operated under wet or rainy conditions, or especially after using a high-pressure water spray, perform the general lubrication.

#### Pivots: Lubricate with Grease.

Brake Lever  
Brake Pedal  
Clutch Lever  
Rear Master Cylinder Push Rod Joint Pin  
Side Stand

#### Points: Lubricate with Grease.

Clutch Inner Cable Upper and Lower Ends [A]  
Throttle Inner Cable Upper and Lower Ends

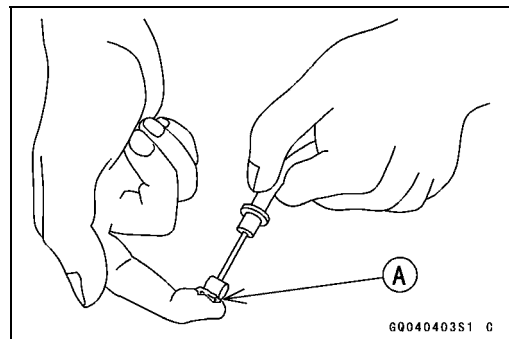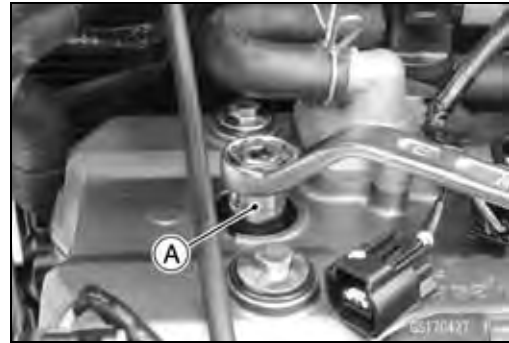


G0040403S1 C

**Periodic Maintenance Procedures**


**Cables: Lubricate with Rust Inhibitor.**

- Clutch Cable
- Throttle Cables

- Lubricate the cables by seeping the oil between the cable and housing.
- The cable may be lubricated by using a commercially available pressure cable lubricator with an aerosol cable lubricant.

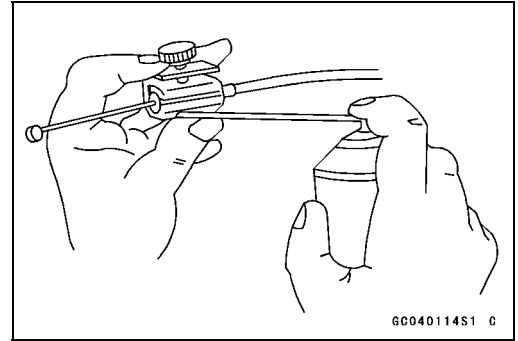

- With the cable disconnected at both ends, the inner cable should move freely [A] within the cable housing.
- ★ If cable movement is not free after lubricating, if the cable is frayed [B], or if the cable housing is kinked [C], replace the cable.

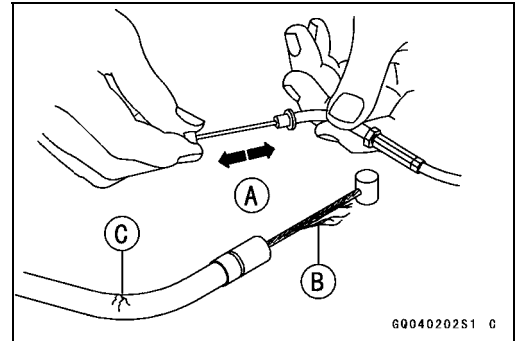

**Condition of Bolts, Nuts and Fasteners Tightness Inspection**

- Check the tightness of the bolts and nuts listed here. Also, check to see that each cotter pin is in place and in good condition.

**NOTE**

○ For the engine fasteners, check the tightness of them when the engine is cold (at room temperature).

- ★ If there are loose fasteners, retighten them to the specified torque following the specified tightening sequence. Refer to the appropriate chapter for torque specifications. If torque specifications are not in the appropriate chapter, see the Standard Torque Table. For each fastener, first loosen it by 1/2 turn, then tighten it.
- ★ If cotter pins are damaged, replace them with new ones.

## 2-68 PERIODIC MAINTENANCE

### Periodic Maintenance Procedures

---

#### **Bolt, Nut and Fastener to be checked**

##### Engine:

- Clutch Lever Pivot Bolt Locknut
- Engine Mounting Bolts and Nuts
- Exhaust Pipe Holder Nuts
- Muffler Body Mounting Bolts

##### Wheels:

- Front Axle Clamp Bolt
- Front Axle
- Rear Axle Nut

##### Brakes:

- Brake Lever Pivot Bolt Locknut
- Brake Pedal Bolt
- Caliper Mounting Bolts
- Front Master Cylinder Clamp Bolts
- Rear Master Cylinder Mounting Bolts
- Rear Master Cylinder Push Rod Joint Cotter Pin

##### Suspension:

- Front Fork Clamp Bolts
- Rear Shock Absorber Bolts and Nuts
- Swingarm Pivot Shaft Nut

##### Steering:

- Handlebar Holder Bolts
- Steering Stem Head Bolt

##### Others:

- Footpeg Bracket Bolts
- Front Fender Mounting Bolts
- Side Stand Bolt

# Fuel System (DFI)

## Table of Contents

Exploded View.....	3-4
DFI System.....	3-10
DFI Components Naming .....	3-12
DFI Parts Location.....	3-19
Specifications .....	3-22
Special Tools and Sealant.....	3-24
DFI Servicing Precautions.....	3-26
DFI Servicing Precautions .....	3-26
Troubleshooting the DFI System .....	3-28
Outline .....	3-28
Inquiries to Rider.....	3-32
DFI System Troubleshooting Guide .....	3-35
Self-Diagnosis .....	3-40
Self-Diagnosis Outline .....	3-40
Self-Diagnosis Procedures .....	3-40
Service Code Reading.....	3-43
Service Code Erasing .....	3-43
Backups.....	3-44
Main Throttle Sensor (Service Code 11) (DTC P0120, P0123).....	3-47
Main Throttle Sensor Removal/Adjustment .....	3-47
Main Throttle Sensor Input Voltage Inspection .....	3-47
Main Throttle Sensor Resistance Inspection .....	3-48
Main Throttle Sensor Output Voltage Inspection .....	3-48
Intake Air Pressure Sensor (Service Code 12) (DTC P0105, P0106, P0107).....	3-51
Intake Air Pressure Sensor Removal.....	3-51
Intake Air Pressure Sensor Installation.....	3-51
Intake Air Pressure Sensor Input Voltage Inspection.....	3-52
Intake Air Pressure Sensor Output Voltage Inspection.....	3-53
Intake Air Temperature Sensor (Service Code 13) (DTC P0110, P0112).....	3-57
Intake Air Temperature Sensor Removal/Installation.....	3-57
Intake Air Temperature Sensor Output Voltage Inspection .....	3-57
Intake Air Temperature Sensor Resistance Inspection.....	3-58
Water Temperature Sensor (Service Code 14) (DTC P0115, P0117) .....	3-60
Water Temperature Sensor Removal/Installation .....	3-60
Water Temperature Sensor Output Voltage Inspection.....	3-60
Water Temperature Sensor Resistance Inspection.....	3-61
Crankshaft Sensor (Service Code 21) (DTC P0335).....	3-62
Crankshaft Sensor Removal/Installation.....	3-62
Crankshaft Sensor Resistance Inspection .....	3-62
Crankshaft Sensor Peak Voltage Inspection.....	3-62
Rear Wheel Rotation Sensor (Service Code 24) (DTC P2158).....	3-63
Rear Wheel Rotation Sensor Signal Inspection.....	3-63
Gear Position Sensor (Service Code 25) (DTC P0914, P0915, P0917) .....	3-66
Gear Position Sensor Removal/Installation .....	3-66
Gear Position Sensor Input Voltage Inspection .....	3-66
Gear Position Sensor Output Voltage Inspection.....	3-67
Vehicle-down Sensor (Service Code 31) (DTC C0064) .....	3-69
Vehicle-down Sensor Removal.....	3-69
Vehicle-down Sensor Installation.....	3-69
Vehicle-down Sensor Input Voltage Inspection.....	3-70

## 3-2 FUEL SYSTEM (DFI)

---

Vehicle-down Sensor Output Voltage Inspection .....	3-71
Subthrottle Sensor (Service Code 32) (DTC P0220, P0223) .....	3-73
Subthrottle Sensor Removal/Adjustment .....	3-73
Subthrottle Sensor Input Voltage Inspection .....	3-73
Subthrottle Sensor Output Voltage Inspection .....	3-74
Subthrottle Sensor Resistance Inspection .....	3-76
Oxygen Sensor - not activated (Service Code 33) (DTC P0130, P0132) .....	3-77
Oxygen Sensor Removal/Installation .....	3-77
Oxygen Sensor Inspection .....	3-77
ECU Communication Error (Service Code 39) .....	3-80
ECU Communication Line Inspection .....	3-80
Fuel Injectors (Service Code 41, 42) (DTC P0201, P0202) .....	3-81
Fuel Injector Removal/Installation .....	3-81
Fuel Injector Audible Inspection .....	3-81
Fuel Injector Resistance Inspection .....	3-81
Fuel Injector Power Source Voltage Inspection .....	3-82
Fuel Injector Output Voltage Inspection .....	3-83
Fuel Injector Fuel Line Inspection .....	3-84
Stick Coils #1, #2 (Service Code 51, 52) (DTC P0351, P0352) .....	3-86
Stick Coil Removal/Installation .....	3-86
Stick Coil Primary Winding Resistance Inspection .....	3-86
Stick Coil Input Voltage Inspection .....	3-86
Radiator Fan Relay (Service Code 56) (DTC P0480) .....	3-88
Radiator Fan Relay Removal/Installation .....	3-88
Radiator Fan Relay Inspection .....	3-88
Subthrottle Valve Actuator (Service Code 62) (DTC P2100) .....	3-89
Subthrottle Valve Actuator Removal .....	3-89
Subthrottle Valve Actuator Inspection .....	3-89
Subthrottle Valve Actuator Resistance Inspection .....	3-89
Subthrottle Valve Actuator Input Voltage Inspection .....	3-90
Air Switching Valve (Service Code 64) (DTC P0410) .....	3-92
Air Switching Valve Removal/Installation .....	3-92
Air Switching Valve Inspection .....	3-92
Oxygen Sensor Heater (Service Code 67) (DTC P0030) .....	3-93
Oxygen Sensor Heater Removal/Installation .....	3-93
Oxygen Sensor Heater Resistance Inspection .....	3-93
Oxygen Sensor Heater Power Source Voltage Inspection .....	3-94
Fuel Supply System (Service Code 94) (DTC P0170) .....	3-96
Fuel Supply System Inspection .....	3-96
Purge Valve (Service Code 3A) (DTC P0443) (Equipped Models) .....	3-97
Purge Valve Removal/Installation .....	3-97
Purge Valve Inspection .....	3-97
Warning Indicator Light (LED) .....	3-99
Yellow Engine Warning/Red Warning Indicator Light (LED) Inspection .....	3-99
ECU .....	3-100
ECU Identification .....	3-100
ECU Removal .....	3-100
ECU Installation .....	3-100
ECU Power Supply Inspection .....	3-101
DFI Power Source .....	3-104
ECU Fuse Removal .....	3-104
ECU Fuse Installation .....	3-104
ECU Fuse Inspection .....	3-104
ECU Main Relay Removal/Installation .....	3-104
ECU Main Relay Inspection .....	3-104
Fuel Line .....	3-105
Fuel Pressure Inspection .....	3-105




---

Fuel Flow Rate Inspection .....	3-106
Fuel Pump .....	3-108
Fuel Pump Removal .....	3-108
Fuel Pump Installation .....	3-109
Fuel Pump Operation Inspection .....	3-109
Fuel Pump Operating Voltage Inspection .....	3-109
Pressure Regulator Removal.....	3-110
Fuel Pump Relay Removal/Installation.....	3-111
Fuel Pump Relay Inspection.....	3-111
Throttle Grip and Cables .....	3-112
Throttle Grip Free Play Inspection .....	3-112
Throttle Grip Free Play Adjustment.....	3-112
Throttle Cable Installation .....	3-112
Throttle Cable Lubrication.....	3-112
Throttle Body Assy .....	3-113
Idle Speed Inspection/Adjustment .....	3-113
Throttle Bore Cleaning .....	3-113
Synchronization Inspection/Adjustment.....	3-113
Throttle Body Assy Removal.....	3-113
Throttle Body Assy Installation.....	3-115
Throttle Body Assy Disassembly .....	3-116
Throttle Body Assy Assembly .....	3-117
Air Cleaner.....	3-119
Air Cleaner Element Removal/Installation .....	3-119
Air Cleaner Element Inspection .....	3-119
Air Cleaner Oil Draining .....	3-119
Air Cleaner Housing Removal.....	3-119
Air Cleaner Housing Installation.....	3-120
Fuel Tank.....	3-121
Fuel Tank Removal .....	3-121
Fuel Tank Installation .....	3-124
Fuel Tank and Cap Inspection .....	3-126
Fuel Tank Cleaning .....	3-126
Evaporative Emission Control System (Equipped Models) .....	3-127
Parts Removal/Installation .....	3-127
Hose Inspection .....	3-127
Purge Valve Inspection .....	3-127
Canister Inspection .....	3-127

# 3-4 FUEL SYSTEM (DFI)

## Exploded View

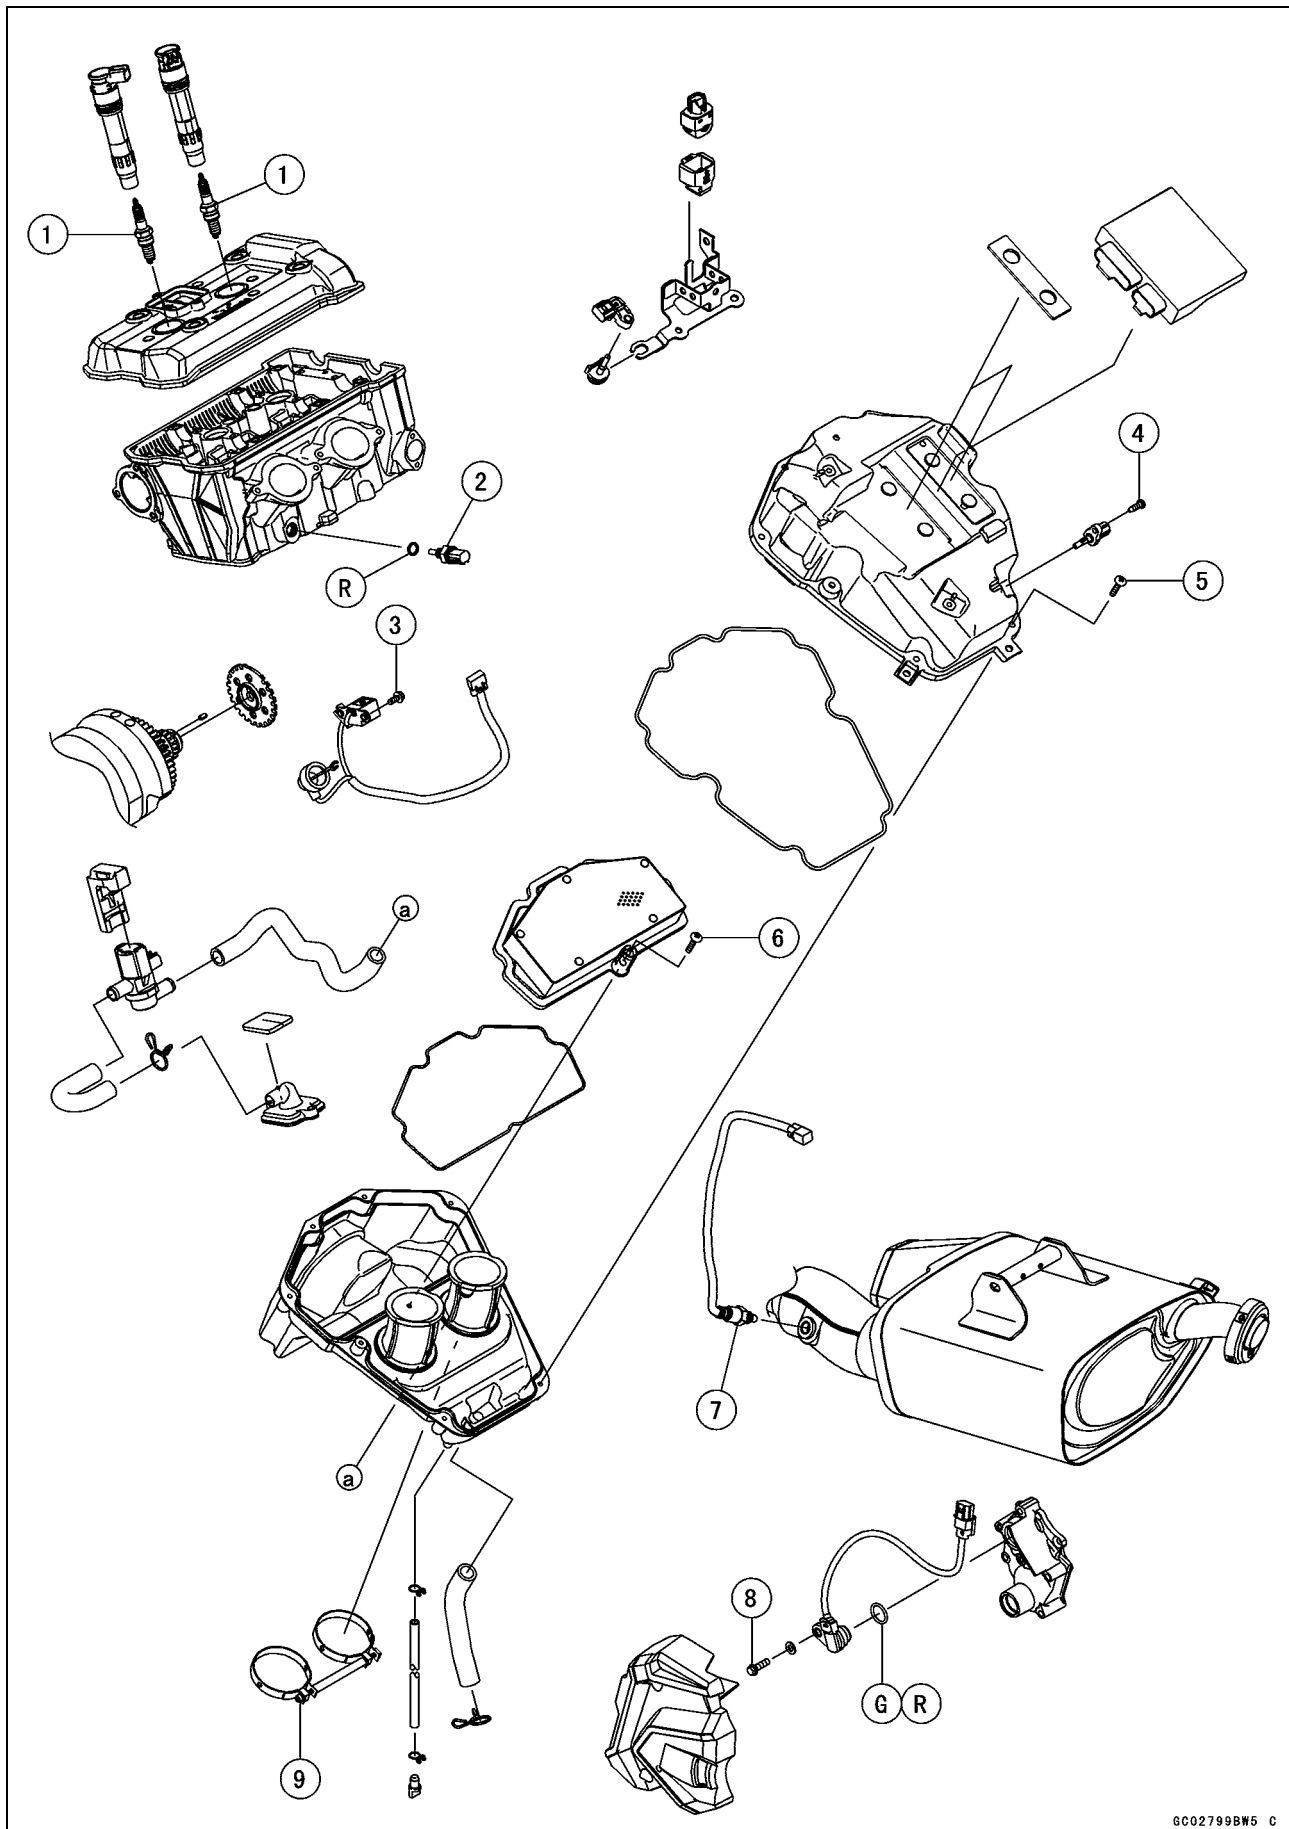

**Exploded View**


<b>No.</b>	<b>Fastener</b>	<b>Torque</b>			<b>Remarks</b>
		<b>N·m</b>	<b>kgf·m</b>	<b>ft·lb</b>	
1	Spark Plugs	15	1.5	11	
2	Water Temperature Sensor	12	1.2	106 in·lb	
3	Crankshaft Sensor Bolts	6.0	0.61	53 in·lb	
4	Intake Air Temperature Sensor Screw	1.2	0.12	11 in·lb	
5	Air Cleaner Housing Assembly Screws	1.2	0.12	11 in·lb	
6	Air Cleaner Element Screw	1.2	0.12	11 in·lb	
7	Oxygen Sensor	25	2.5	18	
8	Gear Position Sensor Bolt	9.8	1.0	87 in·lb	
9	Air Cleaner Housing Clamp Bolt	2.0	0.20	18 in·lb	

G: Apply grease.

R: Replacement Parts

# 3-6 FUEL SYSTEM (DFI)

## Exploded View

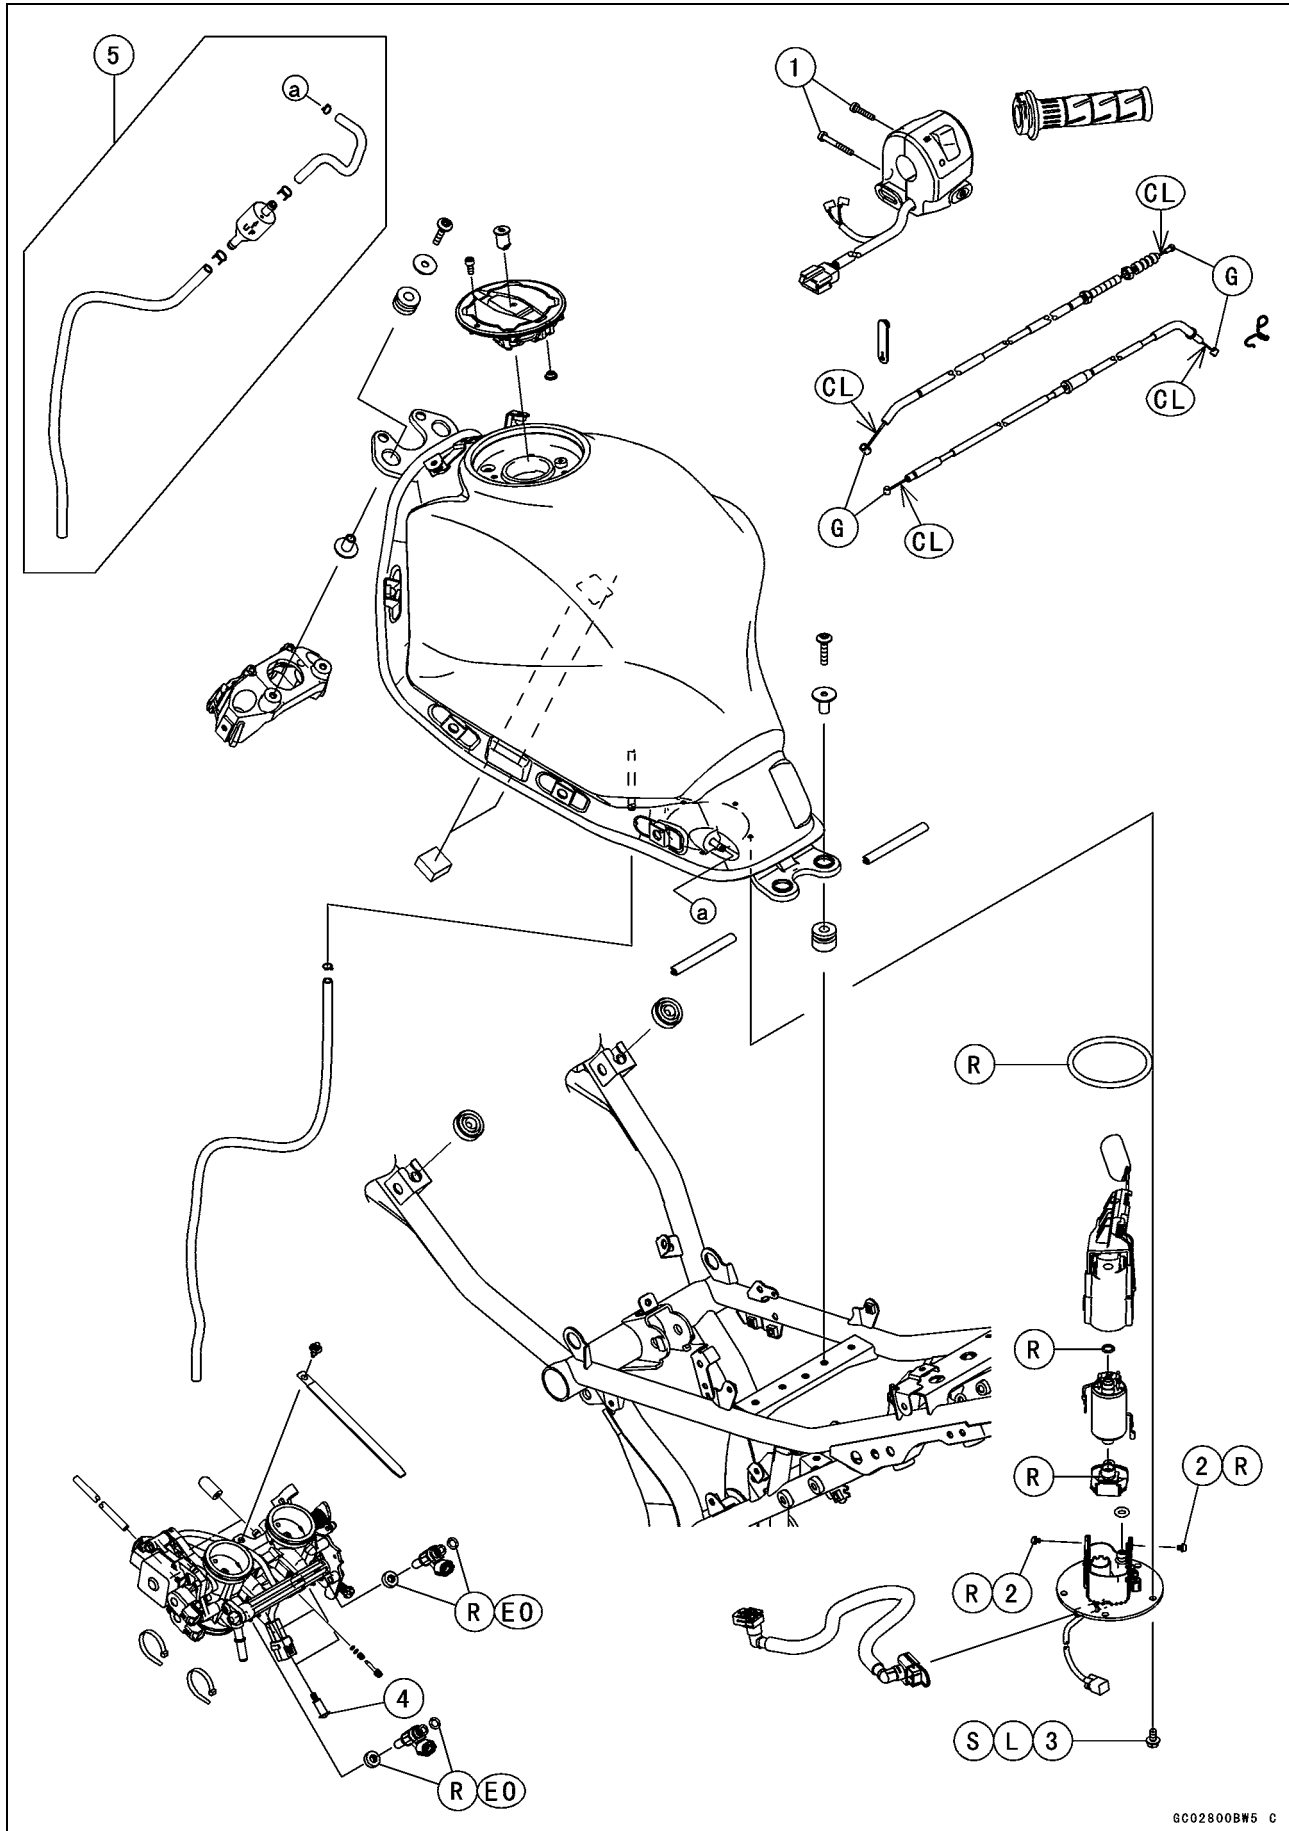

**Exploded View**

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Switch Housing Screws	3.5	0.36	31 in·lb	
2	Fuel Pump Assembly Screws	0.98	0.10	8.7 in·lb	R
3	Fuel Pump Bolts	9.8	1.0	87 in·lb	L, S
4	Delivery Pipe Assy Mounting Screws	3.4	0.35	30 in·lb	

5. US, CA, AU, ID, PH and MY Models

CL: Apply cable lubricant.

EO: Apply engine oil.

G: Apply grease.

L: Apply a non-permanent locking agent.


R: Replacement Parts

S: Follow the specified tightening sequence.

# 3-8 FUEL SYSTEM (DFI)

## Exploded View

### Evaporative Emission Control System Equipped Models

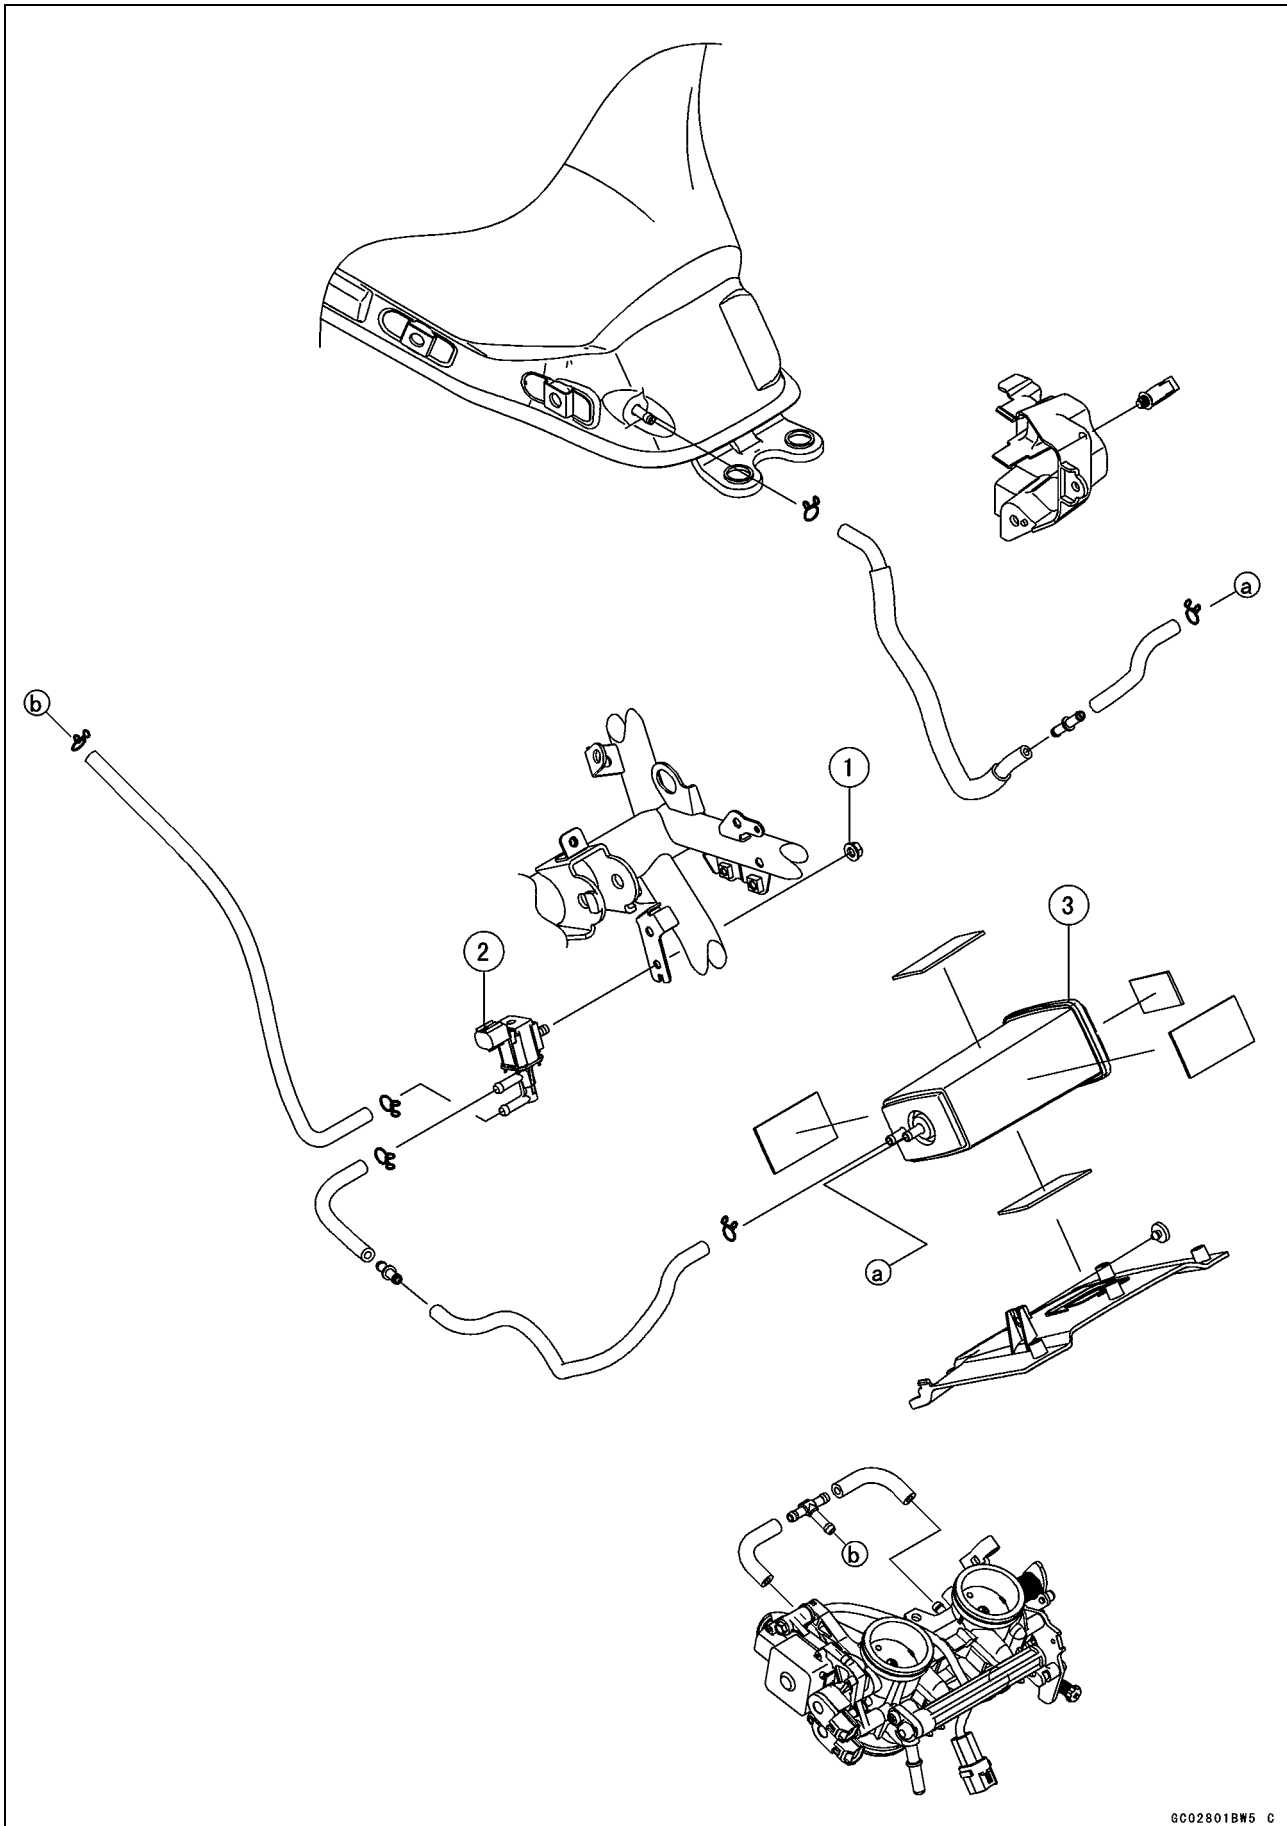

**Exploded View**


<b>No.</b>	<b>Fastener</b>	<b>Torque</b>			<b>Remarks</b>
		<b>N·m</b>	<b>kgf·m</b>	<b>ft·lb</b>	
1	Purge Valve Mounting Nut	7.0	0.71	62 in·lb	

2. Purge Valve
3. Canister

# 3-10 FUEL SYSTEM (DFI)

## DFI System

### DFI System

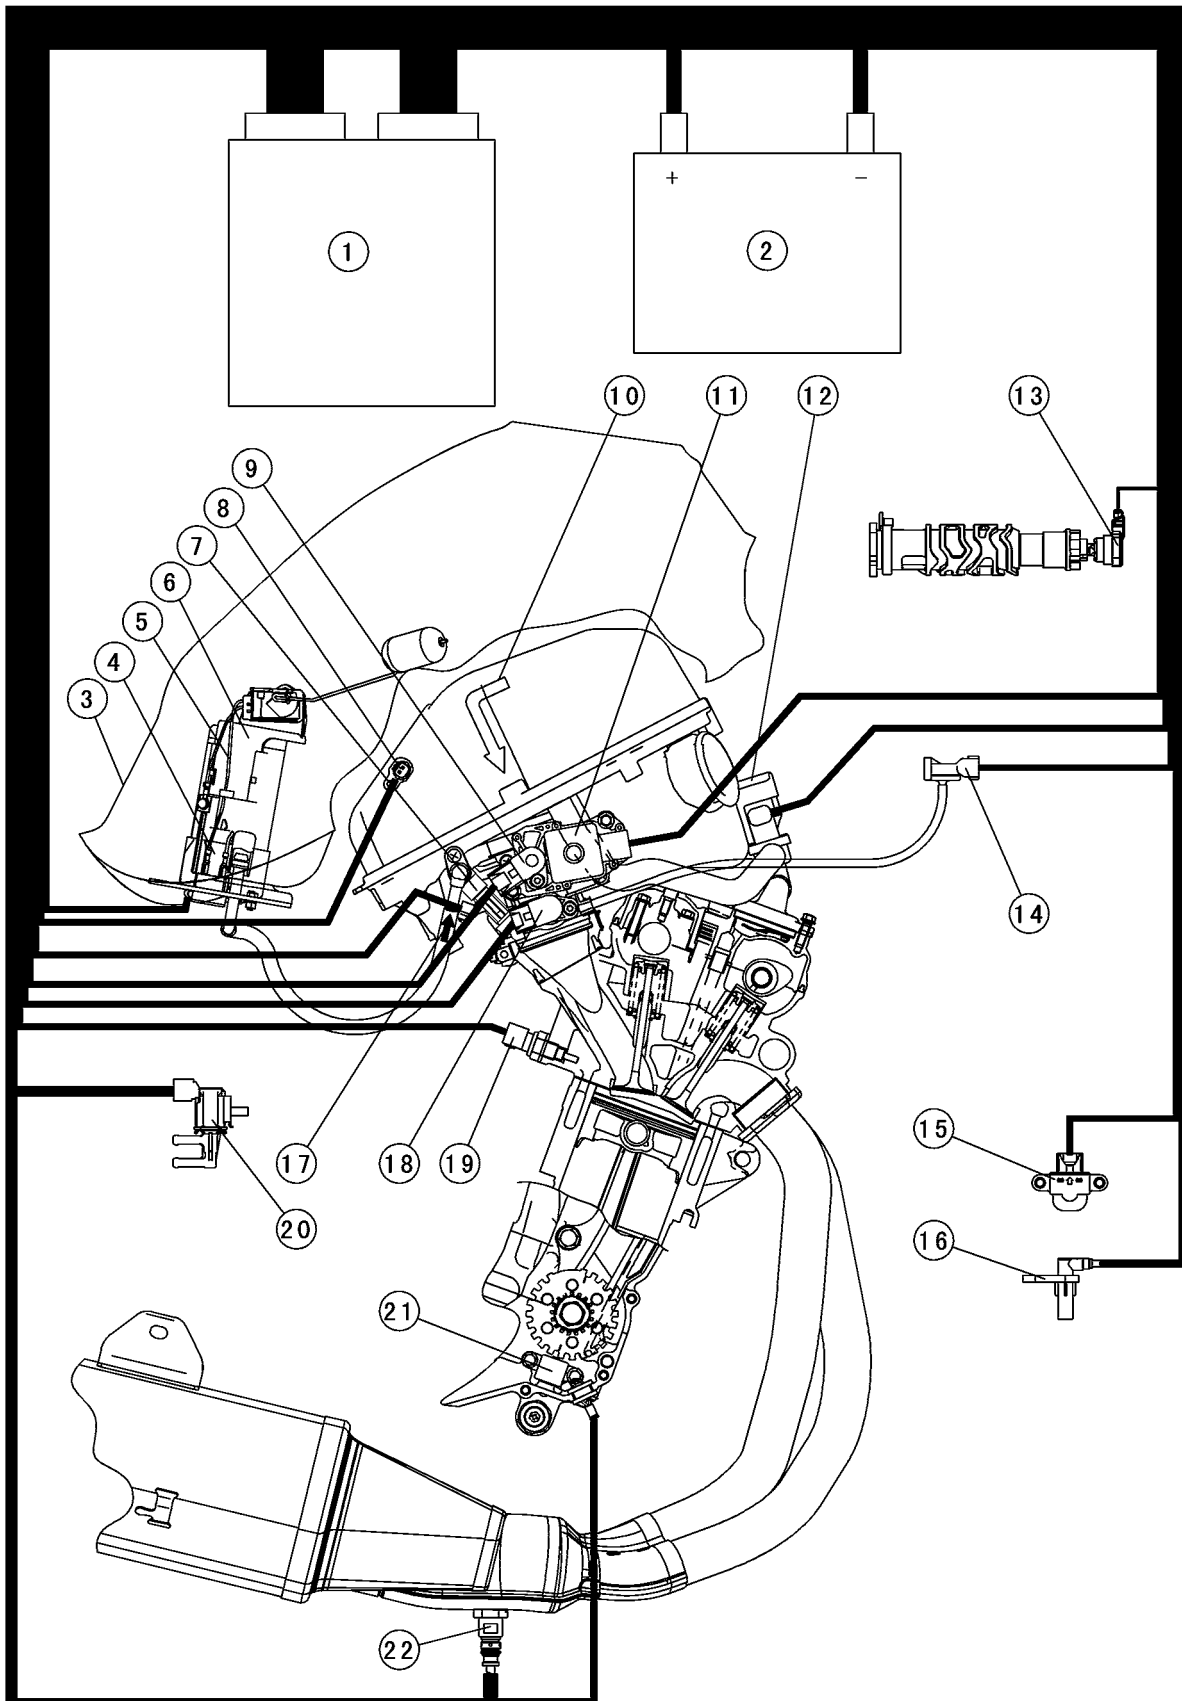



### DFI System

---

1. ECU
2. Battery
3. Fuel Tank
4. Fuel Filter
5. Pressure Regulator
6. Fuel Pump
7. Fuel Injectors
8. Intake Air Temperature Sensor
9. Subthrottle Sensor
10. Air Flow
11. Subthrottle Valve Actuator
12. Air Switching Valve
13. Gear Position Sensor
14. Intake Air Pressure Sensor
15. Vehicle-down Sensor
16. Rear Wheel Rotation Sensor
17. Fuel Flow
18. Main Throttle Sensor
19. Water Temperature Sensor
20. Purge Valve (Equipped Models)
21. Crankshaft Sensor
22. Oxygen Sensor

## 3-12 FUEL SYSTEM (DFI)

### DFI System

#### **DFI Components Naming**

The terms used in the European regulation for DFI components are sometimes different from those used by Kawasaki. Use this table to cross reference terms which may appear in a generic scan tool when diagnosing the DFI system.

<b>Sensors described in R44/2014 (Description per ISO 15031-6 in the parentheses)</b>	<b>Kawasaki Name</b>
Crankshaft position sensor (Crankshaft position sensor "A")	Crankshaft sensor
Engine coolant temperature sensor (Engine coolant temperature sensor 1)	Water (Engine) temperature sensor
Gear shift position sensor (Gear shift position circuit)	Gear position sensor
Intake air temperature sensor (Intake air temperature sensor 1)	Intake air temperature sensor
Manifold absolute pressure sensor (Manifold absolute pressure/barometric pressure circuit)	Intake air pressure sensor
O <sub>2</sub> sensor (binary/linear) signals (O <sub>2</sub> sensor)	Oxygen sensor
Throttle position sensor (Throttle/Pedal position sensor/switch "A")	Main throttle sensor
Throttle position sensor (Throttle/Pedal position sensor/switch "B")	Subthrottle sensor
Vehicle speed sensor (Vehicle speed sensor "B")	Rear wheel rotation sensor

<b>Actuators described in R44/2014 (Description per ISO 15031-6 in the parentheses)</b>	<b>Kawasaki Name</b>
Evaporative emission system purge control valve (Evaporative emission system purge control valve)	Purge valve
Fuel injector (Injector - cylinder 1 ~ 2)	Fuel injector
Ignition coil primary control circuits (Ignition coil "A ~ B" primary/secondary circuit)	Ignition coil (Stick coil)
O <sub>2</sub> sensor heater (HO <sub>2</sub> S heater control circuit)	Oxygen sensor heater
Secondary air injection system (Secondary air injection system)	Air switching valve
Throttle by wire actuator (Throttle actuator control motor circuit)	Subthrottle valve actuator (ETV actuator)

---

**DFI System**

---

This page intentionally left blank.



---

**DFI System**

---


**Part Names**

1. ECU
2. Kawasaki Diagnostic System Connector
3. Rear Wheel Rotation Sensor
4. Fuel Pump
5. Engine Ground
6. Battery
7. Main Fuse 30 A
8. Frame Ground (6)
9. Frame Ground (5)
10. Frame Ground (4)
11. Frame Ground (3)
12. Frame Ground (1)
13. Fuse Box (1)
14. ECU Fuse 15 A
15. Fan Fuse 15 A
16. Ignition Fuse 10 A
17. Relay Box
18. Fuel Pump Relay
19. ECU Main Relay
20. Radiator Fan Relay
21. Yellow Engine Warning Indicator Light (LED)
22. Meter Unit
23. Ignition Switch
24. Engine Stop Switch
25. Starter Button
26. Fan Motor
27. Spark Plugs
28. Stick Coils
29. Air Switching Valve
30. Fuel Injector #1
31. Fuel Injector #2
32. Subthrottle Valve Actuator
33. Main Throttle Sensor
34. Subthrottle Sensor
35. Intake Air Pressure Sensor
36. Vehicle-down Sensor
37. Intake Air Temperature Sensor
38. Gear Position Sensor
39. Water Temperature Sensor
40. Oxygen Sensor
41. Crankshaft Sensor
42. Purge Valve (Equipped Models)

# 3-16 FUEL SYSTEM (DFI)

## DFI System

### DFI System Wiring Diagram (ABS Equipped Models)

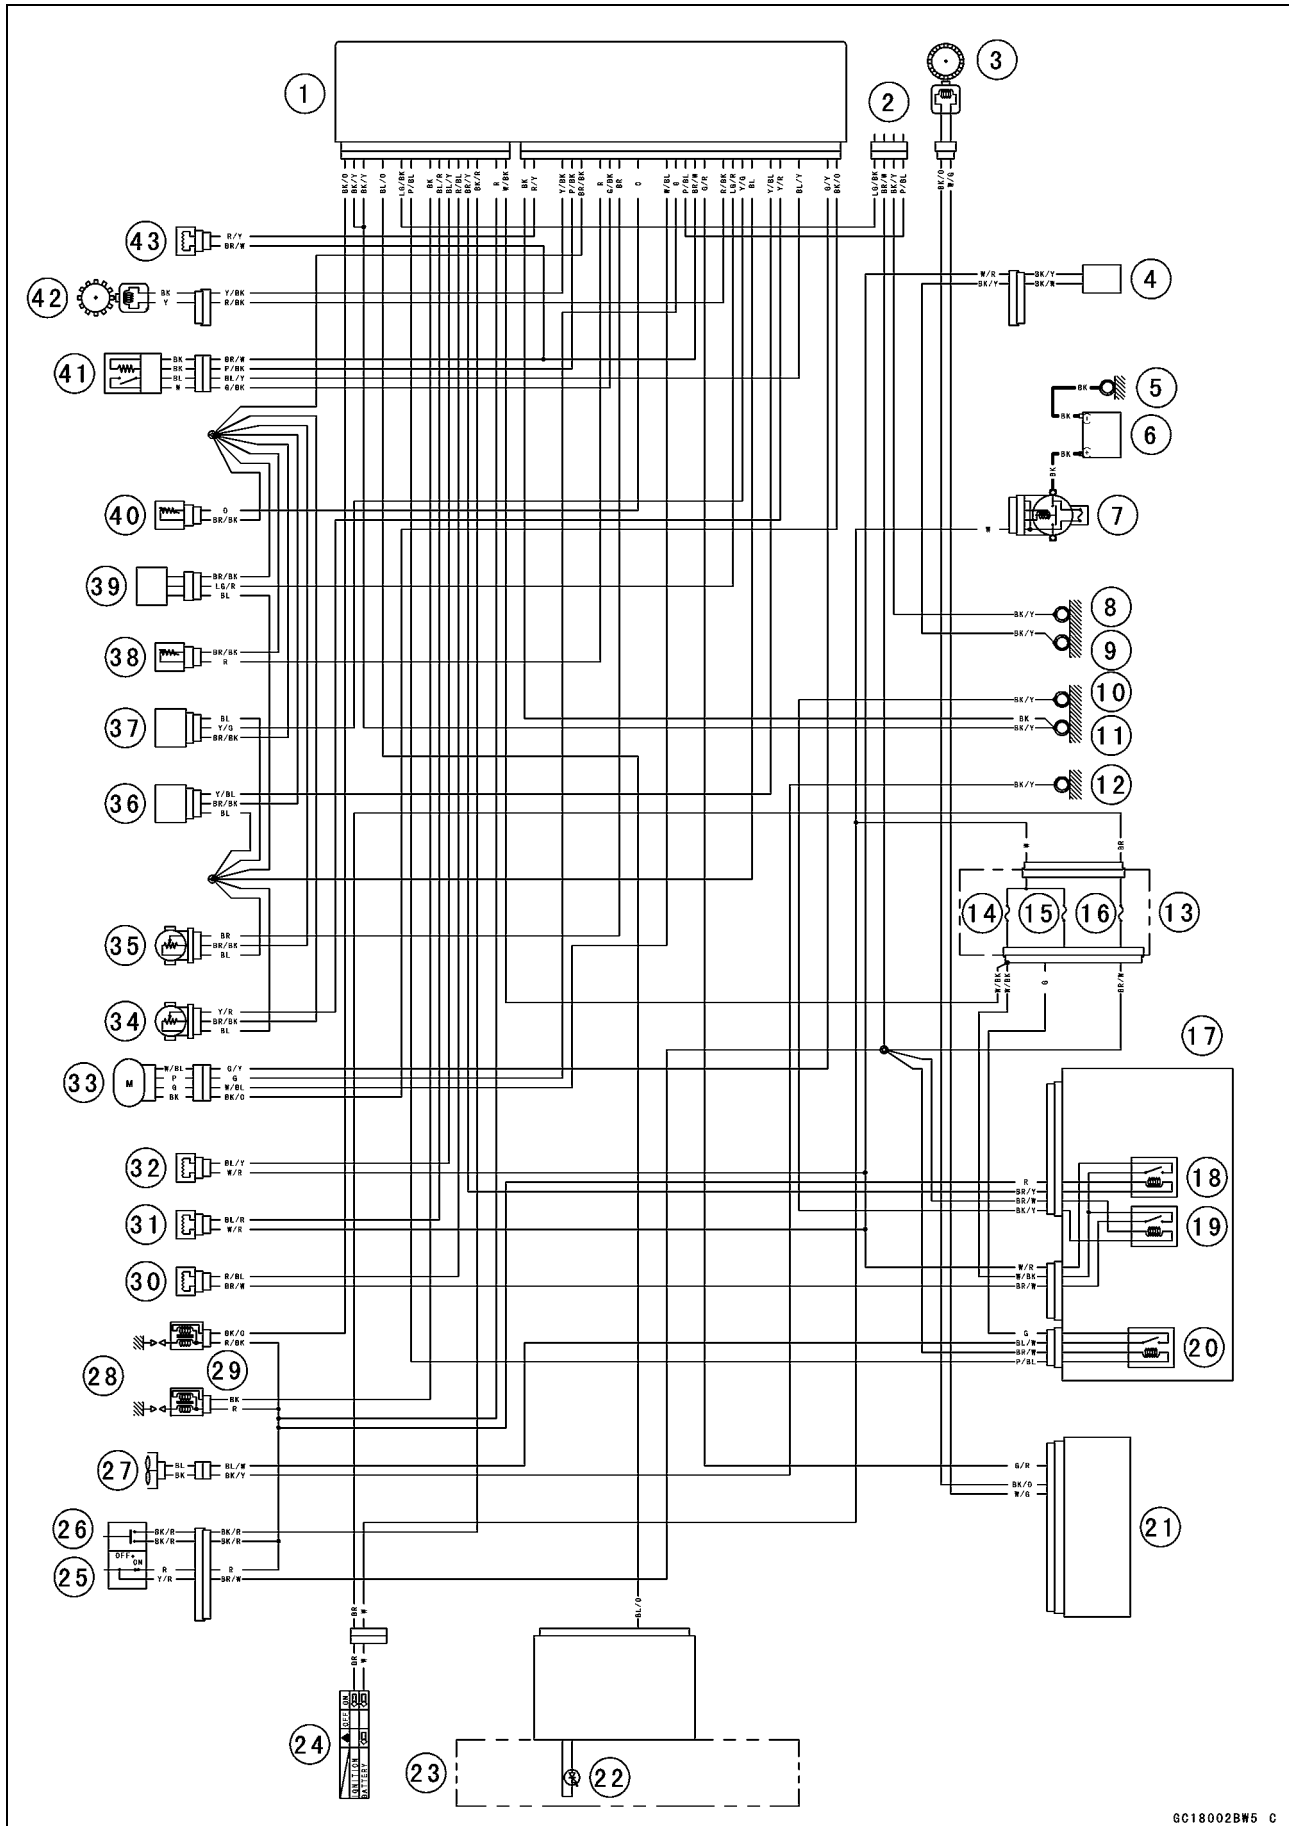

---

**DFI System**

---

**Part Names**

1. ECU
2. Kawasaki Diagnostic System Connector
3. Rear Wheel Rotation Sensor
4. Fuel Pump
5. Engine Ground
6. Battery
7. Main Fuse 30 A
8. Frame Ground (6)
9. Frame Ground (5)
10. Frame Ground (4)
11. Frame Ground (3)
12. Frame Ground (1)
13. Fuse Box (1)
14. ECU Fuse 15 A
15. Fan Fuse 15 A
16. Ignition Fuse 10 A
17. Relay Box
18. Fuel Pump Relay
19. ECU Main Relay
20. Radiator Fan Relay
21. ABS Hydraulic Unit
22. Yellow Engine Warning Indicator Light (LED)
23. Meter Unit
24. Ignition Switch
25. Engine Stop Switch
26. Starter Button
27. Fan Motor
28. Spark Plugs
29. Stick Coils
30. Air Switching Valve
31. Fuel Injector #1
32. Fuel Injector #2
33. Subthrottle Valve Actuator
34. Main Throttle Sensor
35. Subthrottle Sensor
36. Intake Air Pressure Sensor
37. Vehicle-down Sensor
38. Intake Air Temperature Sensor
39. Gear Position Sensor
40. Water Temperature Sensor
41. Oxygen Sensor
42. Crankshaft Sensor
43. Purge Valve (Equipped Models)


## ○Color Codes:

BK: Black	GY: Gray	PU: Purple
BL: Blue	LB: Light Blue	R: Red
BR: Brown	LG: Light Green	V: Violet
CH: Chocolate	O: Orange	W: White
DG: Dark Green	P: Pink	Y: Yellow
G: Green		

## 3-18 FUEL SYSTEM (DFI)

### DFI System

#### Terminal Numbers of ECU Connectors

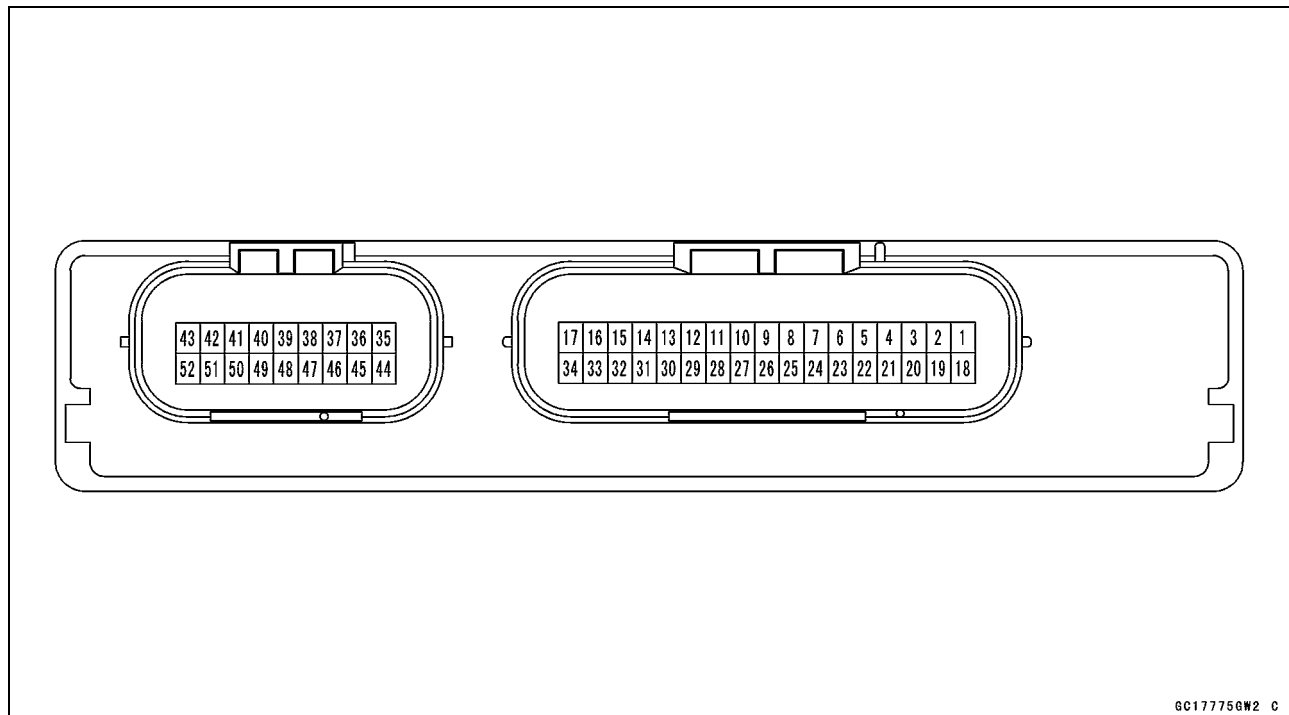

#### Terminal Names


1. Subthrottle Valve Actuator: BK/O
2. Subthrottle Valve Actuator: G/Y
3. Unused
4. Green Neutral Indicator Light (LED): LG
5. Oxygen Sensor: BL/Y
6. Unused
7. Main Throttle Sensor: Y/R
8. Intake Air Pressure Sensor: Y/BL
9. Unused
10. Power Supply to Sensors: BL
11. Vehicle-down Sensor: Y/G
12. Gear Position Sensor: LG/R
13. Crankshaft Sensor (+): R/BK
14. Power Supply to Rear Wheel Rotation Sensor (ER650G): W/G
15. Rear Wheel Rotation Sensor Signal (from ABS Hydraulic Unit, ER650H): G/R
16. Power Supply to ECU (from ECU Main Relay): BR/W
17. External Communication Line (\*KDS): P/BL
18. Subthrottle Valve Actuator: G
19. Subthrottle Valve Actuator: W/BL
20. Unused
21. Unused
22. Water Temperature Sensor: O
23. Unused
24. Subthrottle Sensor: BR
25. Oxygen Sensor: G/BK
26. Intake Air Temperature Sensor: R
27. Unused
28. Ground for Sensors: BR/BK
29. Oxygen Sensor Heater: P/BK
30. Crankshaft Sensor (-): Y/BK
31. Rear Wheel Rotation Sensor Signal: P
32. Rear Wheel Rotation Sensor (ER650G): BK/O
33. Purge Valve (Equipped Models): R/Y
34. Ground for Control System: BK
35. Power Supply to ECU (from Battery): W/BK
36. Engine Stop Switch: R
37. Starter Lockout Switch: R/G
38. Starter Button: BK/R
39. Fuel Pump Relay: BR/Y
40. Air Switching Valve: R/BL
41. Fuel Injector #2: BL/Y
42. Fuel Injector #1: BL/R
43. Stick Coil #1: BK
44. Side Stand Switch: G/BK
45. Radiator Fan Relay: P/BL
46. External Communication Line (\*KDS): LG/BK
47. Meter Unit (Tachometer): LB
48. Meter Communication Line: BL/O
49. Unused
50. Ground for Oxygen Sensor Heater: BK/Y
51. Ground for Ignition System: BK/Y
52. Stick Coil #2: BK/O

\*: KDS (Kawasaki Diagnostic System)




## DFI Parts Location

Battery [A]  
Kawasaki Diagnostic System Connector [B]

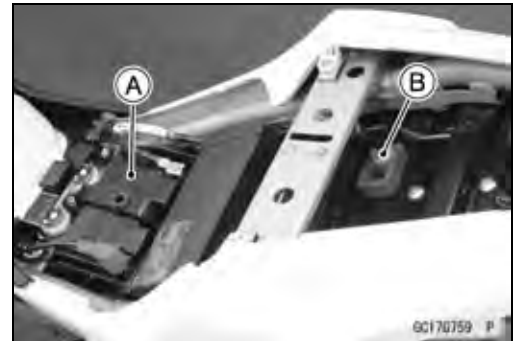


Gear Position Sensor [A]  
Oxygen Sensor [B]

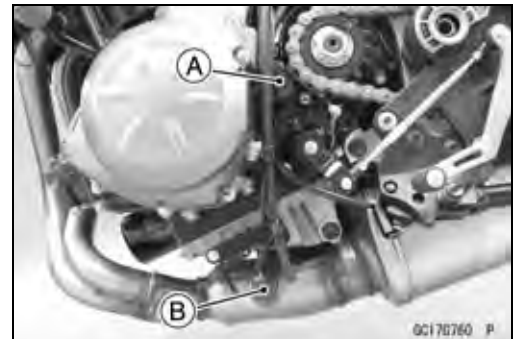


Water Temperature Sensor [A]



Subthrottle Valve Actuator [A]  
Main Throttle Sensor [B]  
Subthrottle Sensor [C]

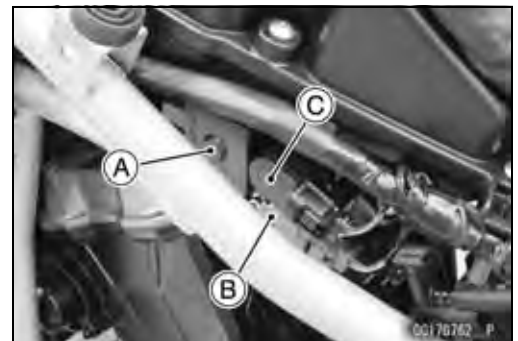


Intake Air Pressure Sensor [A]  
Vehicle-down Sensor [B]  
ECU [C]  
Intake Air Temperature Sensor [D]

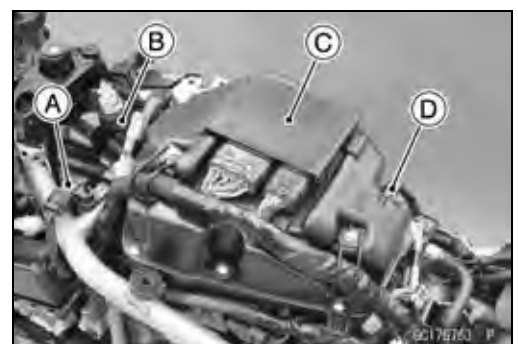

## 3-20 FUEL SYSTEM (DFI)

### DFI Parts Location


Yellow Engine Warning Indicator Light (LED) [A]  
Ignition Switch [B]

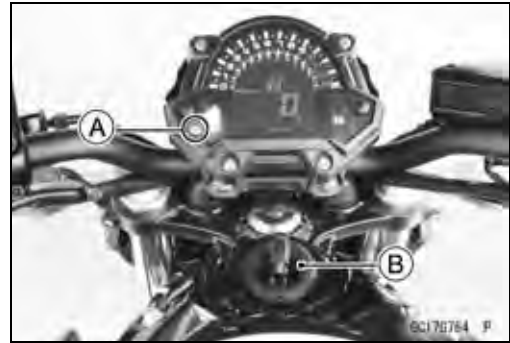

Fuel Injectors #1, #2 [A]



Air Switching Valve [A]  
Stick Coils #1, #2 [B]

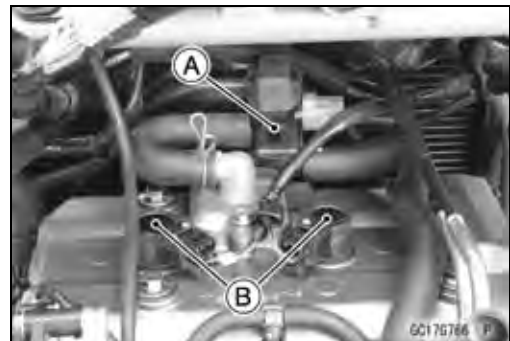

Purge Valve [A] (Equipped Models)



Crankshaft Sensor [A]



**DFI Parts Location**

Fuel Pump [A]



Rear Wheel Rotation Sensor [A]



Fuse Box (1) [A]



## 3-22 FUEL SYSTEM (DFI)

### Specifications

Item	Standard
<b>Digital Fuel Injection System</b>	
Idle Speed	1 300 ±50 r/min (rpm)
Throttle Body Assy:	
Throttle Valve	Dual throttle valves
Bore	φ36 mm (1.4 in.)
Throttle Body Vacuum	35.3 ±1.3 kPa (265 ±10 mmHg) at idle speed
Bypass Screws	0 ~ 2 1/2 (for reference)
ECU (Electronic Control Unit):	
Make	Denso
Type	Digital memory type, with built in IC igniter, sealed with resin
Fuel Pressure (High Pressure Line)	294 kPa (3.0 kgf/cm <sup>2</sup> , 43 psi) with engine idling
Fuel Pump:	
Type	In-tank pump (in fuel tank)
Discharge	50 mL (1.7 US oz.) or more for 3 seconds
Fuel Injectors:	
Type	EAT828
Nozzle Type	Fine atomizing type with 12 holes
Resistance	About 11.5 ~ 12.5 Ω @20°C (68°F)
Main Throttle Sensor:	
Input Voltage	DC 4.75 ~ 5.25 V
Output Voltage	DC 0.99 ~ 1.05 V at idle throttle opening DC 4.11 ~ 4.50 V at full throttle opening (for reference)
Resistance	4 ~ 6 kΩ
Intake Air Pressure Sensor:	
Input Voltage	DC 4.75 ~ 5.25 V
Output Voltage	DC 3.80 ~ 4.20 V at standard atmospheric pressure (101.32 kPa, 76 cmHg)
Intake Air Temperature Sensor:	
Output Voltage	About DC 2.25 ~ 2.50 V @20°C (68°F)
Resistance	5.4 ~ 6.6 kΩ @0°C (32°F) 0.29 ~ 0.39 kΩ @80°C (176°F)
Water Temperature Sensor:	
Output Voltage	About DC 2.80 ~ 2.97 V @20°C (68°F)
Gear Position Sensor:	
Input Voltage	DC 4.75 V ~ 5.25 V
Output Voltage	in the text
Vehicle-down Sensor:	
Input Voltage	DC 4.75 ~ 5.25 V
Output Voltage	with sensor tilted 60 ~ 70° or more right or left: DC 0.65 ~ 1.35 V with sensor arrow mark pointed up: DC 3.55 ~ 4.45 V


**Specifications**

Item	Standard
Subthrottle Sensor: Input Voltage Output Voltage  Resistance Subthrottle Valve Actuator: Input Voltage  Resistance Oxygen Sensor: Output Voltage (Rich) Output Voltage (Lean) Heater Resistance Purge Valve (Equipped Models): Resistance	DC 4.75 ~ 5.25 V DC 0.49 ~ 0.91 V at subthrottle valve full close position (for reference) DC 3.88 ~ 4.32 V at subthrottle valve full open position 4 ~ 6 kΩ  About DC 8.5 ~ 10.5 V and then 0 V or About DC 8.5 ~ 10.5 V 5.2 ~ 7.8 Ω @20°C (68°F)  DC 0.5 V or more DC 0.2 V or less 5.49 ~ 6.91 kΩ @20°C (68°F)  30 ~ 34 Ω @20°C (68°F)
<b>Throttle Grip and Cables</b> Throttle Grip Free Play	2 ~ 3 mm (0.08 ~ 0.12 in.)
<b>Air Cleaner</b> Air Cleaner Element	Viscous paper element


# 3-24 FUEL SYSTEM (DFI)

## Special Tools and Sealant


**Oil Pressure Gauge, 5 kgf/cm<sup>2</sup>:**  
57001-125

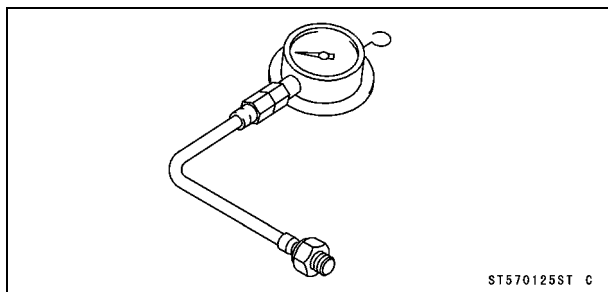


**Throttle Sensor Setting Adapter:**  
57001-1538

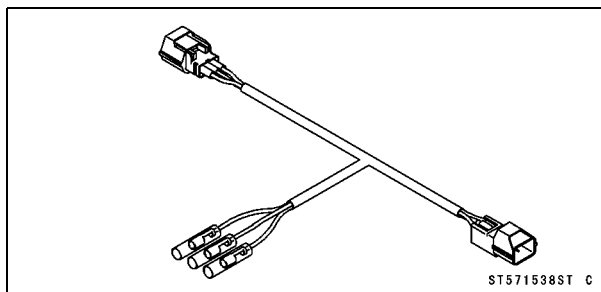


**Fork Oil Level Gauge:**  
57001-1290

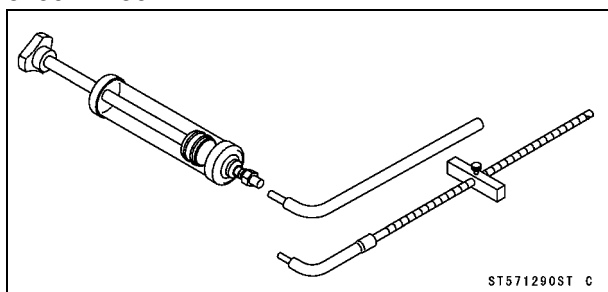


**Fuel Pressure Gauge Adapter:**  
57001-1593

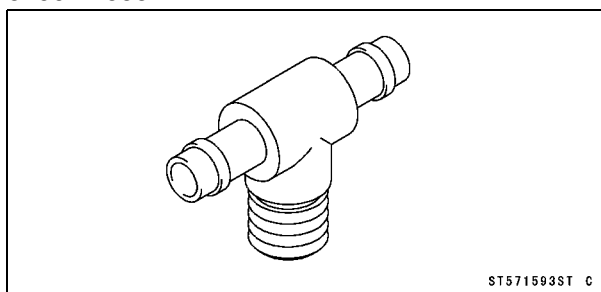


**Vacuum Gauge:**  
57001-1369

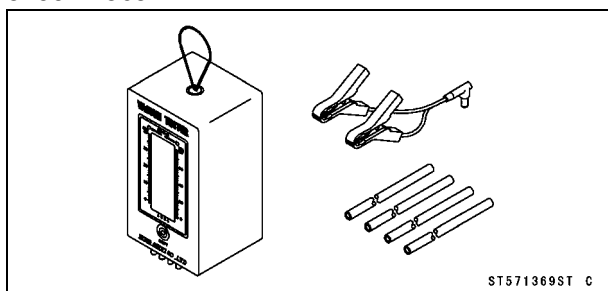


**Fuel Hose:**  
57001-1607

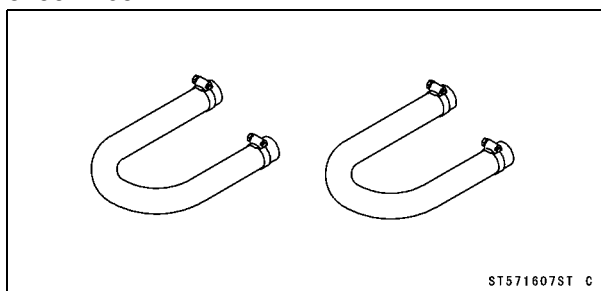


**Peak Voltage Adapter:**  
57001-1415

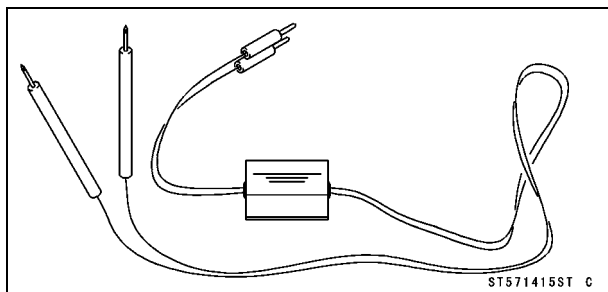


**Oxygen Sensor Measuring Adapter:**  
57001-1682

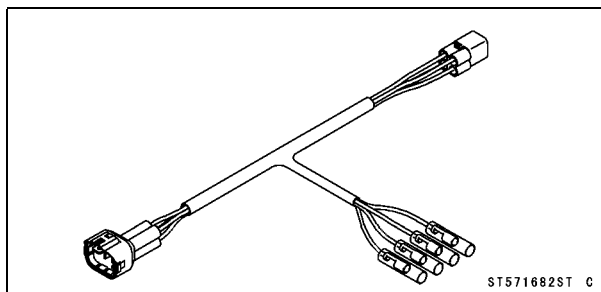

**Needle Adapter Set:**  
57001-1457

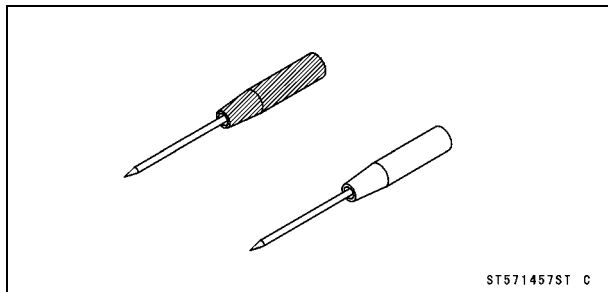


**Measuring Adapter:**  
57001-1700

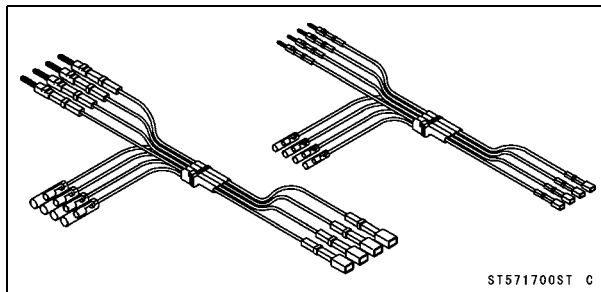

**Special Tools and Sealant**

---

Liquid Gasket, TB1211:  
56019-120

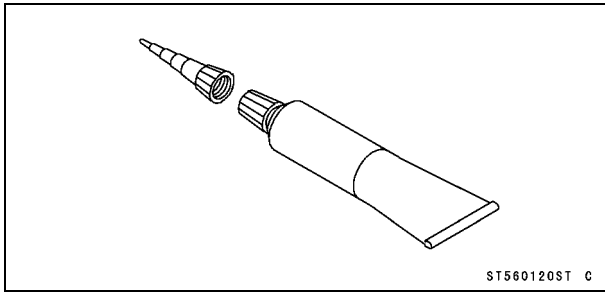


## 3-26 FUEL SYSTEM (DFI)

### DFI Servicing Precautions

#### DFI Servicing Precautions

There are a number of important precautions that should be followed servicing the DFI system.

- This DFI system is designed to be used with a 12 V sealed battery as its power source. Do not use any other battery except for a 12 V sealed battery as a power source.
- Do not reverse the battery cable connections. This will damage the ECU.
- To prevent damage to the DFI parts, do not disconnect the battery cables or any other electrical connections when the ignition switch is on, or while the engine is running.
- Take care not to short the leads that are directly connected to the battery positive (+) terminal to the chassis ground.
- When charging, remove the battery from the motorcycle. This is to prevent ECU damage by excessive voltage.
- Whenever the DFI electrical connections are to be disconnected, first turn off the ignition switch, and disconnect the battery (–) terminal. Do not pull the lead, only the connector. Conversely, make sure that all the DFI electrical connections are firmly reconnected before starting the engine.
- Connect these connectors until they click [A].

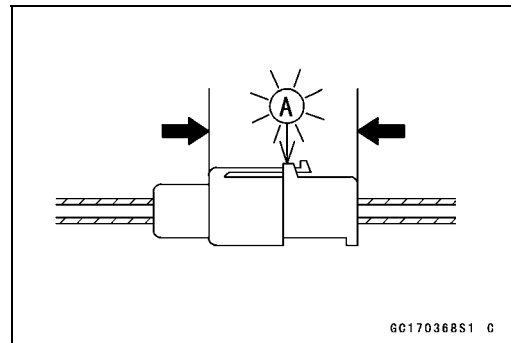


- Do not turn the ignition switch on while any of the DFI electrical connectors are disconnected. The ECU memorizes service codes.
- Do not spray water on the electrical parts, DFI parts, connectors, leads and wiring.
- If a transceiver is installed on the motorcycle, make sure that the operation of the DFI system is not influenced by electric wave radiated from the antenna. Check operation of the system with the engine at idle. Locate the antenna as far as possible away from the ECU.
- When any fuel hose is disconnected, do not turn on the ignition switch. Otherwise, the fuel pump will operate and fuel will spout from the fuel hose.
- Do not operate the fuel pump if the pump is completely dry. This is to prevent pump seizure.
- Before removing the fuel system parts, blow the outer surfaces of these parts clean with compressed air.
- When any fuel hose is disconnected, fuel may spout out by residual pressure in the fuel line. Cover the hose joint with a piece of clean cloth to prevent fuel spillage.
- When installing the fuel hoses, avoid sharp bending, kinking, flattening or twisting, and run the fuel hoses with a minimum of bending so that the fuel flow will not be obstructed.
- Run the hoses according to Cable, Wire, and Hose Routing section in the Appendix chapter.
- To prevent corrosion and deposits in the fuel system, do not add to fuel any fuel antifreeze chemicals.



### DFI Servicing Precautions

○If the motorcycle is not properly handled, the high pressure inside the fuel line can cause fuel to leak or the hose to burst. Remove the fuel tank (see Fuel Tank Removal) and check the fuel hose [A].

★Replace the fuel hose if any fraying, cracks or bulges are noticed.

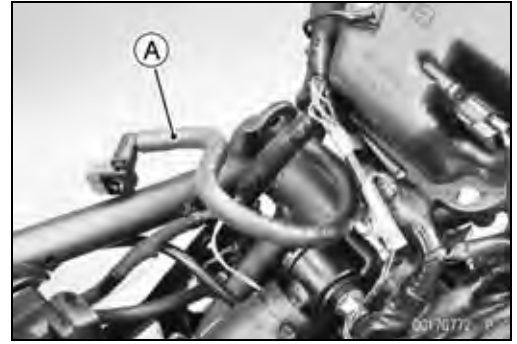

○To maintain the correct fuel/air mixture (F/A), there must be no intake air leaks in the DFI system. Be sure to install the oil filler plug [A] after filling the engine oil.



# 3-28 FUEL SYSTEM (DFI)

## Troubleshooting the DFI System


### Outline

When a problem occurs with DFI system, the yellow engine warning indicator light (LED) [A] stays on after starting the engine to alert the rider.

With the engine stopped and turned in the self-diagnosis mode, the service code [A] is displayed on the LCD by the number of two digits.

If the problem is with the following parts, the ECU can not recognize these problem. Therefore, the yellow engine warning indicator light (LED) does not go on, and service code is not displayed.


- Fuel Pump
- Fuel Pump Relay
- ECU Main Relay

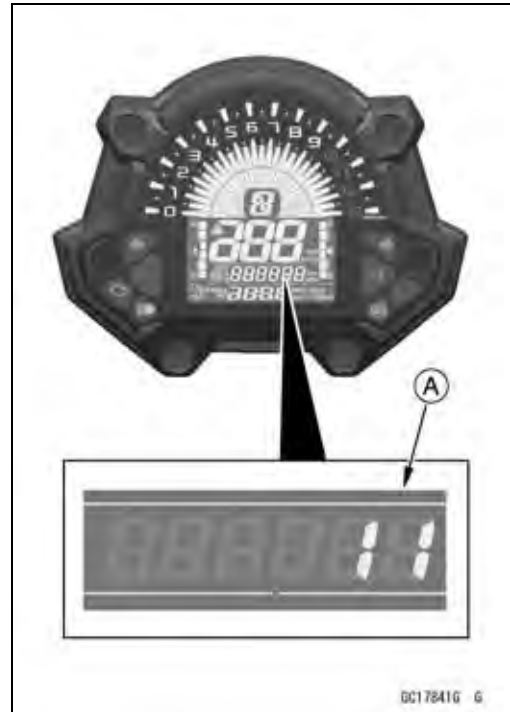

When the service code [A] is displayed, for first ask the rider about the conditions [B] of trouble, and then start to determine the cause [C] of problem.

As a pre-diagnosis inspection, check the ECU for ground and power supply, the fuel line for no fuel leaks, and for correct pressure. The pre-diagnosis items are not indicated by the yellow engine warning indicator light (LED).

Don't rely solely on the DFI self-diagnosis function, use common sense.

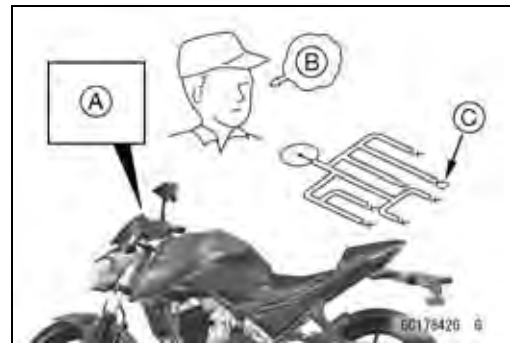

## Troubleshooting the DFI System

Even when the DFI system is operating normally, the yellow engine warning indicator light (LED) goes on may be displayed under strong electrical interference. Additional measures are not required. Turn the ignition switch off to stop the indicator light.

If the yellow engine warning indicator light (LED) of the motorcycle brought in for repair still goes on, check the service code.

When the repair has been done, the yellow engine warning indicator light (LED) goes off after the service code erasing procedure (see Service Code Erasing) is done.

When the motorcycle is down, the vehicle-down sensor operates and the ECU shuts off the fuel pump relay, fuel injectors and ignition system. The ignition switch is left on. If the starter button is pushed, the electric starter turns but the engine does not start. To start the engine again, raise the motorcycle, turn the ignition switch off, and then on.

Much of the DFI system troubleshooting work consists of confirming continuity of the wiring. The DFI parts are assembled and adjusted with precision, and it is impossible to disassemble or repair them.

- When checking the DFI parts, use a digital meter which can be read two decimal place voltage or resistance.
- The DFI part connectors [A] have seals [B], including the ECU. When measuring the input or output voltage with the connector joined, use the needle adapter set [C]. Insert the needle adapter inside the seal until the needle adapter reaches the terminal.

**Special Tool - Needle Adapter Set: 57001-1457**


### NOTICE

**Insert the needle adapter straight along the terminal in the connector to prevent short-circuit between terminals.**

- Make sure that measuring points are correct in the connector, noting the position of the lock [D] and the lead color before measurement. Do not reverse connections of a digital meter.
- Be careful not to short-circuit the leads of the DFI or electrical system parts by contact between adapters.
- Turn the ignition switch on and measure the voltage with the connector joined.

### NOTICE

**Incorrect, reverse connection or short circuit by needle adapters could damage the DFI or electrical system parts.**

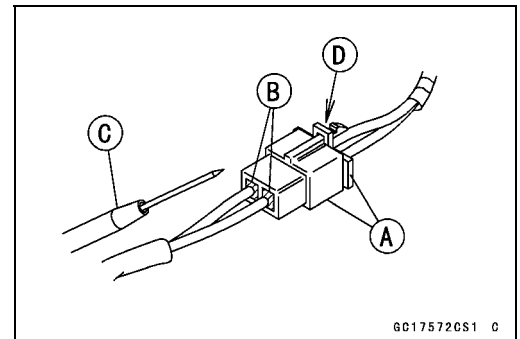


GG17572GS1 C

## 3-30 FUEL SYSTEM (DFI)


### Troubleshooting the DFI System

○After measurement, remove the needle adapters and apply silicone sealant to the seals [A] of the connector [B] for waterproofing.


**Sealant - Liquid Gasket, TB1211: 56019-120**

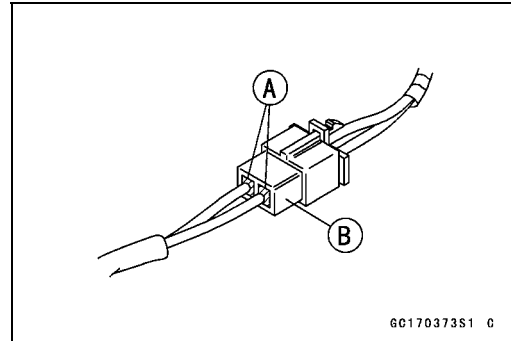

- Always check battery condition before replacing the DFI parts. A fully charged battery is a must for conducting accurate tests of the DFI system.
- Trouble may involve one or in some cases all items. Never replace a defective part without determining what CAUSED the problem. If the problem was caused by some other item or items, they too must be repaired or replaced, or the new replacement part will soon fail again.
- Measure the coil winding resistance when the DFI part is cold (at room temperature).
- Make sure all connectors in the circuit are clean and tight, and examine leads for signs of burning, fraying, short, etc. Deteriorated leads and bad connections can cause reappearance of problems and unstable operation of the DFI system.
- ★ If any wiring is deteriorated, replace the wiring.
- Pull each connector [A] apart and inspect it for corrosion, dirt, and damage.
- ★ If the connector is corroded or dirty, clean it carefully. If it is damaged, replace it. Connect the connectors securely.
- Check the wiring for continuity.
- Use the wiring diagram to find the ends of the lead which is suspected of being a problem.
- Connect a tester between the ends of the leads.
- ★ If the tester does not read about 0  $\Omega$ , the lead is defective. Replace the lead or the main harness.

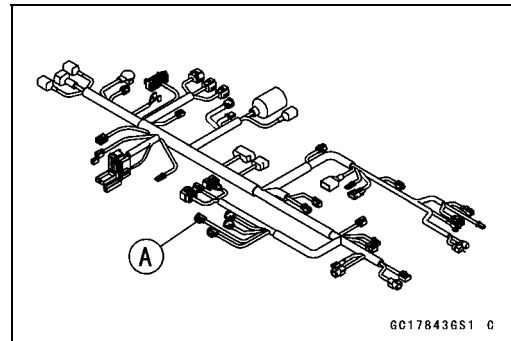


○ If both ends of a harness [A] are far apart, ground [B] the one end [C], using a jumper lead [D] and check the continuity between the end [E] and the ground [F]. This enables to check a long harness for continuity. If the harness is open, repair or replace the harness.

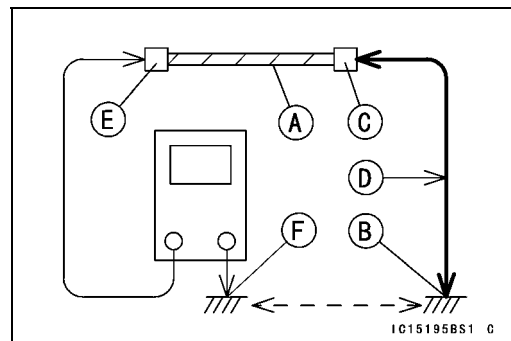

## Troubleshooting the DFI System

○When checking a harness [A] for short circuit, open one end [B] and check the continuity between the other end [C] and ground [D]. If there is continuity, the harness has a short circuit to ground, and it must be repaired or replaced.

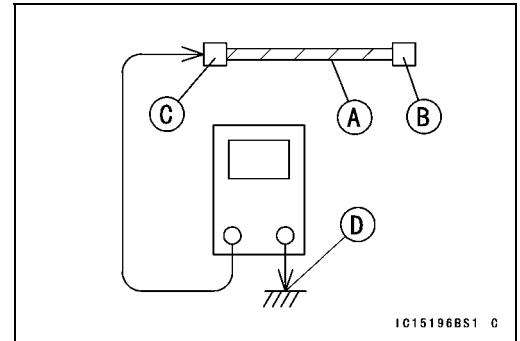


- Narrow down suspicious locations by repeating the continuity tests from the ECU connectors.
- ★ If no abnormality is found in the wiring or connectors, the DFI parts are the next likely suspects. Check the part, starting with input and output voltages. However, there is no way to check the ECU itself.
- ★ If an abnormality is found, replace the affected DFI part.
- ★ If no abnormality is found in the wiring, connectors, and DFI parts, replace the ECU.

## 3-32 FUEL SYSTEM (DFI)

### Troubleshooting the DFI System

#### DFI Diagnosis Flow Chart

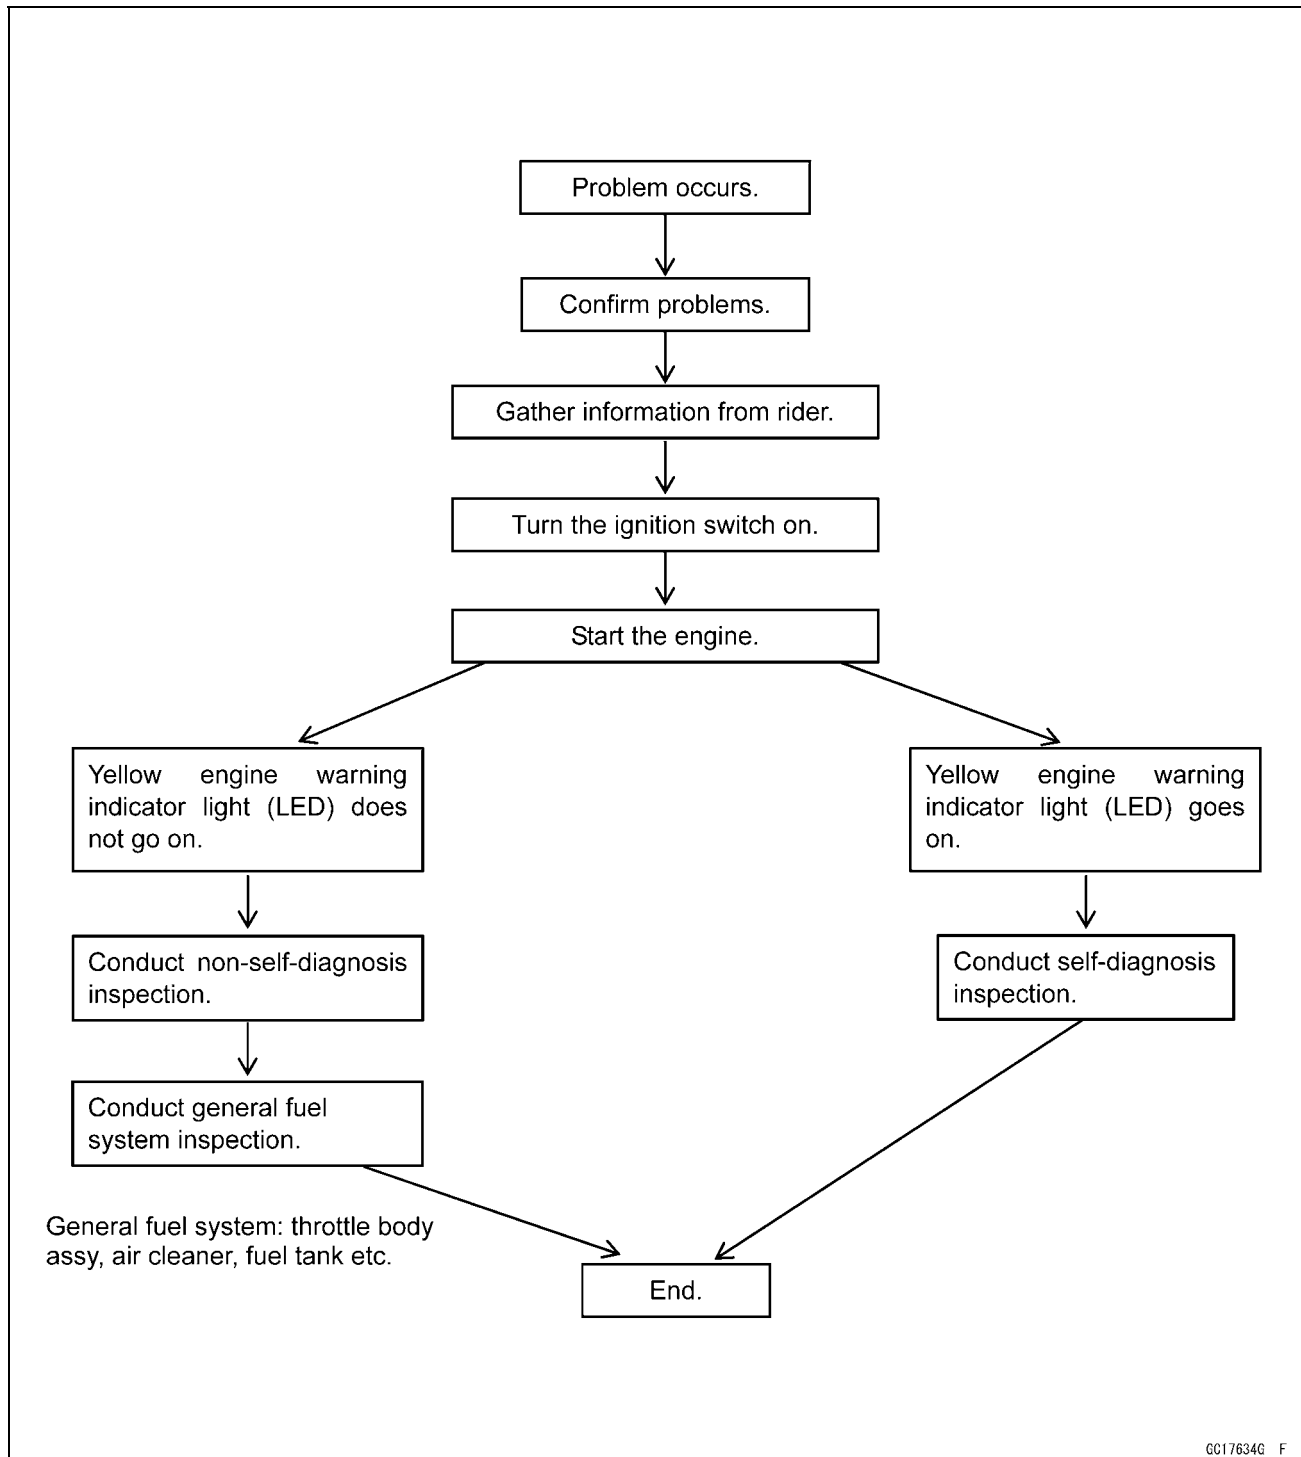

#### Inquiries to Rider

- Each rider reacts to problems in different ways, so it is important to confirm what kind of symptoms the rider has encountered.
- Try to find out exactly what problem occurred under exactly what conditions by asking the rider; knowing this information may help you reproduce the problem.
- The following sample diagnosis sheet will help prevent you from overlooking any areas, and will help you decide if it is a DFI system problem, or a general engine problem.

Troubleshooting the DFI System

Sample Diagnosis Sheet

Rider name:	Registration No. (license plate No.):	Year of initial registration:
Model:	Engine No.:	Frame No.:
Date problem occurred:		Mileage:
<b>Environment when problem occurred.</b>		
Weather	<input type="checkbox"/> fine, <input type="checkbox"/> cloudy, <input type="checkbox"/> rain, <input type="checkbox"/> snow, <input type="checkbox"/> always, <input type="checkbox"/> other:	
Temperature	<input type="checkbox"/> hot, <input type="checkbox"/> warm, <input type="checkbox"/> cold, <input type="checkbox"/> very cold, <input type="checkbox"/> always, <input type="checkbox"/> other:	
Problem frequency	<input type="checkbox"/> chronic, <input type="checkbox"/> often, <input type="checkbox"/> once	
Road	<input type="checkbox"/> street, <input type="checkbox"/> highway, <input type="checkbox"/> mountain road ( <input type="checkbox"/> uphill, <input type="checkbox"/> downhill), <input type="checkbox"/> bumpy, <input type="checkbox"/> pebble	
Altitude	<input type="checkbox"/> normal, <input type="checkbox"/> high (about 1 000 m or more)	
<b>Motorcycle conditions when problem occurred.</b>		
Yellow engine warning indicator light (LED)	<input type="checkbox"/> goes on immediately after turning the ignition switch on, and goes off after starting the engine (normal)	
	<input type="checkbox"/> goes on immediately after turning the ignition switch on, and stays on after starting the engine (DFI problem)	
	<input type="checkbox"/> does not go on after turning the ignition switch on (indicator light (LED), meter unit fault)	
Red warning indicator light (LED)	<input type="checkbox"/> Does not go on about 1 second after ignition switch on (ECU or meter unit fault).	
	<input type="checkbox"/> light up (battery, oil pressure, water temperature or meter unit problem)	
Starting difficulty	<input type="checkbox"/> starter motor not rotating.	
	<input type="checkbox"/> starter motor rotating but engine do not turn over.	
	<input type="checkbox"/> starter motor and engine do not turn over.	
	<input type="checkbox"/> no fuel flow ( <input type="checkbox"/> no fuel in tank, <input type="checkbox"/> no fuel pump sound).	
	<input type="checkbox"/> no spark.	
	<input type="checkbox"/> other:	
Engine stalls	<input type="checkbox"/> right after starting.	
	<input type="checkbox"/> when opening throttle grip.	
	<input type="checkbox"/> when closing throttle grip.	
	<input type="checkbox"/> when moving off.	
	<input type="checkbox"/> when stopping the motorcycle.	
	<input type="checkbox"/> when cruising.	
	<input type="checkbox"/> other:	
Poor running at low speed	<input type="checkbox"/> very low idle speed, <input type="checkbox"/> very high idle speed, <input type="checkbox"/> rough idle speed.	
	<input type="checkbox"/> battery voltage is low (charge the battery).	
	<input type="checkbox"/> spark plug loose (tighten it).	
	<input type="checkbox"/> spark plug dirty or broken.	
	<input type="checkbox"/> backfiring.	
	<input type="checkbox"/> afterfiring.	
	<input type="checkbox"/> hesitation when acceleration.	
	<input type="checkbox"/> engine oil viscosity too high.	
	<input type="checkbox"/> brake dragging.	
	<input type="checkbox"/> engine overheating.	
	<input type="checkbox"/> clutch slipping.	
	<input type="checkbox"/> other:	

### 3-34 FUEL SYSTEM (DFI)

#### Troubleshooting the DFI System

Poor running or no power at high speed	<input type="checkbox"/> spark plug loose (tighten it).
	<input type="checkbox"/> spark plug dirty or broken.
	<input type="checkbox"/> spark plug incorrect (replace it).
	<input type="checkbox"/> knocking (fuel poor quality or incorrect).
	<input type="checkbox"/> brake dragging.
	<input type="checkbox"/> clutch slipping.
	<input type="checkbox"/> engine overheating.
	<input type="checkbox"/> engine oil level too high.
	<input type="checkbox"/> engine oil viscosity too high.
	<input type="checkbox"/> other:



**DFI System Troubleshooting Guide**

**NOTE**

- This is not an exhaustive list, giving every possible cause for each problem listed. It is meant simply as a rough guide to assist the troubleshooting for some of the more common difficulties in DFI system.
- The ECU may be involved in the DFI electrical and ignition system troubles. If these parts and circuits are checked out good, be sure to check the ECU for ground and power supply. If the ground and power supply are checked good, replace the ECU.

**Engine Won't Turn Over**

Symptoms or Possible Causes	Actions (chapter)
Gear position sensor, starter lockout or side stand switch trouble	Inspect each sensor or switch (see chapter 3 or 16).
Vehicle-down sensor operated	Turn ignition switch off (see chapter 3).
Vehicle-down sensor trouble	Inspect (see chapter 3).
Crankshaft sensor trouble	Inspect (see chapter 16).
Stick coil shorted or not in good contact	Inspect or reinstall (see chapter 16).
Stick coil trouble	Inspect (see chapter 16).
Spark plug dirty, broken or gap maladjusted	Inspect and replace (see chapter 16).
Spark plug incorrect	Replace it with the correct plug (see chapter 2).
ECU ground and power supply trouble	Inspect (see chapter 3).
ECU trouble	Inspect (see chapter 3).
No or little fuel in tank	Supply fuel (see Owner's Manual).
Fuel injector trouble	Inspect and replace (see chapter 3).
Fuel pump not operating	Inspect (see chapter 3).
Fuel pump relay trouble	Inspect and replace (see chapter 16).
Fuel filter clogged	Replace fuel filter (see chapter 2).
Fuel pressure regulator trouble	Inspect fuel pressure and replace fuel pump (see chapter 3).
Fuel line clogged	Inspect and repair (see chapter 3).

**Poor Running at Low Speed**

Symptoms or Possible Causes	Actions (chapter)
<b>Spark weak:</b>	
Stick coil shorted or not in good contact	Inspect or reinstall (see chapter 16).
Stick coil trouble	Inspect (see chapter 16).
Spark plug dirty, broken or gap maladjusted	Inspect and replace (see chapter 16).
Spark plug incorrect	Replace it with the correct plug (see chapter 2).
ECU trouble	Inspect (see chapter 3).
<b>Fuel/air mixture incorrect:</b>	
Little fuel in tank	Supply fuel (see Owner's Manual).
Air cleaner clogged, poorly sealed, or missing	Clean element or inspect sealing (see chapter 2).
Air duct loose	Reinstall (see chapter 3).
Throttle body assy holder loose	Reinstall (see chapter 3).
Throttle body assy dust seal damage	Replace (see chapter 3).
Fuel injector O-ring damage	Replace (see chapter 3).
Fuel filter clogged	Replace fuel filter (see chapter 2).

## 3-36 FUEL SYSTEM (DFI)

### DFI System Troubleshooting Guide

Symptoms or Possible Causes	Actions (chapter)
Fuel pressure regulator trouble	Inspect fuel pressure and replace fuel pump (see chapter 3).
Fuel line clogged	Inspect and repair (see chapter 3).
Intake air pressure sensor trouble	Inspect (see chapter 3).
Water temperature sensor trouble	Inspect (see chapter 3).
Intake air temperature sensor trouble	Inspect (see chapter 3).
Main throttle sensor trouble	Inspect (see chapter 3).
Subthrottle sensor trouble	Inspect (see chapter 3).
Subthrottle valve actuator trouble	Inspect (see chapter 3).
<b>Unstable (rough) idling:</b>	
Fuel pressure too low or too high	Inspect (see chapter 3).
Fuel injector trouble	Inspect (see chapter 3).
Main throttle sensor trouble	Inspect (see chapter 3).
Subthrottle sensor trouble	Inspect (see chapter 3).
Subthrottle valve actuator trouble	Inspect (see chapter 3).
Engine vacuum not synchronizing	Inspect and adjust (see chapter 2).
Intake air pressure sensor trouble	Inspect (see chapter 3).
Water temperature sensor trouble	Inspect (see chapter 3).
Intake air temperature sensor trouble	Inspect (see chapter 3).
<b>Engine stalls easily:</b>	
Spark plug dirty, broken or gap maladjusted	Inspect and replace (see chapter 16).
Stick coil trouble	Inspect (see chapter 16).
Main throttle sensor trouble	Inspect (see chapter 3).
Subthrottle sensor trouble	Inspect (see chapter 3).
Subthrottle valve actuator trouble	Inspect (see chapter 3).
Intake air pressure sensor trouble	Inspect (see chapter 3).
Water temperature sensor trouble	Inspect (see chapter 3).
Intake air temperature sensor trouble	Inspect (see chapter 3).
Fuel pump trouble	Inspect (see chapter 3).
Fuel injector trouble	Inspect (see chapter 3).
Fuel pressure too low or too high	Inspect (see chapter 3).
Fuel pressure regulator trouble	Inspect fuel pressure and replace fuel pump (see chapter 3).
Fuel line clogged	Inspect and repair (see chapter 3).
<b>Poor acceleration:</b>	
Fuel pressure too low	Inspect (see chapter 3).
Water or foreign matter in fuel	Change fuel. Inspect and clean fuel system (see chapter 3).
Fuel filter clogged	Replace fuel filter (see chapter 2).
Fuel pump trouble	Inspect (see chapter 3).
Fuel injector trouble	Inspect (see chapter 3).
Main throttle sensor trouble	Inspect (see chapter 3).
Subthrottle sensor trouble	Inspect (see chapter 3).
Subthrottle valve actuator trouble	Inspect (see chapter 3).
Intake air pressure sensor trouble	Inspect (see chapter 3).

**DFI System Troubleshooting Guide**

Symptoms or Possible Causes	Actions (chapter)
Water temperature sensor trouble	Inspect (see chapter 3).
Intake air temperature sensor trouble	Inspect (see chapter 3).
Spark plug dirty, broken or gap maladjusted	Inspect and replace (see chapter 16).
Stick coil trouble	Inspect (see chapter 16).
<b>Stumble:</b>	
Fuel pressure too low	Inspect (see chapter 3).
Fuel injector trouble	Inspect (see chapter 3).
Main throttle sensor trouble	Inspect (see chapter 3).
Subthrottle sensor trouble	Inspect (see chapter 3).
Subthrottle valve actuator trouble	Inspect (see chapter 3).
Intake air pressure sensor trouble	Inspect (see chapter 3).
Water temperature sensor trouble	Inspect (see chapter 3).
Intake air temperature sensor trouble	Inspect (see chapter 3).
<b>Surge:</b>	
Unstable fuel pressure	Fuel pressure regulator trouble (Inspect and replace fuel pump) or kinked fuel line (Inspect and replace fuel line) (see chapter 3).
Fuel injector trouble	Inspect (see chapter 3).
Water temperature sensor trouble	Inspect (see chapter 3).
<b>Backfiring when deceleration:</b>	
Spark plug dirty, broken or gap maladjusted	Inspect and replace (see chapter 16).
Fuel pressure too low	Inspect (see chapter 3).
Fuel pump trouble	Inspect (see chapter 3).
Main throttle sensor trouble	Inspect (see chapter 3).
Subthrottle sensor trouble	Inspect (see chapter 3).
Subthrottle valve actuator trouble	Inspect (see chapter 3).
Intake air pressure sensor trouble	Inspect (see chapter 3).
Water temperature sensor trouble	Inspect (see chapter 3).
Intake air temperature sensor trouble	Inspect (see chapter 3).
Air switching valve trouble	Inspect and replace (see chapter 16).
Air suction valve trouble	Inspect and replace (see chapter 5).
<b>After fire:</b>	
Spark plug burned or gap maladjusted	Replace (see chapter 2).
Fuel injector trouble	Inspect (see chapter 3).
Intake air pressure sensor trouble	Inspect (see chapter 3).
Water temperature sensor trouble	Inspect (see chapter 3).
Intake air temperature sensor trouble	Inspect (see chapter 3).
<b>Other:</b>	
Intermittent any DFI fault and its recovery	Check that DFI connectors are clean and tight, and examine leads for signs of burning or fraying (see chapter 3).

## 3-38 FUEL SYSTEM (DFI)

### DFI System Troubleshooting Guide

#### Poor Running or No Power at High Speed

Symptoms or Possible Causes	Actions (chapter)
<b>Firing incorrect:</b>	
Stick coil shorted or not in good contact	Inspect or reinstall (see chapter 16).
Stick coil trouble	Inspect (see chapter 16).
Spark plug dirty, broken or gap maladjusted	Inspect and replace (see chapter 16).
Spark plug incorrect	Replace it with the correct plug (see chapter 2).
ECU trouble	Inspect (see chapter 3).
<b>Fuel/air mixture incorrect:</b>	
Air cleaner clogged, poorly sealed, or missing	Clean element or inspect sealing (see chapter 2).
Air duct loose	Reinstall (see chapter 3).
Throttle body assy holder loose	Reinstall (see chapter 3).
Throttle body assy dust seal damage	Replace (see chapter 3).
Water or foreign matter in fuel	Change fuel. Inspect and clean fuel system (see chapter 3).
Fuel injector O-ring damage	Replace (see chapter 3).
Fuel injector clogged	Inspect and repair (see chapter 3).
Fuel line clogged	Inspect and repair (see chapter 3).
Fuel pump operates intermittently and often DFI fuse blows.	Fuel pump bearings may wear. Replace the fuel pump (see chapter 3).
Fuel pump trouble	Inspect (see chapter 3).
Intake air pressure sensor trouble	Inspect (see chapter 3).
Cracked or obstructed intake air pressure sensor vacuum hose	Inspect and repair or replace (see chapter 3).
Water temperature sensor trouble	Inspect (see chapter 3).
Intake air temperature sensor trouble	Inspect (see chapter 3).
Main throttle sensor trouble	Inspect (see chapter 3).
Subthrottle sensor trouble	Inspect (see chapter 3).
Subthrottle valve actuator trouble	Inspect (see chapter 3).
<b>Knocking:</b>	
Fuel poor quality or incorrect	Fuel change (Use the gasoline recommended in the Owner's Manual).
Spark plug incorrect	Replace it with the correct plug (see chapter 2).
Stick coil trouble	Inspect (see chapter 16).
ECU trouble	Inspect (see chapter 3).
Engine vacuum not synchronizing	Inspect and adjust (see chapter 2).
Intake air pressure sensor trouble	Inspect (see chapter 3).
Water temperature sensor trouble	Inspect (see chapter 3).
Intake air temperature sensor trouble	Inspect (see chapter 3).
<b>Miscellaneous:</b>	
Subthrottle sensor trouble	Inspect (see chapter 3).
Subthrottle valve actuator trouble	Inspect (see chapter 3).
Throttle valves will not fully open	Inspect throttle cables and lever linkage (see chapter 3).
Engine overheating - Water temperature sensor or crankshaft sensor trouble	(see Overheating of Troubleshooting Guide in chapter 17)

**DFI System Troubleshooting Guide**

<b>Symptoms or Possible Causes</b>	<b>Actions (chapter)</b>
Air switching valve trouble	Inspect and replace (see chapter 16).
Air suction valve trouble	Inspect and replace (see chapter 5).
<b>Exhaust Smokes Excessively:</b>	
<b>(Black smoke)</b>	
Air cleaner element clogged	Clean element (see chapter 2).
Fuel pressure too high	Inspect (see chapter 3).
Fuel injector trouble	Inspect (see chapter 3).
Water temperature sensor trouble	Inspect (see chapter 3).
Intake air temperature sensor trouble	Inspect (see chapter 3).
<b>(Brown smoke)</b>	
Air duct loose	Reinstall (see chapter 3).
Fuel pressure too low	Inspect (see chapter 3).
Water temperature sensor trouble	Inspect (see chapter 3).
Intake air temperature sensor trouble	Inspect (see chapter 3).

# 3-40 FUEL SYSTEM (DFI)

## Self-Diagnosis

### Self-Diagnosis Outline

The self-diagnosis system is monitoring the following mechanisms.

DFI System and Ignition System

The following warning indicator lights (LED) are used for warning indicators of below table.

LED Color	Warning Indicators
Red [A]	Oil Pressure Battery Water Temperature
Yellow [B]	FI

The self-diagnosis system has two modes and can be switched to another mode by operating the meter unit.

### User Mode

The ECU notifies the rider of troubles in DFI system and ignition system by lighting or blinking the yellow engine warning indicator light (LED) [A] when DFI and ignition system parts are faulty, and initiates fail-safe function. In case of serious troubles, ECU stops the injection and ignition operations.

### Dealer Mode

The LCD displays the service code(s) [A] to show the problem(s) which the above system has at the moment of diagnosis.

### Self-Diagnosis Procedures

#### NOTE

- Use a fully charged battery when conducting self-diagnosis. Otherwise, the warning indicator light (LED) and indicator do not light or blink.
- Turn the ignition switch on and start the engine.
- When a problem occurs with DFI system and ignition system, the yellow engine warning indicator light (LED) [A] stays on after starting the engine to alert the rider.




### Self-Diagnosis

- Push the left meter button [A] to display the odometer.



- Push the left [A] and right [B] meter buttons for more than two seconds.
- The service code [C] is displayed on the LCD by the number of two digits.

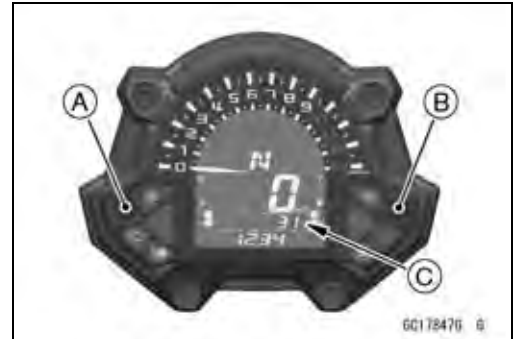


- Any of the following procedures ends self-diagnosis.
  - When the service code is displayed on the LCD, push the left and right meter buttons for more than two seconds. The display will return to the previous display.
  - When the ignition switch is turned off.

## 3-42 FUEL SYSTEM (DFI)

### Self-Diagnosis

#### Self-Diagnosis Flow Chart

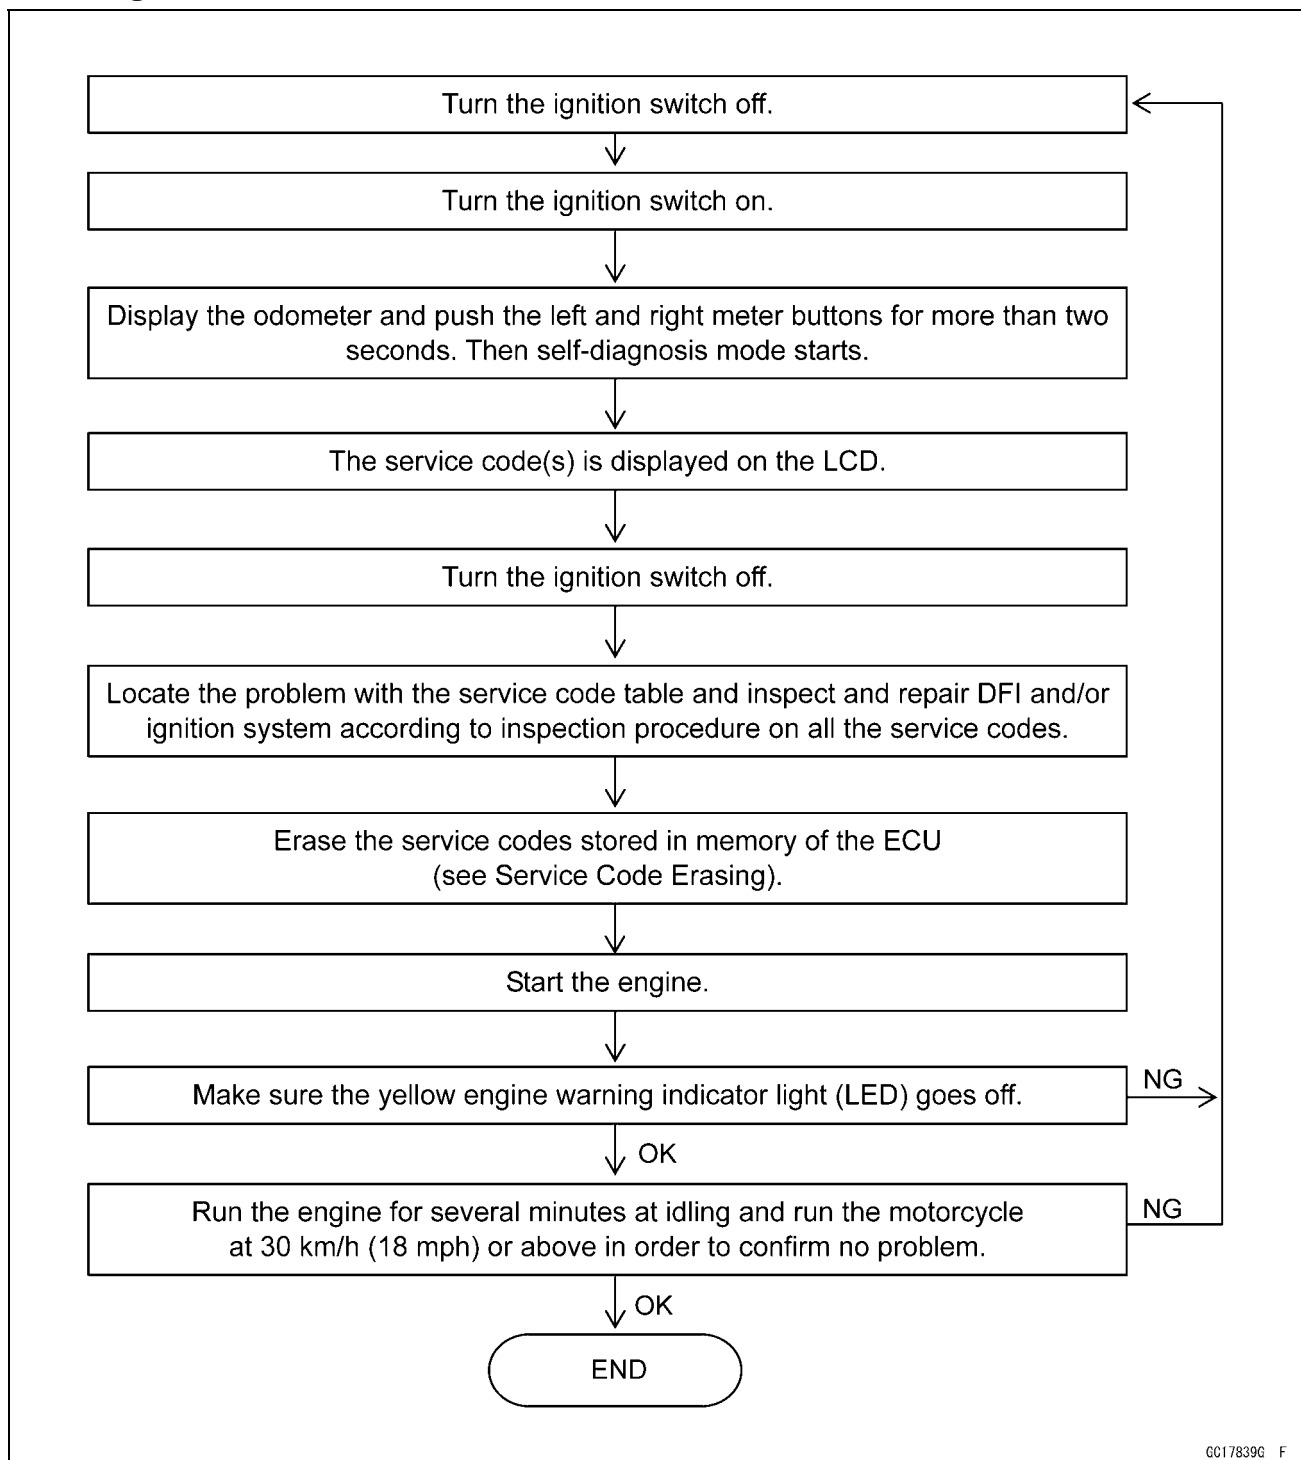




**Self-Diagnosis**

**Service Code Reading**

- The service code(s) is displayed on the LCD by the number of two digits.
- When there are a number of problems, all the service codes can be stored and the display will begin starting from the lowest number service code in the numerical order.
- Then after completing all codes, the display is repeated until the ignition switch is turned off or left and right meter buttons are pushed for more than two seconds.
- For example, if three problems occurred in the order of 56, 11, 24, the service codes are displayed (each two seconds) from the lowest number in the order listed as shown. (11→24→56)→(11→24→56)→. . .(repeated)

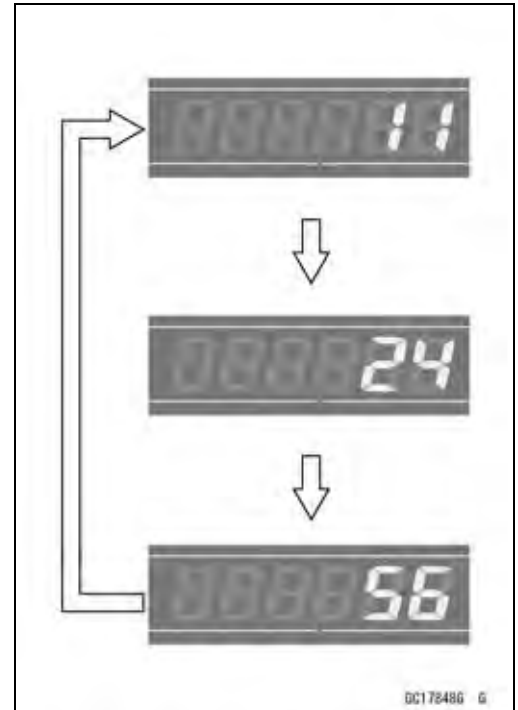

**Service Code Erasing**

- The service codes stored in memory of the ECU can be erased using Kawasaki Diagnostic System (KDS Ver.3).
- ★If the Kawasaki Diagnostic System (KDS Ver.3) is not available, do the following procedures.
  1. Turn on the ignition switch and start the engine.
  2. Keep the idling speed more than 30 seconds.
  3. Run the vehicle more than 5 minutes at a speed of 40 km/h (25 mph) or more.  
Be sure to keep the engine running during procedures 2 and 3 for more than 10 minutes in total.
  4. Turn the ignition switch off.
  5. Repeat the above procedures 3 times.
  6. Start the engine and check that the yellow engine warning indicator light (LED) goes off.

**Service Code Table**

Service Codes	DTC (Diagnostic Trouble Code)	Problems
11	P0120	Main throttle sensor malfunction, wiring open or short
	P0123	
12	P0105	Intake air pressure sensor malfunction, wiring open or short
	P0106	
	P0107	
13	P0110	Intake air temperature sensor malfunction, wiring open or short
	P0112	
14	P0115	Water temperature sensor malfunction, wiring open or short
	P0117	
21	P0335	Crankshaft sensor malfunction, wiring open or short
24	P2158	Rear wheel rotation sensor malfunction, wiring open or short
25	P0914	Gear position sensor malfunction, wiring open or short
	P0915	
	P0917	
31	C0064	Vehicle-down sensor malfunction, wiring open or short

## 3-44 FUEL SYSTEM (DFI)

### Self-Diagnosis

Service Codes	DTC (Diagnostic Trouble Code)	Problems
32	P0220	Subthrottle sensor malfunction, wiring open or short
	P0223	
33	P0130	Oxygen sensor malfunction or inactivate, wiring open or short
	P0132	
39	—	ECU communication error
41	P0201	Fuel injector #1 malfunction, wiring open or short
42	P0202	Fuel injector #2 malfunction, wiring open or short
51	P0351	Stick coil #1 malfunction, wiring open or short
52	P0352	Stick coil #2 malfunction, wiring open or short
56	P0480	Radiator fan relay malfunction, wiring open or short
62	P2100	Subthrottle valve actuator malfunction, wiring open or short
64	P0410	Air switching valve malfunction, wiring open or short
67	P0030	Oxygen sensor heater malfunction, wiring open or short
94	P0170	Fuel supply system malfunction
3A	P0443	Purge valve malfunction, wiring open or short (Equipped Models)

#### Notes:

- The ECU may be involved in these problems. If all the parts and circuits checked out good, be sure to check the ECU for ground and power supply. If the ground and power supply are checked good, replace the ECU.
- When no service code is displayed, the electrical parts of the DFI system has no fault, and the mechanical parts of the DFI system and the engine are suspect.
- DTC (Diagnostic Trouble Code) is displayed on the Kawasaki Diagnostic System (KDS Ver.3) and the Generic Scan Tool (GST).

#### Backups

- The ECU takes the following measures to prevent engine damage when the DFI or ignition system parts have troubles.

Service Codes	Parts or Function	Output Signal Usable Range or Criteria	Backups by ECU
11	Main Throttle Sensor	Output Voltage 0.2 ~ 4.8 V	If the main throttle sensor system fails (the output voltage is out of the usable range, wiring short or open), the ECU locks ignition timing into the ignition timing at closed throttle position and sets the DFI in the D-J method (1). Also, the main throttle sensor system and intake air pressure fails, the ECU locks ignition timing into the ignition timing at closed throttle position and sets the DFI in the $\alpha$ -N method (2).
12	Intake Air Pressure Sensor	Intake Air Pressure (absolute) $P_v = 150 \sim 800$ mmHg	If the intake air pressure sensor system fails (the signal is out of the usable range, wiring short or open), the ECU sets the DFI in the $\alpha$ -N method.
13	Intake Air Temperature Sensor	Intake Air Temperature $T_a = -30 \sim +120^\circ\text{C}$	If the intake air temperature sensor fails (the signal is out of the usable range, wiring short or open), the ECU sets $T_a$ at $40^\circ\text{C}$ .

Self-Diagnosis

Service Codes	Parts or Function	Output Signal Usable Range or Criteria	Backups by ECU
14	Water Temperature Sensor	Water Temperature $T_w = -30 \sim +120^{\circ}\text{C}$	If the water temperature sensor system fails (the signal is out of the usable range, wiring short or open), the ECU sets $T_w$ at $80^{\circ}\text{C}$ .
21	Crankshaft Sensor	Crankshaft sensor must send 22 signals to the ECU at the one cranking.	If the crankshaft sensor generates other than 22 signals, the engine stops by itself.
24	Rear Wheel Rotation Sensor	Rear wheel rotation sensor must send 50 signals to the ECU at the 1 rotation of the wheel.	—
25	Gear Position Sensor	Output Voltage $0.2 \sim 4.8 \text{ V}$	If the gear position sensor system fails (no signal, wiring short or open), the ECU set the top (6th) gear position.
31	Vehicle-down Sensor	Output Voltage $V_d = 0.1 \sim 4.8 \text{ V}$	If the vehicle-down sensor system has failures (the output voltage $V_d$ is more than usable range, wiring open), the ECU shuts off the fuel pump relay, the fuel injectors and the ignition system.
32	Subthrottle Sensor	Output Voltage $0.15 \sim 4.85 \text{ V}$	If the subthrottle sensor system fails (the signal is out of the usable range, wiring short or open), the ECU drive the subthrottle valve to the full closed position, and it stops the current to the actuator.
33	Oxygen Sensor	The oxygen sensor is active and sensor must send signals (output voltage) continuously to the ECU.	If the oxygen sensor is not activated, the ECU stops oxygen sensor feedback mode.
39	ECU	The ECU sends the data (for service code) to the meter unit.	—
41	Fuel Injector #1*	The injector must send signals continuously to the ECU.	If the injector #1 fails (no signal, wiring short or open), the ECU shuts off the signal to the injector. Fuel is not supplied to the cylinder #1, though the engine keeps running.
42	Fuel Injector #2*	The injector must send signals continuously to the ECU.	If the injector #2 fails (no signal, wiring short or open), the ECU shuts off the signal to the injector. Fuel is not supplied to the cylinder #2, though the engine keeps running.
51	Stick Coil #1*	The ECU must send signals continuously to the stick coil primary winding.	If the stick coil #1 primary winding has failures (no signal, wiring short or open), the ECU shuts off the injector #1 to stop fuel to the cylinder #1, though the engine keeps running.
52	Stick Coil #2*	The ECU must send signals continuously to the stick coil primary winding.	If the stick coil #2 primary winding has failures (no signal, wiring short or open), the ECU shuts off the injector #2 to stop fuel to the cylinder #2, though the engine keeps running.
56	Radiator Fan Relay	When the radiator fan relay is OFF, the relay is opened.	—

## 3-46 FUEL SYSTEM (DFI)

### Self-Diagnosis

Service Codes	Parts or Function	Output Signal Usable Range or Criteria	Backups by ECU
62	Subthrottle Valve Actuator	The actuator operates open and close of the subthrottle valve by the pulse signal from the ECU.	If the subthrottle valve actuator fails (the signal is out of the usable range, wiring short or open), the ECU stops the current to the actuator.
64	Air Switching Valve	The air switching valve controls the flow of the secondary air by opening and shutting the solenoid valve.	–
67	Oxygen Sensor Heater	The oxygen sensor heater raise temperature of the sensor for its earlier activation.	If the oxygen sensor heater fails (wiring short or open), the ECU stops the current to the heater.
94	Fuel Supply System	Fuel correction value exceeds a threshold.	–
3A	Purge Valve (Equipped Models)	The purge valve controls the flow of the purge air for the canister and shutting the solenoid valve.	–


#### Note:

- (1): D-J Method: When the engine load is light like at idling or low speed, the ECU determines the injection quantity by calculating from the throttle vacuum (intake air pressure sensor output voltage) and engine speed (crankshaft sensor output voltage). This method is called D-J method (low-speed mode).
  - (2):  $\alpha$ -N Method: As the engine speed increases, and the engine load turns middle to heavy, the ECU determines the injection quantity by calculating from the throttle opening (main throttle sensor output voltage) and the engine speed. This method is called  $\alpha$ -N method (high-speed mode).
- (\*): This depends on the number of stopped cylinders.

**Main Throttle Sensor (Service Code 11) (DTC P0120, P0123)**

The main throttle sensor is a rotating variable resistor that change output voltage according to throttle operating. The ECU senses this voltage change and determines fuel injection quantity, and ignition timing according to engine rpm, and throttle opening.

- Input Terminal [A]: BL
- Output Terminal [B]: Y/R
- Ground Terminal [C]: BR/BK

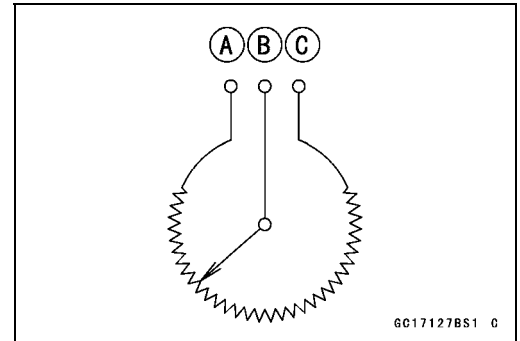

**Main Throttle Sensor Removal/Adjustment**

**NOTICE**

**Do not remove or adjust the main throttle sensor [A] since it has been adjusted and set with precision at the factory.**

**Never drop the throttle body assy especially on a hard surface. Such a shock to the main throttle sensor can damage it.**



**Main Throttle Sensor Input Voltage Inspection**

**NOTE**

○Be sure the battery is fully charged.

- Turn the ignition switch off.
  - Disconnect the main throttle sensor connector and connect the setting adapter [A] between these connectors.
- Special Tool - Throttle Sensor Setting Adapter: 57001-1538**
- Connect a digital meter to the setting adapter leads.



**Main Throttle Sensor Input Voltage**

**Connections to Adapter:**

**Digital Meter (+) → BK (sensor BL) lead**

**Digital Meter (-) → W (sensor BR/BK) lead**

- Measure the input voltage with the engine stopped and with the connector joined.
- Turn the ignition switch on.

**Input Voltage**

**Standard: DC 4.75 ~ 5.25 V**

- Turn the ignition switch off.
- ★ If the reading is within the standard, check the main throttle sensor resistance (see Main Throttle Sensor Resistance Inspection).

## 3-48 FUEL SYSTEM (DFI)

### Main Throttle Sensor (Service Code 11) (DTC P0120, P0123)

★ If the reading is out of the standard, remove the ECU and check the wiring for continuity between main harness connectors.

○ Disconnect the ECU and sensor connectors.

#### Wiring Continuity Inspection

ECU Connector [A] ↔

Main Throttle Sensor Connector [B]

ECU Terminal 10 [C] ↔ Sensor Terminal [D]

ECU Terminal 28 [E] ↔ Sensor Terminal [F]

★ If the wiring is good, check the ECU for its ground and power supply (see ECU Power Supply Inspection).

★ If the ground and power supply are good, replace the ECU (see ECU Removal/Installation).

#### Main Throttle Sensor Resistance Inspection

● Turn the ignition switch off.

● Disconnect the main throttle sensor connector.

● Connect the setting adapter [A] to the sensor connector only.

Special Tool - Throttle Sensor Setting Adapter: 57001-1538

● Measure the main throttle sensor resistance.

#### Main Throttle Sensor Resistance

Connections to Adapter:

BK (sensor BL) lead ↔ W (sensor BR/BK) lead

Standard: 4 ~ 6 kΩ

★ If the reading is out of the standard, replace the throttle body assy (see Throttle Body Assy Removal/Installation).

★ If the reading is within the standard, check the output voltage (see Main Throttle Sensor Output Voltage Inspection).

#### Main Throttle Sensor Output Voltage Inspection

● Measure the output voltage at the main throttle sensor in the same way as input voltage inspection, note the following.

○ Disconnect the main throttle sensor connector and connect the setting adapter [A] between these connectors.

Special Tool - Throttle Sensor Setting Adapter: 57001-1538

#### Main Throttle Sensor Output Voltage

Connections to Adapter:

Digital Meter (+) → R (sensor Y/R) lead


Digital Meter (-) → W (sensor BR/BK) lead

● Start the engine and warm it up thoroughly.

● Check idle speed to ensure the throttle opening is correct (see Idle Speed Inspection in the Periodic Maintenance chapter).

#### Idle Speed

Standard: 1 300 ±50 r/min (rpm)

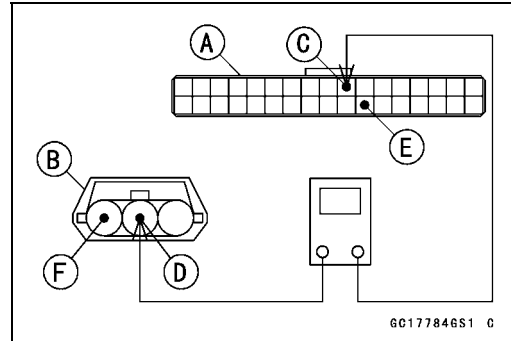

**Main Throttle Sensor (Service Code 11) (DTC P0120, P0123)**

- Turn the ignition switch off.
- Measure the output voltage with the engine stopped and with the connector joined.
- Turn the ignition switch on.

**Output Voltage**

**Standard:** DC 0.99 ~ 1.05 V at idle throttle opening  
 DC 4.11 ~ 4.50 V at full throttle opening (for reference)

**NOTE**

- Open the throttle, confirm the output voltage will be raise.
- The standard voltage refers to the value when the voltage reading at the Input Voltage Inspection shows 5 V exactly.
- When the input voltage reading shows other than 5 V, derive a voltage range as follows.

*Example:*

*In the case of a input voltage of 4.75 V.*

$$0.99 \times 4.75 \div 5.00 = 0.941 \text{ V}$$

$$1.05 \times 4.75 \div 5.00 = 0.998 \text{ V}$$

*Thus, the valid range is 0.941 ~ 0.998 V*

- Turn the ignition switch off.
- ★ If the reading is out of the standard, replace the throttle body assy (see Throttle Body Assy Removal/Installation).
- ★ If the reading is within the standard, replace the ECU and check the wiring for continuity between main harness connectors.
- Disconnect the ECU and sensor connectors.

**Wiring Continuity Inspection**


**ECU Connector [A] ↔**

**Main Throttle Sensor Connector [B]**

**ECU Terminal 7 [C] ↔ Sensor Terminal [D]**

**ECU Terminal 28 [E] ↔ Sensor Terminal [F]**


- ★ If the wiring is good, check the ECU for its ground and power supply (see ECU Power Supply Inspection).
- ★ If the ground and power supply are good, replace the ECU (see ECU Removal/Installation).

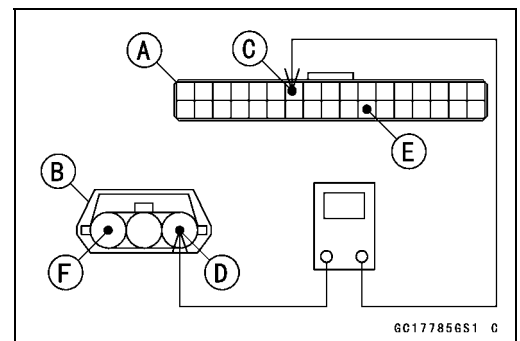

## 3-50 FUEL SYSTEM (DFI)

### Main Throttle Sensor (Service Code 11) (DTC P0120, P0123)

#### Main Throttle Sensor Circuit

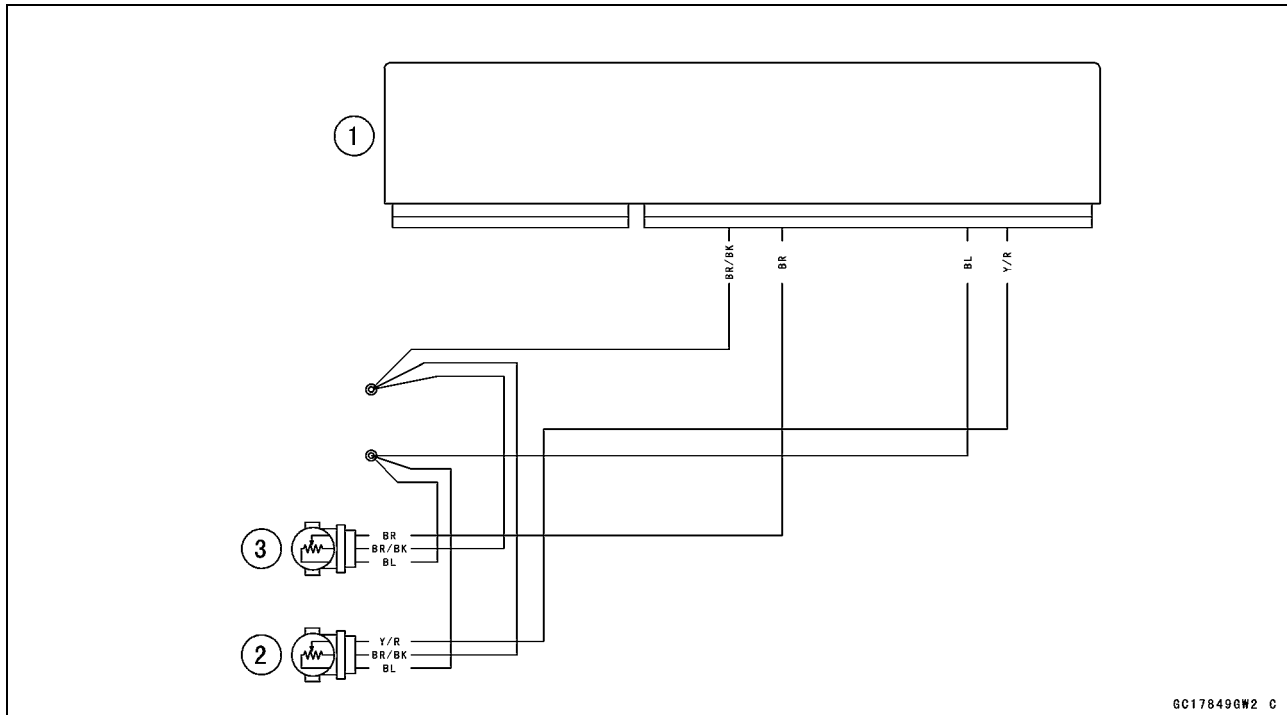

1. ECU
2. Main Throttle Sensor
3. Subthrottle Sensor




### Intake Air Pressure Sensor (Service Code 12) (DTC P0105, P0106, P0107)

#### Intake Air Pressure Sensor Removal

##### NOTICE


Never drop the intake air pressure sensor especially on a hard surface. Such a shock to the sensor can damage it.

- Remove:
  - Left Fuel Tank Side Cover (see Fuel Tank Side Cover Removal in the Frame chapter)
- Disconnect:
  - Intake Air Pressure Sensor Connector [A]
- Remove the intake air pressure sensor [B] from the bracket [C].
- Disconnect the vacuum hose [D].
- Remove the rubber damper [E] from the intake air pressure sensor.

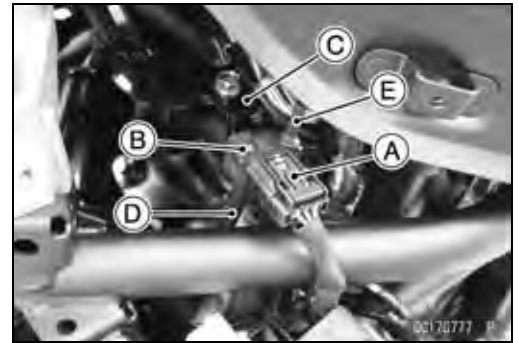


#### Intake Air Pressure Sensor Installation

- Installation is the reverse of removal.
- Position the intake air pressure sensor [A] between the projections [B] on the rubber damper.

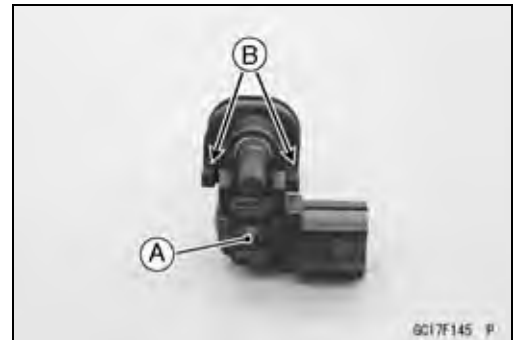

- Install the rubber damper [A] on the bracket [B].

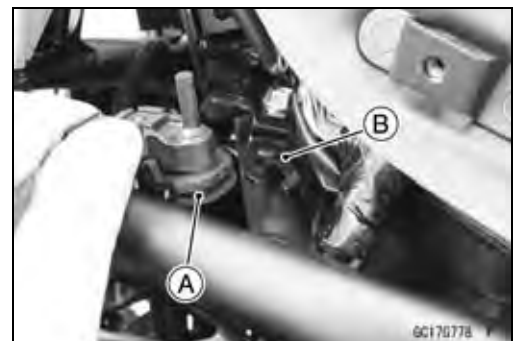

## 3-52 FUEL SYSTEM (DFI)

### Intake Air Pressure Sensor (Service Code 12) (DTC P0105, P0106, P0107)

#### Intake Air Pressure Sensor Input Voltage Inspection

##### NOTE

○Be sure the battery is fully charged.

- Turn the ignition switch off.
- Remove the left fuel tank side cover (see Fuel Tank Side Cover Removal in the Frame chapter).
- Disconnect the intake air pressure sensor connector and connect the measuring adapter [A] between these connectors.

Main Harness [B]

Intake Air Pressure Sensor [C]

##### Special Tool - Measuring Adapter: 57001-1700

- Connect a digital meter [D] to the measuring adapter leads.

##### Intake Air Pressure Sensor Input Voltage Connections to Adapter:

Digital Meter (+) → R (sensor BL) lead

Digital Meter (-) → BK (sensor BR/BK) lead

- Measure the input voltage with the engine stopped and with the connector joined.
- Turn the ignition switch on.

##### Input Voltage

Standard: DC 4.75 ~ 5.25 V

- Turn the ignition switch off.
  - ★ If the reading is within the standard, check the output voltage (see Intake Air Pressure Sensor Output Voltage Inspection).
  - ★ If the reading is out of the standard, remove the ECU and check the wiring for continuity between main harness connectors.
- Disconnect the ECU and sensor connectors.

##### Wiring Continuity Inspection



ECU Connector [A] ↔

Intake Air Pressure Sensor Connector [B]

ECU Terminal 10 [C] ↔ Sensor Terminal [D]

ECU Terminal 28 [E] ↔ Sensor Terminal [F]

- ★ If the wiring is good, check the ECU for its ground and power supply (see ECU Power Supply Inspection).
- ★ If the ground and power supply are good, replace the ECU (see ECU Removal/Installation).

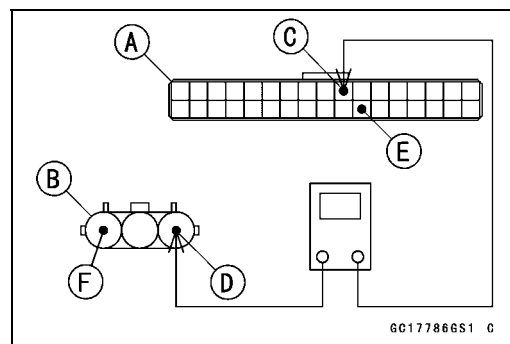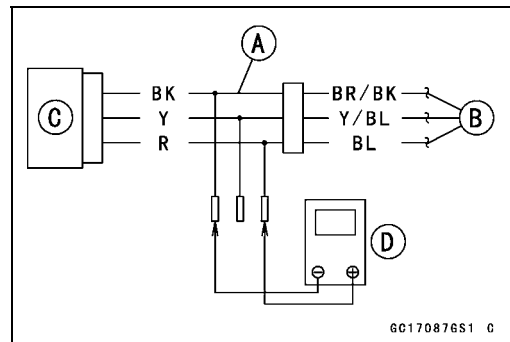

**Intake Air Pressure Sensor (Service Code 12) (DTC P0105, P0106, P0107)**

**Intake Air Pressure Sensor Output Voltage Inspection**

- Measure the output voltage at the intake air pressure sensor in the same way as input voltage inspection, note the following.
- Disconnect the intake air pressure sensor connector and connect the measuring adapter [A] between these connectors.
  - Main Harness [B]
  - Intake Air Pressure Sensor [C]
  - Digital Meter [D]

**Special Tool - Measuring Adapter: 57001-1700**

**Intake Air Pressure Sensor Output Voltage Connections to Adapter:**

- Digital Meter (+) → Y (sensor Y/BL) lead
- Digital Meter (-) → BK (sensor BR/BK) lead

- Measure the output voltage with the engine stopped and with the connector joined.
- Turn the ignition switch on.

**Output Voltage**



**Usable Range:** DC 3.80 ~ 4.20 V at standard atmospheric pressure (101.32 kPa, 76 cmHg)

**NOTE**

- The output voltage changes according to the local atmospheric pressure.
- Turn the ignition switch off.
- ★ If the reading is out of the usable range, replace the sensor (see Intake Air Pressure Sensor Removal/Installation).
- ★ If the reading is within the usable range, remove the ECU and check the wiring for continuity between main harness connectors.
- Disconnect the ECU and sensor connectors.

**Wiring Continuity Inspection**

- ECU Connector [A] ↔ Intake Air Pressure Sensor Connector [B]
- ECU Terminal 8 [C] ↔ Sensor Terminal [D]
- ECU Terminal 28 [E] ↔ Sensor Terminal [F]

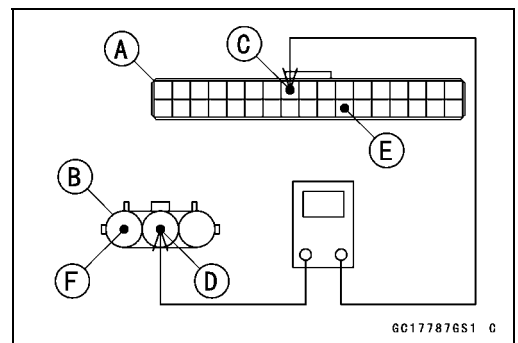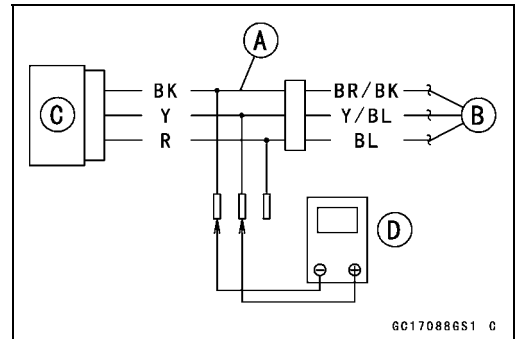

## 3-54 FUEL SYSTEM (DFI)

### Intake Air Pressure Sensor (Service Code 12) (DTC P0105, P0106, P0107)

- ★ If the wiring is good, check the sensor for various vacuum.
- Remove the intake air pressure sensor [A] and disconnect the vacuum hose from the sensor.
- Connect an auxiliary hose [B] to the intake air pressure sensor.
- Temporarily install the intake air pressure sensor.
- Connect a digital meter [C], vacuum gauge [D], the fork oil level gauge [E] and the measuring adapter to the intake air pressure sensor.

**Special Tools - Fork Oil Level Gauge: 57001-1290**  
**Vacuum Gauge: 57001-1369**  
**Measuring Adapter: 57001-1700**

#### Intake Air Pressure Sensor Output Voltage Connections to Adapter:

- Digital Meter (+) → Y (sensor Y/BL) lead**
- Digital Meter (-) → BK (sensor BR/BK) lead**

- Turn the ignition switch on.
- Measure the intake air pressure sensor output voltage from various vacuum readings, while pulling the handle of the fork oil level gauge.
- Check the intake air pressure pressure sensor output voltage, using the following formula and chart.

Suppose:

- Pg: Vacuum Pressure (Gauge) of Throttle Body
- PI: Local Atmospheric Pressure (Absolute) measured by a barometer
- Pv: Vacuum Pressure (Absolute) of Throttle Body
- Vv: Sensor Output Voltage (V)

then

$$Pv = PI + Pg$$

For example, suppose the following data is obtained:

- Pg = -8 cmHg (Vacuum Gauge Reading)
- PI = 70 cmHg (Barometer Reading)
- Vv = 3.2 V (Digital Meter Reading)

then

$$Pv = 70 + (-8) = 62 \text{ cmHg (Absolute)}$$


Plot this Pv (62 cmHg) at a point [1] on the chart and draw a vertical line through the point. Then, you can get the usable range [2] of the sensor output voltage.

$$\text{Usable range} = 3.08 \sim 3.48 \text{ V}$$


Plot Vv (3.2 V) on the vertical line. → Point [3].

**Results: In the chart, Vv is within the usable range and the sensor is normal.**

- ★ If the reading is out of the usable range, replace the sensor (see Intake Air Pressure Sensor Removal/Installation).
- ★ If the reading is within the usable range, check the ECU for its ground and power supply (see ECU Power Supply Inspection).
- ★ If the ground and power supply are good, replace the ECU (see ECU Removal/Installation).

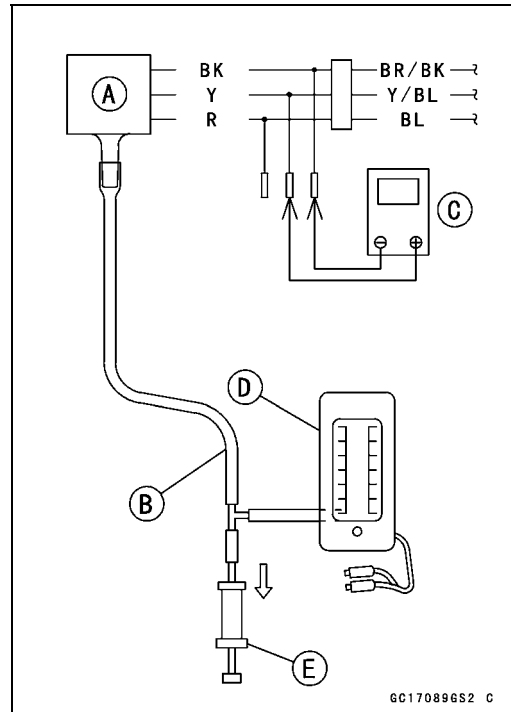

Intake Air Pressure Sensor (Service Code 12) (DTC P0105, P0106, P0107)

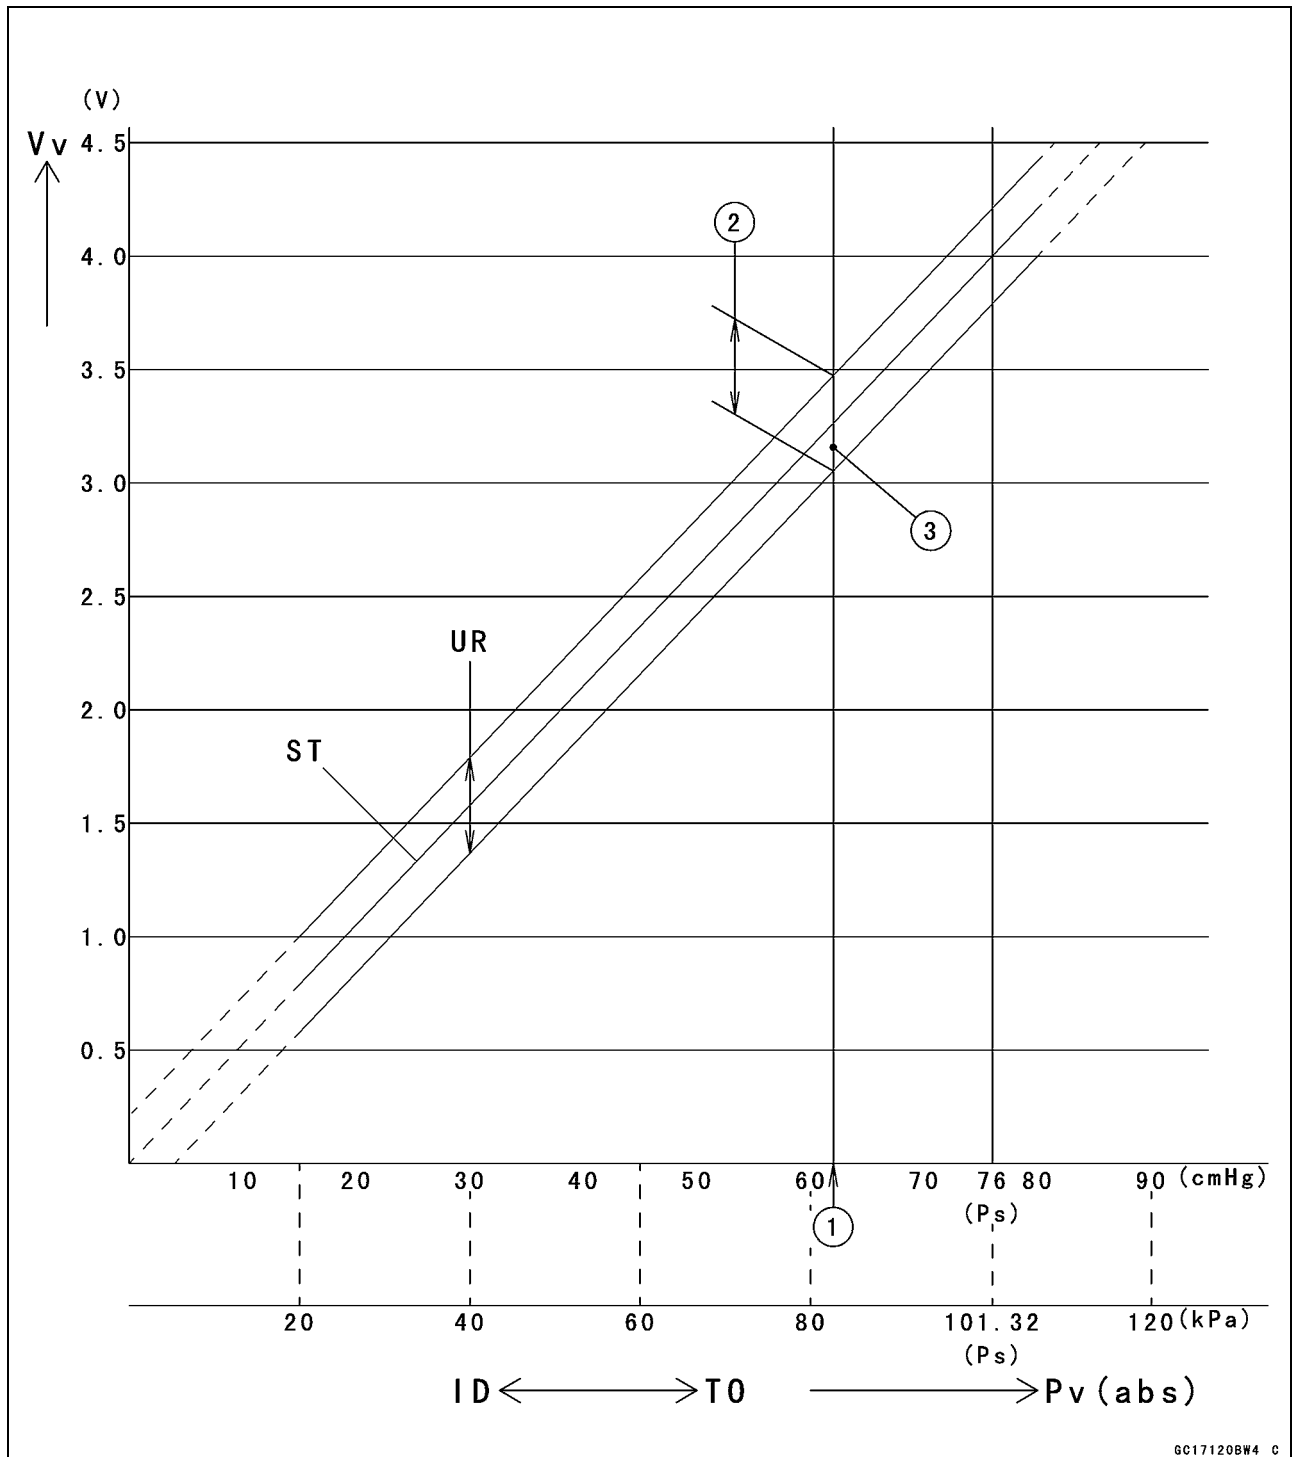

ID: Idling

Ps: Standard Atmospheric Pressure (Absolute)

Pv: Throttle Vacuum Pressure (Absolute)

ST: Standard of Sensor Output Voltage (V)

TO: Throttle Full Open


UR: Usable Range of Sensor Output Voltage (V)

Vv: Intake Air Pressure Sensor Output Voltage (V) (Digital Meter Reading)

## 3-56 FUEL SYSTEM (DFI)

### Intake Air Pressure Sensor (Service Code 12) (DTC P0105, P0106, P0107)

#### Intake Air Pressure Sensor Circuit

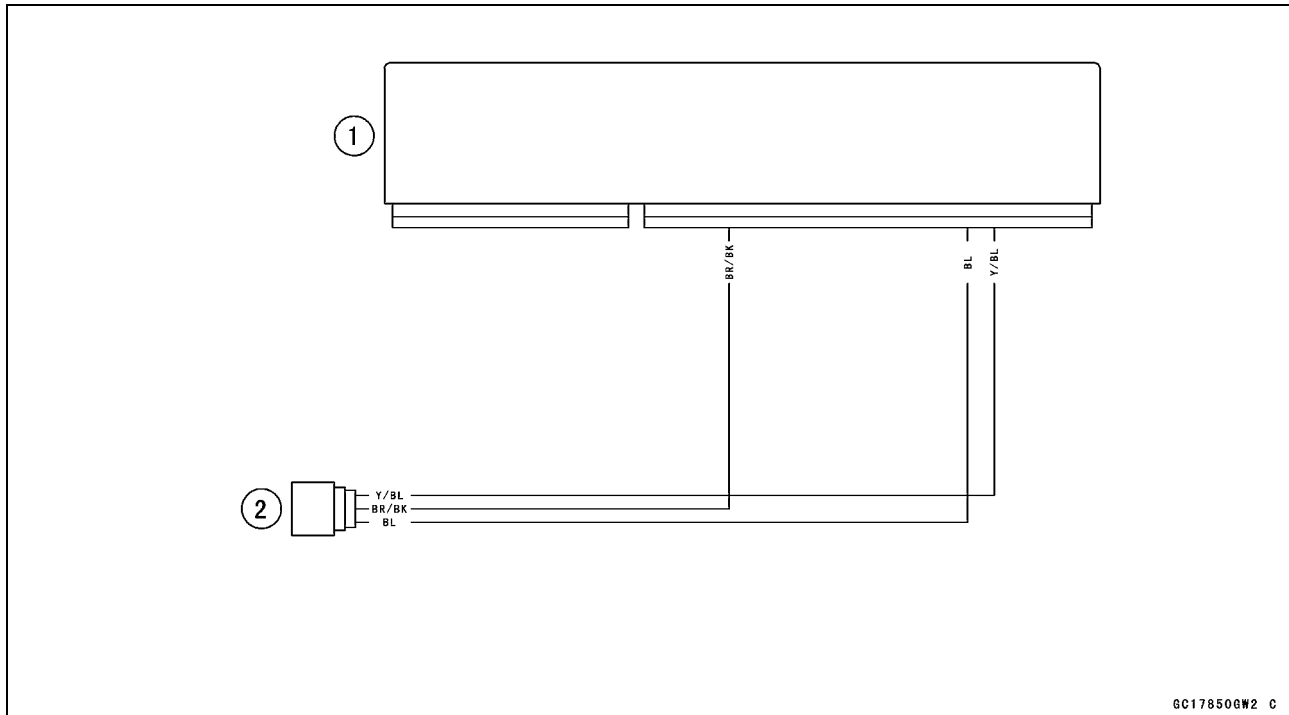

1. ECU

2. Intake Air Pressure Sensor


**Intake Air Temperature Sensor (Service Code 13) (DTC P0110, P0112)**

**Intake Air Temperature Sensor Removal/Installation**

**NOTICE**

**Never drop the intake air temperature sensor especially on a hard surface. Such a shock to the sensor can damage it.**

- Remove the fuel tank (see Fuel Tank Removal).
- Disconnect the connector [A] from the intake air temperature sensor [B].
- Remove:
  - Intake Air Temperature Sensor Screw [C]
  - Intake Air Temperature Sensor
- Be sure to install the O-ring [A].
- Install the intake air temperature sensor.
- Tighten:
  - Torque - Intake Air Temperature Sensor Screw: 1.2 N·m (0.12 kgf·m, 11 in·lb)**
- Connect the intake air temperature sensor connector.
- Install the removed parts (see appropriate chapters).

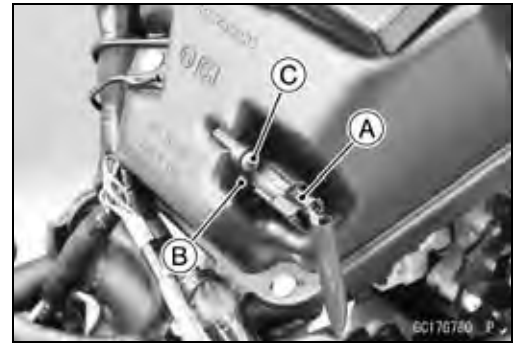

**Intake Air Temperature Sensor Output Voltage Inspection**

**NOTE**

○ Be sure the battery is fully charged.

- Turn the ignition switch off.
- Remove the ECU with the ECU connectors connected (see ECU Removal).
- Disconnect the intake air temperature sensor connector and connect the measuring adapter [A] between these connectors as shown.

Main Harness [B]  
Intake Air Temperature Sensor [C]

**Special Tool - Measuring Adapter: 57001-1700**

- Connect a digital meter [D] to the measuring adapter leads.

**Intake Air Temperature Sensor Output Voltage Connections to Adapter:**

- Digital Meter (+) → R (sensor R) lead**
- Digital Meter (-) → BK (sensor BR/BK) lead**


- Measure the output voltage with the engine stopped and the connector joined.
- Turn the ignition switch on.

**Output Voltage**

**Standard: About DC 2.25 ~ 2.50 V @20°C (68°F)**

**NOTE**

○ The output voltage changes according to the intake air temperature.

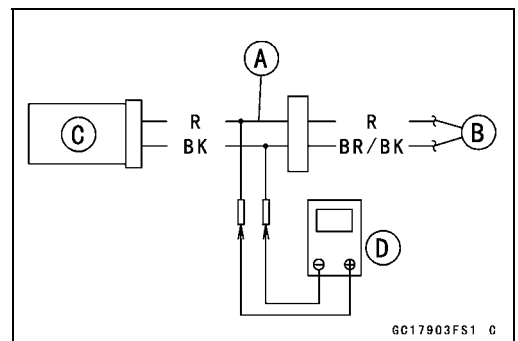

## 3-58 FUEL SYSTEM (DFI)

### Intake Air Temperature Sensor (Service Code 13) (DTC P0110, P0112)

- Turn the ignition switch off.
- ★ If the reading is within the standard, check the ECU for its ground and power supply (see ECU Power Supply Inspection).
- ★ If the ground and power supply are good, replace the ECU (see ECU Removal/Installation).
- ★ If the reading is out of the standard, remove the ECU and check the wiring for continuity between main harness connectors.
- Disconnect the ECU and sensor connectors.

#### Wiring Continuity Inspection


ECU Connector [A] ←→

Intake Air Temperature Sensor Connector [B]

ECU Terminal 26 [C] ←→ Sensor Terminal [D]

ECU Terminal 28 [E] ←→ Sensor Terminal [F]

- ★ If the wiring is good, check the intake air temperature sensor resistance (see Intake Air Temperature Sensor Resistance Inspection).

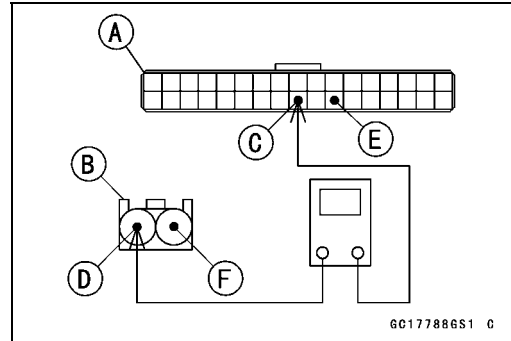

#### Intake Air Temperature Sensor Resistance Inspection

- Remove the intake air temperature sensor (see Intake Air Temperature Sensor Removal/Installation).
- Suspend the sensor [A] in a container of water so that the heat-sensitive portion [C] is submerged.
- Suspend a thermometer [B] with the heat-sensitive portion [C] located in almost the same depth with the sensor.

#### NOTE

○ The sensor and thermometer must not touch the container side or bottom.


- Place the container over a source of heat and gradually raise the temperature of the water while stirring the water gently for even temperature.
- Using a digital meter, measure the internal resistance of the sensor across the terminals at the temperatures shown in the following.

#### Intake Air Temperature Sensor Resistance

Standard: 5.4 ~ 6.6 kΩ @0°C (32°F)

0.29 ~ 0.39 kΩ @80°C (176°F)


- ★ If the reading is out of the standard, replace the sensor (see Intake Air Temperature Sensor Removal/Installation).
- ★ If the reading is within the standard, but the problem still exists, replace the ECU (see ECU Removal/Installation).

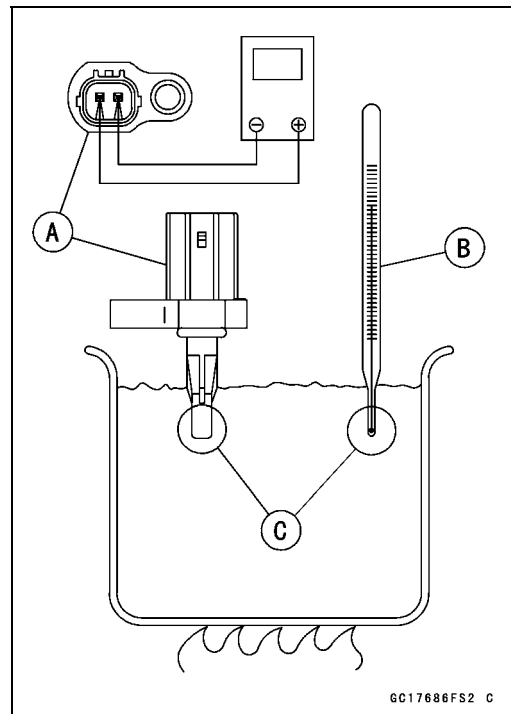



Intake Air Temperature Sensor (Service Code 13) (DTC P0110, P0112)

Intake Air Temperature Sensor Circuit

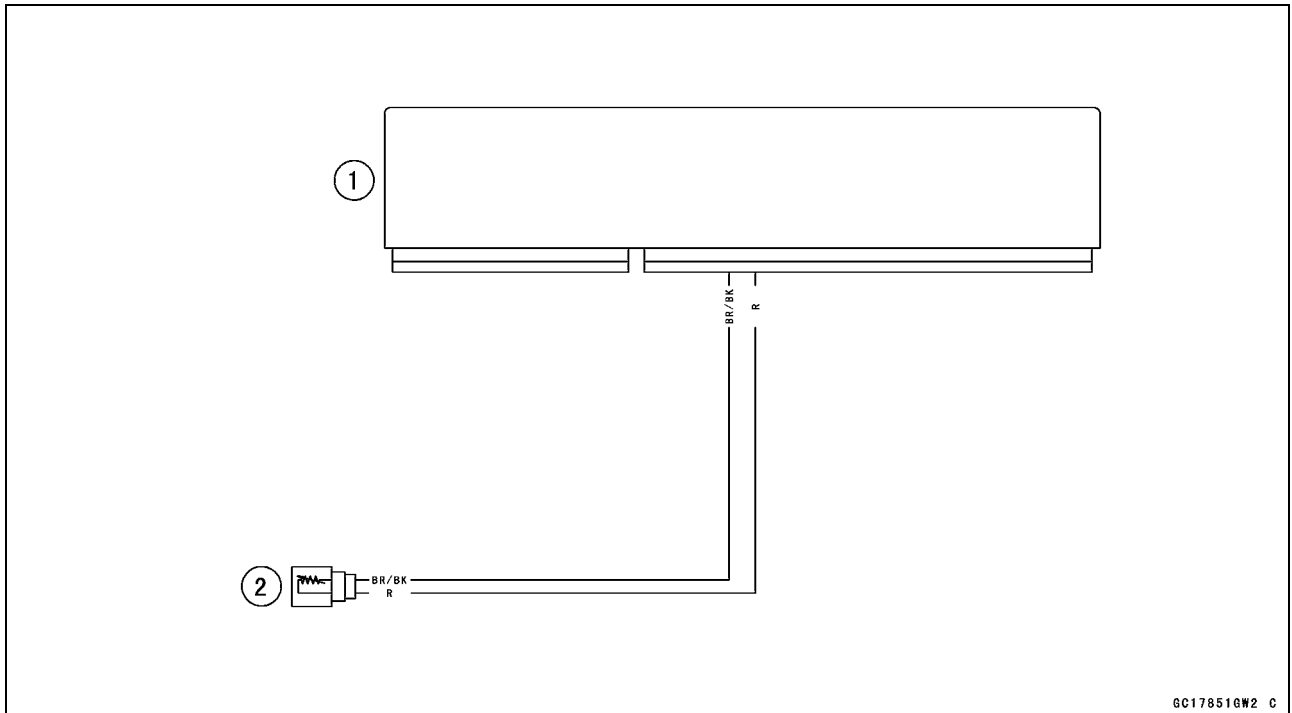

- 1. ECU
- 2. Intake Air Temperature Sensor

## 3-60 FUEL SYSTEM (DFI)


### Water Temperature Sensor (Service Code 14) (DTC P0115, P0117)

#### Water Temperature Sensor Removal/Installation

##### NOTICE

Never drop the water temperature sensor especially on a hard surface. Such a shock to the sensor can damage it.

- Drain the coolant (see Coolant Change in the Periodic Maintenance chapter).
- Disconnect:  
Water Temperature Sensor Connector [A]
- Remove:  
Water Temperature Sensor [B] with O-ring
- Replace the O-ring with a new one.
- Tighten:  
**Torque - Water Temperature Sensor: 12 N·m (1.2 kgf·m, 106 in·lb)**
- Fill the engine with coolant and bleed the air from the cooling system (see Coolant Change in the Periodic Maintenance chapter).

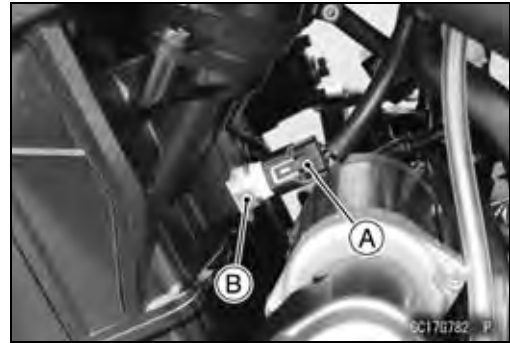

#### Water Temperature Sensor Output Voltage Inspection

##### NOTE

○ Be sure the battery is fully charged.

- Turn the ignition switch off.
- Disconnect the water temperature sensor connector and connect the measuring adapter [A] between these connectors as shown.  
Main Harness [B]  
Water Temperature Sensor [C]
- **Special Tool - Measuring Adapter: 57001-1700**
- Connect a digital meter [D] to the measuring adapter leads.



#### Water Temperature Sensor Output Voltage Connections to Adapter:

**Digital Meter (+) → R (sensor O) lead**

**Digital Meter (-) → BK (sensor BR/BK) lead**

- Measure the output voltage with the engine stopped and with the connector joined.
- Turn the ignition switch on.


#### Output Voltage

**Standard: About DC 2.80 ~ 2.97 V @20°C (68°F)**

##### NOTE

○ The output voltage changes according to the coolant temperature in the engine.

- Turn the ignition switch off.
- ★ If the reading is within the standard, check the ECU for its ground and power supply (see ECU Power Supply Inspection).
- ★ If the ground and power supply are good, replace the ECU (see ECU Removal/Installation).

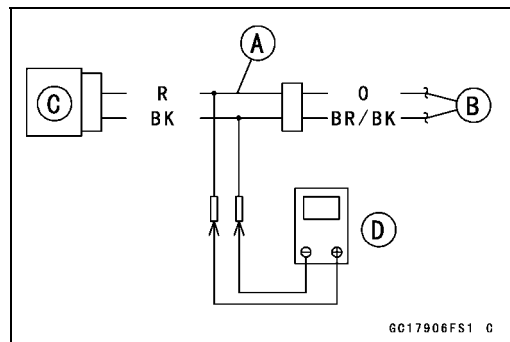

**Water Temperature Sensor (Service Code 14) (DTC P0115, P0117)**

★ If the reading is out of the standard, remove the ECU and check the wiring for continuity between main harness connectors.

○ Disconnect the ECU and sensor connectors.


**Wiring Continuity Inspection**

**ECU Connector [A]** ↔

**Water Temperature Sensor Connector [B]**

**ECU Terminal 22 [C]** ↔ **Sensor Terminal [D]**

**ECU Terminal 28 [E]** ↔ **Sensor Terminal [F]**

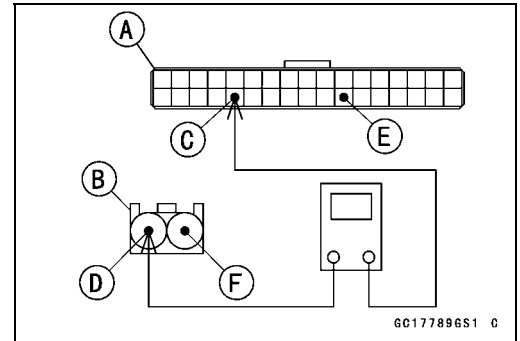


★ If the wiring is good, check the water temperature sensor resistance (see Water Temperature Sensor Resistance Inspection).

**Water Temperature Sensor Resistance Inspection**

● Refer to the Water Temperature Sensor Inspection in the Electrical System chapter.

★ If the reading is within the standard, but the problem still exists, replace the ECU (see ECU Removal/Installation).

**Water Temperature Sensor Circuit**

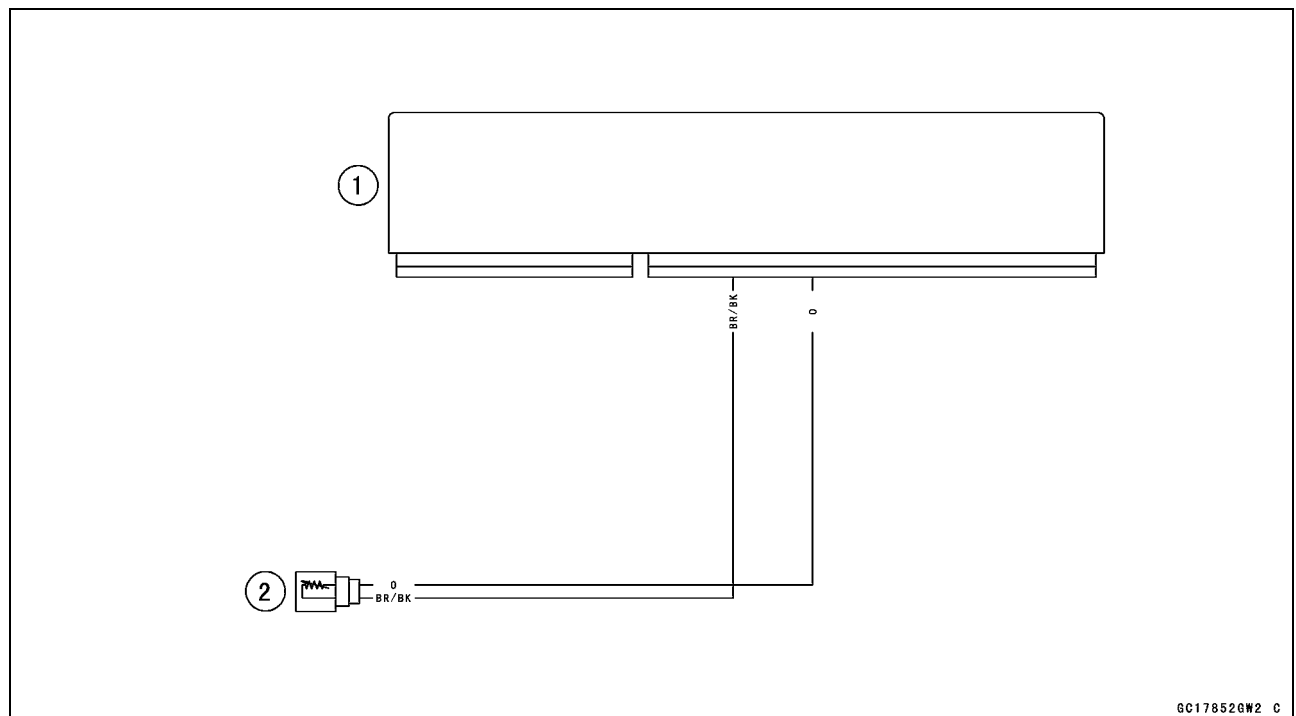

- 1. ECU
- 2. Water Temperature Sensor

## 3-62 FUEL SYSTEM (DFI)

### Crankshaft Sensor (Service Code 21) (DTC P0335)

The crankshaft sensor has no power source, and when the engine stops, the crankshaft sensor generates no signals.

#### **Crankshaft Sensor Removal/Installation**

- Refer to the Crankshaft Sensor Removal/Installation in the Electrical System chapter.

#### **Crankshaft Sensor Resistance Inspection**

- Refer to the Crankshaft Sensor Inspection in the Electrical System chapter.
- ★ If the reading is within the standard, check the peak voltage (see Crankshaft Sensor Peak Voltage Inspection).

#### **Crankshaft Sensor Peak Voltage Inspection**

- Refer to the Crankshaft Sensor Peak Voltage Inspection in the Electrical System chapter.
- ★ If the reading is within the standard, remove the ECU and check the wiring for continuity between main harness connectors.
- Disconnect the ECU and sensor connectors.

#### **Wiring Continuity Inspection**


ECU Connector [A] ↔

Crankshaft Sensor Connector [B]


ECU Terminal 13 [C] ↔ Sensor Terminal [D]

ECU Terminal 30 [E] ↔ Sensor Terminal [F]

- ★ If the wiring is good, check the ECU for its ground and power supply (see ECU Power Supply Inspection).
- ★ If the ground and power supply are good, replace the ECU (see ECU Removal/Installation).

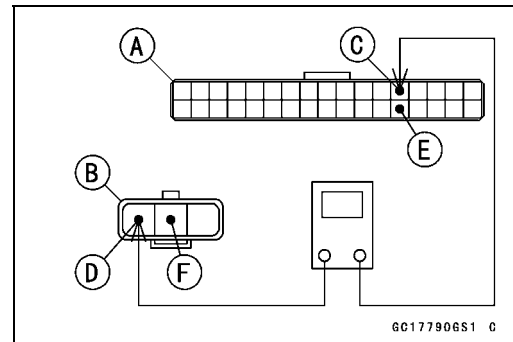

#### **Crankshaft Sensor Circuit**

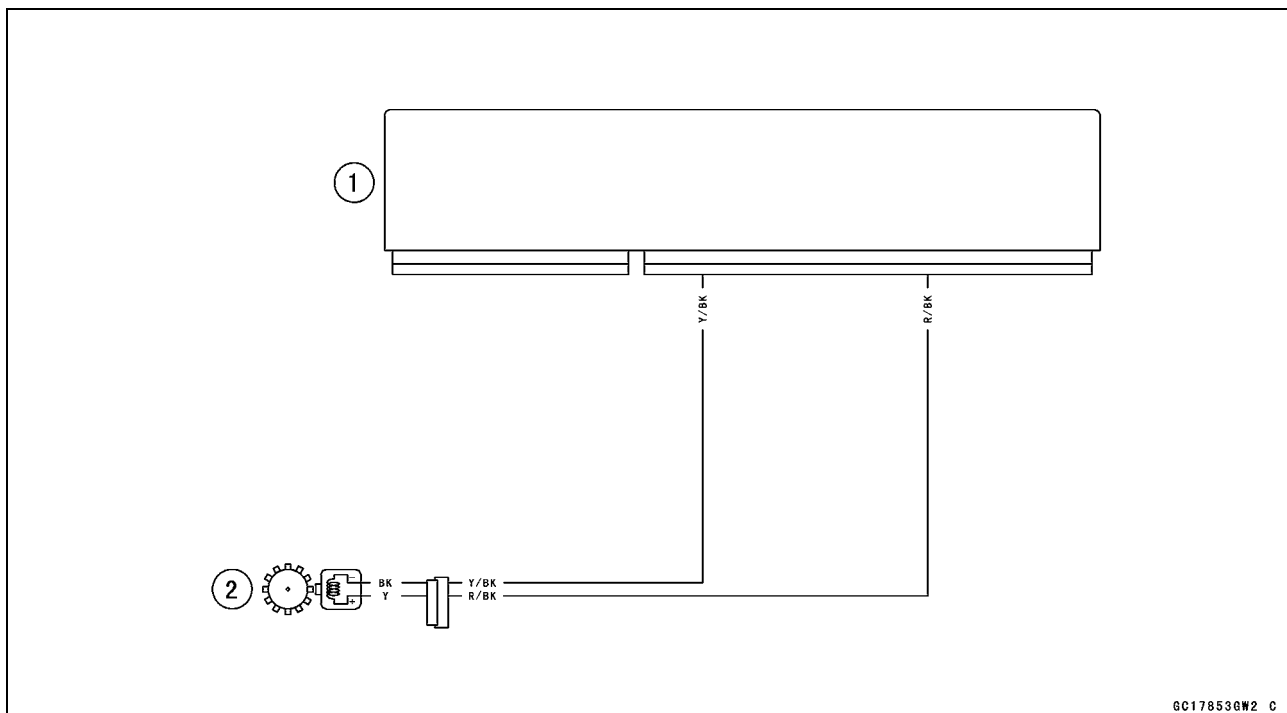

1. ECU
2. Crankshaft Sensor

Rear Wheel Rotation Sensor (Service Code 24) (DTC P2158)

**Rear Wheel Rotation Sensor Signal Inspection**


- The rear wheel rotation sensor sends the signal to the ECU through the ABS hydraulic unit (ABS equipped models). For other than ABS equipped models, the signal is sent directly to the ECU.
- The ECU uses the rear wheel rotation sensor signal for motorcycle speed.
- The service code 24/DTC P2158 is detected with the ECU.
- Inspect the wheel rotation sensor air gap (see Wheel Rotation Sensor Air Gap Inspection in the Brakes chapter).
- Inspect the wheel rotation sensor rotor (see Wheel Rotation Sensor Rotor Inspection in the Brakes chapter).
- When service code 24/DTC P2158 is displayed, do the following inspection procedures.
- Disconnect:
  - ECU Connectors (see ECU Removal)
  - Rear Wheel Rotation Sensor Lead Connector (see Rear Wheel Rotation Sensor Removal in the Brakes chapter)
  - ABS Hydraulic Unit Connector (see ABS Hydraulic Unit Removal in the Brakes chapter)
- For ABS equipped models, check the wiring for continuity between main harness connectors.

**Wiring Continuity Inspection**

ECU Connector [A] ← →

ABS Hydraulic Unit Connector [B]

ECU Terminal 15 [C] ← → ABS Hydraulic Unit Terminal 16 [D]

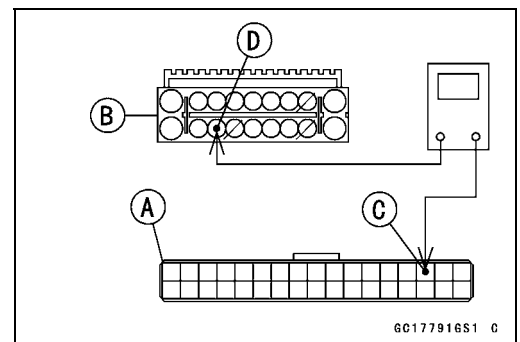


**Wiring Continuity Inspection**

ABS Hydraulic Unit Connector [A] ← →

Rear Wheel Rotation Sensor Connector [B]

ABS Hydraulic Unit Connector Terminal 13 [C] ↔ Sensor Terminal [D]

ABS Hydraulic Unit Connector Terminal 14 [E] ↔ Sensor Terminal [F]

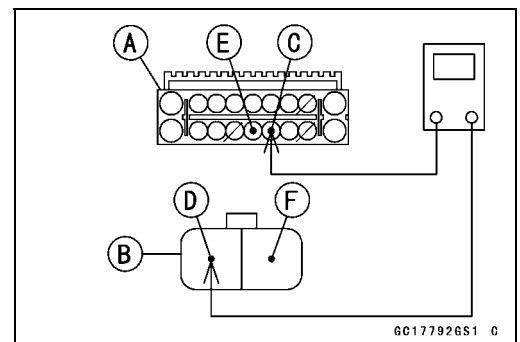

# 3-64 FUEL SYSTEM (DFI)

## Rear Wheel Rotation Sensor (Service Code 24) (DTC P2158)

- For other than ABS equipped models, check the wiring for continuity between main harness connectors.


### Wiring Continuity Inspection

ECU Connector [A] ← →

Rear Wheel Rotation Sensor Connector [B]


ECU Terminal 14 [C] ↔ Sensor Terminal [D]

ECU Terminal 32 [E] ↔ Sensor Terminal [F]

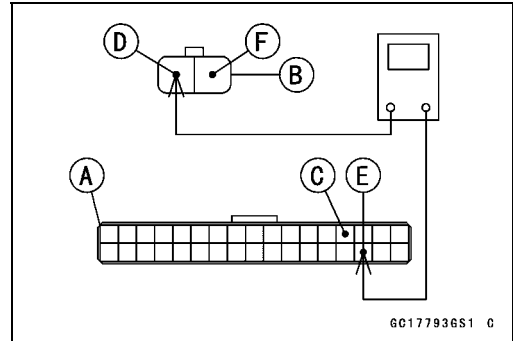

- ★ If the wiring is good, check the ECU for its ground and power supply (see ECU Power Supply Inspection).
- ★ If the ground and power supply are good, replace the ECU (see ECU Removal/Installation).


## Rear Wheel Rotation Sensor Circuit (ABS Equipped Models)

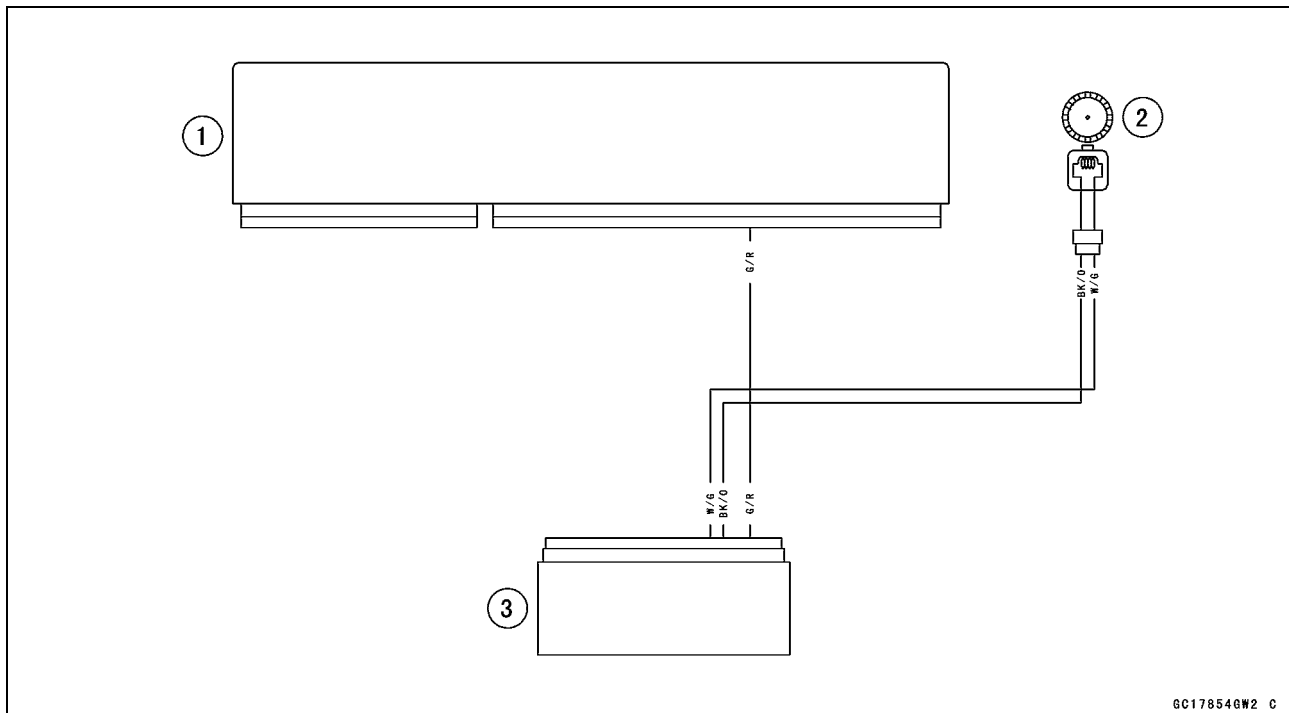

1. ECU
2. Rear Wheel Rotation Sensor
3. ABS Hydraulic Unit

Rear Wheel Rotation Sensor (Service Code 24) (DTC P2158)

Rear Wheel Rotation Sensor Circuit (other than ABS Equipped Models)

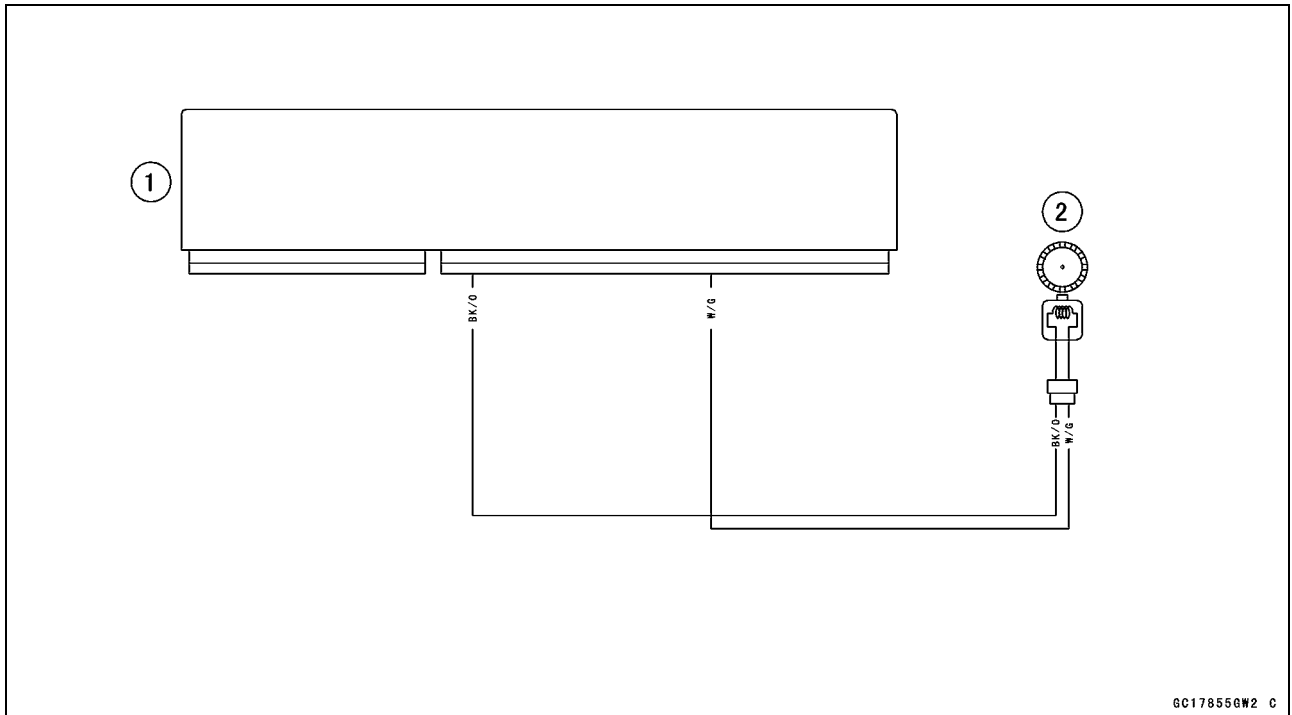

- 1. ECU
- 2. Rear Wheel Rotation Sensor

## 3-66 FUEL SYSTEM (DFI)

### Gear Position Sensor (Service Code 25) (DTC P0914, P0915, P0917)

#### Gear Position Sensor Removal/Installation

- Refer to the Gear Position Sensor Removal/Installation in the Electrical System chapter.

#### Gear Position Sensor Input Voltage Inspection

##### NOTE

○ Be sure the battery is fully charged.

- Turn the ignition switch off.
- Remove:
  - Left Side Cover (see Side Cover Removal in the Frame chapter)
- Disconnect:
  - Gear Position Sensor Connector [A]
- Connect the measuring adapter [A] between the main harness connector and gear position sensor connector.
  - Main Harness [B]
  - Gear Position Sensor [C]

##### Special Tool - Measuring Adapter: 57001-1700

- Connect a digital meter [D] to the measuring adapter leads.

##### Gear Position Sensor Input Voltage Connections to Adapter:

Digital Meter (+) → R (sensor BL) lead

Digital Meter (-) → BK (sensor BR/BK) lead

- Measure the input voltage with the engine stopped and with the connector joined.
- Turn the ignition switch on.

##### Input Voltage

Standard: DC 4.75 ~ 5.25 V

- Turn the ignition switch off.
  - ★ If the reading is within the standard, check the output voltage (see Gear Position Sensor Output Voltage Inspection).
  - ★ If the reading is out of the standard, remove the ECU and check the wiring for continuity between main harness connectors.
- Disconnect the ECU and sensor connectors.

##### Wiring Continuity Inspection




ECU Connector [A] ← →

Gear Position Sensor Connector [B]

ECU Terminal 10 [C] ↔ Sensor Terminal [D]

ECU Terminal 28 [E] ↔ Sensor Terminal [F]

- ★ If the wiring is good, check the ECU for its ground and power supply (see ECU Power Supply Inspection).
- ★ If the ground and power supply are good, replace the ECU (see ECU Removal/Installation).

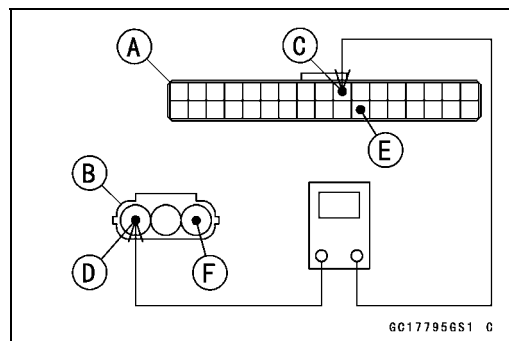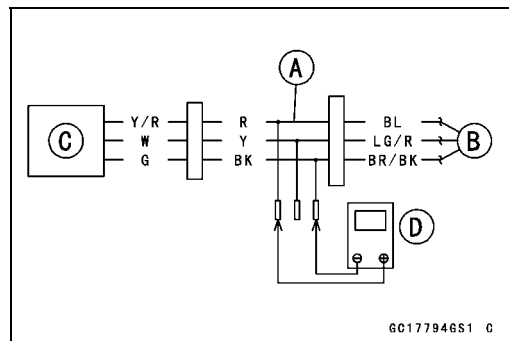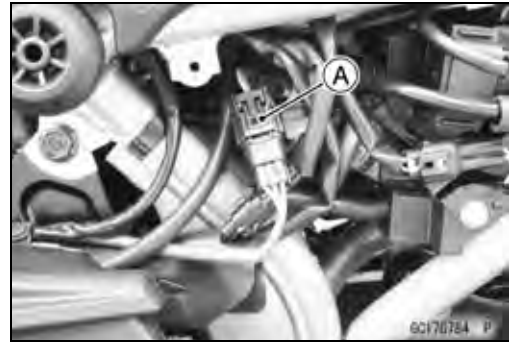



**Gear Position Sensor (Service Code 25) (DTC P0914, P0915, P0917)**

**Gear Position Sensor Output Voltage Inspection**

- Remove the gear position sensor (see Gear Position Sensor Removal in the Electrical System chapter).
- Measure the output voltage at the gear position sensor in the same way as input voltage inspection, note the following.
- Connect the measuring adapter [A] between these connectors.
  - Main Harness [B]
  - Gear Position Sensor [C]
  - Digital Meter [D]




**Special Tool - Measuring Adapter: 57001-1700**

**Gear Position Sensor Output Voltage**

**Connections to Adapter:**


- Digital Meter (+) → Y (sensor LG/R) lead
- Digital Meter (-) → BK (sensor BR/BK) lead

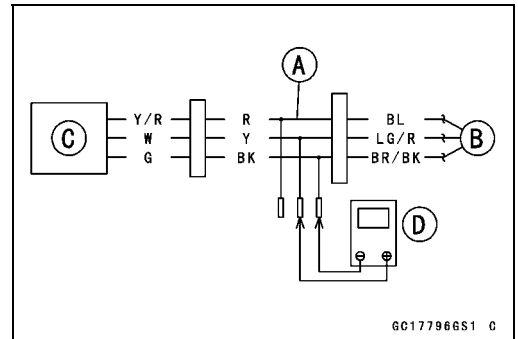

- Measure the output voltage with the engine stopped and with the connector joined.
- Turn the ignition switch on.

**Output Voltage**

Angle	Output Voltage (V)
-240°	0.40 ~ 0.60
-185°	1.03 ~ 1.23
+55°	3.82 ~ 3.92
+110°	4.40 ~ 4.60

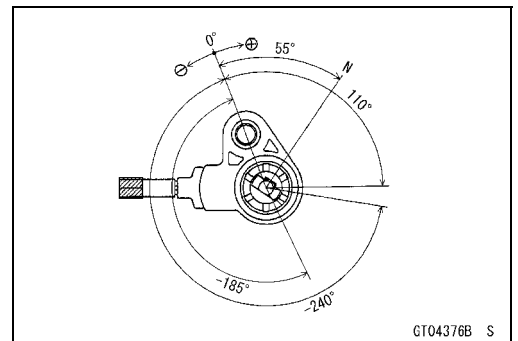

**NOTE**

- This figure shows 55°.
- Rotate the gear position sensor, confirm the output voltage will be raise or lower.
- Turn the ignition switch off.
- ★ If the reading is out of the standard, replace the gear position sensor (see Gear Position Sensor Removal/Installation in the Electrical System chapter).
- ★ If the reading is within the standard, remove the ECU and check the wiring for continuity between main harness connectors.
- Disconnect the ECU and sensor connectors.

**Wiring Continuity Inspection**


**ECU Connector [A] ← →**

**Gear Position Sensor Connector [B]**

**ECU Terminal 12 [C] ↔ Sensor Terminal [D]**

**ECU Terminal 28 [E] ↔ Sensor Terminal [F]**


- ★ If the wiring is good, check the ECU for its ground and power supply (see ECU Power Supply Inspection).
- ★ If the ground and power supply are good, replace the ECU (see ECU Removal/Installation).

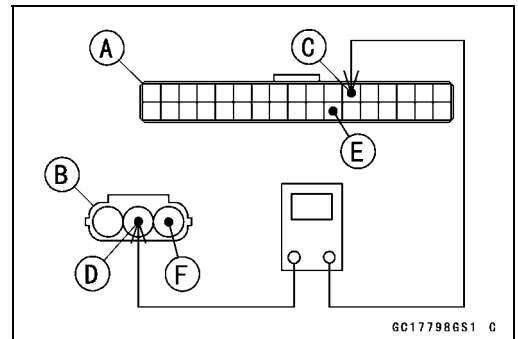

# 3-68 FUEL SYSTEM (DFI)

## Gear Position Sensor (Service Code 25) (DTC P0914, P0915, P0917)

### Gear Position Sensor Circuit

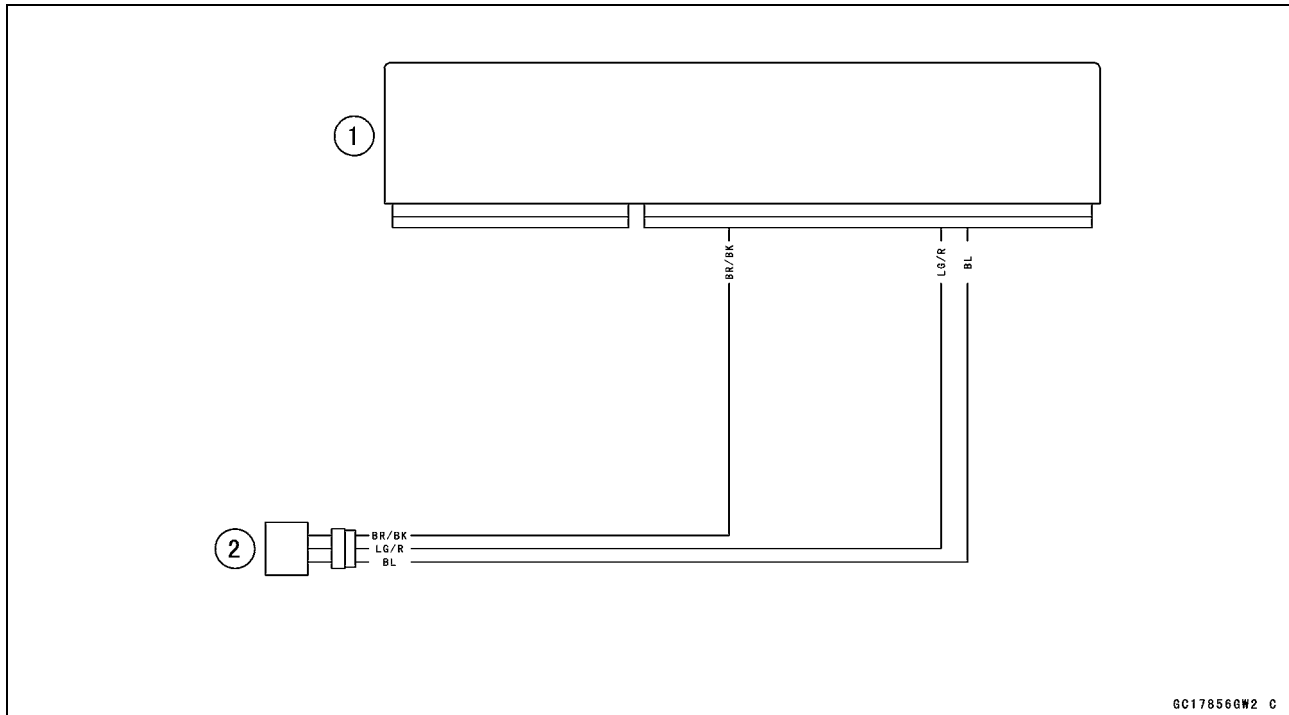

1. ECU

2. Gear Position Sensor



**Vehicle-down Sensor (Service Code 31) (DTC C0064)**

This sensor has a weight [A] with two magnets inside, and sends a signal to the ECU. But when the motorcycle banks 60 ~ 70° or more to either side (in fact falls down), the weight turns and the signal changes. The ECU senses this change, and stops the fuel pump relay, the fuel injectors and the ignition system.

Hall IC [B]

When the motorcycle is down, the ignition switch is left on. If the starter button is pushed, the electric starter turns but the engine does not start. To start the engine again, raise the motorcycle, turn the ignition switch off, and then turn it on.

- Vehicle-down Sensor [A]
- Ground Terminal [B]: BR/BK
- Output Terminal [C]: Y/G
- Power Source Terminal [D]: BL

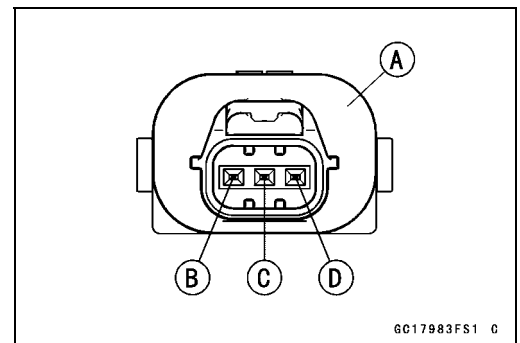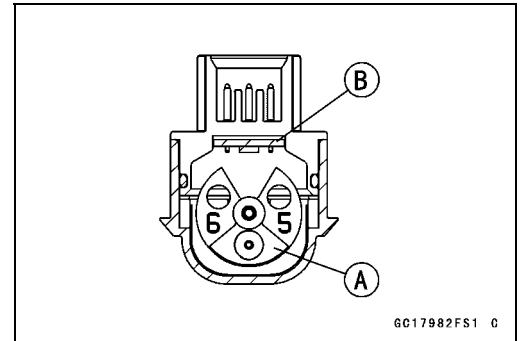

**Vehicle-down Sensor Removal**

**NOTICE**

**Never drop the vehicle-down sensor especially on a hard surface. Such a shock to the sensor can damage it.**

- Remove:
  - Fuel Tank (see Fuel Tank Removal)
- Disconnect:
  - Vehicle-down Sensor Connector [A]
- Remove the vehicle-down sensor with the rubber damper upward.




**Vehicle-down Sensor Installation**

- The UP mark [A] of the sensor should face upward.

**⚠ WARNING**


**Incorrect installation of the vehicle-down sensor could cause sudden loss of engine power. The rider could lose balance during certain riding situations for an accident resulting in injury or death. Ensure that the vehicle-down sensor is held in place by the sensor bracket.**

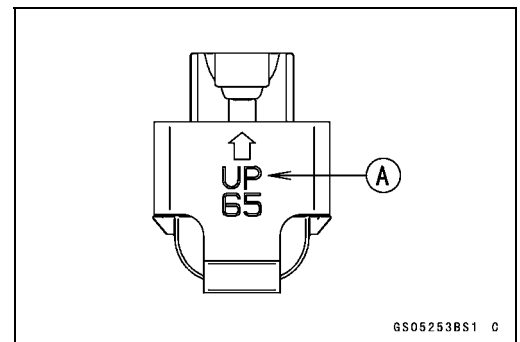

## 3-70 FUEL SYSTEM (DFI)

### Vehicle-down Sensor (Service Code 31) (DTC C0064)

- Install the vehicle-down sensor [A] so that the rubber damper hole [B] fits the bracket projection [C].
- Install the removed parts (see appropriate chapters).

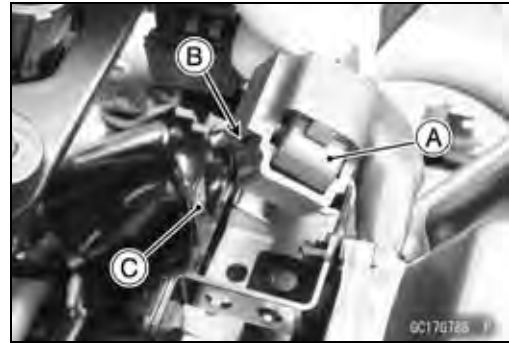

### Vehicle-down Sensor Input Voltage Inspection

#### NOTE

○ Be sure the battery is fully charged.

- Turn the ignition switch off.
- Remove the fuel tank (see Fuel Tank Removal).
- Disconnect the vehicle-down sensor connector and connect the measuring adapter [A] between these connectors as shown.

Main Harness [B]

Vehicle-down Sensor [C]

#### Special Tool - Measuring Adapter: 57001-1700

- Connect a digital meter [D] to the measuring adapter leads.

#### Vehicle-down Sensor Input Voltage

##### Connections to Adapter:

Digital Meter (+) → R (sensor BL) lead

Digital Meter (-) → BK (sensor BR/BK) lead

- Measure the input voltage with the engine stopped and with the connector joined.
- Turn the ignition switch on.

#### Input Voltage

Standard: DC 4.75 ~ 5.25 V

- Turn the ignition switch off.
- ★ If the reading is within the standard, check the output voltage (see Vehicle-down Sensor Output Voltage Inspection).
- ★ If the reading is out of the standard, remove the ECU and check the wiring for continuity between main harness connectors.
- Disconnect the ECU and sensor connectors.

#### Wiring Continuity Inspection



ECU Connector [A] ↔

Vehicle-down Sensor Connector [B]

ECU Terminal 10 [C] ↔ Sensor Terminal [D]

ECU Terminal 28 [E] ↔ Sensor Terminal [F]

- ★ If the wiring is good, check the ECU for its ground and power supply (see ECU Power Supply Inspection).
- ★ If the ground and power supply are good, replace the ECU (see ECU Removal/Installation).

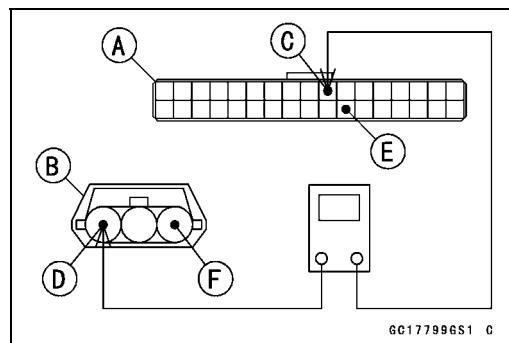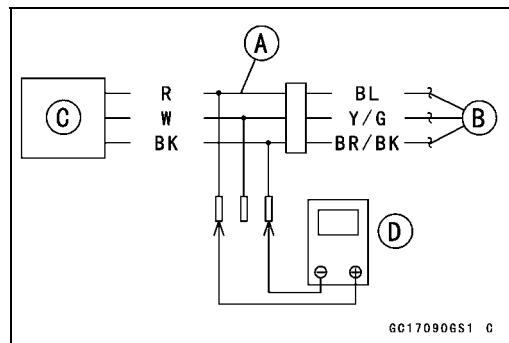

**Vehicle-down Sensor (Service Code 31) (DTC C0064)**

**Vehicle-down Sensor Output Voltage Inspection**

- Remove the vehicle-down sensor (see Vehicle-down Sensor Removal).
- Connect the measuring adapter [A] to the vehicle-down sensor connectors as shown.  
Main Harness [B]  
Vehicle-down Sensor [C]

**Special Tool - Measuring Adapter: 57001-1700**



- Connect a digital meter [D] to the measuring adapter leads.

**Vehicle-down Sensor Output Voltage**

**Connections to Adapter:**

Digital Meter (+) → W (sensor Y/G) lead

Digital Meter (-) → BK (sensor BR/BK) lead

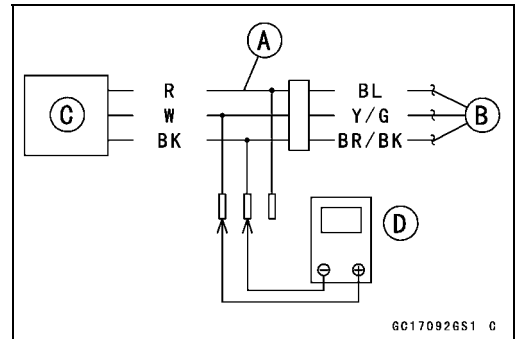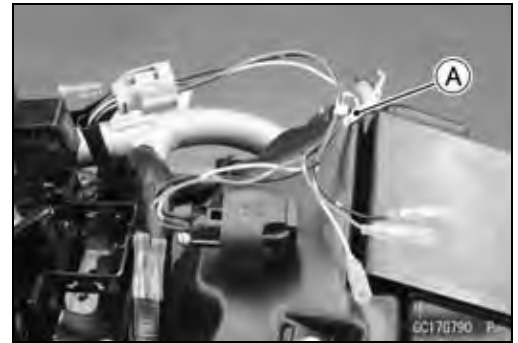


- Hold the sensor vertically.
- Measure the output voltage with the engine stopped and with the connector joined.
- Turn the ignition switch on.
- Tilt the sensor 60 ~ 70° or more [A] right or left, then hold the sensor almost vertical with the arrow mark pointed up [B], and measure the output voltage.

**Output Voltage**

Standard: With sensor tilted 60 ~ 70° or more right or left: DC 0.65 ~ 1.35 V

With sensor arrow mark pointed up: DC 3.55 ~ 4.45 V

- Turn the ignition switch off.
- ★ If the reading is out of the standard, replace the sensor (see Vehicle-down Sensor Removal/Installation).

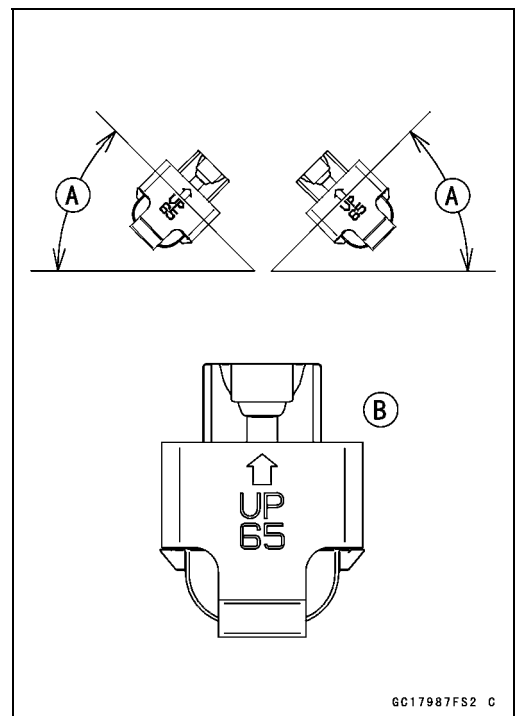

# 3-72 FUEL SYSTEM (DFI)

## Vehicle-down Sensor (Service Code 31) (DTC C0064)

★ If the reading is within the standard, remove the ECU and check the wiring for continuity between main harness connectors.

○ Disconnect the ECU and sensor connectors.


### Wiring Continuity Inspection

ECU Connector [A] ↔

Vehicle-down Sensor Connector [B]

ECU Terminal 11 [C] ↔ Sensor Terminal [D]


ECU Terminal 28 [E] ↔ Sensor Terminal [F]

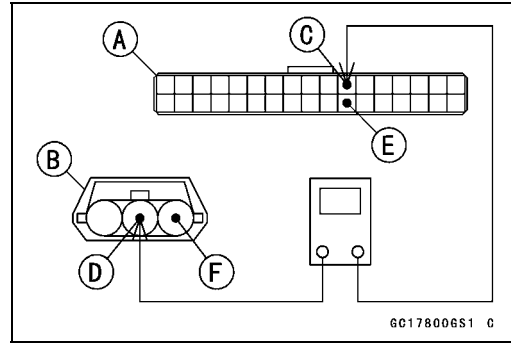

★ If the wiring is good, check the ECU for its ground and power supply (see ECU Power Supply Inspection).

★ If the ground and power supply are good, replace the ECU (see ECU Removal/Installation).

### Vehicle-down Sensor Circuit

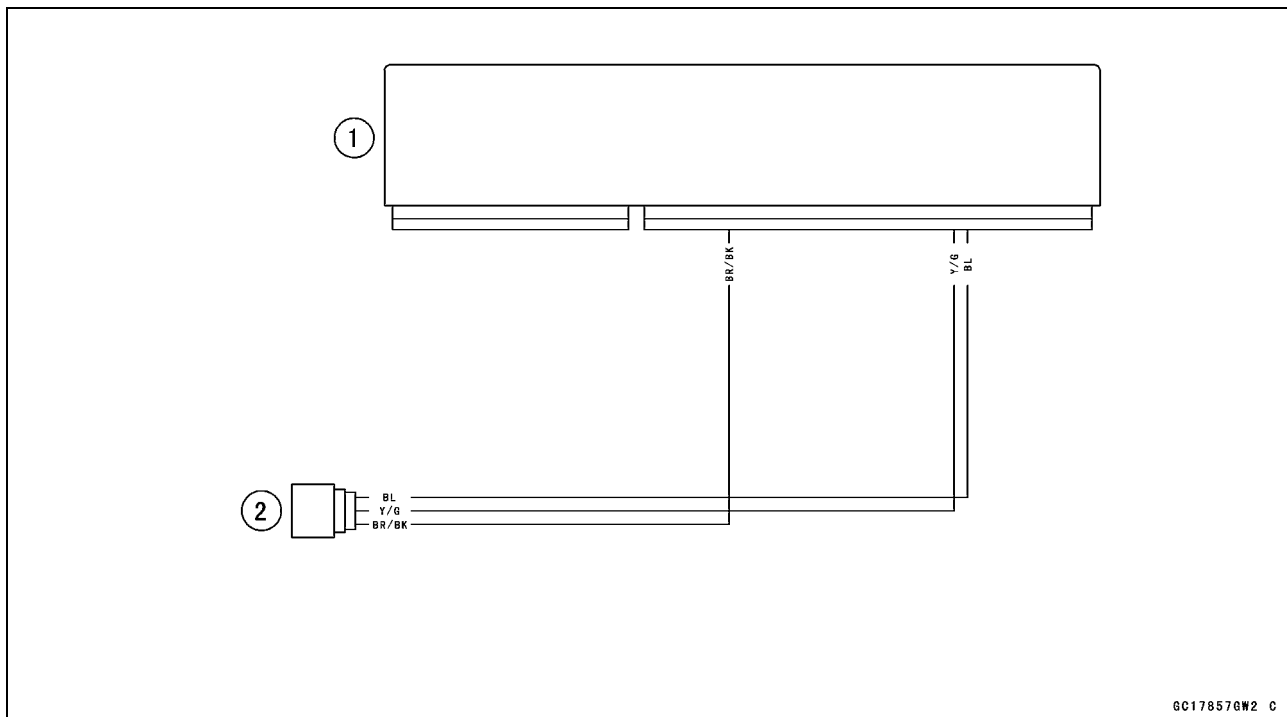


- 1. ECU
- 2. Vehicle-down Sensor

**Subthrottle Sensor (Service Code 32) (DTC P0220, P0223)**

The subthrottle sensor is a rotating variable resistor that change output voltage according to throttle operating. The ECU senses this voltage change and determines fuel injection quantity, and ignition timing according to engine rpm, and throttle opening.

- Input Terminal [A]: BL
- Output Terminal [B]: BR
- Ground Terminal [C]: BR/BK

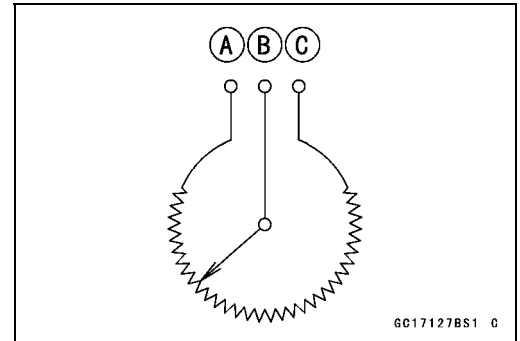

**Subthrottle Sensor Removal/Adjustment**

**NOTICE**

**Do not remove or adjust the subthrottle sensor [A] since it has been adjusted and set with precision at the factory.**

**Never drop the throttle body assy especially on a hard surface. Such a shock to the subthrottle sensor can damage it.**



**Subthrottle Sensor Input Voltage Inspection**

**NOTE**

○Be sure the battery is fully charged.

- Turn the ignition switch off.
- Remove:
  - Left Fuel Tank Side Cover (see Fuel Tank Side Cover Removal in the Frame chapter)
- Disconnect the subthrottle sensor connector and connect the setting adapter [A] between these connectors.

**Special Tool - Throttle Sensor Setting Adapter: 57001-1538**

- Connect a digital meter to the setting adapter leads.

**Subthrottle Sensor Input Voltage**

**Connections to Adapter:**

**Digital Meter (+) → BK (sensor BL) lead**

**Digital Meter (-) → W (sensor BR/BK) lead**

- Measure the input voltage with the engine stopped and with the connector joined.
- Turn the ignition switch on.

**Input Voltage**

**Standard: DC 4.75 ~ 5.25 V**

- Turn the ignition switch off.
- ★ If the reading is within the standard, check the output voltage (see Subthrottle Sensor Output Voltage Inspection).



## 3-74 FUEL SYSTEM (DFI)

### Subthrottle Sensor (Service Code 32) (DTC P0220, P0223)

★ If the reading is out of the standard, remove the ECU and check the wiring for continuity between main harness connectors.

○ Disconnect the ECU and sensor connectors.

#### Wiring Continuity Inspection

ECU Connector [A] ↔

Subthrottle Sensor Connector [B]

ECU Terminal 10 [C] ↔ Sensor Terminal [D]

ECU Terminal 28 [E] ↔ Sensor Terminal [F]

★ If the wiring is good, check the ECU for its ground and power supply (see ECU Power Supply Inspection).

★ If the ground and power supply are good, replace the ECU (see ECU Removal/Installation).

#### Subthrottle Sensor Output Voltage Inspection

● Measure the output voltage at the subthrottle sensor in the same way as input voltage inspection, note the following.

○ Disconnect the subthrottle sensor connector and connect the setting adapter [A] between these connectors.

**Special Tool - Throttle Sensor Setting Adapter: 57001-1538**

#### Subthrottle Sensor Output Voltage


Connections to Adapter:

Digital Meter (+) → R (sensor BR) lead

Digital Meter (-) → W (sensor BR/BK) lead

● Remove the air cleaner housing (see Air Cleaner Housing Removal).

● Disconnect the subthrottle valve actuator connector [A].

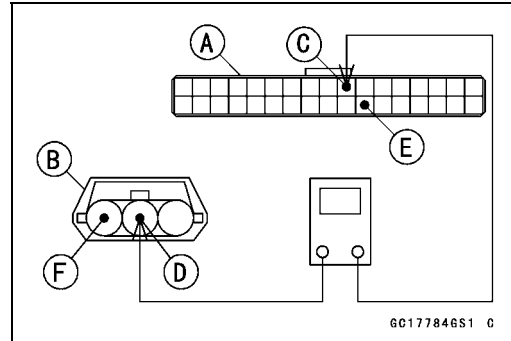



**Subthrottle Sensor (Service Code 32) (DTC P0220, P0223)**

- Measure the output voltage with the engine stopped with the connector joined.
- Turn the ignition switch on.
- Measure the output voltage when the subthrottle valves [A] are fully opened by hand.



**Output Voltage**

**Standard:** DC 0.49 ~ 0.91 V at subthrottle valve full close position (for reference)

DC 3.88 ~ 4.32 V at subthrottle valve full open position

**NOTE**

- Open the subthrottle valves, confirm the output voltage will be raise.
- The standard voltage refers to the value when the voltage reading at the Input Voltage Inspection shows 5 V exactly.
- When the input voltage reading shows other than 5 V, derive a voltage range as follows.

*Example:*

*In the case of a input voltage of 4.75 V.*

$$0.49 \times 4.75 \div 5.00 = 0.466 \text{ V}$$

$$0.91 \times 4.75 \div 5.00 = 0.865 \text{ V}$$

*Thus, the valid range is 0.466 ~ 0.865 V*

- Turn the ignition switch off.
- ★ If the reading is out of the standard, check the subthrottle sensor resistance (see Subthrottle Sensor Resistance Inspection).
- ★ If the reading is within the standard, remove the ECU and check the wiring for continuity between main harness connectors.
- Disconnect the ECU and sensor connectors.

**Wiring Continuity Inspection**


**ECU Connector [A] ↔**

**Subthrottle Sensor Connector [B]**

**ECU Terminal 24 [C] ↔ Sensor Terminal [D]**

**ECU Terminal 28 [E] ↔ Sensor Terminal [F]**

- ★ If the wiring is good, check the ECU for its ground and power supply (see ECU Power Supply Inspection).
- ★ If the ground and power supply are good, replace the ECU (see ECU Removal/Installation).

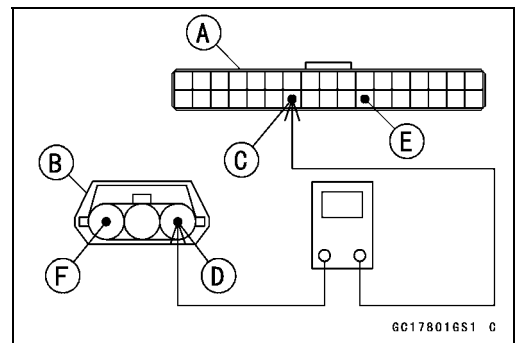

# 3-76 FUEL SYSTEM (DFI)

## Subthrottle Sensor (Service Code 32) (DTC P0220, P0223)

### Subthrottle Sensor Resistance Inspection

- Turn the ignition switch off.
- Disconnect the subthrottle sensor connector.
- Connect the setting adapter [A] to the sensor connector only.

**Special Tool - Throttle Sensor Setting Adapter: 57001-1538**

- Measure the subthrottle sensor resistance.

### Subthrottle Sensor Resistance

**Connections to Adapter:**


**BK (sensor BL) lead ↔ W (sensor BR/BK) lead**

**Standard: 4 ~ 6 kΩ**

- ★ If the reading is out of the standard, replace the throttle body assy (see Throttle Body Assy Removal/Installation).
- ★ If the reading is within the standard, but the problem still exists, replace the ECU (see ECU Removal/Installation).



### Subthrottle Sensor Circuit

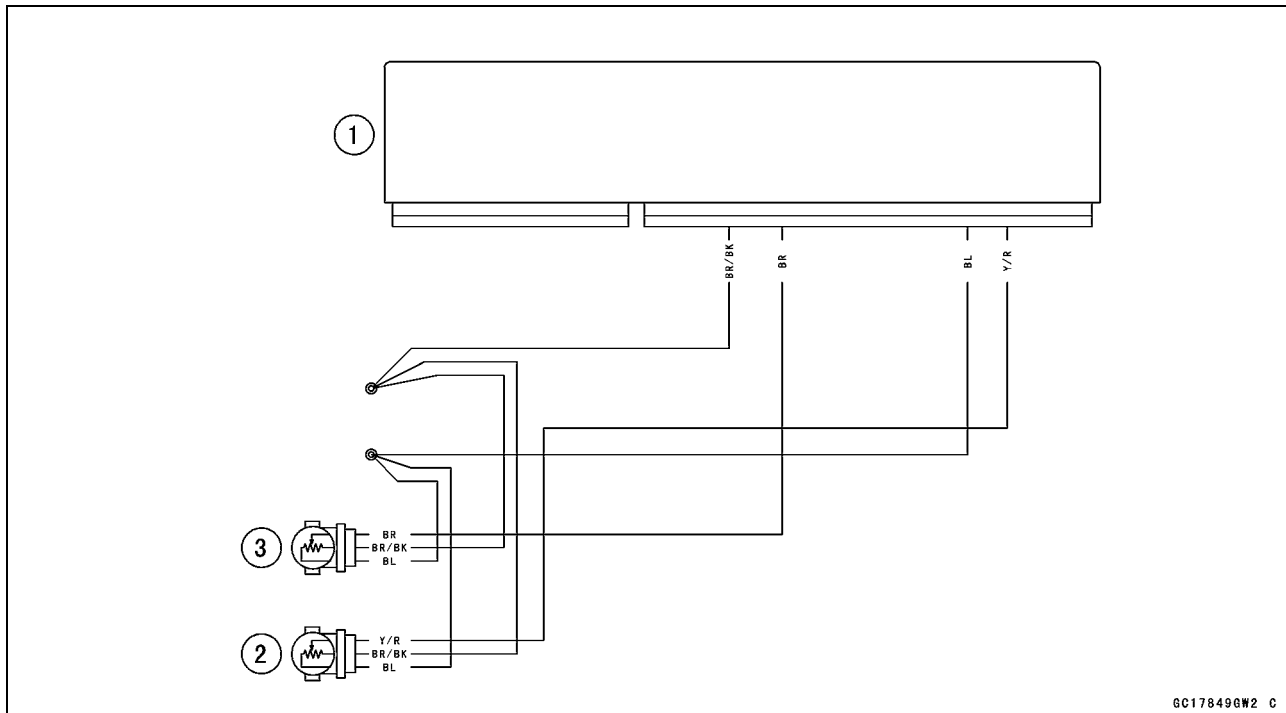

GC178498W2 C

- 1. ECU
- 2. Main Throttle Sensor
- 3. Subthrottle Sensor

Oxygen Sensor - not activated (Service Code 33) (DTC P0130, P0132)

**Oxygen Sensor Removal/Installation**

- Refer to the Oxygen Sensor Removal/Installation in the Electrical System chapter.

**Oxygen Sensor Inspection**

- Turn the ignition switch off.
- Remove the engine sprocket cover (see Engine Sprocket Removal in the Final Drive chapter).
- Disconnect the oxygen sensor lead connector and connect the measuring adapter [A] between these connectors.

**Special Tool - Oxygen Sensor Measuring Adapter: 57001-1682**

- Connect a digital meter to the measuring adapter leads.

**Oxygen Sensor Output Voltage**

**Connections to Adapter:**


**Digital Meter (+) → BL (sensor BL) lead**

**Digital Meter (-) → BR (sensor W) lead**

- Remove the air cleaner housing (see Air Cleaner Housing Removal).
- Slide the clamp [A].
- Disconnect the air switching valve hose [B].




- Install the suitable plug [A] on the fitting of the air suction valve cover, and shut off the secondary air.

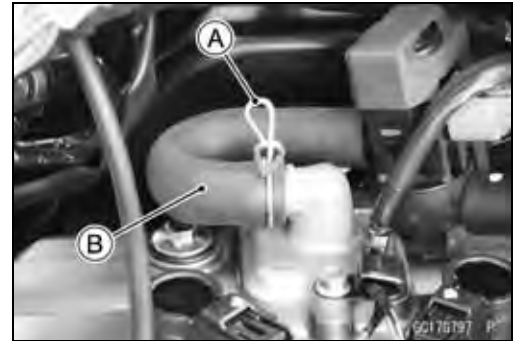

- Install the following parts temporarily.
  - Air Cleaner Housing (see Air Cleaner Housing Installation)
  - Fuel Tank (see Fuel Tank Removal)
- Warm up the engine thoroughly until the radiator fan starts.
- Measure the output voltage with the connector joined.

**Output Voltage (with Plug, Rich)**

**Standard: DC 0.5 V or more**

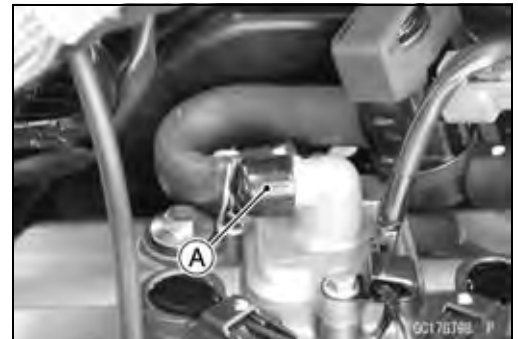

## 3-78 FUEL SYSTEM (DFI)

### Oxygen Sensor - not activated (Service Code 33) (DTC P0130, P0132)

- Turn the ignition switch off.
- Remove air cleaner housing (see Air Cleaner Housing Removal)
- Remove the plug from the fitting [A].

#### **⚠ WARNING**

**The engine gets extremely hot during normal operation and can cause serious burns. Never touch a hot engine.**

- Install the following parts temporarily.
  - Air Cleaner Housing (see Air Cleaner Housing Installation)
  - Fuel Tank (see Fuel Tank Removal)
- Start the engine, and let it idle.
- Measure the output voltage with the connector joined.

#### **Output Voltage (without Plug, Lean)**

**Standard: DC 0.2 V or less**

- Turn the ignition switch off.
- ★ If the reading is out of the standard (with plug: DC 0.5 V or more, without plug: DC 0.2 V or less), remove the ECU and check the wiring for continuity between main harness connectors.
- Disconnect the ECU and sensor connectors.

#### **Wiring Continuity Inspection**


**ECU Connector [A] ↔**

**Oxygen Sensor Connector [B]**

**ECU Terminal 5 [C] ↔ Sensor Terminal [D]**


**ECU Terminal 25 [E] ↔ Sensor Terminal [F]**

- ★ If the wiring is good, replace the sensor (see Oxygen Sensor Removal/Installation in the Electrical System chapter).
- ★ If the reading is within the standard (with plug: DC 0.5 V or more, without plug: DC 0.2 V or less), check the ECU for its ground and power supply (see ECU Power Supply Inspection).
- ★ If the ground and power supply are good, replace the ECU (see ECU Removal/Installation).

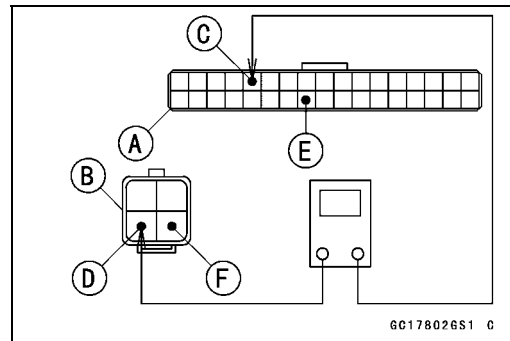

Oxygen Sensor - not activated (Service Code 33) (DTC P0130, P0132)

Oxygen Sensor Circuit

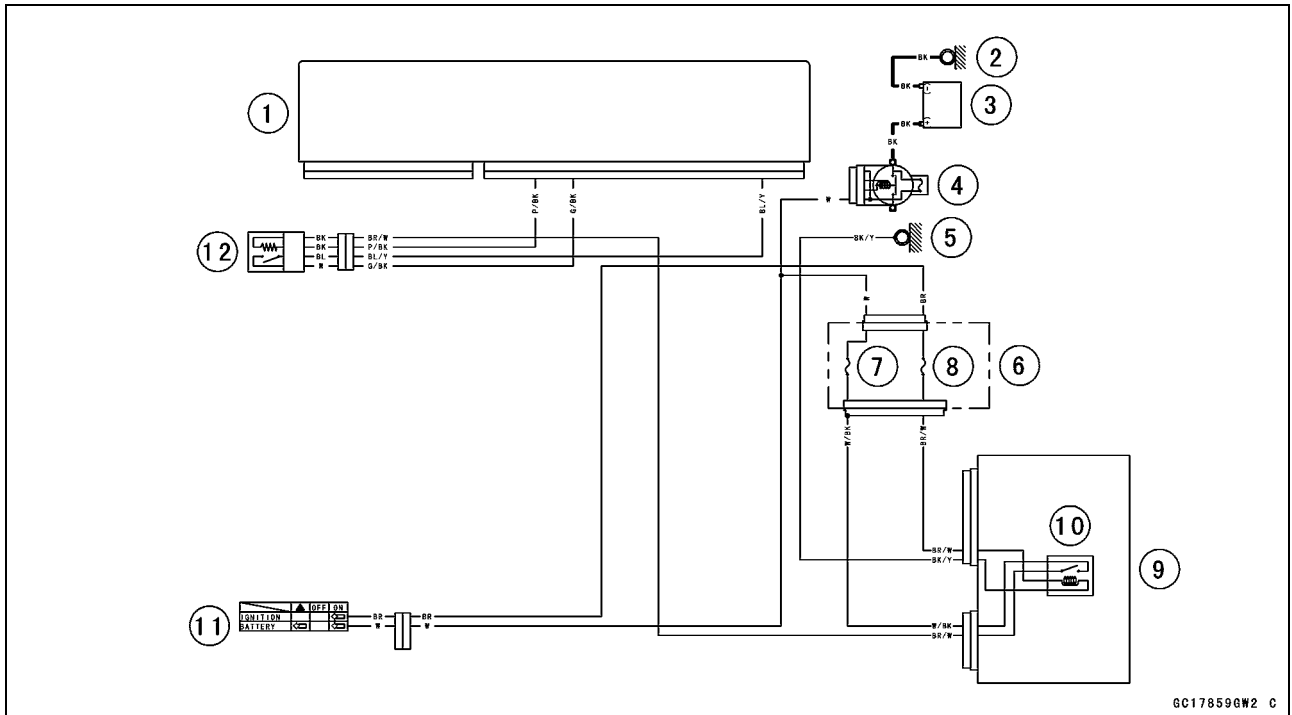

1. ECU
2. Engine Ground
3. Battery
4. Main Fuse 30 A
5. Frame Ground (4)
6. Fuse Box (1)
7. ECU Fuse 15 A
8. Ignition Fuse 10 A
9. Relay Box
10. ECU Main Relay
11. Ignition Switch
12. Oxygen Sensor

# 3-80 FUEL SYSTEM (DFI)

## ECU Communication Error (Service Code 39)

### ECU Communication Line Inspection


- When the data is not sent from the ECU to the meter unit for more than about 10 seconds, the service code 39 is displayed.
- The service code 39 is detected with meter unit.
- Remove the ECU and meter unit, check the wiring for continuity between main harness connectors.
- Disconnect the ECU and meter unit connectors.

### Wiring Continuity Inspection


ECU Connector [A] ↔ Meter Unit Connector [B]

ECU Terminal 48 [C] ↔ Meter Terminal [D]

- ★If the wiring is good, check the meter unit (see Meter Unit Inspection in the Electrical System chapter).
- ★If the meter unit is normal, replace the ECU (see ECU Removal/Installation).

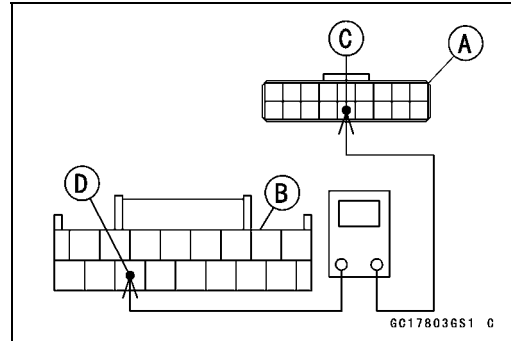

### ECU Communication Line Circuit

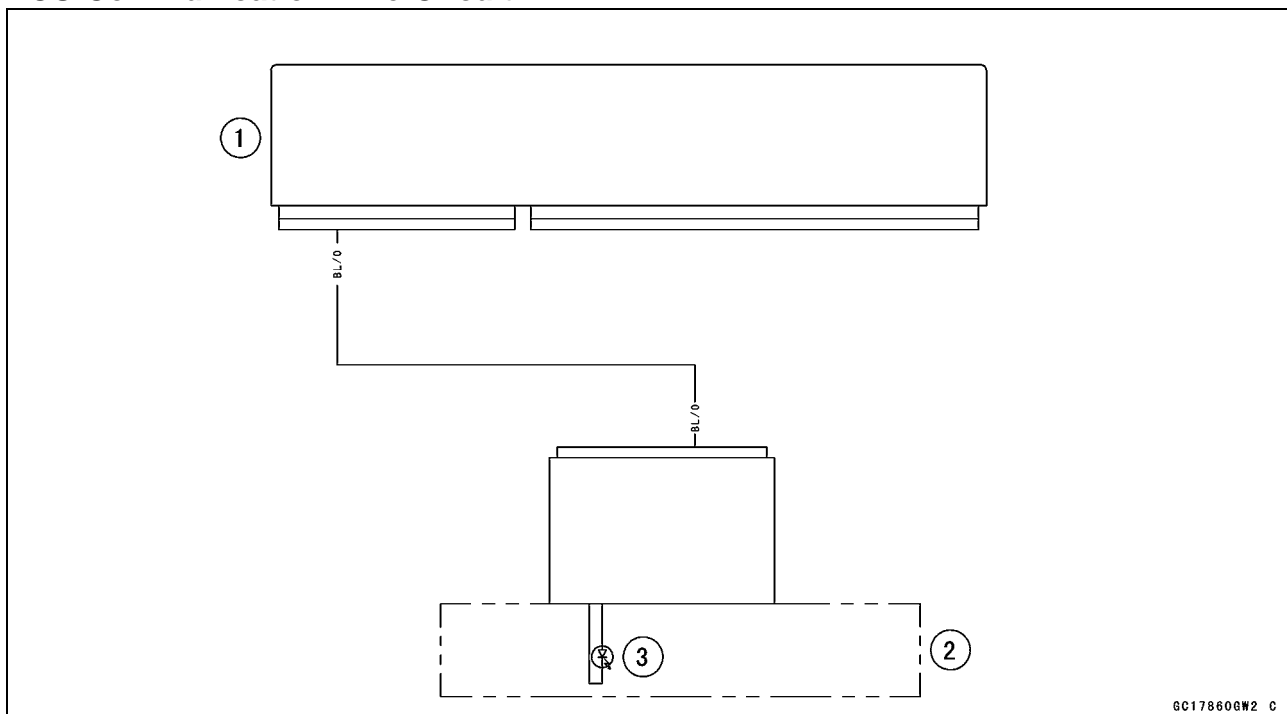

1. ECU
2. Meter Unit
3. Yellow Engine Warning Indicator Light (LED)

## Fuel Injectors (Service Code 41, 42) (DTC P0201, P0202)

Inspect the eligible fuel injector according to the following service code or DTC.

Service Code 41/DTC P0201 → Fuel Injector #1

Service Code 42/DTC P0202 → Fuel Injector #2

### Fuel Injector Removal/Installation

- Refer to the Throttle Body Assy Disassembly/Assembly.

### Fuel Injector Audible Inspection

#### NOTE

○ Be sure the battery is fully charged.

- Start the engine, and let it idle.
- Apply the flat tip screwdriver [A] to the fuel injector [B]. Put the grip end onto your ear, and listen whether the fuel injector is clicking or not.
- A sound scope can also be used.
- The click interval becomes shorter as the engine speed rises.
- Do the same for the other fuel injectors.
- ★ If all the fuel injectors click at a regular intervals, the fuel injectors are normal.
- Turn the ignition switch off.
- ★ If any fuel injector does not click, check the fuel injector resistance (see Fuel Injector Resistance Inspection).



### Fuel Injector Resistance Inspection

- Remove the air cleaner housing (see Air Cleaner Housing Removal).
- Disconnect the fuel injector connector.
- Connect a digital meter to the terminals [A] in each fuel injector.
- Measure the fuel injector resistance.

#### Fuel Injector Resistance

**Standard: About 11.5 ~ 12.5 Ω @20°C (68°F)**

- ★ If the reading is out of the standard, replace the fuel injector (see Throttle Body Assy Disassembly/Assembly).
- ★ If the reading is within the standard, check the power source voltage (see Fuel Injector Power Source Voltage Inspection).



## 3-82 FUEL SYSTEM (DFI)

### Fuel Injectors (Service Code 41, 42) (DTC P0201, P0202)

#### Fuel Injector Power Source Voltage Inspection

##### NOTE

○Be sure the battery is fully charged.

- Turn the ignition switch off.
- Remove the air cleaner housing (see Air Cleaner Housing Removal).
- Disconnect the fuel injector connector and connect the measuring adapter [A] between these connectors as shown.
  - Main Harness [B]
  - Fuel Injector [C]

##### Special Tool - Measuring Adapter: 57001-1700

- Connect a digital meter [D] to the measuring adapter lead.

##### Fuel Injector Power Source Voltage

###### Connections to Adapter:

###### For Fuel Injector #1, #2

Digital Meter (+) → R (injector W/R) lead


Digital Meter (-) → Battery (-) Terminal

- Measure the power source voltage with the engine stopped and with the connector joined.
- Turn the engine stop switch to run position.
- Turn the ignition switch on.

##### Power Source Voltage

Standard: Battery Voltage for 3 seconds, and then 0 V

- Turn the ignition switch off.
- ★ If the reading stays on battery voltage and never shows 0 V, check the fuel pump relay (see Relay Circuit Inspection in the Electrical System chapter).
- ★ If the fuel pump relay is normal, check the ECU for its ground and power supply (see ECU Power Supply Inspection).
- ★ If the ground and power supply are good, replace the ECU (see ECU Removal/Installation).
- ★ If there is still no battery voltage, check the fuel pump relay (see Relay Circuit Inspection in the Electrical System chapter).
- ★ If the fuel pump relay is normal, check the power source wiring (see Fuel Injector Circuit).
- ★ If the wiring is good, check the ECU for its ground and power supply (see ECU Power Supply Inspection).
- ★ If the ground and power supply are good, replace the ECU (see ECU Removal/Installation).
- ★ If the reading is in specification, check the output voltage (see Fuel Injector Output Voltage Inspection).

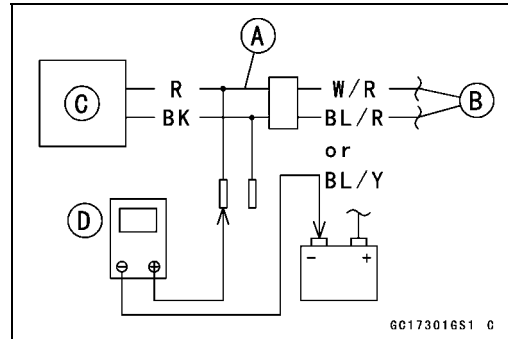



Fuel Injectors (Service Code 41, 42) (DTC P0201, P0202)


**Fuel Injector Output Voltage Inspection**

**NOTE**

○ Be sure the battery is fully charged.

- Turn the ignition switch off.
- Remove the ECU (see ECU Removal).
- Do not disconnect the ECU connector.
- Connect a digital meter [A] to the connector [B] with the needle adapter set.

**Special Tool - Needle Adapter Set: 57001-1457**

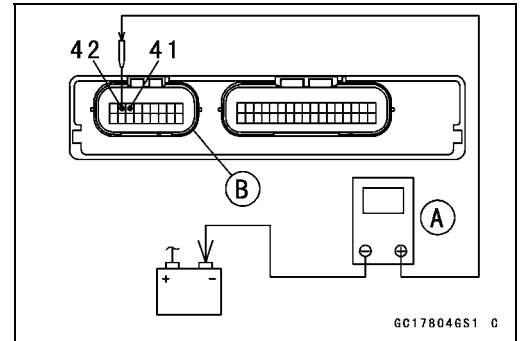

**Fuel Injector Output Voltage**

**Connections to ECU Connector:**

**For Fuel Injector #1**

Digital Meter (+) → BL/R lead (ECU terminal 42)

Digital Meter (-) → Battery (-) Terminal

**For Fuel Injector #2**

Digital Meter (+) → BL/Y lead (ECU terminal 41)

Digital Meter (-) → Battery (-) Terminal

- Measure the output voltage with the engine stopped and with the connector joined.
- Turn the engine stop switch to run position.
- Turn the ignition switch on.

**Output Voltage**

**Standard: Battery Voltage for 3 seconds, and then 0 V**

- Turn the ignition switch off.
- ★ If the reading is in specification, check the ECU for its ground and power supply (see ECU Power Supply Inspection).
- ★ If the ground and power supply are good, replace the ECU (see ECU Removal/Installation).
- ★ If the reading is out of the specification, remove the ECU and check the wiring for continuity between main harness connectors.
- Disconnect the ECU and injector connector.

**Wiring Continuity Inspection**

ECU Connector [A] ↔ Fuel Injector Connector [B]


**For Fuel Injector #1 [C]**

ECU Terminal 42 [D] ↔ Fuel Injector Terminal [E]

**For Fuel Injector #2**

ECU Terminal 41 ↔ Fuel Injector Terminal

- ★ If the wiring is good, check the ECU for its ground and power supply (see ECU Power Supply Inspection).
- ★ If the ground and power supply are good, replace the ECU (see ECU Removal/Installation).

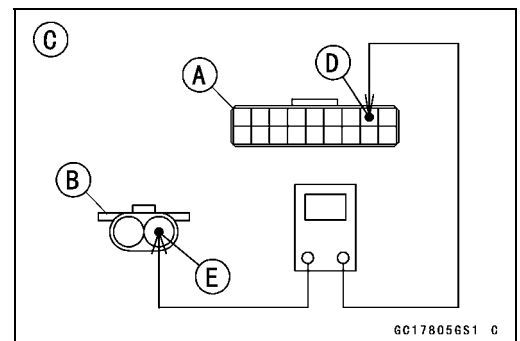

## 3-84 FUEL SYSTEM (DFI)

### Fuel Injectors (Service Code 41, 42) (DTC P0201, P0202)

#### Fuel Injector Fuel Line Inspection

- Remove:
  - Fuel Tank (see Fuel Tank Removal)
  - Fuel Hose (see Fuel Hose Replacement in the Periodic Maintenance chapter)
- Be sure to place a piece of cloth around the fuel outlet pipe of the fuel pump and the delivery pipe of the throttle body assy.

#### **⚠ WARNING**

**Fuel is flammable and explosive under certain conditions and can cause severe burns. Be prepared for fuel spillage; any spilled fuel must be completely wiped up immediately. When the fuel hose is disconnected, fuel spills out from the hose and the pipe because of residual pressure. Cover the hose connection with a piece of clean cloth to prevent fuel spillage.**


- Check the fuel injector fuel line for leakage as follows.
  - Connect a commercially available vacuum/pressure pump [A] to the nipple of the delivery pipe [B] with the fuel hose [C] (both ends with the clamps [D]) as shown.
  - Apply soap and water solution to the areas [E] as shown.
  - Watching the pressure gauge, squeeze the pump lever [F], and build up the pressure until the pressure reaches the maximum pressure.

**Injector Fuel Line Maximum Pressure**  
Standard: 300 kPa (3.06 kgf/cm<sup>2</sup>, 43 psi)

#### **NOTICE**


**During pressure testing, do not exceed the maximum pressure for which the system is designed.**

- Watch the gauge for at least 6 seconds.
- ★ If the pressure holds steady, the fuel line is good.
- ★ If the pressure drops at once or if bubbles are found in the area, the fuel line is leaking. Replace the delivery pipe, fuel injectors and related parts (see Throttle Body Assy Disassembly/Assembly).
- Repeat the leak test, and check the fuel line for no leakage.
- Install:
  - Fuel Hose (see Fuel Hose Replacement in the Periodic Maintenance chapter)
  - Fuel Tank (see Fuel Tank Installation)
- Start the engine and check for fuel leakage.

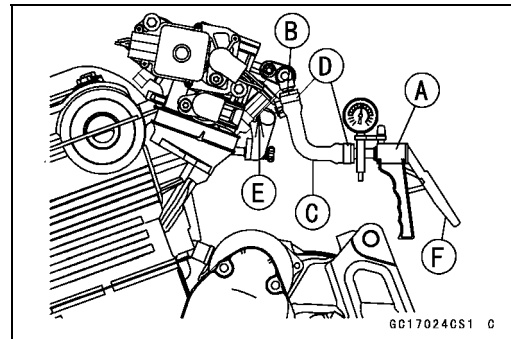

## Fuel Injectors (Service Code 41, 42) (DTC P0201, P0202)

### Fuel Injector Circuit

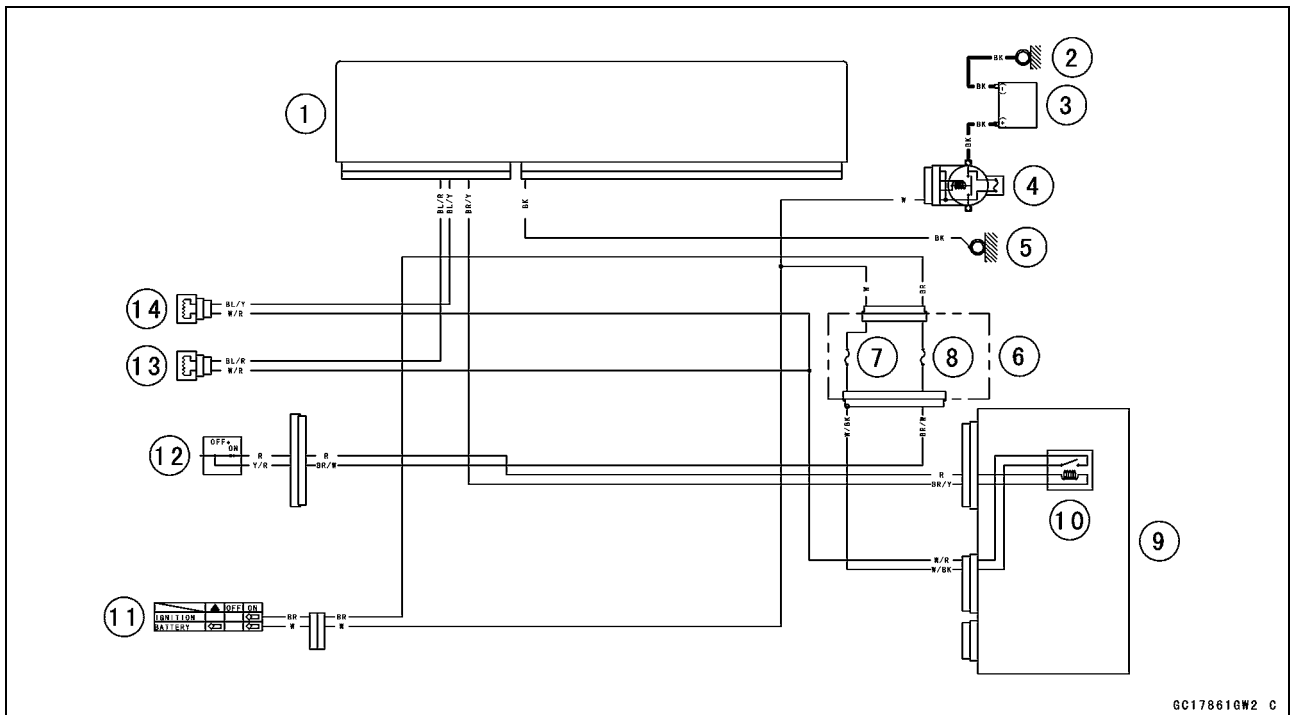

GC178610W2 C

1. ECU
2. Engine Ground
3. Battery
4. Main Fuse 30 A
5. Frame Ground (3)
6. Fuse Box (1)
7. ECU Fuse 15 A
8. Ignition Fuse 10 A
9. Relay Box
10. Fuel Pump Relay
11. Ignition Switch
12. Engine Stop Switch
13. Fuel Injector #1
14. Fuel Injector #2

## 3-86 FUEL SYSTEM (DFI)

### Stick Coils #1, #2 (Service Code 51, 52) (DTC P0351, P0352)

Inspect the eligible stick coil according to the following service code or DTC.

Service Code 51/DTC P0351 → Stick Coil #1

Service Code 52/DTC P0352 → Stick Coil #2

#### Stick Coil Removal/Installation

- Refer to the Stick Coil Removal/Installation in the Electrical System chapter.

#### Stick Coil Primary Winding Resistance Inspection

- Refer to the Stick Coil Inspection in the Electrical System chapter.
- ★ If the reading is within the standard, check the input voltage (see Stick Coil Input Voltage Inspection).

#### Stick Coil Input Voltage Inspection

##### NOTE

○ Be sure the battery is fully charged.

- Turn the ignition switch off.
- Remove the ECU (see ECU Removal).
- Do not disconnect the ECU connectors.
- Connect a digital meter [A] to the connector [B] with the needle adapter set.

**Special Tool - Needle Adapter Set: 57001-1457**

#### Stick Coil Input Voltage

##### Connections to ECU Connector:

##### For Stick Coil #1

Digital Meter (+) → BK lead (terminal 43)

Digital Meter (-) → Battery (-) Terminal

##### For Stick Coil #2

Digital Meter (+) → BK/O lead (terminal 52)


Digital Meter (-) → Battery (-) Terminal

- Measure the input voltage to each primary winding of the stick coils with the engine stopped and with the connectors joined.
- Turn the engine stop switch to run position.
- Turn the ignition switch on.

#### Input Voltage


**Standard: Battery Voltage**

- Turn the ignition switch off.
- ★ If the input voltage is out of the standard, check the wiring for continuity (see Stick Coil Circuit).
- ★ If the wiring is good, check the ECU for its ground and power supply (see ECU Power Supply Inspection).
- ★ If the ground and power supply are good, replace the ECU (see ECU Removal/Installation).
- ★ If the input voltage is within the standard, check the ECU for its ground and power supply (see ECU Power Supply Inspection).
- ★ If the ground and power supply are good, replace the ECU (see ECU Removal/Installation).

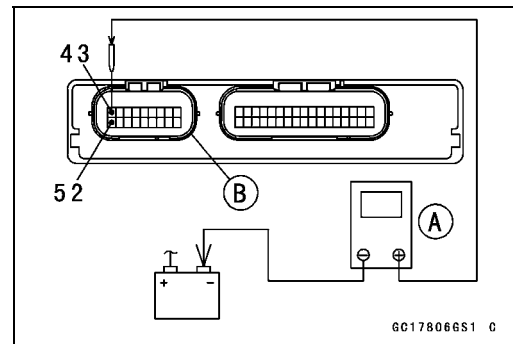

Stick Coils #1, #2 (Service Code 51, 52) (DTC P0351, P0352)

Stick Coil Circuit

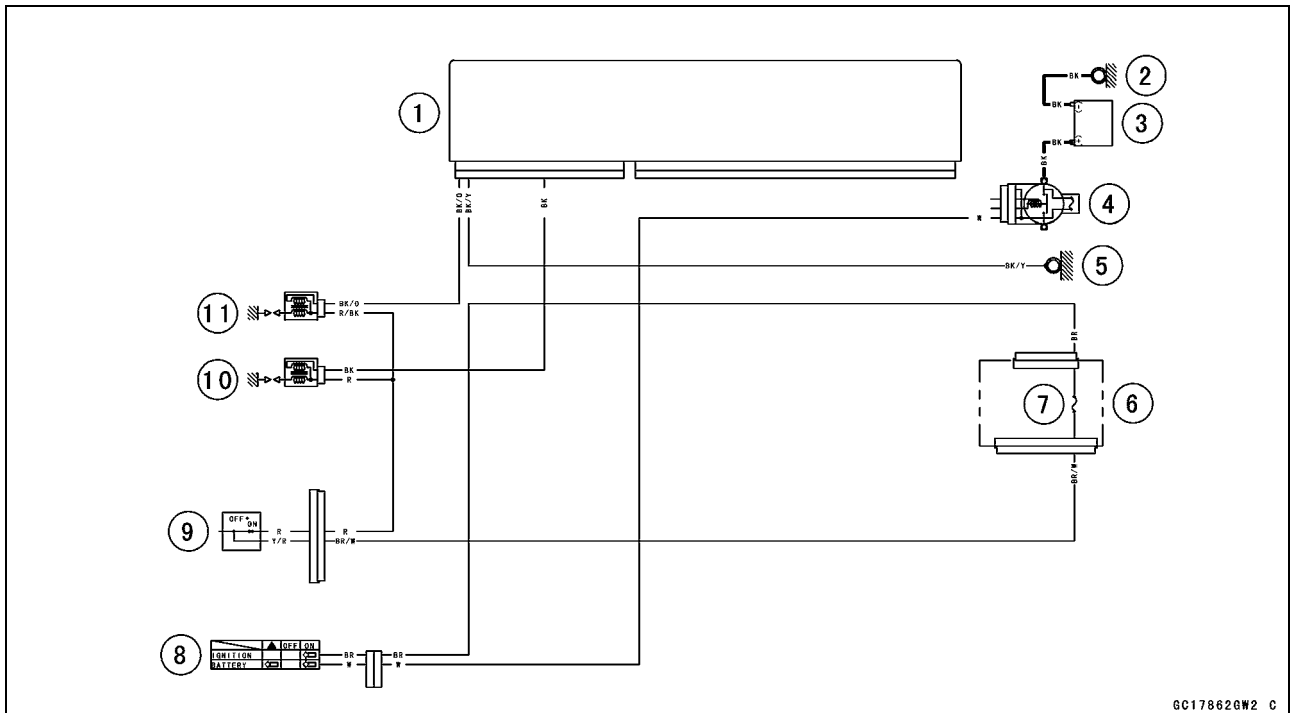

GC17862GW2 C

1. ECU
2. Engine Ground
3. Battery
4. Main Fuse 30 A
5. Frame Ground (3)
6. Fuse Box (1)
7. Ignition Fuse 10 A
8. Ignition Switch
9. Engine Stop Switch
10. Stick Coil #1
11. Stick Coil #2

## 3-88 FUEL SYSTEM (DFI)

### Radiator Fan Relay (Service Code 56) (DTC P0480)

#### Radiator Fan Relay Removal/Installation


- The radiator fan relay is built in the relay box [A].
- Refer to the Relay Box Removal in the Electrical System chapter.



#### Radiator Fan Relay Inspection

- Refer to the Relay Circuit Inspection in the Electrical System chapter.
- ★ If the radiator fan relay is normal, check the wiring for continuity (see Radiator Fan Relay Circuit).
- ★ If the wiring is good, check the ECU for its ground and power supply (see ECU Power Supply Inspection).
- ★ If the ground and power supply are good, replace the ECU (see ECU Removal/Installation).

#### Radiator Fan Relay Circuit

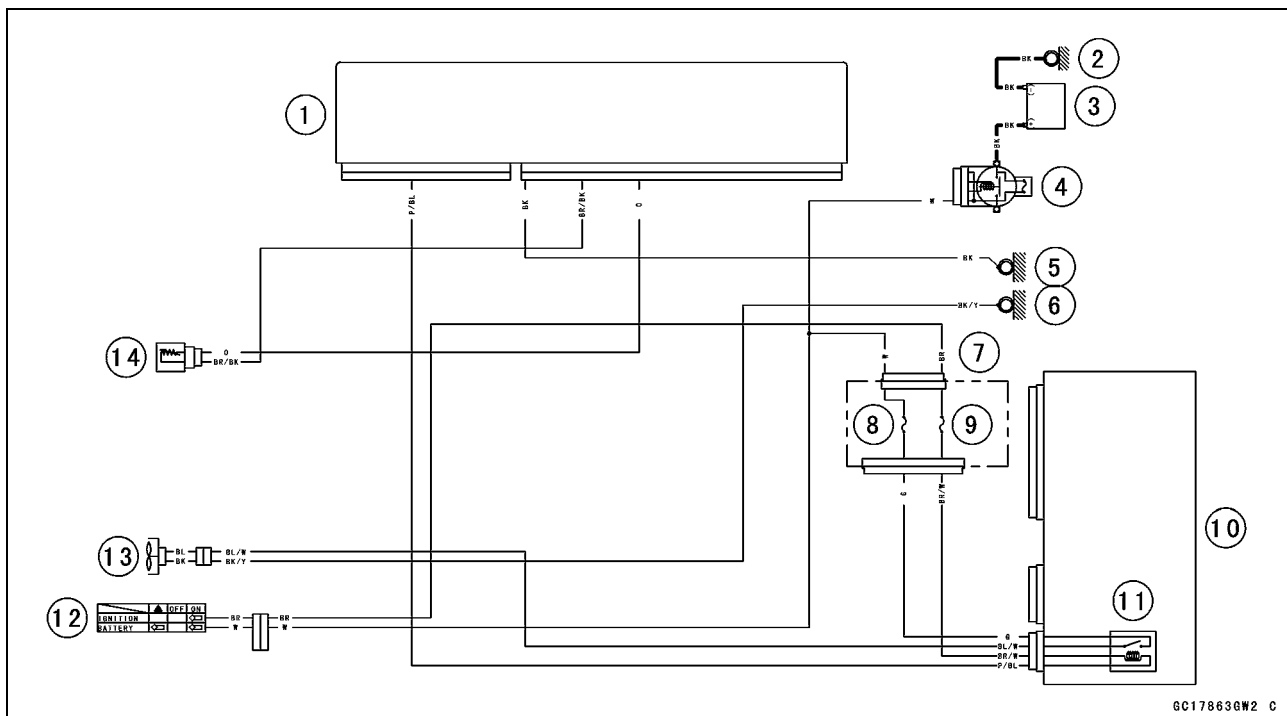

GC178636W2 C

- |                     |                              |
|---------------------|------------------------------|
| 1. ECU              | 8. Fan Fuse 15 A             |
| 2. Engine Ground    | 9. Ignition Fuse 10 A        |
| 3. Battery          | 10. Relay Box                |
| 4. Main Fuse 30 A   | 11. Radiator Fan Relay       |
| 5. Frame Ground (3) | 12. Ignition Switch          |
| 6. Frame Ground (1) | 13. Fan Motor                |
| 7. Fuse Box (1)     | 14. Water Temperature Sensor |

Subthrottle Valve Actuator (Service Code 62) (DTC P2100)

**Subthrottle Valve Actuator Removal**

**NOTICE**

Do not remove the subthrottle valve actuator [A] since it has been adjusted and set with precision at the factory.  
 Never drop the throttle body assy especially on a hard surface. Such a shock to the subthrottle valve actuator can damage it.



**Subthrottle Valve Actuator Inspection**

**NOTE**

○Be sure the battery is fully charged.

- Remove the air cleaner housing (see Air Cleaner Housing Removal).
- Turn the ignition switch on.
- Check to see that all the subthrottle valves [A] open and close smoothly.
- Turn the ignition switch off.
- ★ If the subthrottle valves do not operate, check the subthrottle valve actuator resistance (see Subthrottle Valve Actuator Resistance Inspection).



**Subthrottle Valve Actuator Resistance Inspection**

- Turn the ignition switch off.
- Remove the air cleaner housing (see Air Cleaner Housing Removal).
- Disconnect the subthrottle valve actuator connector [A].



- Connect a digital meter to the subthrottle valve actuator connector [A].
- Measure the subthrottle valve actuator resistance.


**Subthrottle Valve Actuator Resistance**

Connections: BK lead [1] ↔ P lead [2]

G lead [3] ↔ W/BL lead [4]

Standard: About 5.2 ~ 7.8 Ω @20°C (68°F)

- ★ If the reading is out of the standard, replace the throttle body assy (see Throttle Body Assy Removal/Installation).
- ★ If the reading is within the standard, check the input voltage (see Subthrottle Valve Actuator Input Voltage Inspection).

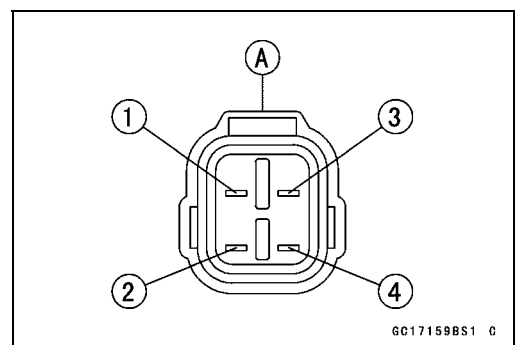

6C171598S1 C

## 3-90 FUEL SYSTEM (DFI)

### Subthrottle Valve Actuator (Service Code 62) (DTC P2100)

#### Subthrottle Valve Actuator Input Voltage Inspection

##### NOTE

○ Be sure the battery is fully charged.

- Turn the ignition switch off.
- Remove the air cleaner housing (see Air Cleaner Housing Removal).
- Open the clamp.
- Disconnect the subthrottle valve actuator connector and connect the measuring adapter [A] between these connectors as shown.

Main Harness [B]

Subthrottle Valve Actuator [C]

**Special Tool - Measuring Adapter: 57001-1700**

- Connect the peak voltage adapter [D] and a digital meter [E] to the measuring adapter leads.

**Special Tool - Peak Voltage Adapter: 57001-1415**  
**Type: KEK-54-9-B**

#### Subthrottle Valve Actuator Input Voltage Connections to Adapter:

(I) Digital Meter (+) → R (actuator P) lead

Digital Meter (-) → BK (actuator BK) lead

(II) Digital Meter (+) → Y (actuator W/BL) lead

Digital Meter (-) → W (actuator G) lead

- Measure the actuator input voltage with the engine stopped and with the connector joined.
- Turn the ignition switch on.

#### Input Voltage

**Standard: About DC 8.5 ~ 10.5 V and then 0 V or About DC 8.5 ~ 10.5 V**

- Turn the ignition switch off.
- ★ If the reading is in specification, but the actuator does not operate, replace the throttle body assy (see Throttle Body Assy Removal/Installation).
- ★ If the reading is out of the specification, remove the ECU and check the wiring for continuity between main harness connectors.
- Disconnect the ECU and actuator connectors.

#### Wiring Continuity Inspection

**ECU Connector [A] ↔**

**Subthrottle Valve Actuator Connector [B]**




**ECU Terminal 1 [C] ↔ Actuator Terminal [D]**

**ECU Terminal 2 [E] ↔ Actuator Terminal [F]**

**ECU Terminal 18 [G] ↔ Actuator Terminal [H]**

**ECU Terminal 19 [I] ↔ Actuator Terminal [J]**


- ★ If the wiring is good, check the ECU for its ground and power supply (see ECU Power Supply Inspection).
- ★ If the ground and power supply are good, replace the ECU (see ECU Removal/Installation).

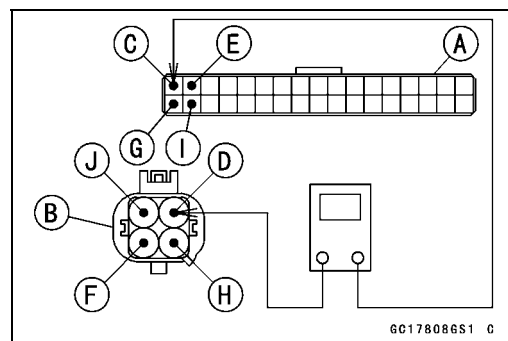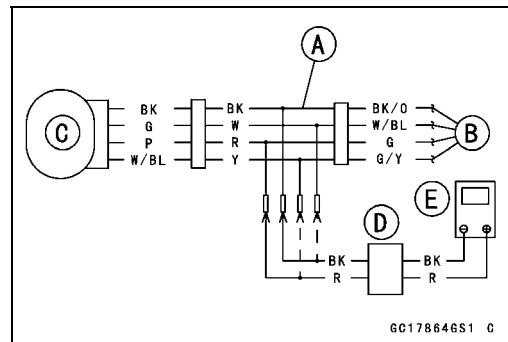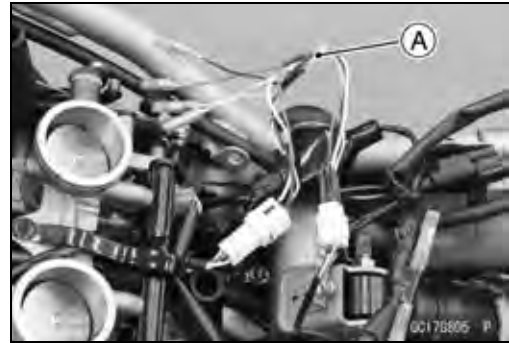



Subthrottle Valve Actuator (Service Code 62) (DTC P2100)

Subthrottle Valve Actuator Circuit

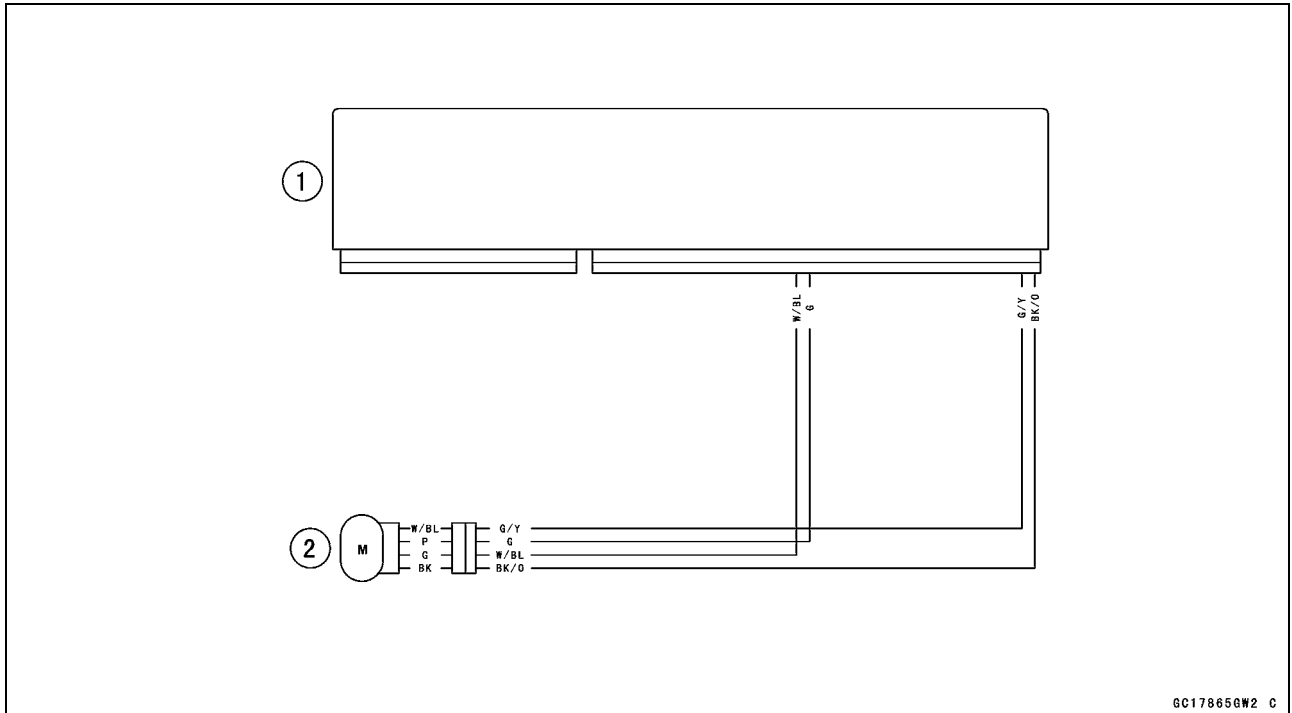

- 1. ECU
- 2. Subthrottle Valve Actuator

### 3-92 FUEL SYSTEM (DFI)

#### Air Switching Valve (Service Code 64) (DTC P0410)


##### **Air Switching Valve Removal/Installation**

- Refer to the Air Switching Valve Removal/Installation in the Engine Top End chapter.

##### **Air Switching Valve Inspection**

- Refer to the Air Switching Valve Unit Test in the Electrical System chapter.
- ★ If the air switching valve is normal, check the wiring for continuity (see Air Switching Valve Circuit).
- ★ If the wiring is good, check the ECU for its ground and power supply (see ECU Power Supply Inspection).
- ★ If the ground and power supply are good, replace the ECU (see ECU Removal/Installation).

##### **Air Switching Valve Circuit**

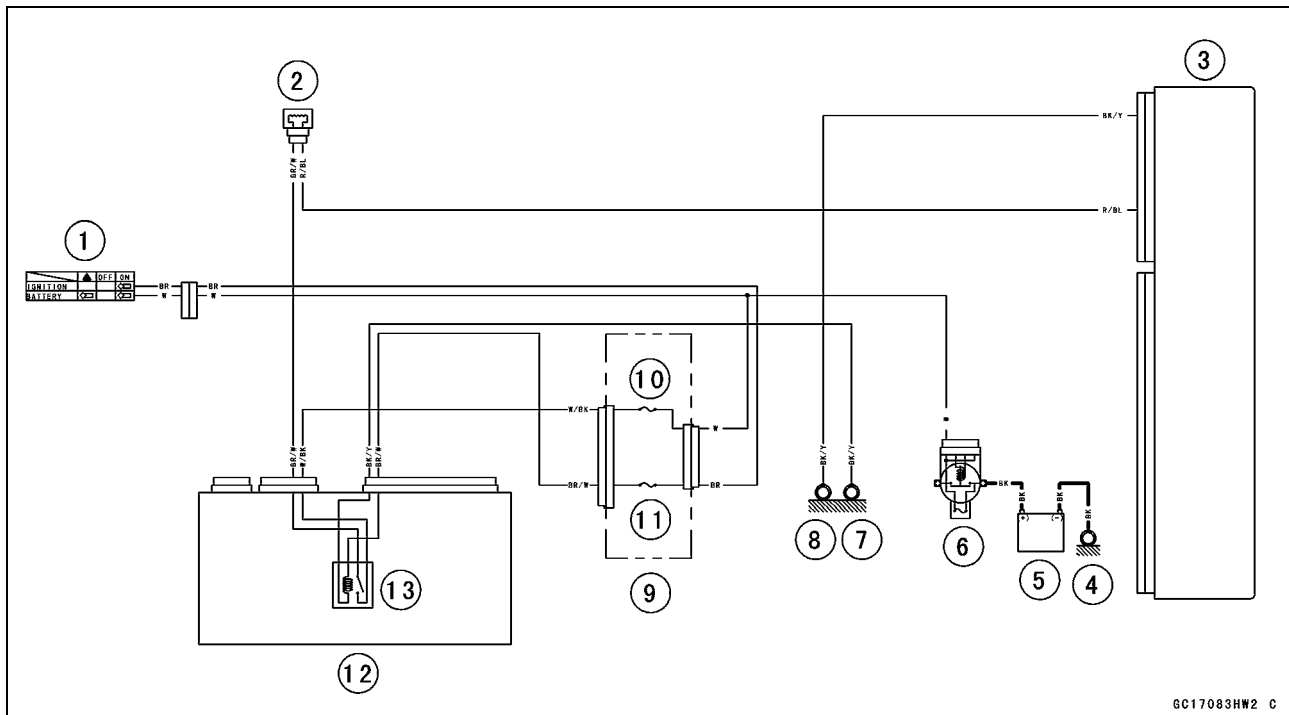

- |                        |                        |
|------------------------|------------------------|
| 1. Ignition Switch     | 8. Frame Ground (3)    |
| 2. Air Switching Valve | 9. Fuse Box (1)        |
| 3. ECU                 | 10. ECU Fuse 15 A      |
| 4. Engine Ground       | 11. Ignition Fuse 10 A |
| 5. Battery             | 12. Relay Box          |
| 6. Main Fuse 30 A      | 13. ECU Main Relay     |
| 7. Frame Ground (4)    |                        |

**Oxygen Sensor Heater (Service Code 67) (DTC P0030)**

**Oxygen Sensor Heater Removal/Installation**

The oxygen sensor heater is built in the oxygen sensor. So, the heater itself can not be removed. Remove the oxygen sensor (see Oxygen Sensor Removal/Installation in the Electrical System chapter).

**Oxygen Sensor Heater Resistance Inspection**

- Turn the ignition switch off.
- Remove the engine sprocket cover (see Engine Sprocket Removal in the Final Drive chapter).
- Disconnect the oxygen sensor lead connector [A].




- Connect a digital meter [A] to the oxygen sensor lead connector [B].
- Measure the oxygen sensor heater resistance.

**Oxygen Sensor Heaters Resistance**

**Connections: BK lead [C] ↔ BK lead [D]**

**Standard: 5.49 ~ 6.91 Ω @20° C (68°F)**

- ★ If the reading is out of the standard, replace the sensor (see Oxygen Sensor Removal/Installation in the Electrical System chapter).
- ★ If the reading is within the standard, check the power source voltage (see Oxygen Sensor Heater Power Source Voltage Inspection).

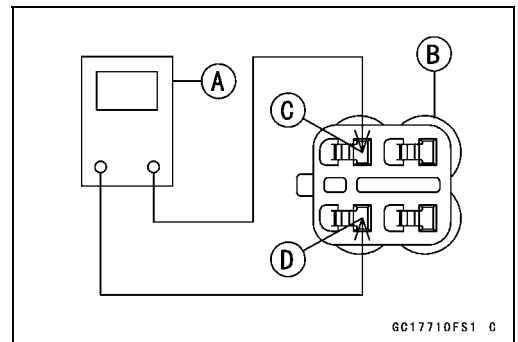

## 3-94 FUEL SYSTEM (DFI)

### Oxygen Sensor Heater (Service Code 67) (DTC P0030)

#### Oxygen Sensor Heater Power Source Voltage Inspection

##### NOTE

○Be sure the battery is fully charged.

- Turn the ignition switch off.
- Remove the engine sprocket cover (see Engine Sprocket Removal in the Final Drive chapter).
- Disconnect the oxygen sensor lead connector and connect the measuring adapter [A] between these connectors.

**Special Tool - Oxygen Sensor Measuring Adapter: 57001-1682**

- Connect a digital meter to the measuring adapter lead.

#### Oxygen Sensor Power Source Voltage Connections to Adapter:

**Digital Meter (+) → W (main harness BR/W) lead**

**Digital Meter (-) → Frame Ground Terminal**

- Measure the power source voltage with the engine stopped and with the connector joined.
- Turn the ignition switch on.

#### Power Source Voltage

**Standard: Battery Voltage**

- Turn the ignition switch off.
- ★ If the reading is in specification, but the problem still exists, replace the ECU (see ECU Removal/Installation).
- ★ If the reading is out of the standard, check the following.
  - ECU Fuse 15 A (see Fuse Inspection in the Electrical System chapter)
  - Power Source Wiring (see Oxygen Sensor Circuit)
- ★ If the fuse and wiring are good, remove the ECU and check the wiring for continuity between main harness connectors.
- Disconnect the ECU and sensor connectors.


#### Wiring Continuity Inspection

**ECU Connector [A] ↔**

**Oxygen Sensor Connector [B]**


**ECU Terminal 29 [C] ↔ Sensor Terminal [D]**

- ★ If the wiring is good, check the ECU for its ground and power supply (see ECU Power Supply Inspection).
- ★ If the ground and power supply are good, replace the ECU (see ECU Removal/Installation).

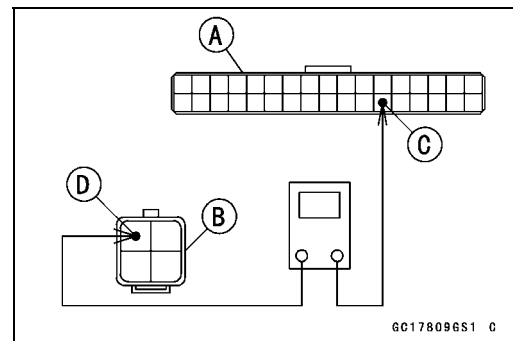

Oxygen Sensor Heater (Service Code 67) (DTC P0030)

Oxygen Sensor Circuit

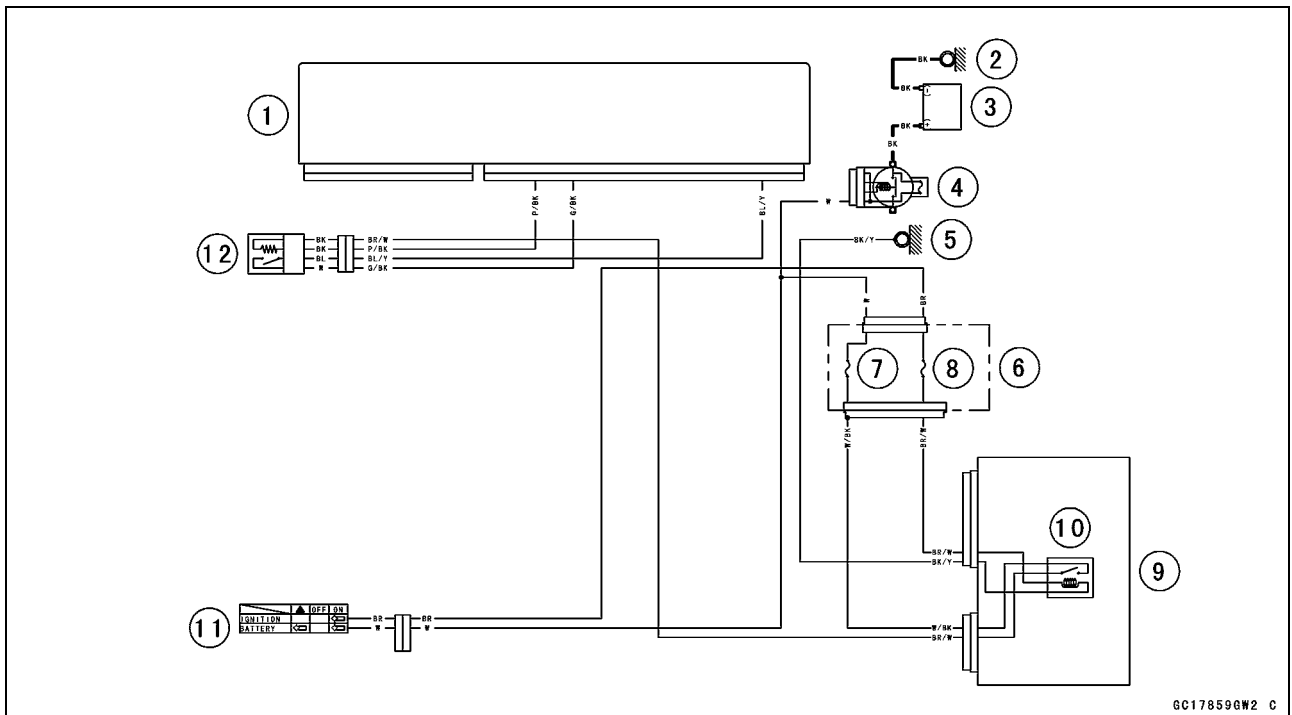

GC178596W2 C

1. ECU
2. Engine Ground
3. Battery
4. Main Fuse 30 A
5. Frame Ground (4)
6. Fuse Box (1)
7. ECU Fuse 15 A
8. Ignition Fuse 10 A
9. Relay Box
10. ECU Main Relay
11. Ignition Switch
12. Oxygen Sensor

## 3-96 FUEL SYSTEM (DFI)

### Fuel Supply System (Service Code 94) (DTC P0170)

---

#### *Fuel Supply System Inspection*

##### **NOTE**


○ *If the motorcycle has any other service code, first inspect the other service code.*

- Inspect the General fuel system (throttle body assy, air cleaner, fuel tank etc.).
- ★ If the General fuel system is good, check the ECU for its ground and power supply (see ECU Power Supply Inspection).
- ★ If the ground and power supply are good, replace the ECU (see ECU Removal/Installation).


**Purge Valve (Service Code 3A) (DTC P0443) (Equipped Models)**

**Purge Valve Removal/Installation**

- Remove:
  - Side Covers (see Side Cover Removal in the Frame chapter)
  - Purge Valve Mounting Nut [A]

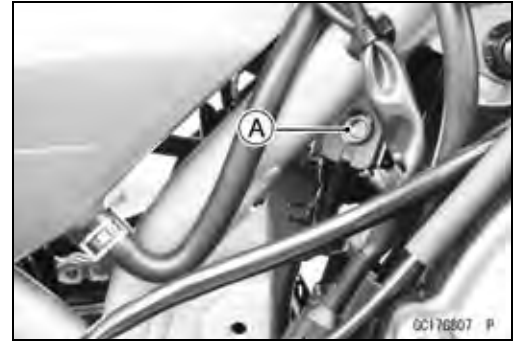

- Pull out the purge valve [A] from the left side of the frame.
- Disconnect the purge valve connector [B].
- Slide the clamps [C], and disconnect the hoses [D].

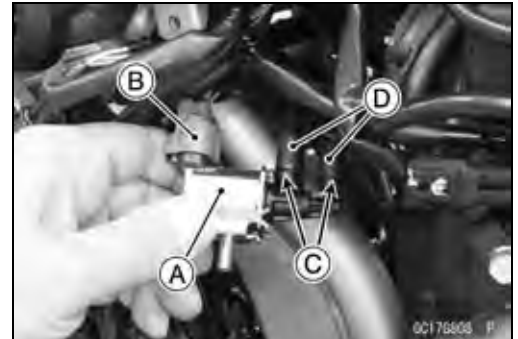

- Installation is the reverse of removal.
- Run the hoses correctly (see Cable, Wire, and Hose Routing section in the Appendix chapter).
- Tighten:
  - Torque - Purge Valve Mounting Nut: 7.0 N·m (0.71 kgf·m, 62 in·lb)**

**Purge Valve Inspection**



- Remove the purge valve (see Purge Valve Removal/Installation).
- Connect a digital meter [A] to the purge valve terminals as shown.

**Purge Valve Resistance**

**Standard: 30 ~ 34 Ω @20°C (68°F)**

- ★ If the resistance reading is out of the specified value, replace it with a new one.


- Connect the 12 V battery [A] to the purge valve terminals as shown.

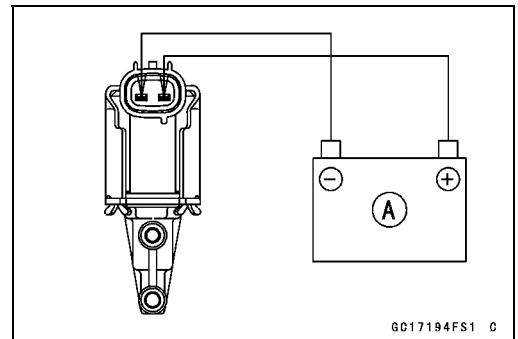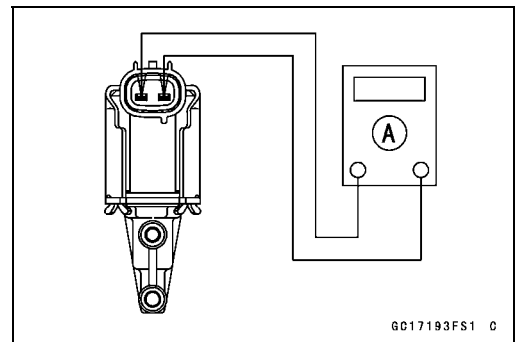


### 3-98 FUEL SYSTEM (DFI)

#### Purge Valve (Service Code 3A) (DTC P0443) (Equipped Models)


- Blow the air to the intake air duct [A], and make sure that the air flows from the outlet air duct [B].

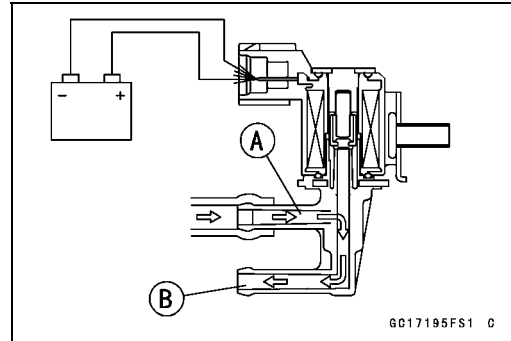

- Disconnect the 12 V battery.
- Blow the air to the intake air duct [A] again, and make sure that the air does not flow from the outlet air duct [B].
- ★ If the purge valve does not operate as described, replace it with a new one.
- ★ If the purge valve is normal, check the wiring for continuity (see Purge Valve Circuit).
- ★ If the wiring is good, check the ECU for its ground and power supply (see ECU Power Supply Inspection).
- ★ If the ground and power supply are good, replace the ECU (see ECU Removal/Installation).

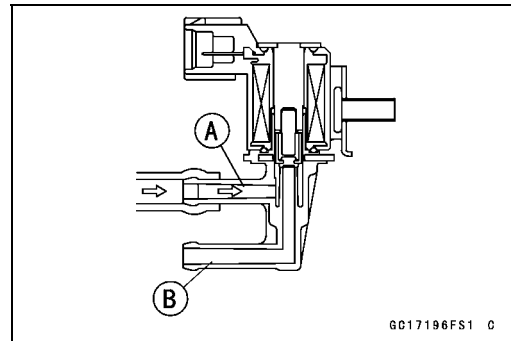

#### Purge Valve Circuit

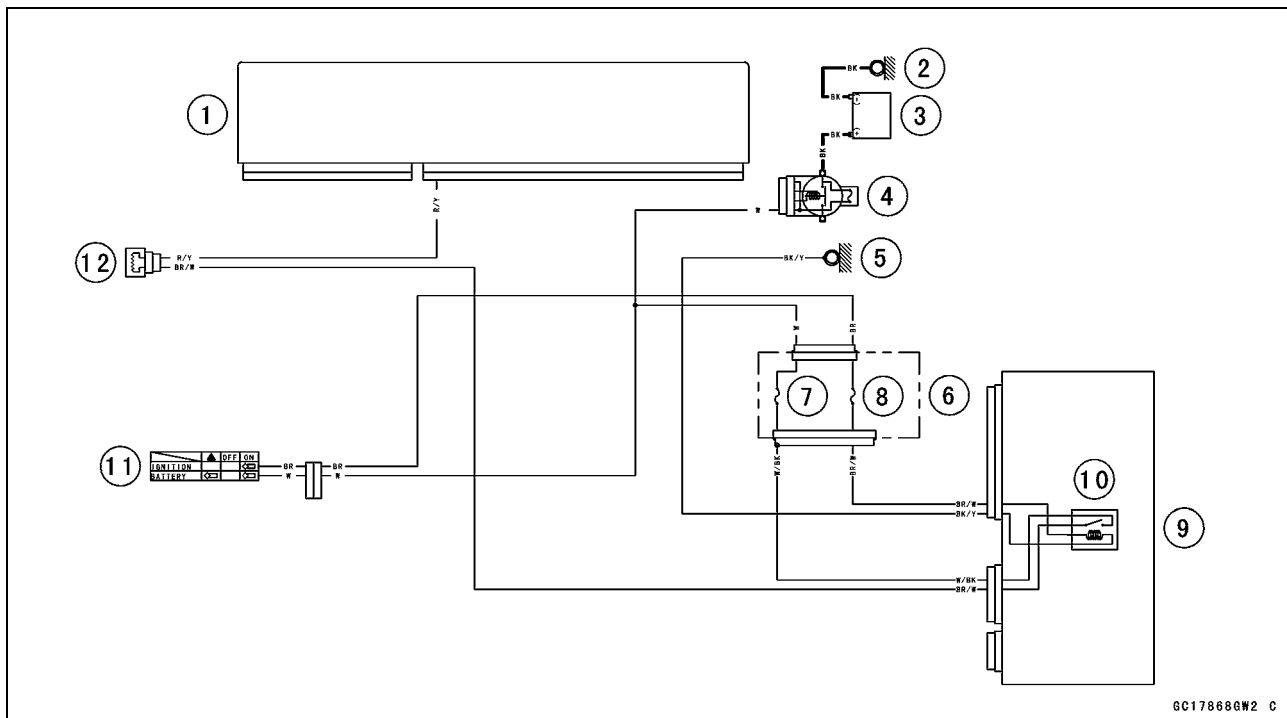

1. ECU
2. Engine Ground
3. Battery
4. Main Fuse 30 A
5. Frame Ground (4)
6. Fuse Box (1)
7. ECU Fuse 15 A
8. Ignition Fuse 10 A
9. Relay Box
10. ECU Main Relay
11. Ignition Switch
12. Purge Valve



**Warning Indicator Light (LED)**

**Yellow Engine Warning/Red Warning Indicator Light (LED) Inspection**

Red Warning Indicator Light (LED) [A]


Yellow Engine Warning Indicator Light (LED) [B]

○ In this model, the above mentioned warning indicator lights (LED) go on or blink by the data sent from the ECU.

● Refer to the Meter Unit Inspection in the Electrical System chapter.



**Warning Indicator (LED) Circuit**

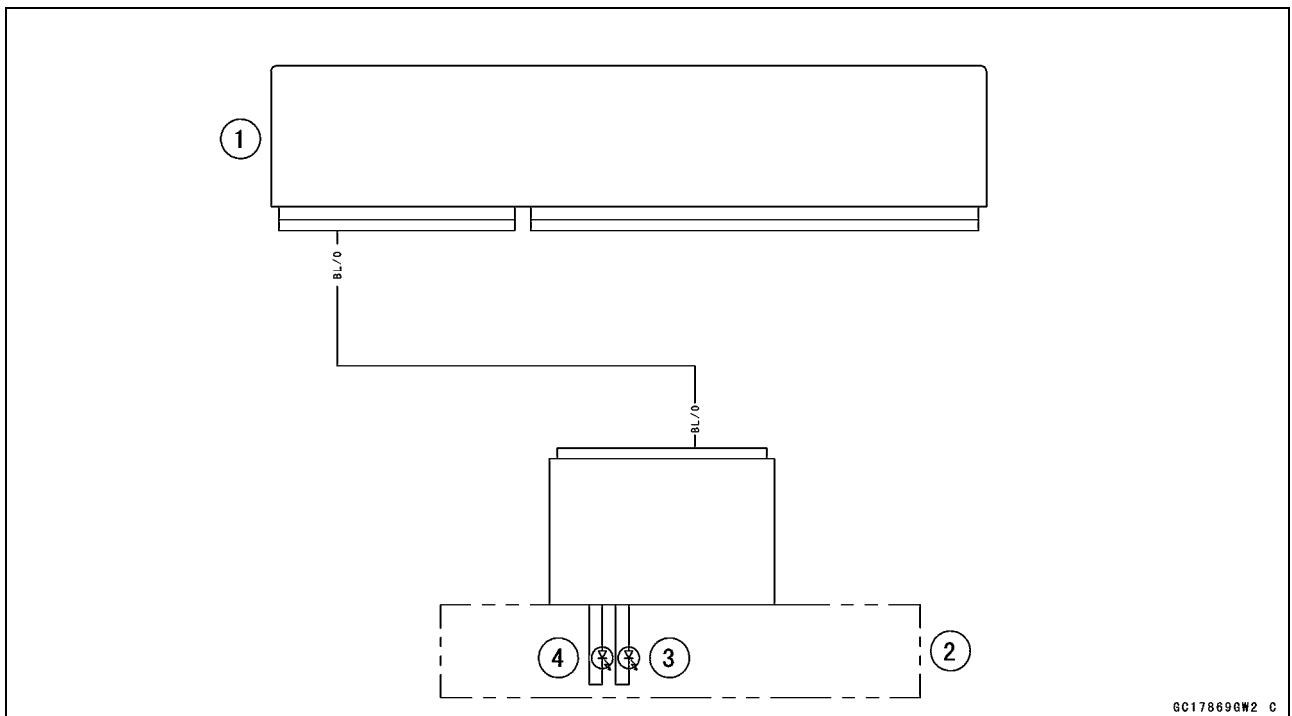

- 1. ECU
- 2. Meter Unit
- 3. Red Warning Indicator Light (LED)
- 4. Yellow Engine Warning Indicator Light (LED)

# 3-100 FUEL SYSTEM (DFI)


## ECU

### ECU Identification

Most countries have their own regulations, so each ECU has different characteristics. So, do not confuse ECU with each other and use only the ECU for your model. Otherwise, the motorcycle cannot clear the regulation.

### ECU Identification

Part Number [A]	Specification
21175-1176	SEA-B1
	WVTA (FULL)
21175-1187	US
	CA
21175-1188	ID
	PH
21175-1191	IN
	SEA-B3
21175-1192	CN
21175-1193	TH
21175-1194	CAL
21175-1195	AU
	AU LAMS
	MY

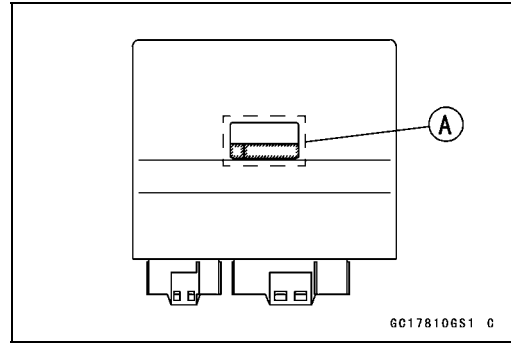


### ECU Removal

#### NOTICE

**Never drop the ECU especially on a hard surface. Such a shock to the ECU can damage it.**

- Remove:  
Fuel Tank (see Fuel Tank Removal)
- Disconnect the ECU connectors [A].
- Remove:  
ECU [B]

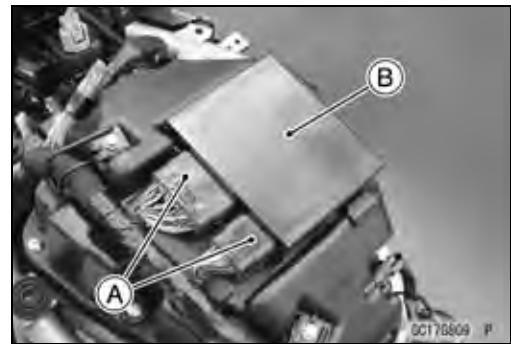


### ECU Installation

- Installation is the reverse of removal.

**ECU**

**ECU Power Supply Inspection**

- Remove the fuel tank (see Fuel Tank Removal).
- Visually inspect the ECU connectors.
- ★ If the connector is clogged with mud or dust, blow it off with compressed air.
- Remove the ECU (see ECU Removal).
- Visually inspect the terminals [A] of the ECU and main harness connectors.
- ★ If the terminals of the main harness connectors are damaged, replace the main harness.
- ★ If the terminals of the ECU connectors are damaged, replace the ECU.

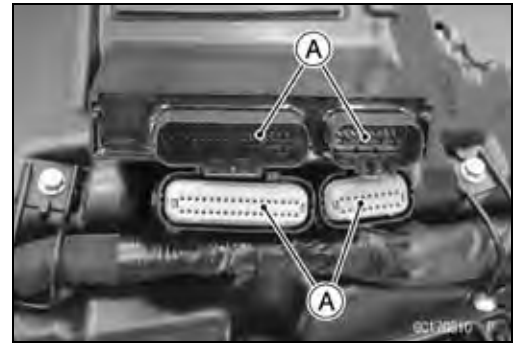

- Turn the ignition switch off.
- Disconnect the ECU connectors [A].
- Set a tester [B] and check the following wiring for continuity.

**ECU Grounding Inspection**


**Connections:**

- (I) ECU Terminal 34, 50 or 51 ↔ Battery (-) Terminal
- (II) Engine Ground ↔ Battery (-) Terminal

**Criteria:**

**Both: 0 Ω**

- ★ If no continuity, check the connectors, the engine ground lead, or main harness, and repair or replace them if necessary.

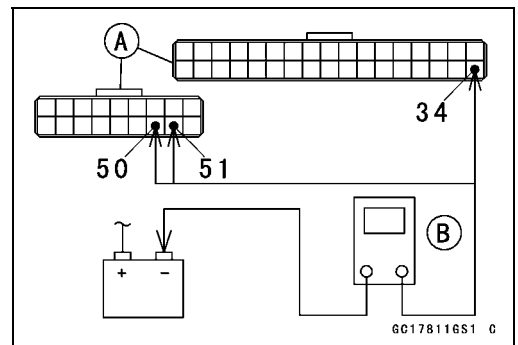

## 3-102 FUEL SYSTEM (DFI)

### ECU

★ If the wiring is good, check the power source voltage of the ECU.

#### NOTE

○ Be sure the battery is fully charged.

- Connect the ECU connectors.
- Connect a digital meter [A] to the connectors [B] with the needle adapter set.

**Special Tool - Needle Adapter Set: 57001-1457**

#### ECU Power Supply Inspection

##### Connections:

(I) Digital Meter (+) → BR/W lead (terminal 16)

Digital Meter (-) → Battery (-) Terminal

(II) Digital Meter (+) → W/BK lead (terminal 35)

Digital Meter (-) → Battery (-) Terminal

##### Ignition Switch off:

BR/W (terminal 16): 0 V

W/BK (terminal 35): Battery Voltage

##### Ignition Switch on:

Both: Battery Voltage

★ If the reading is out of the specification, check the following.


Main Fuse 30 A (see Fuse Inspection in the Electrical System chapter)

ECU Fuse 15 A (see Fuse Inspection in the Electrical System chapter)

ECU Main Relay (see Relay Circuit Inspection in the Electrical System chapter)


Power Source Wiring (see ECU Power Source Circuit)

★ If the fuse, wiring and relay are good, replace the ECU (see ECU Removal/Installation).

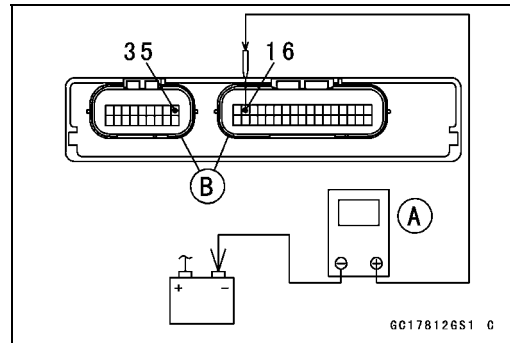

ECU

ECU Power Source Circuit

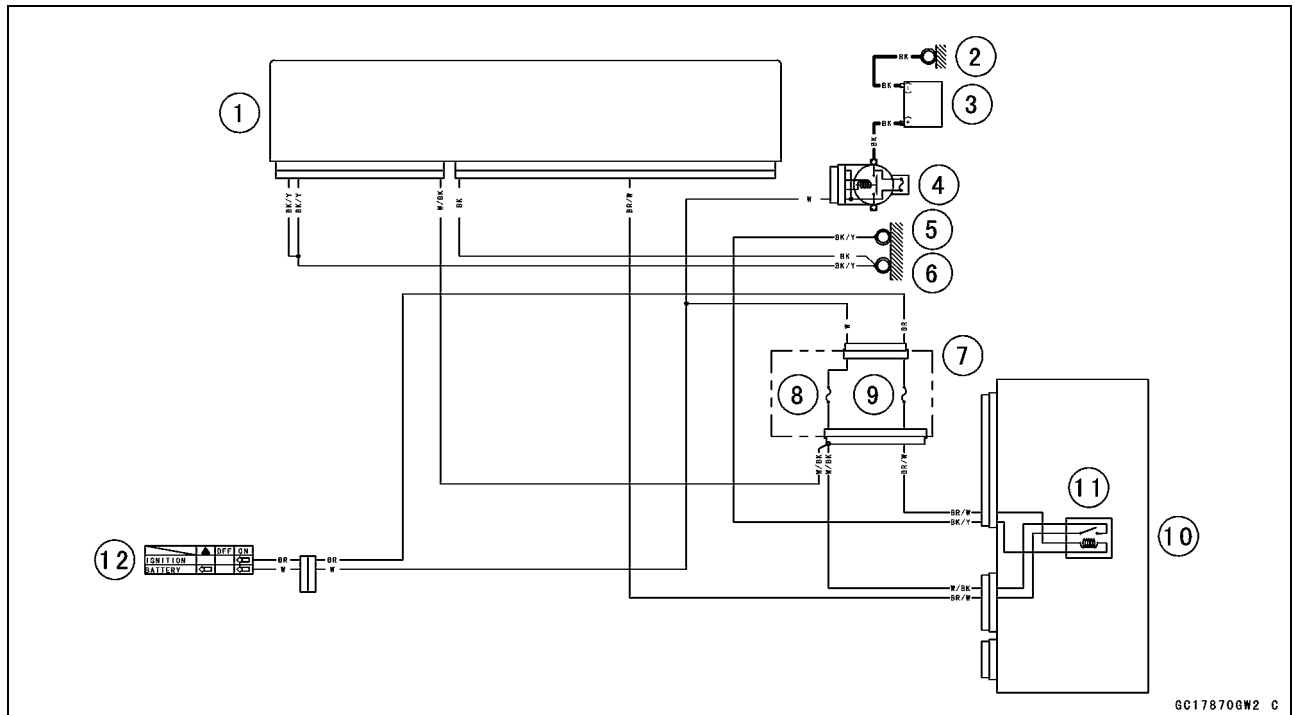

GC178706W2 C

1. ECU
2. Engine Ground
3. Battery
4. Main Fuse 30 A
5. Frame Ground (2)
6. Frame Ground (5)
7. Fuse Box (1)
8. ECU Fuse 15 A
9. Ignition Fuse 10 A
10. Relay Box
11. ECU Main Relay
12. Ignition Switch

## 3-104 FUEL SYSTEM (DFI)

### DFI Power Source

---

#### ***ECU Fuse Removal***

- Refer to the Fuse Box Fuse Removal in the Electrical System chapter.

#### ***ECU Fuse Installation***

- ★ If a fuse fails during operation, inspect the DFI system to determine the cause, and then replace it with a new fuse of proper amperage.
- Refer to the Fuse Installation in the Electrical System chapter.

#### ***ECU Fuse Inspection***

- Refer to the Fuse Inspection in the Electrical System chapter.

#### ***ECU Main Relay Removal/Installation***

○ The ECU main relay is built in the relay box [A].

- Refer to the Relay Box Removal in the Electrical System chapter.



#### ***ECU Main Relay Inspection***

- Refer to the Relay Circuit Inspection in the Electrical System chapter.

**Fuel Line**

**Fuel Pressure Inspection**

**NOTE**

○Be sure the battery is fully charged.


- Remove:
  - Fuel Tank (see Fuel Tank Removal)
  - Fuel Hose (see Fuel Hose Replacement in the Periodic Maintenance chapter)
- Be sure to place a piece of cloth around the fuel outlet pipe of the fuel pump and the delivery pipe of the throttle body assy.

**⚠ WARNING**

**Fuel is flammable and explosive under certain conditions and can cause severe burns. Be prepared for fuel spillage; any spilled fuel must be completely wiped up immediately. When the fuel hose is disconnected, fuel spills out from the hose and the pipe because of residual pressure. Cover the hose connection with a piece of clean cloth to prevent fuel spillage.**

- Install the fuel pressure gauge adapter [A] and fuel hoses (Special Tool: 57001-1607) [B] between the fuel outlet pipe and delivery pipe.
- Secure the fuel hoses with the clamps.
- Connect the pressure gauge [C] to the fuel pressure gauge adapter.

**Special Tools - Oil Pressure Gauge, 5 kgf/cm<sup>2</sup>: 57001-125**  
**Fuel Pressure Gauge Adapter: 57001-1593**  
**Fuel Hose: 57001-1607**

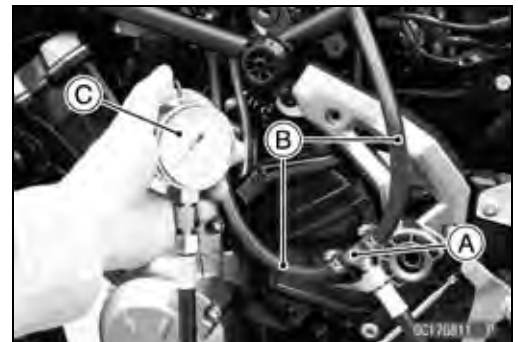

**⚠ WARNING**

**Fuel is extremely flammable and can be explosive under certain conditions resulting in serious injury or death. Do not try to start the engine with the fuel hoses disconnected.**

- Connect the fuel pump lead connector.
- Turn the engine stop switch to run position.
- Turn the ignition switch on.
- The fuel pump should operate for 3 seconds, and then should stop.

**NOTE**

○After turning on the engine stop switch and ignition switch, inspect the fuel leakage from the connected portion of the special tools.

**NOTICE**

**Do not drive the fuel pump 3 seconds or more without the fuel in the fuel tank. If the fuel pump is driven without the fuel, it may be damaged.**

## 3-106 FUEL SYSTEM (DFI)

### Fuel Line

---

- Start the engine, and let it idle.
- Measure the fuel pressure with the engine idling.

#### Fuel Pressure (with Engine Idling)

Standard: 294 kPa (3.0 kgf/cm<sup>2</sup>, 43 psi)

#### NOTE

○ *The gauge needle will fluctuate. Read the pressure at the average of the maximum and minimum indications.*

- Turn the ignition switch off.
- ★ If the fuel pressure is much higher than specified, replace the fuel pump because the fuel pressure regulator in the fuel pump have been clogged or stuck.
- ★ If the fuel pressure is much lower than specified, check the following.
  - Fuel Line Leakage (see Fuel Injector Fuel Line Inspection)
  - Amount of Fuel Flow (see Fuel Flow Rate Inspection)
- After above checks, measure the fuel pressure again.
- Remove the fuel pressure gauge, hoses and adapter.
- Install:
  - Fuel Hose (see Fuel Hose Replacement in the Periodic Maintenance chapter)
  - Fuel Tank (see Fuel Tank Installation)
- Start the engine and check for fuel leakage.

### Fuel Flow Rate Inspection

#### WARNING

**Gasoline is extremely flammable and can be explosive under certain conditions, creating the potential for serious burns. Make sure the area is well ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light. Do not smoke. Turn the ignition switch off. Be prepared for fuel spillage; any spilled fuel must be completely wiped up immediately.**

#### NOTE

○ *Be sure the battery is fully charged.*

- Turn the ignition switch off.
- Wait until the engine cools down.
- Prepare a fuel hose (Special Tool: 57001-1607) and a measuring cylinder.

**Special Tool - Fuel Hose: 57001-1607**
- Remove:
  - Fuel Tank Bolts (see Fuel Tank Removal)



## Fuel Line

- Open the fuel tank cap [A] to lower the pressure in the tank.
- Disconnect the fuel hose from the fuel pump (see Fuel Tank Removal).
- Be sure to place a piece of cloth around the fuel outlet pipe of the fuel pump.

### **⚠ WARNING**

**Fuel is flammable and explosive under certain conditions and can cause severe burns. Be prepared for fuel spillage; any spilled fuel must be completely wiped up immediately. When the fuel hose is disconnected, fuel spills out from the hose and the pipe because of residual pressure. Cover the hose connection with a piece of clean cloth to prevent fuel spillage.**

- Connect the prepared fuel hose [A] to the fuel outlet pipe.
- Secure the fuel hose with a clamp.
- Insert the fuel hose into the measuring cylinder [B].

### **⚠ WARNING**

**Wipe off spilled out fuel immediately. Be sure to hold the measuring cylinder vertical.**

- Close the fuel tank cap.
- Turn the engine stop switch to run position.
- Turn the ignition switch on.
- The fuel pump should operate for 3 seconds, and then should stop.

### **NOTICE**


**Do not drive the fuel pump 3 seconds or more without the fuel in the fuel tank. If the fuel pump is driven without the fuel, it may be damaged.**

- Measure the discharge for 3 seconds.
- Repeat this operation several times.

#### **Amount of Fuel Flow**

**Standard: 50 mL (1.7 US oz.) or more for 3 seconds**

- Turn the ignition switch off.
- ★ If the fuel flow is much less than the specified, replace the fuel pump (see Fuel Pump Removal/Installation).
- Install the fuel tank (see Fuel Tank Installation).
- Start the engine and check for fuel leakage.

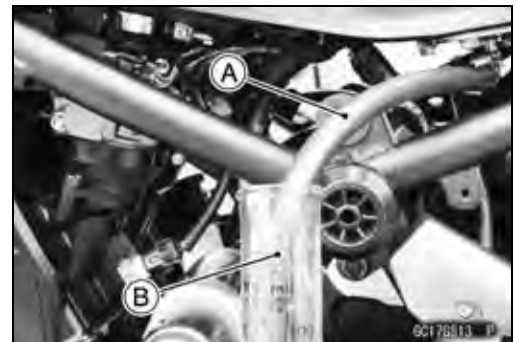

## 3-108 FUEL SYSTEM (DFI)

### Fuel Pump

#### Fuel Pump Removal

#### **⚠ WARNING**

Gasoline is extremely flammable and can be explosive under certain conditions, creating the potential for serious burns. Make sure the area is well ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light. Do not smoke. Turn the ignition switch off. Disconnect the battery (–) terminal. To avoid fuel spills, draw it from the tank when the engine is cold. Be prepared for fuel spillage; any spilled fuel must be completely wiped up immediately.

#### **NOTICE**


Never drop the fuel pump especially on a hard surface. Such a shock to the pump can damage it.

- Draw the fuel out from the fuel tank with a commercially available electric pump.
- Remove the fuel tank (see Fuel Tank Removal).
- Be careful of fuel spillage from the fuel tank since fuel still remains in the fuel tank and fuel pump. Plug the fuel pipe of the fuel tank.
- Turn the fuel tank upside down.
- Remove the fuel pump bolts [A], and take out the fuel pump [B].

#### **NOTICE**

Do not pull the leads of the fuel pump. If they are pulled, the lead terminals may be damaged.

- Discard the fuel pump gasket [A].

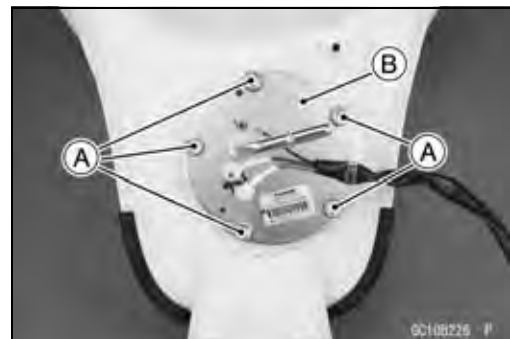

## Fuel Pump

### Fuel Pump Installation

- Remove dirt or dust from the fuel pump [A] by lightly applying compressed air.
- Replace the fuel pump gasket with a new one.

#### NOTE

○ Be careful not to bend the fuel level sensor arm.

- Check that the fuel pump terminal [A] and clamp [B] are in place.
- Apply a non-permanent locking agent to the threads of the fuel pump bolts.
- Tighten the fuel pump bolts following the specified tightening sequence [1 ~ 6] temporarily.
- Tighten the fuel pump bolts with the specified torque by the same sequence.

**Torque - Fuel Pump Bolts: 9.8 N·m (1.0 kgf·m, 87 in·lb)**

- Tighten the pump bolts again to check the tightness.

### Fuel Pump Operation Inspection

#### NOTE

○ Be sure the battery is fully charged.


- Turn the engine stop switch to run position.
- Turn the ignition switch on and make sure that the fuel pump operates (make light sounds) for 3 seconds, and then stops.
- Turn the ignition switch off.
- ★ If the pump does not operate as described above, check the operating voltage (see Fuel Pump Operating Voltage Inspection).

### Fuel Pump Operating Voltage Inspection

#### NOTE

○ Be sure the battery is fully charged.

- Turn the ignition switch off.
- Remove the left side cover (see Side Cover Removal in the Frame chapter).
- Disconnect the fuel pump lead connector [A].

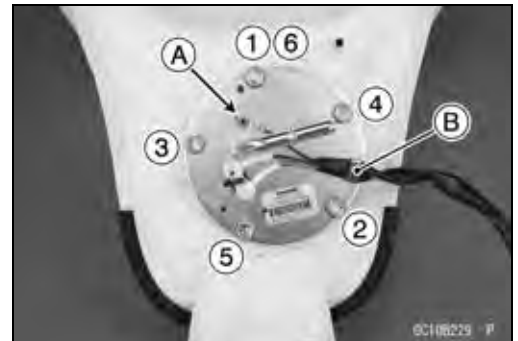

## 3-110 FUEL SYSTEM (DFI)

### Fuel Pump

- Connect the measuring adapter [A] between fuel pump lead connectors.

**Special Tool - Oxygen Sensor Measuring Adapter: 57001-1682**

- Connect a digital meter to the measuring adapter leads.

#### Fuel Pump Operating Voltage

##### Connections to Adapter:

**Digital Meter (+) → BR (pump BK/Y) lead**

**Digital Meter (-) → W (pump BK/W) lead**

- Measure the operating voltage with engine stopped and with the connector joined.
- Turn the engine stop switch to run position.
- Turn the ignition switch on.


#### Operating Voltage

**Standard: Battery Voltage for 3 seconds, and then 0 V**

- Turn the ignition switch off.
- ★ If the reading stays on battery voltage and never shows 0 V, check the fuel pump relay (see Relay Circuit Inspection in the Electrical System chapter).
- ★ If the fuel pump relay is normal, check the ECU for its ground and power supply (see ECU Power Supply Inspection).
- ★ If the ground and power supply are good, replace the ECU (see ECU Removal/Installation).
- ★ If there is still no battery voltage, check the fuel pump relay (see Relay Circuit Inspection in the Electrical System chapter).
- ★ If the fuel pump relay is normal, check the wiring for continuity (see Fuel Pump Circuit).
- ★ If the wiring is good, check the ECU for its ground and power supply (see ECU Power Supply Inspection).
- ★ If the ground and power supply are good, replace the ECU (see ECU Removal/Installation).
- ★ If the reading is in specification, but the pump does not operate, replace the fuel pump (see Fuel Pump Removal/Installation).

#### Pressure Regulator Removal

- The pressure regulator [A] is built into the fuel pump [B] and can not be removed.

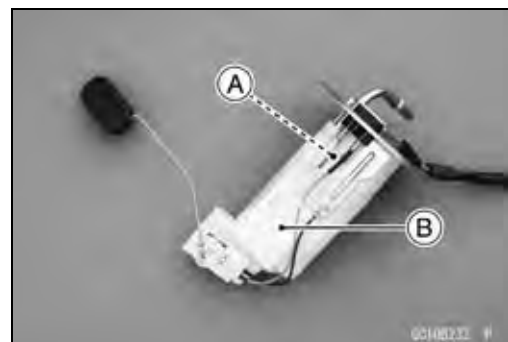

## Fuel Pump

### Fuel Pump Relay Removal/Installation


- The fuel pump relay is built in the relay box [A].
- Refer to the Relay Box Removal in the Electrical System chapter.



### Fuel Pump Relay Inspection

- Refer to the Relay Circuit Inspection in the Electrical System chapter.

### Fuel Pump Circuit

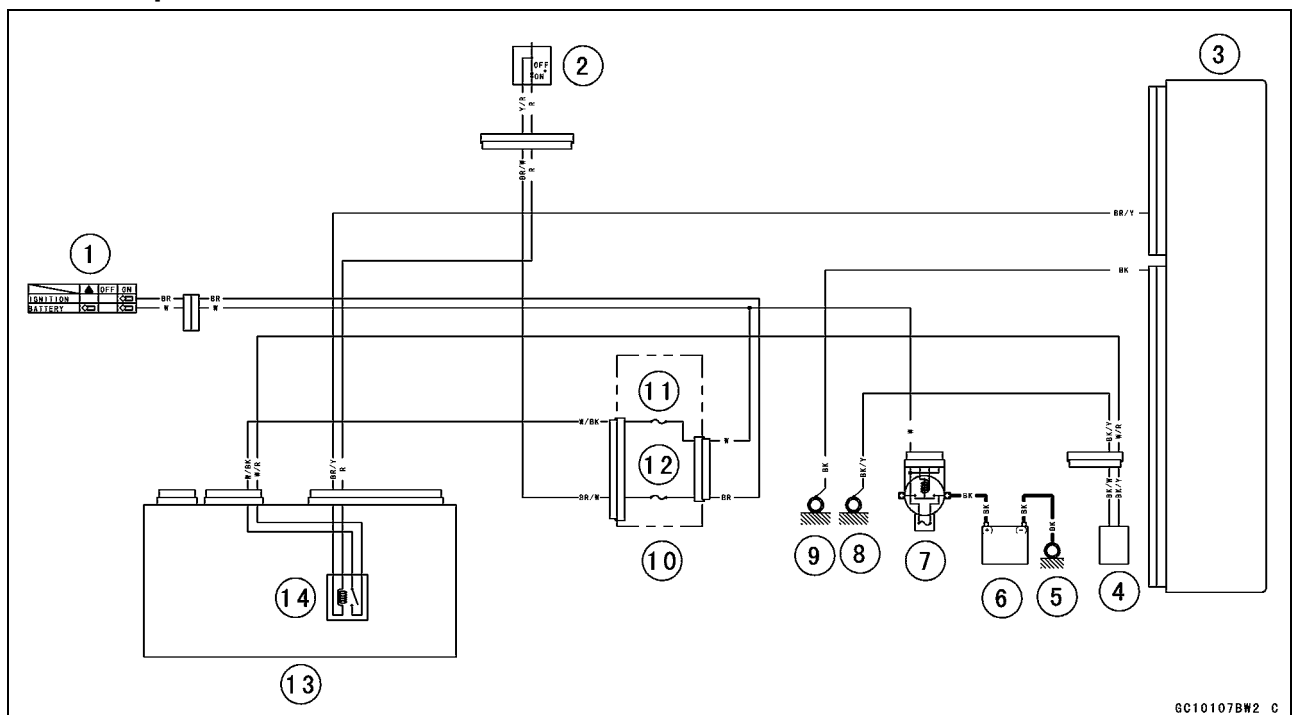

1. Ignition Switch
2. Engine Stop Switch
3. ECU
4. Fuel Pump
5. Engine Ground
6. Battery
7. Main Fuse 30 A
8. Frame Ground (5)
9. Frame Ground (4)
10. Fuse Box (1)
11. ECU Fuse 15 A
12. Ignition Fuse 10 A
13. Relay Box
14. Fuel Pump Relay

## 3-112 FUEL SYSTEM (DFI)

---

### Throttle Grip and Cables

---

#### ***Throttle Grip Free Play Inspection***

- Refer to the Throttle Control System Inspection in the Periodic Maintenance chapter.

#### ***Throttle Grip Free Play Adjustment***

- Refer to the Throttle Control System Inspection in the Periodic Maintenance chapter.

#### ***Throttle Cable Installation***

- Install the throttle cables in accordance with the Cable, Wire, and Hose Routing section in the Appendix chapter.
- Install the lower ends of the throttle cables in the throttle pulley on the throttle body assy after installing the upper ends of the throttle cables in the grip.
- After installation, adjust each cable properly (see Throttle Control System Inspection in the Periodic Maintenance chapter).

 <b>WARNING</b>
--

<p><b>Operation with incorrectly routed or improperly adjusted cables could result in an unsafe riding condition. Be sure the cables are routed correctly and properly adjusted.</b></p>
--

#### ***Throttle Cable Lubrication***

- Refer to the Chassis Parts Lubrication in the Periodic Maintenance chapter.

## Throttle Body Assy

### Idle Speed Inspection/Adjustment

- Refer to the Idle Speed Inspection/Adjustment in the Periodic Maintenance chapter.

### Throttle Bore Cleaning

- Check the throttle bore for cleanliness as follows.
  - Remove the throttle body assy (see Throttle Body Assy Removal).
  - Check the main throttle valves and throttle bores for carbon deposits by opening the main throttle valves.
- ★ If any carbon accumulates, wipe the carbon off the throttle bores around the throttle bores and the throttle valves, using a cotton pad penetrated with a high flash-point solvent.

### Synchronization Inspection/Adjustment

- Refer to the Engine Vacuum Synchronization Inspection in the Periodic Maintenance chapter.

### Throttle Body Assy Removal


#### **⚠ WARNING**

Gasoline is extremely flammable and can be explosive under certain conditions, creating the potential for serious burns. Make sure the area is well ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light. Do not smoke. Turn the ignition switch off. Be prepared for fuel spillage; any spilled fuel must be completely wiped up immediately.

#### **NOTICE**

Never drop the throttle body assy especially on a hard surface. Such a shock to the body assy can damage it.


- Remove:
  - Air Cleaner Housing (see Air Cleaner Housing Removal)
  - Fuel Hose (see Fuel Hose Replacement in the Periodic Maintenance chapter)
- Disconnect:
  - Main Throttle Sensor Connector [A]
  - Subthrottle Sensor Connector [B]

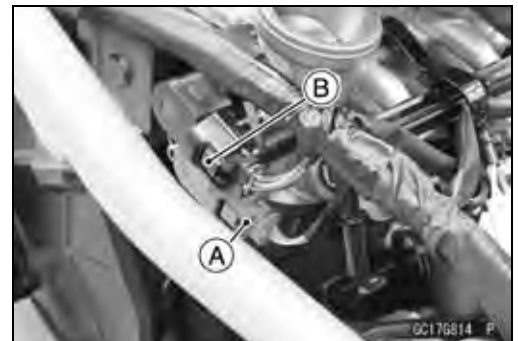


## 3-114 FUEL SYSTEM (DFI)

### Throttle Body Assy


- Open the clamp [A].
- Disconnect:
  - Subthrottle Valve Actuator Connector [B]
  - Fuel Injector Connectors [C]

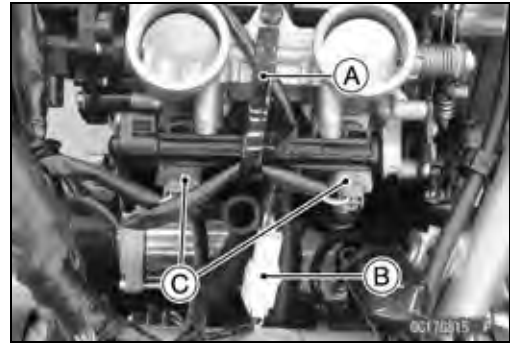


- Disconnect the vacuum hose [A].
- Disconnect the vacuum hoses [B] (evaporative emission control system equipped models).

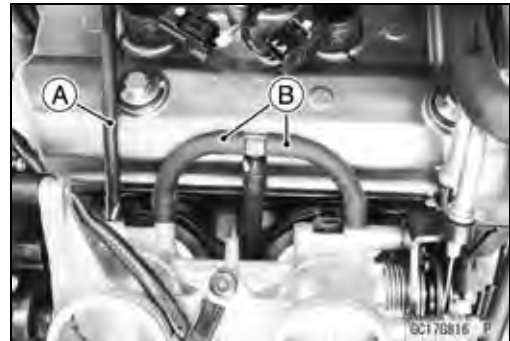

- Loosen the locknuts [A].
- Turn the adjusters [B] to give the more free play.

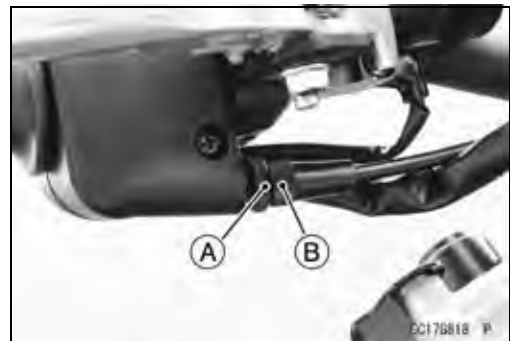


- Remove the clamp [A] and the throttle cables from the throttle cable holder [B].

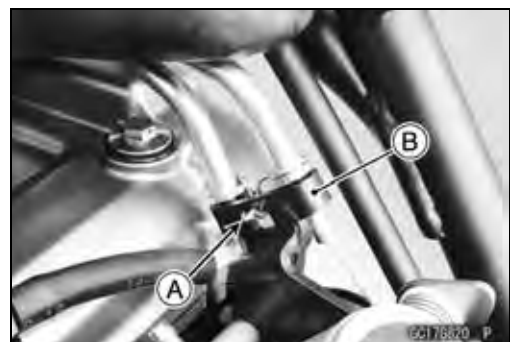



## Throttle Body Assy

- Disconnect the throttle cable lower ends [A].

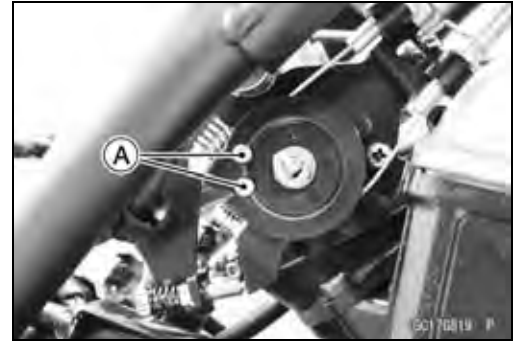

- Loosen the throttle body assy holder clamp bolts [A].
- Remove the throttle body assy from the throttle body assy holders.
- After removing the throttle body assy, stuff pieces of lint-free, clean cloth into the throttle body assy holders.



**NOTICE**

**If dirt gets into the engine, excessive engine wear and possible engine damage will occur.**



### **Throttle Body Assy Installation**

- Be sure to position the throttle body assy holder clamp in original position (see Throttle Body Assy Holder Installation in the Engine Top End chapter).
- Install the throttle body assy to the throttle body assy holders.
- Tighten:

**Torque - Throttle Body Assy Holder Clamp Bolts: 2.0 N·m (0.20 kgf·m, 18 in·lb)**

- Apply a thin coat of grease to the throttle cable lower ends.
- Fit the accelerator cable end [A] and the decelerator cable end [B] into the throttle pulley.



## 3-116 FUEL SYSTEM (DFI)

### Throttle Body Assy

- Install the clamp [A] securely.




- Turn the throttle grip and make sure that the throttle pulley moves smoothly and return by spring force.
- Run the leads and hoses correctly (see Cable, Wire, and Hose Routing section in the Appendix chapter).
- Install the removed parts (see appropriate chapters).
- Adjust:
  - Throttle Grip Free Play (see Throttle Control System Inspection in the Periodic Maintenance chapter)
  - Idle Speed (see Idle Speed Adjustment in the Periodic Maintenance chapter)

### Throttle Body Assy Disassembly

#### NOTICE


Do not remove, disassemble or adjust the main throttle sensor [A], subthrottle sensor [B], subthrottle valve actuator [C], throttle link mechanism [D] and throttle body assy [E], because they are adjusted or set at the manufacturer. Adjustment of these parts could result in poor performance, requiring replacement of the throttle body assy.

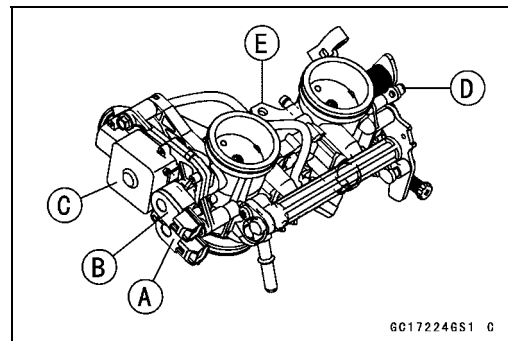

#### NOTICE

Never drop the throttle body assy especially on a hard surface. Such a shock to the body assy can damage it.

- Remove:
  - Throttle Body Assy (see Throttle Body Assy Removal)
  - Quick Rivet [A]
  - Clamp [B]

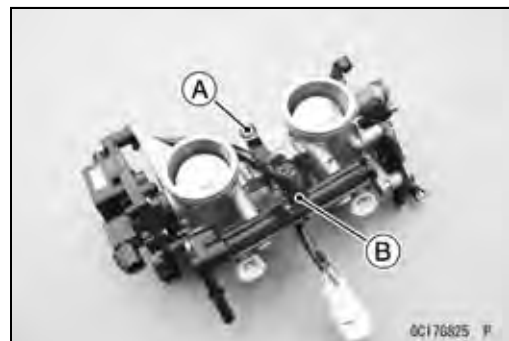

## Throttle Body Assy

- Cut the band [A].
- Remove the delivery pipe assy mounting screws [B].
- Pull out the fuel injectors [C] from the throttle body assy together with the delivery pipe [D].

### NOTE

○ Do not damage the insertion portions of the fuel injectors when they are pulled out from the throttle body assy.

- Remove the fuel injectors [A] from the delivery pipe [B].

### NOTE

○ Do not damage the insertion portions of the fuel injectors when they are pulled out from the delivery pipe.

### NOTICE





**Never drop the fuel injector especially on a hard surface. Such a shock to the fuel injector can damage it.**

### Throttle Body Assy Assembly

- Before assembling, blow away dirt or dust from the throttle body and delivery pipe by applying compressed air.
- Replace the O-rings [A] of each fuel injector [B] with new ones.
- Apply engine oil to the new O-rings, insert them to the delivery pipe [C] and confirm whether the fuel injectors turn smoothly or not.

- Replace the dust seals [A] with new ones.
- Apply engine oil to the new dust seals.
- Install the fuel injectors along with the delivery pipe to the throttle body assy.
- Tighten:

**Torque - Delivery Pipe Assy Mounting Screws: 3.4 N·m  
(0.35 kgf·m, 30 in·lb)**

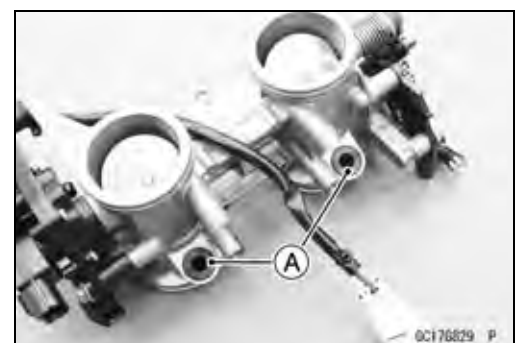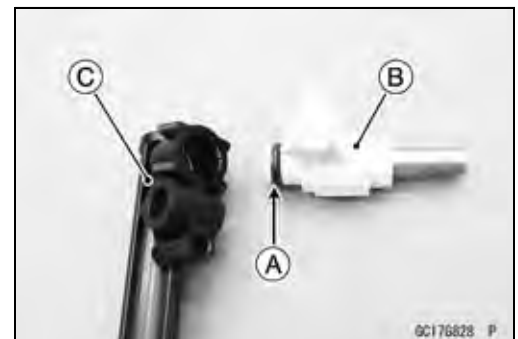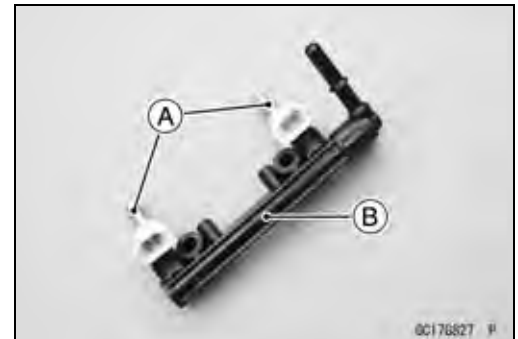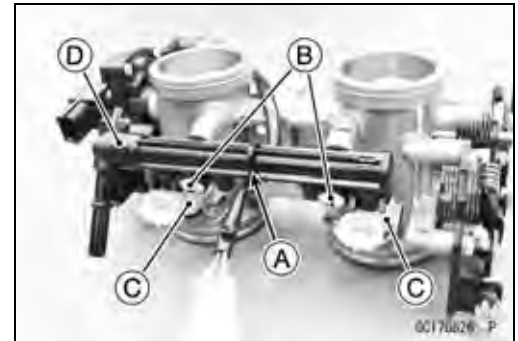


## 3-118 FUEL SYSTEM (DFI)

### Throttle Body Assy

- Replace the band [A] with a new one.
- Hold the lead [B] with the band.



- Install:
  - Clamp [A]
  - Quick Rivet [B]
  - Throttle Body Assy (see Throttle Body Assy Installation)

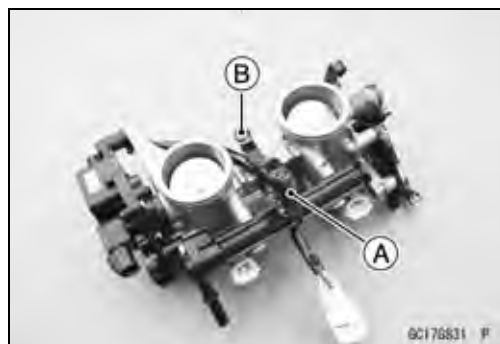


## Air Cleaner

### **Air Cleaner Element Removal/Installation**

- Refer to the Air Cleaner Element Replacement in the Periodic Maintenance chapter.

### **Air Cleaner Element Inspection**


- Remove the air cleaner element (see Air Cleaner Element Replacement in the Periodic Maintenance chapter).
- Visually check the element [A] for tears or breaks.
- ★ If the element has any tears or breaks, replace the element.

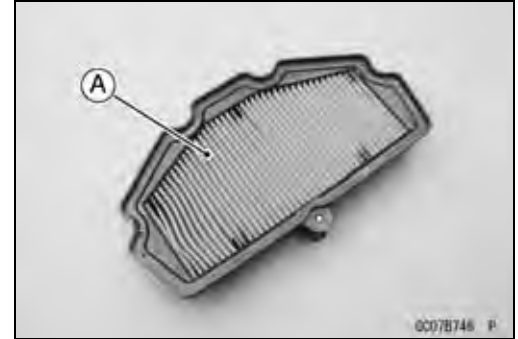

### **Air Cleaner Oil Draining**

A drain hose is connected to the bottom of the air cleaner to drain water or oil accumulated in the cleaner part.

- Visually check the drain hose [A], if the water or oil accumulates in the hose.
- ★ If any water or oil accumulates in the drain hose, slide the clamp [B] and remove the plug [C] from the drain hose and drain it.

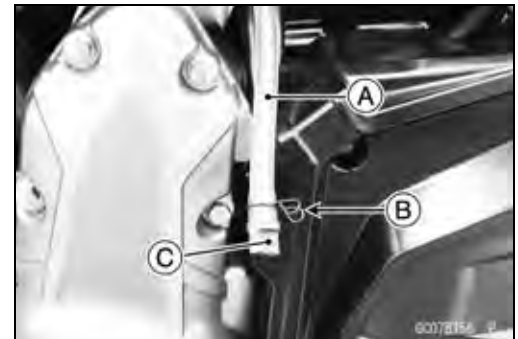


**⚠ WARNING**

**Oil on tires will make them slippery and can cause an accident and injury. Be sure to reinstall the plug in the drain hose after draining.**

### **Air Cleaner Housing Removal**

- Remove:
  - Bolts [A]
  - Clamps [B]
- Disconnect the intake air temperature sensor connector [A].
- Open the clamps [B].

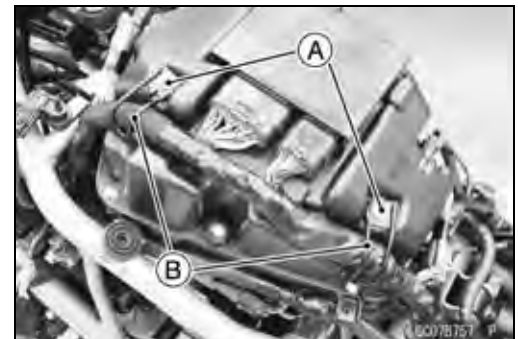

## 3-120 FUEL SYSTEM (DFI)

### Air Cleaner

- Loosen the air cleaner housing clamp bolt [A].



- Lift up the air cleaner housing, and disconnect the air switching valve hose [A].



- Disconnect the breather hose [A].
- After removing the air cleaner housing, cover the clean cloth on the throttle body assy.



#### ***Air Cleaner Housing Installation***

- Installation is the reverse of removal.
- Install the air cleaner housing on the throttle body assy.
  - Push in the ducts touch the stopper of the throttle body assy.
- Tighten:
  - Torque - Air Cleaner Housing Clamp Bolt: 2.0 N·m (0.20 kgf·m, 18 in·lb)**
- Run the leads and hoses correctly (see Cable, Wire, and Hose Routing section in the Appendix chapter).
- Install the removed parts (see appropriate chapters).


## Fuel Tank

### Fuel Tank Removal

#### **⚠ WARNING**

Gasoline is extremely flammable and can be explosive under certain conditions, creating the potential for serious burns. Make sure the area is well ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light. Do not smoke. Turn the ignition switch off. Disconnect the battery (-) terminal. To avoid fuel spills, draw it from the tank when the engine is cold. Be prepared for fuel spillage; any spilled fuel must be completely wiped up immediately.


- Turn the ignition switch off.
- Wait until the engine cools down.
- Disconnect the battery (-) terminal (see Battery Removal in the Electrical System chapter).
- Remove:
  - Fuel Tank Side Covers (see Fuel Tank Side Cover Removal in the Frame chapter)
  - Left Side Cover (see Side Cover Removal in the Frame chapter)
- Remove:
  - Fuel Tank Bolts [A] and Washers
- Remove:
  - Seat Bracket Bolts [A]
  - Clamps [B]
  - Seat Bracket [C]

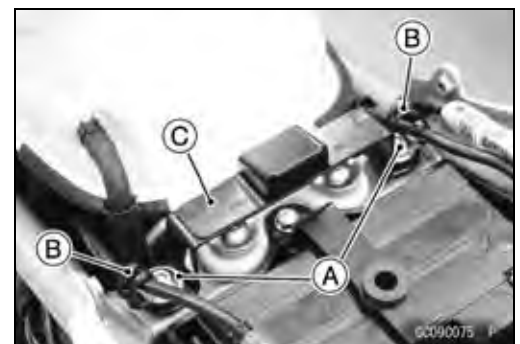

## 3-122 FUEL SYSTEM (DFI)

### Fuel Tank


- Remove:
  - Fuel Tank Bolts [A]
- Slide the clamp [B] and disconnect the fuel tank breather hose [C].

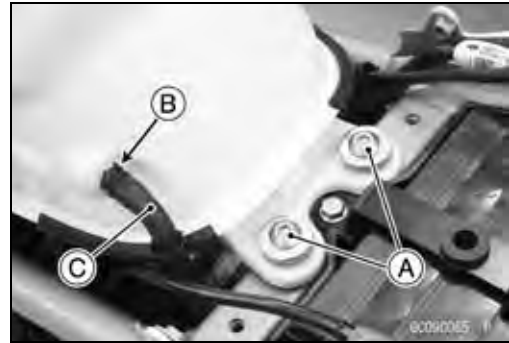

- Open the fuel tank cap [A] to lower the pressure in the tank.
- During tank removal, keep the tank cap open to release pressure in the tank. This makes fuel spillage less.



- Draw the fuel out from the fuel tank with a commercially available pump [A].
- Use a soft plastic hose [B] as a pump intake hose in order to insert the hose smoothly.
- Put the hose through the fill opening [C] into the tank and draw the fuel out.

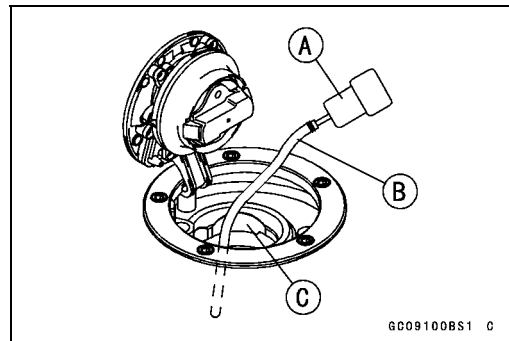

#### **⚠ WARNING**

**Spilled fuel is flammable and can be explosive under certain conditions. The fuel can not be removed completely from the fuel tank. Be careful for remained fuel spillage.**


- Close the fuel tank cap.
- Disconnect the fuel pump lead connector [A].






**Fuel Tank**

- Slide the clamps [A] and disconnect the fuel drain hose [B].

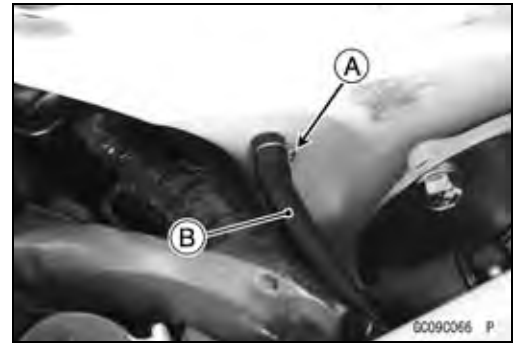

- Pull up the rear of the fuel tank.
- Be sure to place a piece of cloth around the fuel hose joint.
- Wipe off the dirt of the surface [A] around the connection using a cloth or a soft brush.

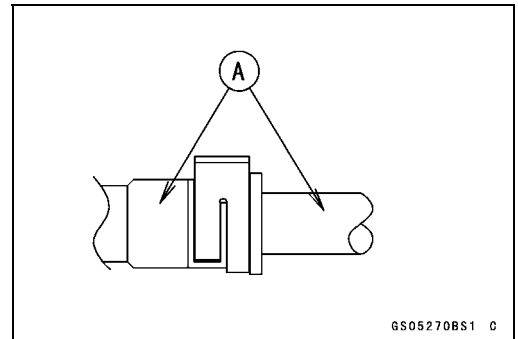


**When removing with flat tip screwdriver**

- Insert the flat tip screwdriver [A] into slit on the joint lock [B].
- Turn the driver to disconnect the joint lock.

**When removing with fingers**

- Open and push up [C] the joint lock with your fingers.

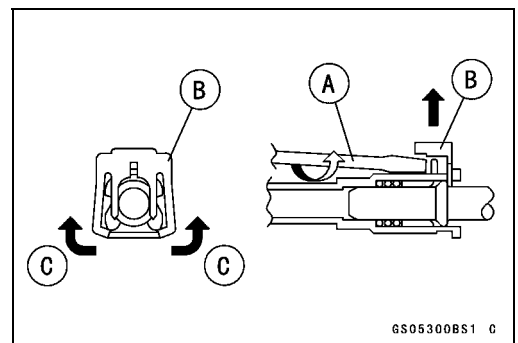


**NOTICE**

Prying or excessively widening the joint lock ends for fuel hose removal will permanently deform the joint lock, resulting in a loose or incomplete lock that may allow fuel to leak and create the potential for a fire explosion. To prevent fire or explosion from a damaged joint lock, do not pry or excessively widen the joint lock ends when removing the fuel hose. The joint lock has a retaining edge that locks around the housing.

- Pull [A] the fuel hose joint [B] out of the outlet pipe.

**⚠ WARNING**


Fuel is flammable and explosive under certain conditions and can cause severe burns. Be prepared for fuel spillage; any spilled fuel must be completely wiped up immediately. When the fuel hose is disconnected, fuel spills out from the hose and the pipe because of residual pressure. Cover the hose connection with a piece of clean cloth to prevent fuel spillage.

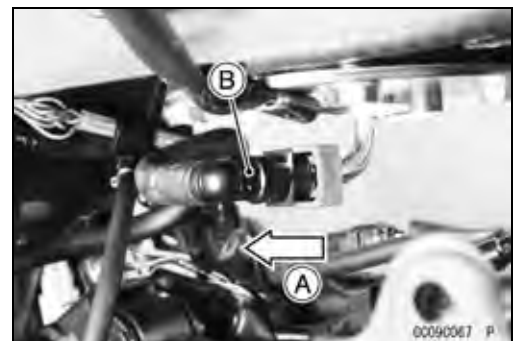

## 3-124 FUEL SYSTEM (DFI)


### Fuel Tank

- Remove the fuel tank, and place it on a flat surface.
- Do not apply the load to the fuel pipe of the fuel pump.
- Clean the pipe [A].
- Cover the pipe and the hose joint [B] with the vinyl bags [C] to keep it clean.

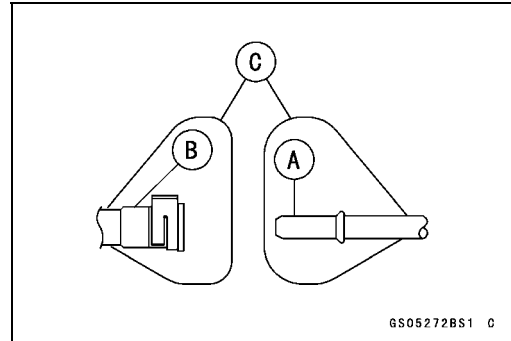


### Fuel Tank Installation

- Note the above WARNING (see Fuel Tank Removal).
  - Check that the dampers [A], collars [B], pads [C] and trims [D] are in place on the fuel tank.
  - ★ If the dampers, pads and trims are damaged or deteriorated, replace them.
- Viewed from Bottom [E]  
Viewed from Rear [F]
- When installing the dampers, face the big thickness side downward.
  - Install the pads and trims as shown.  
38 mm (1.5 in.) [G]

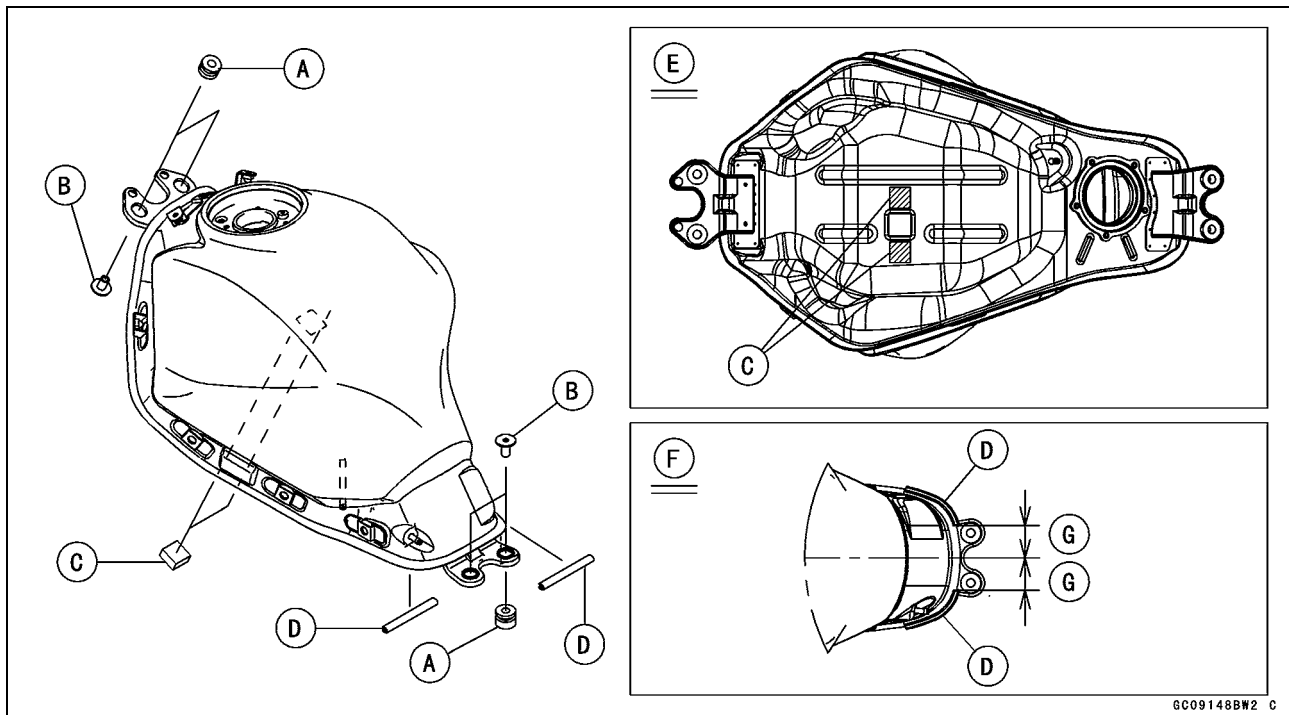


## Fuel Tank


- Check that the dampers [A] are in place on the frame.
- ★ If the dampers are damaged or deteriorated, replace them.
- Run the hoses correctly (see Cable, Wire, and Hose Routing section in the Appendix chapter).

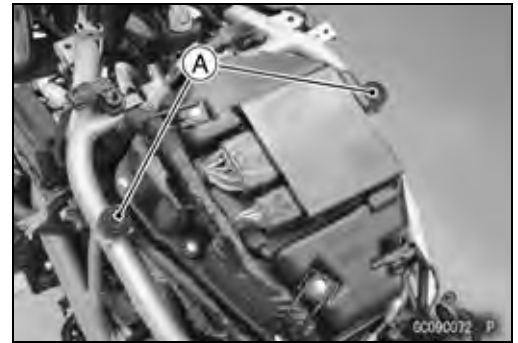

- Remove the vinyl bag on the pipe and fuel hose joint.
- Check the joint lock for deformation and wear.
- ★ If the joint lock is deformed, replace the fuel hose with a new one.
- Check that there are no flaws, burrs, and adhesion of foreign materials on the fuel outlet pipe [A].
- Apply engine oil to the fuel outlet pipe.

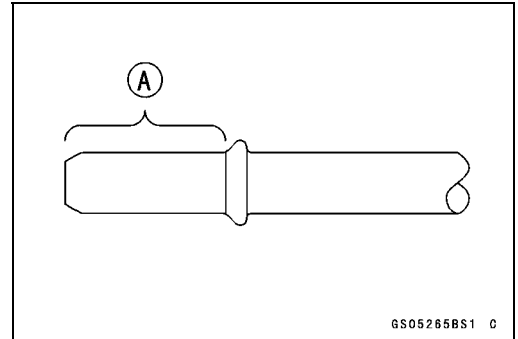

- Insert the fuel hose joint [A] straight onto the fuel outlet pipe until the hose joint clicks.
- Push [B] the joint lock [C] until the hose joint clicks.

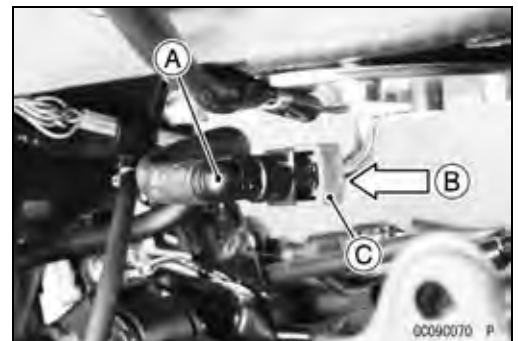


- Push and pull [A] the hose joint [B] back and forth more than two times, and make sure it is locked and does not come off.

**⚠ WARNING**

**Leaking fuel can cause a fire or explosion resulting in serious burns. Make sure the hose joint is installed correctly on the delivery pipe.**

- ★ If it comes off, reinstall the hose joint.
- Connect the fuel drain hose and fuel tank breather hose (see Cable, Wire, and Horse Routing section in the Appendix chapter).
- Connect the fuel pump lead connector and the battery (–) terminal (see Battery Installation in the Electrical System chapter).
- Install the removed parts (see appropriate chapters).

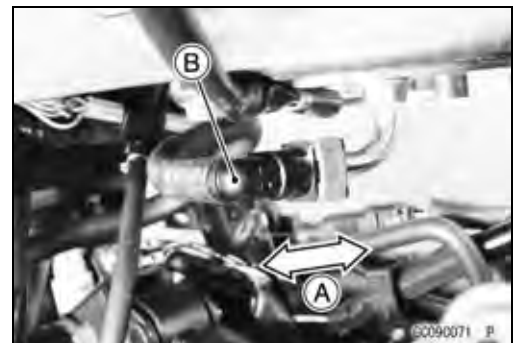


## 3-126 FUEL SYSTEM (DFI)

### Fuel Tank

#### **Fuel Tank and Cap Inspection**

- Open the tank cap.
- Visually inspect the gasket [A] on the tank cap for any damage.
- ★ Replace the tank cap if gasket is damaged.
- Check to see if the water drain pipe [B] and fuel breather pipe [C] in the tank are not clogged. Check the tank cap breather also.
- ★ If they are clogged, remove the tank and drain it, and then blow the breather free with compressed air.

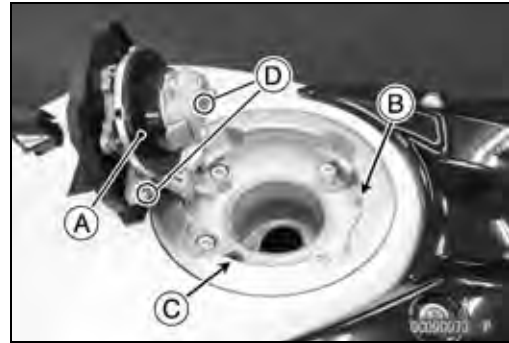

#### **NOTICE**

**Do not apply compressed air to the air vent holes [D] in the tank cap. This could cause damage and clogging of the labyrinth in the cap.**

#### **Fuel Tank Cleaning**

#### **⚠ WARNING**

**Gasoline and low flash-point solvents can be flammable and/or explosive and cause severe burns. Clean the tank in a well-ventilated area, and take care that there are no sparks or flame anywhere near the working area. Do not use gasoline or low flash-point solvents to clean the tank.**

- Remove:
  - Fuel Tank (see Fuel Tank Removal)
  - Fuel Pump (see Fuel Pump Removal)
- Pour some high flash-point solvent into the fuel tank and shake the tank to remove dirt and fuel deposits.
- Draw the solvent out of the fuel tank.
- Dry the tank with compressed air.
- Install:
  - Fuel Pump (see Fuel Pump Installation)
  - Fuel Tank (see Fuel Tank Installation)

---

**Evaporative Emission Control System (Equipped Models)**

---

The Evaporative Emission Control System routes fuel vapors from the fuel system into the running engine or stores the vapors in a canister when the engine is stopped. Although no adjustments are required, a thorough visual inspection must be made at the intervals specified by the Periodic Maintenance Chart.

**Parts Removal/Installation**** WARNING**

**Gasoline is extremely flammable and can be explosive under certain conditions. Turn the ignition switch off. Do not smoke. Make sure the area is well ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.**

**NOTICE**

**If gasoline, solvent, water or any other liquid enters the canister, the canister's vapor absorbing capacity is greatly reduced. If the canister does become contaminated, replace it with a new one.**

- Connect the hoses according to the diagram of the system (see Cable, Wire, and Hose Routing section in the Appendix chapter). Make sure they do not get pinched or kinked.

**Hose Inspection**

- Refer to the Evaporative Emission Control System Inspection (Equipped Models) in the Periodic Maintenance chapter.

**Purge Valve Inspection**

- Refer to the Purge Valve Inspection.

**Canister Inspection**

- Refer to the Evaporative Emission Control System Inspection (Equipped Models) in the Periodic Maintenance chapter.




# Cooling System

## Table of Contents

Exploded View.....	4-2
Coolant Flow Chart.....	4-4
Specifications .....	4-6
Special Tools .....	4-7
Coolant .....	4-8
Coolant Deterioration Inspection.....	4-8
Coolant Level Inspection.....	4-8
Coolant Draining .....	4-8
Coolant Filling .....	4-8
Pressure Testing .....	4-8
Cooling System Flushing .....	4-9
Coolant Reserve Tank Removal .....	4-9
Coolant Reserve Tank Installation .....	4-10
Water Pump.....	4-11
Water Pump Removal.....	4-11
Water Pump Installation.....	4-11
Water Pump Inspection.....	4-12
Mechanical Seal Inspection .....	4-12
Water Pump Housing Disassembly .....	4-12
Water Pump Housing Assembly .....	4-13
Impeller Assembly.....	4-13
Pump Impeller Inspection .....	4-13
Radiator.....	4-14
Radiator and Radiator Fan Removal .....	4-14
Radiator and Radiator Fan Installation .....	4-15
Radiator Inspection .....	4-15
Radiator Cap Inspection .....	4-16
Radiator Filler Neck Inspection .....	4-16
Thermostat .....	4-17
Thermostat Removal.....	4-17
Thermostat Installation.....	4-17
Thermostat Inspection .....	4-18
Water Hose and Pipes.....	4-19
Water Hose Installation.....	4-19
Water Hose Inspection.....	4-19
Water Hose and O-ring Replacement.....	4-19
Water Temperature Sensor .....	4-20
Water Temperature Sensor Removal/Installation .....	4-20
Water Temperature Sensor Inspection .....	4-20

# 4-2 COOLING SYSTEM

## Exploded View

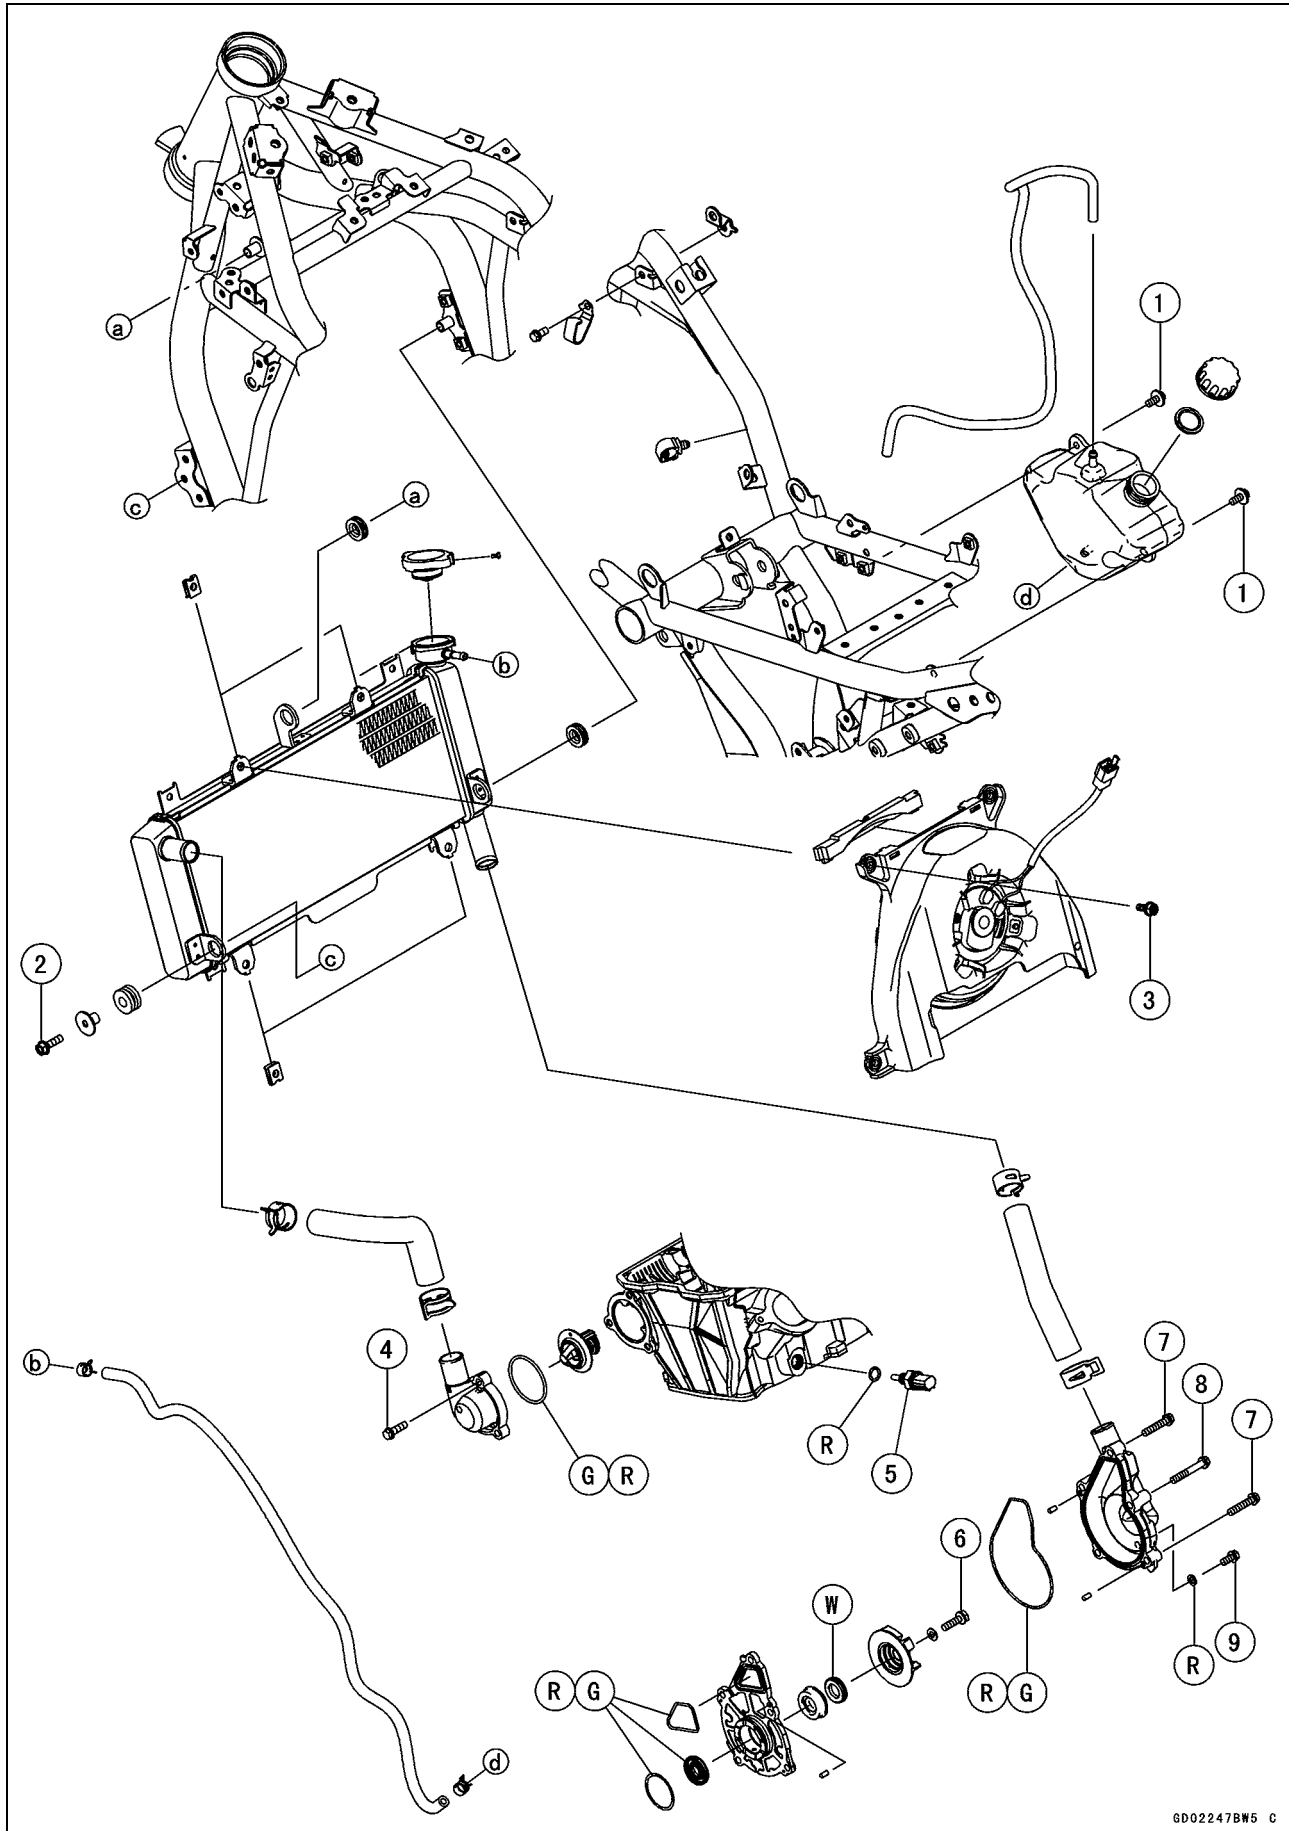



**Exploded View**

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Coolant Reserve Tank Bolts	7.9	0.81	70 in·lb	
2	Radiator Mounting Bolt	7.9	0.81	70 in·lb	
3	Radiator Fan Bolts	8.4	0.86	74 in·lb	
4	Thermostat Housing Bolts	12	1.2	106 in·lb	
5	Water Temperature Sensor	12	1.2	106 in·lb	
6	Water Pump Impeller Bolt	9.8	1.0	87 in·lb	
7	Water Pump Cover Bolts, L = 30 mm (1.2 in.)	12	1.2	106 in·lb	
8	Water Pump Cover Bolts, L = 40 mm (1.6 in.)	12	1.2	106 in·lb	
9	Coolant Drain Bolt	12	1.2	106 in·lb	


G: Apply grease.

R: Replacement Parts

W: Apply water.

## 4-4 COOLING SYSTEM

### Coolant Flow Chart

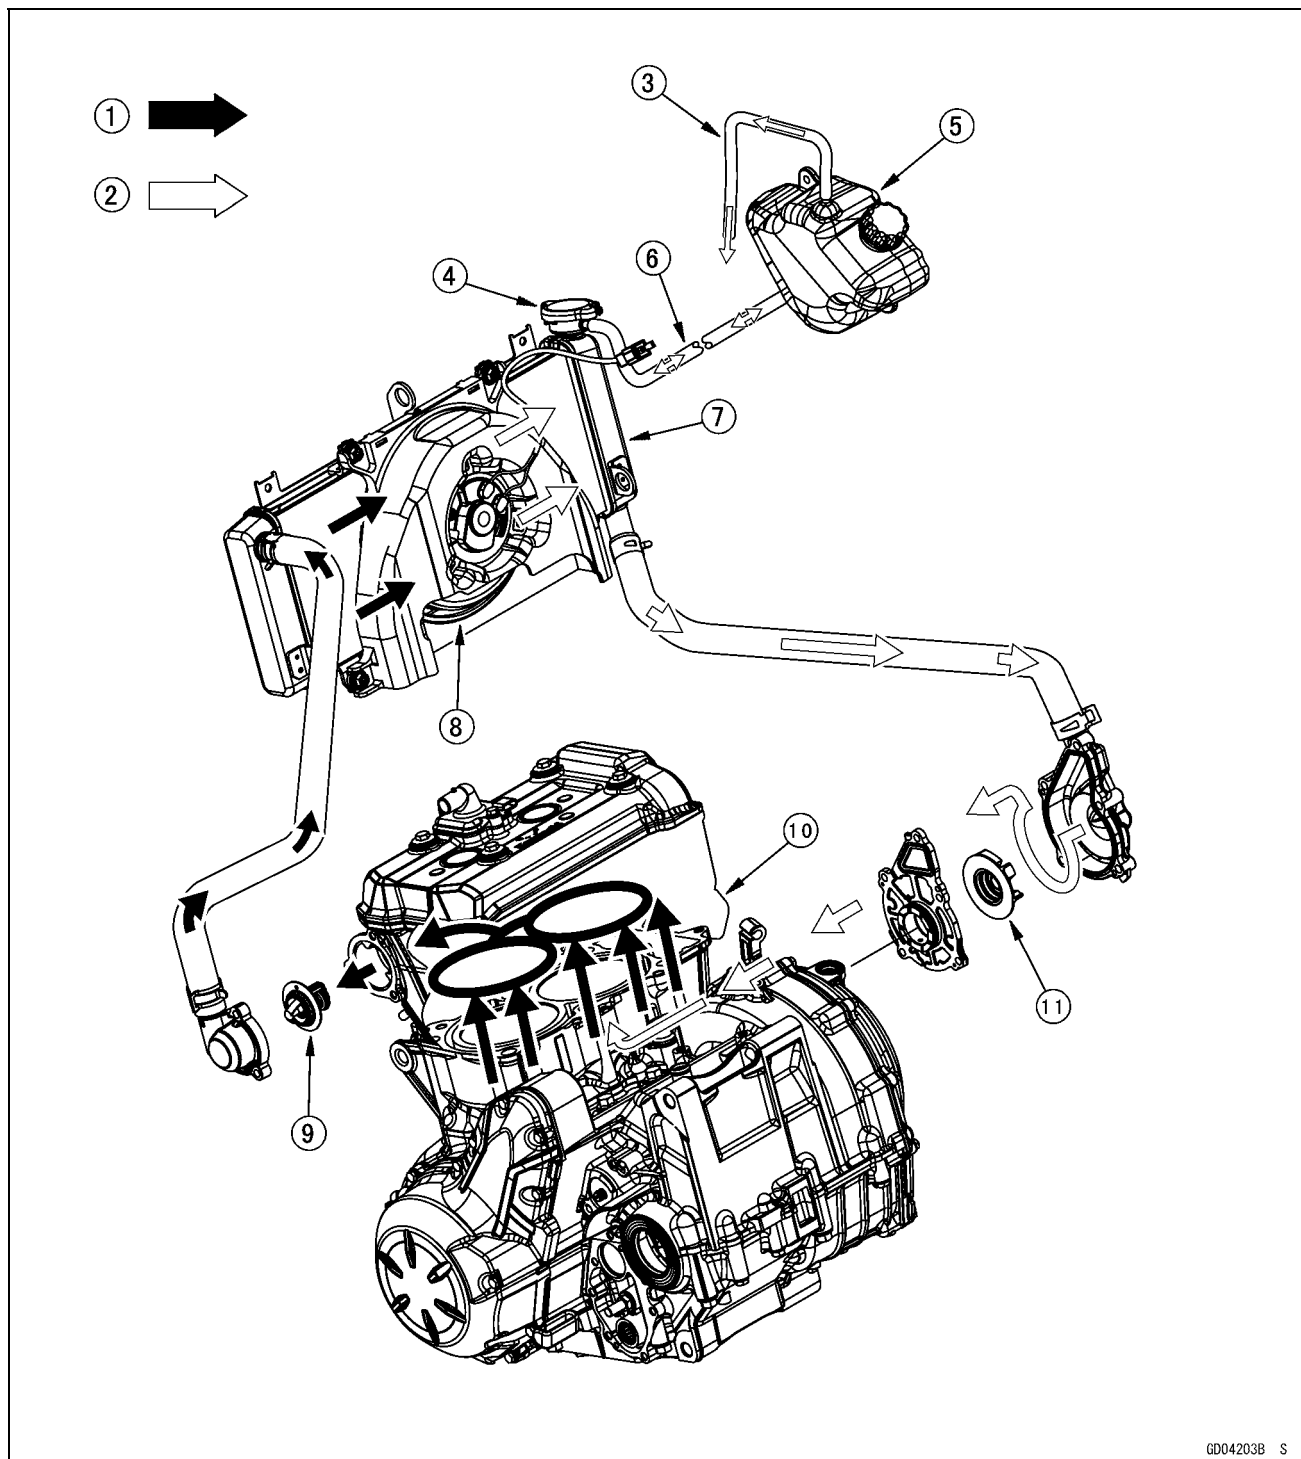

GD04203B S

1. Hot Coolant
2. Cold Coolant
3. Reserve Tank Overflow Hose
4. Radiator Cap
5. Reserve Tank
6. Reserve Tank Hose
7. Radiator
8. Radiator Fan
9. Thermostat
10. Cylinder/Cylinder Head Jacket
11. Water Pump

---

**Coolant Flow Chart**

---

Permanent type antifreeze is used as a coolant to protect the cooling system from rust and corrosion. When the engine starts, the water pump turns and the coolant circulates.

The thermostat is a wax pellet type which opens or closes with coolant temperature changes. The thermostat continuously changes its valve opening to keep the coolant temperature at the proper level. When coolant temperature is below 80.5 ~ 83.5°C (177 ~ 182°F), the thermostat closes so that the coolant flow is restricted through the air bleeder hole, causing the engine to warm up more quickly. When coolant temperature is more than 80.5 ~ 83.5°C (177 ~ 182°F), the thermostat opens and the coolant flows.

When the coolant temperature goes up beyond 104°C (219°F), the radiator fan relay conducts to operate the radiator fan. The radiator fan draws air through the radiator core when there is not sufficient air flow such as at low speeds. This increases up the cooling action of the radiator. When the temperature is below 99°C (210°F) ~ temperature less than ON temperature, the fan relay opens and the radiator fan stops.

In this way, this system controls the engine temperature within narrow limits where the engine operates most efficiently even if the engine load varies.

The system is pressurized by the radiator cap to suppress boiling and the resultant air bubbles which can cause engine overheating. As the engine warms up, the coolant in the radiator and the water jacket expands. The excess coolant flows through the radiator cap and hose to the reserve tank to be stored there temporarily. Conversely, as the engine cools down, the coolant in the radiator and the water jacket contracts, and the stored coolant flows back to the radiator from the reserve tank.

The radiator cap has two valves. One is a pressure valve which holds the pressure in the system when the engine is running. When the pressure exceeds 108 ~ 137.4 kPa (1.10 ~ 1.40 kgf/cm<sup>2</sup>, 15.7 ~ 19.9 psi), the pressure valve opens and releases the pressure to the reserve tank. As soon as pressure escapes, the valve closes, and keeps the pressure at 108 ~ 137.4 kPa (1.10 ~ 1.40 kgf/cm<sup>2</sup>, 15.7 ~ 19.9 psi). When the engine cools down, another small valve (vacuum valve) in the cap opens. As the coolant cools, the coolant contracts to form a vacuum in the system. The vacuum valve opens and allows the coolant from the reserve tank to enter the radiator.


## 4-6 COOLING SYSTEM

### Specifications


Item	Standard
<b>Coolant Provided when Shipping</b> Type (Recommended) Color Mixed Ratio Freezing Point Total Amount	Permanent type of antifreeze (soft water and ethylene glycol plus corrosion and rust inhibitor chemicals for aluminum engines and radiators) Green Soft water 50%, coolant 50% -35°C (-31°F) 1.2 L (1.3 US qt) (Reserve tank full level, including radiator and engine)
<b>Radiator Cap</b> Relief Pressure	108 ~ 137.4 kPa (1.10 ~ 1.40 kgf/cm <sup>2</sup> , 15.7 ~ 19.9 psi)
<b>Thermostat</b> Valve Opening Temperature Valve Full Opening Lift	80.5 ~ 83.5°C (177 ~ 182°F) 8 mm (0.31 in.) or more @95°C (203°F)

**Special Tools**

**Bearing Driver Set:  
57001-1129**

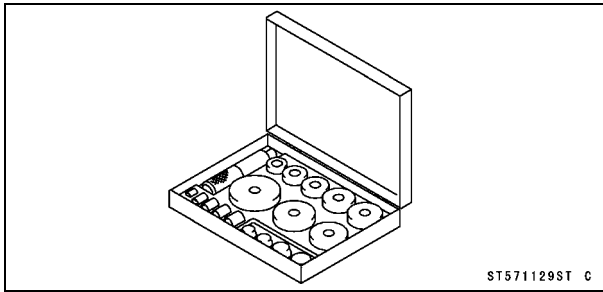

**Oil Seal Driver  $\phi 37.5$ :  
57001-1660**

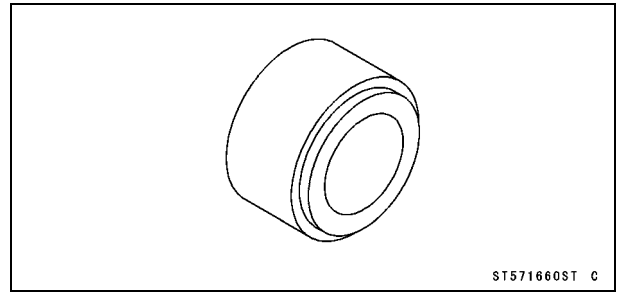

## 4-8 COOLING SYSTEM

### Coolant

#### **Coolant Deterioration Inspection**

- Remove the right side cover (see Side Cover Removal in the Frame chapter).
- Visually inspect the coolant [A] in the reserve tank.
- ★ If whitish cotton-like wafts are observed, aluminum parts in the cooling system are corroded. If the coolant is brown, iron or steel parts are rusting. In either case, flush the cooling system.
- ★ If the coolant gives off an abnormal smell, check for a cooling system leak. It may be caused by exhaust gas leaking into the cooling system.



#### **Coolant Level Inspection**

- Refer to the Coolant Level Inspection in the Periodic Maintenance chapter.

#### **Coolant Draining**


- Refer to the Coolant Change in the Periodic Maintenance chapter.

#### **Coolant Filling**

- Refer to the Coolant Change in the Periodic Maintenance chapter.

#### **Pressure Testing**

- Remove:
  - Right Middle Fairing (see Middle Fairing Removal in the Frame chapter)
  - Right Inner Cover (see Inner Cover Removal in the Frame chapter)
- Remove the radiator cap (see Coolant Change in the Periodic Maintenance chapter), and install a cooling system pressure tester [A] on the filler neck [B].

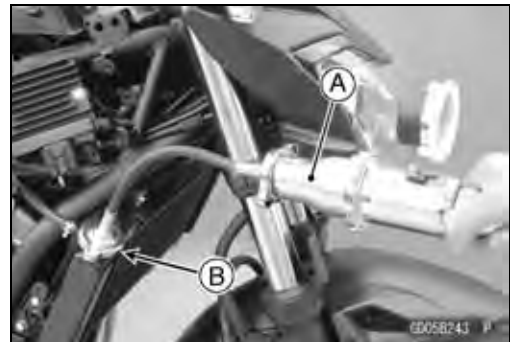

#### **NOTE**

○ *Wet the cap sealing surfaces with water or coolant to prevent pressure leaks.*

- Build up pressure in the system carefully until the pressure reaches 137.4 kPa (1.40 kgf/cm<sup>2</sup>, 19.9 psi).

#### **NOTICE**

**During pressure testing, do not exceed the pressure for which the system is designed. The maximum pressure is 137.4 kPa (1.40 kgf/cm<sup>2</sup>, 19.9 psi).**

- Watch the gauge for at least 6 seconds.
- ★ If the pressure holds steady, the system is all right.
- ★ If the pressure drops and no external source is found, check for internal leaks. Droplets in the engine oil indicate internal leakage. Check the cylinder head gasket and the water pump.
- Remove the pressure tester, replenish the coolant, and install the radiator cap.

## Coolant

### Cooling System Flushing

Over a period of time, the cooling system accumulates rust, scale, and lime in the water jacket and radiator. When this accumulation is suspected or observed, flush the cooling system. If this accumulation is not removed, it will clog up the water passage and considerably reduce the efficiency of the cooling system.

- Drain the cooling system (see Coolant Change in the Periodic Maintenance chapter).
- Fill the cooling system with fresh water mixed with a flushing compound.

#### NOTICE

**Do not use a flushing compound which is harmful to the aluminum engine and radiator. Carefully follow the instructions supplied by the manufacturer of the cleaning product.**

- Warm up the engine, and run it at normal operating temperature for about ten minutes.
- Stop the engine, and drain the cooling system.
- Fill the system with fresh water.
- Warm up the engine and drain the system.
- Repeat the previous two steps once more.
- Fill the system with a permanent type coolant and bleed the air from the system (see Coolant Change in the Periodic Maintenance chapter).

### Coolant Reserve Tank Removal

- Remove:
  - Right Side Cover (see Side Cover Removal in the Frame chapter)
  - Coolant Reserve Tank Bolts [A]


- Disconnect the coolant reserve tank overflow hose [A].



## 4-10 COOLING SYSTEM

### Coolant

- Remove the coolant reserve tank cap.
- Pour the coolant into a container.
- Slide the clamp [A] and disconnect the reserve tank hose [B].
- Remove the coolant reserve tank [C].

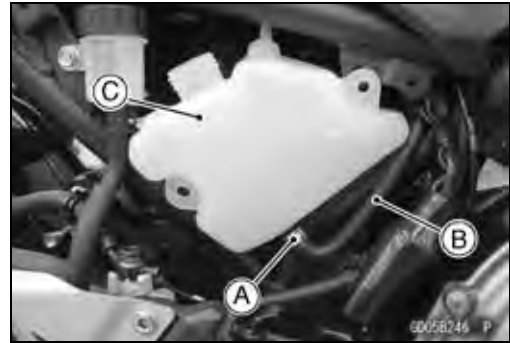

### **Coolant Reserve Tank Installation**



- Run the hoses correctly (see Cable, Wire, and Hose Routing section in the Appendix chapter).
- Install the removed parts (see appropriate chapters).
- Tighten:
  - Torque - Coolant Reserve Tank Bolts: 7.9 N·m (0.81 kgf-m, 70 in·lb)**
- Fill the coolant reserve tank with the coolant (see Coolant Change in the Periodic Maintenance chapter).



## Water Pump


### Water Pump Removal

- Drain the coolant (see Coolant Change in the Periodic Maintenance chapter).
- Slide the clamp [A].
- Disconnect the water hose [B].
- Remove:
  - Water Pump Cover Bolts [C]
  - Water Pump Cover [D]
  
- Remove:
  - Water Pump Impeller Bolt [A]
  - Impeller [B]
  - Water Pump Housing [C]

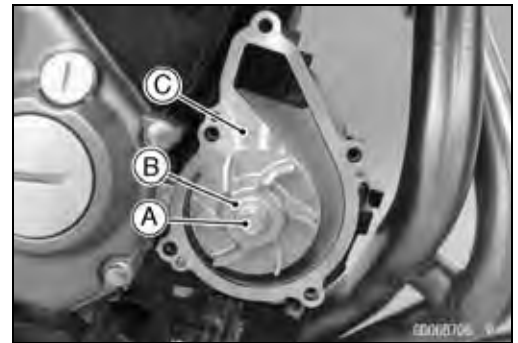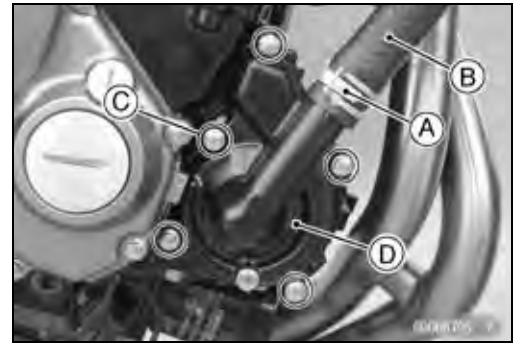


### Water Pump Installation


- Replace the O-rings [A] on the water pump housing with new ones and apply grease to them.
- Replace the water pump housing oil seal [B] with a new one and apply grease to the lips of the oil seal (see Water Pump Housing Disassembly/Assembly).

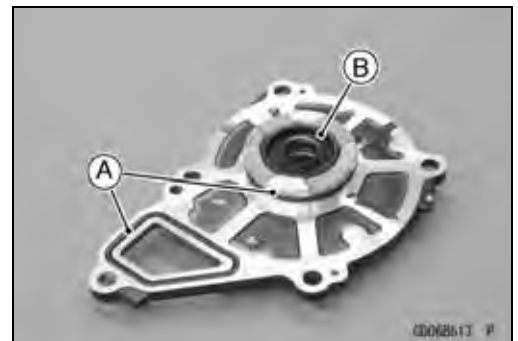

- Be sure that the dowel pin [A] is in position.
- Install the water pump housing.
- Apply water to the mechanical seal, and install the impeller.
- Tighten:
  - Torque - Water Pump Impeller Bolt: 9.8 N·m (1.0 kgf·m, 87 in·lb)**

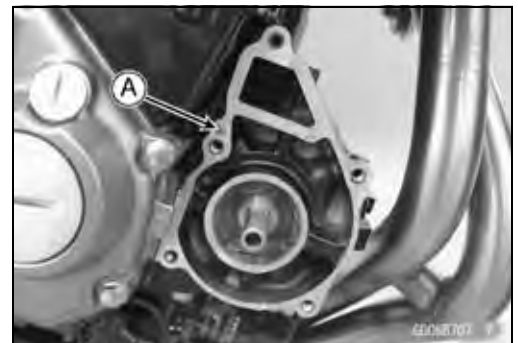

- Replace the O-ring [A] on the water pump cover with a new one and apply grease to it.

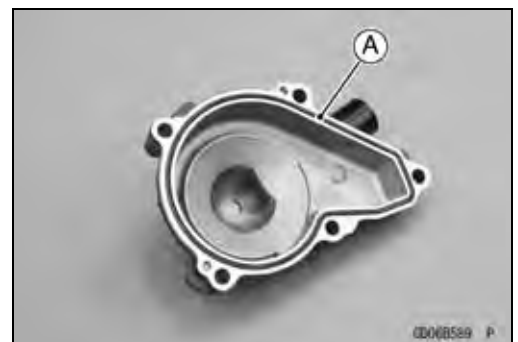


## 4-12 COOLING SYSTEM

### Water Pump

- Be sure that the dowel pins [A] are in position.
- Install the water pump cover.
- Tighten:  
**Torque - Water Pump Cover Bolts: 12 N·m (1.2 kgf·m, 106 in·lb)**



- Align the line [A] of the water pump cover with the white mark [B] of the water hose [C].
- Install the water hose clamp [D] as shown.
- Fill the radiator with the coolant (see Coolant Change in the Periodic Maintenance chapter).
- Install the removed parts (see appropriate chapters).

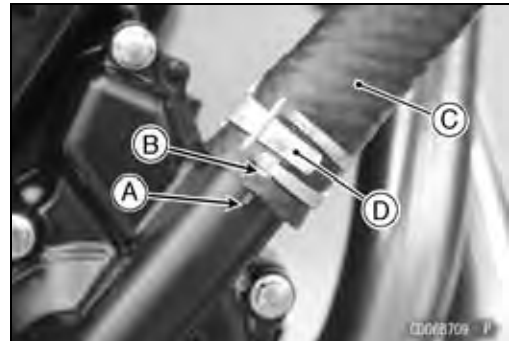


### Water Pump Inspection

- Check the drainage outlet passage [A] at the bottom of the water pump housing for coolant leaks.
- If a coolant leak or ooze is found, start the engine and check if the coolant leaks continuously.
- When coolant does not continuously leak, it is normal.
- ★ If the mechanical seal is damaged, the coolant continuously leaks through the drainage outlet passage. Replace the mechanical seal unit.
- ★ If the oil seal is damaged, engine oil leaks through the drainage outlet passage. Replace the oil seal.



### Mechanical Seal Inspection

- Remove the impeller (see Water Pump Removal).
- Visually inspect the mechanical seal.
- ★ If any one of the parts is damaged, replace the mechanical seal as a unit.
- The sealing seat and rubber seal may be removed easily by hand.
  - Impeller Sealing Seat Surface [A]
  - Rubber Seal [B]
  - Mechanical Seal Diaphragm [C]

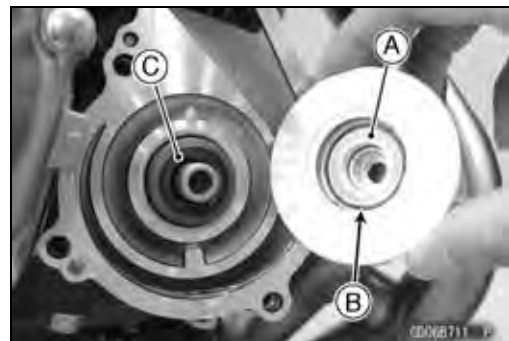


### Water Pump Housing Disassembly

#### NOTICE

**Be careful not to damage the sealing surface of the mechanical seal.**

- Remove the water pump housing (see Water Pump Removal).
- Take the oil seal [A] out of the housing [B] with a hook [C].

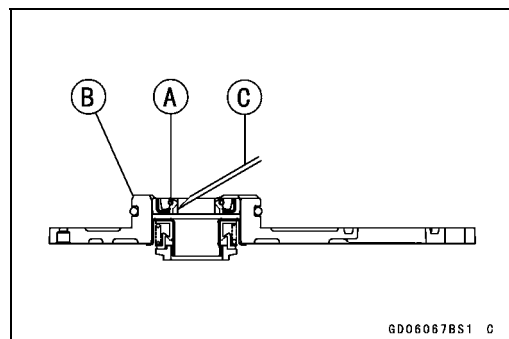


GD06067BS1 C

## Water Pump

- Press the mechanical seal [A] out of the housing with a bearing driver [B].

**Special Tool - Bearing Driver Set: 57001-1129**

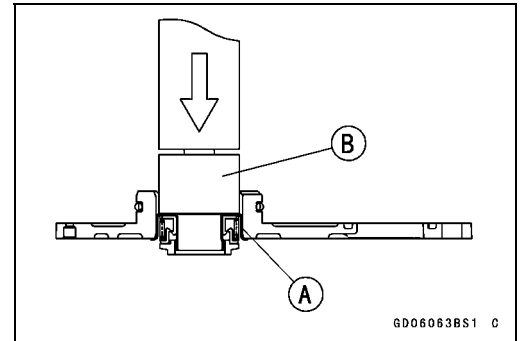


### Water Pump Housing Assembly

- Apply grease [A] to the new oil seal [B].
- Press the oil seal into the housing as shown.
  - 0 ~ 0.5 mm (0 ~ 0.02 in.) [C]
- Apply a soap and water solution or rubber lubricant to the outer circumference [D] of the oil seal so that it will go into place smoothly.

**Special Tool - Bearing Driver Set: 57001-1129**


- Press the new mechanical seal into the housing with the oil seal driver [E] until its flange [F] touches the surface [G] of the housing.

**Special Tool - Oil Seal Driver  $\phi 37.5$ : 57001-1660**

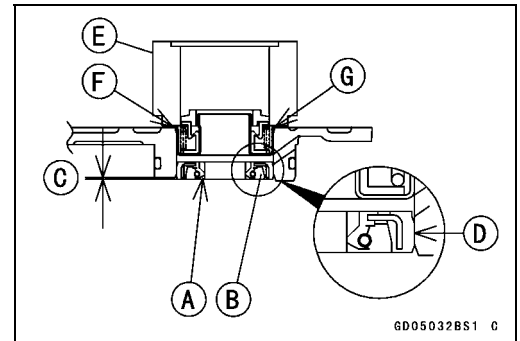

### Impeller Assembly

- Clean the sliding surface of the mechanical seal with a high flash-point solvent, and apply a little coolant to the sliding surface to give the mechanical seal initial lubrication.
- Apply water to the surfaces of the rubber seal [A] and sealing seat [B], and install the rubber seal and sealing seat into the impeller by pressing them by hand until the seat stops at the bottom of the hole.

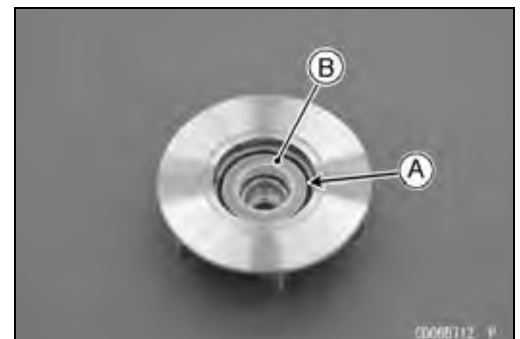

### Pump Impeller Inspection

- Remove the water pump cover (see Water Pump Removal).
- Visually check the impeller [A].
- ★ If the surface is corroded, or if the blades are damaged, replace the impeller (see Water Pump Removal).





## 4-14 COOLING SYSTEM


### Radiator

#### **Radiator and Radiator Fan Removal**

- Drain the coolant (see Coolant Change in the Periodic Maintenance chapter).
- Remove:
  - Middle Fairings (see Middle Fairing Removal in the Frame chapter)
  - Right Inner Cover (see Inner Cover Removal in the Frame chapter)
  - Regulator/Rectifier (see Regulator/Rectifier Removal in the Electrical System chapter)
- Slide the dust cover [A].
- Disconnect the radiator fan lead connector [B].
- Slide the clamps [A].
- Disconnect:
  - Radiator Overflow Hose [B]
  - Water Hose [C]

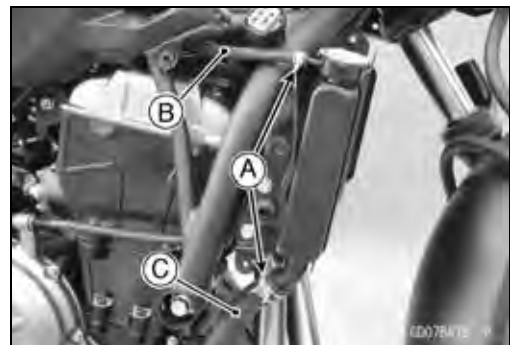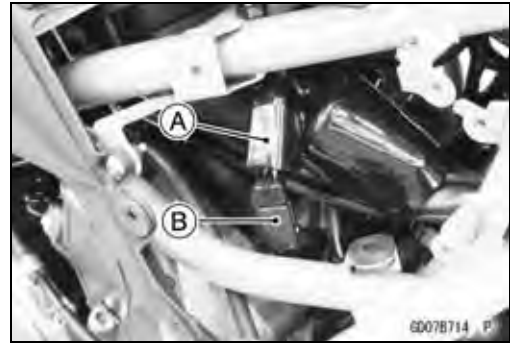


- Slide the clamp [A].
- Disconnect the water hose [B].
- Remove the radiator mounting bolt [C].
- Pull [D] the radiator [E] toward the left.

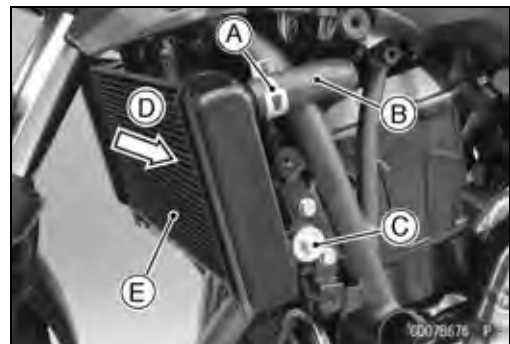

#### **NOTICE**

**Do not touch the radiator core. This could damage the radiator fins, resulting in loss of cooling efficiency.**


- Remove:
  - Radiator Fan Bolts [A]
  - Radiator Fan [B]

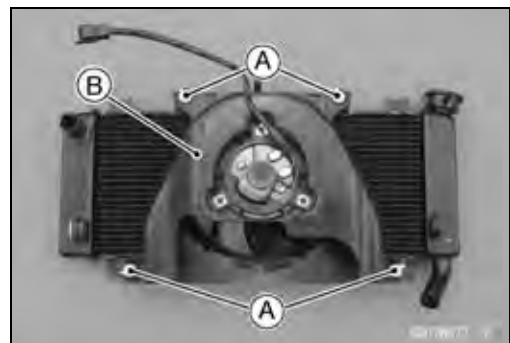

## Radiator

### Radiator and Radiator Fan Installation

- Install:
  - Clip Nuts [A]
  - Radiator Fan [B]
- Tighten:
  - Torque - Radiator Fan Bolts [C]: 8.4 N·m (0.86 kgf·m, 74 in·lb)**
- Install the rubber dampers [D] and collar [E].
- Align the projections on the frame with the holes on the dampers.
- Run the radiator fan lead correctly (see Cable, Wire, and Hose Routing section in the Appendix chapter).
- Tighten:
  - Torque - Radiator Mounting Bolt [F]: 7.9 N·m (0.81 kgf·m, 70 in·lb)**

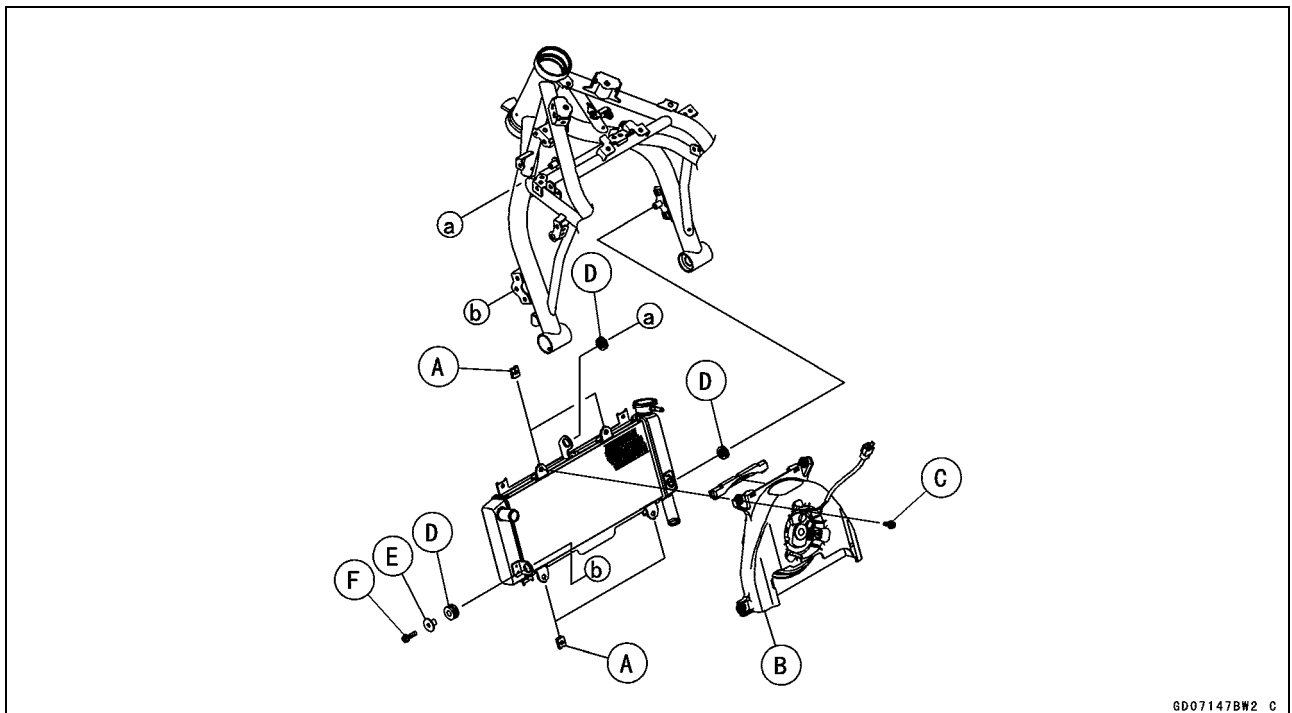


GD07147BW2 C

- Install the removed parts (see appropriate chapters).
- Fill the radiator with the coolant (see Coolant Change in the Periodic Maintenance chapter).

### Radiator Inspection

- Remove the radiator (see Radiator and Radiator Fan Removal).
- Check the radiator core.
  - ★ If there are obstructions to air flow, remove them.
  - ★ If the corrugated fins [A] are deformed, carefully straighten them.
  - ★ If the air passages of the radiator core are blocked more than 20% by unremovable obstructions or irreparably deformed fins, replace the radiator with a new one.

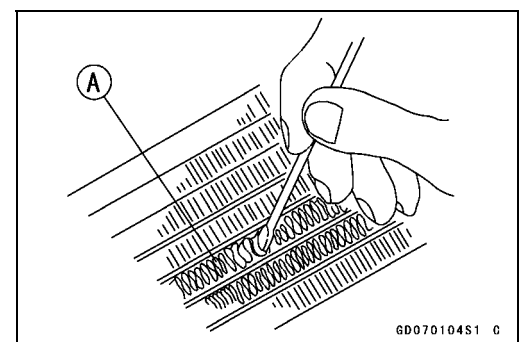


GD070104S1 C

## 4-16 COOLING SYSTEM

### Radiator

#### NOTICE

When cleaning the radiator with steam cleaner, be careful of the following to prevent radiator damage: Keep the steam gun [A] away more than 0.5 m (1.6 ft) [B] from the radiator core. Hold the steam gun perpendicular [C] (not oblique [D]) to the core surface. Run the steam gun, following the core fin direction.

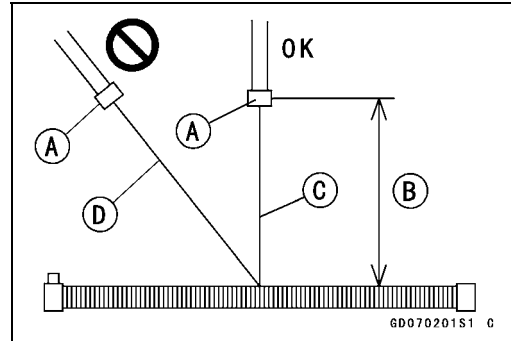

#### Radiator Cap Inspection

- Remove the radiator cap (see Coolant Change in the Periodic Maintenance chapter).
- Check the condition of the bottom [A] and top [B] valve seals.
- ★ If any one of them shows visible damage, replace the cap with a new one.




- Install the cap [A] on a cooling system pressure tester [B].

#### NOTE

○ Wet the cap sealing surfaces with water or coolant to prevent pressure leaks.

- Watching the pressure gauge, pump the pressure tester to build up the pressure until the relief valve opens: the gauge needle flicks downward. Stop pumping and measure leak time at once. The relief valve must open within the specified range in the table below and the gauge hand must remain within the same range at least 6 seconds.

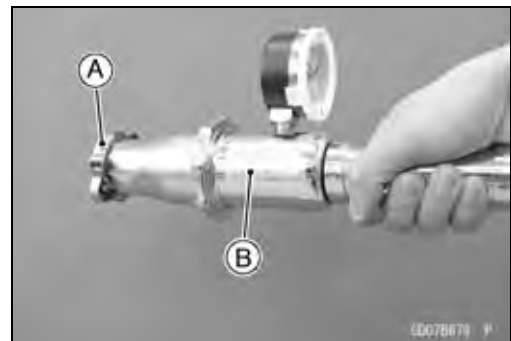

#### Radiator Cap Relief Pressure

Standard: 108 ~ 137.4 kPa (1.10 ~ 1.40 kgf/cm<sup>2</sup>, 15.7 ~ 19.9 psi)

- ★ If the cap can not hold the specified pressure or if it holds too much pressure, replace it with a new one.

#### Radiator Filler Neck Inspection


- Remove the radiator cap (see Coolant Change in the Periodic Maintenance chapter).
- Check the radiator filler neck for signs of damage.
- Check the condition of the top and bottom sealing seats [A] in the filler neck. They must be smooth and clean for the radiator cap to function properly.



## Thermostat

### **Thermostat Removal**

- Drain the coolant (see Coolant Change in the Periodic Maintenance chapter).
- Remove:
  - Radiator (see Radiator and Radiator Fan Removal)
  - Thermostat Housing Bolts [A]
  - Thermostat Housing [B]

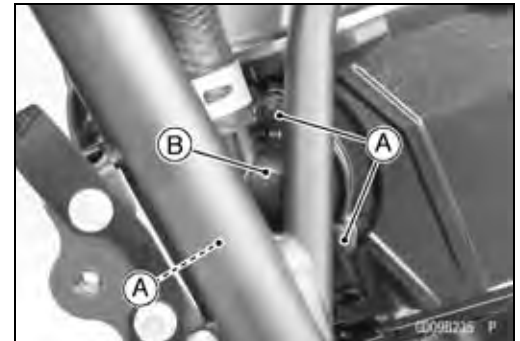


- Pull the thermostat [A] out of the cylinder head.



### **Thermostat Installation**

- Install the thermostat [A] in the cylinder head so that the air bleeder hole [B] is on top.

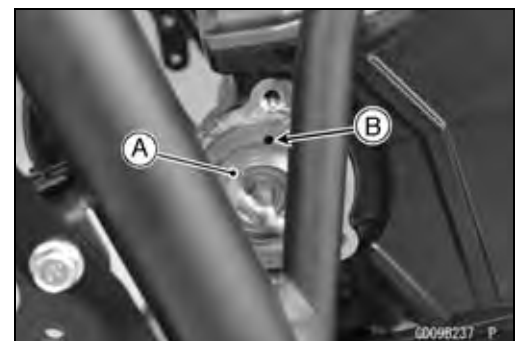


- Replace the O-ring [A] with a new one and apply grease to it.



- When installing the water hose [A], align the mark [B] of the water hose with the line [C] of thermostat housing.
- Install the water hose clamp [D] as shown.
- Install the thermostat housing.
- Tighten:

**Torque - Thermostat Housing Bolts: 12 N·m (1.2 kgf·m, 106 in·lb)**

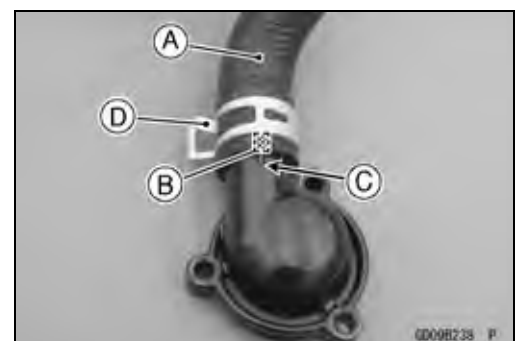

- Install the removed parts (see appropriate chapters).
- Fill the radiator with coolant (see Coolant Change in the Periodic Maintenance chapter).

## 4-18 COOLING SYSTEM

### Thermostat

#### **Thermostat Inspection**


- Remove the thermostat (see Thermostat Removal), and inspect the thermostat valve [A] at room temperature.
- ★ If the valve is open, replace the thermostat with a new one.



- To check valve opening temperature, suspend the thermostat [A] in a container of water and raise the temperature of the water.
- The thermostat must be completely submerged and must not touch the container sides or bottom. Suspend an accurate thermometer [B] in the water so that the heat sensitive portions [C] are located in almost the same depth.
- It must not touch the container, either.
- ★ If the measurement is out of the specified range, replace the thermostat with a new one.

#### **Thermostat Valve Opening Temperature**

**Standard: 80.5 ~ 83.5°C (177 ~ 182°F)**

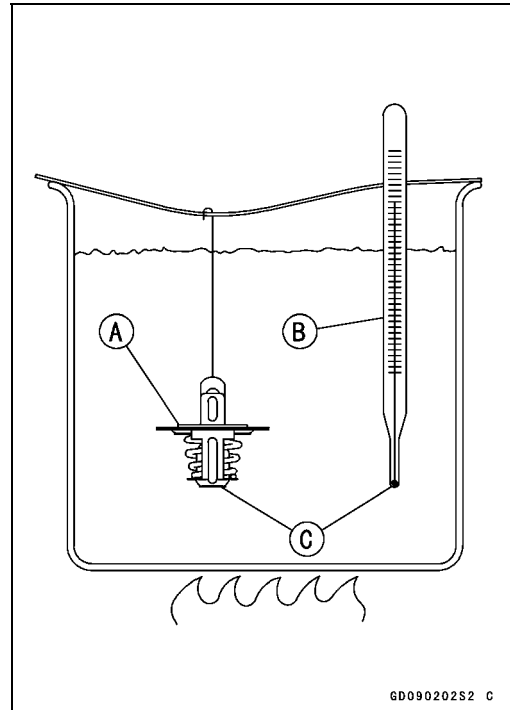



## Water Hose and Pipes

### **Water Hose Installation**


- Install the hoses and pipes, being careful to follow bending direction. Avoid sharp bending, kinking, flattening or twisting.
- Run the hoses (see Cable, Wire, and Hose Routing section in the Appendix chapter).
- Install the clamp [A] as near as possible to the hose end to clear the raised rib of the fitting. This will prevent the hoses from working loose.
- The clamp should be positioned correctly to prevent the clamps from contacting the other parts.

### **Water Hose Inspection**

- Refer to the Cooling System Inspection in the Periodic Maintenance chapter.

### **Water Hose and O-ring Replacement**

- Refer to the Water Hose and O-ring Replacement in the Periodic Maintenance chapter.

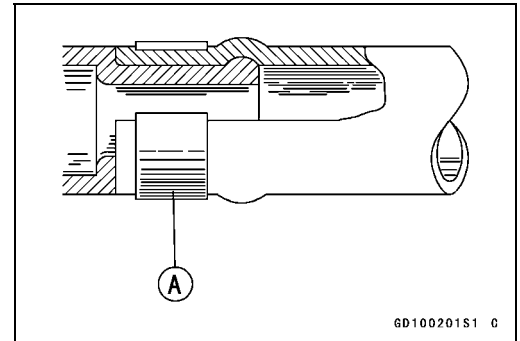

## 4-20 COOLING SYSTEM

---

### Water Temperature Sensor

---

<b><i>NOTICE</i></b>
----------------------

<p>The water temperature sensor should never be allowed to fall on a hard surface. Such a shock to the water temperature sensor can damage it.</p>
--

#### ***Water Temperature Sensor Removal/Installation***

- Refer to the Water Temperature Sensor Removal/Installation in the Fuel System (DFI) chapter.

#### ***Water Temperature Sensor Inspection***

- Refer to the Water Temperature Sensor Inspection in the Fuel System (DFI) chapter.


# Engine Top End

## Table of Contents

Exploded View.....	5-2	Cylinder Head Installation.....	5-28
Exhaust System Identification .....	5-6	Cylinder Head Warp Inspection ...	5-32
Specifications .....	5-8	Valves .....	5-33
Special Tools and Sealant .....	5-10	Valve Clearance Inspection .....	5-33
Clean Air System.....	5-12	Valve Clearance Adjustment.....	5-33
Air Suction Valve Removal.....	5-12	Valve Removal .....	5-33
Air Suction Valve Installation.....	5-12	Valve Installation .....	5-33
Air Suction Valve Inspection .....	5-13	Valve Guide Removal .....	5-33
Air Switching Valve Removal .....	5-13	Valve Guide Installation .....	5-34
Air Switching Valve Installation ...	5-13	Valve-to-Guide Clearance	
Air Switching Valve Operation		Measurement (Wobble	
Test.....	5-13	Method) .....	5-34
Air Switching Valve Unit Test .....	5-13	Valve Seat Inspection .....	5-35
Clean Air System Hose		Valve Seat Repair .....	5-35
Inspection.....	5-14	Cylinder, Pistons.....	5-40
Cylinder Head Cover .....	5-15	Cylinder Removal.....	5-40
Cylinder Head Cover Removal ...	5-15	Cylinder Installation.....	5-40
Cylinder Head Cover Installation .	5-15	Piston Removal.....	5-41
Camshaft Chain Tensioner .....	5-17	Piston Installation.....	5-41
Camshaft Chain Tensioner		Cylinder Wear Inspection.....	5-42
Removal.....	5-17	Piston Wear Inspection .....	5-43
Camshaft Chain Tensioner		Piston Ring, Piston Ring Groove	
Installation .....	5-17	Wear Inspection .....	5-43
Camshaft, Camshaft Chain .....	5-19	Piston Ring Groove Width	
Camshaft Removal .....	5-19	Inspection.....	5-43
Camshaft Installation .....	5-21	Piston Ring Thickness Inspection	5-44
Camshaft, Camshaft Cap Wear		Piston Ring End Gap Inspection ..	5-44
Inspection.....	5-24	Throttle Body Assy Holder.....	5-45
Camshaft Runout Inspection.....	5-24	Throttle Body Assy Holder	
Cam Wear Inspection .....	5-25	Removal .....	5-45
Camshaft Chain Removal .....	5-25	Throttle Body Assy Holder	
Cylinder Head.....	5-26	Installation .....	5-45
Cylinder Compression		Muffler.....	5-46
Measurement .....	5-26	Muffler Removal.....	5-46
Cylinder Head Removal .....	5-27	Muffler Installation.....	5-47

# 5-2 ENGINE TOP END

## Exploded View

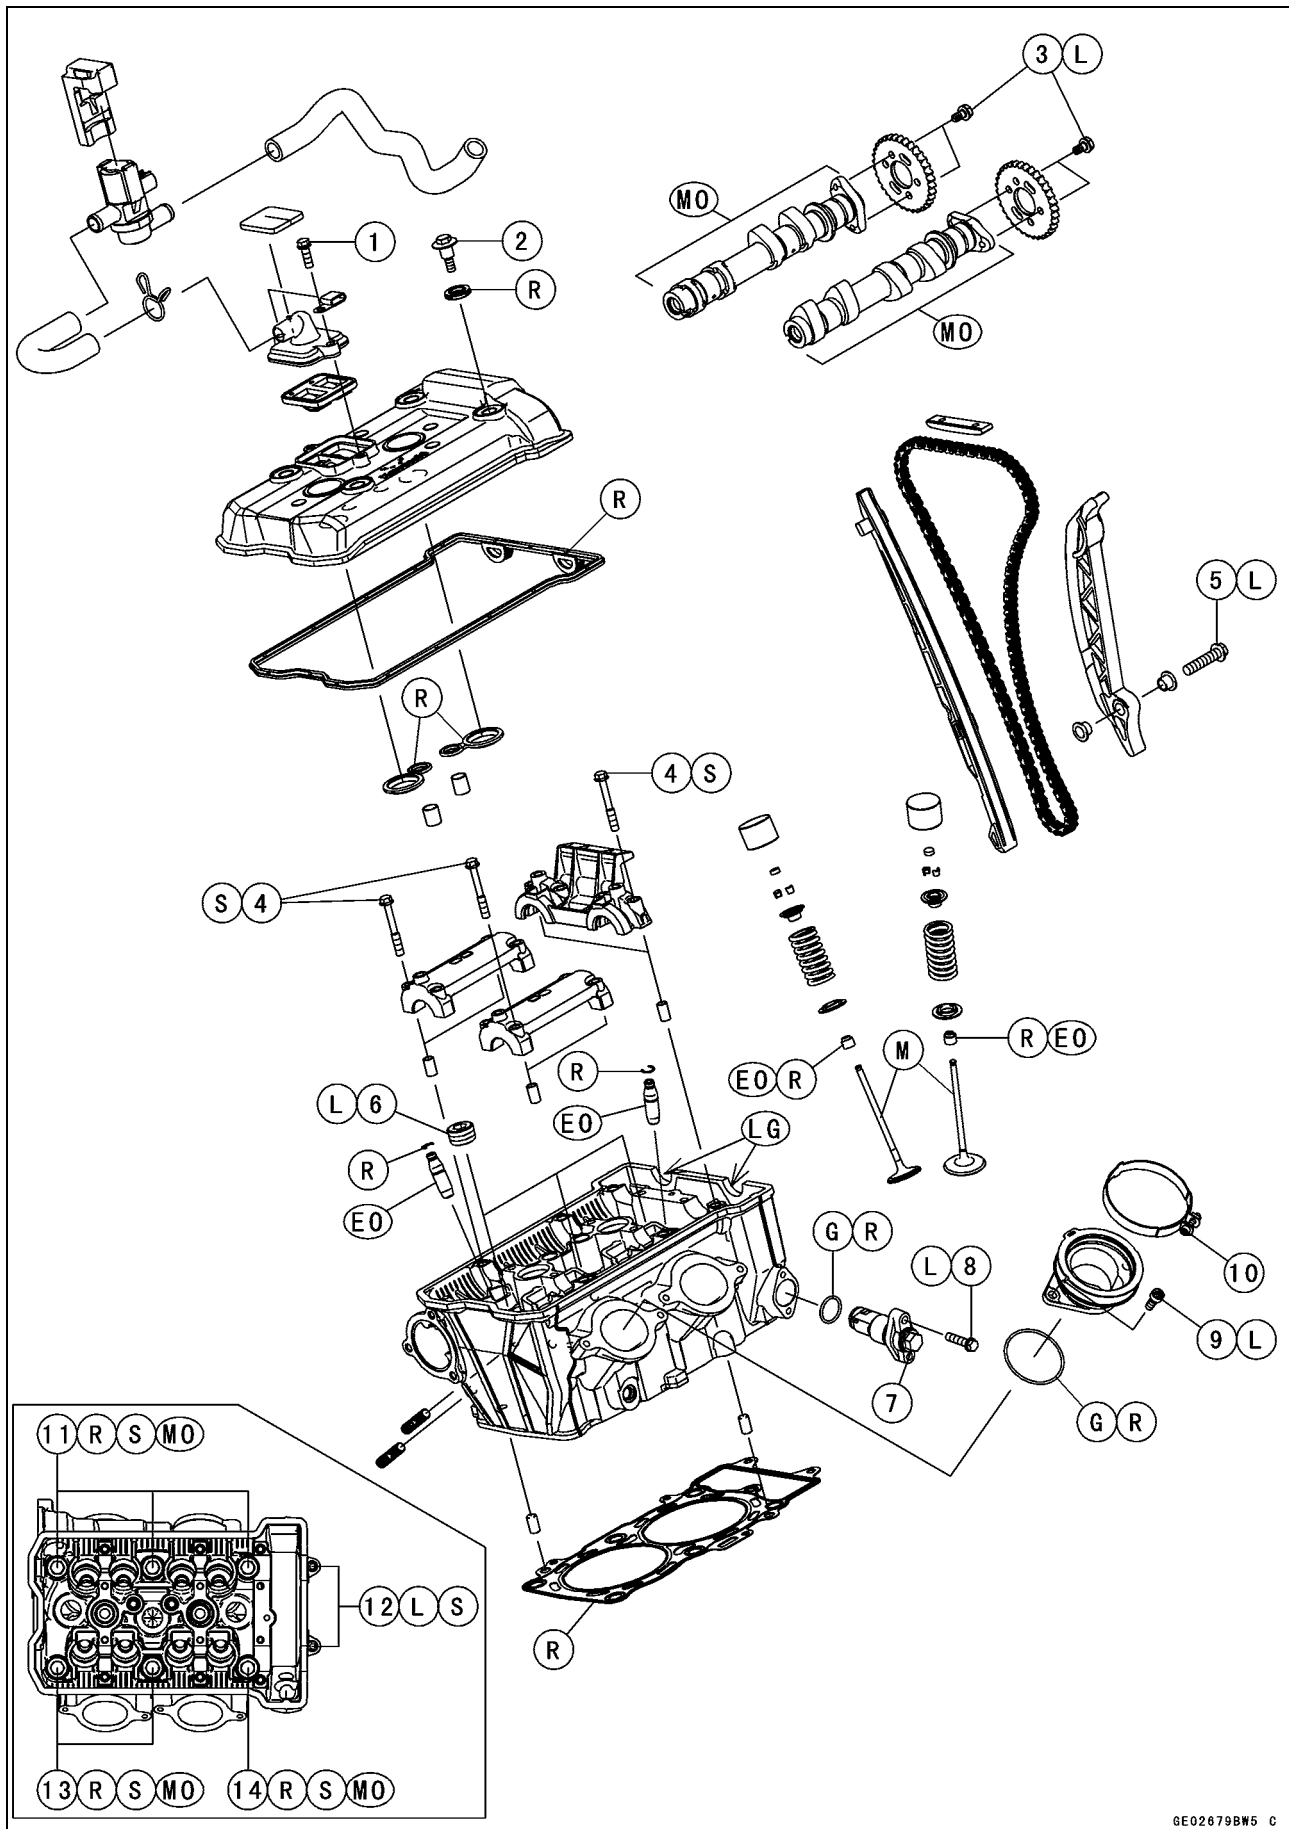

## Exploded View

No.	Fastener	Torque			Remarks
		N-m	kgf-m	ft-lb	
1	Air Suction Valve Cover Bolts	9.8	1.0	87 in-lb	
2	Cylinder Head Cover Bolts	9.8	1.0	87 in-lb	
3	Camshaft Sprocket Bolts	15	1.5	11	L
4	Camshaft Cap Bolts	12	1.2	106 in-lb	S
5	Rear Camshaft Chain Guide Bolt	20	2.0	15	L
6	Cylinder Head Plugs	19.6	2.00	14.5	L
7	Camshaft Chain Tensioner Cap Bolt	20	2.0	15	
8	Camshaft Chain Tensioner Mounting Bolts	9.8	1.0	87 in-lb	L
9	Throttle Body Assy Holder Bolts	12	1.2	106 in-lb	L
10	Throttle Body Assy Holder Clamp Bolts	2.0	0.20	18 in-lb	
11	Cylinder Head Bolt (M10), L = 176 mm (6.9 in.)	see text	–	–	MO, R, S
12	Cylinder Head Bolts (M6)	12	1.2	106 in-lb	L, S
13	Cylinder Head Bolts (M10), L = 158 mm (6.2 in.)	see text	–	–	MO, R, S
14	Cylinder Head Bolts (M10), L = 100 mm (3.9 in.)	see text	–	–	MO, R, S

EO: Apply engine oil.

G: Apply grease.

L: Apply a non-permanent locking agent.

LG: Apply liquid gasket.

M: Apply molybdenum disulfide grease.

MO: Apply molybdenum disulfide oil solution.


(mixture of the engine oil and molybdenum disulfide grease in a weight ratio 10:1)

R: Replacement Parts

S: Follow the specified tightening sequence.

# 5-4 ENGINE TOP END

## Exploded View

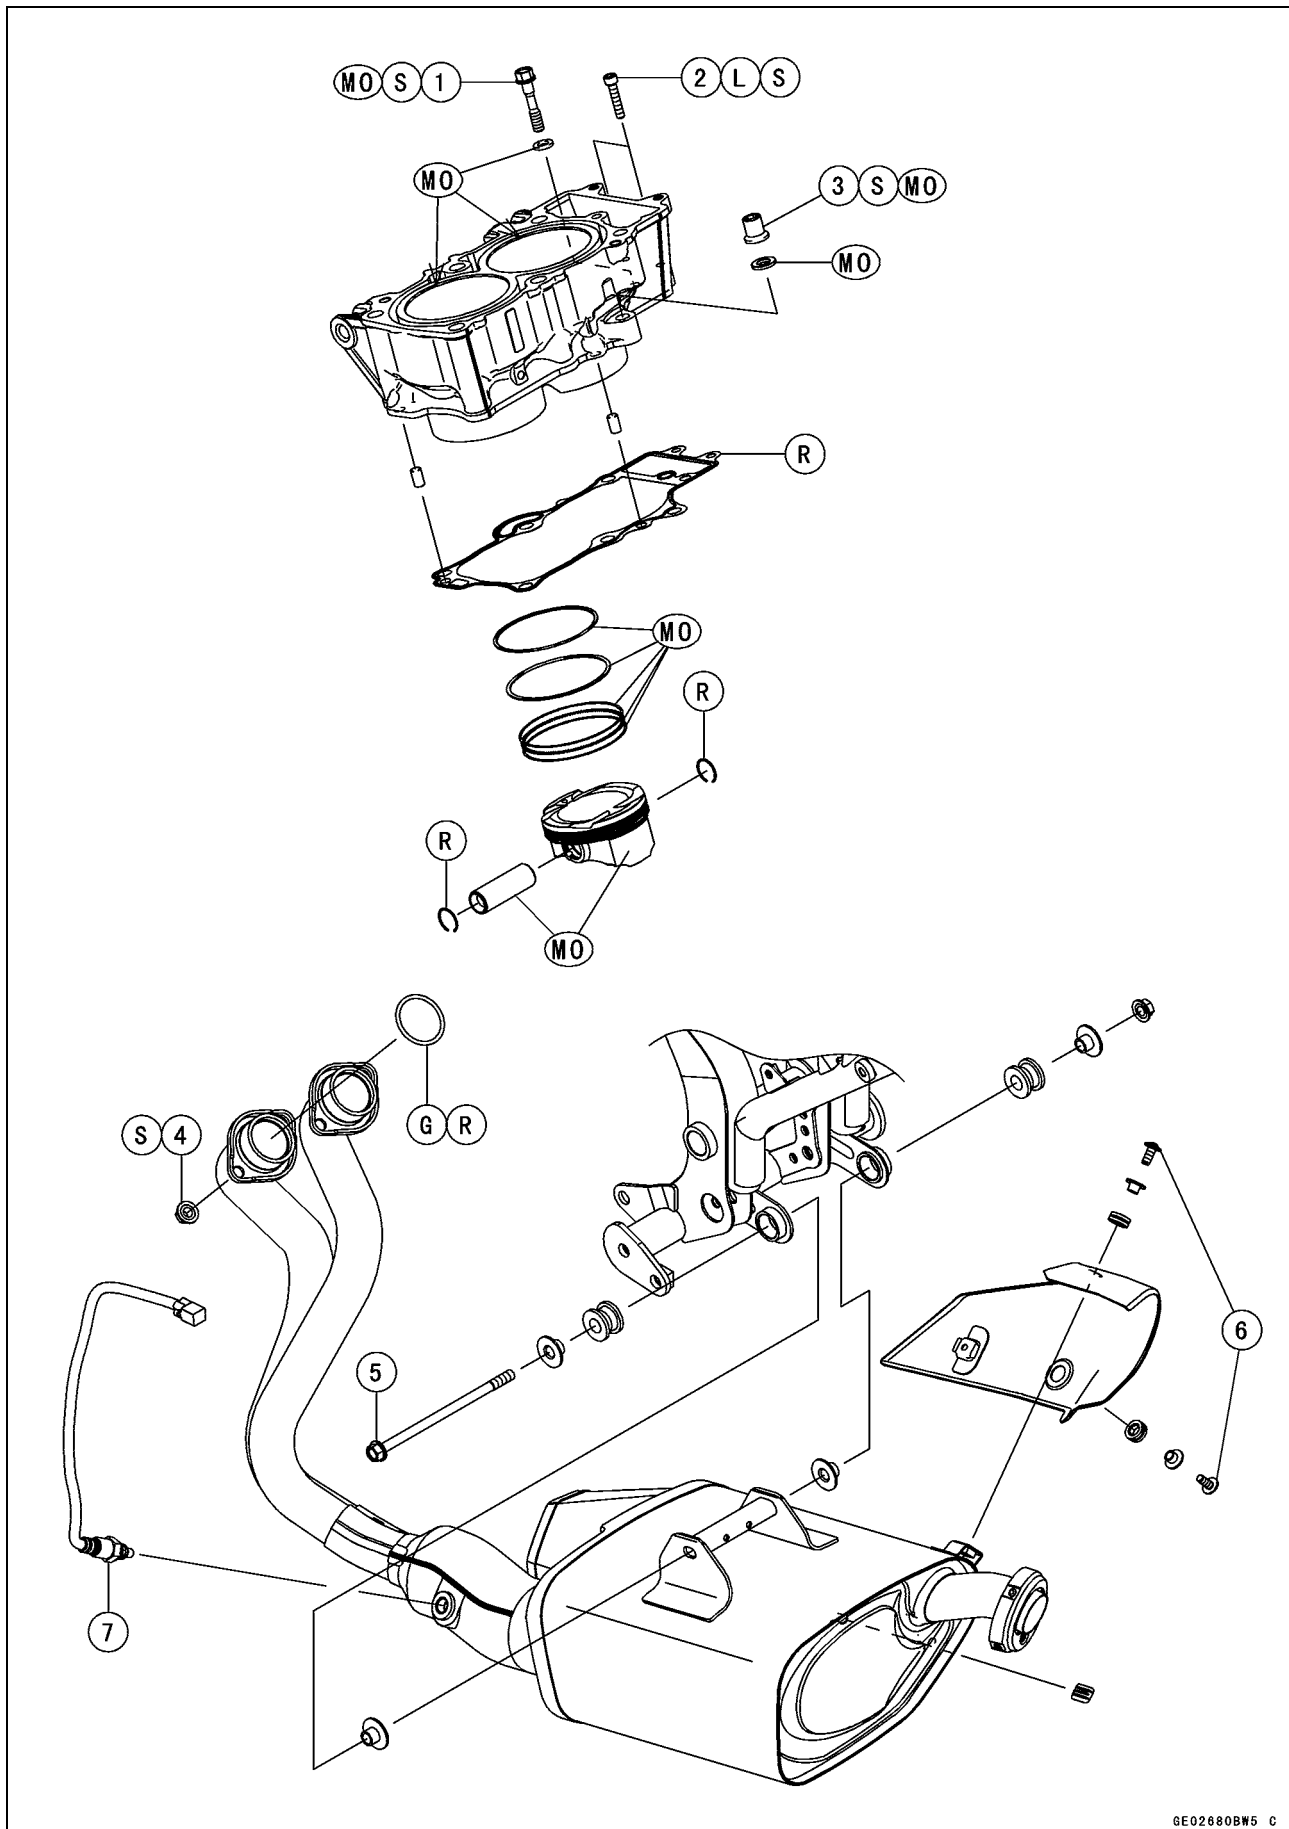

**Exploded View**

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Cylinder Bolt (M8)	27.5	2.80	20.3	MO, S
2	Cylinder Bolts (M6)	12	1.2	106 in·lb	L, S
3	Cylinder Nut	49	5.0	36	MO, S
4	Exhaust Pipe Holder Nuts	17	1.7	13	S
5	Muffler Body Mounting Bolt	20	2.0	15	
6	Muffler Cover Bolts	7.0	0.71	62 in·lb	
7	Oxygen Sensor	25	2.5	18	

G: Apply grease.

L: Apply a non-permanent locking agent.

MO: Apply molybdenum disulfide oil solution.

(mixture of the engine oil and molybdenum disulfide grease in a weight ratio 10:1)

R: Replacement Parts

S: Follow the specified tightening sequence.

# 5-6 ENGINE TOP END


## Exhaust System Identification

### Exhaust System


MUFFLER	SPECIFICATION	MODEL	
<div style="border: 1px solid black; padding: 5px;"> <p><b>Honeycomb Type Catalyst With Oxygen Sensor</b></p> <hr style="border-top: 1px dashed black;"/> <p>P/No. 49069-0818 Mark: KHI K 668 EPA Noise Emission Control Information</p> </div>	AU	ER650HH	
	AU LAMS	ER650HH	
	CA	ER650GH/HH	
	CAL	ER650GH/HH	
	CN	ER650HH	
	ID	ER650HH	
	IN	ER650HH	
	MY	ER650HH	
	PH	ER650HH	
	SEA-B1	ER650HH	
	SAE-B3	ER650HH	
	TH	ER650HH	
	US	ER650GH/HH	
	WVTA (FULL)	ER650HH	
	<div style="border: 1px solid black; padding: 5px;"> <p><b>Honeycomb Type Catalyst With Oxygen Sensor</b></p> <hr style="border-top: 1px dashed black;"/> <p>P/No. 49069-0820 Mark: KHI K 669</p> </div>	MY	ER650GH
		PH	ER650GH

GE24594C F

Muffler Mark Position [A]

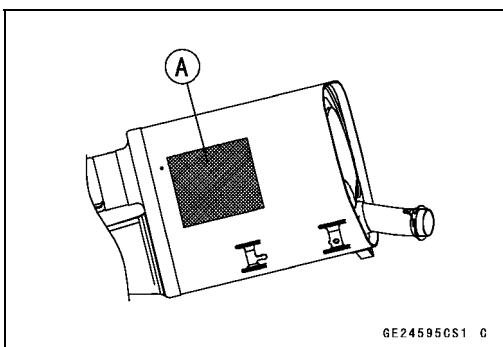

Honeycomb Type Catalyst Position [A]

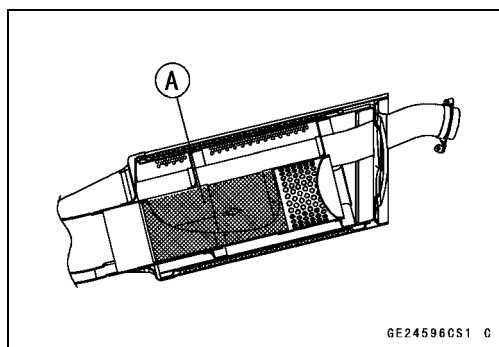




## Exhaust System Identification

---

Muffler Body with Hole [A] for Oxygen Sensor  
[B]

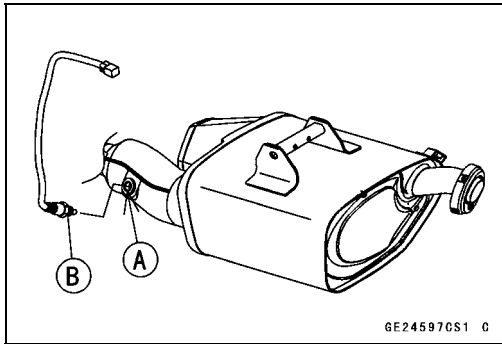

## 5-8 ENGINE TOP END

### Specifications

Item	Standard	Service Limit
<b>Camshafts</b>		
Cam Height:		
Exhaust	35.343 ~ 35.457 mm (1.3915 ~ 1.3959 in.)	35.24 mm (1.387 in.)
Intake	35.843 ~ 35.957 mm (1.4111 ~ 1.4156 in.)	35.74 mm (1.407 in.)
Camshaft Journal/Cap Clearance	0.028 ~ 0.071 mm (0.0011 ~ 0.0028 in.)	0.16 mm (0.0063 in.)
Camshaft Journal Diameter	23.950 ~ 23.972 mm (0.94291 ~ 0.94378 in.)	23.92 mm (0.9417 in.)
Camshaft Bearing Inside Diameter	24.000 ~ 24.021 mm (0.94488 ~ 0.94571 in.)	24.08 mm (0.9480 in.)
Camshaft Runout	TIR 0.02 mm (0.0008 in.) or less	TIR 0.1 mm (0.004 in.)
<b>Cylinder Head</b>		
Cylinder Compression	(Usable Range) 1 120 ~ 1 698 kPa (11.42 ~ 17.32 kgf/cm <sup>2</sup> , 162.4 ~ 246.2 psi) @400 r/min (rpm)	— — —
Cylinder Head Warp	— — —	0.05 mm (0.002 in.)
<b>Valves</b>		
Valve Clearance:		
Exhaust	0.22 ~ 0.31 mm (0.0087 ~ 0.0122 in.)	— — —
Intake	0.15 ~ 0.21 mm (0.0059 ~ 0.0083 in.)	— — —
Valve Head Thickness:		
Exhaust	0.8 mm (0.031 in.)	0.7 mm (0.03 in.)
Intake	0.5 mm (0.020 in.)	0.3 mm (0.01 in.)
Valve Stem Bend	TIR 0.01 mm (0.0004 in.) or less	TIR 0.05 mm (0.002 in.)
Valve Stem Diameter:		
Exhaust	4.455 ~ 4.470 mm (0.1754 ~ 0.1760 in.)	4.44 mm (0.175 in.)
Intake	4.475 ~ 4.490 mm (0.1762 ~ 0.1768 in.)	4.46 mm (0.176 in.)
Valve Guide Inside Diameter:		
Exhaust	4.500 ~ 4.512 mm (0.1772 ~ 0.1776 in.)	4.58 mm (0.180 in.)
Intake	4.500 ~ 4.512 mm (0.1772 ~ 0.1776 in.)	4.58 mm (0.180 in.)
Valve/Valve Guide Clearance (Wobble Method):		
Exhaust	0.08 ~ 0.16 mm (0.0031 ~ 0.0063 in.)	0.35 mm (0.014 in.)
Intake	0.03 ~ 0.10 mm (0.0012 ~ 0.0039 in.)	0.29 mm (0.011 in.)
Valve Seat Cutting Angle	45°, 32°, 55°, 60°	— — —
Valve Seating Surface:		
Outside Diameter:		
Exhaust	27.6 ~ 27.8 mm (1.087 ~ 1.094 in.)	— — —
Intake	32.6 ~ 32.8 mm (1.28 ~ 1.29 in.)	— — —
Width:		
Exhaust	0.8 ~ 1.2 mm (0.031 ~ 0.047 in.)	— — —
Intake	0.5 ~ 1.0 mm (0.020 ~ 0.039 in.)	— — —


## Specifications

Item	Standard	Service Limit
Valve Spring Free Length:		
Exhaust	41.9 mm (1.65 in.)	40.3 mm (1.59 in.)
Intake	41.9 mm (1.65 in.)	40.3 mm (1.59 in.)
<b>Cylinders, Pistons</b>		
Cylinder Inside Diameter	82.994 ~ 83.006 mm (3.2675 ~ 3.2679 in.)	83.09 (3.271 in.)
Piston Diameter	82.969 ~ 82.984 mm (3.2665 ~ 3.2671 in.)	82.82 mm (3.261 in.)
Piston/Cylinder Clearance	0.010 ~ 0.037 mm (0.0004 ~ 0.0015 in.)	— — —
Piston Ring/Groove Clearance:		
Top	0.030 ~ 0.070 mm (0.00118 ~ 0.00276 in.)	0.17 mm (0.0067 in.)
Second	0.020 ~ 0.060 mm (0.00079 ~ 0.00236 in.)	0.16 mm (0.0063 in.)
Piston Ring Groove Width:		
Top	0.92 ~ 0.94 mm (0.0362 ~ 0.0370 in.)	1.02 mm (0.0402 in.)
Second	1.01 ~ 1.03 mm (0.0398 ~ 0.0406 in.)	1.11 mm (0.0437 in.)
Piston Ring Thickness:		
Top	0.870 ~ 0.890 mm (0.0343 ~ 0.0350 in.)	0.80 mm (0.031 in.)
Second	0.970 ~ 0.990 mm (0.0382 ~ 0.0390 in.)	0.90 mm (0.035 in.)
Piston Ring End Gap:		
Top	0.25 ~ 0.40 mm (0.0098 ~ 0.0157 in.)	0.7 mm (0.03 in.)
Second	0.40 ~ 0.55 mm (0.0157 ~ 0.0217 in.)	0.9 mm (0.04 in.)


# 5-10 ENGINE TOP END

## Special Tools and Sealant


**Compression Gauge, 20 kgf/cm<sup>2</sup>:  
57001-221**

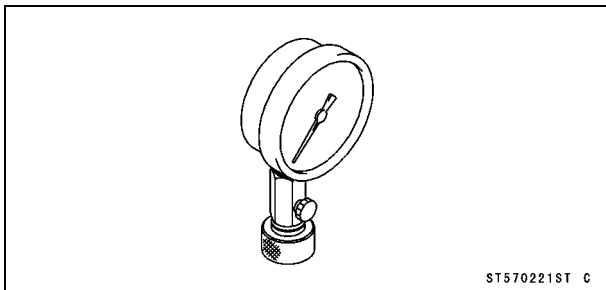


**Valve Seat Cutter, 60° -  $\phi$ 30:  
57001-1123**

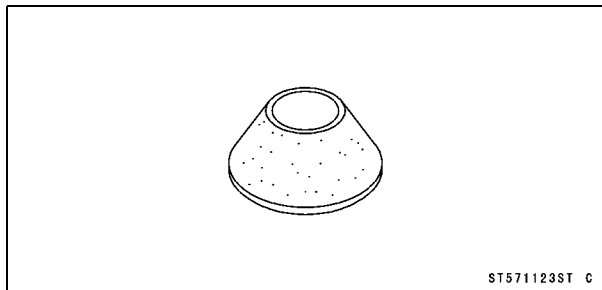


**Valve Spring Compressor Assembly:  
57001-241**

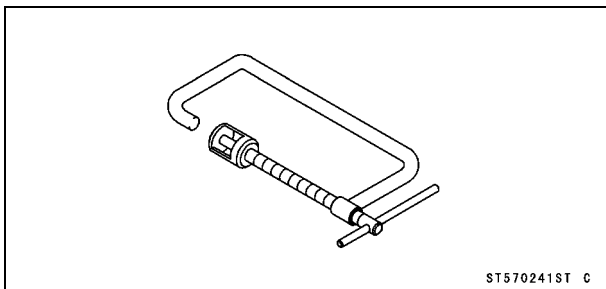


**Valve Seat Cutter Holder Bar:  
57001-1128**

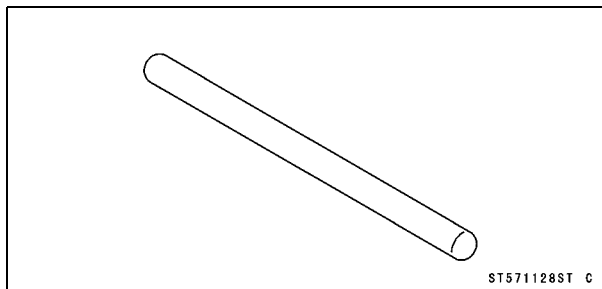


**Valve Seat Cutter, 45° -  $\phi$ 35:  
57001-1116**

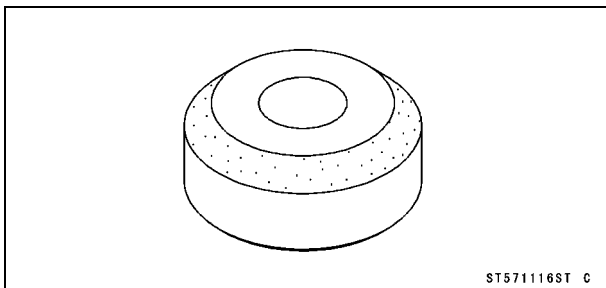


**Valve Seat Cutter, 45° -  $\phi$ 30:  
57001-1187**

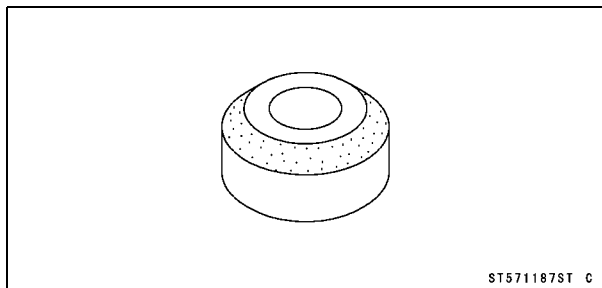


**Valve Seat Cutter, 32° -  $\phi$ 30:  
57001-1120**

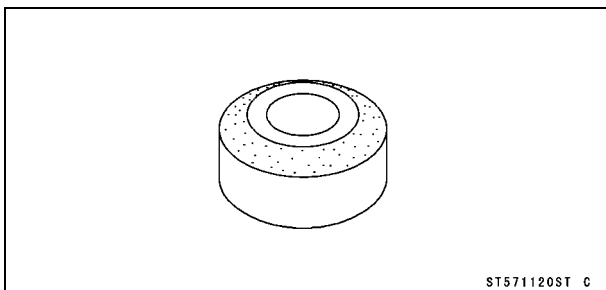


**Valve Seat Cutter, 55° -  $\phi$ 35:  
57001-1247**

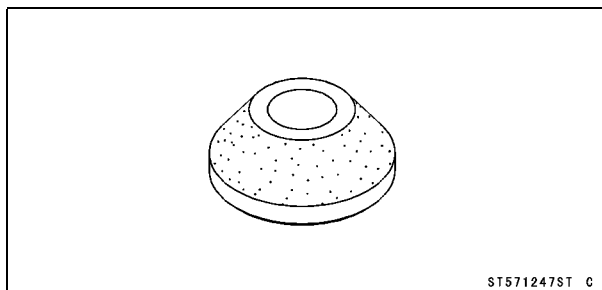

**Valve Seat Cutter, 32° -  $\phi$ 35:  
57001-1121**

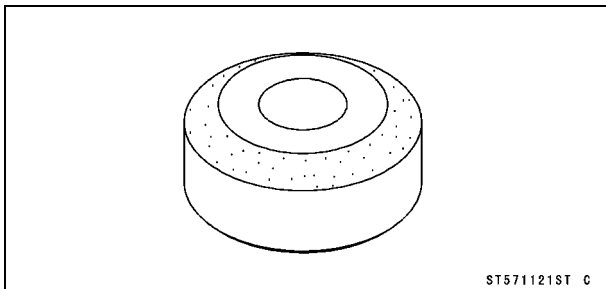


**Valve Spring Compressor Adapter,  $\phi$ 21:  
57001-1272**

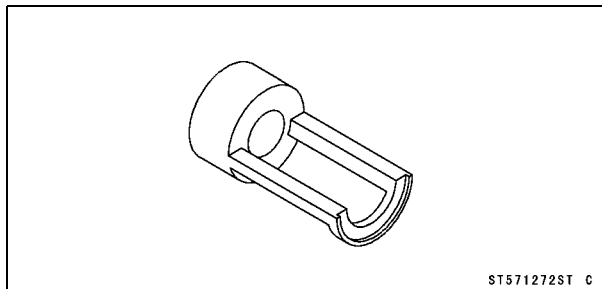


Special Tools and Sealant


Compression Gauge Adapter, M10 x 1.0:  
57001-1317

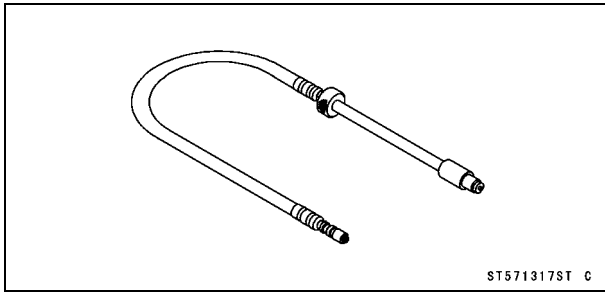


Filler Cap Driver:  
57001-1454

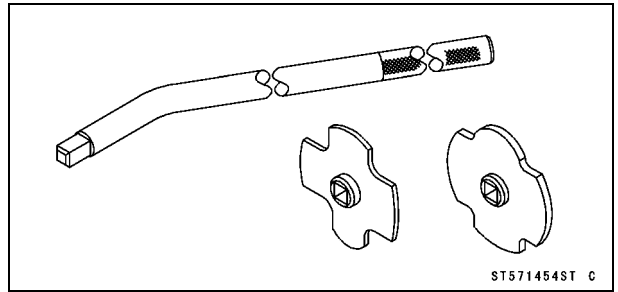


Valve Seat Cutter Holder,  $\phi 4.5$ :  
57001-1330

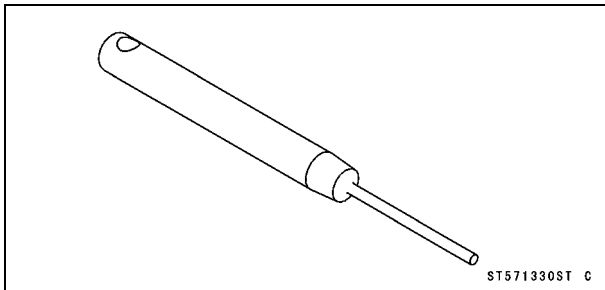


Piston Pin Puller:  
57001-1568

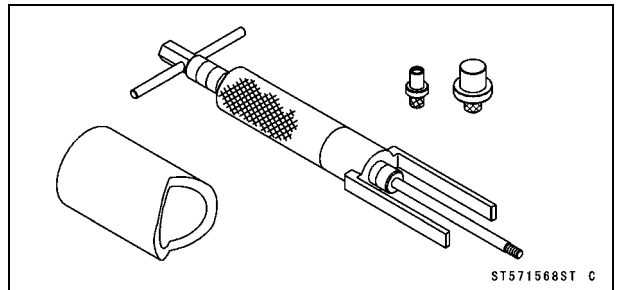


Valve Guide Arbor,  $\phi 4.5$ :  
57001-1331

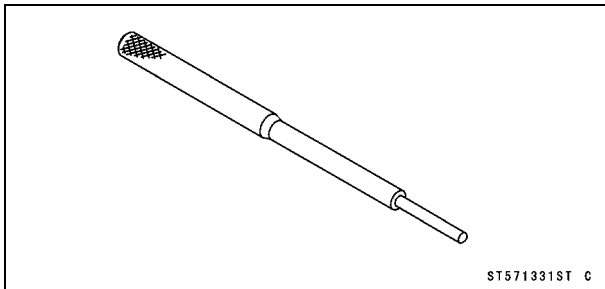


Piston Pin Puller Adapter,  $\phi 12$ :  
57001-1657

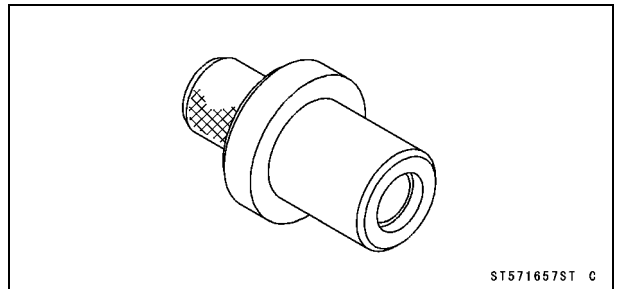


Valve Guide Reamer,  $\phi 4.5$ :  
57001-1333

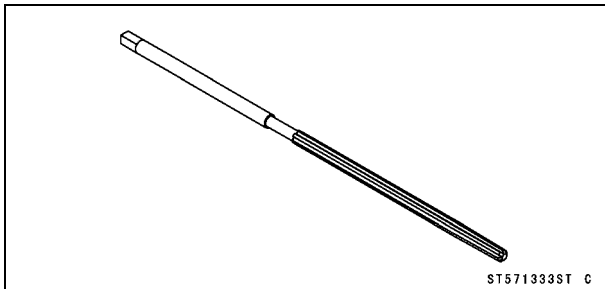

Liquid Gasket, TB1216B:  
92104-1064

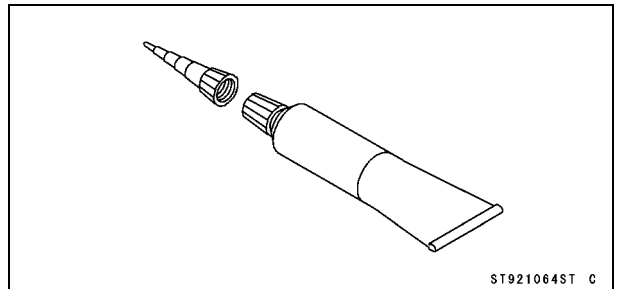

Engine Mount Nut Wrench:  
57001-1450

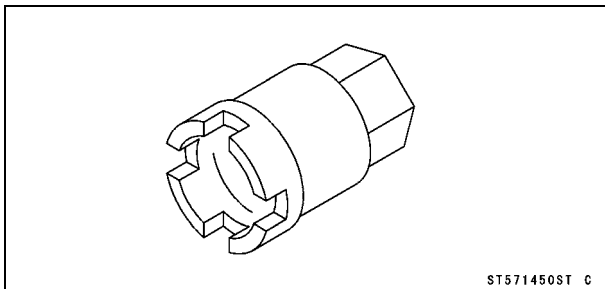


## 5-12 ENGINE TOP END

### Clean Air System

#### **Air Suction Valve Removal**

- Remove:
  - Air Switching Valve (see Air Switching Valve Removal)
  - Air Suction Valve Cover Bolts [A]
  - Clamp [B]

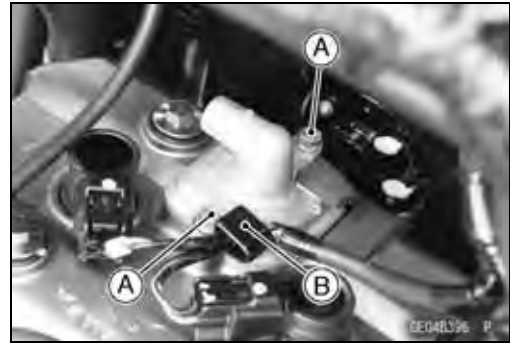


- Remove the air suction valve [A].




#### **Air Suction Valve Installation**

- Install the air suction valve [A] so that its side where stopper is fixed with the screws [B] faces the front [C].

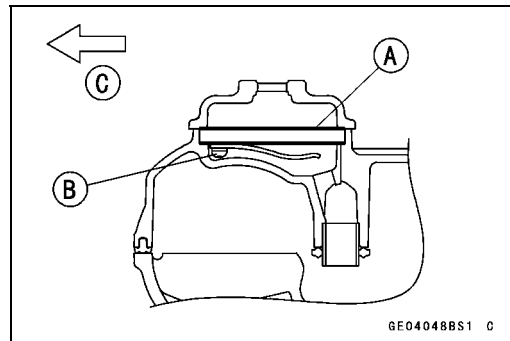

- Install the clamp [A] as shown.
- Tighten:
  - Torque - Air Suction Valve Cover Bolts [B]: 9.8 N·m (1.0 kgf·m, 87 in·lb)
- ★ Install the damper [C] as shown if removed.

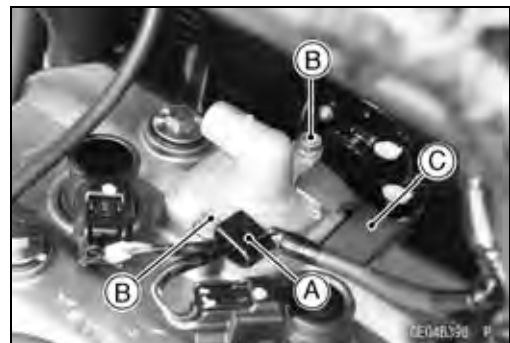


## Clean Air System

### Air Suction Valve Inspection

- Remove the air suction valve (see Air Suction Valve Removal).
- Visually inspect the reeds [A] for cracks, folds, warps, heat damage or other damage.
- ★ If there is any doubt as to the condition of the reeds, replace the air suction valve as an assembly.
- Check the reed contact areas [B] of the valve holder for grooves, scratches, any signs of separation from the holder or heat damage.
- If there is any doubt as to the condition of the reed contact areas, replace the air suction valve as an assembly.
- If any carbon or other foreign particles have accumulated between the reed and the reed contact area, wash the valve assembly clean with a high flash-point solvent.

#### NOTICE

**Do not scrape off the deposits with a scraper as this could damage the rubber, requiring replacement of the suction valve assembly.**

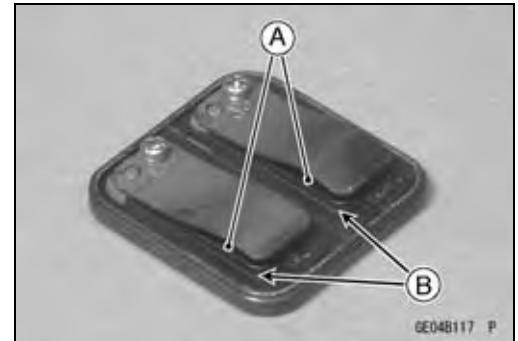


### Air Switching Valve Removal

- Remove:
  - Fuel Tank (see Fuel Tank Removal in the Fuel System (DFI) chapter)
  - Air Cleaner Housing (see Air Cleaner Housing Removal in the Fuel System (DFI) chapter)
- Disconnect the connector [A].
- Slide the clamp [B].
- Disconnect the air switching valve hose [C] from the air suction valve cover, and remove the air switching valve [D].


#### NOTICE

**Never drop the air switching valve, especially on a hard surface. Such a shock to the valve can damage it.**

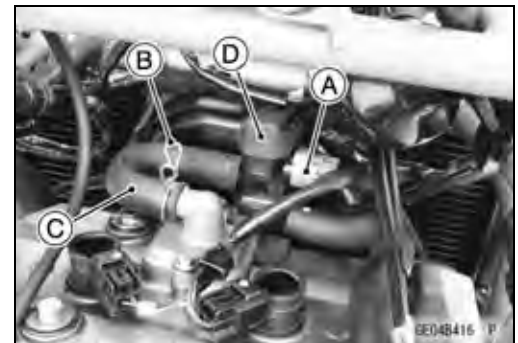

### Air Switching Valve Installation

- Install the air switching valve [A] with hoses [B] as shown. White Paint Marks [C]
- Connect the air switching valve lead connector.

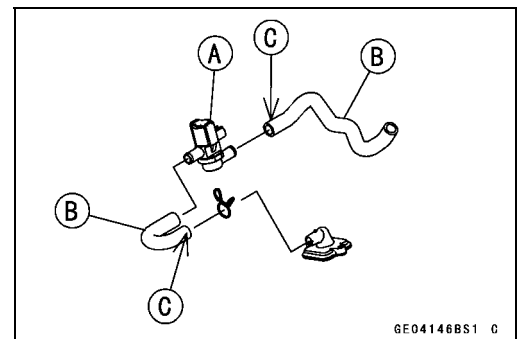

### Air Switching Valve Operation Test

- Refer to the Air Suction System Damage Inspection in the Periodic Maintenance chapter.

### Air Switching Valve Unit Test

- Refer to the Air Switching Valve Unit Test in the Electrical System chapter.

## 5-14 ENGINE TOP END

---

### Clean Air System

---

#### ***Clean Air System Hose Inspection***


- Be certain that all the hoses are routed without being flattened or kinked, and are connected correctly to the air cleaner housing, air switching valve and air suction valve cover.
- ★ If they are not, correct them. Replace them if they are damaged.



## Cylinder Head Cover


### Cylinder Head Cover Removal

- Remove:
  - Fuel Tank (see Fuel Tank Removal in the Fuel System (DFI) chapter)
  - Air Cleaner Housing (see Air Cleaner Housing Removal in the Fuel System (DFI) chapter)
  - Air Switching Valve (see Air Switching Valve Removal)
  - Stick Coils (see Stick Coil Removal in the Electrical System chapter)
  - Throttle Body Assy (see Throttle Body Assy Removal in the Fuel System (DFI) chapter)
- Remove the cylinder head cover bolts [A] and washers.
- Remove the cylinder head cover [B] backward.

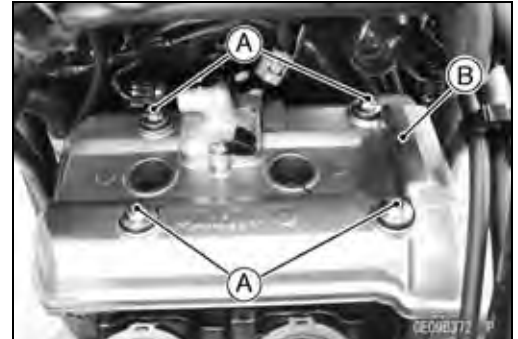

### Cylinder Head Cover Installation

- Replace the plug hole gaskets [A] with new ones.
- Install:
  - Dowel Pins [B]
  - Plug Hole Gaskets

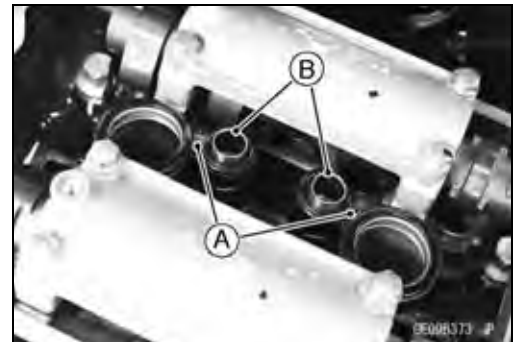


- Replace the head cover gasket with a new one.
- Using a high flash-point solvent, clean off any oil or dirt that may be on the liquid gasket coating area. Dry them with a clean cloth.
- Apply liquid gasket [A] to the cylinder head as shown.

**Sealant - Liquid Gasket, TB1216B: 92104-1064**

#### NOTE

○ *Make the application finish within 20 minutes with the liquid gasket (TB1216B) to the mating surface of the cylinder head cover is applied.*


- Install:
  - Head Cover Gasket
  - Cylinder Head Cover

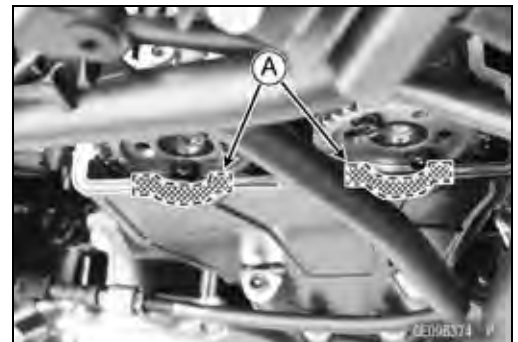

## 5-16 ENGINE TOP END

### Cylinder Head Cover

- Replace the washers [A] with new ones.
- Install the washers with metal side faces upward.
- Tighten:  
**Torque - Cylinder Head Cover Bolts: 9.8 N·m (1.0 kgf·m, 87 in·lb)**
- Install the removed parts (see appropriate chapters).

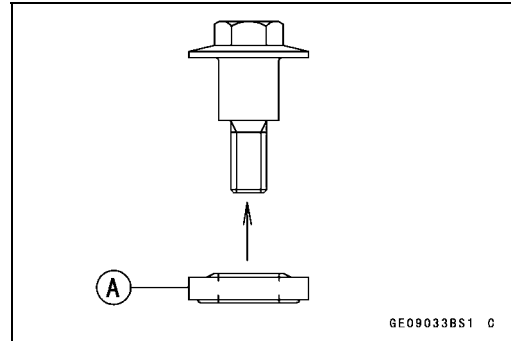

## Camshaft Chain Tensioner

### Camshaft Chain Tensioner Removal

#### NOTICE


This is a non-return type camshaft chain tensioner. The push rod does not return to its original position once it moves out to take up camshaft chain slack. Observe all the rules listed below:

Observe all the rules listed below:

When removing the tensioner, do not take out the mounting bolts only halfway. Retightening the mounting bolts from this position could damage the tensioner and the camshaft chain. Once the bolts are loosened, the tensioner must be removed and reset as described in "Camshaft Chain Tensioner Installation."

Do not turn over the crankshaft while the tensioner is removed. This could upset the camshaft chain timing, and damage the valves.

- Remove:
  - Camshaft Chain Tensioner Cap Bolt [A]
  - Washer
  - Spring
  - Camshaft Chain Tensioner Mounting Bolts [B]
  - Camshaft Chain Tensioner Body [C]

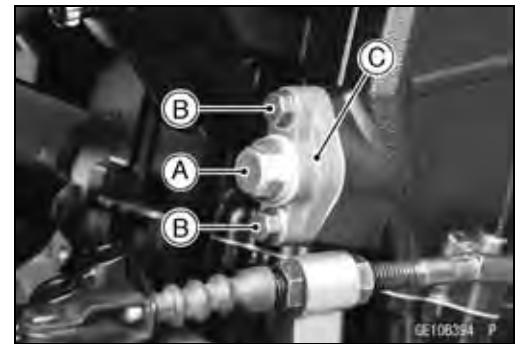


### Camshaft Chain Tensioner Installation

- Replace the O-ring [A] with a new one.
- Apply grease to the new O-ring.
- Release the stopper [B] and push the push rod [C] into the tensioner body [D].



- Install the tensioner body so that the stopper [A] faces upward.
- Apply a non-permanent locking agent to the camshaft chain tensioner mounting bolts, and tighten them.

**Torque - Camshaft Chain Tensioner Mounting Bolts: 9.8 N·m (1.0 kgf·m, 87 in·lb)**

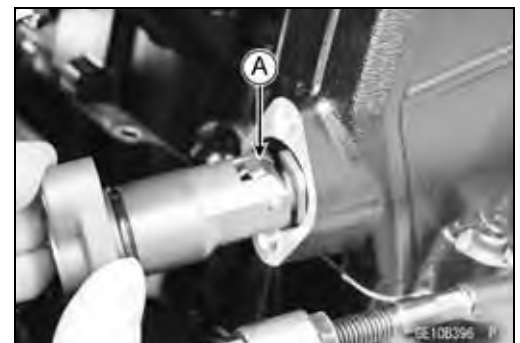


## 5-18 ENGINE TOP END

### Camshaft Chain Tensioner

---

- Install:
  - Spring [A]
  - Washer [B]
- Tighten:
  - Torque - Camshaft Chain Tensioner Cap Bolt [C]: 20 N·m (2.0 kgf·m, 15 ft·lb)**
- Turn the crankshaft 2 turns clockwise to allow the tensioner to expand and recheck the camshaft chain timing.

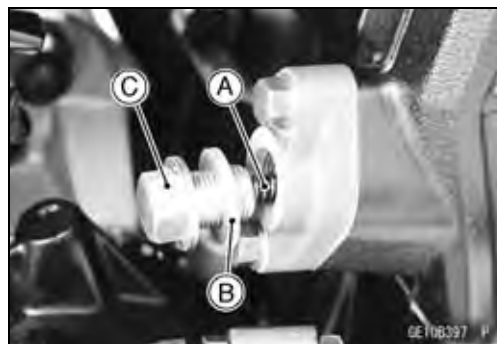


## Camshaft, Camshaft Chain

### Camshaft Removal


#### ● Remove:

- Cylinder Head Cover (see Cylinder Head Cover Removal)
- Timing Inspection Cap [A]
- Timing Rotor Bolt Cap [B]

**Special Tool - Filler Cap Driver: 57001-1454**

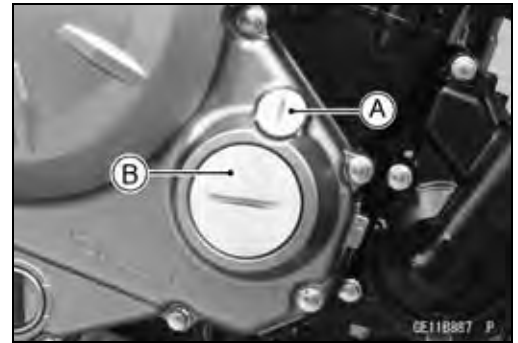


- Using a wrench on the timing rotor bolt, turn the crankshaft clockwise until the 2/T mark line [A] on the timing rotor is aligned with the notch [B] in the edge of the timing inspection hole [C] in the clutch cover as shown.

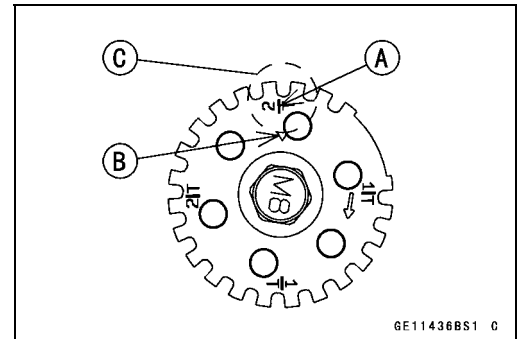

- ★ If the clutch cover is removed, perform the next procedure.


- Using a wrench on the timing rotor bolt, turn the crankshaft clockwise until the 1/T mark line [A] on the timing rotor is aligned with the mating surface [B] of the crankcase front side.

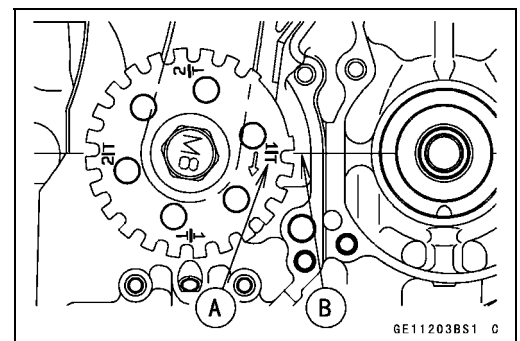

# 5-20 ENGINE TOP END

## Camshaft, Camshaft Chain


- Remove the camshaft chain tensioner (see Camshaft Chain Tensioner Removal).
- Loosen the camshaft cap bolts gradually and evenly as shown sequence [1 ~ 12], and remove them.
- Remove:
  - Camshaft Caps [A]
  - Camshafts [B]

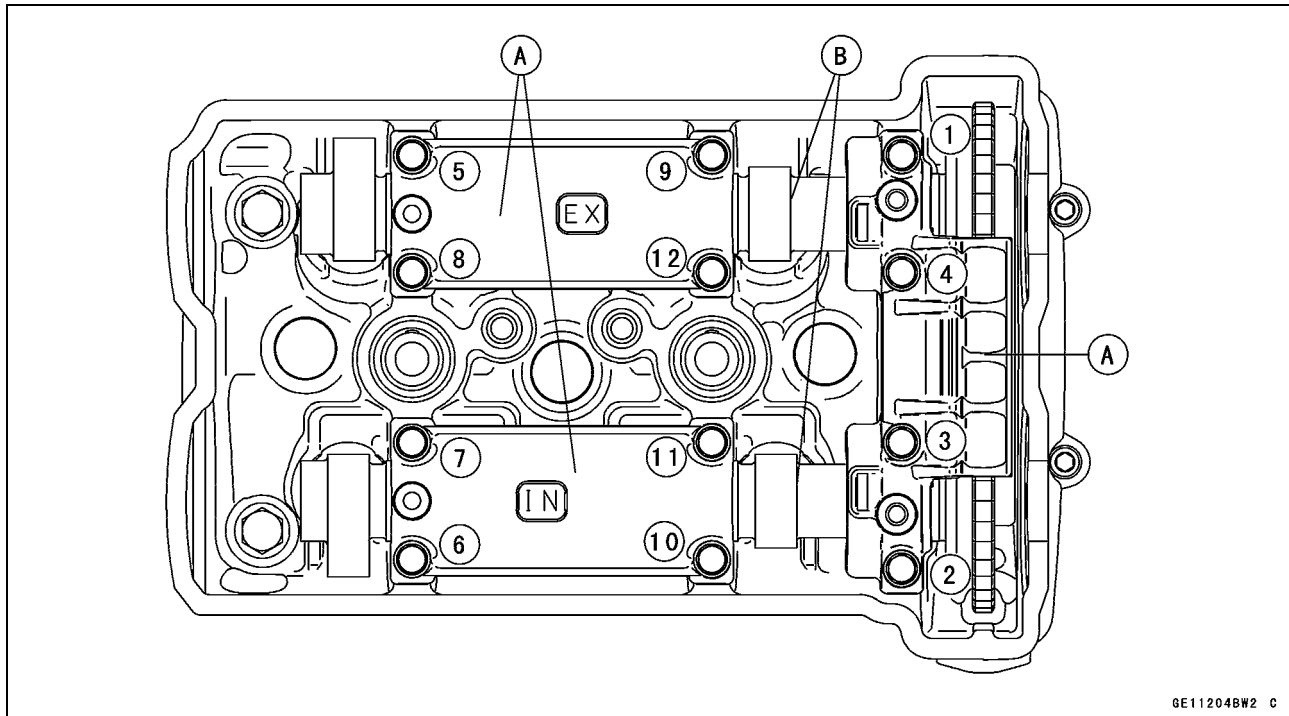

### NOTICE

The crankshaft may be turned while the camshafts are removed. Always pull the chain taut while turning the crankshaft. This avoids kinking the chain on the lower (crankshaft) sprocket. A kinked chain could damage both the chain and the sprocket.


- Stuff a clean cloth into the chain tunnel to keep any parts from dropping into the crankcase.
- Remove the camshaft sprocket bolts [A].
- Remove the camshaft sprocket.

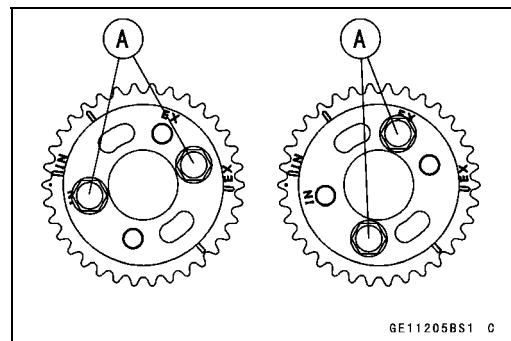

Camshaft, Camshaft Chain

**Camshaft Installation**


- Be sure to install the following parts.
  - Plug Hole Gaskets [A]
  - Dowel Pins [B]

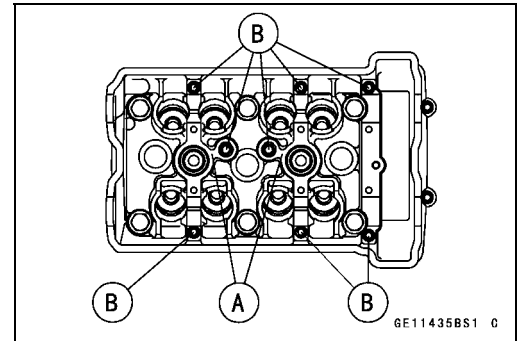

- Install the camshaft sprockets so that the marked (“IN” and “EX”) side faces to the outward.
- The intake [A] and exhaust [B] camshaft sprockets are identical.

**NOTICE**


**Intake camshaft sprocket must use “IN” marked bolt holes [C]. Exhaust camshaft sprocket must use “EX” marked bolt holes [D].**

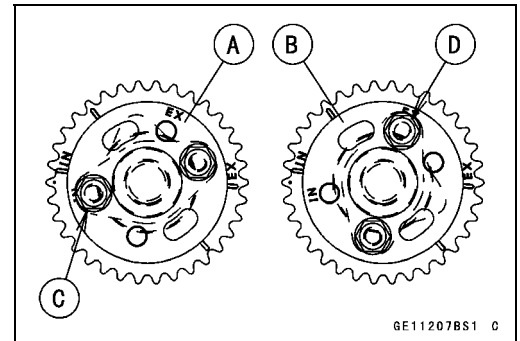

- Apply a non-permanent locking agent to the camshaft sprocket bolts and tighten them.
  - Torque - Camshaft Sprocket Bolts: 15 N·m (1.5 kgf·m, 11 ft·lb)**
- Apply molybdenum disulfide oil solution to all cams [A], journals [B] and thrust blocks [C] with x marks.
- ★ If a new camshaft is to be used, apply a thin coat of molybdenum disulfide grease to the cam surfaces.

**NOTE**

- The exhaust camshaft has a 3478 EX mark [D] and the intake camshaft has a 3478 IN mark [E]. Be careful not to mix up these shafts.

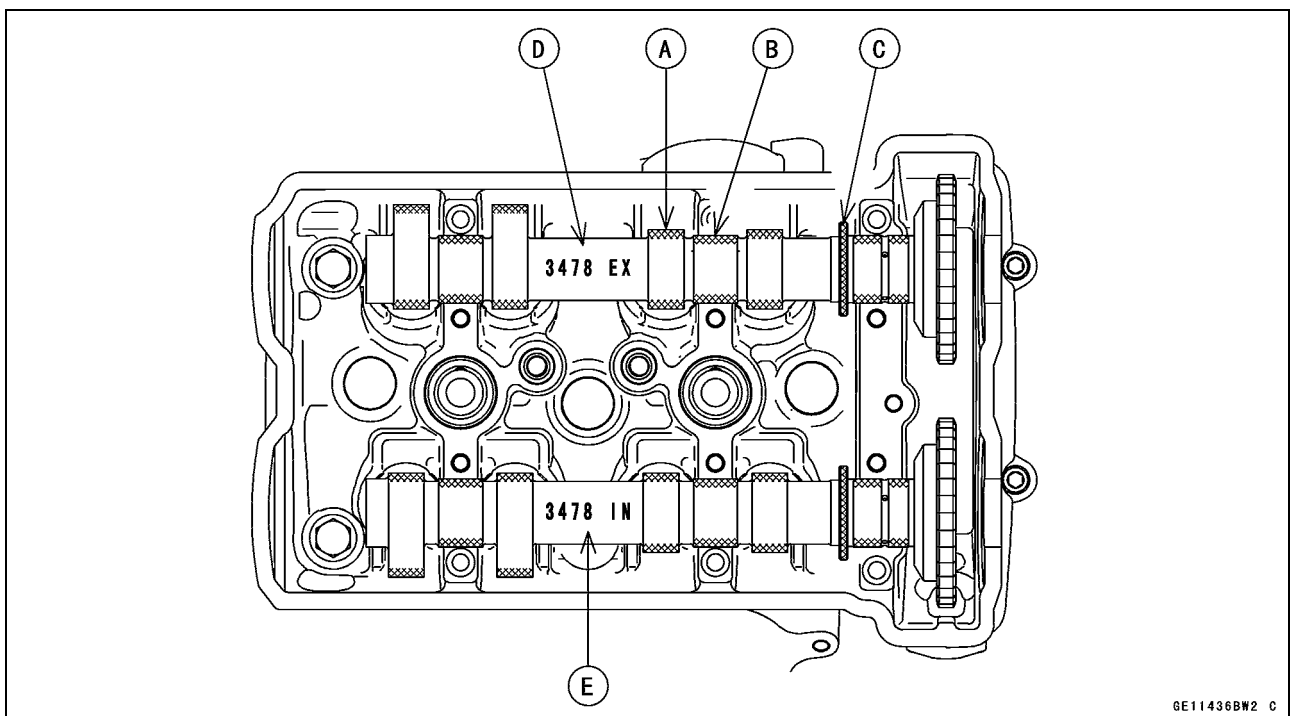

## 5-22 ENGINE TOP END



### Camshaft, Camshaft Chain

- Using a wrench on the timing rotor bolt, turn the crankshaft clockwise until the 2/T mark line [A] on the timing rotor is aligned with the notch [B] in the edge of the timing inspection hole [C] in the clutch cover.


#### NOTICE

The crankshaft may be turned while the camshafts are removed. Always pull the chain taut while turning the crankshaft. This avoids kinking the chain on the lower (crankshaft) sprocket. A kinked chain could damage both the chain and the sprocket.

- ★ If the clutch cover is removed, perform the next procedure.
- Using a wrench on the bolt, turn the crankshaft clockwise until the 1/T mark line [A] on the timing rotor is aligned with the mating surface [B] of the crankcase front side.

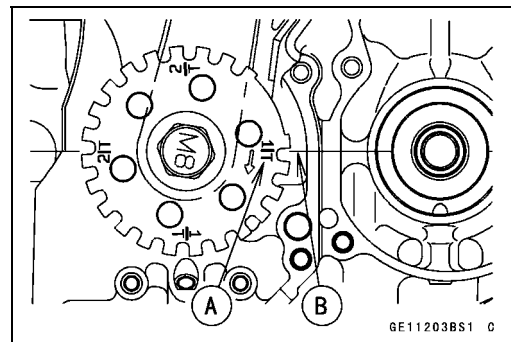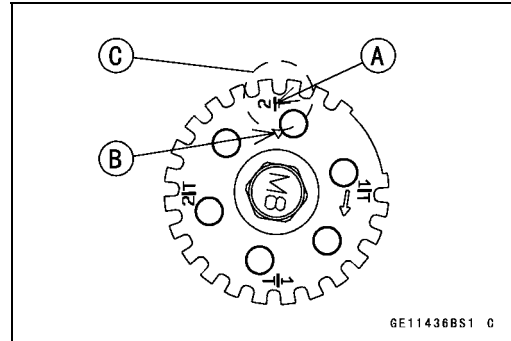

- Pull the tension side (exhaust side) [A] of the chain taut to install the chain.
- Engage the camshaft chain with the camshaft sprockets so that the timing marks on the sprockets are positioned as shown.
- The timing marks must be aligned with the cylinder head upper surface [B].
  - EX Mark [C] (Between #1 Pin and #2 Pin)
  - IN Mark [D] (Between #31 Pin and #32 Pin)
  - #1 Pin [E]
  - #2 Pin [F]
  - #31 Pin [G]
  - #32 Pin [H]

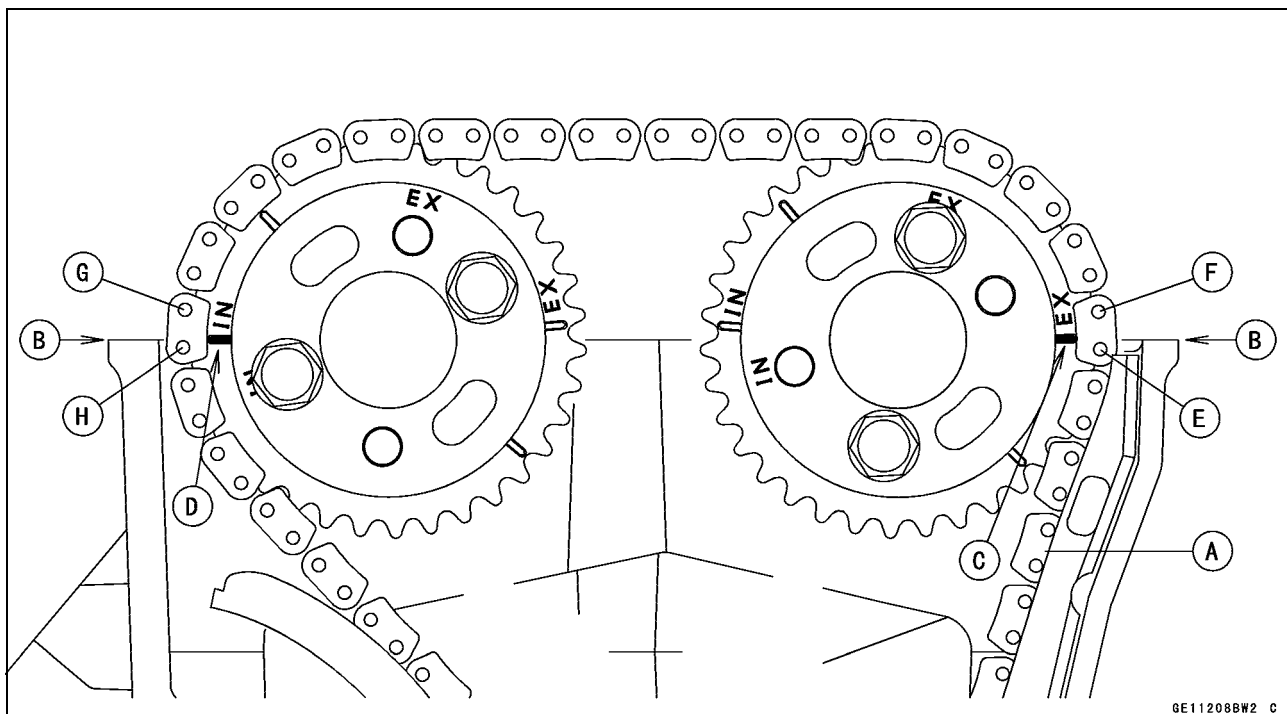



## Camshaft, Camshaft Chain


- Install the camshaft caps as shown.

### NOTE

○ The exhaust cap has a "EX" mark [A] and the intake cap has a "IN" mark [B]. Be careful not to mix up these caps.

- First tighten the all camshaft cap bolts evenly to seat the camshaft in place, then tighten all bolts following the specified tightening sequence [1 ~ 12].

**Torque - Camshaft Cap Bolts: 12 N·m (1.2 kgf·m, 106 in·lb)**

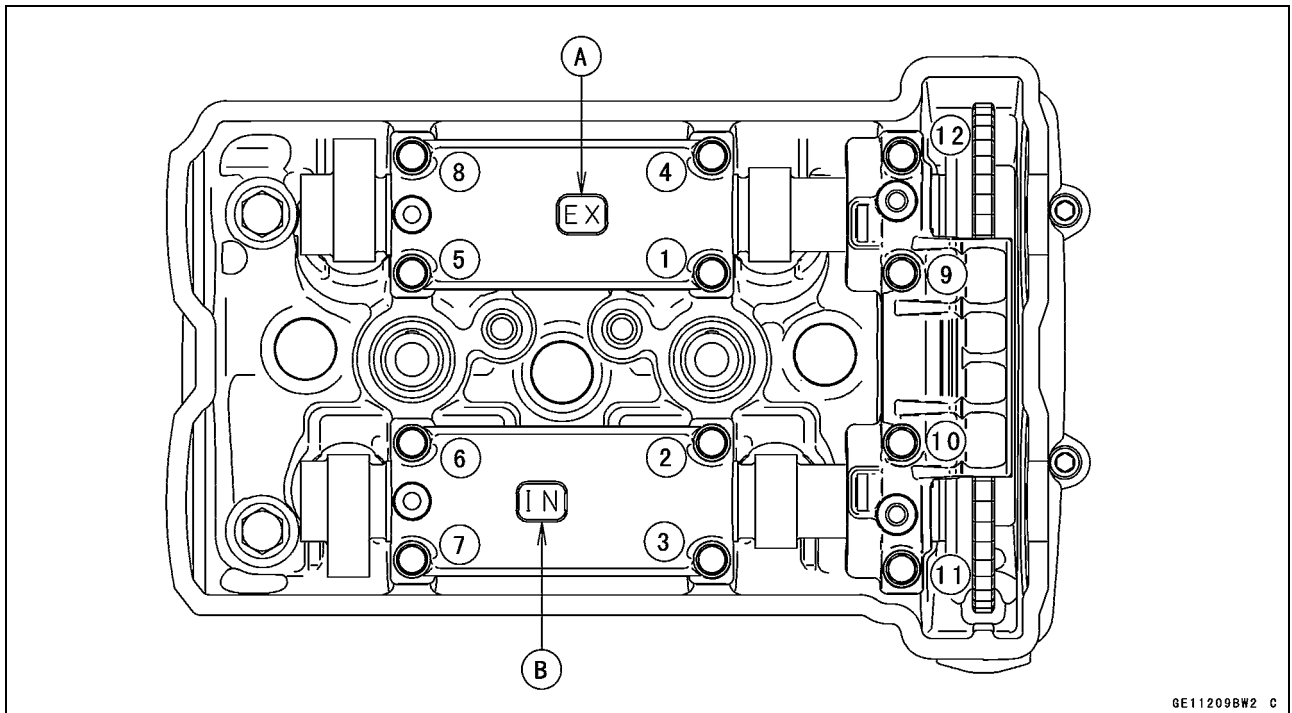

GE11209BW2 C

- Install the camshaft chain tensioner (see Camshaft Chain Tensioner Installation).
- Turn the crankshaft 2 turns clockwise to allow the tensioner to expand and recheck the camshaft chain timing.
- Replace the O-ring of the timing inspection cap and timing rotor bolt cap with new ones.
- Apply grease to the new O-rings.
- Install the timing inspection cap and timing rotor bolt cap.
- Tighten:

**Torque - Timing Inspection Cap: 3.9 N·m (0.40 kgf·m, 35 in·lb)**

**Timing Rotor Bolt Cap: 4.9 N·m (0.50 kgf·m, 43 in·lb)**

**Special Tool - Filler Cap Driver: 57001-1454**

- Install the cylinder head cover (see Cylinder Head Cover Installation).

## 5-24 ENGINE TOP END

### Camshaft, Camshaft Chain

#### **Camshaft, Camshaft Cap Wear Inspection**

- Remove the camshaft caps (see Camshaft Removal).
- Cut the strips of plastigage (press gauge) to journal width. Place a strip on each journal parallel to the camshaft installed in the correct position.
- Tighten the camshaft cap bolts to the specified torque (see Camshaft Installation).

#### **NOTE**

○ Do not turn the camshaft when the plastigage is between the journal and camshaft cap.

- Remove the camshaft cap again, measure each clearance between the camshaft journal and the camshaft cap using plastigage [A].

#### **Camshaft Journal/Cap Clearance**

**Standard:** 0.028 ~ 0.071 mm (0.0011 ~ 0.0028 in.)

**Service Limit:** 0.16 mm (0.0063 in.)

- ★ If any clearance exceeds the service limit, measure the diameter of each camshaft journal with a micrometer.

#### **Camshaft Journal Diameter**

**Standard:** 23.950 ~ 23.972 mm (0.94291 ~ 0.94378 in.)

**Service Limit:** 23.92 mm (0.9417 in.)

- ★ If the camshaft journal diameter is less than the service limit, replace the camshaft with a new one and measure the clearance again.
- ★ If the clearance still remains out of the limit, replace the cylinder head unit.



#### **Camshaft Runout Inspection**

- Remove the camshaft (see Camshaft Removal).
- Set the camshaft in a camshaft alignment jig or on V blocks.
- Measure runout with a dial gauge at the specified place as shown.
- ★ If the runout exceeds the service limit, replace the shaft.

#### **Camshaft Runout**

**Standard:** TIR 0.02 mm (0.0008 in.) or less

**Service Limit:** TIR 0.1 mm (0.004 in.)

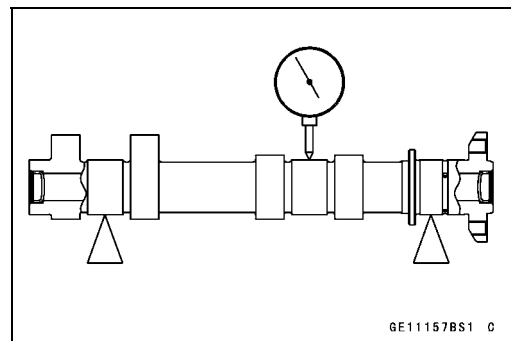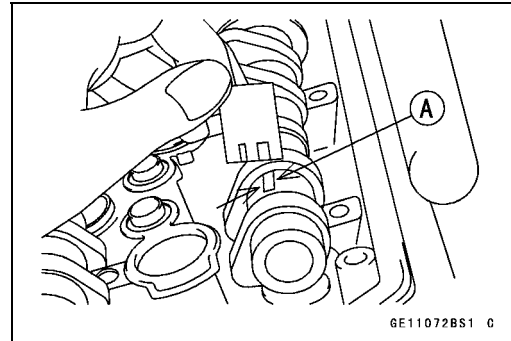

## Camshaft, Camshaft Chain

### Cam Wear Inspection

- Remove the camshaft (see Camshaft Removal).
- Measure the height [A] of each cam with a micrometer.
- ★ If the cams are worn down past the service limit, replace the camshaft.

#### Cam Height

##### Standard:


Exhaust 35.343 ~ 35.457 mm (1.3915 ~ 1.3959 in.)

Intake 35.843 ~ 35.957 mm (1.4111 ~ 1.4156 in.)

##### Service Limit:


Exhaust 35.24 mm (1.387 in.)

Intake 35.74 mm (1.407 in.)

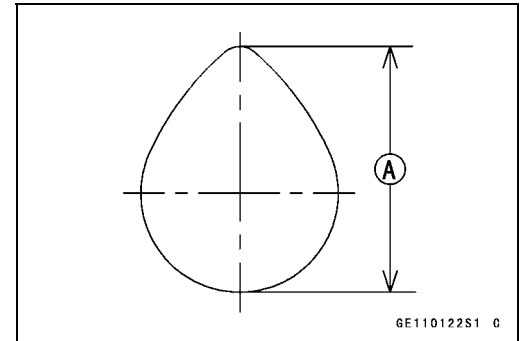

### Camshaft Chain Removal

- Split the crankcase (see Crankcase Splitting in the Crankshaft/Transmission chapter).
- Remove the camshaft chain [A] from the crankshaft sprocket.

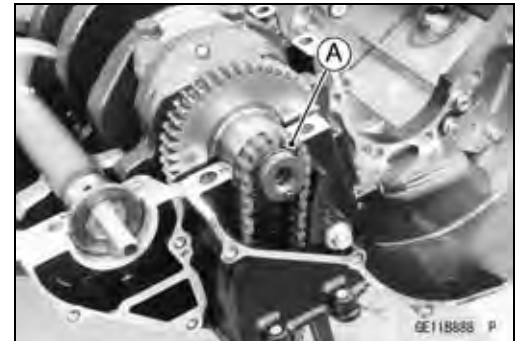

## 5-26 ENGINE TOP END

### Cylinder Head

#### Cylinder Compression Measurement

##### NOTE

○ Use the battery which is fully charged.

- Warm up the engine thoroughly.
- Stop the engine.
- Remove:
  - Fuel Tank (see Fuel Tank Removal in the Fuel System (DFI) chapter)
  - Air Cleaner Housing (see Air Cleaner Housing Removal in the Fuel System (DFI) chapter)
  - Stick Coils (see Stick Coil Removal in the Electrical System chapter)
  - Spark Plugs (see Spark Plug Replacement in the Periodic Maintenance chapter)
- Attach the compression gauge [A] and adapter [B] firmly into the spark plug hole.
- Using the starter motor, turn the engine over with the throttle fully open until the compression gauge stops rising; the compression is the highest reading obtainable.


**Special Tools - Compression Gauge, 20 kgf/cm<sup>2</sup>: 57001-221**  
**Compression Gauge Adapter, M10 × 1.0: 57001-1317**

##### Cylinder Compression

**Usable Range: 1 120 ~ 1 698 kPa (11.42 ~ 17.32 kgf/cm<sup>2</sup>, 162.4 ~ 246.2 psi) @400 r/min (rpm)**

- Repeat the measurement for the other cylinders.
- Install the spark plugs (see Spark Plug Replacement in the Periodic Maintenance chapter).

○ The following table should be consulted if the obtainable compression reading is not within the usable range.

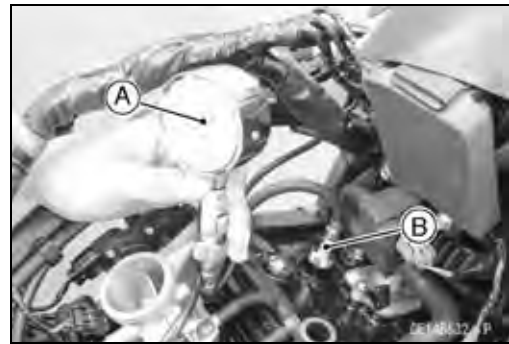


Problem	Diagnosis	Remedy (Action)
Cylinder compression is higher than usable range	Carbon accumulation on piston and in combustion chamber possibly due to damaged valve stem oil seal and/or damaged piston oil rings (This may be indicated by white exhaust smoke).	Remove the carbon deposits and replace damaged parts if necessary.
	Incorrect cylinder head gasket thickness	Replace the gasket with a standard part.
Cylinder compression is lower than usable range	Gas leakage around cylinder head	Replace damaged gasket and check cylinder head warp.
	Bad condition of valve seating	Repair if necessary.
	Incorrect valve clearance	Adjust the valve clearance.
	Incorrect piston/cylinder clearance	Replace the piston and/or cylinder.
	Piston seizure	Inspect the cylinder and replace/repair the cylinder and/or piston as necessary.
	Bad condition of piston ring and/or piston ring grooves	Replace the piston and/or the piston rings.

## Cylinder Head

### **Cylinder Head Removal**

- Drain the coolant (see Coolant Change in the Periodic Maintenance chapter).
- Remove:
  - Muffler (see Muffler Removal)
  - Cylinder Head Cover (see Cylinder Head Cover Removal)
  - Camshafts (see Camshaft Removal)
  - Throttle Body Assy Holders (see Throttle Body Assy Holder Removal)
- Slide the clamp [A].
- Disconnect the water hose [B].

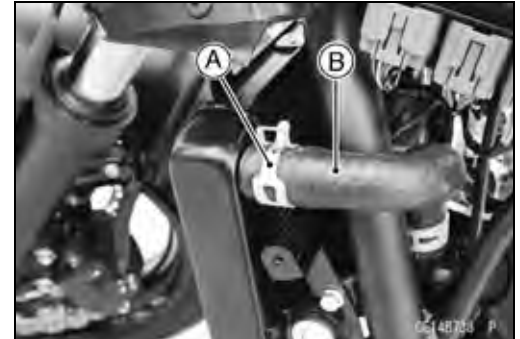

- Disconnect the water temperature sensor connector [A].



- Remove the front camshaft chain guide [A].





- Open the clamp [A].



## 5-28 ENGINE TOP END

### Cylinder Head


- Remove the cylinder head and cylinder bolts, following the specified sequence.
- Firstly remove the cylinder head bolts (M6) [A] and cylinder bolts (M6) [B].
- Secondly, remove the cylinder bolts (M8) [C].
- Thirdly, remove the cylinder nut [D].
- Lastly, remove the cylinder head bolts (M10) [E].
- Remove the cylinder head.

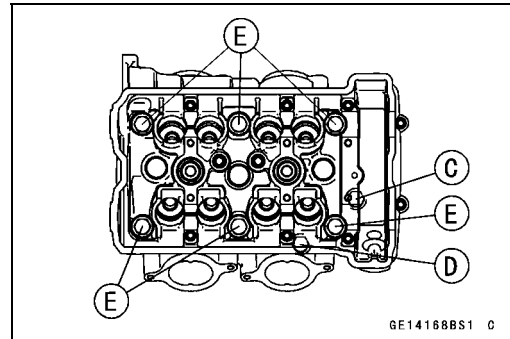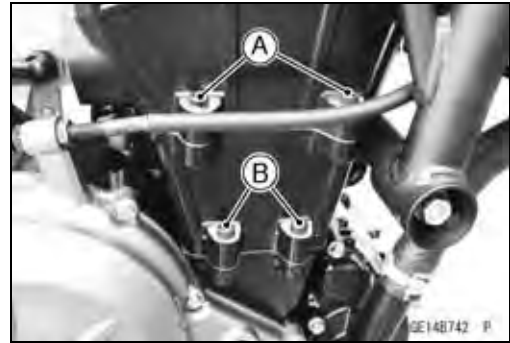

### Cylinder Head Installation

#### NOTE

- *The camshaft cap is machined with the cylinder head. So if a new cylinder head is installed, use the cap that is supplied with the new head.*
- Install a new cylinder head gasket [A] and dowel pins [B].

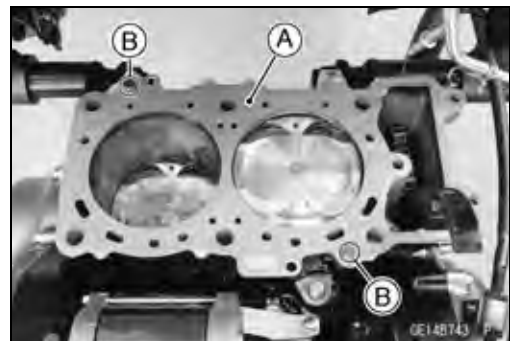

---

**Cylinder Head**

---

This page intentionally left blank.

## 5-30 ENGINE TOP END

### Cylinder Head

- Replace the cylinder head bolts [1 ~ 6] and washers with new ones.
- Apply molybdenum disulfide oil solution [A] to both sides of washers and the threads of bolts and nut.
  - Cylinder Head Bolts (M10) [B]
  - Cylinder Nut [C]
  - Cylinder Bolt (M8) [D]
- Tighten the cylinder head bolts and nut following the tightening sequence [1 ~ 8].
- Tighten:
  - Cylinder Head Bolts (M10) [1, 3, 5] L = 176 mm (6.9 in.)
  - Cylinder Head Bolts (M10) [2, 4] L = 158 mm (6.2 in.)
  - Cylinder Head Bolt (M10) [6] L = 100 mm (3.9 in.)

**Torque - Cylinder Head Bolts (M10): 35 N·m (3.6 kgf·m, 26 ft·lb)**

- Tighten the cylinder head bolts (M10) [1 ~ 6] with the specified angle.


**Angle - Cylinder Head Bolt (M10) [1]: 220°**  
**Cylinder Head Bolts (M10) [2 ~ 4]: 210°**  
**Cylinder Head Bolt (M10) [5]: 240°**  
**Cylinder Head Bolt (M10) [6]: 210°**

- Tighten:

**Torque - Cylinder Nut [7]: 49 N·m (5.0 kgf·m, 36 ft·lb)**  
**Cylinder Bolt (M8) [8]: 27.5 N·m (2.80 kgf·m, 20.3 ft·lb)**


#### NOTE

- *The tightening sequence No.1 ~ No.5 are the cylinder head bolts that are tightened between the cylinder head and the crankcase.*
  - *The No.6 is the cylinder head bolt that is tightened between the cylinder head and the cylinder.*
  - *The No.7 and No.8 are the cylinder nut and cylinder bolt that are tightened between the cylinder and the crankcase.*
- Using a torque angle [E], tighten the bolts specified angle.

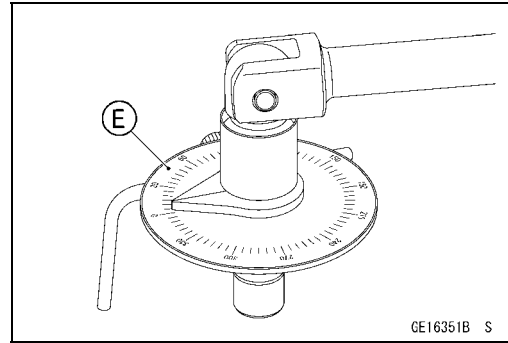




## Cylinder Head

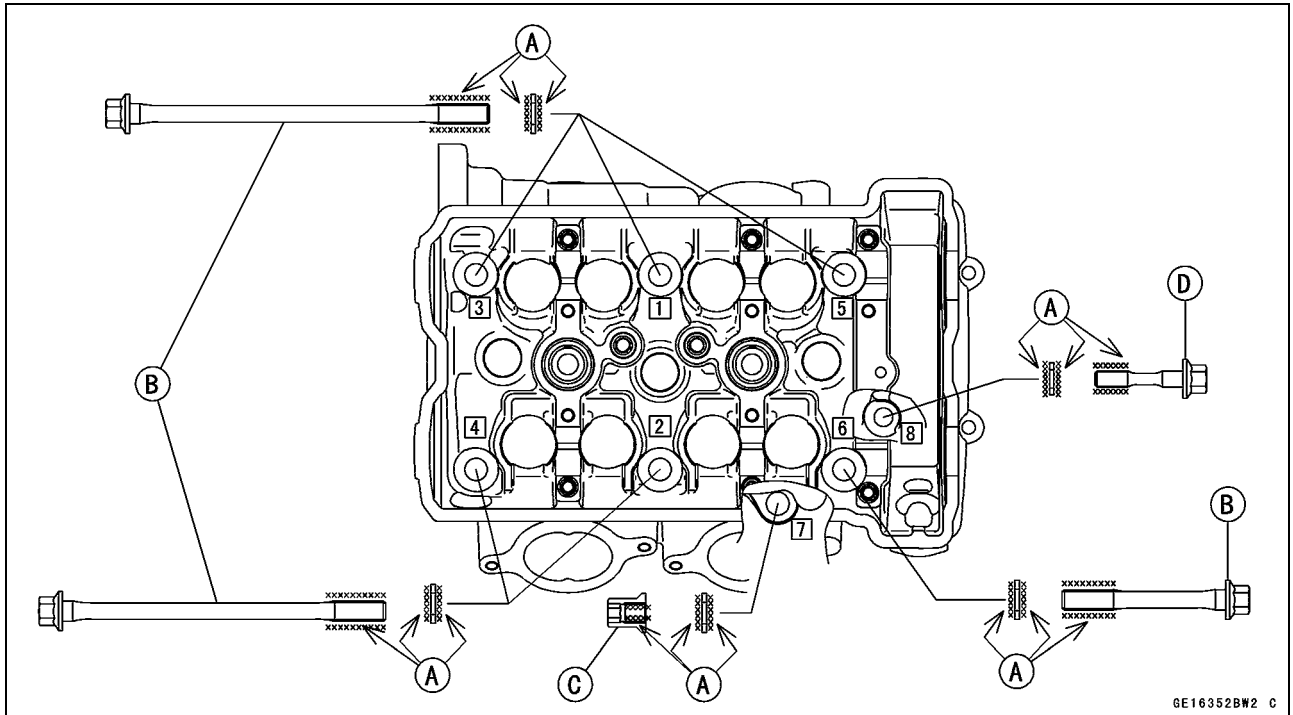


GE16352BW2 C

- Apply a non-permanent locking agent to the threads of cylinder head bolts (M6) [A] and cylinder bolts (M6) [B].
- Tighten:
  - Torque - Cylinder Head Bolts (M6): 12 N·m (1.2 kgf-m, 106 in-lb)**
  - Cylinder Bolts (M6): 12 N·m (1.2 kgf-m, 106 in-lb)**

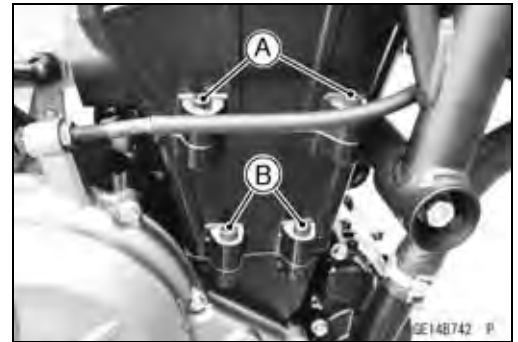

GE148742 F

- Install the front camshaft chain guide [A].
- Insert the end [B] of front camshaft chain guide into the hollow on the lower crankcase half.
- Install the removed parts (see appropriate chapters).

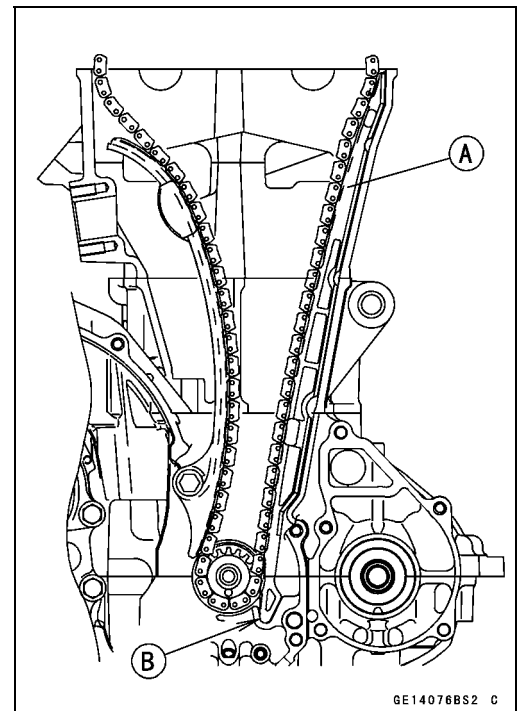

GE14076BS2 C

## 5-32 ENGINE TOP END

### Cylinder Head

#### *Cylinder Head Warp Inspection*


- Clean the cylinder head.
- Lay a straightedge across the lower surface of the cylinder head at several positions.
- Use a thickness gauge [A] to measure the space between the straightedge [B] and the head.

#### **Cylinder Head Warp**

**Standard:** ---

**Service Limit: 0.05 mm (0.002 in.)**

- ★ If the cylinder head is warped more than the service limit, replace it.
- ★ If the cylinder head is warped less than the service limit, repair the head by rubbing the lower surface on emery paper secured to a surface plate (first No. 200, then No. 400).

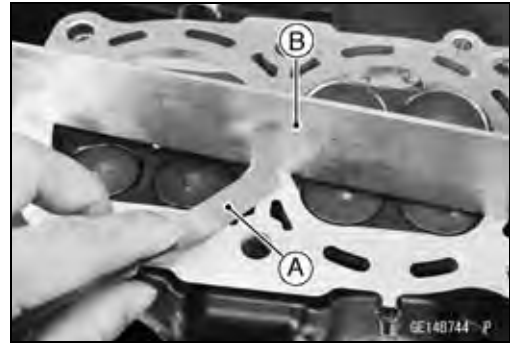

## Valves

### Valve Clearance Inspection

- Refer to the Valve Clearance Inspection in the Periodic Maintenance chapter.

### Valve Clearance Adjustment


- Refer to the Valve Clearance Adjustment in the Periodic Maintenance chapter.

### Valve Removal

- Remove:
  - Cylinder Head (see Cylinder Head Removal)
  - Valve Lifter and Shim
- Mark and record the valve lifter and shim locations so they can be installed in their original positions.
- Using the valve spring compressor assembly, remove the valve.


**Special Tools - Valve Spring Compressor Assembly [A]:**  
57001-241

**Valve Spring Compressor Adapter,  $\phi$ 21 [B]:**  
57001-1272

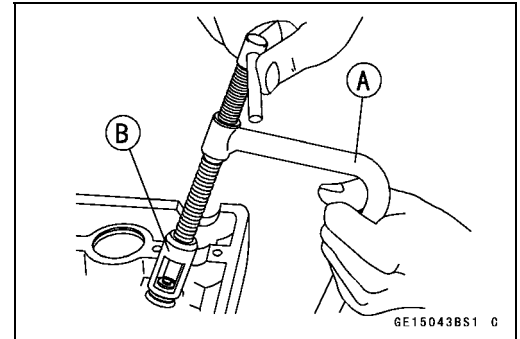

### Valve Installation

- Replace the oil seal with a new one.
- Apply engine oil to the oil seal lip.
- Apply a thin coat of molybdenum disulfide grease to the valve stem before valve installation.
- Install the springs so that the closed coil end faces downwards (the side painted in red faces upwards).
  - Valve Stem [A]
  - Oil Seal [B]
  - Spring Seat [C]
  - Closed Coil End [D]
  - Valve Spring [E]
  - Side Painted in Red [F]
  - Retainer [G]
  - Split Keepers [H]

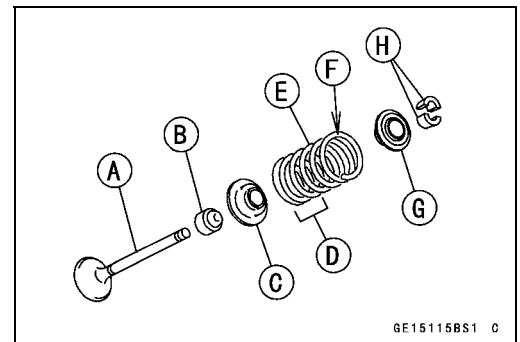


### Valve Guide Removal

- Remove:
  - Valve (see Valve Removal)
  - Oil Seal
  - Spring Seat
- Heat the area around the valve guide to 120 ~ 150°C (248 ~ 302°F), and hammer lightly on the valve guide arbor [A] to remove the guide from the top of the head.

#### NOTICE

**Do not heat the cylinder head with a torch. This will warp the cylinder head. Soak the cylinder head in oil and heat the oil.**

**Special Tool - Valve Guide Arbor,  $\phi$ 4.5: 57001-1331**

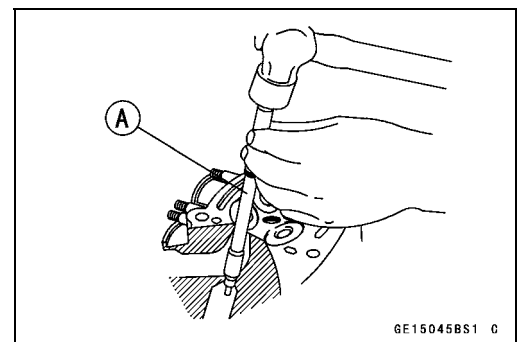

## 5-34 ENGINE TOP END

### Valves

#### Valve Guide Installation

- Replace the snap ring of valve guide with a new one.
- Apply engine oil to the valve guide outer surface before installation.
- Heat the area around the valve guide hole to about 120 ~ 150°C (248 ~ 302°F).
- Drive the valve guide in from the top of the head using the valve guide arbor. The snap ring stops the guide from going in too far.

**Special Tool - Valve Guide Arbor,  $\phi$ 4.5: 57001-1331**



- Wait until the cylinder head cools down and then ream the valve guide with the valve guide reamer [A] even if the old guide is reused.
- Turn the reamer in a clockwise direction until the reamer turns freely in the guide. Never turn the reamer counter-clockwise or it will be dulled.
- Once the guides are reamed they must be cleaned thoroughly.

**Special Tool - Valve Guide Reamer,  $\phi$ 4.5: 57001-1333**

#### Valve-to-Guide Clearance Measurement (Wobble Method)

If a small bore gauge is not available, inspect the valve guide wear by measuring the valve to valve guide clearance with the wobble method as indicated below.

- Insert a new valve [A] into the guide [B] and set a dial gauge against the stem perpendicular to it as close as possible to the cylinder head mating surface.
- Move the stem back and forth [C] to measure valve/valve guide clearance.
- Repeat the measurement in a direction at a right angle to the first.
- ★ If the reading exceeds the service limit, replace the guide.

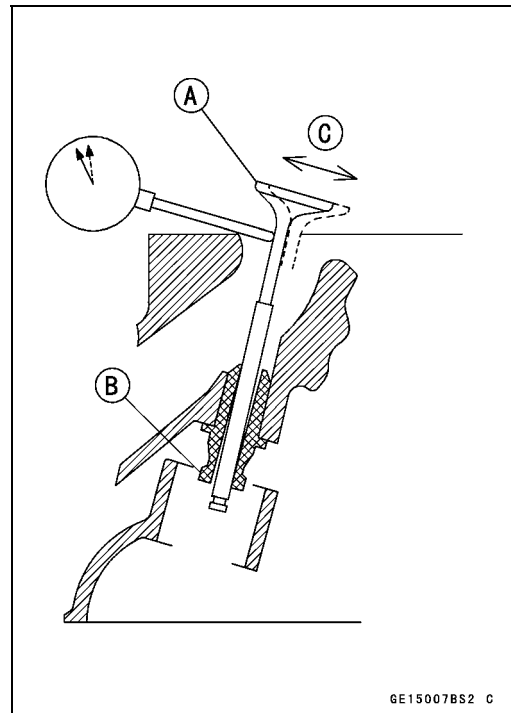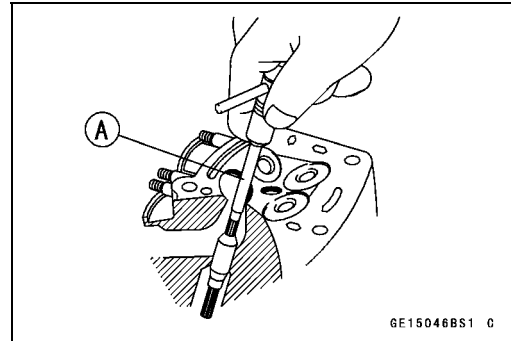

#### NOTE

- The reading is not actual valve/valve guide clearance because the measuring point is above the guide.

#### Valve/Valve Guide Clearance (Wobble Method)

##### Standard:

Exhaust 0.08 ~ 0.16 mm (0.0031 ~ 0.0063 in.)

Intake 0.03 ~ 0.10 mm (0.0012 ~ 0.0039 in.)

##### Service Limit:

Exhaust 0.35 mm (0.014 in.)

Intake 0.29 mm (0.011 in.)

## Valves

### Valve Seat Inspection

- Remove the valve (see Valve Removal).
- Check the valve seating surface [A] between the valve [B] and valve seat [C].
- Measure the outside diameter [D] of the seating pattern on the valve seat.
- ★ If the outside diameter is too large or too small, repair the seat (see Valve Seat Repair).

#### Valve Seating Surface Outside Diameter

##### Standard:

Exhaust      27.6 ~ 27.8 mm (1.087 ~ 1.094 in.)

Intake        32.6 ~ 32.8 mm (1.28 ~ 1.29 in.)

- Measure the seat width [E] of the portion where there is no build-up carbon (white portion) of the valve seat with a vernier caliper.

Good [F]

- ★ If the width is too wide [G], too narrow [H] or uneven [J], repair the seat (see Valve Seat Repair).

#### Valve Seating Surface Width

##### Standard:

Exhaust      0.8 ~ 1.2 mm (0.031 ~ 0.047 in.)

Intake        0.5 ~ 1.0 mm (0.020 ~ 0.039 in.)

### Valve Seat Repair

- Repair the valve seat with the valve seat cutters [A].

Special Tools - Valve Seat Cutter Holder Bar [B]: 57001-1128

Valve Seat Cutter Holder,  $\phi$ 4.5 [C]: 57001-1330

#### For Exhaust Valve Seat

Valve Seat Cutter, 45° -  $\phi$ 30: 57001-1187

Valve Seat Cutter, 32° -  $\phi$ 30: 57001-1120

Valve Seat Cutter, 60° -  $\phi$ 30: 57001-1123


#### For Intake Valve Seat

Valve Seat Cutter, 45° -  $\phi$ 35: 57001-1116


Valve Seat Cutter, 32° -  $\phi$ 35: 57001-1121

Valve Seat Cutter, 55° -  $\phi$ 35: 57001-1247

- ★ If the manufacturer's instructions are not available, use the following procedure.

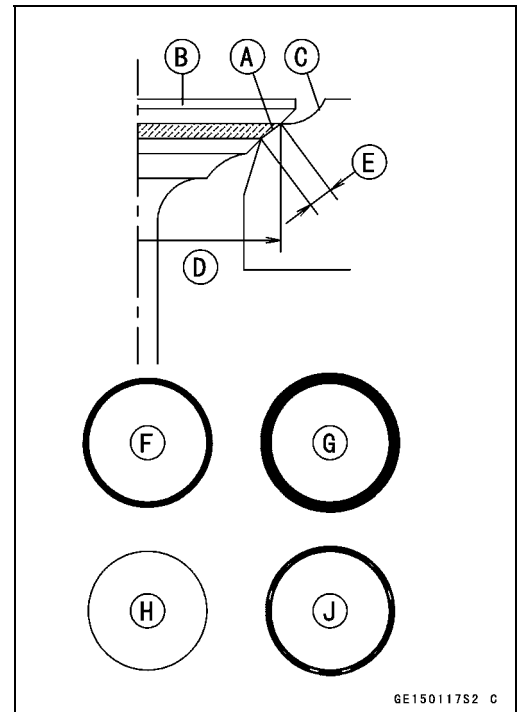

GE150117S2 C

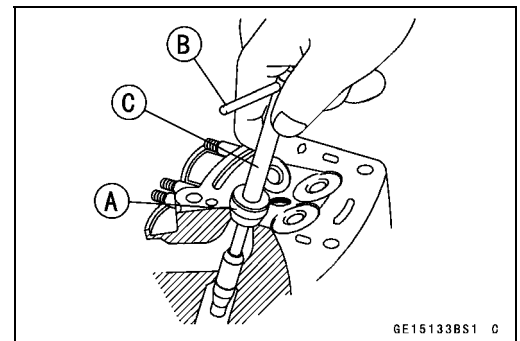

GE151338S1 C

# 5-36 ENGINE TOP END

## Valves

### Seat Cutter Operation Care

1. This valve seat cutter is developed to grind the valve for repair. Therefore the cutter must not be used for other purposes than seat repair.
2. Do not drop or shock the valve seat cutter, or the diamond particles may fall off.
3. Do not fail to apply engine oil to the valve seat cutter before grinding the seat surface. Also wash off ground particles sticking to the cutter with washing oil.

**NOTICE**

**Do not use a wire brush to remove the metal particles from the cutter. It will take off the diamond particles.**

4. Setting the valve seat cutter holder in position, operate the cutter in one hand. Do not apply too much force to the diamond portion.

**NOTE**


○Prior to grinding, apply engine oil to the cutter and during the operation, wash off any ground particles sticking to the cutter with washing oil.

5. After use, wash it with washing oil and apply thin layer of engine oil before storing.

### Marks Stamped on the Cutter

The marks stamped on the back of the cutter [A] represent the following.

- 60° ..... Cutter angle [B]
- φ37.5 ..... Outer diameter of cutter [C]

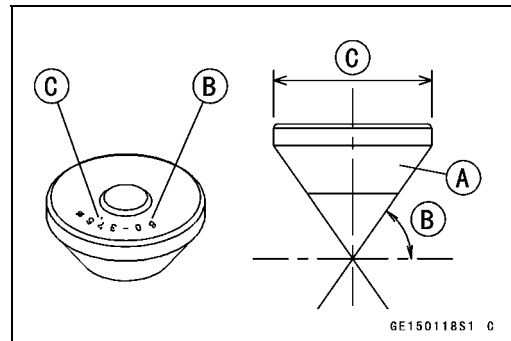

### Operating Procedures

- Clean the seat area carefully.
- Coat the seat with machinist's dye.
- Fit a 45° cutter into the holder and slide it into the valve guide.
- Press down lightly on the handle and turn it right or left. Grind the seating surface only until it is smooth.

**NOTICE**

**Do not grind the seat too much. Overgrinding will reduce valve clearance by sinking the valve into the head. If the valve sinks too far into the head, it will be impossible to adjust the clearance, and the cylinder head must be replaced.**

## Valves

- Measure the outside diameter of the seating surface with a vernier caliper.

★ If the outside diameter of the seating surface is too small, repeat the 45° grind until the diameter is within the specified range.

Widened Width [A] of engagement by machining with 45° cutter


Ground Volume [B] by 32° cutter

32° [C]

Correct Width [D]

Ground Volume [E] by 60° or 55° cutter

60° or 55° [F]

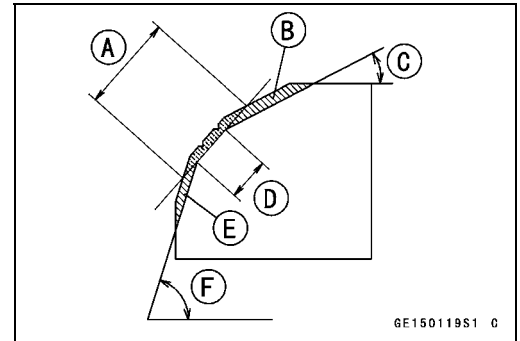


- Measure the outside diameter of the seating surface with a vernier caliper.

★ If the outside diameter of the seating surface is too small, repeat the 45° grind [A] until the diameter is within the specified range.

Original Seating Surface [B]

### NOTE

- Remove all pittings of flaws from 45° ground surface.
- After grinding with 45° cutter, apply thin coat of machinist's dye to seating surface. This makes seating surface distinct and 32° and 60° (or 55°) grinding operation easier.
- When the valve guide is replaced, be sure to grind with 45° cutter for centering and good contact.

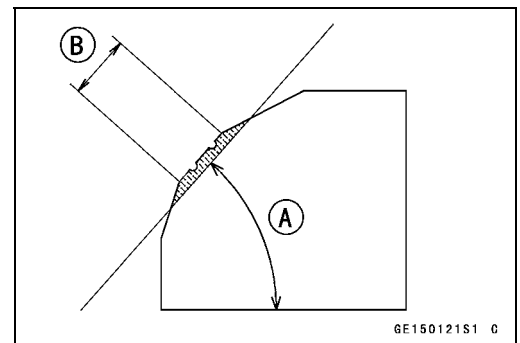


★ If the outside diameter [A] of the seating surface is too large, make the 32° grind described below.

★ If the outside diameter of the seating surface is within the specified range, measure the seat width as described below.

- Grind the seat at a 32° angle [B] until the seat outside diameter is within the specified range.

○ To make the 32° grind, fit a 32° cutter into the holder, and slide it into the valve guide.

○ Turn the holder one turn at a time while pressing down very lightly. Check the seat after each turn.

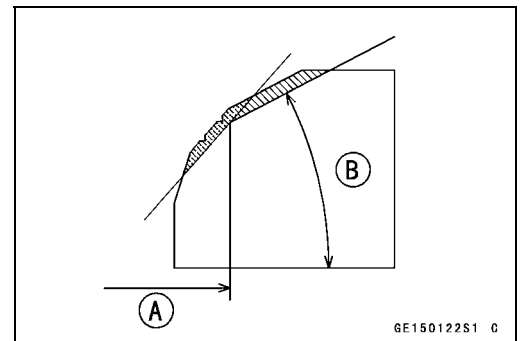

### NOTICE

**The 32° cutter removes material very quickly. Check the seat outside diameter frequently to prevent overgrinding.**

○ After making the 32° grind, return to the seat outside diameter measurement step above.

- To measure the seat width, use a vernier caliper to measure the width of the 45° angle portion of the seat at several places around the seat.

★ If the seat width is too narrow, repeat the 45° grind until the seat is slightly too wide, and then return to the seat outside diameter measurement step above.

## 5-38 ENGINE TOP END

### Valves

- ★ If the seat width is too wide, make the 60° or 55° [A] grind described below.
- ★ If the seat width is within the specified range, lap the valve to the seat as described below.
- Grind the seat at a 60° or 55° angle until the seat width is within the specified range.
- To make the 60° or 55° grind, fit 60° or 55° cutter into the holder, and slide it into the valve guide.
- Turn the holder, while pressing down lightly.
- After making the 60° or 55° grind, return to the seat width measurement step above.

Correct Width [B]



- Lap the valve to the seat, once the seat width and outside diameter are within the ranges specified above.
- Put a little coarse grinding compound on the face of the valve in a number of places around the valve head.
- Spin the valve against the seat until the grinding compound produces a smooth, matched surface on both the seat and the valve.
- Repeat the process with a fine grinding compound.

Lapper [A]

Valve Seat [B]


Valve [C]

- The seating area should be marked about in the middle of the valve face.
- ★ If the seat area is not in the right place on the valve, check to be sure the valve is the correct part. If it is, it may have been refaced too much; replace it.
- Be sure to remove all grinding compound before assembly.
- When the engine is assembled, be sure to adjust the valve clearance (see Valve Clearance Adjustment in the Periodic Maintenance chapter).

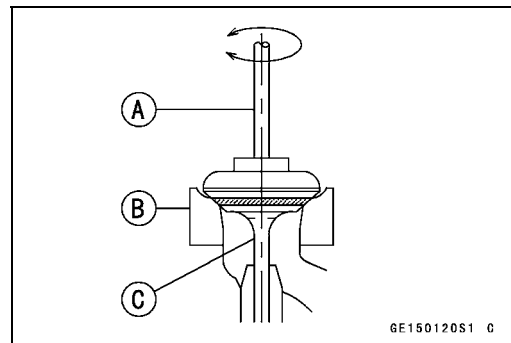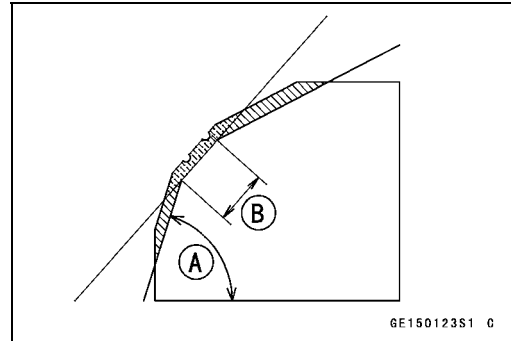



Valves

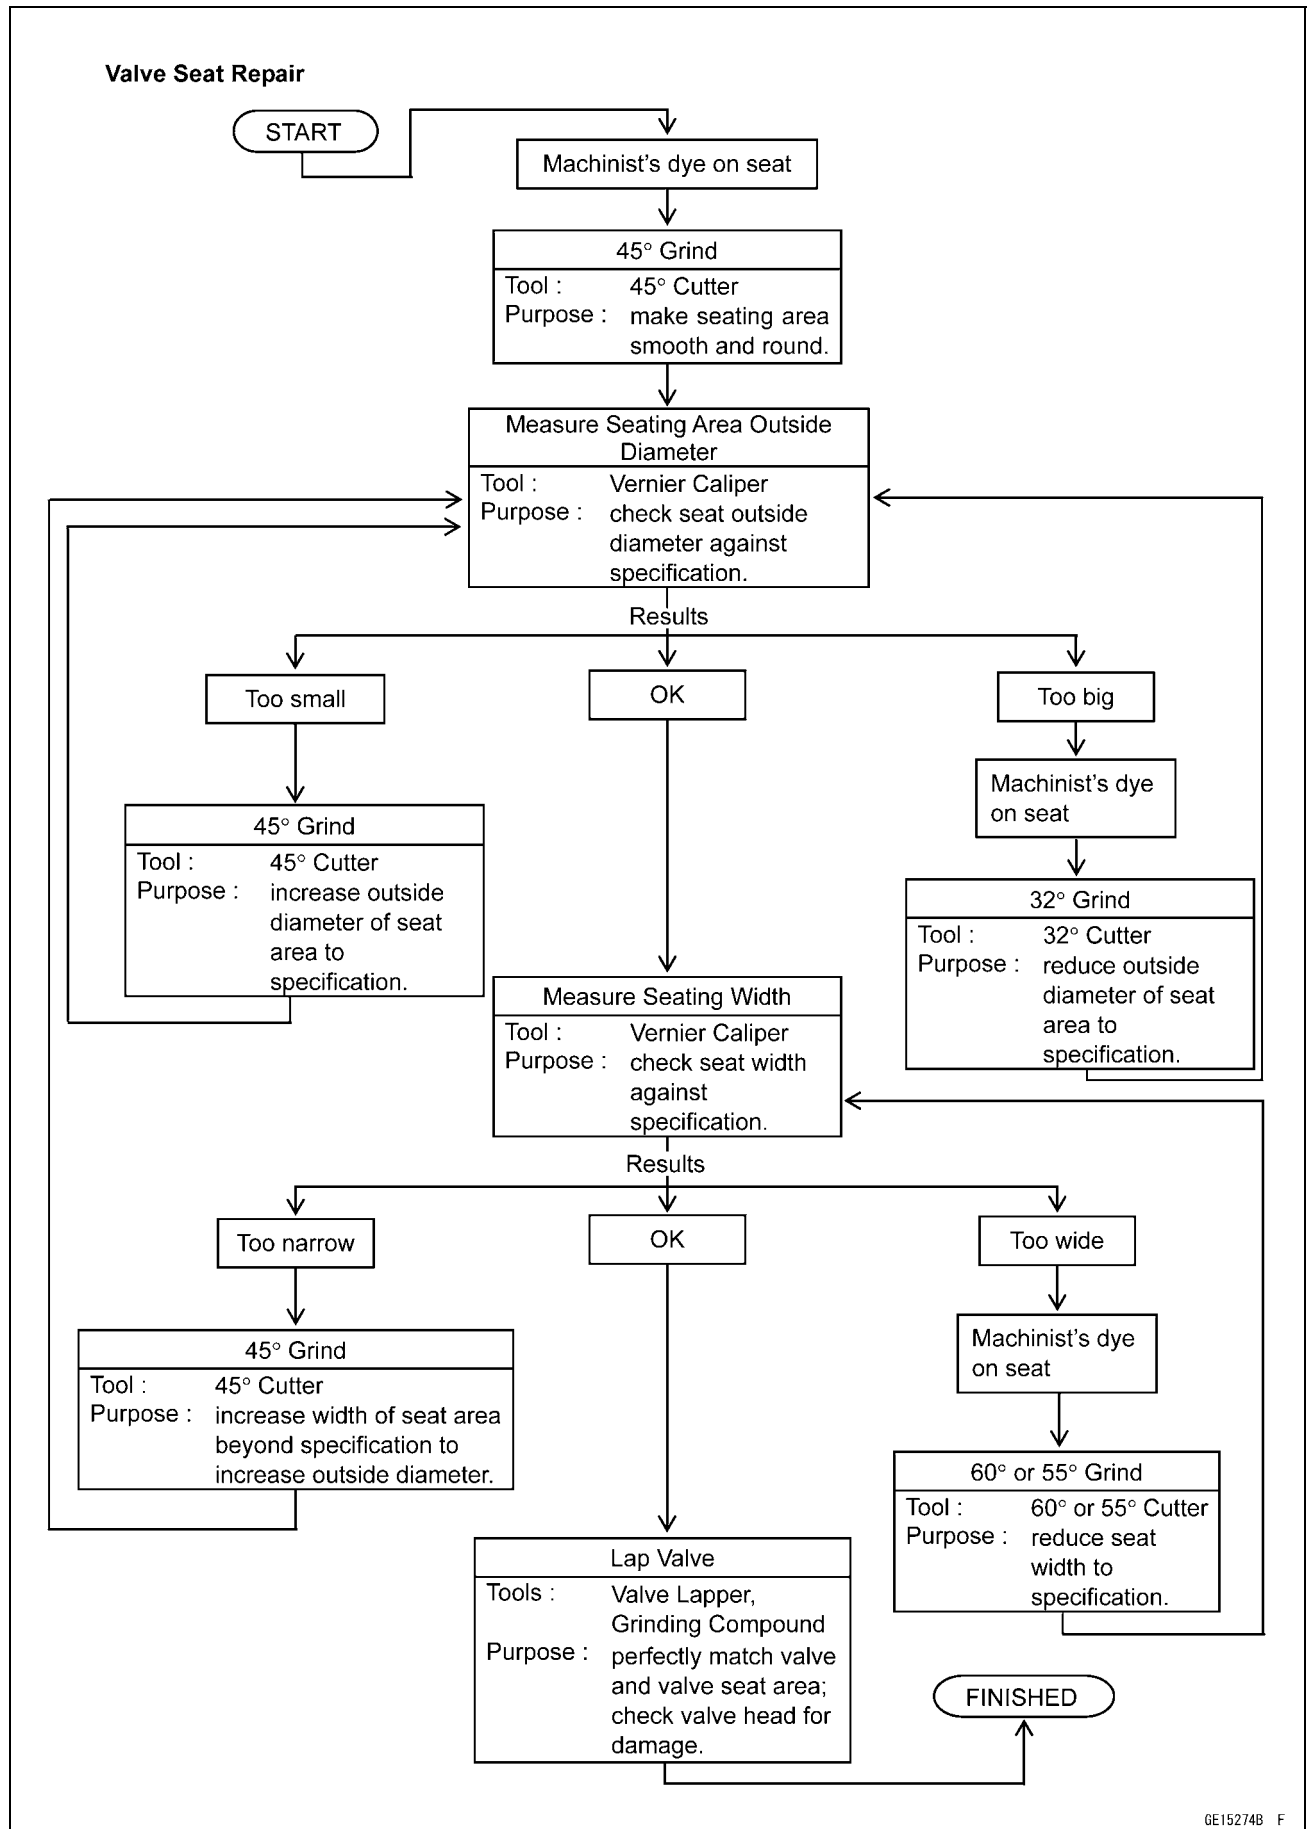


# 5-40 ENGINE TOP END

## Cylinder, Pistons

### Cylinder Removal



- Remove:
  - Cylinder Head (see Cylinder Head Removal)
  - Front Engine Mounting Bolt [A] (Both Sides)
  
- Using the engine mount nut wrench [A], loosen the locknut [B].  
**Special Tool - Engine Mount Nut Wrench: 57001-1450**
  
- Using the hexagon wrench, turn the adjusting collar [A] counterclockwise to make the gap.
- Remove:
  - Collar (Both Sides)
  - Cylinder

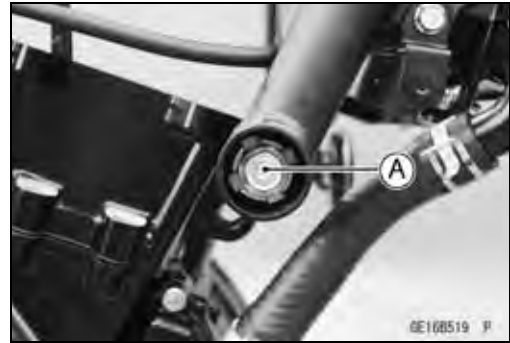

### Cylinder Installation


#### NOTE

- If a new cylinder is used, use new piston ring.
- Replace the cylinder gasket [A] with a new one.
- Install the dowel pins [B] and new cylinder gasket.
  
- The piston ring openings must be positioned as shown. The openings of the oil ring steel rails must be about 30 ~ 40° of angle from the opening of the top ring.
  - Top Ring [A]
  - Second Ring [B]
  - Oil Ring Steel Rails [C]
  - Oil Ring Expander [D]
  - Dent [E]
  - 30 ~ 40° [F]

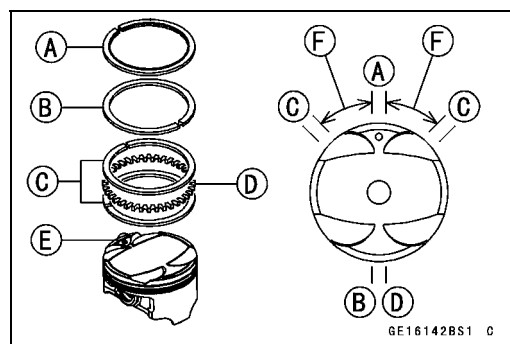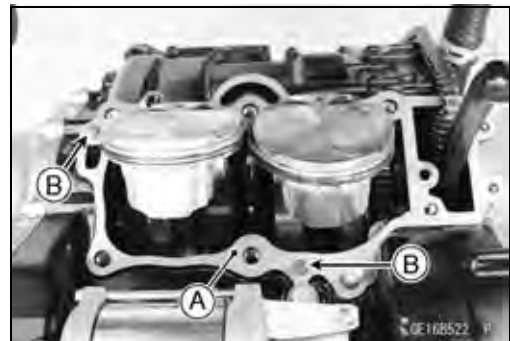

## Cylinder, Pistons

- Apply molybdenum disulfide oil solution to the cylinder bore, piston rings and piston skirt.
- Prepare two auxiliary head bolts with their head cut.
- Install the two bolts [A] diagonally in the crankcase.
- Position the crankshaft so that all the piston heads are almost level.
- Install the cylinder block.
- Insert the piston rings with your thumbs.
- Install the removed parts (see appropriate chapters).

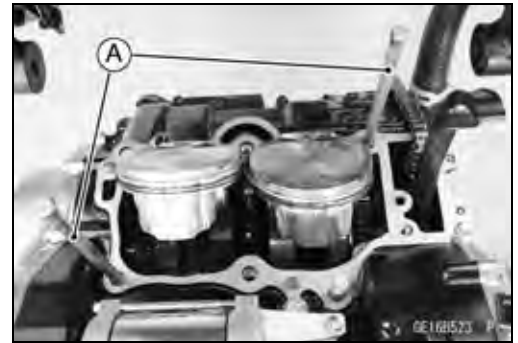

### Piston Removal

- Remove the cylinder (see Cylinder Removal).
- Place a clean cloth under the pistons and remove the piston pin snap ring [A] from the outside of each piston.




- Remove the piston pins with the piston pin puller [A].  
Center Bolt [B]  
Shell of Piston [C]


**Special Tools - Piston Pin Puller: 57001-1568**

**Piston Pin Puller Adapter,  $\phi 12$  [D]: 57001-1657**

- Remove the pistons.

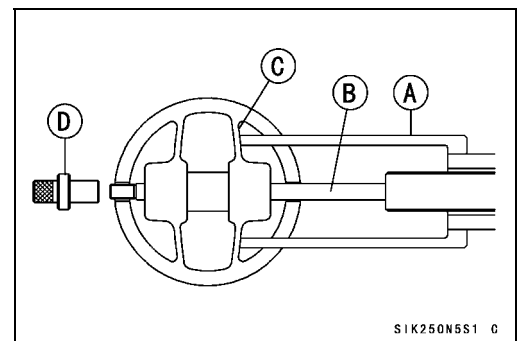

- Carefully spread the ring opening with your thumbs and then push up on the opposite side of the ring [A] to remove it.
- Remove the 3-piece oil ring with your thumbs in the same manner.

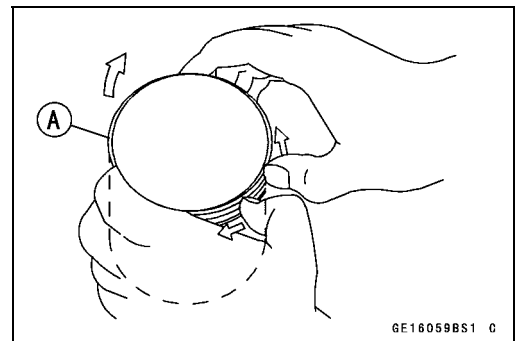


### Piston Installation

#### NOTE

○ If a new piston is used, use new piston ring.

- Apply molybdenum disulfide oil solution to the oil ring expander, install the oil ring expander [A] in the bottom piston ring groove so the ends [B] butt together.
- Apply molybdenum disulfide oil solution to the oil ring steel rails, and install the oil ring steel rails, one above the expander and one below it.
- Spread the rail with your thumbs, but only enough to fit the rail over the piston.
- Release the rail into the bottom piston ring groove.

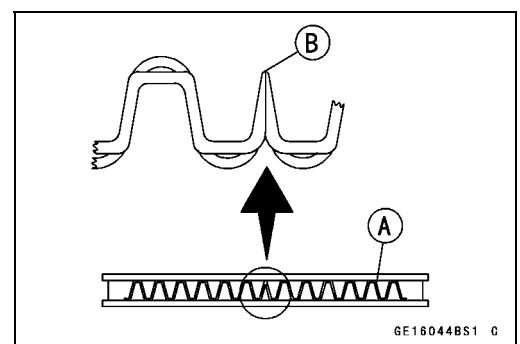


#### NOTE

○ The oil ring rails have no "top" or "bottom."


# 5-42 ENGINE TOP END

## Cylinder, Pistons


- Apply molybdenum disulfide oil solution to the top and second rings.
- Do not mix up the top and second ring.
- Install the top ring [A] so that the “R” mark [B] faces up.
- Install the second ring [C] so that the “RN” mark [D] faces up.

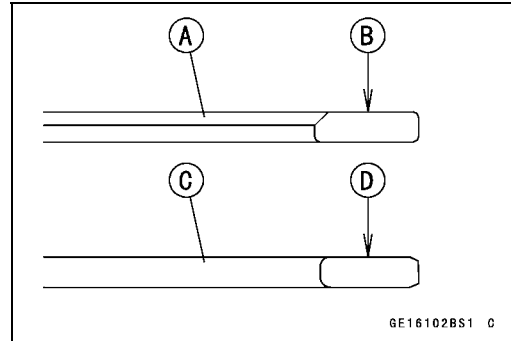

- Install the piston with its dent mark [A] facing forward.

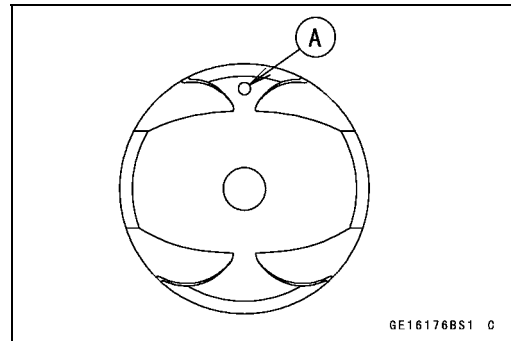

- Apply molybdenum disulfide oil solution to the piston pins and piston journals.
- Fit a new piston pin snap ring into the side of the piston so that the ring opening [A] does not coincide with the slit [B] of the piston pin hole.
- When installing the piston pin snap ring, compress it only enough to install it and no more.

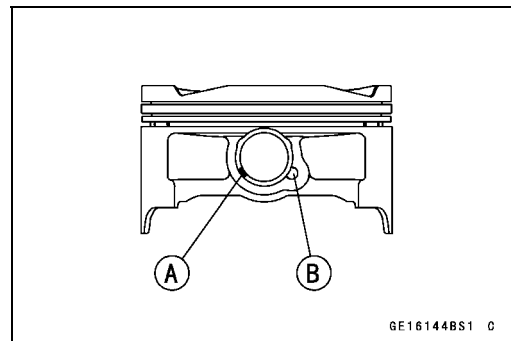


### NOTICE

**Do not reuse snap rings, as removal weakens and deforms them. They could fall out and score the cylinder wall.**

- Install the cylinder (see Cylinder Installation).

### Cylinder Wear Inspection

- Since there is a difference in cylinder wear in different directions, take a side-to-side and a front-to-back measurement at each of the two locations (total of four measurements) shown.
- ★ If any of the cylinder inside diameter measurements exceeds the service limit, replace the cylinder.
  - 10 mm (0.39 in.) [A]
  - 60 mm (2.36 in.) [B]

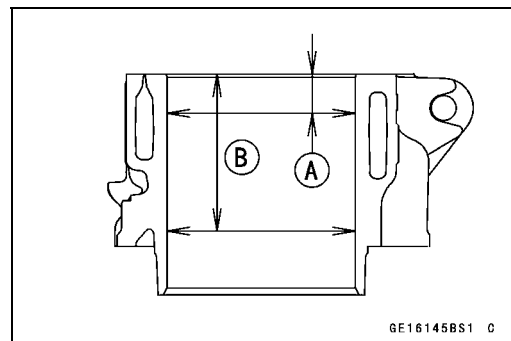

### Cylinder Inside Diameter

- Standard: 82.994 ~ 83.006 mm (3.2675 ~ 3.2679 in.)
- Service Limit: 83.09 mm (3.271 in.)


## Cylinder, Pistons

### ***Piston Wear Inspection***

- Measure the outside diameter [A] of each piston 14 mm (0.55 in.) [B] up from the bottom of the piston at a right angle to the direction of the piston pin.
- ★ If the measurement is under service limit, replace the piston.

#### **Piston Diameter**

- Standard:** 82.969 ~ 82.984 mm (3.2665 ~ 3.2671 in.)  
**Service Limit:** 82.82 mm (3.261 in.)

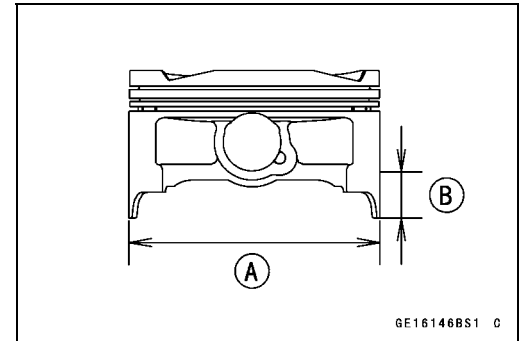

### ***Piston Ring, Piston Ring Groove Wear Inspection***

- Check for uneven groove wear by inspecting the ring seating.
- ★ The rings should fit perfectly parallel to groove surfaces. If not, replace the piston and all the piston rings.
- With the piston rings in their grooves, make several measurements with a thickness gauge [A] to determine piston ring/groove clearance.


#### **Piston Ring/Groove Clearance**

##### **Standard:**

- Top** 0.030 ~ 0.070 mm (0.00118 ~ 0.00276 in.)  
**Second** 0.020 ~ 0.060 mm (0.00079 ~ 0.00236 in.)

##### **Service Limit:**

- Top** 0.17 mm (0.0067 in.)  
**Second** 0.16 mm (0.0063 in.)

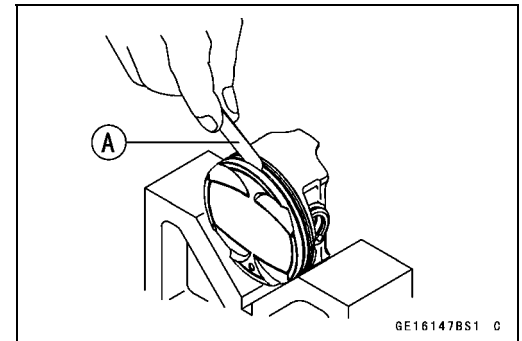

### ***Piston Ring Groove Width Inspection***

- Measure the piston ring groove width.
- Use a vernier caliper at several points around the piston.

#### **Piston Ring Groove Width**


##### **Standard:**

- Top [A]** 0.92 ~ 0.94 mm (0.0362 ~ 0.0370 in.)  
**Second [B]** 1.01 ~ 1.03 mm (0.0398 ~ 0.0406 in.)

##### **Service Limit:**

- Top** 1.02 mm (0.0402 in.)  
**Second** 1.11 mm (0.0437 in.)

- ★ If the width of any of the two grooves is wider than the service limit at any point, replace the piston.

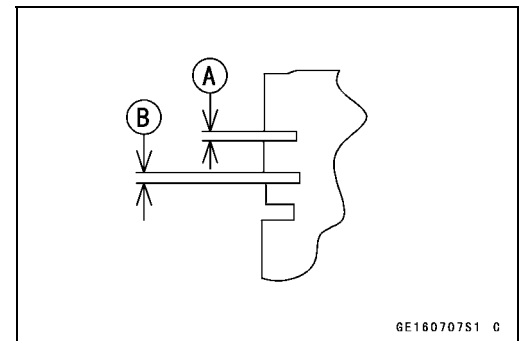

## 5-44 ENGINE TOP END

### Cylinder, Pistons

#### **Piston Ring Thickness Inspection**

- Measure the piston ring thickness.
- Use the micrometer to measure at several points around the ring.

#### **Piston Ring Thickness**

##### **Standard:**

**Top [A]**            **0.870 ~ 0.890 mm (0.0343 ~ 0.0350 in.)**

**Second [B]**       **0.970 ~ 0.990 mm (0.0382 ~ 0.0390 in.)**

##### **Service Limit:**

**Top**                **0.80 mm (0.031 in.)**

**Second**           **0.90 mm (0.035 in.)**

- ★ If any of the measurements is less than the service limit on either of the rings, replace all the rings.

#### **NOTE**

- When using new rings in a used piston, check for uneven groove wear. The rings should fit perfectly parallel to the groove sides. If not, replace the piston.

#### **Piston Ring End Gap Inspection**

- Place the piston ring [A] inside the cylinder, using the piston to locate the ring squarely in place. Set it close to the bottom of the cylinder, where cylinder wear is low.
- Measure the gap [B] between the ends of the ring with a thickness gauge.

#### **Piston Ring End Gap**

##### **Standard:**

**Top**                **0.25 ~ 0.40 mm (0.0098 ~ 0.0157 in.)**



**Second**           **0.40 ~ 0.55 mm (0.0157 ~ 0.0217 in.)**

##### **Service Limit:**

**Top**                **0.7 mm (0.03 in.)**

**Second**           **0.9 mm (0.04 in.)**


- ★ If the end gap of either ring is greater than the service limit, replace all the rings.

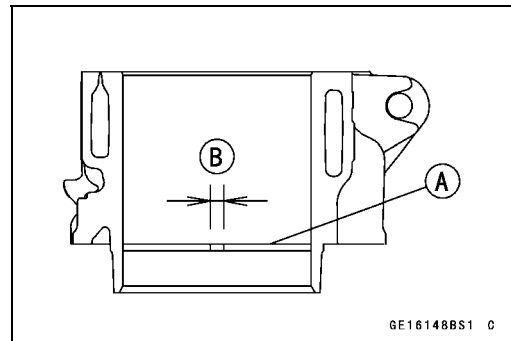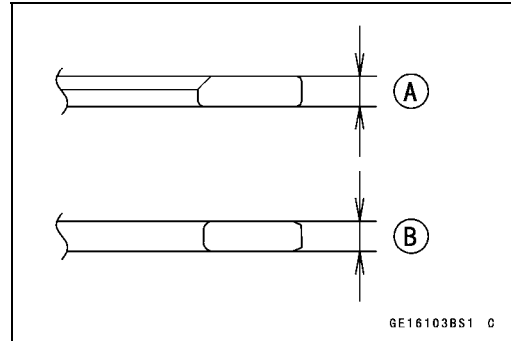

## Throttle Body Assy Holder


### Throttle Body Assy Holder Removal

- Remove:
  - Fuel Tank (see Fuel Tank Removal in the Fuel System (DFI) chapter)
  - Air Cleaner Housing (see Air Cleaner Housing Removal in the Fuel System (DFI) chapter)
  - Throttle Body Assy (see Throttle Body Assy Removal in the Fuel System (DFI) chapter)
  - Clamps [A]
  - Throttle Body Assy Holder Bolts [B]
  - Throttle Body Assy Holders [C]

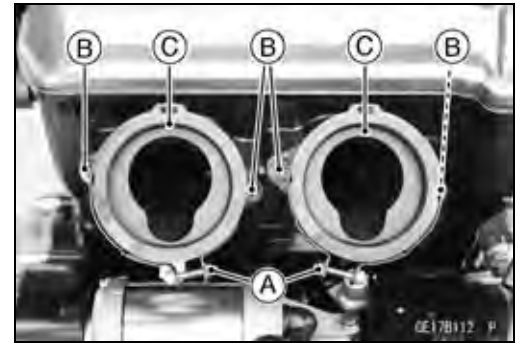

### Throttle Body Assy Holder Installation

- Be sure to install the new O-rings [A].
- Apply grease to the new O-rings.
- Apply a non-permanent locking agent to the threads of throttle body assy holder bolts.
- Tighten:
  - Torque - Throttle Body Assy Holder Bolts: 12 N·m (1.2 kgf·m, 106 in·lb)**
- Install the clamps [B] so that their projections [C] fit on the holes of the holders.
- Be sure that the clamp bolt heads [D] face outward.
- Upside View [E]
- Install the removed parts (see appropriate chapters).

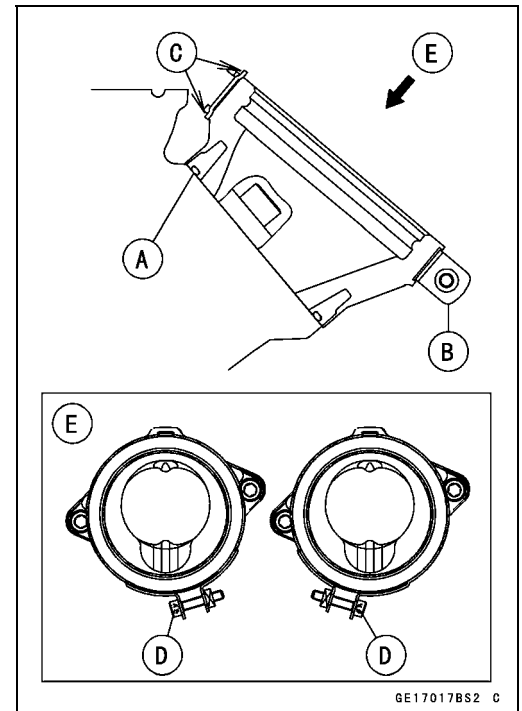

## 5-46 ENGINE TOP END


### Muffler

#### Muffler Removal

#### **⚠ WARNING**

The muffler can become extremely hot during normal operation and cause severe burns. Do not remove the muffler while it is hot.

- Remove the engine sprocket cover (see Engine Sprocket Removal in the Final Drive chapter).
- Disconnect the oxygen sensor lead connector [A].
- Open the clamps [B].

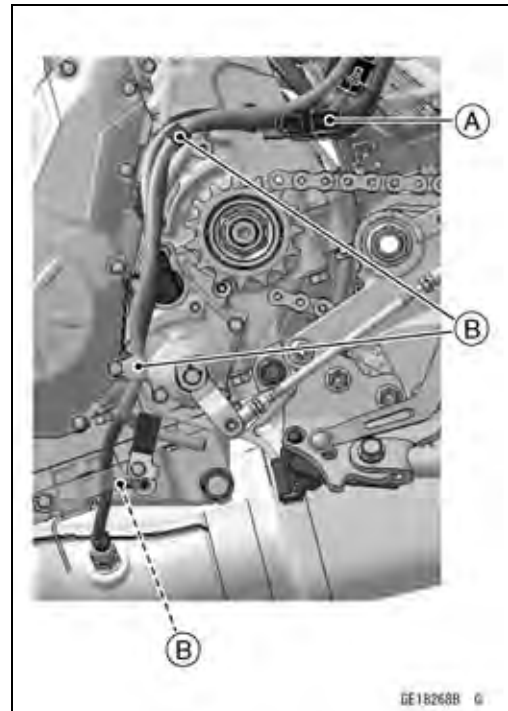

- Remove the exhaust pipe holder nuts [A].



- Remove:  
Shift Pedal (see Shift Pedal Removal in the Crankshaft/Transmission chapter)  
Muffler Body Mounting Bolt [A] and Nut  
Muffler with Oxygen Sensor






## Muffler

### ***Muffler Installation***

★ Install the muffler cover in the following procedure if removed.

- Be sure to install the dampers [A] on the muffler cover [B].
- Be sure to install the damper [C] of tab on the muffler.
- Insert the hook to the slot [D] of the muffler cover.
- Install the collars [E].
- Tighten:

**Torque - Muffler Cover Bolts [F]: 7.0 N·m (0.71 kgf·m, 62 in·lb)**

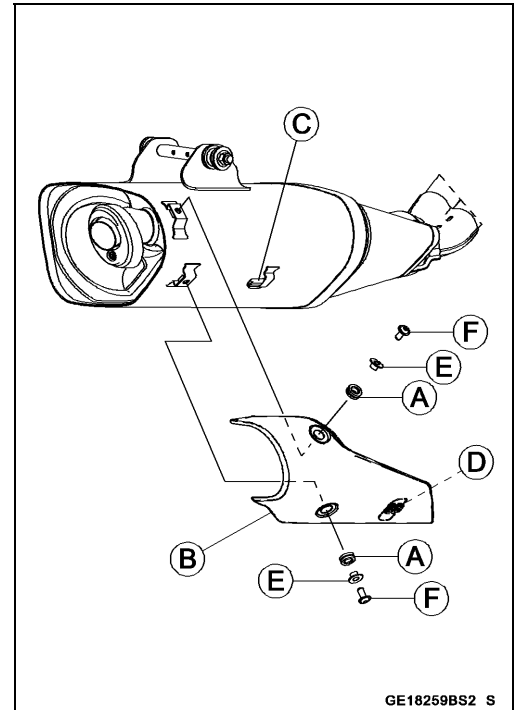

## 5-48 ENGINE TOP END



### Muffler

- Install:
  - Dampers [A]
  - Collars [B]
- Replace the exhaust pipe gaskets [C] with new ones and install them.
- Install the muffler [D].
- Temporarily tighten the exhaust pipe holder nut [E] following the specified tightening sequence [1 ~ 3].
- Tighten the exhaust pipe holder nuts following the specified tightening sequence [1 ~ 3].

**Torque - Exhaust Pipe Holder Nuts: 17 N·m (1.7 kgf·m, 13 ft·lb)**

- Tighten:

**Torque - Muffler Body Mounting Bolt [F]: 20 N·m (2.0 kgf·m, 15 ft·lb)**

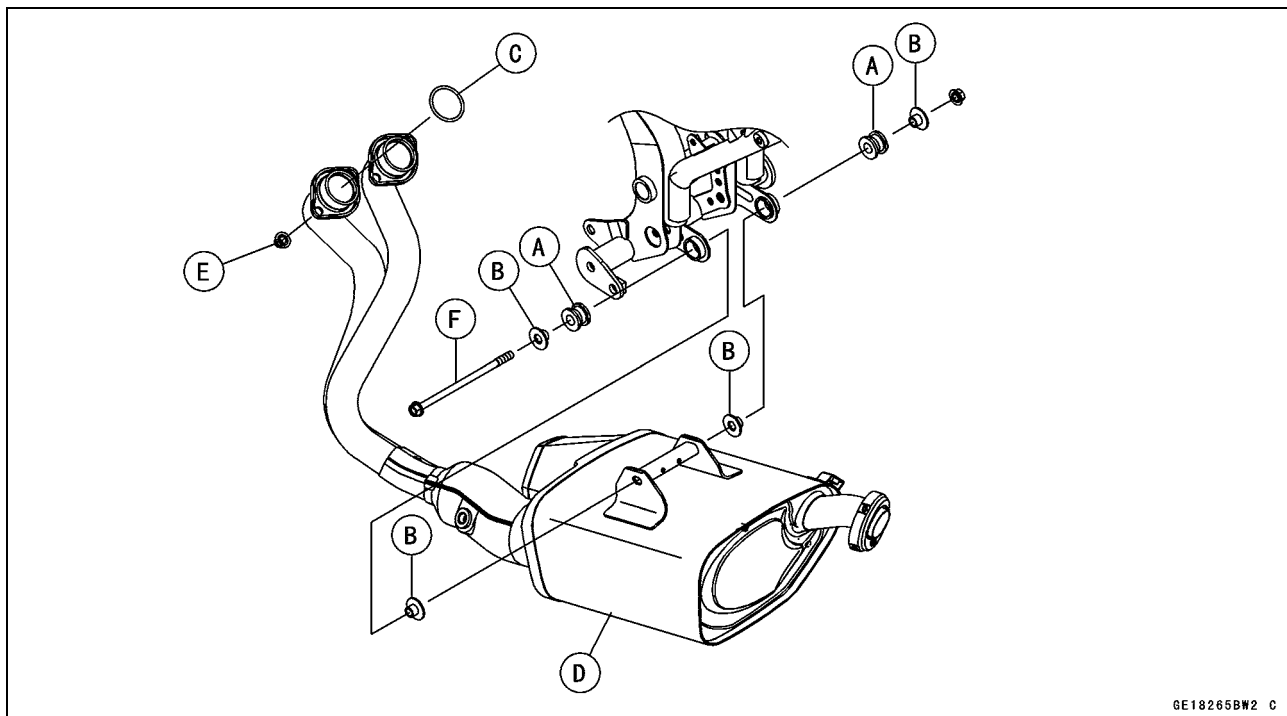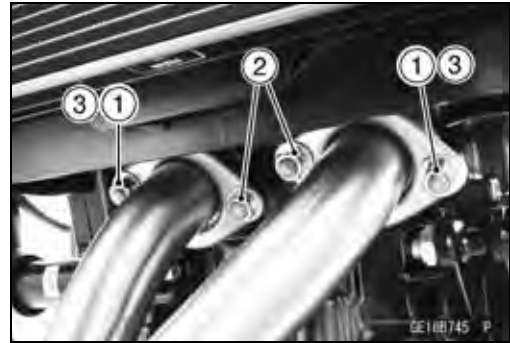

- Install the removed parts (see appropriate chapters).
- Thoroughly warm up the engine, wait until the engine cools down, and retighten all the bolts and nuts.

GE18265BW2 C


# Clutch

## Table of Contents

Exploded View .....	6-2
Specifications .....	6-4
Special Tool and Sealant .....	6-5
Clutch Lever and Cable .....	6-6
Clutch Lever Free Play Inspection .....	6-6
Clutch Lever Free Play Adjustment .....	6-6
Clutch Cable Removal .....	6-6
Clutch Cable Installation .....	6-6
Clutch Cable Lubrication .....	6-6
Clutch Lever Assembly Installation .....	6-7
Clutch Lever Removal .....	6-7
Clutch Lever Installation .....	6-8
Clutch Lever Position Adjustment .....	6-8
Clutch Cover .....	6-9
Clutch Cover Removal .....	6-9
Clutch Cover Installation .....	6-9
Release Shaft Removal .....	6-9
Release Shaft Installation .....	6-10
Clutch Cover Disassembly .....	6-10
Clutch Cover Assembly .....	6-11
Clutch .....	6-12
Clutch Removal .....	6-12
Clutch Installation .....	6-13
Clutch Plate Assembly Length Measurement .....	6-16
Clutch Plate Assembly Adjustment .....	6-16
Clutch Plate, Wear, Damage Inspection .....	6-17
Clutch Plate Warp Inspection .....	6-17
Clutch Housing Finger Inspection .....	6-17
Clutch Housing Spline Inspection .....	6-17
Clutch Pressure Plate and Clutch Hub Inspection .....	6-18
Clutch Spring Inspection .....	6-18

# 6-2 CLUTCH

## Exploded View

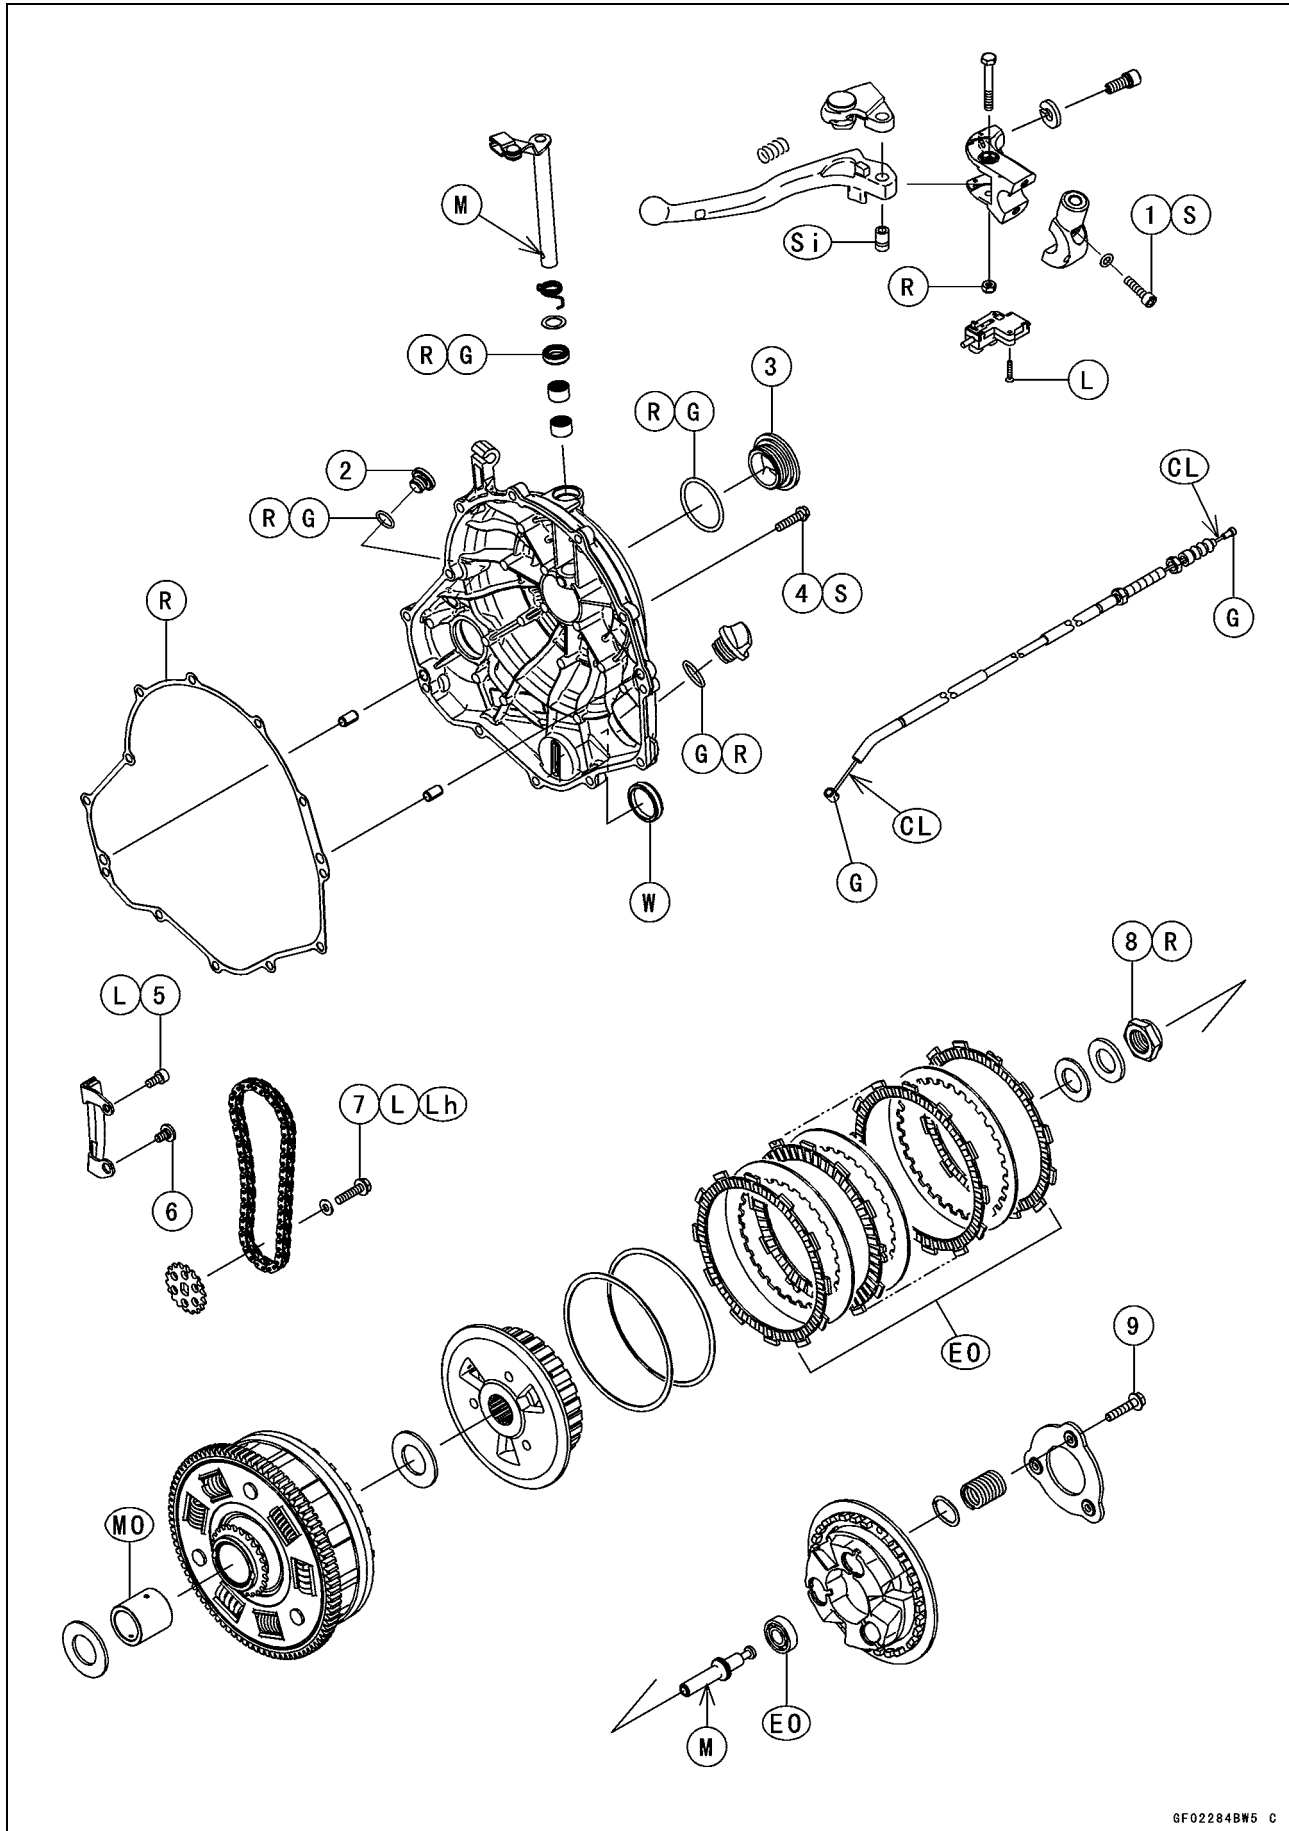

## Exploded View

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Clutch Lever Holder Clamp Bolts	8.8	0.90	78 in·lb	S
2	Timing Inspection Cap	3.9	0.40	35 in·lb	
3	Timing Rotor Bolt Cap	4.9	0.50	43 in·lb	
4	Clutch Cover Bolts	12	1.2	106 in·lb	S
5	Oil Pump Chain Guide Bolt, L = 12 mm (0.47 in.)	12	1.2	106 in·lb	L
6	Oil Pump Chain Guide Bolt, L = 11 mm (0.43 in.)	12	1.2	106 in·lb	
7	Oil Pump Sprocket Bolt	12	1.2	106 in·lb	L, Lh
8	Clutch Hub Nut	200	20.4	148	R
9	Clutch Stopper Bolts	9.8	1.0	87 in·lb	

CL: Apply cable lubricant.

EO: Apply engine oil.

G: Apply grease.

L: Apply a non-permanent locking agent.

Lh: Left-hand Threads

M: Apply molybdenum disulfide grease.

MO: Apply molybdenum disulfide oil solution.

(mixture of the engine oil and molybdenum disulfide grease in a weight ratio 10:1)

R: Replacement Parts

S: Follow the specified tightening sequence.

Si: Apply silicone grease.

W: Apply water.


## 6-4 CLUTCH

### Specifications


Item	Standard	Service Limit
<b>Clutch Lever and Cable</b>		
Clutch Lever Free Play	2 ~ 3 mm (0.08 ~ 0.12 in.)	— — —
<b>Clutch</b>		
Clutch Plate Assembly Length	(Reference) 32.36 ~ 33.36 mm (1.27 ~ 1.31 in.)	— — —
Friction Plate Thickness	2.92 ~ 3.08 mm (0.115 ~ 0.121 in.)	2.6 mm (0.10 in.)
Friction Plate Warp	0.15 mm (0.0059 in.) or less	0.3 mm (0.01 in.)
Steel Plate Warp	0.15 mm (0.0059 in.) or less	0.3 mm (0.01 in.)

Special Tool and Sealant

Clutch Holder:  
57001-1243

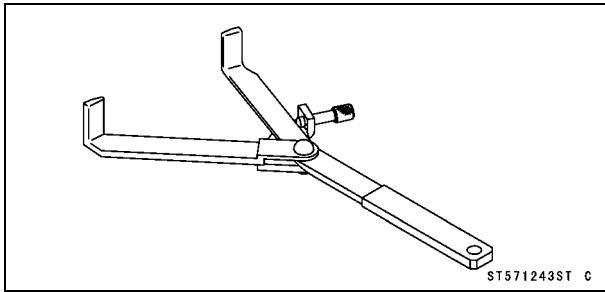

Liquid Gasket, TB1211F:  
92104-0004

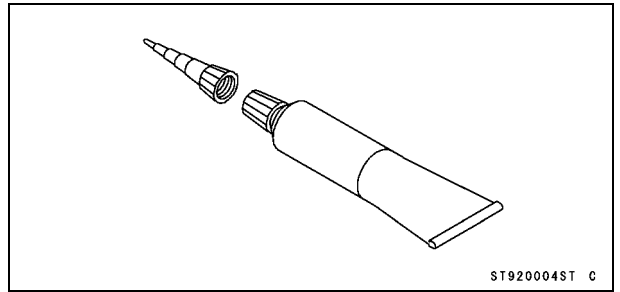

## 6-6 CLUTCH

### Clutch Lever and Cable

#### **Clutch Lever Free Play Inspection**


- Refer to the Clutch Operation Inspection in the Periodic Maintenance chapter.

#### **Clutch Lever Free Play Adjustment**


- Refer to the Clutch Operation Inspection in the Periodic Maintenance chapter.

#### **Clutch Cable Removal**


- Remove:
  - Regulator/Rectifier (see Regulator/Rectifier Removal in the Electrical System chapter)
- Open the clamp [A].

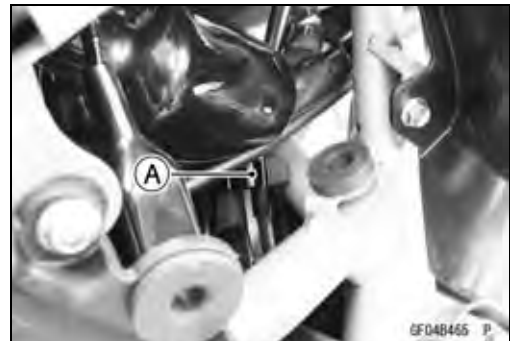

- Slide the dust cover [A] at the clutch cable lower end out of place.
- Loosen the nuts [B], and slide the lower end of the clutch cable to give the cable plenty of play.

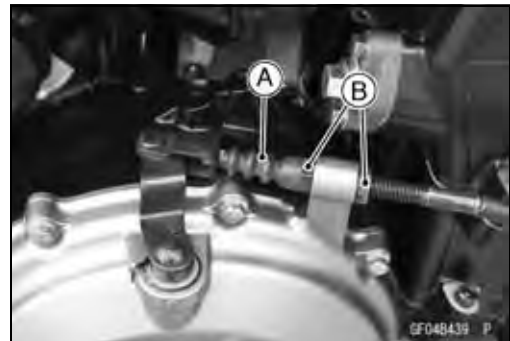

- Loosen the locknut [A].
- Screw in the adjuster [B].
- Line up the slots [C] in the clutch lever and adjuster, and then free the cable from the lever.
- Push the release lever toward the front of the motorcycle.
- Free the clutch inner cable tip from the clutch release lever.
- Pull the clutch cable out of the frame.

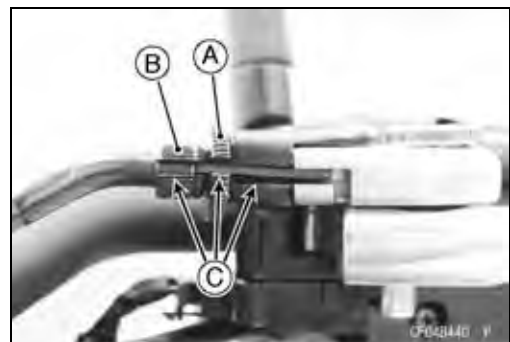

#### **Clutch Cable Installation**

- Run the clutch cable correctly (see Cable, Wire, and Hose Routing section in the Appendix chapter).
- Adjust the clutch cable (see Clutch Operation Inspection in the Periodic Maintenance chapter).
- Install the removed parts (see appropriate chapters).

#### **Clutch Cable Lubrication**

- Refer to the Chassis Parts Lubrication in the Periodic Maintenance chapter.



## Clutch Lever and Cable

### **Clutch Lever Assembly Installation**


- Install the clutch lever holder so that the mating surface [A] of the clutch lever holder clamp is aligned with the punch mark [B].
- Tighten the upper clamp bolt first, and then the lower clamp bolt.
- There will be a gap at the lower part of the clamp after tightening.

**Torque - Clutch Lever Holder Clamp Bolts: 8.8 N·m (0.90 kgf·m, 78 in·lb)**



### **Clutch Lever Removal**

- Remove the upper end of the clutch cable [A] (see Clutch Cable Removal).
- Remove:
  - Starter Lockout Switch Screws [B]
  - Starter Lockout Switch [C]
  - Clutch Lever Pivot Locknut [D]
  - Clutch Lever Pivot Bolt
  - Clutch Lever [E]

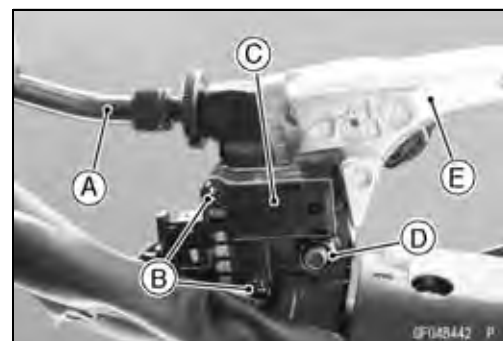

## 6-8 CLUTCH

### Clutch Lever and Cable

#### Clutch Lever Installation

#### **⚠ WARNING**

If the starter lockout switch pin has been damaged the starter lockout system will not work properly. This allows the motorcycle to be started in gear with the clutch lever released (clutch engaged), creating sudden forward movement that can result in an accident or injury. Check that the starter lockout switch operates properly when installing the clutch lever.

- Apply silicone grease to the clutch lever collar.
- Replace the clutch lever pivot locknut [A] with a new one.
- Install the clutch lever [B] and clutch lever pivot bolt.
- Tighten the clutch lever locknut securely.
- Apply a non-permanent locking agent to the starter lockout switch screws [C].
- Install the starter lockout switch [D].
- Take care not to damage a pin [E] when installing the starter lockout switch.
- Tighten the starter lockout switch screws securely.
- Install the upper end of the clutch cable [F] (see Clutch Cable Installation).
- Adjust the clutch cable (see Clutch Operation Inspection in the Periodic Maintenance chapter).
- Check that the pin of the starter lockout switch moves smoothly.



#### **⚠ WARNING**

Too much cable play can prevent clutch disengagement and cause an accident resulting in serious injury or death. When adjusting the clutch or replacing the cable, be sure the upper end of the clutch outer cable is fully seated in its fitting, or it could slip into place later, creating enough cable play to prevent clutch disengagement.

#### Clutch Lever Position Adjustment

The adjuster has 5 positions so that the clutch lever position can be adjusted to suit the operator's hand.

- Push the lever forward and turn the adjuster [A] to align the number with the arrow mark [B] on the lever holder.
- The distance from the grip to the lever is minimum at number 5 and maximum at number 1.

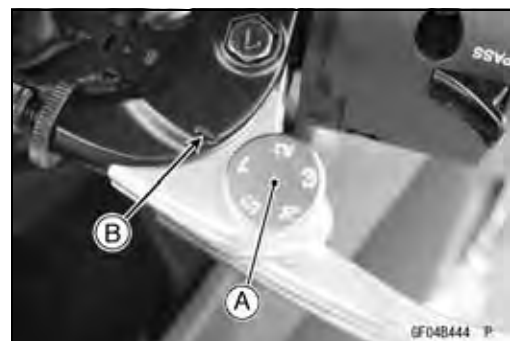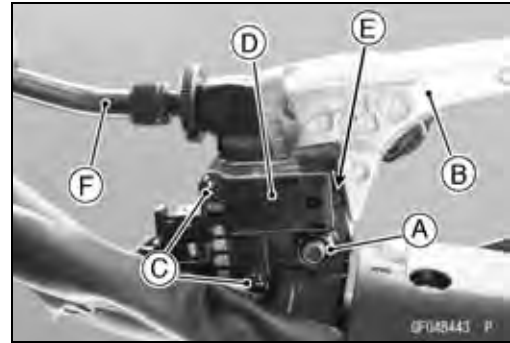


## Clutch Cover

### Clutch Cover Removal

- Drain the engine oil (see Engine Oil Change in the Periodic Maintenance chapter).
- Remove:
  - Clutch Cable Lower End (see Clutch Cable Removal)
  - Clutch Cover Bolts [A]

- Turn the release lever [A] toward the rear as shown, and remove the clutch cover [B].
  - About 90° [C]

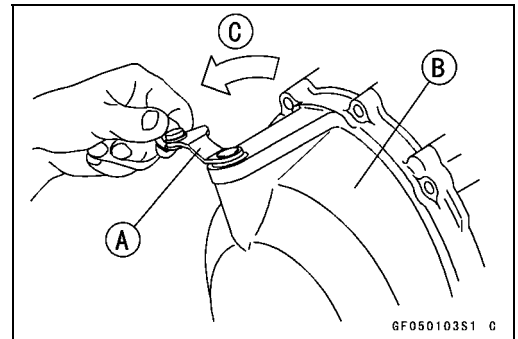


### Clutch Cover Installation

- Apply liquid gasket to the areas [A] where the mating surface of the crankcase touches the clutch cover gasket and to the crankshaft sensor lead grommet [B].

**Sealant - Liquid Gasket, TB1211F: 92104-0004**

- Be sure that the dowel pins [C] are in position.
- Replace the clutch cover gasket with a new one.

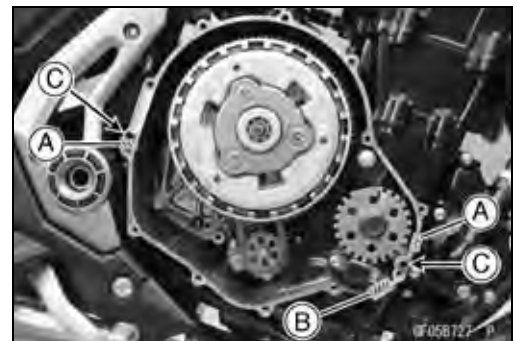

- Tighten the clutch cover bolts following the specified tightening sequence [1 ~ 14].

**Torque - Clutch Cover Bolts: 12 N·m (1.2 kgf·m, 106 in·lb)**

- Install the clutch cable lower end (see Clutch Cable Installation).



### Release Shaft Removal

**NOTICE**

**Do not remove the clutch release lever and shaft assembly unless it is absolutely necessary. If removed, the oil seal replacement may be required.**

- Remove the clutch cover (see Clutch Cover Removal).
- Pull the lever and shaft assembly [A] straight out of the clutch cover.




# 6-10 CLUTCH

## Clutch Cover

### Release Shaft Installation


- Apply grease to the oil seal lips on the upper ridge of the clutch cover.
- Apply engine oil to the needle bearings in the hole of the clutch cover.
- Apply molybdenum disulfide grease to the pusher-holding portion [A] on the release shaft.
- Install the washer [B] and spring [C].
- Insert the release shaft straight into the upper hole of the clutch cover.

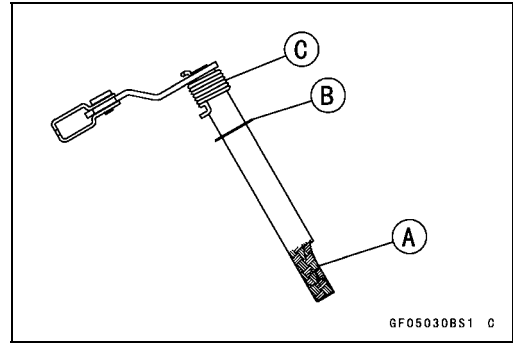

### NOTICE



**When inserting the release shaft, be careful not to remove the spring of the oil seal.**

- Fit the spring [A] as shown.  
Viewed from Rear [B]  
Release Shaft [C]  
Clutch Cover [D]

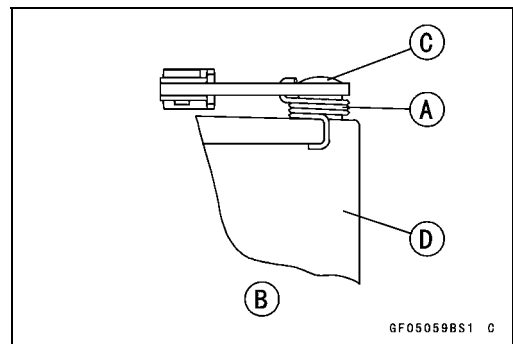

### Clutch Cover Disassembly

- Remove:  
Clutch Cover (see Clutch Cover Removal)  
Release Lever and Shaft Assembly (see Release Shaft Removal)  
Oil Seal [A]  
Needle Bearings [B]
- Remove:  
Oil Level Inspection Window [A]  
Timing Inspection Cap [B]  
Timing Rotor Bolt Cap [C]  
Oil Filler Plug [D]

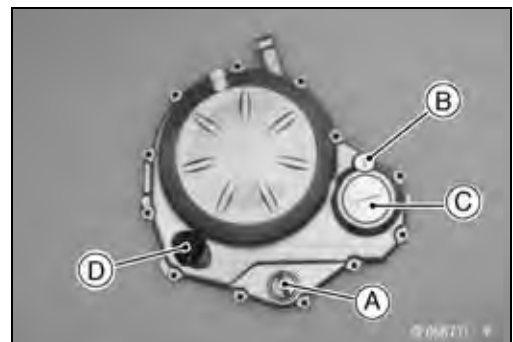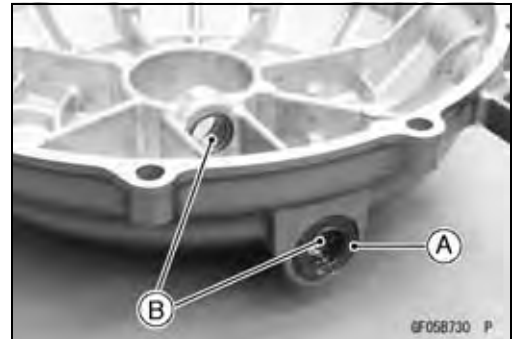



## Clutch Cover

### Clutch Cover Assembly

- Replace the needle bearings [A] and oil seal [B] with new ones.
- Apply grease to the oil seal lips.

#### NOTE

- Install the needle bearings so that the manufacture's mark face out.
- Install the needle bearings and oil seal position as shown.
- Press [C] the bearing so that the bearing surface [D] is flush with the housing end of clutch cover [E].
- Press the oil seal until it is bottomed.
- Apply water to the rubber of the oil level inspection window [A] and press [B] it so that the glass surface [C] faces outside.
- Replace the O-rings of the following parts with new ones and apply grease to them.
  - Timing Inspection Cap
  - Timing Rotor Bolt Cap
  - Oil Filler Plug
- Tighten:
  - Torque - Timing Inspection Cap: 3.9 N·m (0.40 kgf·m, 35 in·lb)**
  - Timing Rotor Bolt Cap: 4.9 N·m (0.50 kgf·m, 43 in·lb)**

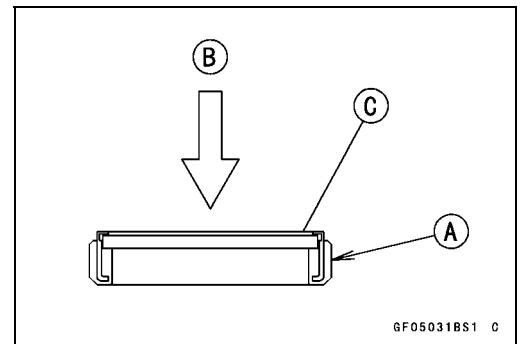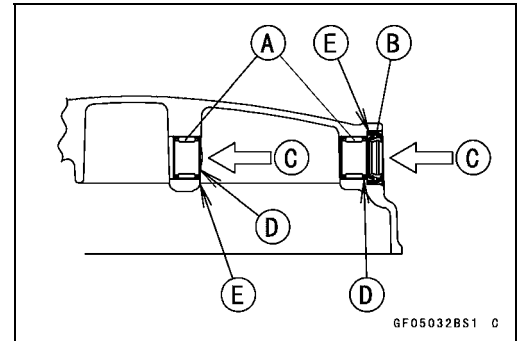

# 6-12 CLUTCH

## Clutch

### Clutch Removal

- Remove:  
Clutch Cover (see Clutch Cover Removal)
- Loosen the three clutch stopper bolts [A] alternately with little by little (1/4 turn at a time) to prevent tilting the clutch stopper plate [B].

#### NOTICE

**Do not loosen the one or two clutch stopper bolt at once to prevent clutch stopper plate from warpage by the spring force.**

- Remove:  
Clutch Stopper Bolts [A]  
Clutch Stopper Plate [B]  
Clutch Springs [C]
- Visually inspect the clutch stopper plate.
- ★ If the clutch stopper plate is warped, replace it with a new one.






- Remove:  
Spring Seats [A]  
Clutch Pressure Plate [B] (with Shim, Bearing and Pusher [C])  
Friction Plates and Steel Plates  
Spring and Spring Seat

- Hold the sub clutch hub [A] steady with the clutch holder [B], and remove the nut [C] and washers.  
**Special Tool - Clutch Holder: 57001-1243**

○ Use the clutch holder with sharpened hook nose by grinding.


**Special Tool - Clutch Holder: 57001-1243**

○ Grind the hook nose by 0.5 mm (0.02 in.) as shown.

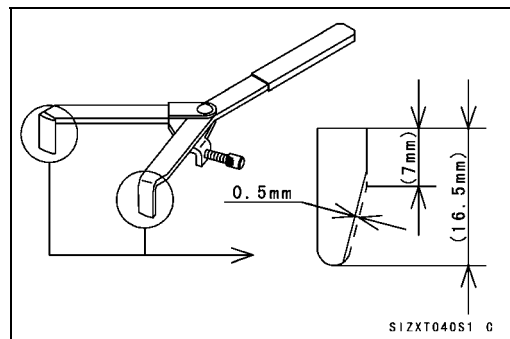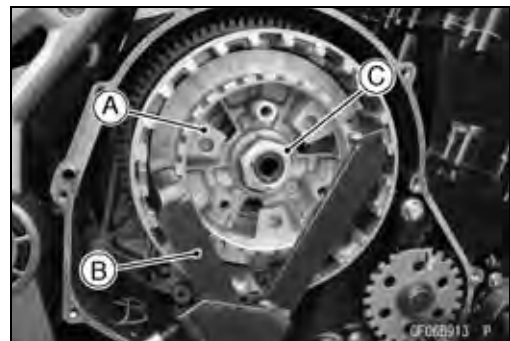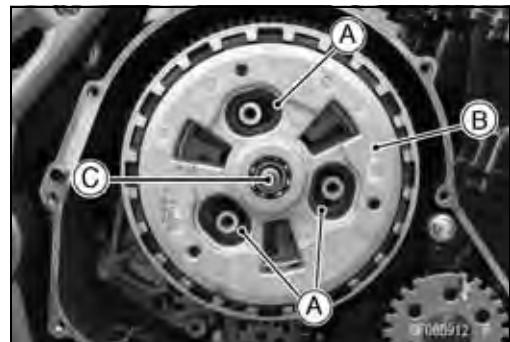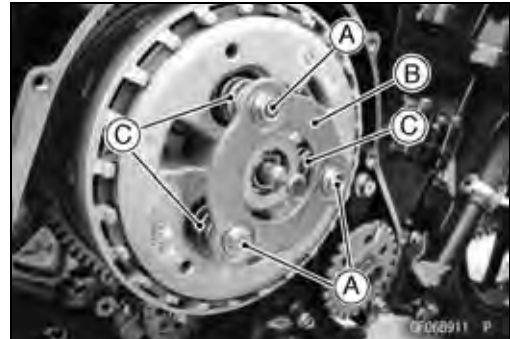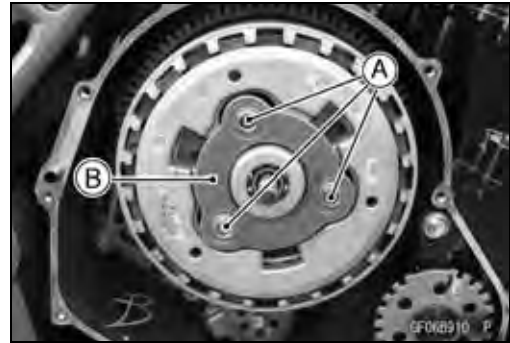

**Clutch**

- Remove:  
Clutch Hub [A]  
Spacer [B]

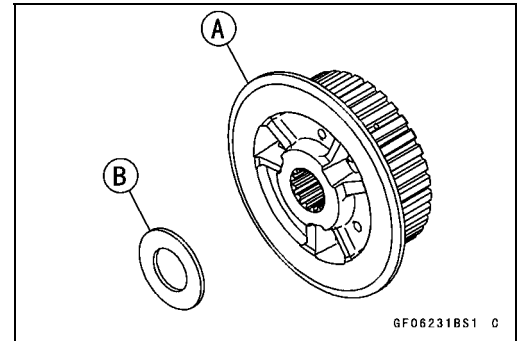


- Remove the oil pump sprocket bolt [A] and washer.

**NOTE**

○ The oil pump sprocket bolt has a left-hand threads.

- Using the holes [B], pull out the sleeve [C].
- Remove the following as a set.  
Clutch Housing [D]  
Oil Pump Sprocket [E]  
Oil Pump Chain [F]

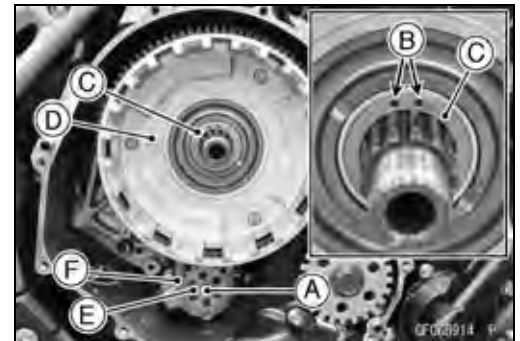


- Remove:  
Spacer [A]



**Clutch Installation**


- Install the spacer on the drive shaft.
- Engage the oil pump chain [A] to the clutch housing gear [B] and the oil pump sprocket [C].

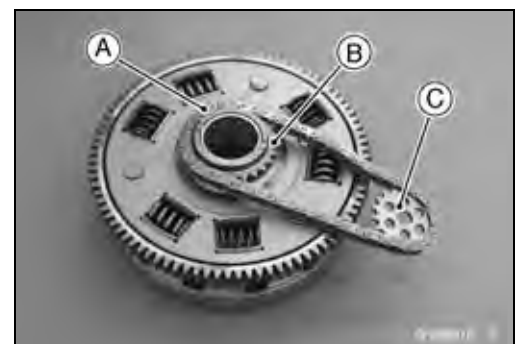

# 6-14 CLUTCH

## Clutch


- Install the following on the drive shaft as a set.
  - Clutch Housing [A]
  - Oil Pump Chain [B]
  - Oil Pump Sprocket [C]
- Apply molybdenum disulfide oil solution to the sleeve [D].
- Install the sleeve so that the holes [E] face outward.
- Align the hole on the oil pump sprocket with the oil pump shaft.
- Apply a non-permanent locking agent to the oil pump sprocket bolt [F] and install the washer.
- Tighten:
  - Torque - Oil Pump Sprocket Bolt: 12 N·m (1.2 kgf·m, 106 in·lb)**

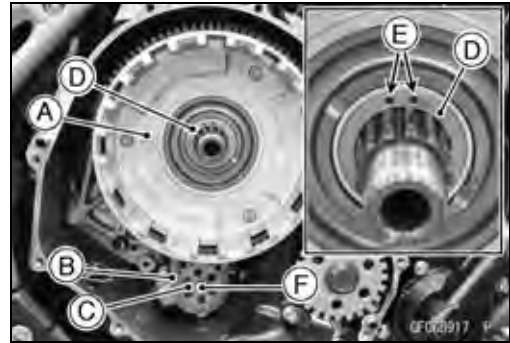


### NOTE

○ The oil pump sprocket bolt has a left-hand threads.

- Install:
  - Spacer [A]
  - Clutch Hub [B]
  - Washer [C]
- Install the washer [D] so that the “OUT SIDE” mark faces outward.

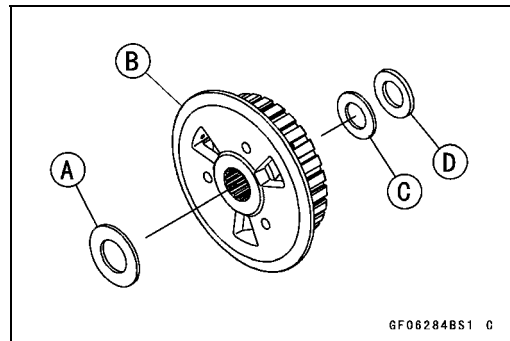

- Replace the clutch hub nut [A] with a new one.
- Hold the sub clutch hub [B] steady with the clutch holder [C], and tighten the clutch hub nut.
- Special Tool - Clutch Holder: 57001-1243**
- Torque - Clutch Hub Nut: 200 N·m (20.4 kgf·m, 148 ft·lb)**

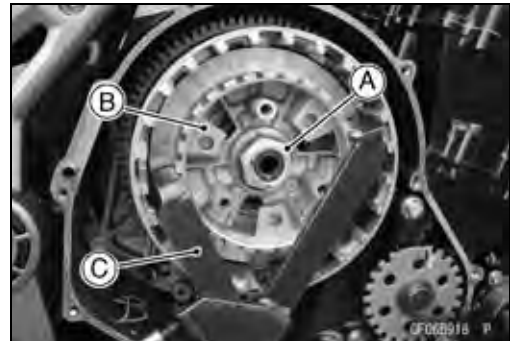


- Install the following as shown.
  - Friction Plates [A] [B]
  - Spring Seat [C]
  - Spring [D]
  - Steel Plates [E] [F]

### NOTICE

**If new dry friction plates and steel plates are installed, apply engine oil to the surfaces of each plate to avoid clutch plate seizure.**


- Install the last friction plate and steel plate later with the clutch pressure plate.

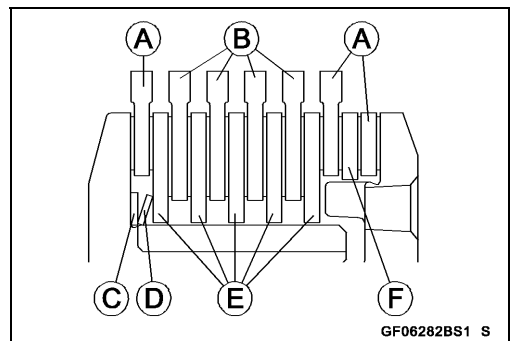



## Clutch

- Apply molybdenum disulfide grease to the pusher end [A].
- Install the pusher [B] to the drive shaft direction as shown.

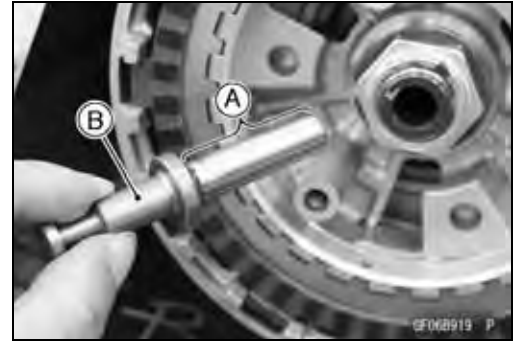

- Apply engine oil to the sliding surfaces of the bearing [A].
- Put the last friction plate [B] and steel plate [C] on the clutch pressure plate [D] and install them.



- Install the last friction plate so that the tangs [A] fit into the grooves in the housing as shown.

### NOTE

○ Make sure that the clutch pressure plate is installed without a gap.




- Be sure to install the spring seats [A] on the clutch pressure plate.



- Install:
  - Clutch Springs
  - Clutch Stopper Plate
- Tighten the three clutch stopper bolts [A] alternately with little by little (1/4 turn at a time) to prevent tilting the clutch stopper plate [B].

### NOTICE

**Do not tighten the one or two clutch stopper bolt at once to prevent the clutch stopper plate from warpage by the spring force.**

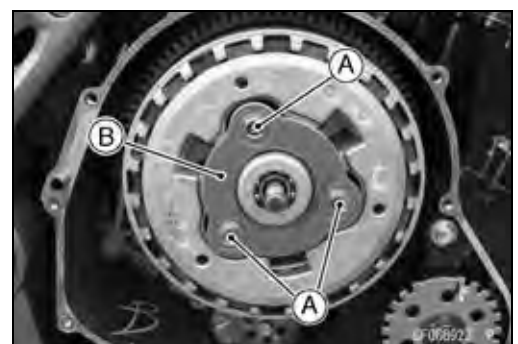

- Tighten:
  - Torque - Clutch Stopper Bolts: 9.8 N·m (1.0 kgf·m, 87 in·lb)

# 6-16 CLUTCH

## Clutch

- Install:  
Clutch Cover (see Clutch Cover Installation)

### Clutch Plate Assembly Length Measurement

- Assemble the following parts.

- Clutch Hub [A]
- Spring Seat [B]
- Spring [C]
- Friction Plates [D]
- Steel Plates [E]
- Clutch Pressure Plate [F]
- Spring Seats [G]
- Clutch Springs [H]
- Clutch Stopper Plate [I]
- Clutch Stopper Bolts [J]


**Torque - Clutch Stopper Bolts: 9.8 N·m (1.0 kgf·m, 87 in·lb)**

- Measure the clutch plate assembly length [K].

#### Clutch Plate Assembly Length (Reference)

**32.36 ~ 33.36 mm (1.27 ~ 1.31 in.)**

- ★ If the length is not within the specified range, adjust the length (see Clutch Plate Assembly Adjustment).

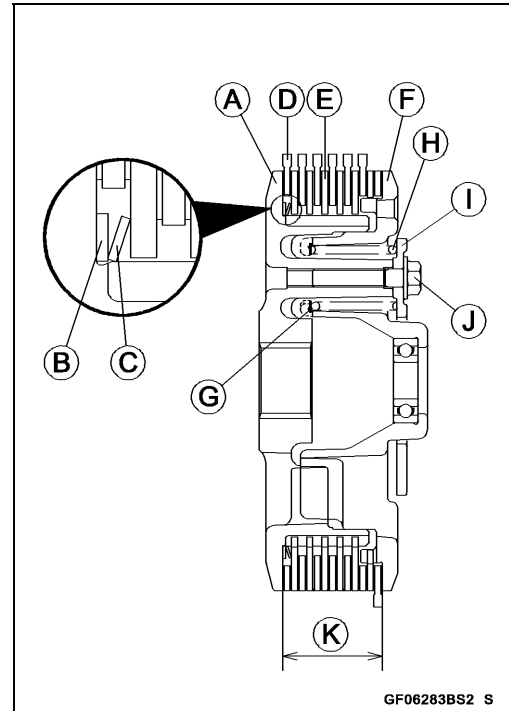

### Clutch Plate Assembly Adjustment

- Inspect the clutch plate assembly length, and then replace the steel plate(s) which brings the length within the specified range.
- Remove:
  - Clutch Stopper Bolts
  - Clutch Stopper Plates
  - Clutch Springs
  - Clutch Pressure Plate
- Replace the following steel plate(s).

Thickness	Part Number
1.6 mm (0.063 in.)	13089-0038
2.0 mm (0.079 in.) (STD)	13089-0021
2.3 mm (0.091 in.)	13089-0039

### NOTE

- Do not use the steel plate of 1.6 mm (0.063 in.) and 2.3 mm (0.091 in.) thickness at the same time.
- When adjusting the clutch plate assembly, install the steel plate of 1.6 mm (0.063 in.) or 2.3 mm (0.091 in.) thickness to the second or third from the clutch pressure plate.
- Install the removed parts, and inspect the clutch plate assembly length.

**Torque - Clutch Stopper Bolts: 9.8 N·m (1.0 kgf·m, 87 in·lb)**

## Clutch


### Clutch Plate, Wear, Damage Inspection

- Visually inspect the friction and steel plates for signs of seizure, overheating (discoloration), or uneven wear.
- Measure the thickness of each friction plate [A] at several points.
- ★ If any plates show signs of damage, or if they have worn past the service limit, replace them with new ones.

#### Friction Plate Thickness

**Standard:** 2.92 ~ 3.08 mm (0.115 ~ 0.121 in.)

**Service Limit:** 2.6 mm (0.10 in.)

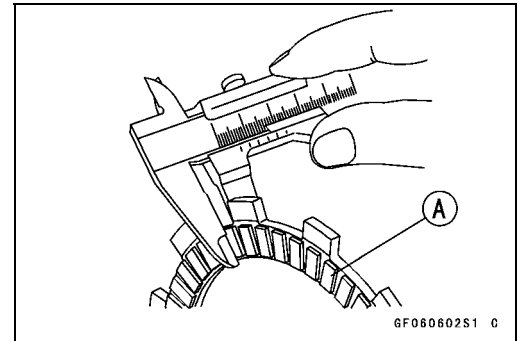


### Clutch Plate Warp Inspection

- Place each friction plate or steel plate on a surface plate and measure the gap between the surface plate [A] and each friction plate or steel plate [B] with a thickness gauge [C]. The gap is the amount of friction or steel plate warp.
- ★ If any plate is warped over the service limit, replace it with a new one.

#### Friction and Steel Plate Warp


**Standard:** 0.15 mm (0.0059 in.) or less

**Service Limit:** 0.3 mm (0.01 in.)

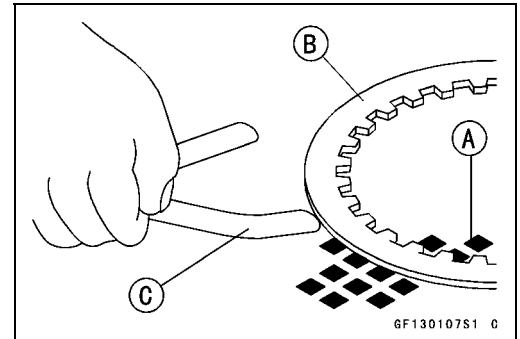


### Clutch Housing Finger Inspection

- Visually inspect the clutch housing fingers [A] where the friction plate tangs [B] hit them.
- ★ If they are badly worn or if there are groove cuts where the tangs hit, replace the housing. Also, replace the friction plates if their tangs are damaged.

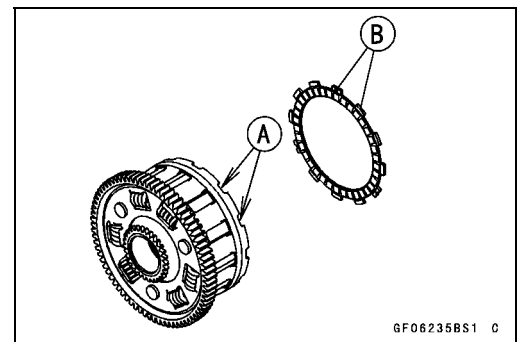

### Clutch Housing Spline Inspection

- Visually inspect where the teeth [A] on the steel plates wear against the sub clutch hub splines [B].
- ★ If there are notches worn into the splines, replace the sub clutch hub. Also, replace the steel plates if their teeth are damaged.


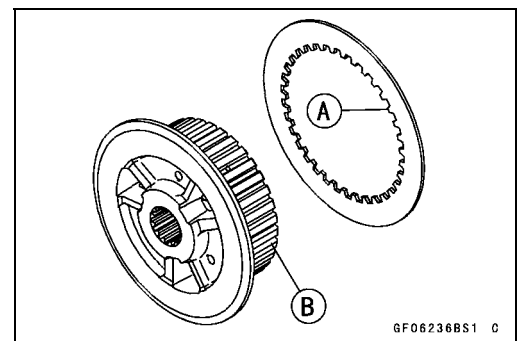


## 6-18 CLUTCH

### Clutch

#### **Clutch Pressure Plate and Clutch Hub Inspection**

- Visually inspect the contact areas [A] of the clutch pressure plate [B] and clutch hub [C] for damage.
- ★ If the contact areas are damaged replace them with new ones.

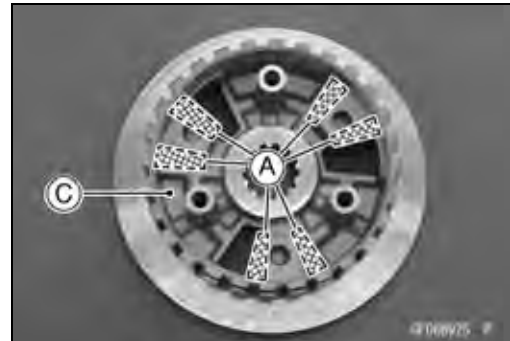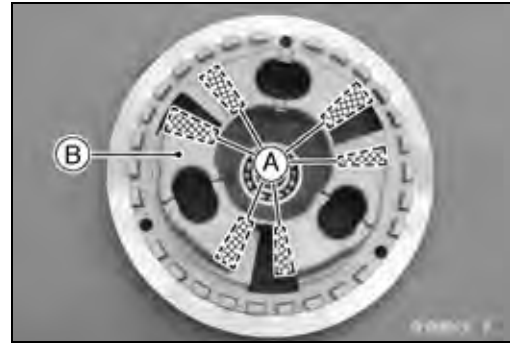

#### **Clutch Spring Inspection**

- ★ If all the components are good, but the problem still exists, replace the clutch springs (see Clutch Removal and Clutch Installation).


# Engine Lubrication System

## Table of Contents

Exploded View.....	7-2
Engine Oil Flow Chart.....	7-4
Specifications .....	7-6
Special Tools and Sealant .....	7-7
Engine Oil and Oil Filter.....	7-8
Oil Level Inspection.....	7-8
Engine Oil Change.....	7-8
Oil Filter Replacement .....	7-8
Oil Pan.....	7-9
Oil Pan Removal .....	7-9
Oil Pan Installation.....	7-10
Oil Screen.....	7-12
Oil Screen Removal .....	7-12
Oil Screen Installation .....	7-12
Oil Screen Cleaning.....	7-12
Oil Pressure Relief Valve.....	7-13
Oil Pressure Relief Valve Removal .....	7-13
Oil Pressure Relief Valve Installation .....	7-13
Oil Pressure Relief Valve Inspection.....	7-13
Oil Pumps.....	7-14
Oil Pump Chain and Sprocket Removal .....	7-14
Oil Pump Chain and Sprocket Installation .....	7-14
Oil Pump Removal .....	7-14
Oil Pump Installation .....	7-16
Oil Pressure Measurement.....	7-18
Oil Pressure Measurement .....	7-18
Oil Pressure Switch .....	7-19
Oil Pressure Switch Removal .....	7-19
Oil Pressure Switch Installation .....	7-19
Oil Pipes.....	7-20
Oil Pipe Removal .....	7-20
Oil Pipe Installation .....	7-20

# 7-2 ENGINE LUBRICATION SYSTEM

## Exploded View

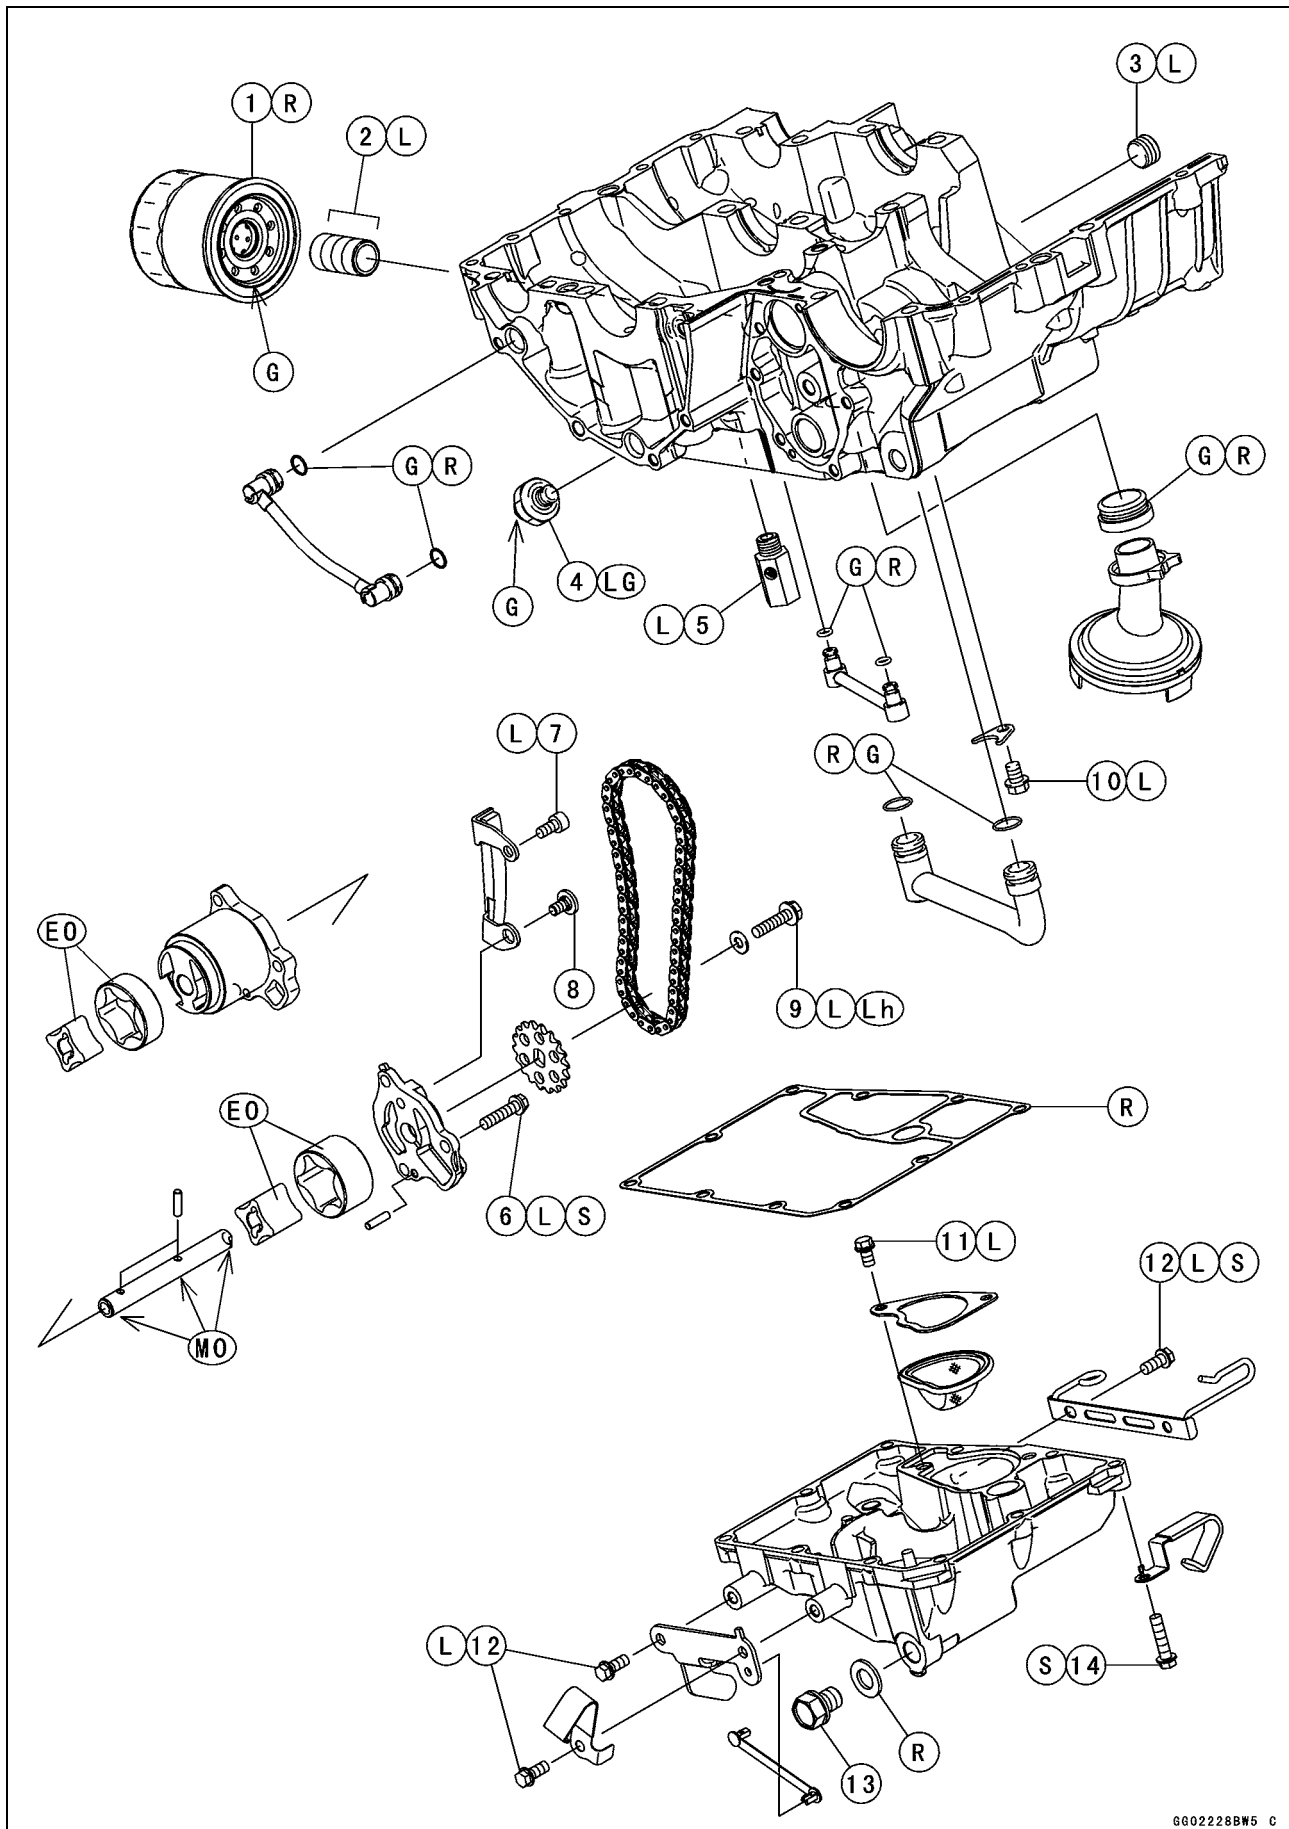

## ENGINE LUBRICATION SYSTEM 7-3

### Exploded View

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Oil Filter	17.5	1.78	12.9	G
2	Oil Filter Pipe	25	2.5	18	L
3	Oil Passage Plug (PT3/8)	20	2.0	15	L
4	Oil Pressure Switch	15	1.5	11	LG
5	Oil Pressure Relief Valve	15	1.5	11	L
6	Oil Pump Cover Bolts	9.8	1.0	87 in·lb	L, S
7	Oil Pump Chain Guide Bolt, L = 12 mm (0.47 in.)	12	1.2	106 in·lb	L
8	Oil Pump Chain Guide Bolt, L = 11 mm (0.43 in.)	12	1.2	106 in·lb	
9	Oil Pump Sprocket Bolt	12	1.2	106 in·lb	L, Lh
10	Oil Pipe Retaining Plate Bolt	9.8	1.0	87 in·lb	L
11	Oil Strainer Holder Bolts	9.8	1.0	87 in·lb	L
12	Oil Pan Bracket Bolts	12	1.2	106 in·lb	L, S (2)
13	Engine Oil Drain Bolt	30	3.1	22	
14	Oil Pan Bolts	12	1.2	106 in·lb	S

EO: Apply engine oil.

G: Apply grease.

L: Apply a non-permanent locking agent.

LG: Apply liquid gasket.

Lh: Left-hand Threads

MO: Apply molybdenum disulfide oil solution.


(mixture of the engine oil and molybdenum disulfide grease in a weight ratio 10 : 1)

R: Replacement Parts

S: Follow the specified tightening sequence.


# 7-4 ENGINE LUBRICATION SYSTEM

## Engine Oil Flow Chart

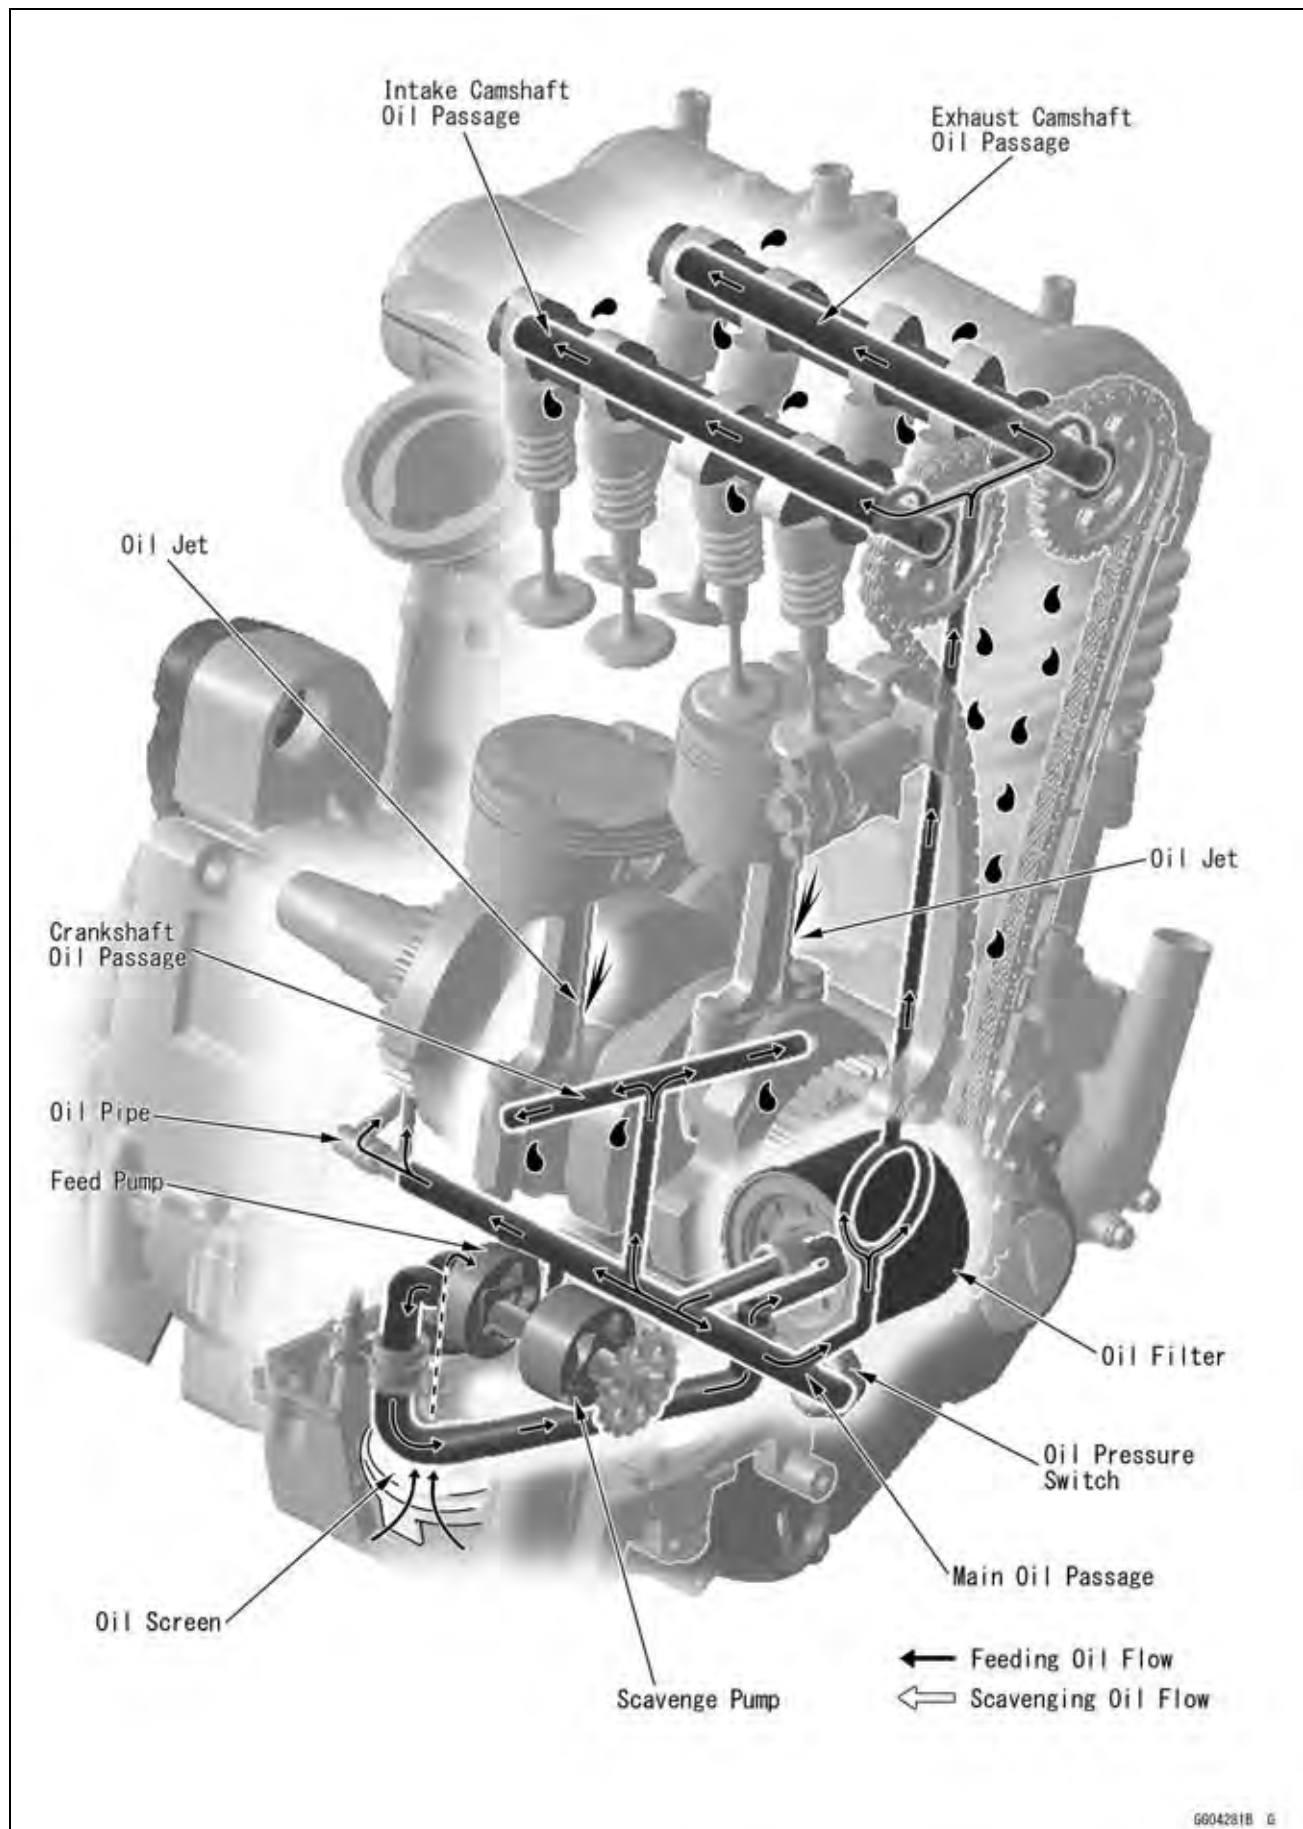



Engine Oil Flow Chart

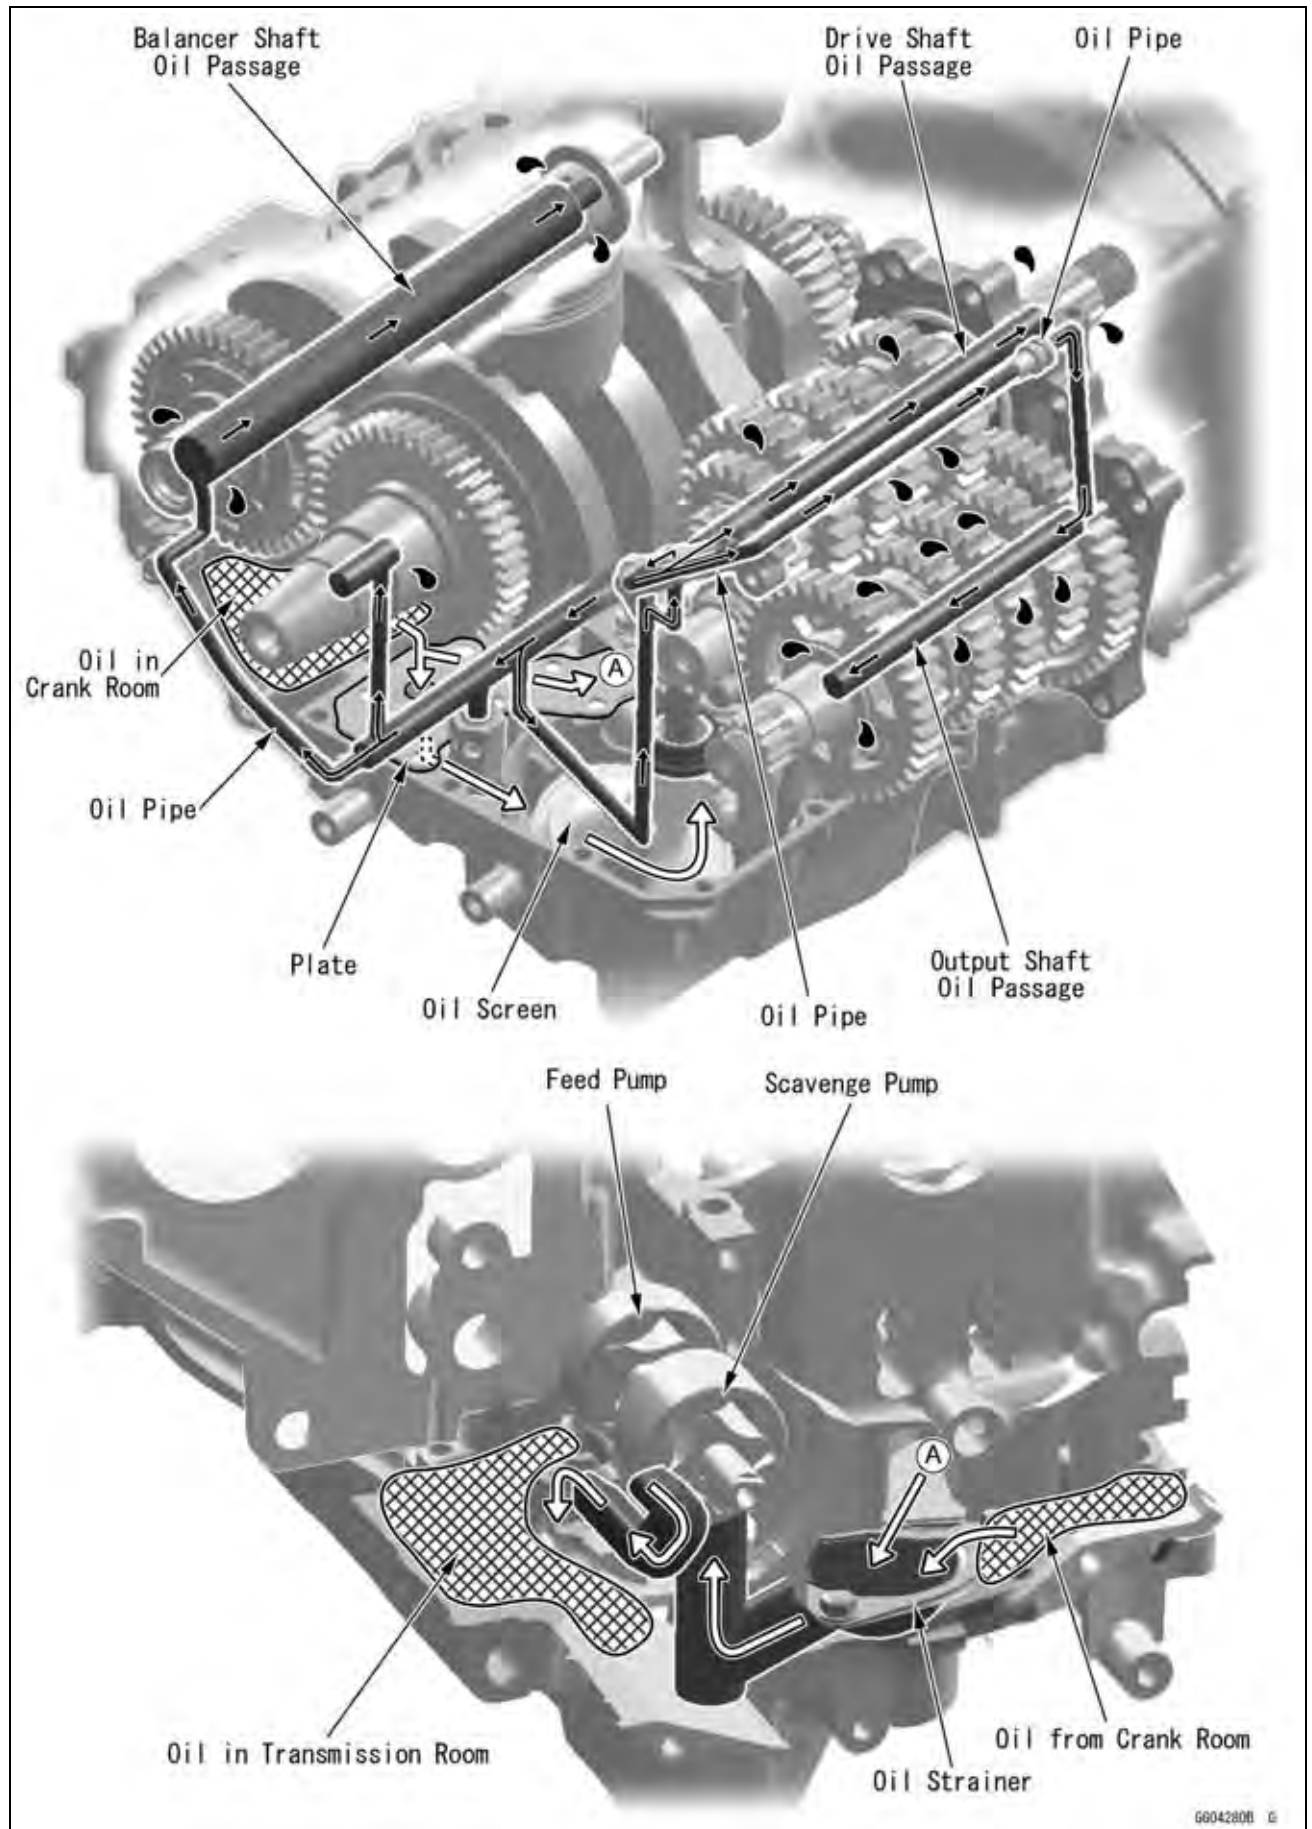


## 7-6 ENGINE LUBRICATION SYSTEM

### Specifications


Item	Standard
<b>Engine Oil</b> Type Viscosity Capacity  Level	API SG, SH, SJ, SL or SM with JASO MA, MA1 or MA2 SAE 10W-40 1.6 L (1.7 US qt) (When filter is not removed.) 1.8 L (1.9 US qt) (When filter is removed.) 2.3 L (2.4 US qt) (When engine is completely dry.) Between upper and lower level lines (Wait several minutes after idling or running)
<b>Oil Pressure Measurement</b> Oil Pressure	216 ~ 294 kPa (2.20 ~ 3.00 kgf/cm <sup>2</sup> , 31.3 ~ 42.6 psi) at 4 000 r/min (rpm), Oil Temperature 90°C (194°F)

**Special Tools and Sealant**


**Oil Pressure Gauge, 10 kgf/cm<sup>2</sup>:  
57001-164**

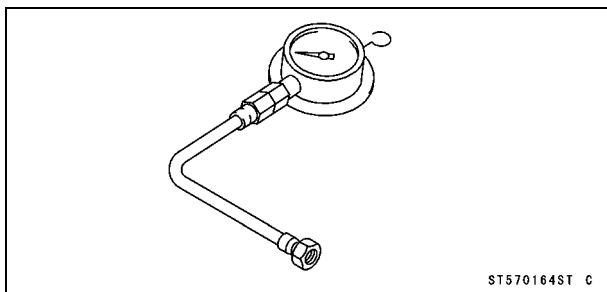

**Liquid Gasket, TB1211:  
56019-120**

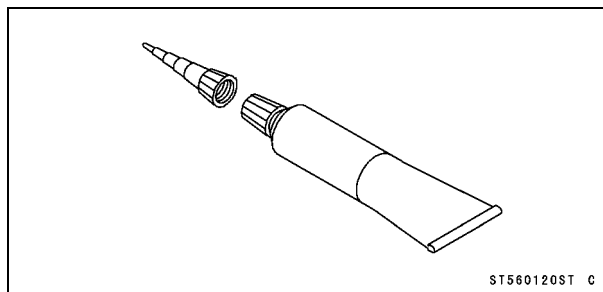

**Oil Pressure Gauge Adapter, PT3/8:  
57001-1233**

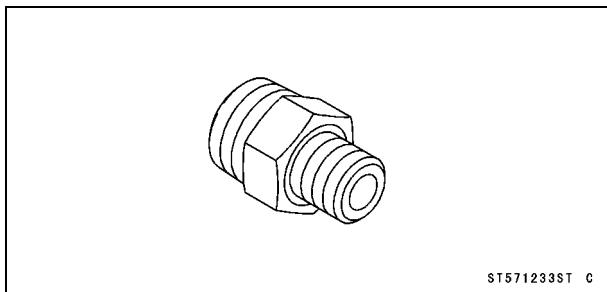

## 7-8 ENGINE LUBRICATION SYSTEM

### Engine Oil and Oil Filter

#### **⚠ WARNING**


Vehicle operation with insufficient, deteriorated, or contaminated engine oil will cause accelerated wear and may result in engine seizure, accident, and injury. Check the oil level before each use and change the oil and filter according to the periodic maintenance chart.

#### **Oil Level Inspection**

- Check that the engine oil level is between the upper [A] and lower [B] levels in the oil level inspection window.

#### **NOTE**

- Situate the motorcycle so that it is perpendicular to the ground.
- If the motorcycle has just been used, wait several minutes for all the oil to drain down.
- If the oil has just been changed, start the engine and run it for several minutes at idle speed. This fills the oil filter with oil. Stop the engine, then wait several minutes until the oil settles.

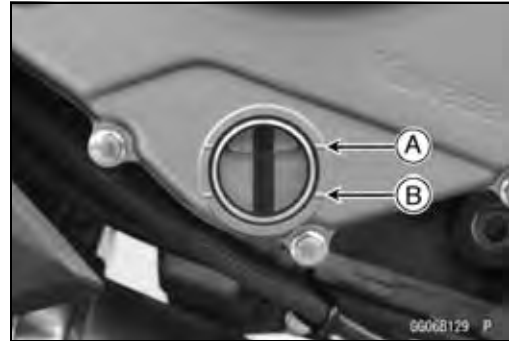

#### **NOTICE**

Racing the engine before the oil reaches every part can cause engine seizure.

If the engine oil gets extremely low or if the oil pump or oil passages clog up or otherwise do not function properly, the red warning indicator (LED) and oil pressure warning indicator will light. If it stays on when the engine is running above idle speed, stop the engine immediately and find the cause.

- ★ If the oil level is too high, remove the excess oil, using a syringe or some other suitable device.
- ★ If the oil level is too low, add the correct amount of oil through the oil filter opening. Use the same type and make of oil that is already in the engine.

#### **NOTE**

- If the engine oil type and make are unknown, use any brand of the specified oil to top off the level in preference to running the engine with the oil level low. Then at your earliest convenience, change the oil completely.

#### **Engine Oil Change**

- Refer to the Engine Oil Change in the Periodic Maintenance chapter.



#### **Oil Filter Replacement**

- Refer to the Oil Filter Replacement in the Periodic Maintenance chapter.


## Oil Pan

### Oil Pan Removal


- Drain the engine oil (see Engine Oil Change in the Periodic Maintenance chapter).
- Remove:
  - Muffler (see Muffler Removal in the Engine Top End chapter)
  - Oil Pan Bracket Bolts [A]
  - Clamp [B]
  - Oil Pan Brackets [C]
- Open the clamp [D].

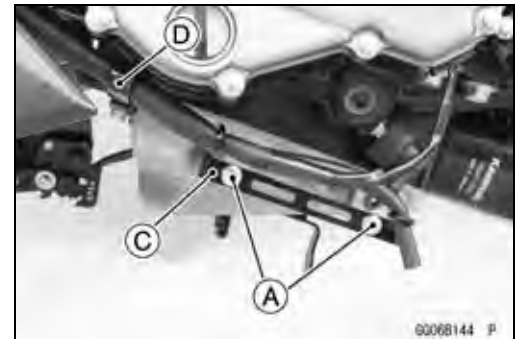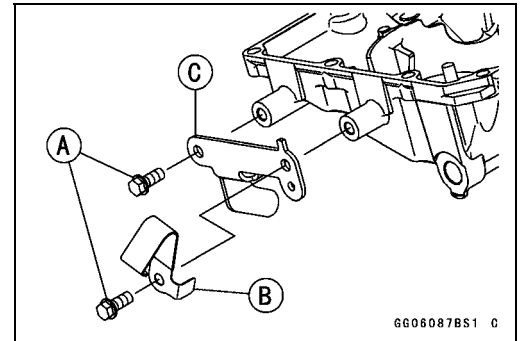

- Remove:
  - Oil Pan Bolts [A]
  - Clamp [B]
  - Oil Pan [C]

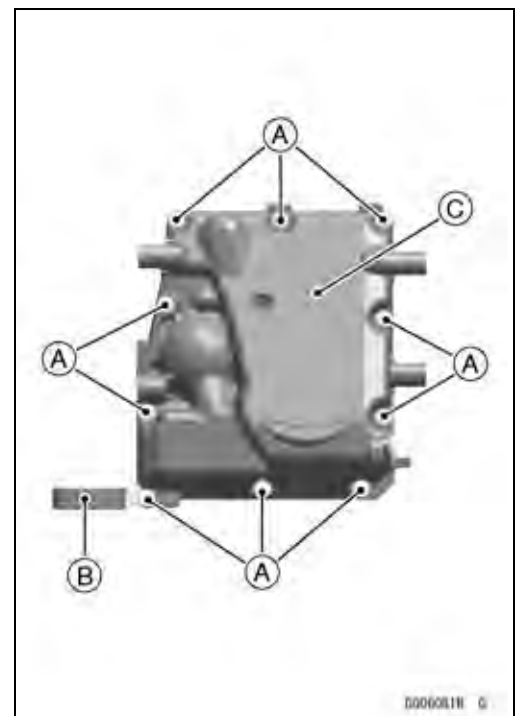


- Remove the following from the oil pan as necessary.
  - Oil Strainer Holder Bolts [A]
  - Oil Strainer Holder [B]
  - Oil Strainer [C]

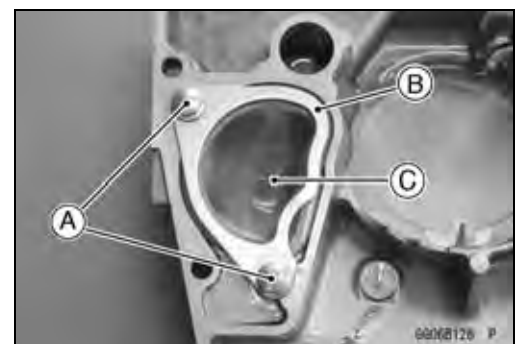

## 7-10 ENGINE LUBRICATION SYSTEM


### Oil Pan

- Remove the following from the lower crankcase half as necessary.
  - Oil Screen [A] (see Oil Screen Removal)
  - Oil Pipes [B] (see Oil Pipe Removal)
  - Oil Pressure Relief Valve [C] (see Oil Pressure Relief Valve Removal)

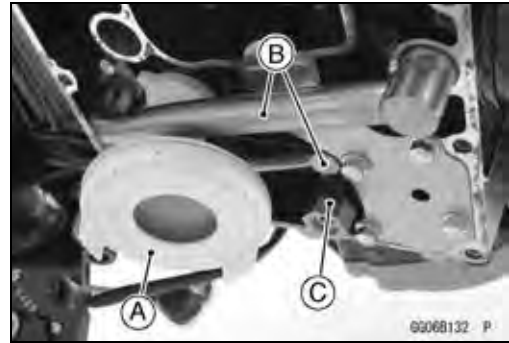


### Oil Pan Installation

- Install the following parts if remove.
  - Oil Pressure Relief Valve (see Oil Pressure Relief Valve Installation)
  - Oil Pipes (see Oil Pipe Installation)
  - Oil Screen (see Oil Screen Installation)
- Replace the oil pan gasket with a new one.
- When installing the oil pan, fit the damper [A] on the breather pipe into the hollow [B] of the oil pan.

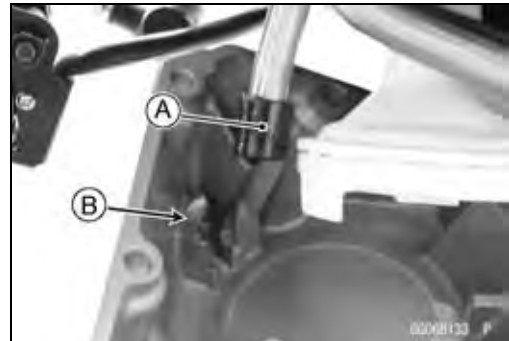

- Install the clamp [A].
- Tighten the oil pan bolts following the specified tightening sequence [1 ~ 12].

**Torque - Oil Pan Bolts: 12 N·m (1.2 kgf·m, 106 in·lb)**

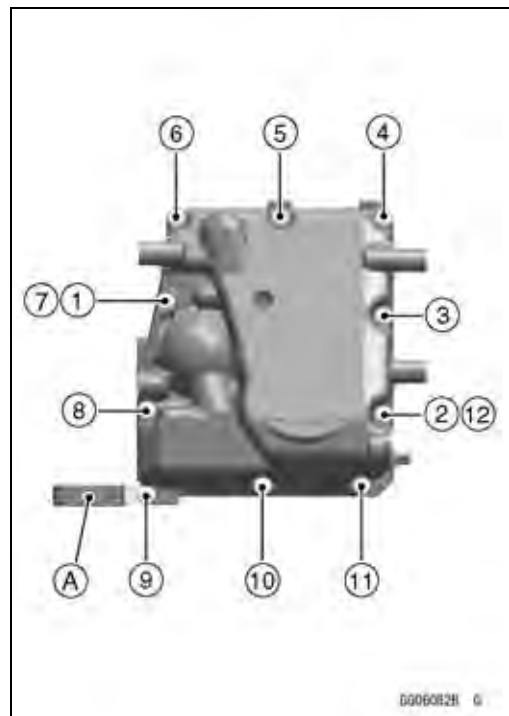


- Apply a non-permanent locking agent to the threads of the oil pan bracket bolts.
- Install the right oil pan bracket [A].
- Tighten the right oil pan bracket bolts following the specified tightening sequence [1 ~ 2].

**Torque - Oil Pan Bracket Bolts: 12 N·m (1.2 kgf·m, 106 in·lb)**



### Oil Pan

- Install:
  - Left Oil Pan Bracket [A]
  - Clamp [B]
- Tighten:
  - Torque - Oil Pan Bracket Bolts [C]: 12 N·m (1.2 kgf·m, 106 in·lb)**

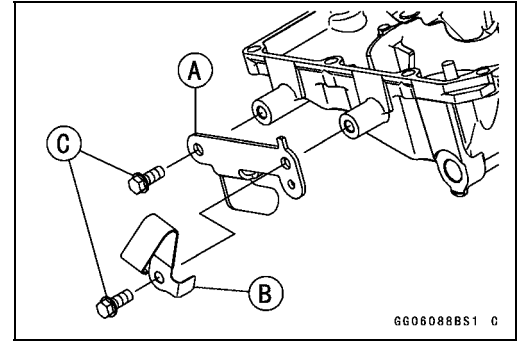

- Install the removed parts (see appropriate chapters).

## 7-12 ENGINE LUBRICATION SYSTEM

### Oil Screen


#### Oil Screen Removal

- Remove:
  - Oil Pan (see Oil Pan Removal)
  - Oil Screen [A]



#### Oil Screen Installation

- Clean the oil screen [A] (see Oil Screen Cleaning).
- Replace the O-ring [B] with a new one, and install it.
- Apply grease to the O-ring.
- Install the oil screen so that its guide portion [C] fits to the crankcase rib [D].
- Install:
  - Oil Pan (see Oil Pan Installation)

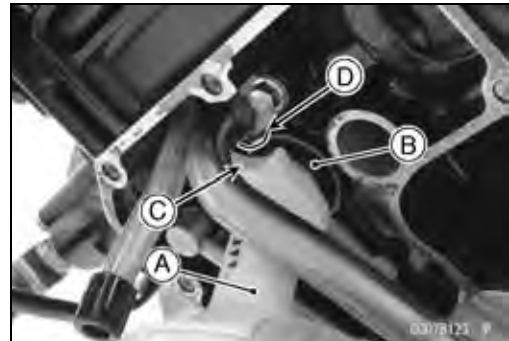

#### Oil Screen Cleaning

- Remove the oil screen (see Oil Screen Removal).
- Clean the oil screen with a high flash-point solvent and remove the particles stuck.
- Blow away the particles by applying compressed air [A] from the inside to the outside (from the clean side to the dirty side).



#### **⚠ WARNING**

**Gasoline and low flash-point solvents can be flammable and/or explosive and cause severe burns. Clean the screen in a well-ventilated area, and take care that there are no sparks or flame anywhere near the working area; this includes any appliance with a pilot light. Do not use gasoline or a low flash-point solvent to clean the screen.**

#### **NOTE**

○ *While cleaning the screen, check for any metal particles that might indicate internal engine damage.*

- Check the screens carefully for any damage.
- ★ If the screen is damaged, replace the oil screen.



## Oil Pressure Relief Valve

### Oil Pressure Relief Valve Removal

- Remove:
  - Oil Pan (see Oil Pan Removal)
  - Oil Pressure Relief Valve [A]



### Oil Pressure Relief Valve Installation

- Apply a non-permanent locking agent to the threads of the oil pressure relief valve, and tighten it.

#### NOTICE

Do not apply too much non-permanent locking agent to the threads. This may block the oil passage.

Torque - Oil Pressure Relief Valve: 15 N·m (1.5 kgf·m, 11 ft·lb)

- Install the oil pan (see Oil Pan Installation).

### Oil Pressure Relief Valve Inspection

- Remove the oil pressure relief valve (see Oil Pressure Relief Valve Removal).
- Check to see if the valve [A] slides smoothly when pushing it in with a wooden or other soft rod, and see if it comes back to its seat by spring [B] pressure.

#### NOTE


○ Inspect the valve in its assembled state. Disassembly and assembly may change the valve performance.

- ★ If any rough spots are found during above inspection, wash the valve clean with a high flash-point solvent and blow out any foreign particles that may be in the valve with compressed air.

#### ⚠ WARNING

Gasoline and low flash-point solvents can be flammable and/or explosive and cause severe burns. Clean the oil pressure relief valve in a well-ventilated area, and take care that there are no sparks or flame anywhere near the working area; this includes any appliance with a pilot light. Do not use gasoline or a low flash-point solvent to clean the oil pressure relief valve.

- ★ If cleaning does not solve the problem, replace the oil pressure relief valve as an assembly. The oil pressure relief valve is precision made with no allowance for replacement of individual parts.

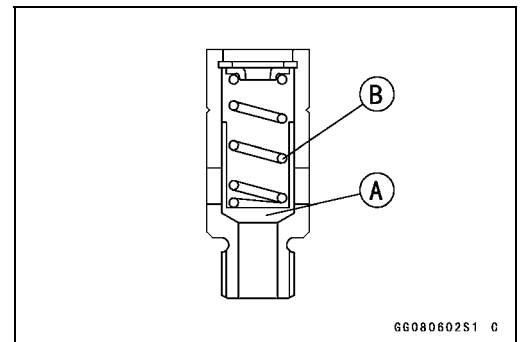

## 7-14 ENGINE LUBRICATION SYSTEM

### Oil Pumps

#### **Oil Pump Chain and Sprocket Removal**


- Refer to the Clutch Removal in the Clutch chapter.

#### **Oil Pump Chain and Sprocket Installation**


- Refer to the Clutch Installation in the Clutch chapter.

#### **Oil Pump Removal**

- Remove:
  - Clutch (see Clutch Removal in the Clutch chapter)
  - Oil Pump Chain Guide Bolts [A]
  - Oil Pump Chain Guide [B]

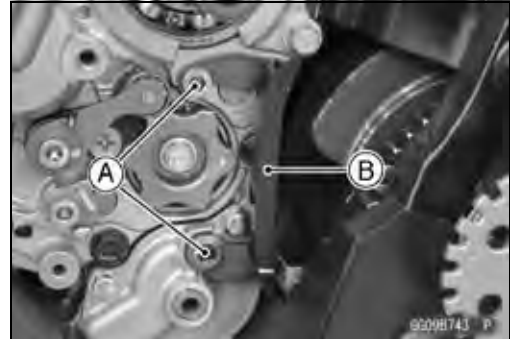

- Remove:
  - Oil Pump Cover Bolts [A]

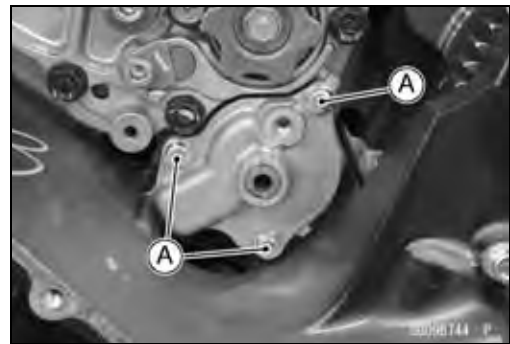

- Temporarily install the oil pump sprocket bolt [A].

#### **NOTE**

○ *The oil pump sprocket bolt has a left-hand threads.*

- Using the oil pump sprocket bolt, pull out the oil pump as a assembly.



- Remove the outer rotor [A] for feed pump.



## Oil Pumps

- Remove the oil pump cover [A].




- Remove:  
Inner Rotor [A] for Scavenge Pump  
Outer Rotor [B] for Scavenge Pump



- Remove the pin [A].



- Remove:  
Pin [A]  
Inner Rotor for Feed Pump [B]  
Oil Pump Shaft [C]

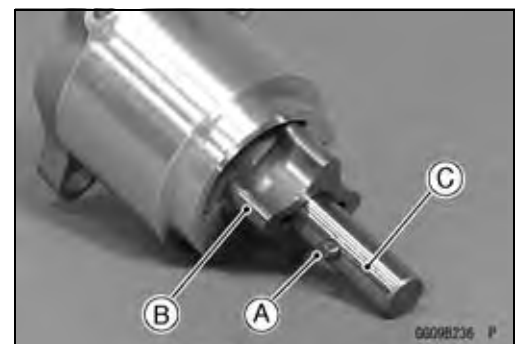

## 7-16 ENGINE LUBRICATION SYSTEM

### Oil Pumps

#### Oil Pump Installation

- Apply engine oil to the rotors.
- Apply molybdenum disulfide oil solution to the portion [A] of the oil pump shaft as shown.
- Assemble the following parts.
  - Oil Pump Shaft [B]
  - Pin [C]
  - Inner Rotor [D] for Feed Pump
  - Oil Pump Body [E]
  - Pin [F]
  - Inner Rotor [G] for Scavenge Pump
  - Outer Rotor [H] for Scavenge Pump

#### NOTE

○ The scavenge pump rotors are wider than the feed pump rotors.





- Install:
  - Dowel Pin [A]
  - Outer Rotor [B] for Feed Pump
- Fit the pin of the crankcase into the hole [C] in the oil pump body.
- Turn the oil pump shaft so that the inner rotor [D] fits into the outer rotor.

- Fit the pin [A] into the hole [B] on the oil pump cover [C].

- Apply a non-permanent locking agent to the oil pump cover bolts [1 ~ 3] and tighten them temporarily (Do not seated).
- Push [A] the arrow portion of the oil pump cover to left until it stopped.
- Tighten the oil pump cover bolts following the specified tightening sequence [1 ~ 3].


**Torque - Oil Pump Cover Bolts: 9.8 N·m (1.0 kgf·m, 87 in·lb)**

- Check whether the oil pump turns smoothly.

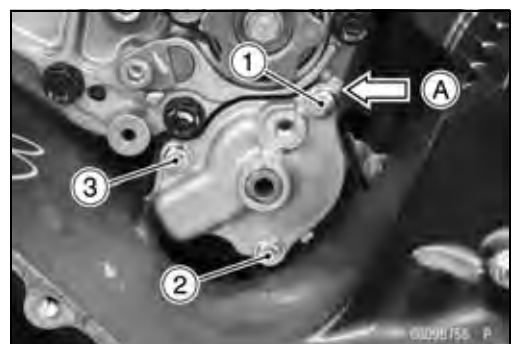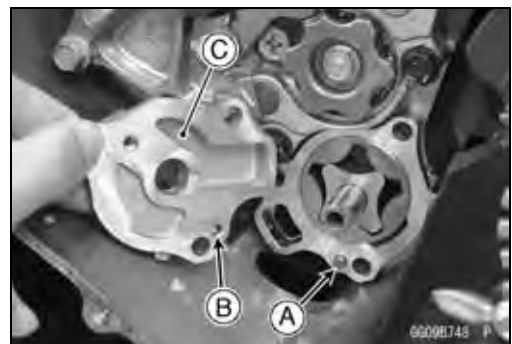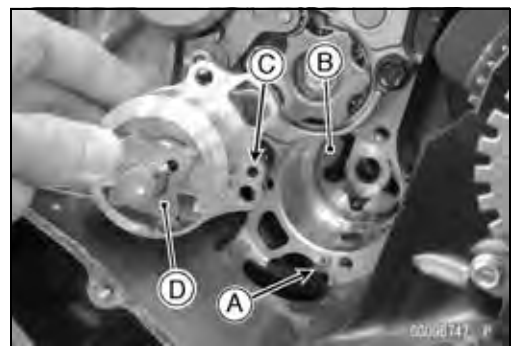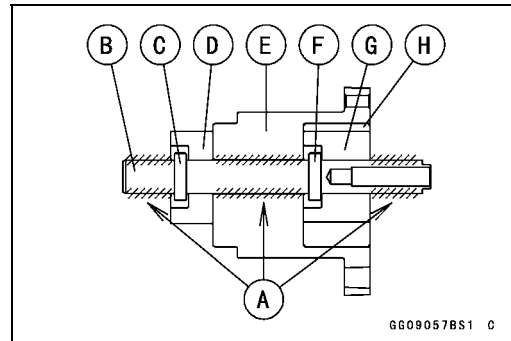

### Oil Pumps

- Apply a non-permanent locking agent to the oil pump chain guide bolt, L = 12 mm (0.47 in.) [A].
- Install the oil pump chain guide [B].
- Tighten:
  - Torque - Oil Pump Chain Guide Bolt, L = 12 mm (0.47 in.):**  
**12 N·m (1.2 kgf·m, 106 in·lb)**
  - Oil Pump Chain Guide Bolt, L = 11 mm (0.43 in.)**  
**[C]: 12 N·m (1.2 kgf·m, 106 in·lb)**
- Install the clutch (see Clutch Installation in the Clutch chapter).

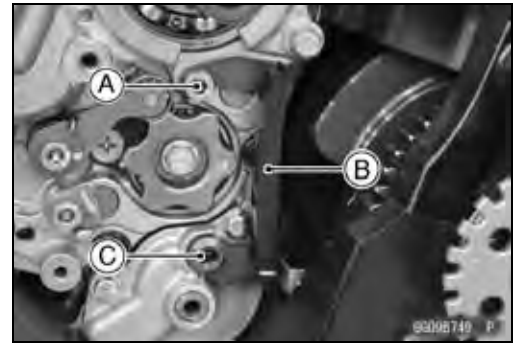


## 7-18 ENGINE LUBRICATION SYSTEM

### Oil Pressure Measurement


#### Oil Pressure Measurement

- Remove the oil passage plug (PT 3/8) [A].

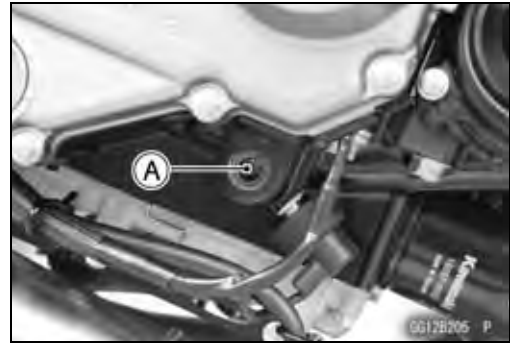

- Attach the adapter [A] and gauge [B] to the plug hole.

**Special Tools - Oil Pressure Gauge, 10 kgf/cm<sup>2</sup>: 57001-164**  
**Oil Pressure Gauge Adapter, PT3/8: 57001-1233**

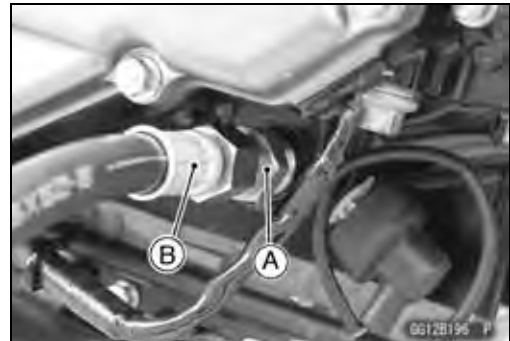

- Start the engine and warm up the engine.
- Run the engine at the specified speed, and read the oil pressure gauge [A].
- ★ If the oil pressure is much lower than the standard, check the oil pump, relief valve, and/or crankshaft bearing insert wear immediately.
- ★ If the reading is much higher than the standard, check the oil passages for clogging.

#### Oil Pressure

**Standard: 216 ~ 294 kPa (2.20 ~ 3.00 kgf/cm<sup>2</sup>, 31.3 ~ 42.6 psi) at 4 000 r/min (rpm), Oil Temperature 90°C (194°F)**

- Stop the engine.
- Remove the oil pressure gauge and adapter.



#### **⚠ WARNING**

**Hot oil can cause severe burns. Beware of hot engine oil that will drain through the oil passage when the gauge adapter is removed.**


- Apply a non-permanent locking agent to the oil passage plug, and install it.

**Torque - Oil Passage Plug (PT3/8): 20 N·m (2.0 kgf·m, 15 ft·lb)**

## Oil Pressure Switch

### Oil Pressure Switch Removal

- Drain the engine oil (see Engine Oil Change in the Periodic Maintenance chapter).
- Remove:
  - Switch Cover [A]
  - Switch Terminal Bolt [B]
  - Oil Pressure Switch [C]

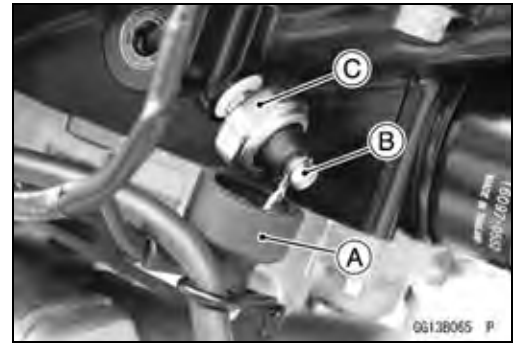


### Oil Pressure Switch Installation

- Using a high flash-point solvent, clean off any oil or dirt that may be on the liquid gasket coating area. Dry them with a clean cloth.
- Apply liquid gasket to the threads of the oil pressure switch and tighten it.

**Sealant - Liquid Gasket, TB1211: 56019-120**


**Torque - Oil Pressure Switch: 15 N·m (1.5 kgf·m, 11 ft·lb)**

- Install the switch lead so that its direction is downward [A].
- Apply grease to the terminal, and tighten the terminal bolt securely.

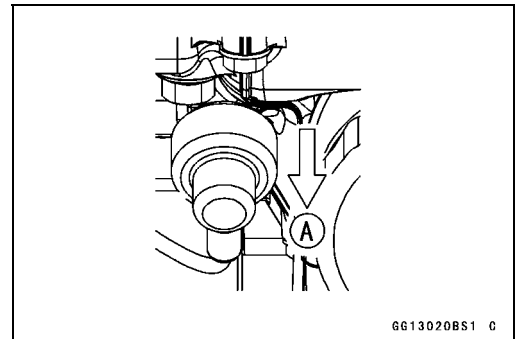

### NOTE

- Apply a small amount grease to the terminal so that grease should not close two breather holes [A] for switch diaphragm.

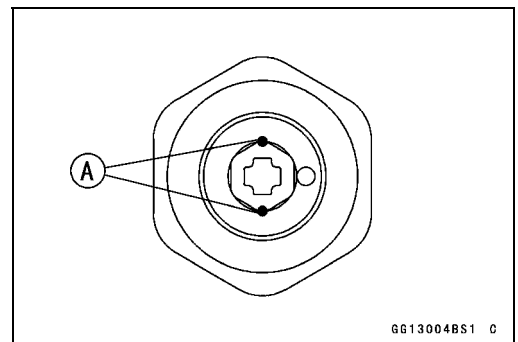


## 7-20 ENGINE LUBRICATION SYSTEM

### Oil Pipes


#### **Oil Pipe Removal**

- Remove:
  - Oil Pan (see Oil Pan Removal)
  - Oil Screen (see Oil Screen Removal)
  - Oil Pipe Retaining Plate Bolt [A]
  - Oil Pipe Retaining Plate [B]
  - Oil Pipes [C]

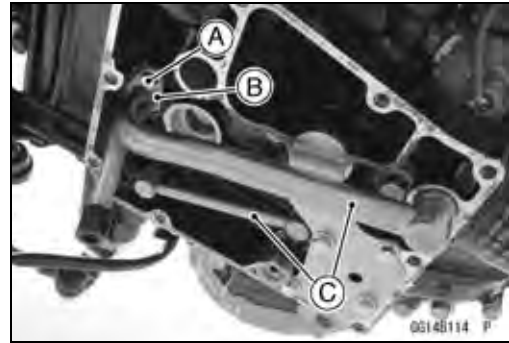

#### **Oil Pipe Installation**

- Replace the O-rings with new ones.
- Apply grease to the O-rings on the oil pipes [A].
- Apply a non-permanent locking agent to the oil pipe retaining plate bolt [B].
- Install:
  - Oil Pipes
  - Oil Pipe Retaining Plate [C]
- Tighten:
  - Torque - Oil Pipe Retaining Plate Bolt: 9.8 N·m (1.0 kgf·m, 87 in·lb)**
- Install the removed parts (see appropriate chapters).

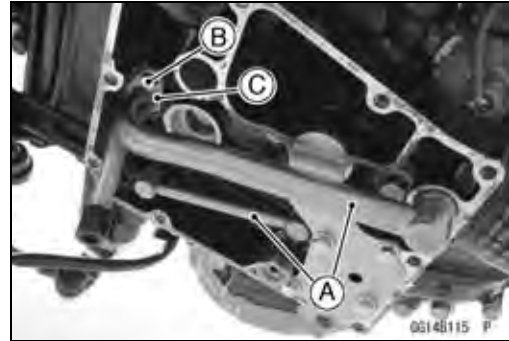




# Engine Removal/Installation

## Table of Contents

Exploded View.....	8-2
Special Tool .....	8-4
Engine Removal/Installation .....	8-5
Engine Removal.....	8-5
Engine Installation.....	8-8

# 8-2 ENGINE REMOVAL/INSTALLATION

## Exploded View

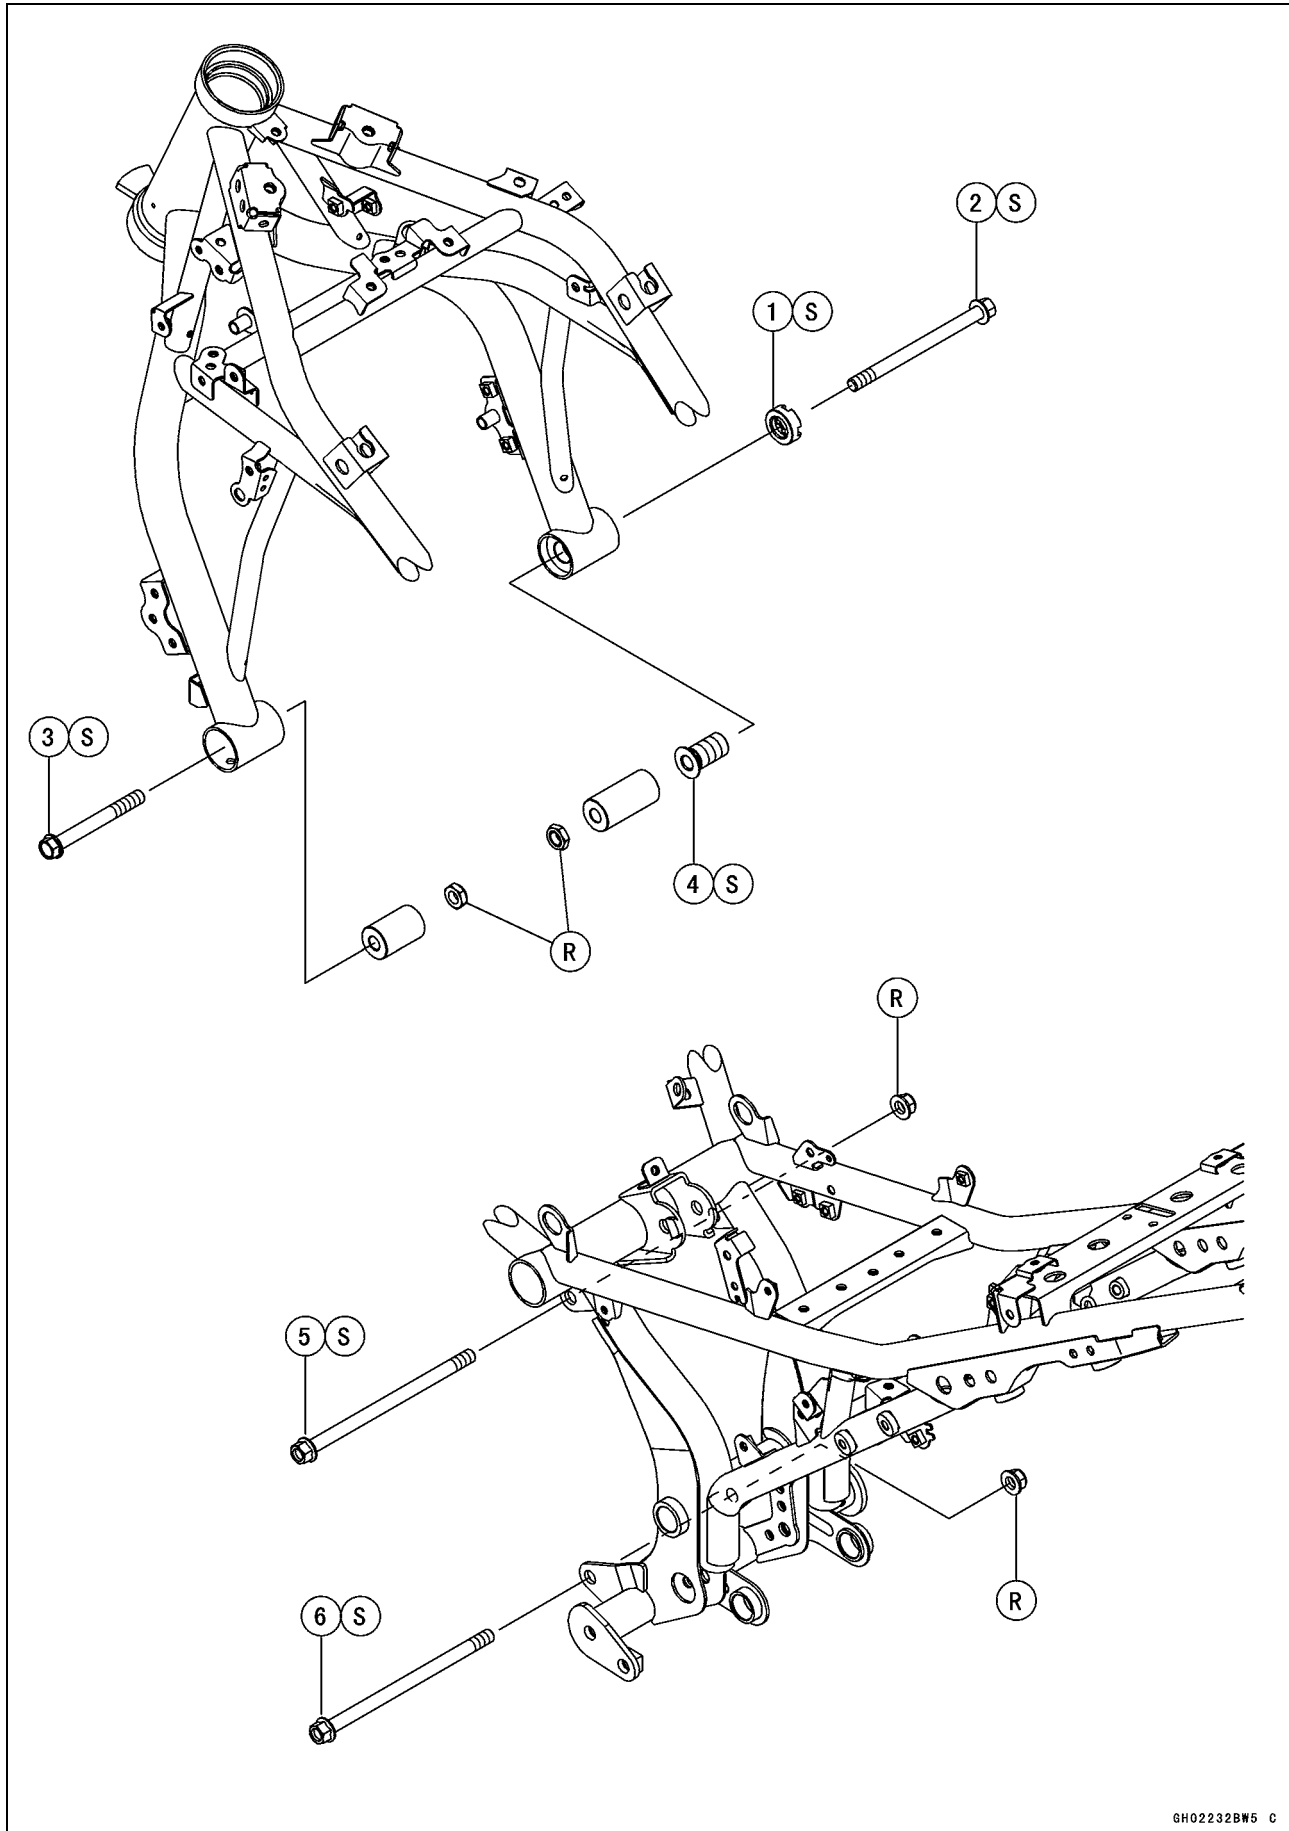

## ENGINE REMOVAL/INSTALLATION 8-3

### Exploded View

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Adjusting Collar Locknut	49	5.0	36	S
2	Right Front Engine Mounting Bolt	44	4.5	32	S
3	Left Front Engine Mounting Bolt	44	4.5	32	S
4	Adjusting Collar	1.5	0.15	13 in·lb	S
5	Upper Engine Mounting Bolt	44	4.5	32	S
6	Lower Engine Mounting Bolt	44	4.5	32	S

R: Replacement Parts

S: Follow the specified tightening sequence.

## 8-4 ENGINE REMOVAL/INSTALLATION


---

### Special Tool

---

Engine Mount Nut Wrench:

57001-1450

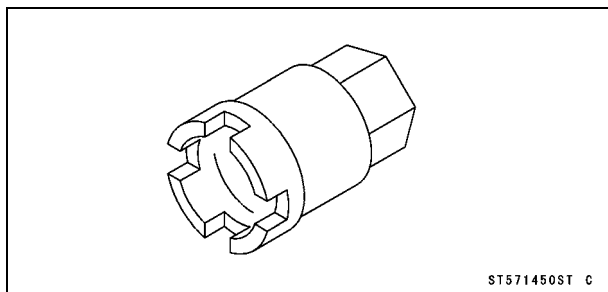

## Engine Removal/Installation

### Engine Removal

- Support the rear part of the swingarm with a stand.
- Squeeze the brake lever slowly and hold it with a band [A].

#### **⚠ WARNING**


**Motorcycle may fall over unexpectedly resulting in an accident or injury. Be sure to hold the front brake when removing the engine.**



#### **NOTICE**

**Be sure to hold the front brake when removing the engine, or the motorcycle may fall over. The engine or the motorcycle could be damaged.**


- Drain:
  - Engine Oil (see Engine Oil Change in the Periodic Maintenance chapter)
  - Coolant (see Coolant Change in the Periodic Maintenance chapter)
- Remove:
  - Right Frame Cover (see Frame Cover Removal in the Frame chapter)
  - Throttle Body Assy (see Throttle Body Assy Removal in the Fuel System (DFI) chapter)
  - Air Switching Valve (see Air Switching Valve Removal in the Fuel System (DFI) chapter)
  - Radiator (see Radiator and Radiator Fan Removal in the Cooling System chapter)
  - Engine Sprocket (see Engine Sprocket Removal in the Final Drive chapter)
  - Shift Pedal (see Shift Pedal Removal in the Crankshaft/Transmission chapter)
  - Muffler (see Muffler Removal in the Engine Top End chapter)
  - Clutch Cable Lower End (see Clutch Cable Removal in the Clutch chapter)
- Disconnect the stick coil lead connectors [A].
- Open the clamp [B].

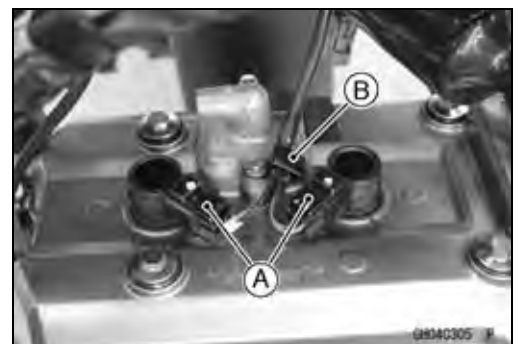


## 8-6 ENGINE REMOVAL/INSTALLATION

### Engine Removal/Installation


- Disconnect the crankshaft sensor/oil pressure switch lead connector [A].
- Open the clamp [B].

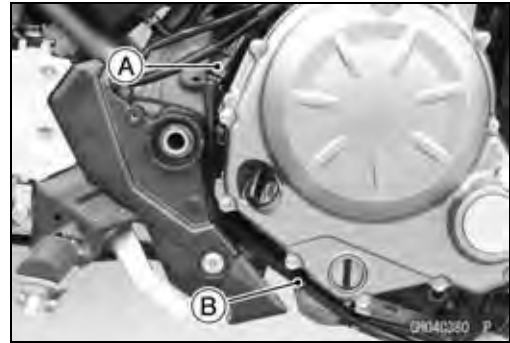


- Remove the engine ground terminal bolt [A].
- Slide the dust cover [B].
- Remove the starter motor cable terminal nut [C].
- Disconnect the water temperature sensor lead connector [D].

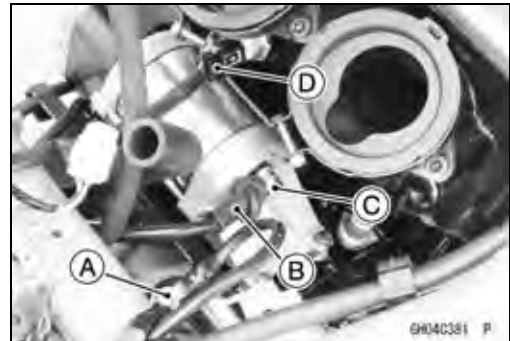

- Disconnect:
  - Alternator Lead Connector [A]
  - Gear Position Sensor Lead Connector [B]

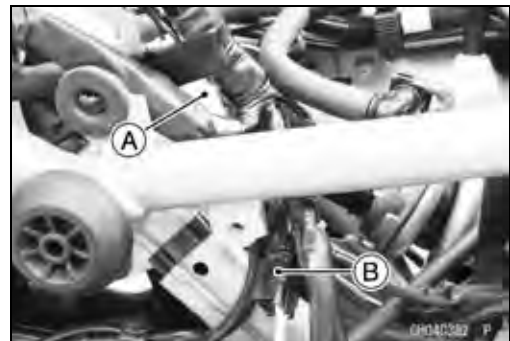


- Clear the drive chain [A] from the output shaft [B].
- Remove the clamp [C].
- Open the clamps [D].

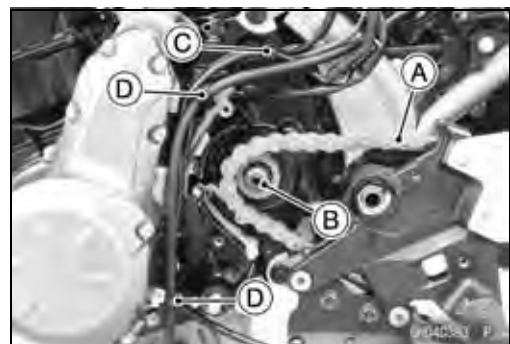


## Engine Removal/Installation

- Remove:
  - Oil pan Bracket Bolts [A]
  - Clamp [B]
  - Oil Pan Bracket [C]

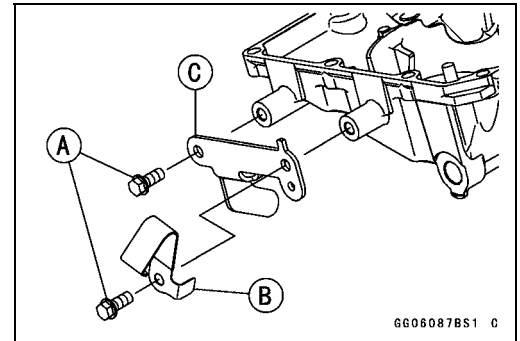


- Support the engine with a suitable stand [A].
- Put a plank [B] onto the suitable stand for engine balance.

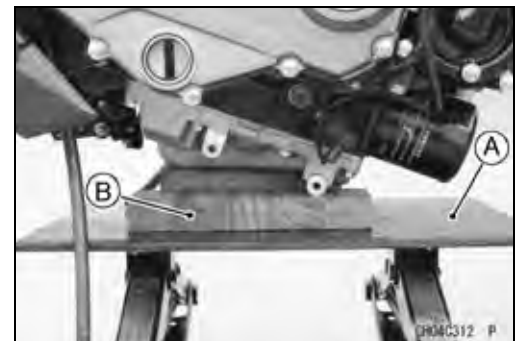

- Remove the left front engine mounting bolt [A] and nut.




- Using the engine mount nut wrench [A], loosen the adjusting collar locknut [B].
- Special Tool - Engine Mount Nut Wrench: 57001-1450**

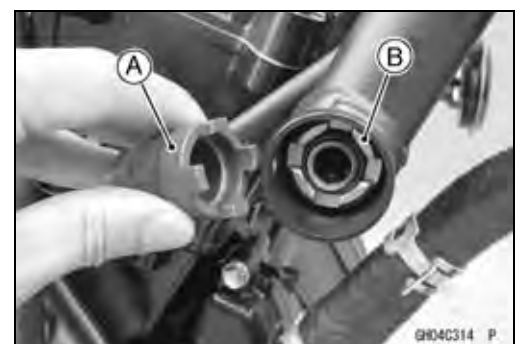


## 8-8 ENGINE REMOVAL/INSTALLATION

### Engine Removal/Installation

- Using the Allen wrench, turn the adjusting collar [A] counterclockwise.
- Remove the collar [B].

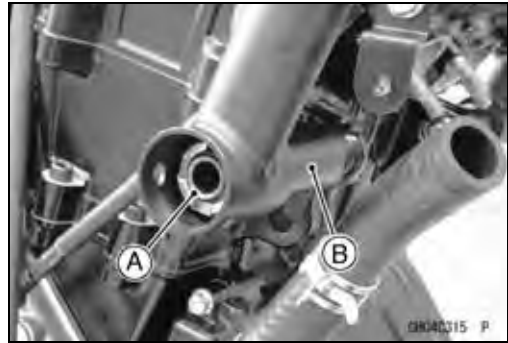


- Remove:  
Right Front Engine Mounting Bolt [A] and Nut Collar

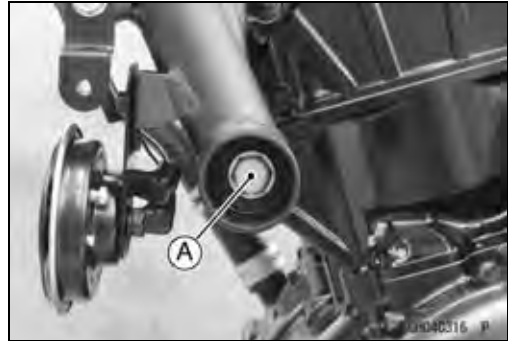

- Remove the upper engine mounting bolt and nut [A].



- Remove the lower engine mounting bolt and nut [A].
- Using the suitable stand, take out the engine.

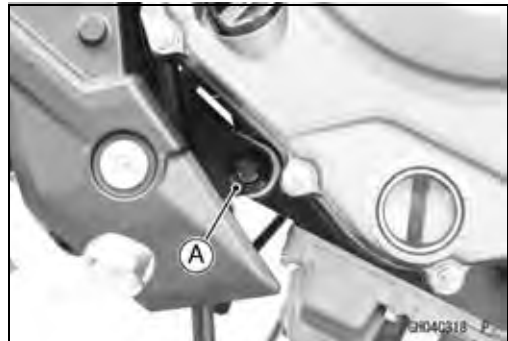

### **Engine Installation**

- Replace the engine mounting nuts with new ones.
- Install the adjusting collar to the frame until end of the threads.
- Support the engine with a suitable stand.
- Put a plank onto the suitable stand for engine balance.



---

**Engine Removal/Installation**

---

This page intentionally left blank.

## 8-10 ENGINE REMOVAL/INSTALLATION


---

### Engine Removal/Installation

---

- Install the engine mounting bolts and nuts, following the specified installing sequence.
- First, install the engine to the frame by inserting the engine mounting bolts [A].
- Second, temporarily tighten the lower engine mounting nut [B].
- Third, temporarily tighten the upper engine mounting nut [C].
- Fourth, temporarily install the left front engine mounting bolt [D], collar [E] and nut [F].
- Fifth, temporarily install the right front engine mounting bolt [G] and collar [H].
- Sixth, by the following specified sequence, tighten the bolts.
  - Torque - Lower Engine Mounting Bolt: 44 N·m (4.5 kgf·m, 32 ft·lb)**
  - Upper Engine Mounting Bolt: 44 N·m (4.5 kgf·m, 32 ft·lb)**
  - Left Front Engine Mounting Bolt: 44 N·m (4.5 kgf·m, 32 ft·lb)**
- Seventh, remove the right front engine mounting bolt.
- Eighth, tighten the adjusting collar [I].
  - Torque - Adjusting Collar: 1.5 N·m (0.15 kgf·m, 13 in·lb)**
- Ninth, tighten the adjusting collar locknut [J].
  - Special Tool - Engine Mount Nut Wrench: 57001-1450**
  - Torque - Adjusting Collar Locknut: 49 N·m (5.0 kgf·m, 36 ft·lb)**
- Tenth, install the nut [K] and tighten the bolt.
  - Torque - Right Front Engine Mounting Bolt: 44 N·m (4.5 kgf·m, 32 ft·lb)**

## Engine Removal/Installation

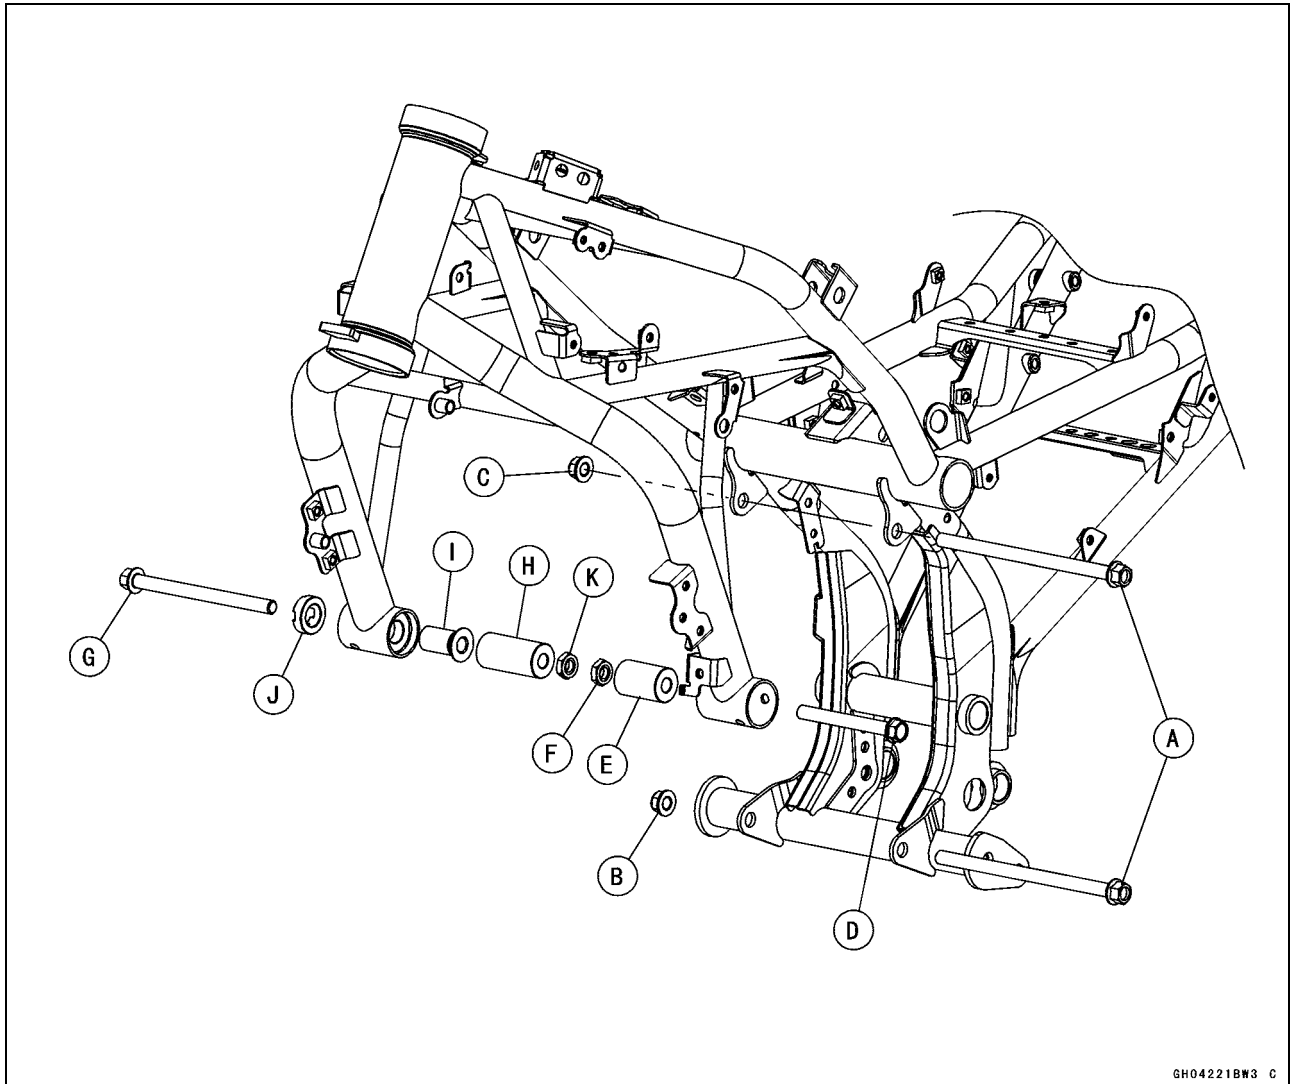

GH04221BW3 C

- Run the leads, cables, and hoses correctly (see Cable, Wire, and Hose Routing section in the Appendix chapter).
- Install the removed parts (see appropriate chapters).
- Adjust:
  - Throttle Cables (see Throttle Control System Inspection in the Periodic Maintenance chapter)
  - Clutch Cable (see Clutch Operation Inspection in the Periodic Maintenance chapter)
  - Drive Chain (see Drive Chain Slack Adjustment in the Periodic Maintenance chapter)
- Fill the engine with engine oil (see Engine Oil Change in the Periodic Maintenance chapter).
- Fill the engine with coolant and bleed the air from the cooling system (see Coolant Change in the Periodic Maintenance chapter).
- Adjust the idling (see Idle Speed Adjustment in the Periodic Maintenance chapter).






# Crankshaft/Transmission

## Table of Contents

Exploded View.....	9-2	External Shift Mechanism.....	9-35
Specifications .....	9-6	Shift Pedal Removal .....	9-35
Special Tools and Sealants .....	9-9	Shift Pedal Installation .....	9-35
Crankcase Splitting.....	9-10	External Shift Mechanism Removal.....	9-36
Crankcase Splitting .....	9-10	External Shift Mechanism Installation.....	9-37
Crankcase Assembly .....	9-12	External Shift Mechanism Inspection.....	9-38
Crankshaft and Connecting Rods.....	9-21	Transmission .....	9-40
Crankshaft Removal .....	9-21	Transmission Assy Removal.....	9-40
Crankshaft Installation .....	9-21	Transmission Assy Installation.....	9-41
Connecting Rod Removal.....	9-21	Transmission Assy Disassembly .	9-42
Connecting Rod Installation.....	9-22	Transmission Assy Assembly .....	9-42
Crankshaft/Connecting Rod Cleaning.....	9-25	Transmission Shaft Removal .....	9-44
Connecting Rod Bend Inspection	9-26	Transmission Shaft Installation ...	9-44
Connecting Rod Twist Inspection.	9-26	Transmission Shaft Disassembly .	9-45
Connecting Rod Big End Side Clearance Inspection .....	9-26	Transmission Shaft Assembly.....	9-45
Connecting Rod Big End Bearing Insert/Crankpin Wear Inspection.....	9-27	Shift Drum and Fork Removal.....	9-48
Crankshaft Side Clearance Inspection.....	9-28	Shift Drum and Fork Installation...	9-48
Crankshaft Runout Inspection.....	9-29	Shift Drum Disassembly.....	9-48
Crankshaft Main Bearing Insert/Journal Wear Inspection .	9-29	Shift Drum Assembly .....	9-48
Balancer .....	9-31	Shift Fork Bending Inspection .....	9-48
Balancer Removal.....	9-31	Shift Fork/Gear Groove Wear Inspection.....	9-48
Balancer Installation.....	9-31	Shift Fork Guide Pin/Drum Groove Wear Inspection .....	9-48
Balancer Shaft Bearing Insert/Journal Wear Inspection .	9-31	Gear Dog and Gear Dog Hole Damage Inspection .....	9-49
Starter Motor Clutch .....	9-34	Ball Bearing, Needle Bearing, and Oil Seal.....	9-50
Starter Motor Clutch Removal/Installation.....	9-34	Ball and Needle Bearing Replacement.....	9-50
Starter Motor Clutch Inspection ...	9-34	Ball and Needle Bearing Wear Inspection.....	9-50
Starter Motor Clutch Disassembly	9-34	Oil Seal Inspection.....	9-50
Starter Motor Clutch Assembly ....	9-34		

# 9-2 CRANKSHAFT/TRANSMISSION

## Exploded View

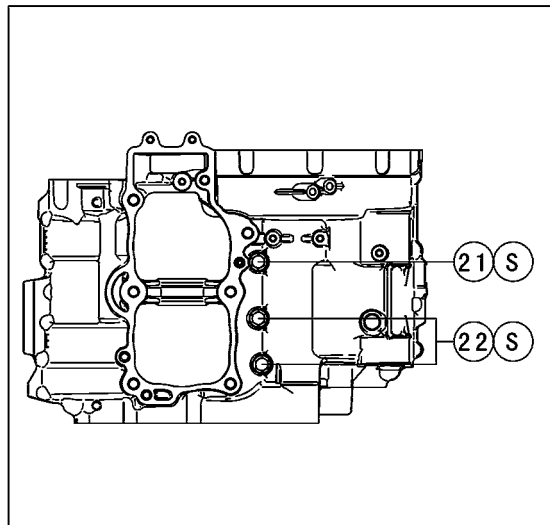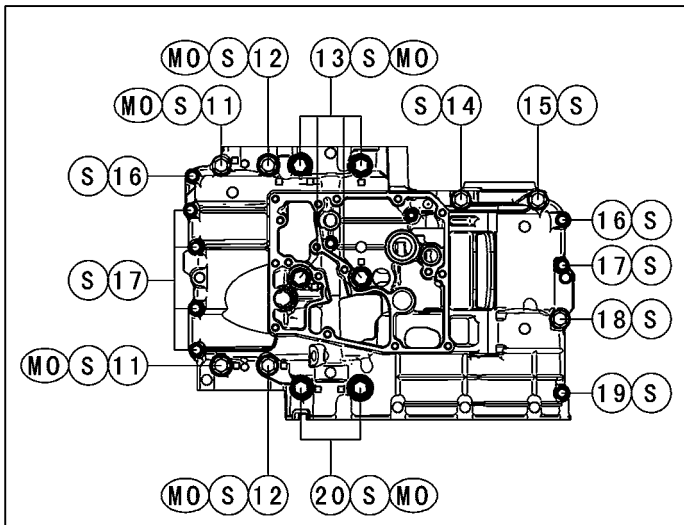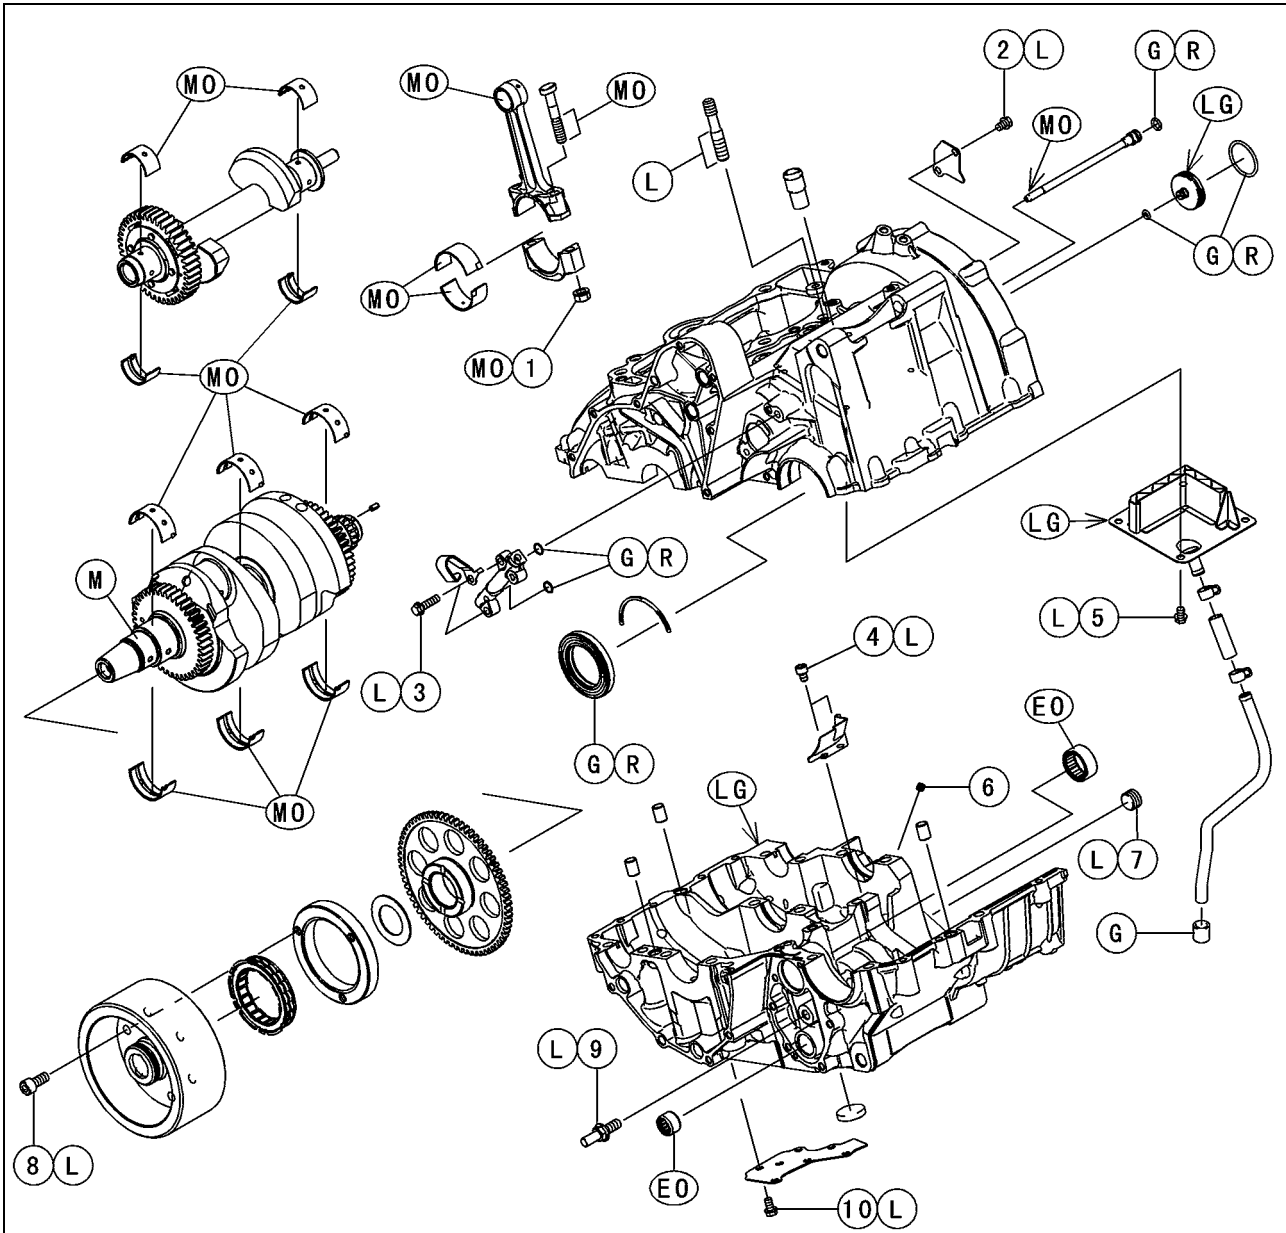

**Exploded View**

No.	Fastener	Torque			Remarks
		N-m	kgf-m	ft-lb	
1	Connecting Rod Big End Nuts	see the text	–	–	MO
2	Side Oil Plate Bolts	9.8	1.0	87 in-lb	L
3	Oil Pipe Bolts	9.8	1.0	87 in-lb	L
4	Middle Oil Plate Bolts	9.8	1.0	87 in-lb	L
5	Breather Plate Bolts	9.8	1.0	87 in-lb	L
6	Oil Passage Plug (M6)	3.5	0.36	31 in-lb	
7	Oil Passage Plug (PT3/8)	20	2.0	15	L
8	Starter Motor Clutch Bolts	34	3.5	25	L
9	Shift Shaft Return Spring Pin	29	3.0	21	L
10	Bottom Oil Plate Bolts	9.8	1.0	87 in-lb	L
11	Crankcase Bolts (M8), L = 60 mm (2.4 in.)	see text	–	–	MO, S
12	Crankcase Bolts (M8), L = 73 mm (2.9 in.)	see text	–	–	MO, S
13	Crankcase Bolts (M9), L = 113 mm (4.45 in.)	see text	–	–	MO, S
14	Crankcase Bolt (M8), L = 110 mm (4.33 in.)	27.4	2.79	20.2	S
15	Crankcase Bolt (M8, Rear), L = 60 mm (2.4 in.)	27.4	2.79	20.2	S
16	Crankcase Bolts (M6), L = 45 mm (1.8 in.)	19.6	2.00	14.5	S
17	Crankcase Bolts (M6), L = 38 mm (1.5 in.)	19.6	2.00	14.5	S
18	Crankcase Bolt (M8), L = 50 mm (2.0 in.)	27.4	2.79	20.2	S
19	Crankcase Bolt (M6), L = 32 mm (1.3 in.)	19.6	2.00	14.5	S
20	Crankcase Bolts (M9), L = 83 mm (3.3 in.)	see text	–	–	MO, S
21	Upper Crankcase Bolt (M8), L = 120 mm (4.72 in.)	27.5	2.80	20.3	S
22	Upper Crankcase Bolts (M8), L = 110 mm (4.33 in.)	27.5	2.80	20.3	S

EO: Apply engine oil.

G: Apply grease.

L: Apply a non-permanent locking agent.

LG: Apply liquid gasket.

M: Apply molybdenum disulfide grease.

MO: Apply molybdenum disulfide oil solution.


(mixture of the engine oil and molybdenum disulfide grease in a weight ratio 10:1)

R: Replacement Parts

S: Follow the specified tightening sequence.

# 9-4 CRANKSHAFT/TRANSMISSION

## Exploded View

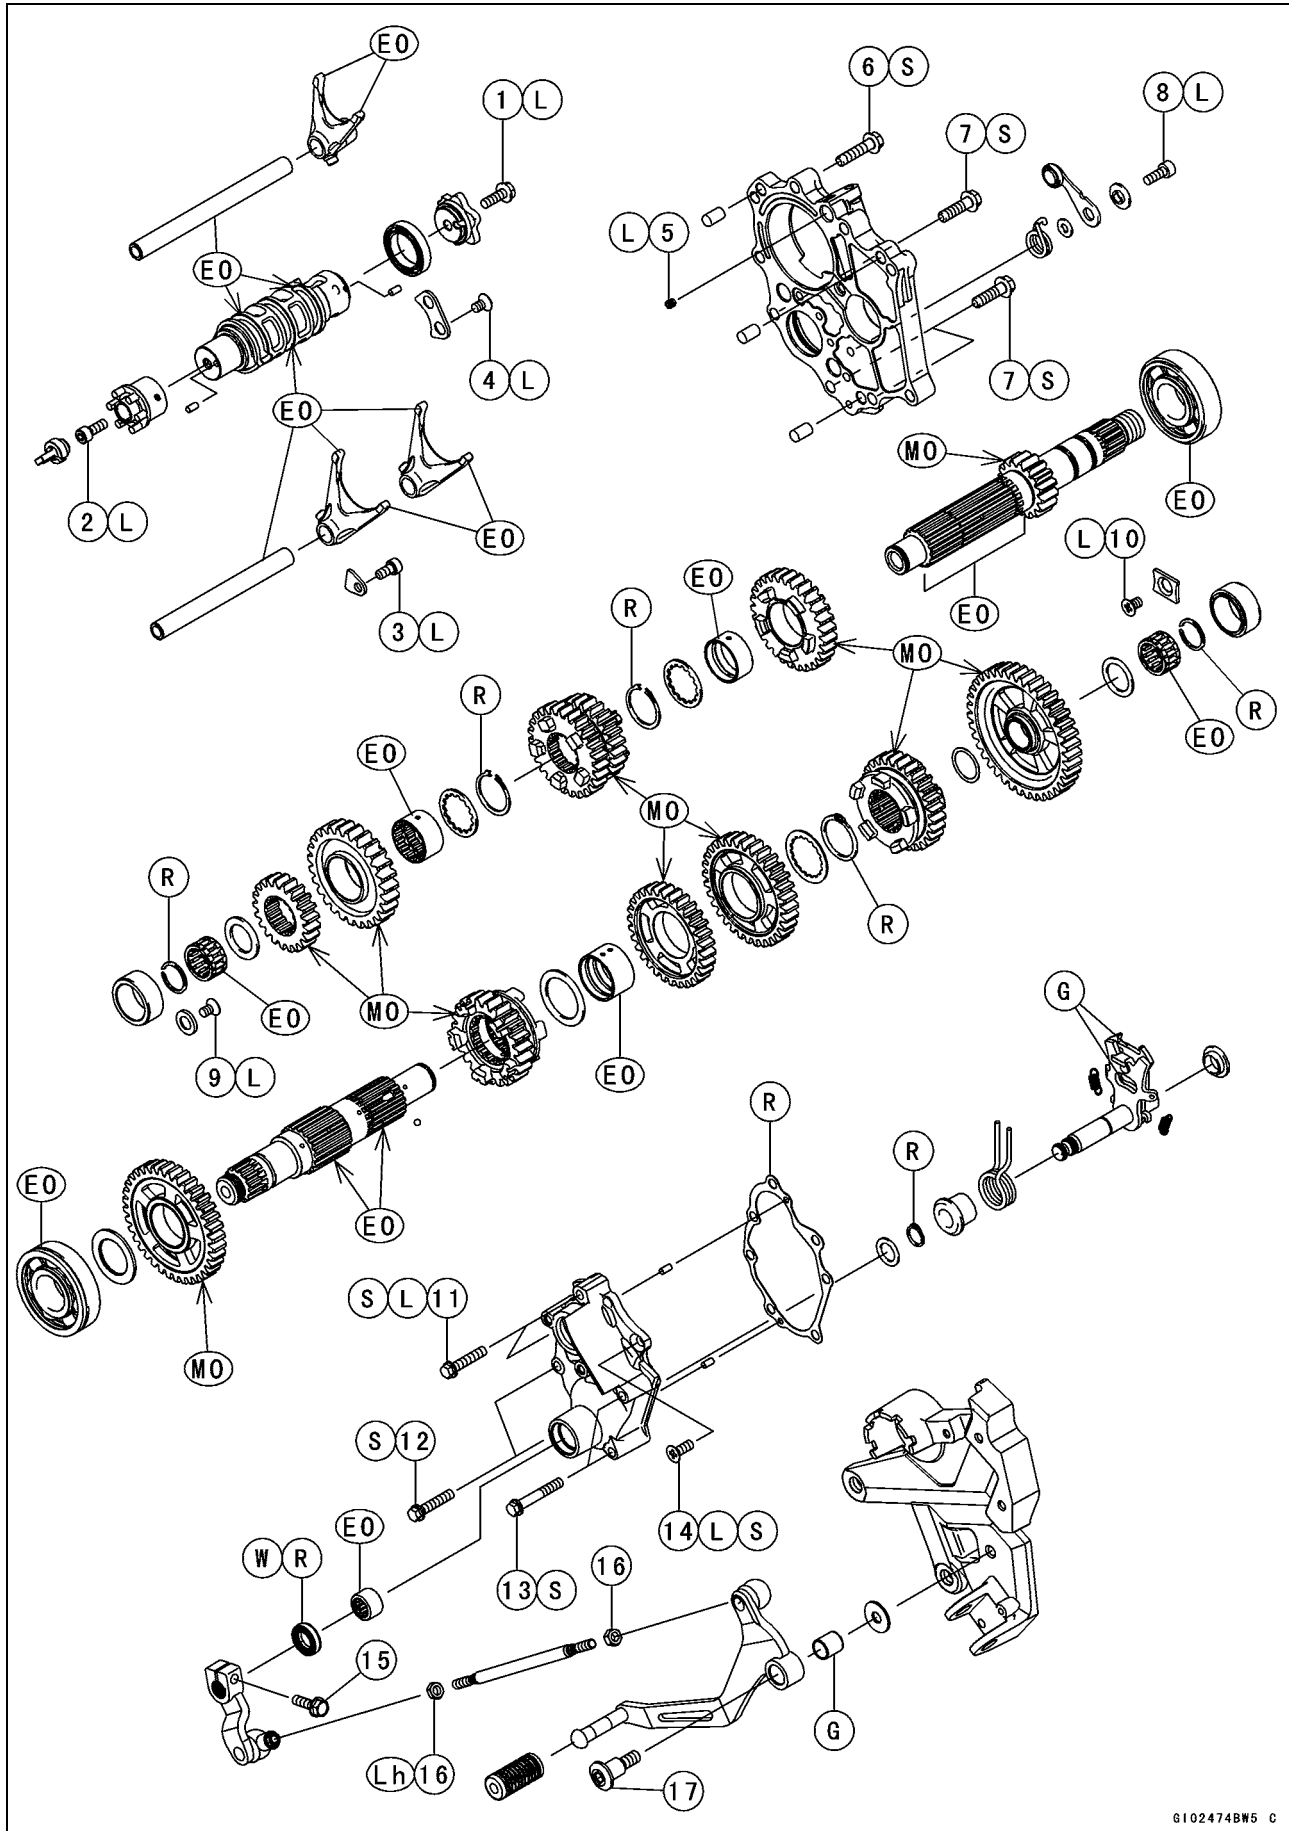



**CRANKSHAFT/TRANSMISSION 9-5****Exploded View**

No.	Fastener	Torque			Remarks
		N-m	kgf-m	ft-lb	
1	Shift Drum Cam Holder Bolt	12	1.2	106 in lb	L
2	Shift Drum Holder Bolt	12	1.2	106 in lb	L
3	Shift Rod Retaining Plate Bolt	9.8	1.0	87 in lb	L
4	Shift Drum Bearing Holder Screws	4.9	0.50	43 in lb	L
5	Nozzle	2.9	0.30	26 in lb	L
6	Transmission Case Bolts, L = 30 mm (1.2 in.)	20	2.0	15	S
7	Transmission Case Bolts, L = 26 mm (1.0 in.)	20	2.0	15	S
8	Gear Positioning Lever Bolt	12	1.2	106 in lb	L
9	Race Holder Screw	4.9	0.50	43 in lb	L
10	Drive Shaft Bearing Holder Screw	4.9	0.50	43 in lb	L
11	Shift Shaft Cover Bolts, L = 30 mm (1.2 in.)	9.8	1.0	87 in lb	L, S
12	Shift Shaft Cover Bolts, L = 30 mm (1.2 in.)	12	1.2	106 in lb	S
13	Shift Shaft Cover Bolts, L = 40 mm (1.6 in.)	12	1.2	106 in lb	S
14	Shift Shaft Cover Screw	4.9	0.50	43 in lb	L, S
15	Shift Lever Bolt	12	1.2	106 in lb	
16	Shift Lever Tie-rod Locknuts	9.8	1.0	87 in lb	Lh(1)
17	Shift Pedal Bolt	25	2.5	18	

EO: Apply engine oil.

G: Apply grease.

L: Apply a non-permanent locking agent.

Lh: Left-hand Threads

MO: Apply molybdenum disulfide oil solution.

(mixture of the engine oil and molybdenum disulfide grease in a weight ratio 10:1)

R: Replacement Parts

S: Follow the specified tightening sequence.

W: Apply water.

## 9-6 CRANKSHAFT/TRANSMISSION

### Specifications

Item	Standard	Service Limit
<b>Crankcase, Crankshaft/Connecting Rods</b>		
Connecting Rod Bend	— — —	TIR 0.2/100mm (0.008/3.94 in.)
Connecting Rod Twist	— — —	TIR 0.2/100mm (0.008/3.94 in.)
Connecting Rod Big End Side Clearance	0.13 ~ 0.38 mm (0.0051 ~ 0.0150 in.)	0.6 mm (0.02 in.)
Connecting Rod Big End Bearing Insert/Crankpin Clearance	0.017 ~ 0.041 mm (0.0007 ~ 0.0016 in.)	0.08 mm (0.003 in.)
Crankpin Diameter:	37.984 ~ 38.000 mm (1.4954 ~ 1.4961 in.)	37.97 mm (1.495 in.)
Marking:		
None	37.984 ~ 37.992 mm (1.4954 ~ 1.4958 in.)	— — —
○	37.993 ~ 38.000 mm (1.49578 ~ 1.4961 in.)	— — —
Connecting Rod Big End Inside Diameter:	41.000 ~ 41.016 mm (1.6142 ~ 1.6148 in.)	— — —
Marking:		
None	41.000 ~ 41.008 mm (1.6142 ~ 1.61448 in.)	— — —
○	41.009 ~ 41.016 mm (1.61452 ~ 1.6148 in.)	— — —
Connecting Rod Big End Bearing Insert Thickness:		
Brown	1.475 ~ 1.480 mm (0.05807 ~ 0.05827 in.)	— — —
Black	1.480 ~ 1.485 mm (0.05827 ~ 0.05846 in.)	— — —
Blue	1.485 ~ 1.490 mm (0.05846 ~ 0.05866 in.)	— — —
Connecting Rod Bolt Stretch		
New Connecting Rod	0.20 ~ 0.32 mm (0.0079 ~ 0.0126 in.)	— — —
Used Connecting Rod	0.24 ~ 0.36 mm (0.0094 ~ 0.0142 in.)	— — —
Crankshaft Side Clearance	0.05 ~ 0.20 mm (0.0020 ~ 0.0079 in.)	0.40 mm (0.0157 in.)
Crankshaft Runout	TIR 0.02 mm (0.0008 in.) or less	TIR 0.05 mm (0.002 in.)
Crankshaft Main Bearing Insert/Journal Clearance	0.016 ~ 0.040 mm (0.0006 ~ 0.0016 in.)	0.07 mm (0.0028 in.)

## CRANKSHAFT/TRANSMISSION 9-7

### Specifications

Item	Standard	Service Limit
Crankshaft Main Journal Diameter	37.984 ~ 38.000 mm (1.4954 ~ 1.4961 in.)	37.96 mm (1.4945 in.)
Marking:		
None	37.984 ~ 37.992 mm (1.4954 ~ 1.49575 in.)	— — —
1	37.993 ~ 38.000 mm (1.49578 ~ 1.4961 in.)	— — —
Crankcase Main Bearing Inside Diameter:	41.000 ~ 41.016 mm (1.6142 ~ 1.6148 in.)	— — —
Marking:		
○	41.000 ~ 41.008 mm (1.6142 ~ 1.61448 in.)	— — —
None	41.009 ~ 41.016 mm (1.61452 ~ 1.6148 in.)	— — —
Crankshaft Main Bearing Insert Thickness:		
Brown	1.490 ~ 1.494 mm (0.05866 ~ 0.05882 in.)	— — —
Black	1.494 ~ 1.498 mm (0.05882 ~ 0.05898 in.)	— — —
Blue	1.498 ~ 1.502 mm (0.05898 ~ 0.05913 in.)	— — —
<b>Balancer Shaft</b>		
Balancer Shaft Bearing Insert/Journal Clearance	0.011 ~ 0.033 mm (0.0004 ~ 0.0013 in.)	0.06 mm (0.002 in.)
Balancer Shaft Journal Diameter:	27.987 ~ 28.000 mm (1.1018 ~ 1.1024 in.)	27.96 mm (1.1008 in.)
Marking:		
None	27.987 ~ 27.993 mm (1.1018 ~ 1.10208 in.)	— — —
○	27.994 ~ 28.000 mm (1.10212 ~ 1.1024 in.)	— — —
Balancer Shaft Bearing Inside Diameter:	31.000 ~ 31.016 mm (1.2205 ~ 1.2211 in.)	— — —
Marking:		
○	31.000 ~ 31.008 mm (1.2205 ~ 1.22078 in.)	— — —
None	31.009 ~ 31.016 mm (1.22082 ~ 1.2211 in.)	— — —
Balancer Shaft Bearing Insert Thickness:		
Brown	1.490 ~ 1.494 mm (0.05866 ~ 0.05882 in.)	— — —
Black	1.494 ~ 1.498 mm (0.05882 ~ 0.05898 in.)	— — —
Blue	1.498 ~ 1.502 mm (0.05898 ~ 0.05913 in.)	— — —
<b>Transmission</b>		
Shift Fork Ear Thickness	5.9 ~ 6.0 mm (0.23 ~ 0.24 in.)	5.8 mm (0.23 in.)

## 9-8 CRANKSHAFT/TRANSMISSION

### Specifications

Item	Standard	Service Limit
Transmission Gear Groove Width	6.05 ~ 6.15 mm (0.238 ~ 0.242 in.)	6.3 mm (0.25 in.)
Shift Fork Guide Pin Diameter	6.9 ~ 7.0 mm (0.27 ~ 0.28 in.)	6.8 mm (0.27 in.)
Shift Drum Groove Width	7.05 ~ 7.20 mm (0.278 ~ 0.283 in.)	7.3 mm (0.29 in.)

### Connecting Rod Big End Bearing Insert Selection

Connecting Rod Big End Inside Diameter Marking	Crankpin Diameter Marking	Bearing Insert	
		Size Color	Part Number
None	○	Brown	92139-0116
○	○	Black	92139-0115
None	None		
○	None	Blue	92139-0114

### Crankshaft Main Bearing Insert Selection

Crankcase Main Bearing Inside Diameter Marking	Crankshaft Main Journal Diameter Marking	Bearing Insert*	
		Size Color	Part Number
○	1	Brown	92028-1905
○	None	Black	92028-1904
None	1		
None	None	Blue	92028-1903

\*: The crankshaft main bearing inserts have an oil groove.


### Balancer Shaft Bearing Insert Selection

Balancer Shaft Bearing Inside Diameter Marking	Balancer Shaft Journal Diameter Marking	Bearing Insert*	
		Size Color	Part Number
○	○	Brown	92139-0119
○	None	Black	92139-0118
None	○		
None	None	Blue	92139-0117


\*: The balancer shaft bearing inserts have an oil groove.

**Special Tools and Sealants**


**Outside Circlip Pliers:**  
**57001-144**

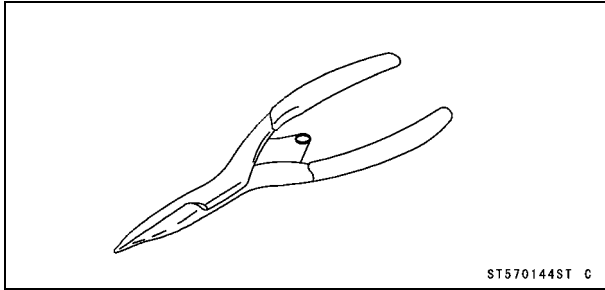


**Liquid Gasket, TB1211F:**  
**92104-0004**

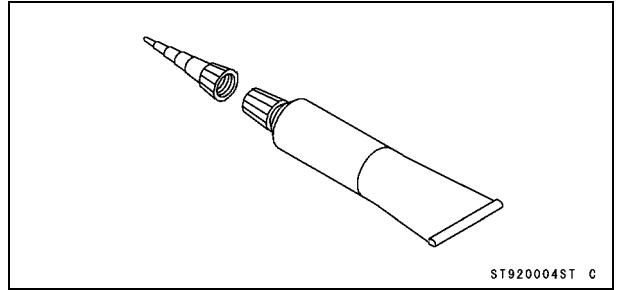


**Bearing Driver Set:**  
**57001-1129**

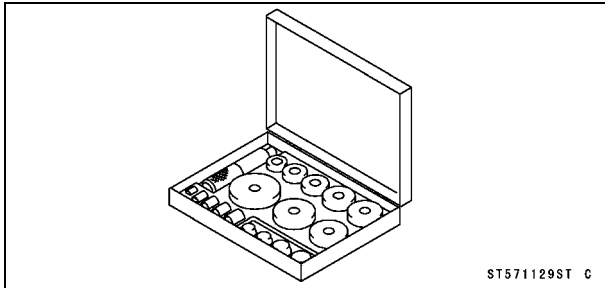


**Liquid Gasket, TB1216B:**  
**92104-1064**

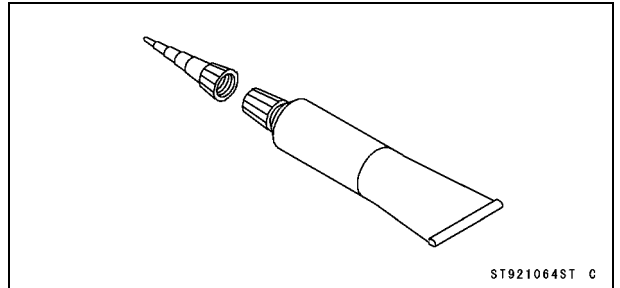

**Flywheel Holder:**  
**57001-1313**

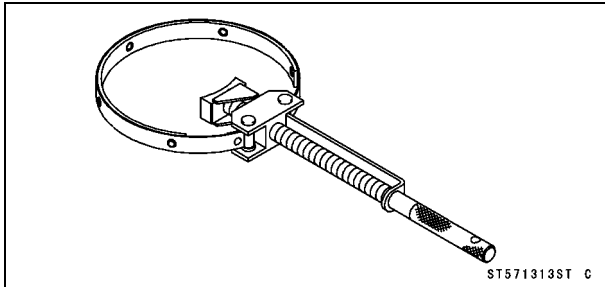

**Liquid Gasket, TB1207B:**  
**92104-2068**

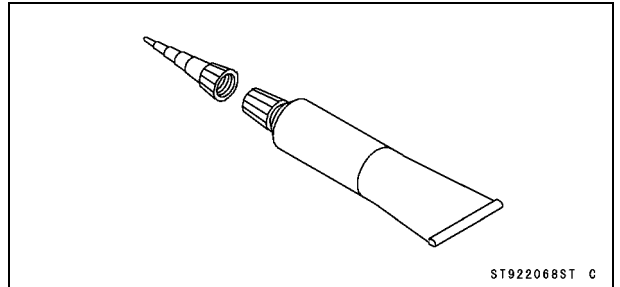


## 9-10 CRANKSHAFT/TRANSMISSION

### Crankcase Splitting

---


#### ***Crankcase Splitting***

- Remove the engine (see Engine Removal in the Engine Removal/Installation chapter).
- Set the engine on a clean surface and hold the engine steady while parts are being removed.
- Remove:
  - Cylinder Head (see Cylinder Head Removal in the Engine Top End chapter)
  - Cylinder (see Cylinder Removal in the Engine Top End chapter)
  - Pistons (see Piston Removal in the Engine Top End chapter)
  - Alternator Rotor (see Alternator Rotor Removal in the Electrical System chapter)
  - Starter Motor (see Starter Motor Removal in the Electrical System chapter)
  - Crankshaft Sensor (see Crankshaft Sensor Removal in the Electrical System chapter)
  - Timing Rotor (see Timing Rotor Removal in the Electrical System chapter)
  - Clutch (see Clutch Removal in the Clutch chapter)
  - Water Pump (see Water Pump Removal in the Cooling System chapter)
  - Transmission Assy (see Transmission Assy Removal)
- ★ If the rear camshaft chain guide is to be removed, follow the next procedure.
- Remove:
  - Rear Camshaft Chain Guide Bolt [A]
  - Rear Camshaft Chain Guide [B] and Collars

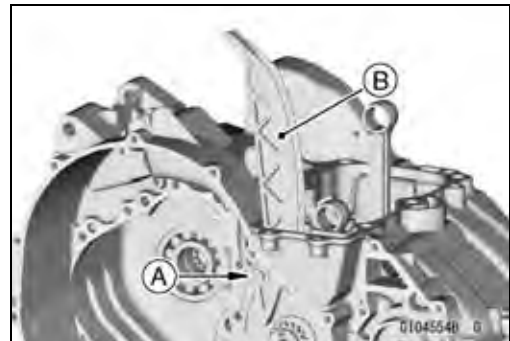

## Crankcase Splitting

- Remove the upper crankcase bolts [A] and the washers.

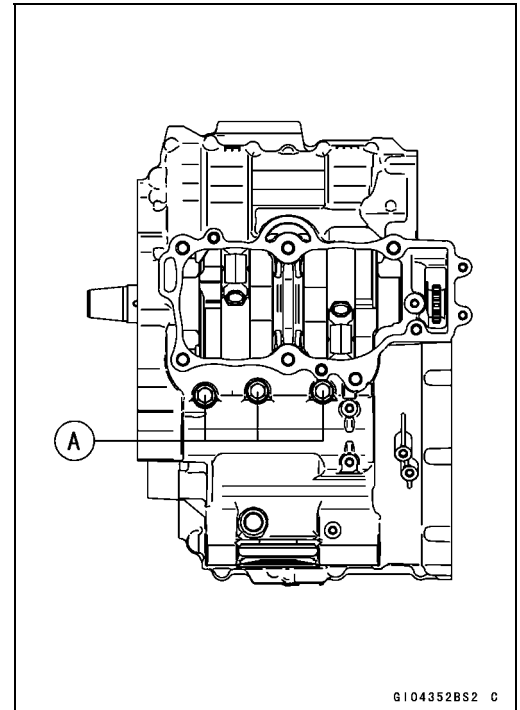


- Remove:
  - Oil Filter (see Oil Filter Replacement in the Periodic Maintenance chapter)
  - Oil Pan (see Oil Pan Removal in the Engine Lubrication System chapter)
  - Oil Screen (see Oil Screen Removal in the Engine Lubrication System chapter)
  - Oil Pipes (see Oil Pipe Removal in the Engine Lubrication System chapter)

- Remove the lower crankcase bolts, following the specified sequence.

- Firstly, loosen the M6 bolts [A].
- Secondly, loosen the M8 bolts [B].
- Lastly, loosen the M9 bolts [C].


- Tap lightly around the crankcase mating surface with a plastic mallet, and split the crankcase.

- Take care not to damage the crankcase.

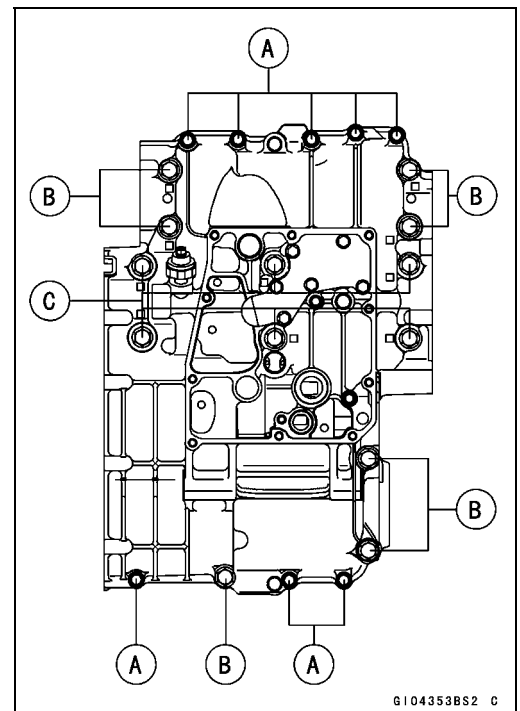

- ★ If the oil pipe is to be removed, follow the next procedures.


- Remove:
  - Oil Pipe Bolts [A]
  - Clamp [B]
  - Oil Pipe [C]
  - O-rings [D]

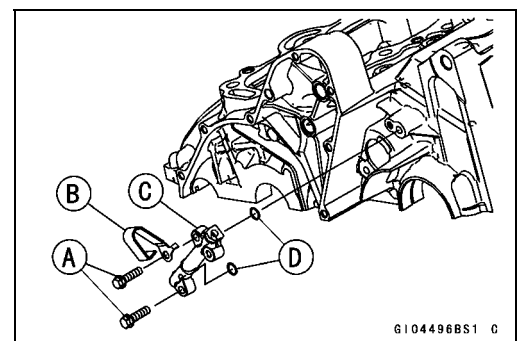

## 9-12 CRANKSHAFT/TRANSMISSION


### Crankcase Splitting

- Prepare a  $\phi 5$  mm rod [A], and insert it to the hole of the upper crankcase half.
- Remove the oil pipe [B] by tapping [C] the rod as shown.

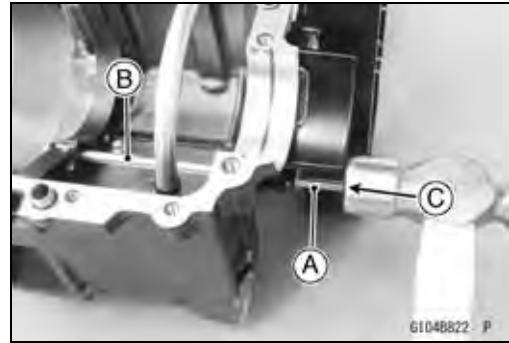


★ If the breather plate [A] is to be removed, follow the next procedures.

- Remove the oil pipe (see above).
- Cut the gasket [B] around the plate.
- Remove:
  - Breather Plate Bolts [C]
  - Breather Plate with Pipe [D]

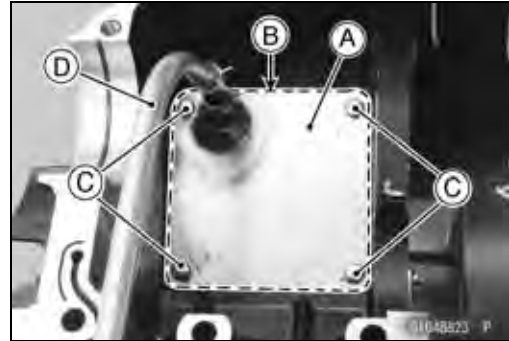


★ If the side oil plate [A] is to be removed, follow the next procedure.

- Remove:
  - Side Oil Plate Bolts [B]
  - Side Oil Plate

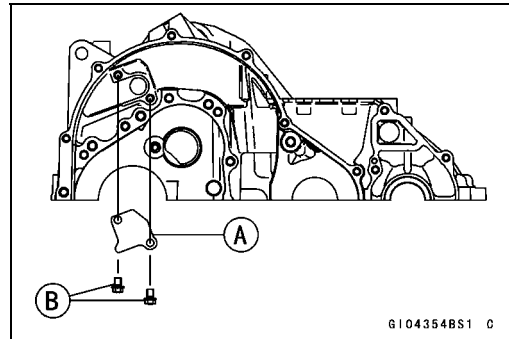

★ If the middle oil plate [A] is to be removed, follow the next procedure.

- Remove:
  - Middle Oil Plate Bolts [B]
  - Middle Oil Plate

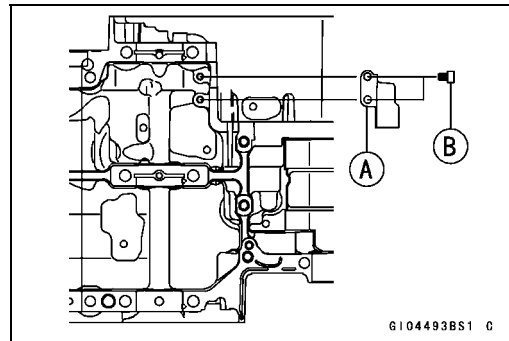

### Crankcase Assembly

#### NOTICE

The upper and lower crankcase halves are machined at the factory in the assembled state, so the crankcase halves must be replaced as a set.

- With a high flash-point solvent, clean off the mating surfaces of the crankcase halves and wipe dry.
- Using compressed air, blow out the oil passages in the crankcase halves.




**Crankcase Splitting**

★ If the side oil plate [A] on the upper crankcase half was removed, install it as shown.

● Apply a non-permanent locking agent to the side oil plate bolts and tighten them.

**Torque - Side Oil Plate Bolts [B]: 9.8 N·m (1.0 kgf·m, 87 in·lb)**

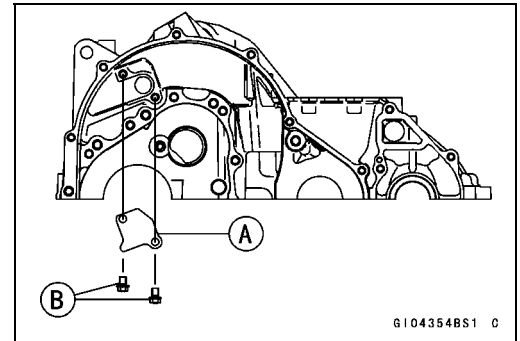


G104354BS1 C

★ If the middle oil plate [A] on the lower crankcase half was removed, install it.

● Apply a non-permanent locking agent to the middle oil plate bolts [B] and tighten them.

**Torque - Middle Oil Plate Bolts: 9.8 N·m (1.0 kgf·m, 87 in·lb)**

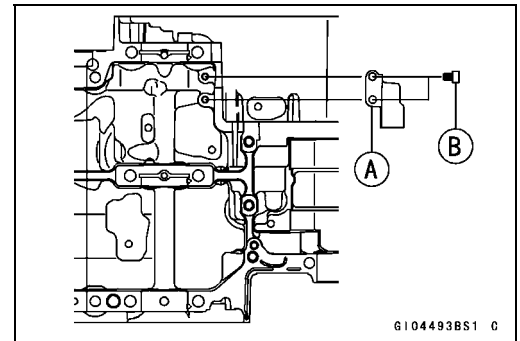


G104493BS1 C

★ If the bottom oil plate [A] on the lower crankcase half was removed, install it.

● Apply a non-permanent locking agent to the bottom oil plate bolts [B] and tighten them.

**Torque - Bottom Oil Plate Bolts: 9.8 N·m (1.0 kgf·m, 87 in·lb)**

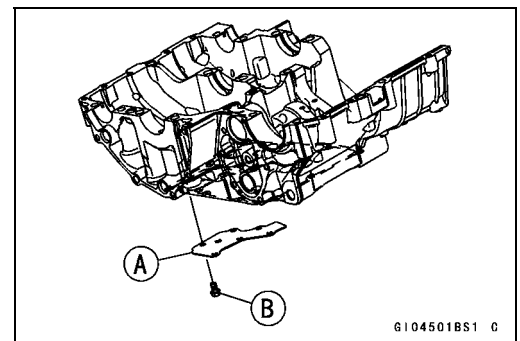

G104501BS1 C


● When the new needle bearing [A] for the shift drum is installed in the lower crankcase half [B], press and insert [C] the needle bearing until it is bottomed.

**Special Tool - Bearing Driver Set: 57001-1129**

● When the new needle bearing [D] for the shift shaft is installed in the lower crankcase half, press and insert [E] the needle bearing so that the bearing surface is flush with the end of hole.

○ The marked side of the needle bearing faces outside of the crankcase.

**Special Tool - Bearing Driver Set: 57001-1129**

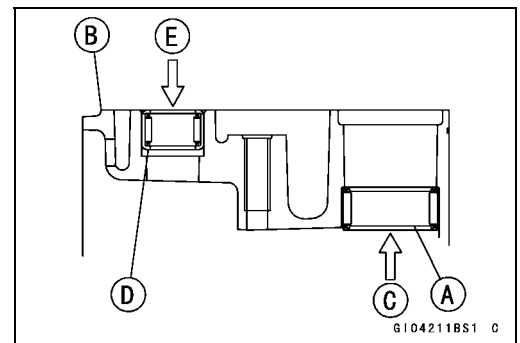

G104211BS1 C

## 9-14 CRANKSHAFT/TRANSMISSION

### Crankcase Splitting

- Using a high flash-point solvent, clean off any oil or dirt that may be on the liquid gasket coating area. Dry them with a clean cloth.
- When the new oil plug [A] and new race [B] for drive shaft is installed in the upper crankcase half [C], install them using the following procedures.
- Apply grease to the new O-rings [D].
- Apply liquid gasket to the portions [E] on the upper crankcase half, and insert [F] the oil plug until it is bottomed.

**Sealant - Liquid Gasket, TB1211F: 92104-0004**

- Press and insert the race until it is bottomed.

**Special Tool - Bearing Driver Set: 57001-1129**

#### NOTE

○ Install the race so that the stepped side [G] faces inside of the crankcase.

○ Do not apply liquid gasket to the O-ring and the oil line.

- Install the race holder [H] as shown.
- Apply a non-permanent locking agent to the threads of the race holder screw [I] and tighten it.

**Torque - Race Holder Screw: 4.9 N·m (0.50 kgf·m, 43 in·lb)**

- Using a high flash-point solvent, clean off any oil or dirt that may be on the liquid gasket coating area. Dry them with a clean cloth.
- Apply liquid gasket to the breather plate mating surface [A] 1 mm (0.04 in.) or more thick, and then install the breather plate.

**Sealant - Liquid Gasket, TB1207B: 92104-2068**




#### NOTE

○ Make the application finish within 7 minutes when the liquid gasket to the mating surface of the breather plate is applied.

○ Moreover fit the plate and tighten the bolts just after application of the liquid gasket.


- Apply a non-permanent locking agent to the threads and tighten the bolts [A] and tighten them.

**Torque - Breather Plate Bolts: 9.8 N·m (1.0 kgf·m, 87 in·lb)**

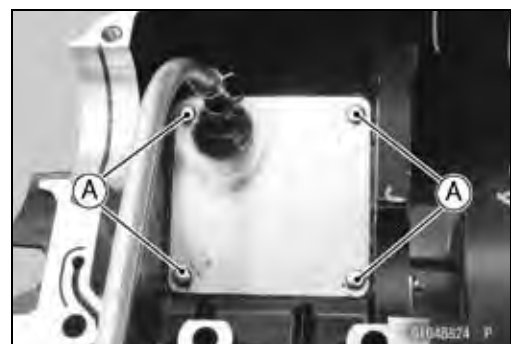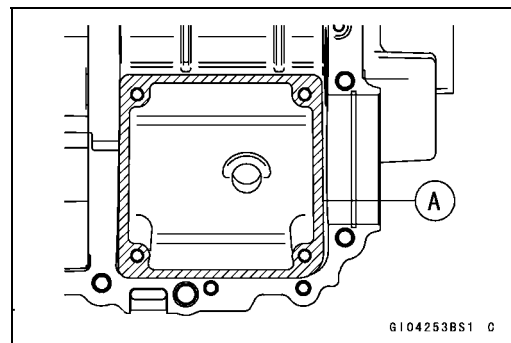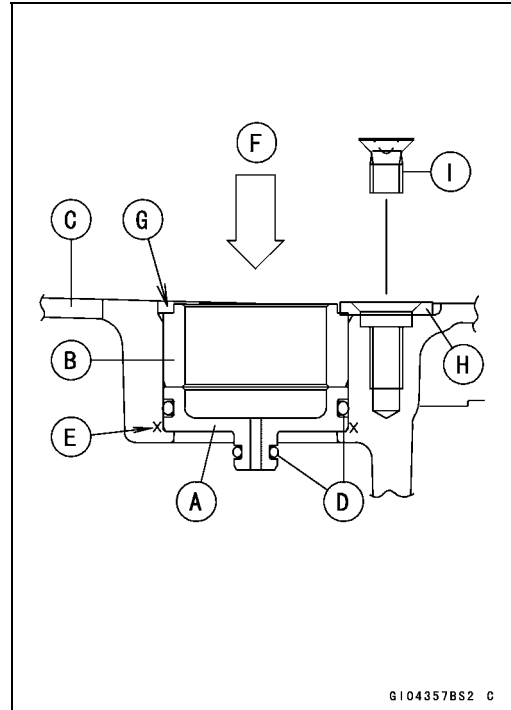


## Crankcase Splitting


- When installing the breather pipe [A], follow the next procedures.
- Align the white mark [B] on the pipe with the white mark [C] on the breather fitting.
- Install the clamps [D] so that the pinch heads [E] face the white marks.

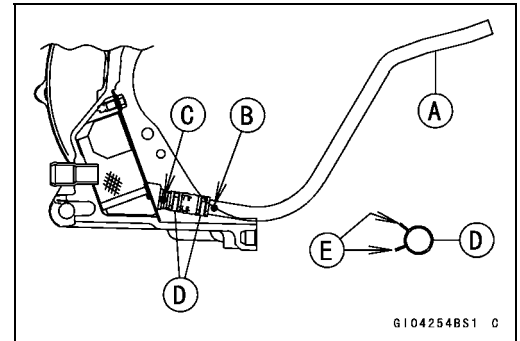


- When installing the oil pipes, follow the next procedures.
- Apply molybdenum disulfide oil solution to the edge [A] of the oil pipe.
- Install the oil pipe [B] so that its flange [C] touches to the surface [D] of the upper crankcase half.
- Replace the O-ring [E] with a new one.
- Apply grease to the O-ring on the oil pipe.

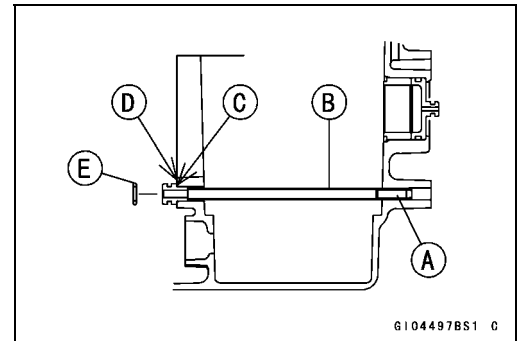

- Replace the O-rings [A] with new ones.
  - Apply grease to the O-rings.
  - Apply a non-permanent locking agent to the threads of the oil pipe bolts and tighten them.
  - Install the clamp with the upper oil pipe bolt.
- Torque - Oil Pipe Bolts: 9.8 N·m (1.0 kgf·m, 87 in·lb)**

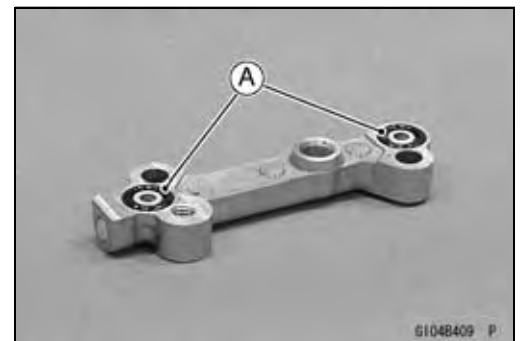


- Apply molybdenum disulfide oil solution to the following items.
  - Crankshaft Main Bearing Insert
  - Balancer Shaft Bearing Insert
- Install the crankshaft and the balancer shaft on the upper crankcase half.
- Align the timing mark [A] on the balancer gear [B] with the timing mark [C] on the balancer drive gear [D] of the crankshaft.

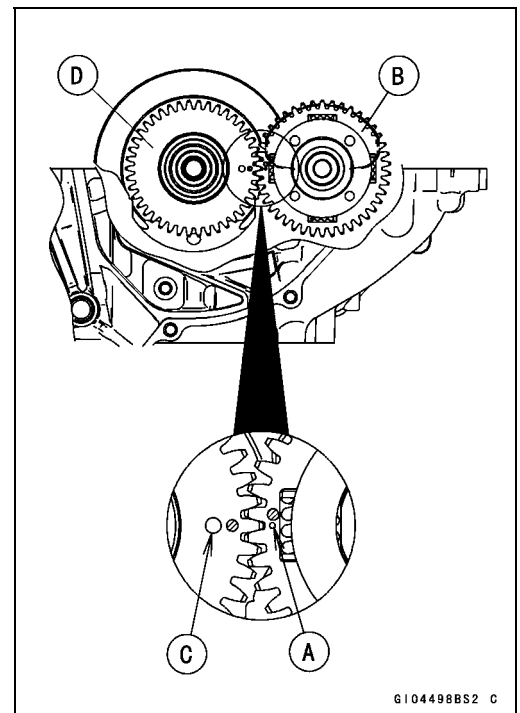


## 9-16 CRANKSHAFT/TRANSMISSION

### Crankcase Splitting


- Be sure to hang the camshaft chain [A] on the crankshaft.

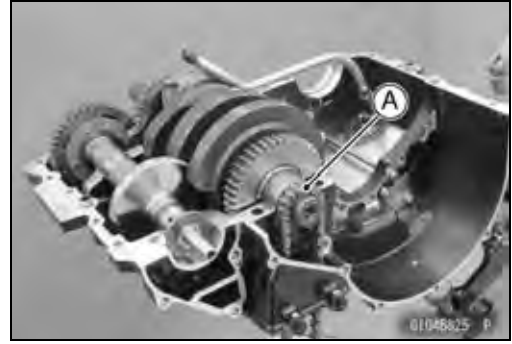

- Be sure that the dowel pins [A] are in position.

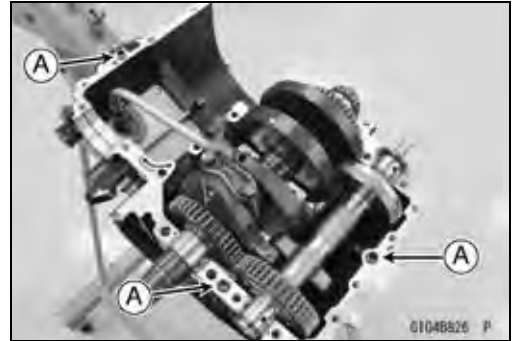

- Set the bearing groove [A] on the positioning ring [B] as shown.

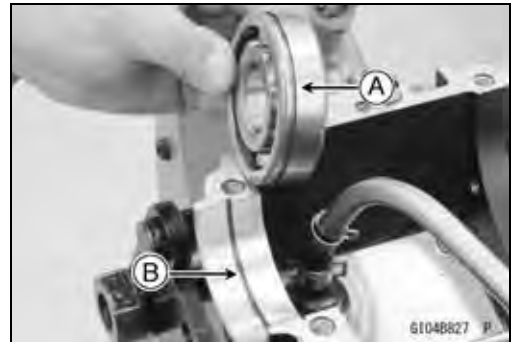

## Crankcase Splitting

- Using a high flash-point solvent, clean off any oil or dirt that may be on the liquid gasket coating area. Dry them with a clean cloth.
- Apply liquid gasket [A] to the mating surface of the lower crankcase half.

Sealant - Liquid Gasket, TB1216B: 92104-1064


### NOTE

○ Especially, apply a liquid gasket carefully so that it shall be filled up on the grooves.

### NOTICE

Do not apply liquid gasket around the crankshaft main bearing inserts, and oil passage holes.

○ Do not apply liquid gasket to the oil passage [B].

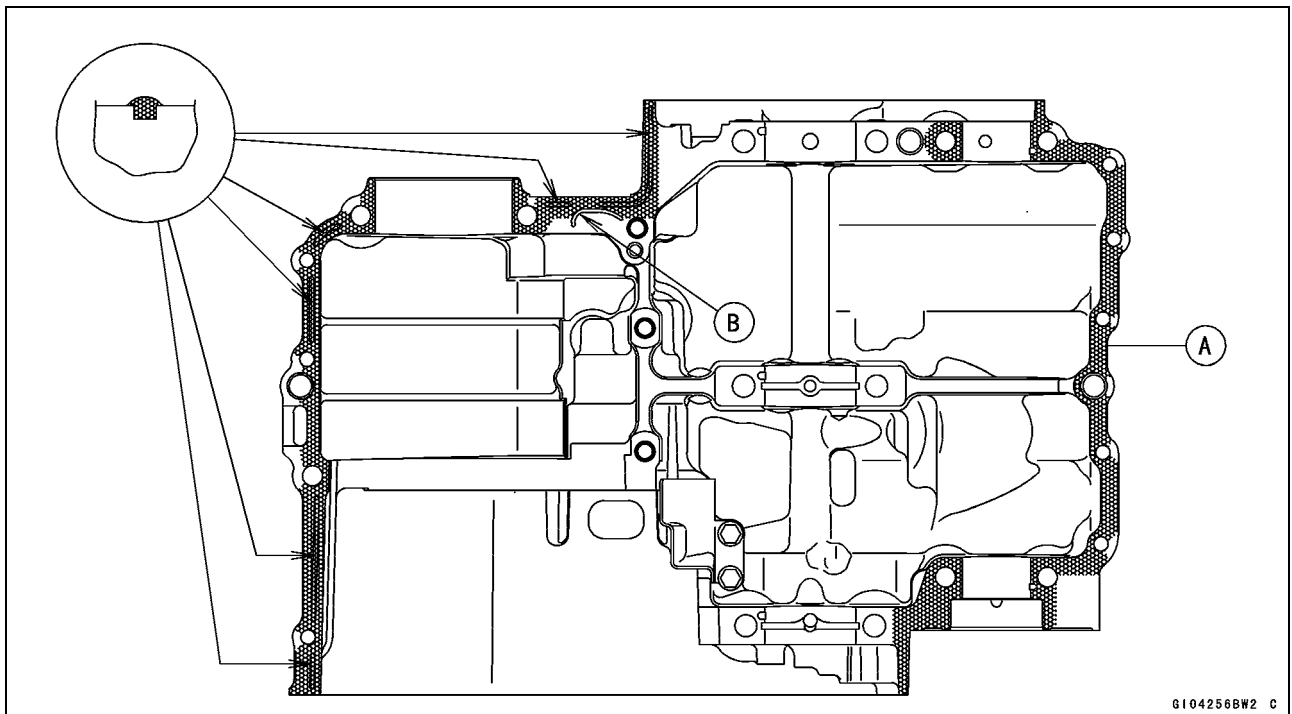


## 9-18 CRANKSHAFT/TRANSMISSION

### Crankcase Splitting

- Fit the lower crankcase half to the upper crankcase half.
- Insert [A] the breather pipe [B] on the upper crankcase half through the hole [C] on the lower crankcase half.

#### NOTE

- *Make the application finish within 20 minutes when the liquid gasket to the mating surface of the lower crankcase half is applied.*
- *Moreover fit the case and tighten the case bolts just after finishing the application of the liquid gasket.*

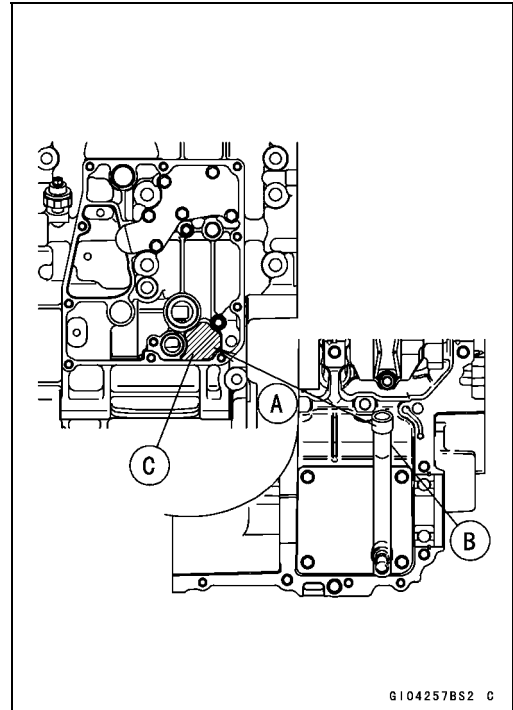

## Crankcase Splitting

- Tighten the lower crankcase bolts following the sequence numbers on the lower crankcase half.
- The crankcase bolts (M9) [1 ~ 6] have copper plated washers, replace them with new ones.
- Apply molybdenum disulfide oil solution to both sides of the copper plated washers and the threads of the crankcase bolts (M9).

- Tighten:
  - Crankcase Bolts (M9) [1, 2] L = 113 mm (4.45 in.) with Copper Plated Washers
  - Crankcase Bolts (M9) [3, 4] L = 83 mm (3.3 in.) with Copper Plated Washers
  - Crankcase Bolts (M9) [5, 6] L = 113 mm (4.45 in.) with Copper Plated Washers

**Torque - Crankcase Bolts (M9): 20 N·m (2.0 kgf·m, 15 ft·lb)**

- Tighten the crankcase bolts (M9) [1 ~ 6] with the specified angle.

**Angle - Crankcase Bolts (M9) [1 ~ 2]: 85°**  
**Crankcase Bolts (M9) [3 ~ 4]: 70°**  
**Crankcase Bolts (M9) [5 ~ 6]: 85°**

- Apply molybdenum disulfide oil solution to flange and the threads of the crankcase bolts (M8) [7 ~ 10].
- Tighten:
  - Crankcase Bolts (M8) [7, 9] L = 73 mm (2.9 in.)
  - Crankcase Bolts (M8) [8, 10] L = 60 mm (2.4 in.)

**Torque - Crankcase Bolts (M8): 20 N·m (2.0 kgf·m, 15 ft·lb)**

- Tighten the crankcase bolts (M8) [7 ~ 10] with the specified angle.

**Angle - Crankcase Bolts (M8) [7 ~ 10]: 35°**



- Do not apply molybdenum disulfide oil solution to the crankcase bolts (M8) [A] [B] [C].

- Tighten:
  - Crankcase Bolt (M8) [A] L = 110 mm (4.33 in.)
  - Crankcase Bolt (M8, Rear) [B] L = 60 mm (2.4 in.)
  - Crankcase Bolt (M8) [C] L = 50 mm (2.0 in.)
  - Crankcase Bolts (M6) [D] L = 38 mm (1.5 in.)
  - Crankcase Bolts (M6) [E] L = 45 mm (1.8 in.)
  - Crankcase Bolt (M6) [F] L = 32 mm (1.3 in.)

**Torque - Crankcase Bolts (M8): 27.4 N·m (2.79 kgf·m, 20.2 ft·lb)**

**Crankcase Bolts (M6): 19.6 N·m (2.00 kgf·m, 14.5 ft·lb)**


- Using a torque angle [A], tighten the bolts specified angle.

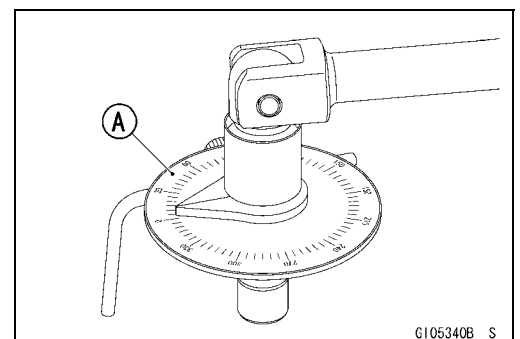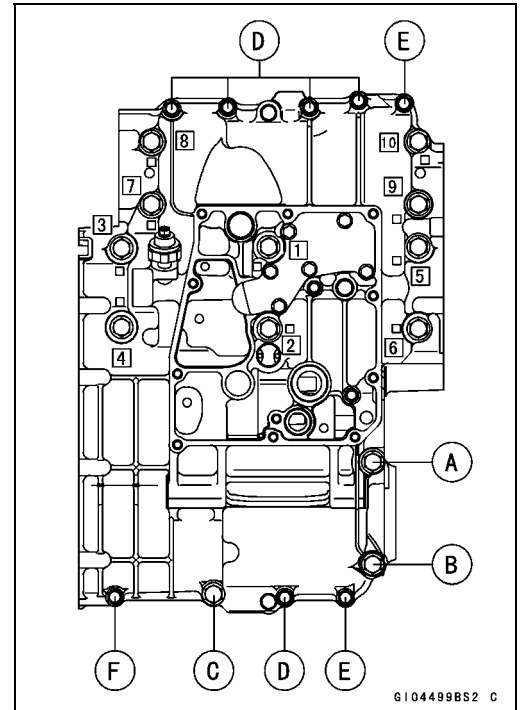


## 9-20 CRANKSHAFT/TRANSMISSION

### Crankcase Splitting

- The upper crankcase bolts have copper plated washers, replace them with new ones.
  - Tighten the upper crankcase bolts with washers.
    - Upper Crankcase Bolts (M8) [A] L = 110 mm (4.33 in.)
    - Upper Crankcase Bolt (M8) [B] L = 120 mm (4.72 in.)
- Torque - Upper Crankcase Bolts (M8): 27.5 N·m (2.80 kgf·m, 20.3 ft·lb)**

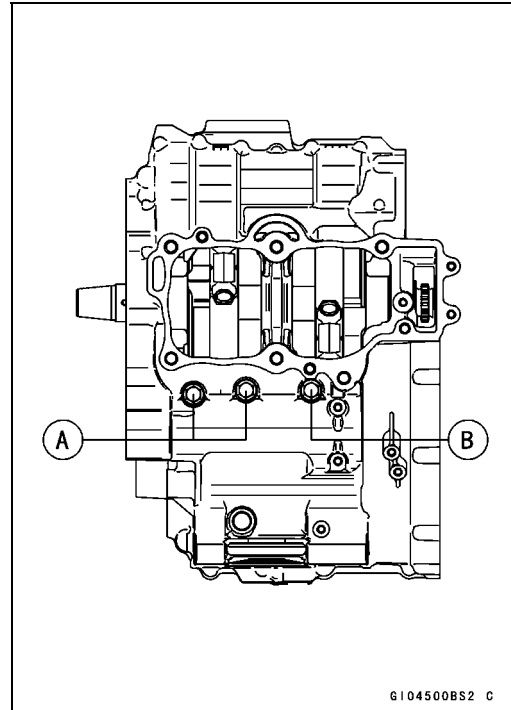

- After tightening all crankcase bolts, check the following items.
  - Wipe up the liquid gasket that seeps out around the crankcase mating surface.
  - Crankshaft and balancer shaft turn freely.
- ★ If the rear camshaft chain guide was removed, install it.
- Installation the rear camshaft chain guide [A] and collars.
- Apply a non-permanent locking agent to the threads of the rear camshaft chain guide bolt [B].
- Tighten:
  - Torque - Rear Camshaft Chain Guide Bolt: 20 N·m (2.0 kgf·m, 15 ft·lb)**

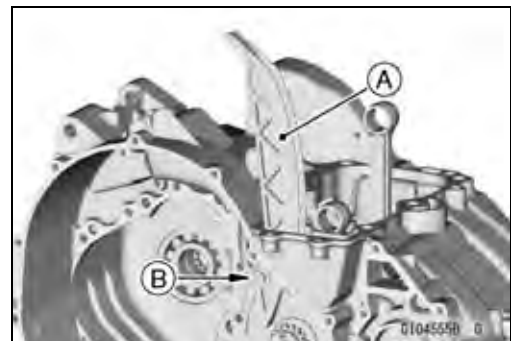


- Install the removed parts (see appropriate chapters).



**Crankshaft and Connecting Rods**

**Crankshaft Removal**

- Split the crankcase (see Crankcase Splitting).
- Remove:
  - Camshaft Chain [A]
  - Crankshaft [B]

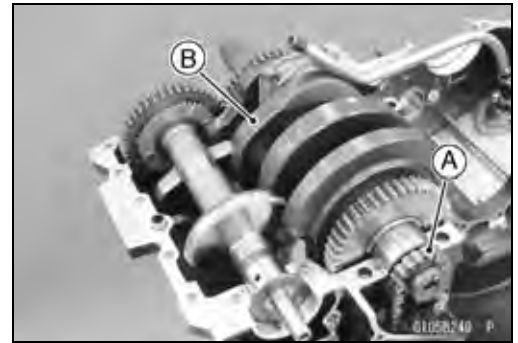

**Crankshaft Installation**


**NOTE**

○ If the crankshaft is replaced with a new one, refer to the Connecting Rod Big End Bearing/Crankshaft Main Bearing Insert Selection in the Specifications.

**NOTICE**

If the crankshaft, bearing inserts, or crankcase halves are replaced with new ones, select the bearing inserts and check clearance with a plastigage (press gauge) before assembling engine to be sure the correct bearing inserts are installed.

- Apply molybdenum disulfide oil solution to the crankshaft main bearing inserts.
- Align the timing mark [A] on the balancer gear [B] with the timing mark [C] on the balancer drive gear [D] of the crankshaft.

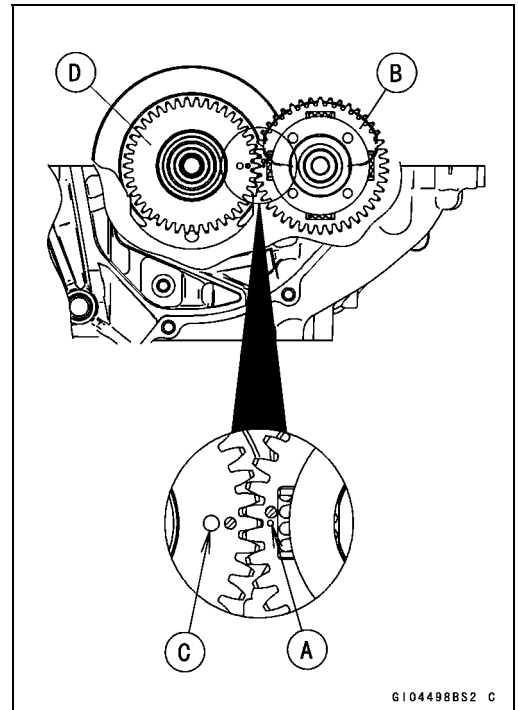

- Install the crankshaft with the camshaft chain [A] hanging on it.



**Connecting Rod Removal**

- Split the crankcase (see Crankcase Splitting).
- Remove the connecting rod nuts [A].


**NOTE**

○ Mark and record the locations of the connecting rods and their big end caps so that they can be reassembled in their original positions.

- Remove the connecting rods from the crankshaft.

**NOTICE**

Discard the connecting rod bolts. To prevent damage to the crankpin surfaces, do not allow the connecting rod bolts to bump against the crankpins.

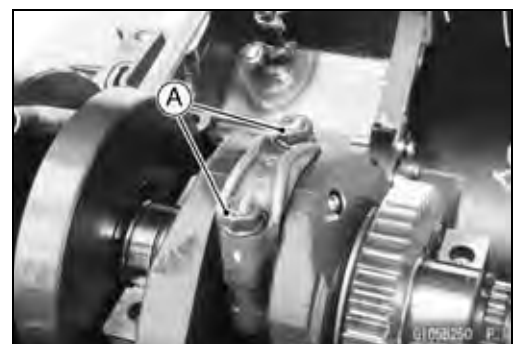

# 9-22 CRANKSHAFT/TRANSMISSION

## Crankshaft and Connecting Rods

### Connecting Rod Installation

#### NOTICE

To minimize vibration, the connecting rods should have the same weight mark.

- Big End Cap [A]
- Connecting Rod [B]
- Weight Mark, Alphabet [C]
- Diameter Mark [D]: "O" or no mark

#### NOTICE

If the connecting rods, big end bearing inserts, or crankshaft are replaced with new ones, select the bearing insert and check clearance with a plasti-gage (press gauge) before assembling engine to be sure the correct bearing inserts are installed.

- Apply molybdenum disulfide oil solution [A] to the inner surfaces of upper and lower bearing inserts.
- Do not apply any grease or oil to the cap inside and cap insert outside [B].
- Install the inserts so that their nails [C] are on the same side and fit them into the recess of the connecting rod and cap.

#### NOTICE

Wrong application of oil and grease could cause bearing damage.

- When installing the inserts [A], be careful not to damage the insert surface with the edge of the connecting rod [B] or the cap [C]. One way to install inserts is as follows.





- Installation [D] to Cap
- Installation [E] to Connecting Rod
- Push [F]
- Spare Dowel Pin [G]
- Connecting Rod Bolts [H]

- Remove debris and clean the surface of inserts.
- Apply molybdenum disulfide oil solution to the threads and seating surfaces of the big end nuts and bolts.
- Install each connecting rod on its original crankpin.

#### NOTE

○ Install each connecting rod so that its oil jet [A] faces the exhaust side (the front [B]) (see Engine Oil Flow Chart in the Engine Lubrication System chapter).

- Install the cap on the connecting rod, aligning the weight and diameter marks.

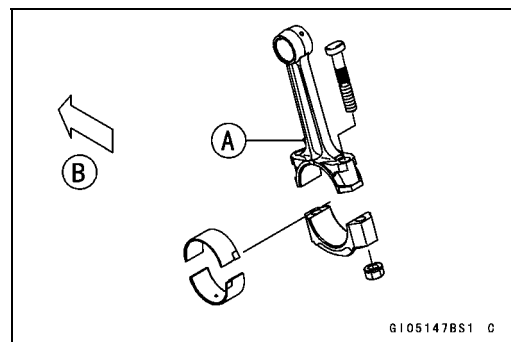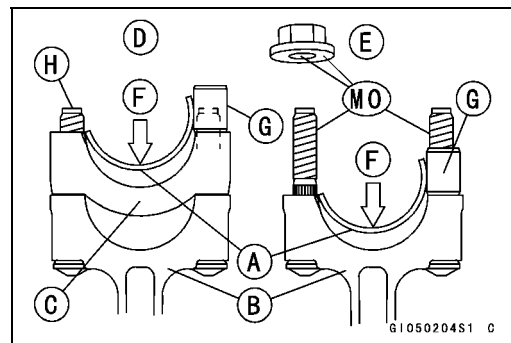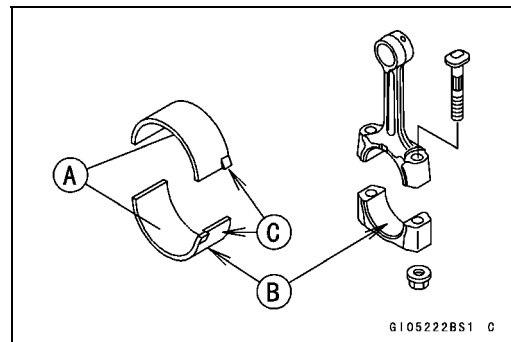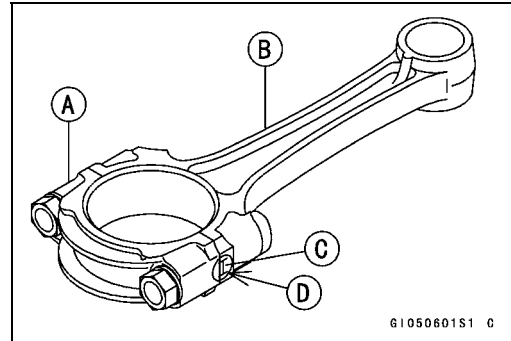

## Crankshaft and Connecting Rods

- The connecting rod big end is bolted using the “plastic region fastening method.”
- This method precisely achieves the needed clamping force without exceeding it unnecessarily, allowing the use of thinner, lighter bolts further decreasing connecting rod weight.
- There are two types of the plastic region fastening. One is a bolt length measurement method and other is a rotation angle method. Observe one of the following two, but the bolt length measurement method is preferable because this is a more reliable way to tighten the big end nuts.

### **NOTICE**

**The connecting rod bolts are designed to stretch when tightened. Never reuse the connecting rod bolts. See the table below for correct bolt and nut usage.**

### **NOTICE**

**Be careful not to overtighten the nuts. The bolts must be positioned on the seating surface correctly to prevent the bolt heads from hitting the crankcase.**

#### (1) Bolt Length Measurement Method

- Be sure to clean the bolts, nuts, and connecting rods thoroughly with a high flash-point solvent, because the new connecting rods, bolts, and nuts are treated with an anti-rust solution.

### **⚠ WARNING**

**Gasoline and low flash-point solvents can be flammable and/or explosive and cause severe burns. Clean the bolts, nuts, and connecting rods in a well-ventilated area, and take care that there are no sparks or flame anywhere near the working area; this includes any appliance with a pilot light. Do not use gasoline or a low flash-point solvent to clean them.**

### **NOTICE**

**Immediately dry the bolts and nuts with compressed air after cleaning. Clean and dry the bolts and nuts completely.**

# 9-24 CRANKSHAFT/TRANSMISSION

## Crankshaft and Connecting Rods


- Install new bolts in reused connecting rods.
- Dent both bolt head and bolt tip with a punch as shown.
- Before tightening, use a point micrometer to measure the length of new connecting rod bolts and record the values to find the bolt stretch.

Connecting Rod [A]

Mark here with a punch [B].

Nuts [C]

Fit micrometer pins into punch marks [D].

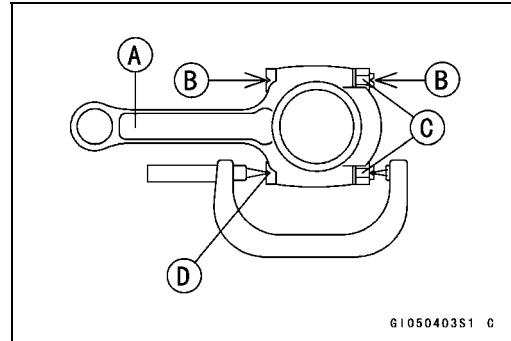

G1050403S1 C

- Apply a small amount of molybdenum disulfide oil solution to the following.


Threads [A] of Nuts and Bolts

Seating Surfaces [B] of Nuts and Connecting Rods

- Tighten the big end nuts until the bolt elongation reaches the length specified in the table.

- Check the length of the connecting rod bolts.

- ★ If the stretch is more than the usable range, the bolt has stretched too much. An overelongated bolt may break in use.

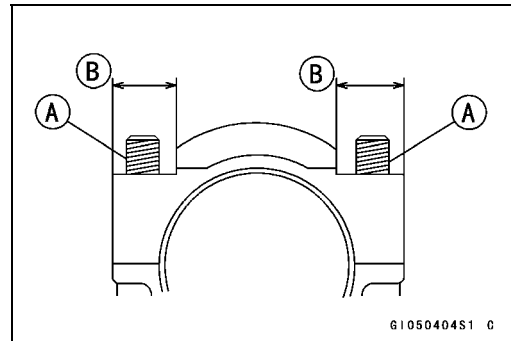

G1050404S1 C

$$\text{Bolt Length after tightening} - \text{Bolt Length before tightening} = \text{Bolt Stretch}$$

Connecting Rod Assy	Bolt	Nut	Usable Range of Connecting Rod Bolt Stretch
New	Use the bolts attached to new connecting rod.	Attached to new connecting rod	0.20 ~ 0.32 mm (0.0079 ~ 0.0126 in.)
		New	
Used	Replace the bolts with new ones.	Used	0.24 ~ 0.36 mm (0.0094 ~ 0.0142 in.)
		New	

### (2) Rotation Angle Method

- ★ If you don't have a point micrometer, you may tighten the nuts using the "Rotation Angle Method."

- Be sure to clean the bolts and nuts thoroughly with a high flash-point solvent, because the new bolts and nuts are treated with an anti-rust solution.

### **⚠ WARNING**


**Gasoline and low flash-point solvents can be flammable and/or explosive and cause severe burns. Clean the bolts and nuts in a well-ventilated area, and take care that there are no sparks or flame anywhere near the working area; this includes any appliance with a pilot light. Do not use gasoline or a low flash-point solvent to clean the bolts and nuts.**

### **NOTICE**


**Immediately dry the bolts and nuts with compressed air after cleaning. Clean and dry the bolts and nuts completely.**

**Crankshaft and Connecting Rods**

- Install new bolts in reused connecting rods.
- Apply a small amount of molybdenum disulfide oil solution to the following.
  - Threads [A] of Nuts and Bolts
  - Seating Surfaces [B] of Nuts and Connecting Rods

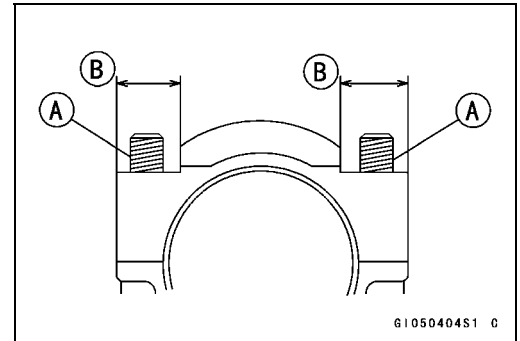


- First, tighten the nuts to the specified torque. See the table below.
- Next, tighten the nuts  $120^\circ \pm 5^\circ$ .
- Mark [A] the connecting rod big end caps and nuts so that nuts can be turned  $120^\circ$  [B] properly.

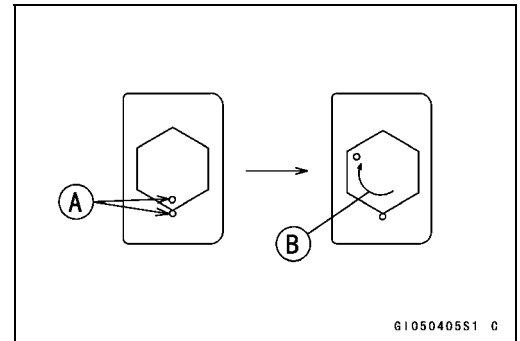

Connecting Rod Assy	Bolt	Nut	Torque + Angle N-m (kgf-m, ft-lb)
New	Use the bolts attached to new connecting rod.	Attached to new connecting rod	18 (1.8, 13.0) + 120°
		New	20 (2.0, 15) + 120°
Used	Replace the bolts with new ones.	Used	24 (2.4, 17.4) + 120°
		New	25 (2.6, 18.8) + 120°

- Using a torque angle [A], tighten the nuts specified angle.

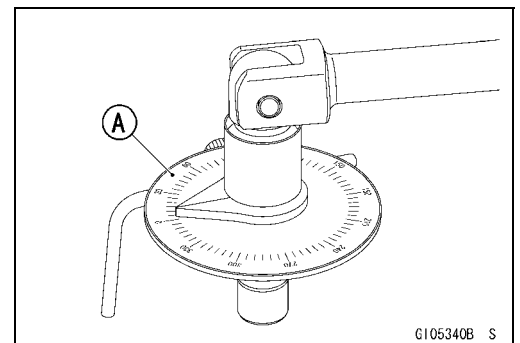

**Crankshaft/Connecting Rod Cleaning**

- After removing the connecting rods from the crankshaft, clean them with a high flash-point solvent.
- Blow the crankshaft oil passages with compressed air to remove any foreign particles or residue that may have accumulated in the passages.

## 9-26 CRANKSHAFT/TRANSMISSION

### Crankshaft and Connecting Rods

#### Connecting Rod Bend Inspection

- Remove the connecting rod big end bearing inserts, and reinstall the connecting rod big end cap.
- Select an arbor [A] of the same diameter as the connecting rod big end, and insert the arbor through the connecting rod big end.
- Select an arbor of the same diameter as the piston pin and at least 100 mm (3.94 in.) long, and insert the arbor [B] through the connecting rod small end.
- On a surface plate, set the big-end arbor on V block [C].
- With the connecting rod held vertically, use a height gauge to measure the difference in the height of the arbor above the surface plate over a 100 mm (3.94 in.) length to determine the amount of connecting rod bend.
- ★ If connecting rod bend exceeds the service limit, the connecting rod must be replaced.

#### Connecting Rod Bend

Service Limit: TIR 0.2/100 mm (0.008/3.94 in.)

#### Connecting Rod Twist Inspection

- With the big-end arbor [A] still on V block [B], hold the connecting rod horizontally and measure the amount that the arbor [C] varies from being paralleled with the surface plate over a 100 mm (3.94 in.) length of the arbor to determine the amount of connecting rod twist.
- ★ If connecting rod twist exceeds the service limit, the connecting rod must be replaced.

#### Connecting Rod Twist

Service Limit: TIR 0.2/100 mm (0.008/3.94 in.)

#### Connecting Rod Big End Side Clearance Inspection



- Measure connecting rod big end side clearance.
- Insert a thickness gauge [A] between the big end and either crank web to determine clearance.

#### Connecting Rod Big End Side Clearance

Standard: 0.13 ~ 0.38 mm (0.0051 ~ 0.0150 in.)

Service Limit: 0.6 mm (0.02 in.)

- ★ If the clearance exceeds the service limit, replace the connecting rod with new one and then check clearance again. If the clearance is too large after connecting rod replacement, the crankshaft also must be replaced.

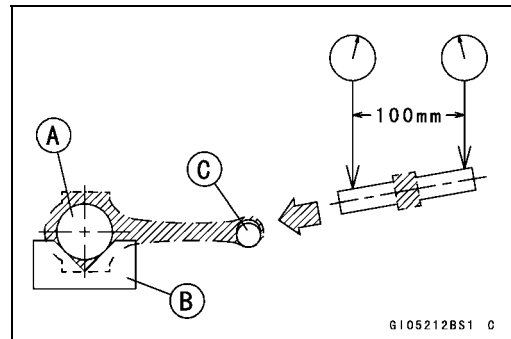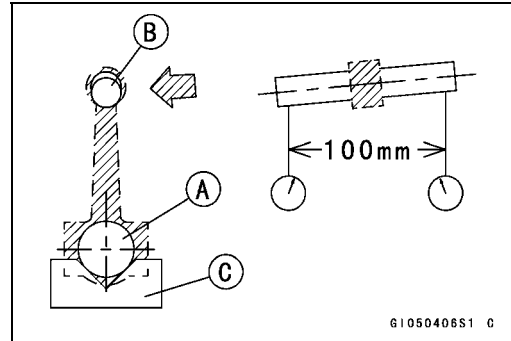


**Crankshaft and Connecting Rods**

**Connecting Rod Big End Bearing Insert/Crankpin Wear Inspection**

- Measure the bearing insert/crankpin [A] clearance with plastigage [B].
- Tighten the big end nuts to the specified torque (see Connecting Rod Installation).

**NOTE**

○ Do not move the connecting rod and crankshaft during clearance measurement.

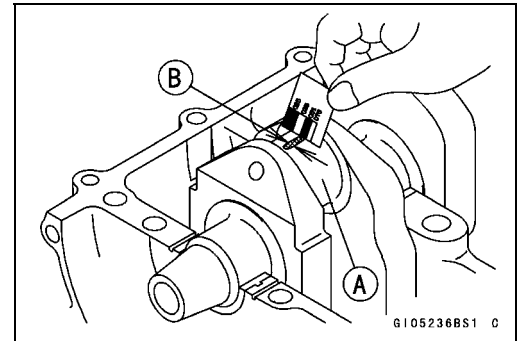

**NOTICE**


**After measurement, replace the connecting rod bolts and nuts.**

**Connecting Rod Big End Bearing Insert/Crankpin Clearance**

**Standard:** 0.017 ~ 0.041 mm (0.0007 ~ 0.0016 in.)

**Service Limit:** 0.08 mm (0.003 in.)

- ★ If the clearance is within the standard, no bearing replacement is required.
- ★ If the clearance is between 0.042 mm (0.00165 in.) and the service limit (0.08 mm, 0.003 in.), replace the bearing inserts [A] with inserts painted blue [B]. Check insert/crankpin clearance with the plastigage. The clearance may exceed the standard slightly, but it must not be less than the minimum in order to avoid bearing seizure.
- ★ If the clearance exceeds the service limit, measure the diameter of the crankpins.

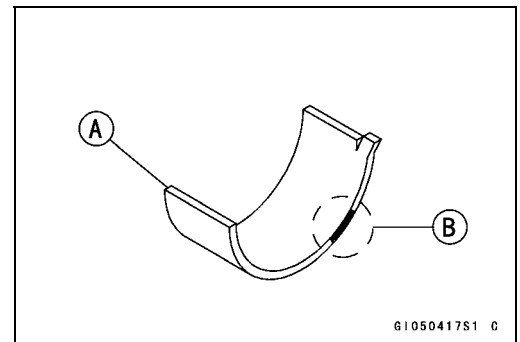

**Crankpin Diameter**

**Standard:** 37.984 ~ 38.000 mm (1.4954 ~ 1.4961 in.)

**Service Limit:** 37.97 mm (1.495 in.)


- ★ If any crankpin has worn past the service limit, replace the crankshaft with a new one.
- ★ If the measured crankpin diameters are not less than the service limit, but do not coincide with the original diameter markings on the crankshaft, make new marks on it.

**Crankpin Diameter Marks**

**None** 37.984 ~ 37.992 mm (1.4954 ~ 1.49575 in.)

○ 37.993 ~ 38.000 mm (1.49578 ~ 1.4961 in.)

△: Crankpin Diameter Marks, "○" or no mark.

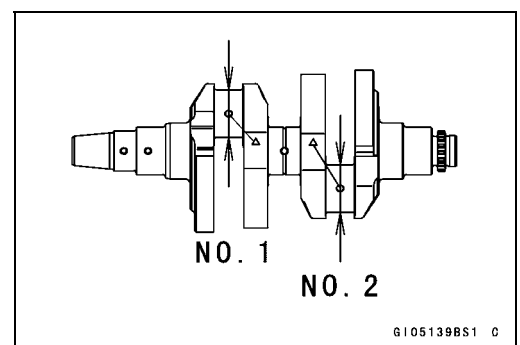

- Measure the connecting rod big end inside diameter, and mark each connecting rod big end in accordance with the inside diameter.
- Tighten the connecting rod big end nuts to the specified torque (see Connecting Rod Installation).

**NOTE**

○ The mark already on the big end should almost coincide with the measurement.

# 9-28 CRANKSHAFT/TRANSMISSION

## Crankshaft and Connecting Rods

### Connecting Rod Big End Inside Diameter Marks

None 41.000 ~ 41.008 mm (1.6142 ~ 1.61448 in.)


○ 41.009 ~ 41.016 mm (1.61452 ~ 1.6148 in.)

Big End Cap [A]


Connecting Rod [B]

Weight Mark, Alphabet [C]

Diameter Mark (Around Weight Mark) [D]: “○” or no mark

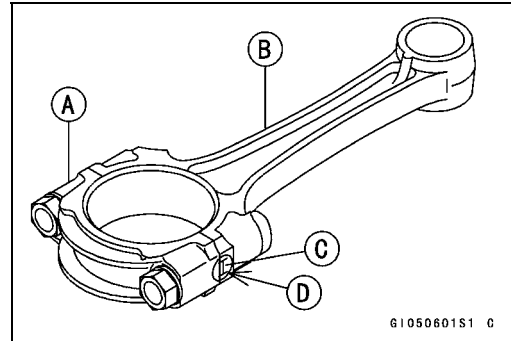

- Select the proper bearing insert [A] in accordance with the combination of the connecting rod and crankshaft coding.  
Size Color [B]

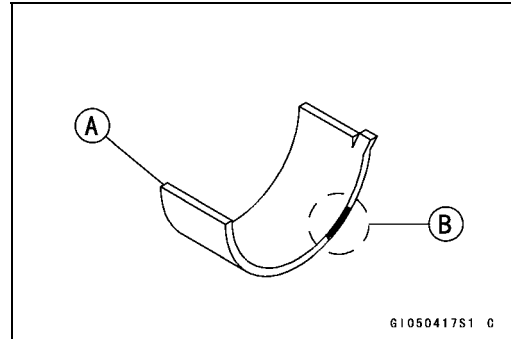

Connecting Rod Big End Inside Diameter Marking	Crankpin Diameter Marking	Bearing Insert	
		Size Color	Part Number
None	○	Brown	92139-0116
○	○	Black	92139-0115
None	None		
○	None	Blue	92139-0114


- Install the new inserts in the connecting rod and check insert/crankpin clearance with the plastigage.

### Crankshaft Side Clearance Inspection

- Insert a thickness gauge [A] between the crankshaft main bearing and the crank web at the No. 2 journal [B] to determine clearance.
- ★ If the clearance exceeds the service limit, replace the crankcase halves as a set.

#### NOTE

○ The upper and lower crankcase halves are machined at the factory in the assembled state, so the crankcase halves must be replaced as a set.

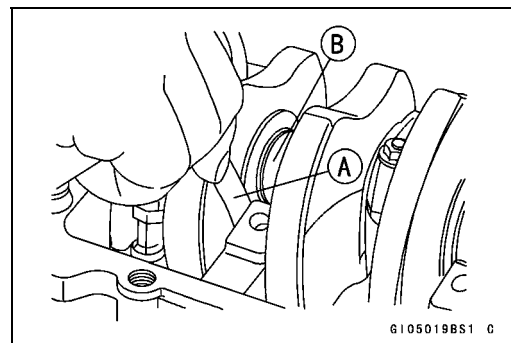

### Crankshaft Side Clearance

Standard: 0.05 ~ 0.20 mm (0.0020 ~ 0.0079 in.)

Service Limit: 0.40 mm (0.0157 in.)




**Crankshaft and Connecting Rods**

**Crankshaft Runout Inspection**

- Measure the crankshaft runout.
- ★ If the measurement exceeds the service limit, replace the crankshaft.

**Crankshaft Runout**

**Standard:** TIR 0.02 mm (0.0008 in.) or less  
**Service Limit:** TIR 0.05 mm (0.002 in.)

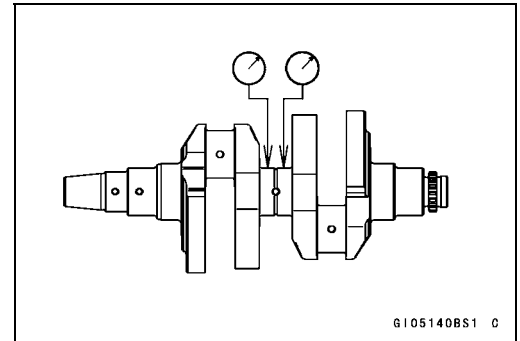


**Crankshaft Main Bearing Insert/Journal Wear Inspection**

- Using a plastigage (press gauge) [A], measure the bearing insert/journal [B] clearance.

**NOTE**


- Tighten the crankcase bolts to the specified torque (see Crankcase Assembly).
- Do not turn the crankshaft during clearance measurement.
- Journal clearance less than 0.025 mm (0.00098 in.) can not be measured by plastigage, however, using genuine parts maintains the minimum standard clearance.

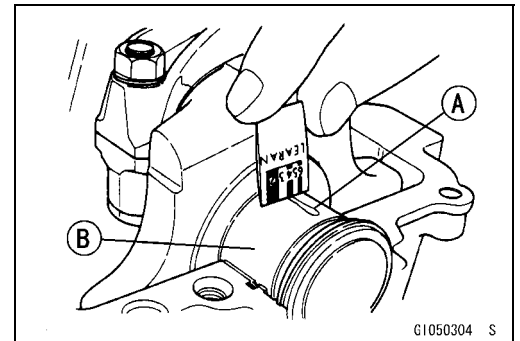

**Crankshaft Main Bearing Insert/Journal Clearance**

**Standard:** 0.016 ~ 0.040 mm (0.0006 ~ 0.0016 in.)  
**Service Limit:** 0.07 mm (0.0028 in.)


- ★ If the clearance is within the standard, no bearing replacement is required.
- ★ If the clearance is between 0.041 mm (0.0015 in.) and the service limit (0.07 mm, 0.003 in.), replace the bearing inserts [A] with inserts painted blue [B]. Check insert/journal clearance with the plastigage. The clearance may exceed the standard slightly, but it must not be less than the minimum in order to avoid bearing seizure.
- ★ If the clearance exceeds the service limit, measure the diameter of the crankshaft main journal.

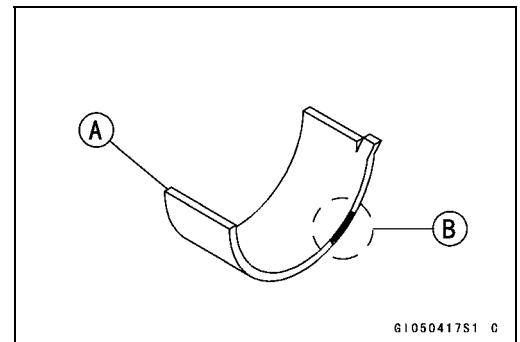

**Crankshaft Main Journal Diameter**

**Standard:** 37.984 ~ 38.000 mm (1.4954 ~ 1.4961 in.)  
**Service Limit:** 37.96 mm (1.4945 in.)

- ★ If any journal has worn past the service limit, replace the crankshaft with a new one.
- ★ If the measured journal diameters are not less than the service limit, but do not coincide with the original diameter markings on the crankshaft, make new marks on it.

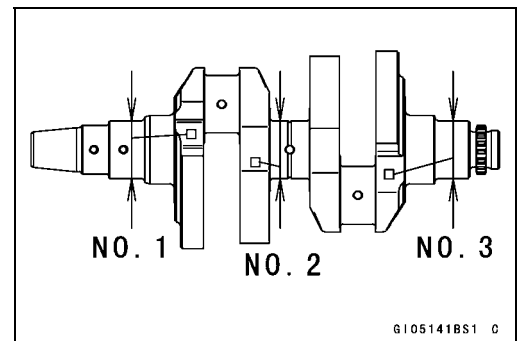

**Crankshaft Main Journal Diameter Marks**

**None** 37.984 ~ 37.992 mm (1.4954 ~ 1.4958 in.)  
**1** 37.993 ~ 38.000 mm (1.49578 ~ 1.4961 in.)

- : Crankshaft Main Journal Diameter Marks, "1" or no mark.

# 9-30 CRANKSHAFT/TRANSMISSION

## Crankshaft and Connecting Rods

- Measure the main bearing inside diameter, and mark the upper crankcase half in accordance with the inside diameter.  
Crankshaft Main Bearing Inside Diameter Marks: “○” or no mark.
- Tighten the crankcase bolts to the specified torque (see Crankcase Assembly).

**NOTE**

○ The mark already on the upper crankcase half should almost coincide with the measurement.


**Crankshaft Main Bearing Inside Diameter Marks**

○ 41.000 ~ 41.008 mm (1.6142 ~ 1.61448 in.)


None 41.009 ~ 41.016 mm (1.61452 ~ 1.6148 in.)

□□□: Crankshaft Main Bearing Inside Diameter Marks, “○” mark or no mark

- No.1 Journal [A]
- No.2 Journal [B]
- No.3 Journal [C]

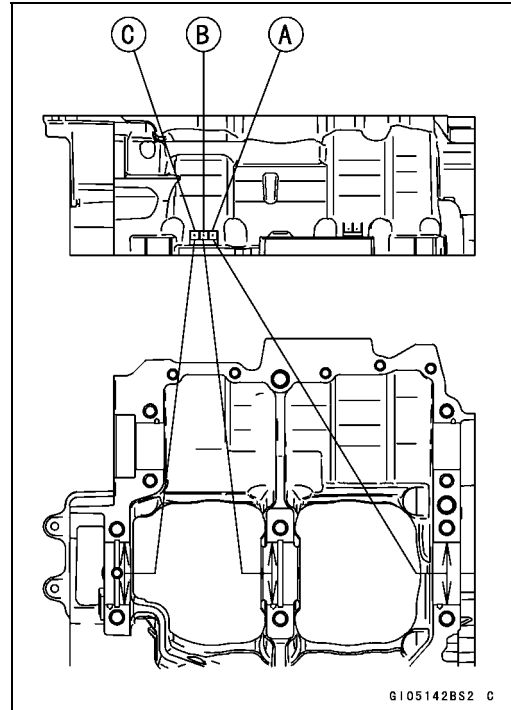

- Select the proper bearing insert [A] in accordance with the combination of the crankcase and crankshaft coding.  
Size Color [B]

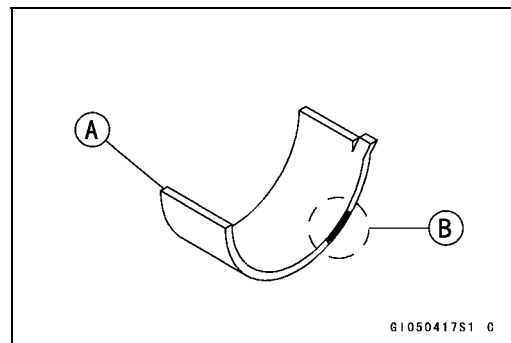

Crankcase Main Bearing Inside Diameter Marking	Crankshaft Main Journal Diameter Marking	Bearing Insert*	
		Size Color	Part Number
○	1	Brown	92028-1905
○	None	Black	92028-1904
None	1		
None	None	Blue	92028-1903


\* The crankshaft main bearing inserts have an oil groove.

- Install the new inserts in the crankcase halves and check insert/journal clearance with the plastigage.

## Balancer


### **Balancer Removal**

- Split the crankcase (see Crankcase Splitting).
- Pull the balancer shaft [A] with the balancer gear out of the crankcase.

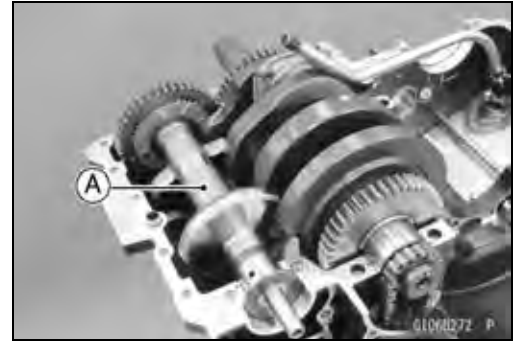

### **Balancer Installation**

- Apply molybdenum disulfide oil solution to the inside of the balancer shaft bearing insert.
- Align the timing mark [A] on the balancer gear [B] with the timing mark [C] on the balancer drive gear [D] of the crankshaft.
- Assemble the crankcase (see Crankcase Assembly).

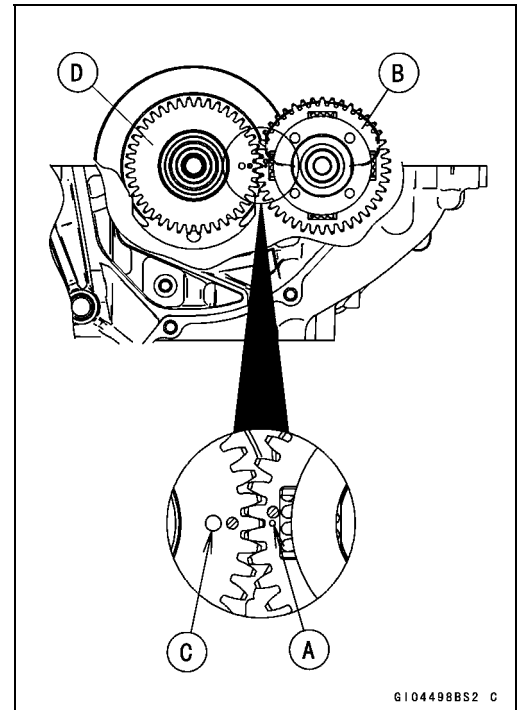

### **Balancer Shaft Bearing Insert/Journal Wear Inspection**

- Measure the bearing insert/journal clearance using a plastigage.
- Split the crankcase and wipe each bearing insert and journal surface clean of oil.
- Cut strips of plastigage to bearing insert width, and place a strip on each journal parallel to the balancer shaft so that the plastigage will be compressed between the journal and the bearing insert.
- Install the lower crankcase half, and tighten the case bolts to the specified torque (see Crankcase Assembly).

# 9-32 CRANKSHAFT/TRANSMISSION

## Balancer

### NOTE

○ Do not turn the balancer shaft during clearance measurement.

- Remove the lower crankcase half and measure the plastigage width [A] to determine the bearing insert/journal [B] clearance.

#### Balancer Shaft Bearing Insert/Journal Clearance

**Standard:** 0.011 ~ 0.033 mm (0.0004 ~ 0.0013 in.)

**Service Limit:** 0.06 mm (0.002 in.)

- ★ If the clearance is within the standard, no bearing insert replacement is required.
- ★ If the clearance is between 0.034 mm (0.00134 in.) and the service limit (0.06 mm (0.0024 in.)), replace the bearing inserts [A] with inserts painted blue [B]. Check insert/journal clearance with a plastigage. The clearance may exceed the standard slightly, but it must not be less than the minimum in order to avoid bearing seizure.
- ★ If the clearance exceeds the service limit, measure the diameter of the balancer shaft journal.

#### Balancer Shaft Journal Diameter

**Standard:** 27.987 ~ 28.000 mm (1.1018 ~ 1.1024 in.)

**Service Limit:** 27.96 mm (1.1008 in.)




- ★ If either journal has worn past the service limit, replace the balancer shaft with a new one.
- ★ If the measured journal diameters are not less than the service limit, but do not coincide with the original diameter markings on the balancer shaft, write new marks on it.

#### Balancer Shaft Diameter Marks

**None** 27.987 ~ 27.993 mm (1.1018 ~ 1.10208 in.)

○ 27.994 ~ 28.000 mm (1.10212 ~ 1.1024 in.)

△: Balancer Shaft Journal Diameter Marks, "○" mark or no mark.

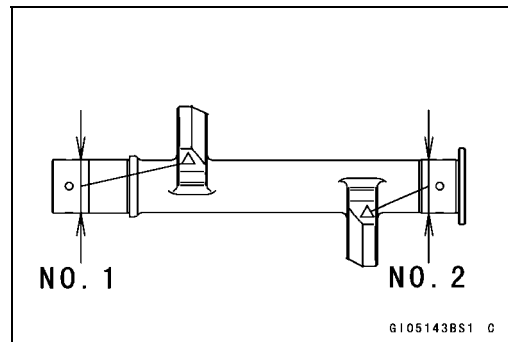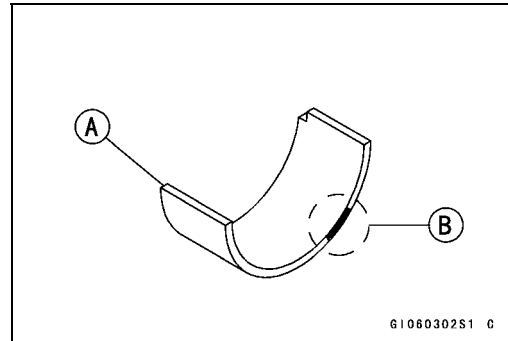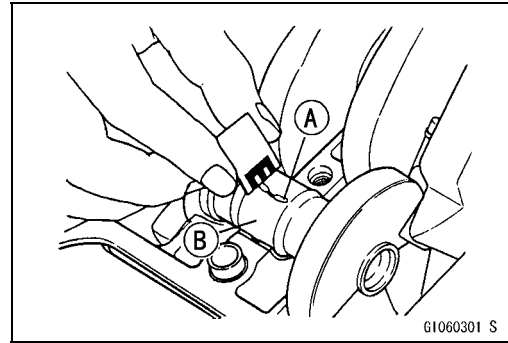

**Balancer**

- Put the lower crankcase half on the upper crankcase half without bearing inserts, and tighten the case bolts to the specified torque and sequence (see Crankcase Assembly).
- Measure the balancer shaft bearing inside diameter, and mark the upper crankcase half in accordance with the inside diameter.

**NOTE**

○ The mark already on the upper crankcase half should almost coincide with the measurement.

**Balancer Shaft Bearing Inside Diameter Marks**


○ 31.000 ~ 31.008 mm (1.2205 ~ 1.22078 in.)

None 31.009 ~ 31.016 mm (1.22082 ~ 1.2211 in.)

□□: Balancer Shaft Bearing Inside Diameter Marking, “○” mark or no mark.

No.1 Journal [A]

No.2 Journal [B]

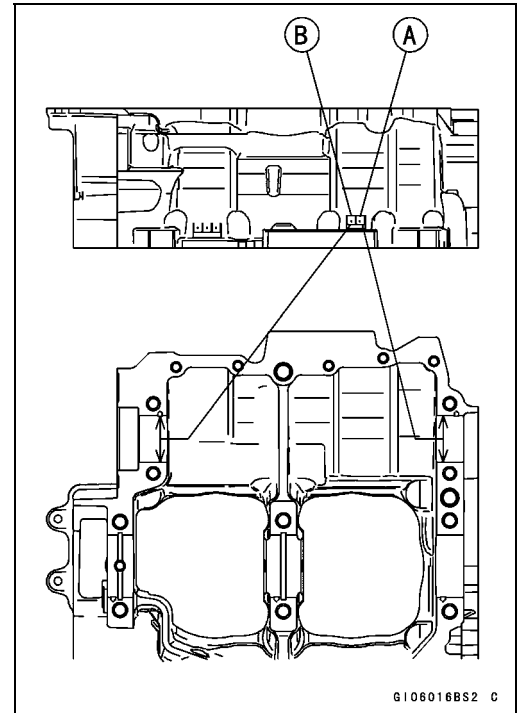

- Select the proper bearing insert in accordance with the combination of the crankcase and the balancer shaft coding.
- Install the new inserts in the crankcase and check insert/journal clearance with a plastigage.

Balancer Shaft Bearing Inside Diameter Marking	Balancer Shaft Journal Diameter Marking	Bearing Insert*	
		Size Color	Part Number
○	○	Brown	92139-0119
○	None	Black	92139-0118
None	○		
None	None	Blue	92139-0117

\*The balancer shaft bearing inserts have an oil groove.

## 9-34 CRANKSHAFT/TRANSMISSION

### Starter Motor Clutch

#### Starter Motor Clutch Removal/Installation

- Refer to the Alternator Rotor Removal/Installation in the Electrical System chapter.

#### Starter Motor Clutch Inspection

- Remove:
  - Alternator Cover (see Alternator Cover Removal in the Electrical System chapter)
  - Starter Idle Gear and Torque Limiter (see Alternator Removal in the Electrical System chapter)
- Turn the starter motor clutch gear [A] by hand. The starter motor clutch gear should turn clockwise [B] freely, but should not turn counterclockwise [C].
- ★ If the starter motor clutch does not operate as it should or if it makes noise, go to the next step.
- Disassemble the starter motor clutch, and visually inspect the clutch parts (see Starter Motor Clutch Disassembly).
- ★ If there is any worn or damaged part, replace it.

#### NOTE

- Examine the starter motor clutch gear as well. Replace it if it worn or damaged.

#### Starter Motor Clutch Disassembly

- Remove:
  - Alternator Rotor (see Alternator Rotor Removal in the Electrical System chapter)
  - Starter Motor Clutch Bolts [A]

**Special Tool - Flywheel Holder [B]: 57001-1313**


- Remove the starter motor clutch [A].

#### Starter Motor Clutch Assembly

- Install the starter motor clutch to the housing so that the flange [A] fit to the housing groove [B].
- Apply a non-permanent locking agent to the threads of the starter motor clutch bolts and tighten them.

**Special Tool - Flywheel Holder: 57001-1313**


**Torque - Starter Motor Clutch Bolts: 34 N·m (3.5 kgf·m, 25 ft·lb)**

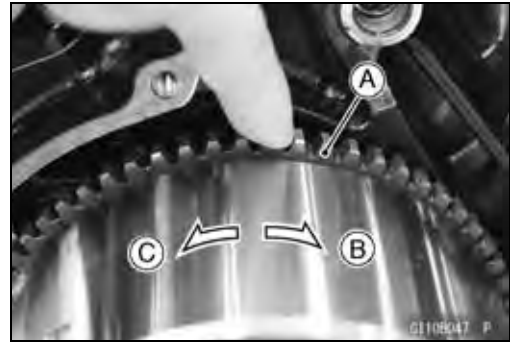

**External Shift Mechanism**


**Shift Pedal Removal**

- Remove:
  - Shift Lever Bolt [A]
  - Shift Lever [B]
- ★ If the tie-rod is removed from the shift pedal and shift lever, note the following.
  - The following portions have left-hand threads.
    - Locknut [C] of Shift Lever Side
    - Ball Joint [D] of Shift Lever
- Remove:
  - Shift Pedal Bolt [E]
  - Shift Pedal [F] with Tie-Rod

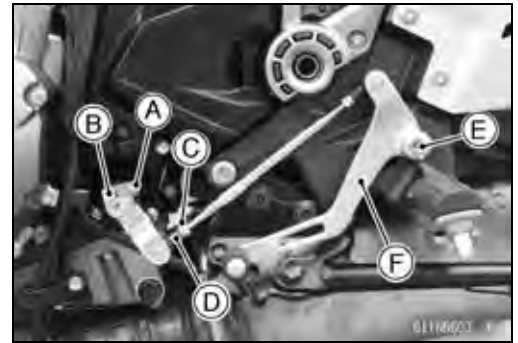


**Shift Pedal Installation**


- Apply grease to the sliding surface [A] on the shift pedal bolt [B].
- Install:
  - Washer [C]
  - Tie-Rod [D] and Shift Pedal [E]
- Tighten:
  - Torque - Shift Pedal Bolt: 25 N-m (2.5 kgf-m, 18 ft-lb)**

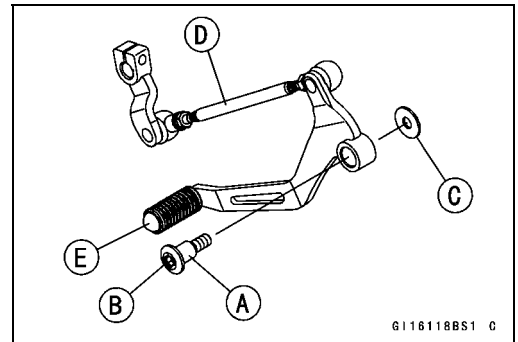

- Align the punch mark [A] on the shift shaft with the punch mark [B] on the shift lever.
- Tighten:
  - Torque - Shift Lever Bolt [C]: 12 N-m (1.2 kgf-m, 106 in-lb)**

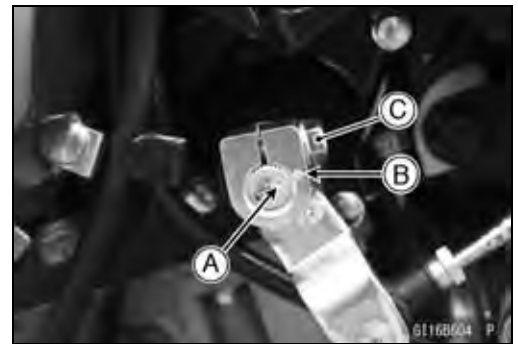


- After installation, confirm that the shift pedal [A] is positioned as shown.
  - About 138.5 mm (5.453 in.) [B]
  - Pedal top is the same height as shown bolt [C].
- ★ If the pedal position is different, adjust it as follows.
  - To adjust the pedal position, loosen the front locknut [D] (left-hand threads) and rear locknut [E], and then turn the tie-rod.
  - Tighten:
    - Torque - Shift Lever Tie-rod Locknuts: 9.8 N-m (1.0 kgf-m, 87 in-lb)**

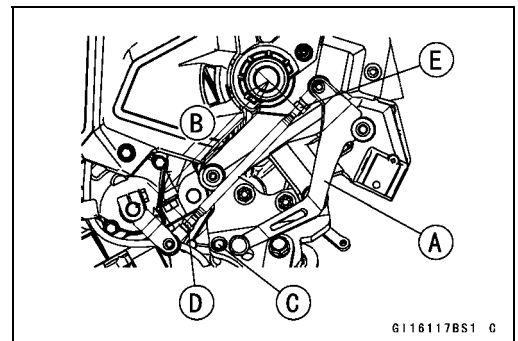

## 9-36 CRANKSHAFT/TRANSMISSION



### External Shift Mechanism

- Be sure the sealing lip of the rubber boot fits into the groove of the ball joint.  
Incorrectly Boot Fitting Position [A]  
Correctly Boot Fitting Position [B]

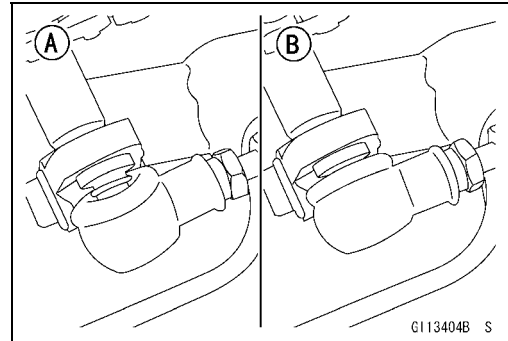

### External Shift Mechanism Removal

- Drain the engine oil (see Engine Oil Change in the Periodic Maintenance chapter).
- Remove:
  - Engine Sprocket (see Engine Sprocket Removal in the Final Drive chapter)
  - Gear Position Sensor [A] (see Gear Position Sensor Removal in the Electrical System chapter)
  - Shift Lever Bolt [B]
  - Shift Lever [C]
- ★ Loosen the alternator cover bolt [D] and then slide the clamp [E], if necessary.
- Remove:
  - Shift Shaft Cover Bolts [A]
  - Shift Shaft Cover Screw [B]
  - Shift Shaft Cover [C]

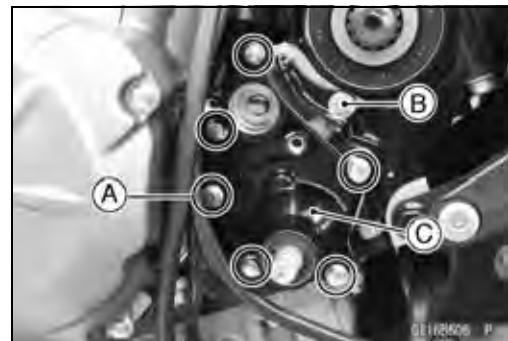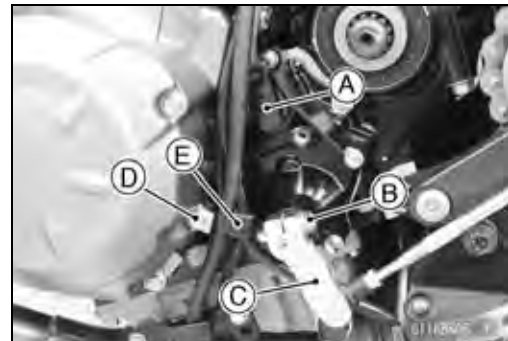

- Remove the shift shaft assembly [A].






**External Shift Mechanism**

- Remove:
  - Clutch (see Clutch Removal in the Clutch chapter)
  - Gear Positioning Lever Bolt [A]
  - Spacer [B]
  - Gear Positioning Lever [C]
  - Washer and Spring




**External Shift Mechanism Installation**


- Install the gear positioning lever [A] as shown.
  - Spring [B]
  - Washer [C]
  - Spacer [D]
  - Bolt [E]
- Hook the spring at gear positioning lever, pushing up [F] the hook portion, as shown.
- Apply a non-permanent locking agent to the gear positioning lever bolt and tighten it.
- Tighten:
  - Torque - Gear Positioning Lever Bolt: 12 N·m (1.2 kgf·m, 106 in·lb)**

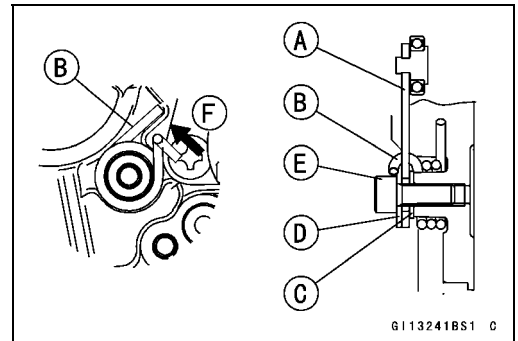

- Apply grease to the rubbing surface [A] between the lever [B] and pawl [C], and move them 5 ~ 10 times up and down to lubricate them.
- Apply grease more than 3 mm [D] around the hole of pawl.
- Be sure that the collar [E] is on the shaft.
- Be sure that the spring hook portions are as shown.

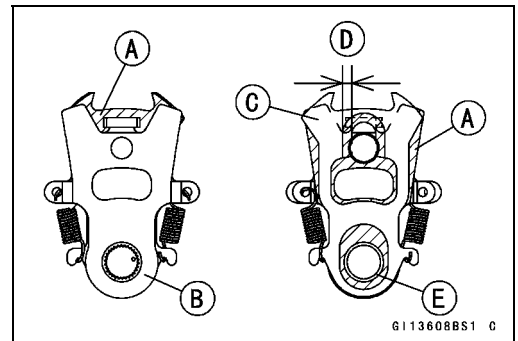

- Install the shift shaft assembly [A].
- Be sure that the washer [B] is on the shaft.
- Be sure that the dowel pins [C] are in position.

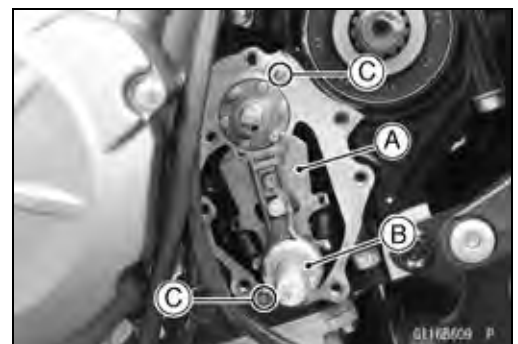

## 9-38 CRANKSHAFT/TRANSMISSION

### External Shift Mechanism

- When the new needle bearing [A] is installed in the shift shaft cover [B], press and insert the new needle bearing so that its surface is flush with the end of the hole.

**Special Tool - Bearing Driver Set: 57001-1129**

- When the new oil seal [C] is installed in the shift cover, press and insert the new oil seal until it is bottomed.
- Apply a water to the outer circumference of the oil seal so that it will go into place smoothly.

**Special Tool - Bearing Driver Set: 57001-1129**

- Apply engine oil to the needle bearing.
- Apply grease to the oil seal lips.
- Replace the shift shaft cover gasket with a new one.
- Install the shift shaft cover.
- Apply a non-permanent locking agent to the shift shaft cover screw [A] and bolts [B].
- Do not apply a non-permanent locking agent to the shift shaft cover bolts [C, D].
- First tighten the cover bolts, then tighten the cover screw.
  - L = 30 mm (1.2 in.) [B, C]
  - L = 40 mm (1.6 in.) [D]

**Torque - Shift Shaft Cover Bolts [B]: 9.8 N·m (1.0 kgf·m, 87 in·lb)**

**Shift Shaft Cover Bolts [C, D]: 12 N·m (1.2 kgf·m, 106 in·lb)**

**Shift Shaft Cover Screw: 4.9 N·m (0.50 kgf·m, 43 in·lb)**

- ★ Be sure to the position the clamp [E] in the original position, if the necessary.




- Tighten:

**Torque - Alternator Cover Bolt [F]: 12 N·m (1.2 kgf·m, 106 in·lb)**

- Run the leads and hoses correctly (see Cable, Wire, and Hose Routing section in the Appendix chapter).

#### **External Shift Mechanism Inspection**

- Examine the shift shaft [A] for any damage.
- ★ If the shaft is bent, straighten or replace it.
- ★ If the serration [B] is damaged, replace the shaft.
- ★ If the springs [C] are damaged in any way, replace them.
- ★ If the shift mechanism arm [D] is damaged in any way, replace the shaft.

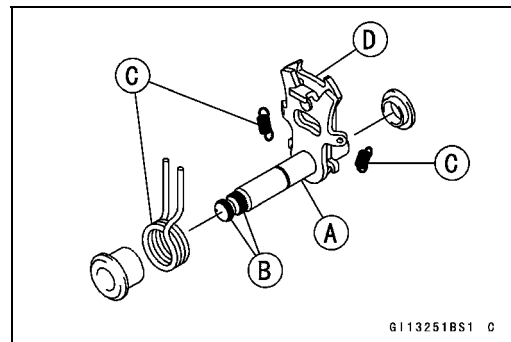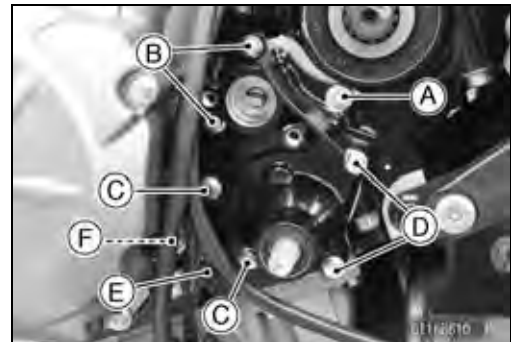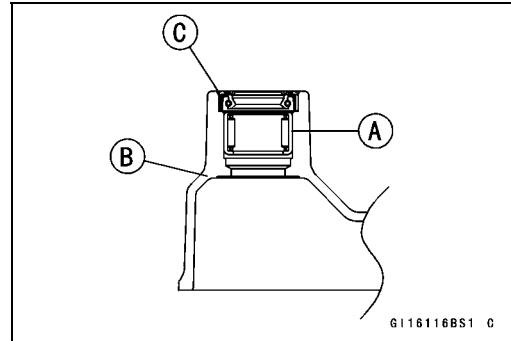

---

**External Shift Mechanism**

---

- Check the return spring pin [A] is not loose.
- ★ If it is loose, unscrew it, apply a non-permanent locking agent to the threads, and tighten it.

**Torque - Shift Shaft Return Spring Pin: 29 N·m (3.0 kgf·m, 21 ft·lb)**



- Check the gear positioning lever [A] and its spring for breaks or distortion.
- ★ If the lever or spring is damaged in any way, replace them.
- Visually inspect the shift drum cam [B].
- ★ If they are badly worn or if they show any damage, replace it.



## 9-40 CRANKSHAFT/TRANSMISSION

### Transmission

#### Transmission Assy Removal


- Remove:
  - Shift Shaft Assembly (see External Shift Mechanism Removal)
  - Gear Position Sensor Shaft [A]




- Remove:
  - Shift Drum Holder Bolt [A]
  - Shift Drum Holder [B] and Pin




- Remove the collar [A] and the O-ring [B] from the output shaft [C].

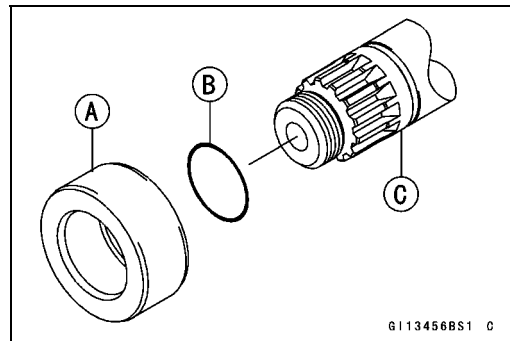

- Remove:
  - Clutch (see Clutch Removal in the Clutch chapter)
  - Oil Pump Chain Guide Bolts [A]
  - Oil Pump Chain Guide [B]

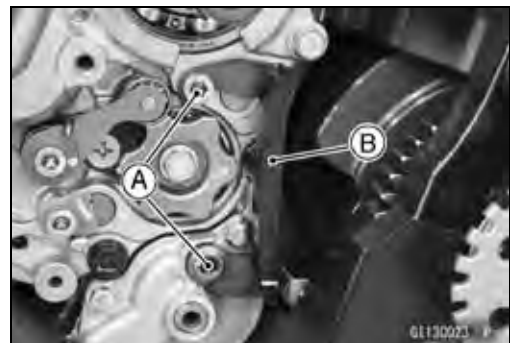


- Remove the transmission case bolts [A].
- ★ If the transmission assy [B] is to be disassembled, remove the following.
  - Shift Rod Retaining Plate Bolt [C] and Plate
  - Gear Positioning Lever [D] (see External Shift Mechanism Removal)
- Pull the transmission assy out of the crankcase.

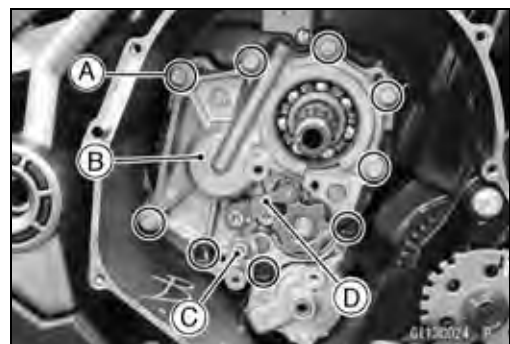

Transmission


**Transmission Assy Installation**

- Replace the O-ring [A] on the oil pipe [B] with a new one.
- Apply grease to the O-ring.
- Be sure that the dowel pins [C] are in position.
- Install the transmission assy on the crankcase.

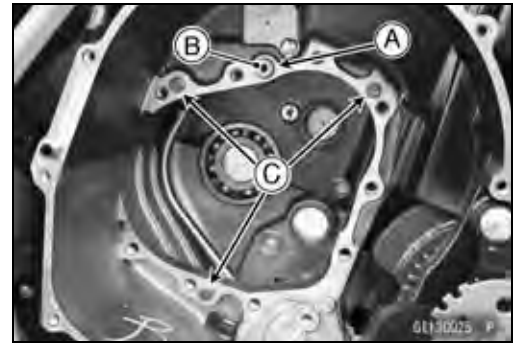

- Tighten the transmission case bolts following the specified tightening sequence [1 ~ 11].  
 L = 30 mm (1.2 in.) [1, 5, 7 ~ 10]  
 L = 26 mm (1.0 in.) [2 ~ 4]

**Torque - Transmission Case Bolts: 20 N·m (2.0 kgf·m, 15 ft·lb)**

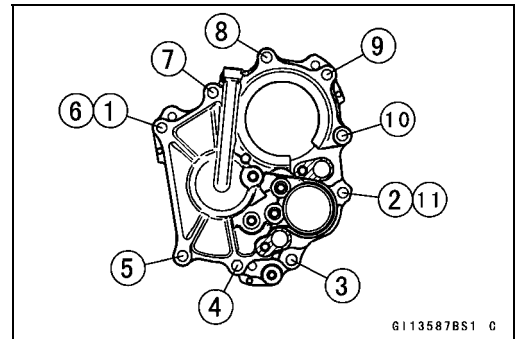


- ★ If the gear positioning lever [A] was removed, install it (see External Shift Mechanism Installation).
- ★ If the shift rod plate [B] was removed, install it.
- Apply a non-permanent locking agent to the shift rod retaining plate bolt [C], and tighten it.
- Tighten:

**Torque - Shift Rod Retaining Plate Bolt: 9.8 N·m (1.0 kgf·m, 87 in·lb)**

- Set the gear positioning lever to the neutral position [D].
- Check that the drive and output shaft turn freely.
- Apply a non-permanent locking agent to the oil pump chain guide bolt, L = 12 mm (0.47 in.) [E].
- Install the oil pump chain guide [F].
- Tighten:

**Torque - Oil Pump Chain Guide Bolt, L = 12 mm (0.47 in.): 12 N·m (1.2 kgf·m, 106 in·lb)**


**Oil Pump Chain Guide Bolt, L = 11 mm (0.43 in.) [G]: 12 N·m (1.2 kgf·m, 106 in·lb)**

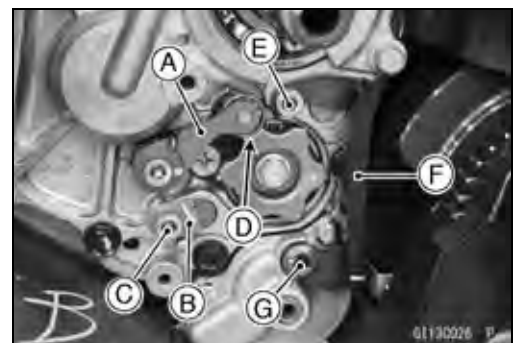

- Install:  
 Pin [A]  
 Shift Drum Holder [B]
- Apply a non-permanent locking agent to the shift drum holder bolt [C] and tighten it.
- Tighten:

**Torque - Shift Drum Holder Bolt: 12 N·m (1.2 kgf·m, 106 in·lb)**


- Fit the tab [D] to the slot of the gear position sensor shaft [E].

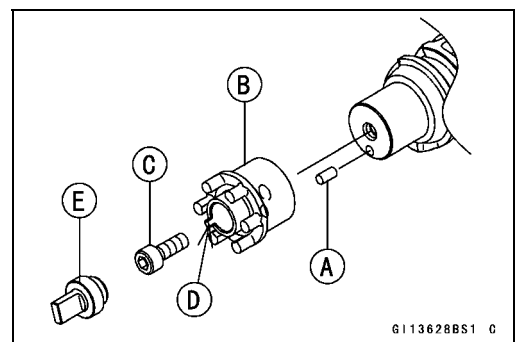

# 9-42 CRANKSHAFT/TRANSMISSION


## Transmission

- Apply grease to the new O-ring [A], and install its position on the output shaft.
- Apply grease to the oil seal lips.
- Install the collar [B].
- When the new oil seal [C] is installed, press in it onto the oil seal so that the surface of the oil seal is flush with the surface [D] of the crankcase.
- Using a high flash-point solvent, clean the outer circumference [E] of the oil seal.

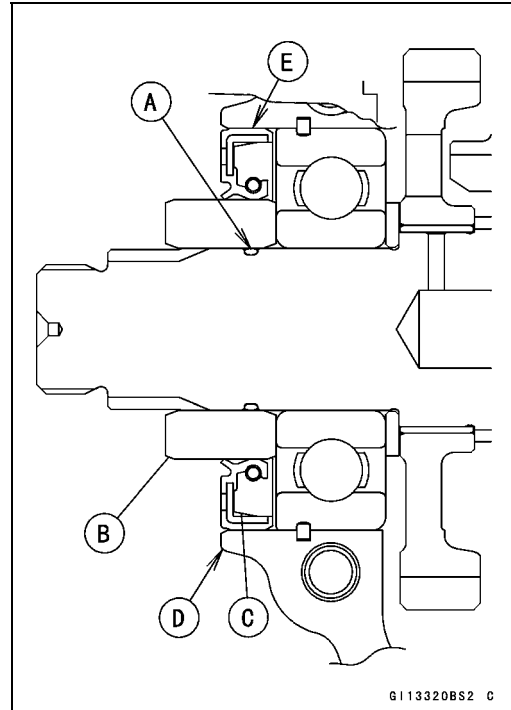


### Transmission Assy Disassembly

- Remove the transmission assy (see Transmission Assy Removal).
- Remove the following from the transmission case [A].
  - Shift Rods [B]
  - Shift Forks [C]
  - Drive Shaft [D]
  - Output Shaft [E]

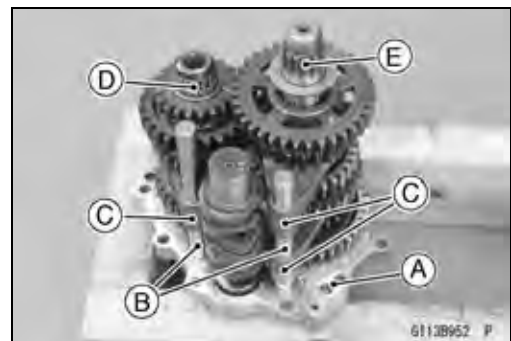

- Remove:
  - Shift Drum Cam Holder Bolt [A]
  - Shift Drum Cam [B] and Pin
  - Shift Drum [C]

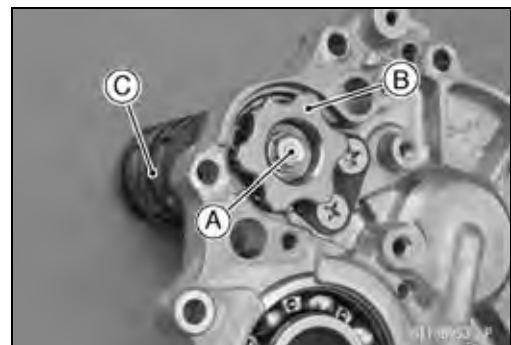

### Transmission Assy Assembly


- When the new ball bearing [A] and new race [B] are installed in the transmission case [C], press and insert them until they are bottomed.

**Special Tool - Bearing Driver Set: 57001-1129**

#### NOTE

○ Install the new ball bearing and new race so that the stepped side [D] faces inside of the transmission case.


- When the ball bearing [E] for shift drum is installed in the transmission case, insert the ball bearing until it is bottomed.

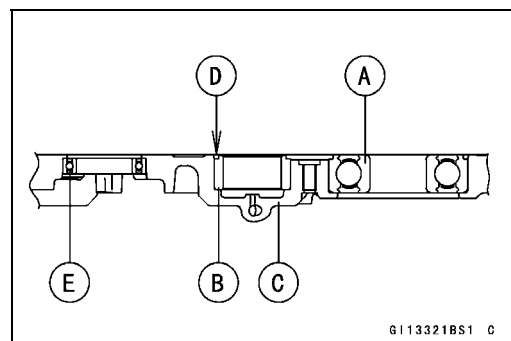

## Transmission


- Install the shift drum bearing holder [A].
- Apply a non-permanent locking agent to the threads of the shift drum bearing holder screws [B], and tighten them.

**Torque - Shift Drum Bearing Holder Screws: 4.9 N·m (0.50 kgf·m, 43 in·lb)**

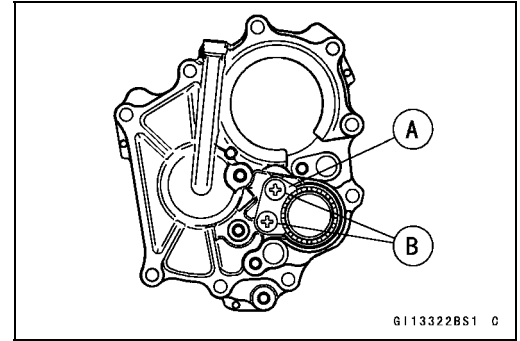

- Install the drive shaft bearing holder [A].
- Apply a non-permanent locking agent to the threads of the drive shaft bearing holder screw [B] and tighten it.


**Torque - Drive Shaft Bearing Holder Screw: 4.9 N·m (0.50 kgf·m, 43 in·lb)**

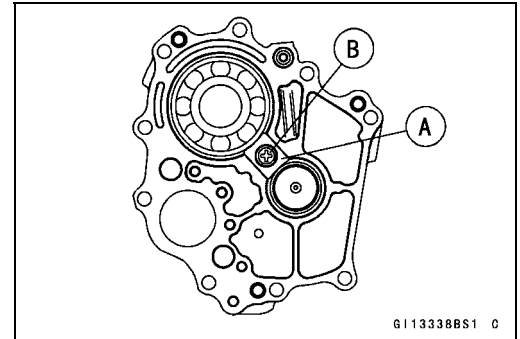

## 9-44 CRANKSHAFT/TRANSMISSION

### Transmission

- Apply engine oil to the shift drum groove.
- Install the following on the transmission case [A].
  - Shift Drum [B]
  - Pin [C]
  - Shift Drum Cam [D]
- Align the pin with the hole on the shift drum cam.
- Apply a non-permanent locking agent to the shift drum cam holder bolt [E] and tighten it.
- Torque - Shift Drum Cam Holder Bolt: 12 N·m (1.2 kgf·m, 106 in·lb)**
- Install the following as a set.
  - Drive Shaft [F]
  - Output Shaft [G]
- Install the shift forks as shown.
- Position the one [H] with shortest ears on the drive shaft and place the pin in the center groove in the shift drum.
- The two forks [J] on the output shaft are identical.
- Install the shift rods.
- The rod [K] length of the output shaft side is shorter than the rod [L] length of the drive shaft side.
- Apply molybdenum disulfide oil solution to the transmission gears shown with X marks [M].
- Be sure that the spacer [N] is on the output shaft.
- Install the transmission assy (see Transmission Assy Installation).

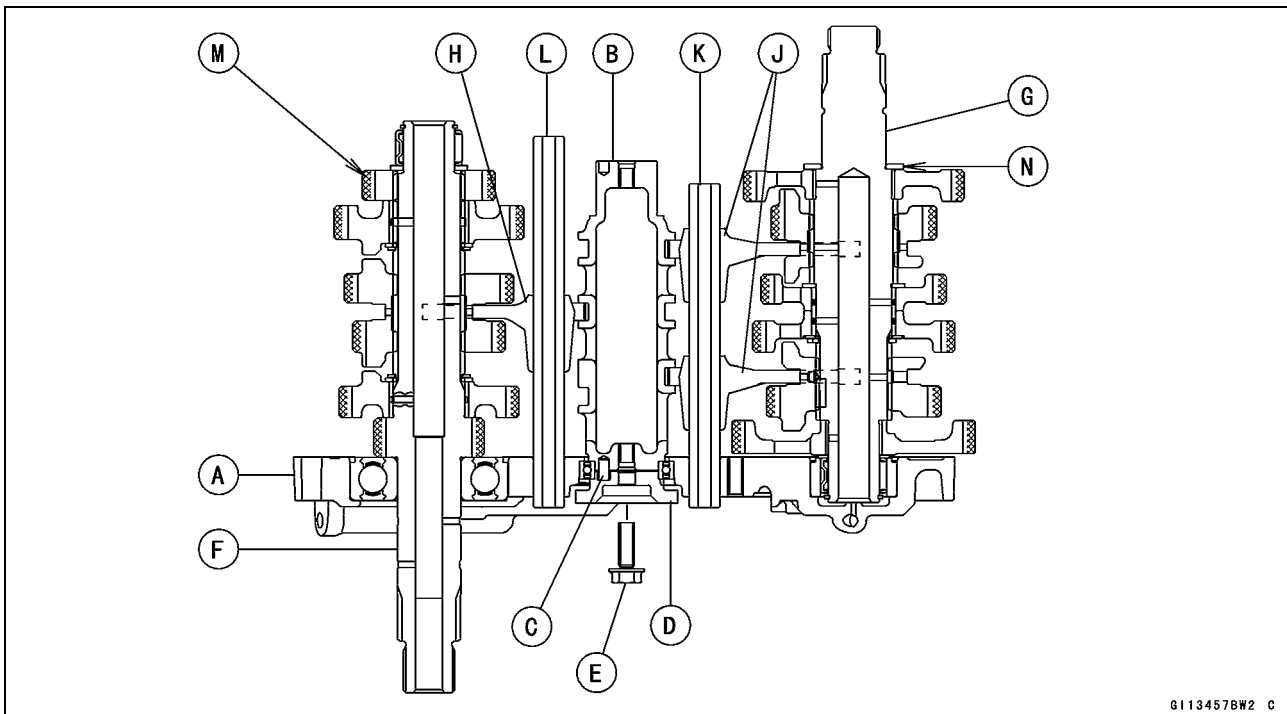

G1134578W2 C

#### **Transmission Shaft Removal**

- Refer to the Transmission Assy Disassembly.

#### **Transmission Shaft Installation**

- Refer to the Transmission Assy Assembly.




**Transmission**

**Transmission Shaft Disassembly**

- Remove the transmission shafts (see Transmission Assy Disassembly).
- Remove the circlips, disassemble the transmission shafts.


**Special Tool - Outside Circlip Pliers: 57001-144**

- The 5th gear [A] on the output shaft has three steel balls assembled into it for the positive neutral finder mechanism. Remove the 5th gear.
- Set the output shaft in a vertical position holding the 3rd gear [B].
- Spin the 5th gear quickly [C] and pull it off upward.

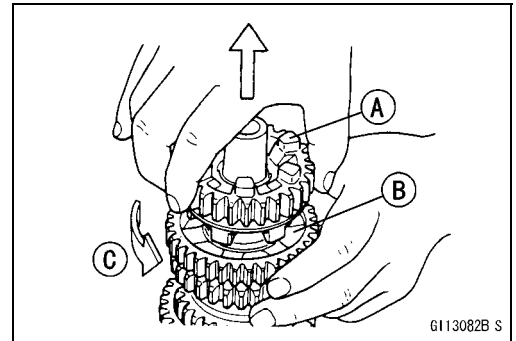


**Transmission Shaft Assembly**

- Apply engine oil to the bushings, needle bearings and shafts.
- Install the gear bushings [A] on the shaft with their holes [B] aligned.

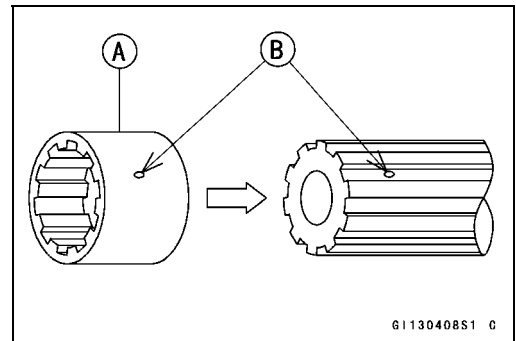

- Replace any circlips removed with new ones.
- Install the circlips [A] so that the opening [B] is aligned with a spline groove [C].

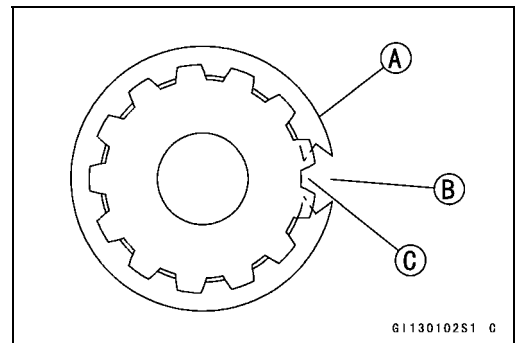

- The drive shaft gears can be recognized by size: the gear with the smallest diameter is 1st gear, and the largest one is 6th gear. Be sure that all parts are put back in the correct sequence and all circlips and washers are properly in place.
- Install the 3rd/4th gear onto the drive shaft with their oil holes aligned.
- Install the 6th gear bushing onto the drive shaft with their oil holes aligned.
- The output shaft gears can be recognized by size: the gear with the largest diameter is 1st gear, and the smallest one is 6th gear. Be sure that all parts are put back in the correct sequence and all circlips and washers are properly in place.
- Install the 5th and 6th gears onto the output shaft with their oil holes aligned.
- Install the 3rd/4th gear bushings onto the output shaft with their oil holes aligned.

## 9-46 CRANKSHAFT/TRANSMISSION


### Transmission

- Fit the steel balls into the 5th gear holes in the output shaft, aligning oil hole as shown.
  - 5th Gear [A]
  - Output Shaft [B]
  - Steel Balls [C]
  - Oil Hole [D]


#### **NOTICE**

**Do not apply grease to the balls to hold them in place. This will cause the positive neutral finder mechanism to malfunction.**

- After assembling the 5th gear with steel balls in place on the output shaft, check the ball-locking effect that the 5th gear doesn't come out of the output shaft when moving it up and down by hand.
- Check that each gear spins or slides freely on the transmission shafts without binding after assembly.

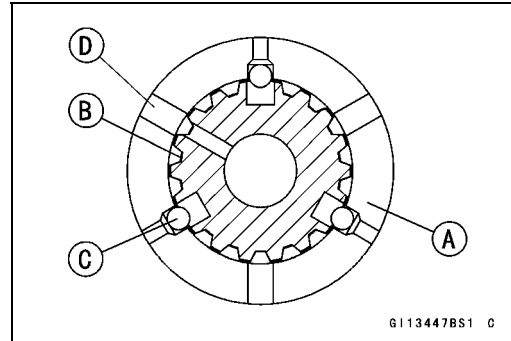

Transmission

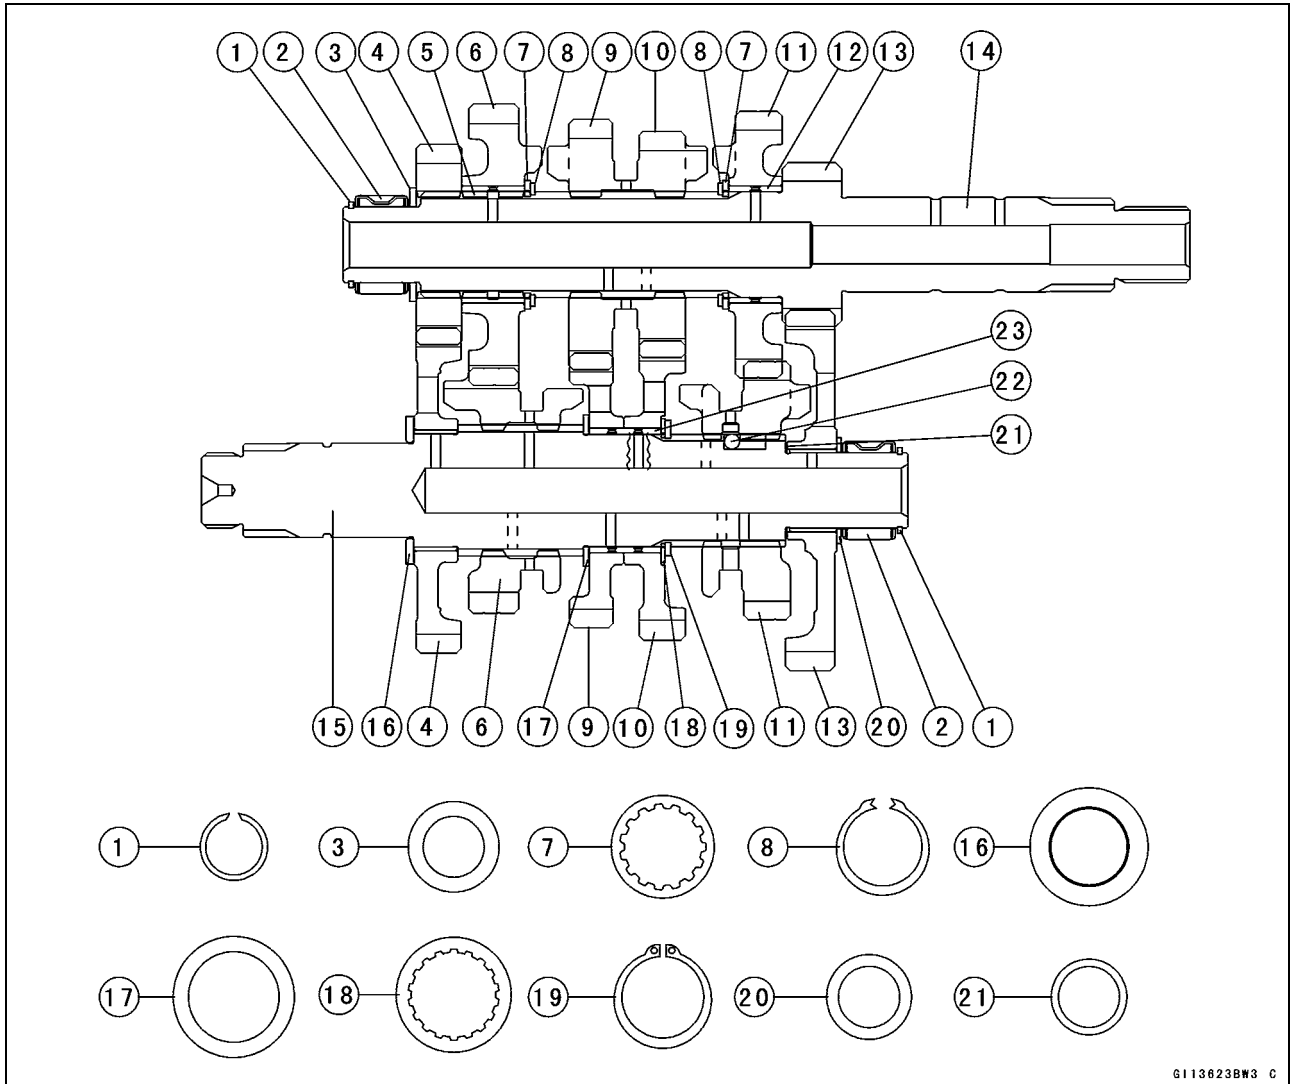

G113623BW3 C

1. Circlip
2. Needle Bearing
3. Thrust Washer,  $\phi 30$  mm (1.18 in.)
4. 2nd Gear
5. Bushing
6. 6th (Top) Gear
7. Toothed Washer,  $\phi 34$  mm (1.34 in.)
8. Circlip
9. 4th Gear
10. 3rd Gear
11. 5th Gear
12. Bushing
13. 1st Gear
14. Drive Shaft
15. Output Shaft
16. Spacer,  $\phi 39$  mm (1.54 in.)
17. Washer,  $\phi 40$  mm (1.57 in.)
18. Toothed Washer,  $\phi 38$  mm (1.50 in.)
19. Circlip,  $\phi 32.2$  mm (1.268 in.)
20. Shim,  $\phi 28$  mm (1.10 in.)
21. Thrust Washer,  $\phi 25$  mm (0.98 in.)
22. Steel Ball
23. Bushing

# 9-48 CRANKSHAFT/TRANSMISSION

## Transmission

### Shift Drum and Fork Removal

- Refer to the Transmission Assy Disassembly.

### Shift Drum and Fork Installation

- Refer to the Transmission Assy Assembly.

### Shift Drum Disassembly


- Refer to the Transmission Assy Disassembly.

### Shift Drum Assembly

- Refer to the Transmission Assy Assembly.

### Shift Fork Bending Inspection

- Visually inspect the shift forks, and replace any fork that is bent. A bent fork could cause difficulty in shifting, or allow the transmission to jump out of gear when under power.  
90° [A]

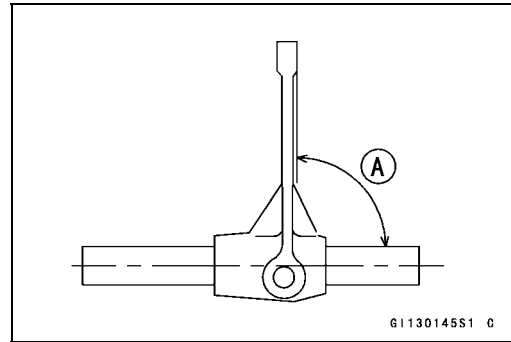

### Shift Fork/Gear Groove Wear Inspection

- Measure the thickness [A] of the shift fork ears, and measure the width [B] of the gear grooves.
- ★ If the thickness of a shift fork ear is less than the service limit, the shift fork must be replaced.

#### Shift Fork Ear Thickness

Standard: 5.9 ~ 6.0 mm (0.23 ~ 0.24 in.)


Service Limit: 5.8 mm (0.23 in.)

- ★ If the transmission gear groove is worn over the service limit, the gear must be replaced.

#### Transmission Gear Groove Width

Standard: 6.05 ~ 6.15 mm (0.238 ~ 0.242 in.)

Service Limit: 6.3 mm (0.25 in.)

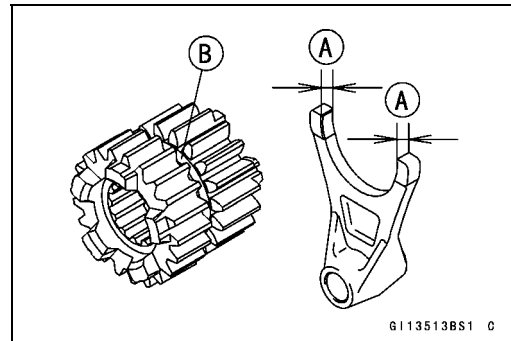

### Shift Fork Guide Pin/Drum Groove Wear Inspection

- Measure the diameter of each shift fork guide pin [A], and measure the width [B] of each shift drum groove.
- ★ If the guide pin on any shift fork is less than the service limit, the fork must be replaced.

#### Shift Fork Guide Pin Diameter

Standard: 6.9 ~ 7.0 mm (0.27 ~ 0.28 in.)


Service Limit: 6.8 mm (0.27 in.)

- ★ If any shift drum groove is worn over the service limit, the drum must be replaced.

#### Shift Drum Groove Width

Standard: 7.05 ~ 7.20 mm (0.278 ~ 0.283 in.)


Service Limit: 7.3 mm (0.29 in.)

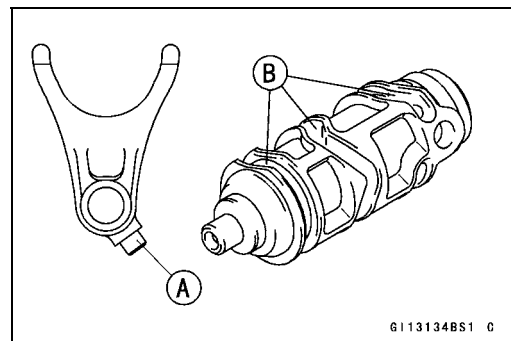

## Transmission

### ***Gear Dog and Gear Dog Hole Damage Inspection***

- Visually inspect the gear dogs [A] and gear dog holes [B].
- ★ Replace any damaged gears or gears with excessively worn dogs or dog holes.

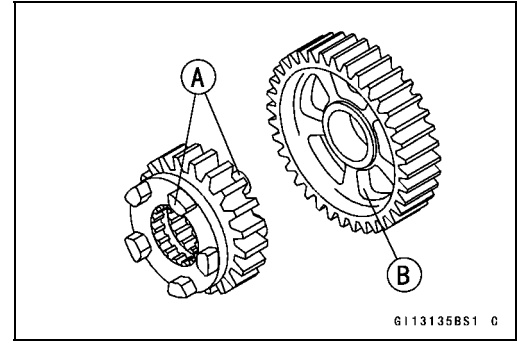

## 9-50 CRANKSHAFT/TRANSMISSION

### Ball Bearing, Needle Bearing, and Oil Seal

#### Ball and Needle Bearing Replacement

##### NOTICE

**Do not remove the ball or needle bearings unless it is necessary. Removal may damage them.**

- Using a press or puller, remove the ball bearing and/or needle bearings.

##### NOTE

○ In the absence of the above mentioned tools, satisfactory results may be obtained by heating the case to approximately 93°C (200°F) max., and tapping the bearing in or out.

##### NOTICE

**Do not heat the case with a torch. This will warp the case. Soak the case in oil and heat the oil.**

- Using a press and the bearing driver set [A], install the new ball bearing until it stops at the bottom of its housing.
- The new needle bearings must be pressed into the crankcase so that the end is flush with the end of the hole.

**Special Tool - Bearing Driver Set: 57001-1129**

#### Ball and Needle Bearing Wear Inspection



##### NOTICE

**Do not remove the bearings for inspection. Removal may damage them.**

- Check the ball bearings.
- Since the ball bearings are made to extremely close tolerances, the wear must be judged by feel rather than measurement. Clean each bearing in a high flash-point solvent, dry it (do not spin the bearing while it is dry), and oil it with engine oil.
- Spin [A] the bearing by hand to check its condition.
- ★ If the bearing is noisy, does not spin smoothly, or has any rough spots, replace it.
- Check the needle bearings.
- The rollers in a needle bearing normally wear very little, and wear is difficult to measure. Instead of measuring, inspect the bearing for abrasion, color change, or other damage.
- ★ If there is any doubt as to the condition of a needle bearing, replace it.

#### Oil Seal Inspection

- Inspect the oil seals.
- ★ Replace it if the lips are misshapen, discolored (indicating that the rubber has deteriorated), hardened or otherwise damaged.

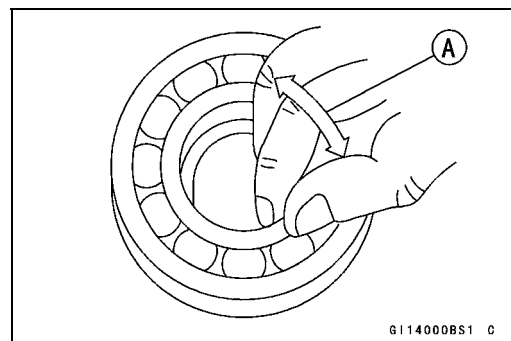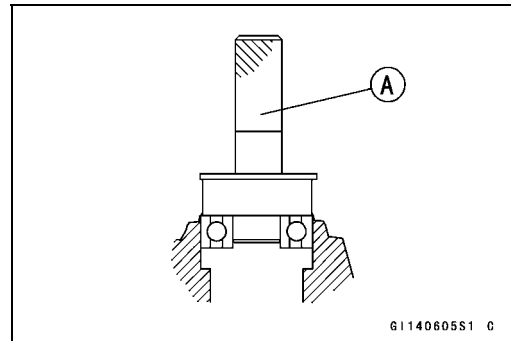


# Wheels/Tires

## Table of Contents

Exploded View .....	10-2
Specifications .....	10-4
Special Tools .....	10-5
Wheels (Rims) .....	10-6
Front Wheel Removal .....	10-6
Front Wheel Installation .....	10-6
Rear Wheel Removal .....	10-7
Rear Wheel Installation .....	10-8
Wheel Inspection .....	10-11
Axle Inspection .....	10-11
Balance Inspection .....	10-12
Balance Adjustment .....	10-12
Balance Weight Removal .....	10-12
Balance Weight Installation .....	10-12
Tires .....	10-14
Air Pressure Inspection/Adjustment .....	10-14
Tire Inspection .....	10-14
Tire Removal .....	10-14
Tire Installation .....	10-14
Tire Repair .....	10-16
Hub Bearing .....	10-17
Hub Bearing Removal .....	10-17
Hub Bearing Installation .....	10-17
Hub Bearing Inspection .....	10-18
Hub Bearing Lubrication .....	10-18

# 10-2 WHEELS/TIRES

## Exploded View

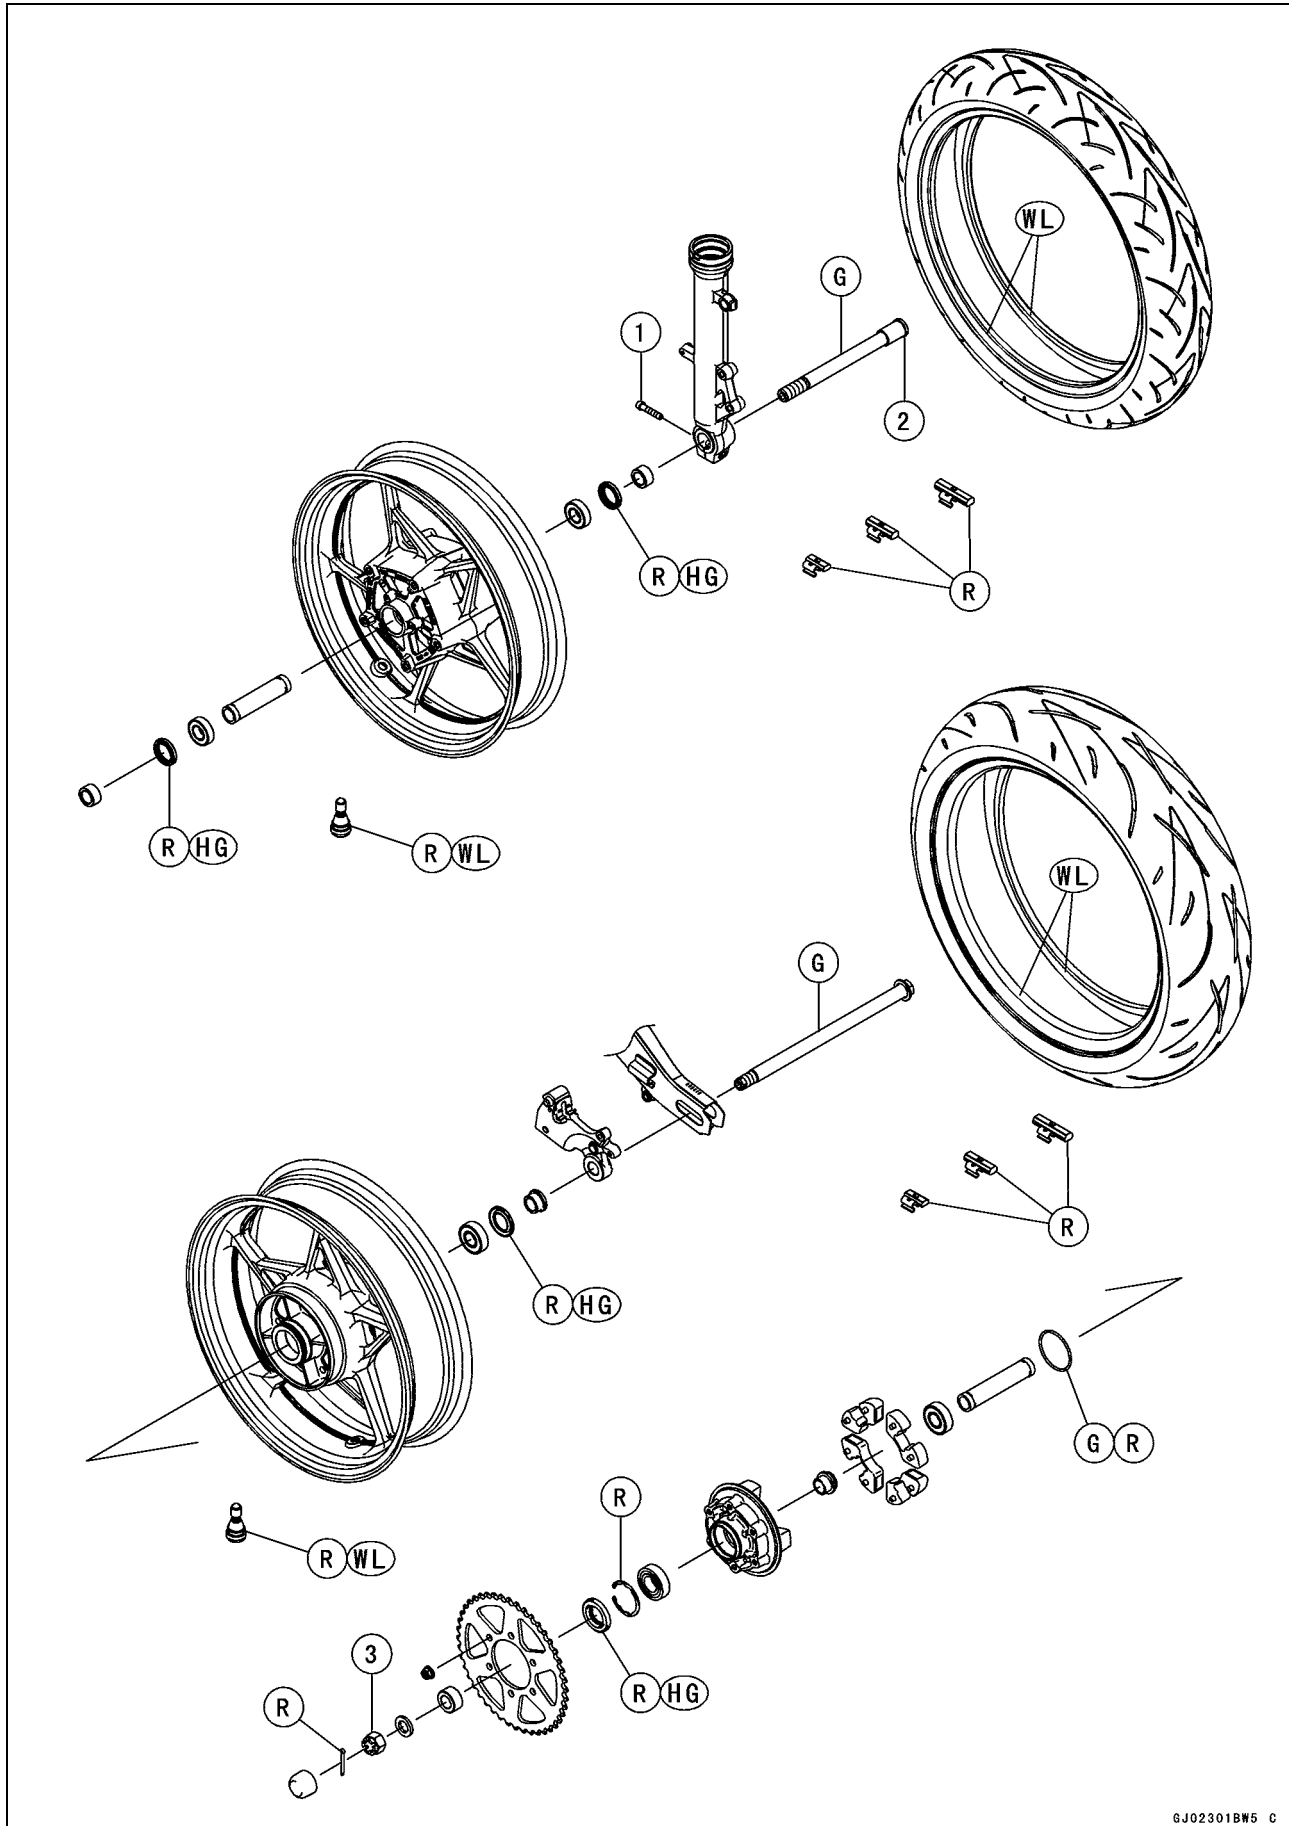



**Exploded View**

<b>No.</b>	<b>Fastener</b>	<b>Torque</b>			<b>Remarks</b>
		<b>N·m</b>	<b>kgf·m</b>	<b>ft·lb</b>	
1	Front Axle Clamp Bolt	20	2.0	15	
2	Front Axle	108	11.0	79.7	
3	Rear Axle Nut	108	11.0	79.7	

G: Apply grease.

HG: Apply high-temperature grease.

R: Replacement Parts

WL: Apply soap and water solution or rubber lubricant.

# 10-4 WHEELS/TIRES

## Specifications


Item	Standard	Service Limit
<b>Wheels (Rims)</b>		
Rim Runout:		
Axial:		
Front	TIR 0.5 mm (0.02 in.) or less	TIR 2.0 mm (0.08 in.)
Rear	TIR 0.5 mm (0.02 in.) or less	TIR 2.0 mm (0.08 in.)
Radial:		
Front	TIR 0.8 mm (0.03 in.) or less	TIR 2.0 mm (0.08 in.)
Rear	TIR 0.8 mm (0.03 in.) or less	TIR 2.0 mm (0.08 in.)
Axle Runout/100 mm (3.94 in.):		
Front	TIR 0.03 mm (0.001 in.) or less	TIR 0.2 mm (0.008 in.)
Rear	TIR 0.03 mm (0.001 in.) or less	TIR 0.2 mm (0.008 in.)
Wheel Balance	10 g (0.35 oz.) or less	— — —
Balance Weights	10 g (0.35 oz.), 20 g (0.71 oz.), 30 g (1.06 oz.)	— — —
Rim Size:		
Front	J17M/C x MT3.50	— — —
Rear	J17M/C x MT4.50	— — —
<b>Tires</b>		
Air Pressure (when cold):		
Front	225 kPa (2.25 kgf/cm <sup>2</sup> , 32 psi)	— — —
Rear	250 kPa (2.50 kgf/cm <sup>2</sup> , 36 psi)	— — —
Tread Depth:		
Front	4 mm (0.16 in.)	1 mm (0.04 in.) (AT, CH, DE) 1.6 mm (0.06 in.)
Rear	5.8 mm (0.23 in.)	UP to 130 km/h (80 mph): 2 mm (0.08 in.) Over 130 km/h (80 mph): 3 mm (0.12 in.)
Standard Tires:		
Front:		
Make	DUNLOP	— — —
Type	SPORTMAX , D214F W	— — —
Size	120/70ZR17 MC (58W)	— — —
Rear:		
Make	DUNLOP	— — —
Type	SPORTMAX , D214 W	— — —
Size	160/60ZR17 MC (69W)	— — —

### **WARNING**


**Some replacement tires may adversely affect handling and cause an accident resulting in serious injury or death. To ensure proper handling and stability, use only the recommended standard tires for replacement, inflated to the standard pressure.**

Special Tools


Bearing Driver Set:  
57001-1129

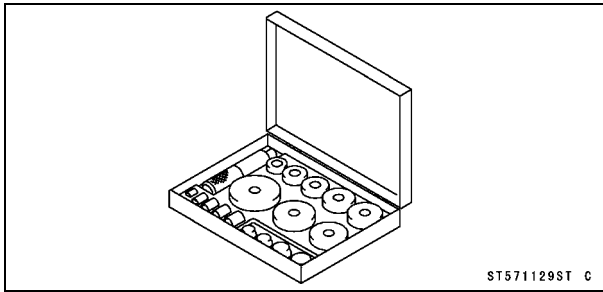

Bearing Remover Shaft,  $\phi 13$ :  
57001-1377

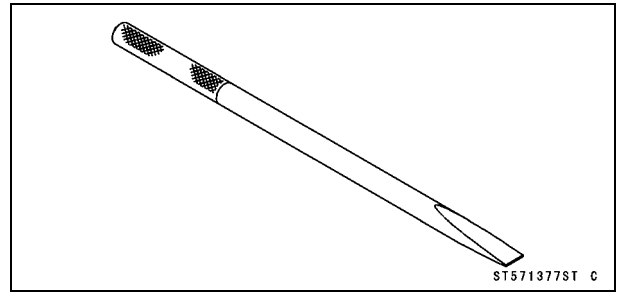

Bearing Remover Head,  $\phi 20 \times \phi 22$ :  
57001-1293

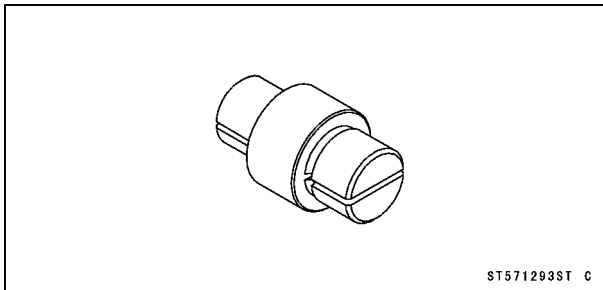

## 10-6 WHEELS/TIRES


### Wheels (Rims)

#### Front Wheel Removal

- For the ABS equipped models, remove the bolt [A] and front wheel rotation sensor [B], and clear the front wheel sensor lead from the clamp [C].

- Remove:

- Front Caliper Mounting Bolts [D] (Both Sides)
- Front Calipers [E] (Both Sides)

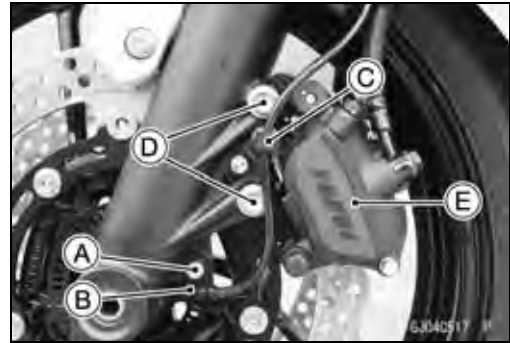

- Loosen:

- Front Axle Clamp Bolt [A]
- Front Axle [B]




- Raise the front wheel off the ground with a suitable stand.
- Pull out the front axle to the right and drop the front wheel out of the front forks.

#### NOTICE

**Do not lay the wheel down on one of the discs. This can damage or warp the disc. Place blocks under the wheel so that the disc does not touch the ground.**

#### Front Wheel Installation

- Apply high-temperature grease to the grease seal lips.
- Fit the collar [A] on the both sides of the hub.
- The collars are identical.

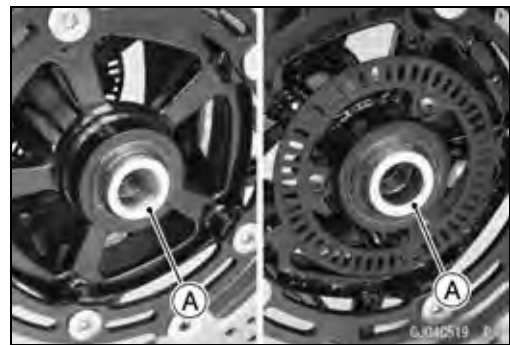


- Apply a thin coat of grease [A] to the front axle [B] for rust prevention.

- About 10 mm (0.4 in.) [C]
- About 30 mm (1.2 in.) [D]

#### NOTE

○ Do not apply grease to the threads of the axle.

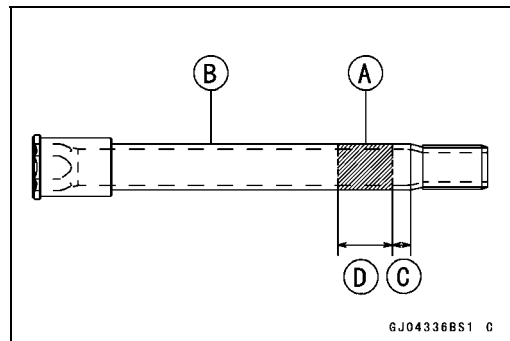

## Wheels (Rims)

- Check the wheel rotation mark on the front wheel and install it.

### NOTE

- The wheel rotation direction [A] is shown by an arrow [B] on the wheel hub.



- Insert the front axle from the right side.
- Wipe off excess grease if necessary.
- Install the front axle temporarily and remove the jack.
- Tighten:

**Torque - Front Axle: 108 N·m (11.0 kgf·m, 79.7 ft·lb)**

- Before tightening the front axle clamp bolt [A] on the right front fork leg, pump the front fork up and down 4 or 5 times to allow the right front fork leg to seat on the front axle.

### NOTE

- Put a block in front of the front wheel to stop moving.

- Tighten:
- Torque - Front Axle Clamp Bolt: 20 N·m (2.0 kgf·m, 15 ft·lb)**
- Install the removed parts (see appropriate chapters).
- Check the front brake effectiveness (see Brake Operation Inspection in the Periodic Maintenance chapter).




### **⚠ WARNING**

After servicing, it takes several applications of the brake lever before the brake pads contact the disc, which could result in increased stopping distance and cause an accident resulting in injury or death. Do not attempt to ride the motorcycle until a firm brake lever is obtained by pumping the lever until the pads are against the disc.

### **Rear Wheel Removal**


- Raise the rear wheel off the ground with the stand [A].

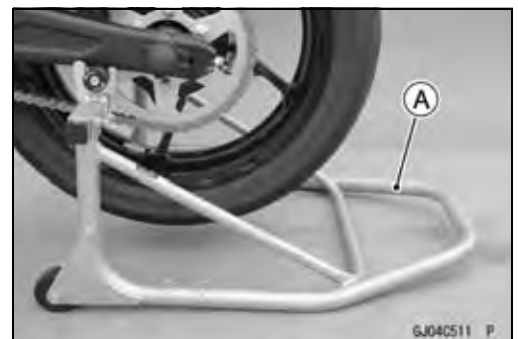

## 10-8 WHEELS/TIRES

### Wheels (Rims)


- Remove the bolt [A] and rear wheel rotation sensor [B], and clear the rear wheel rotation sensor lead from clamp [C].
- Remove the rear caliper [D] together with the brake hose (see Rear Caliper Removal in the Brake chapter).

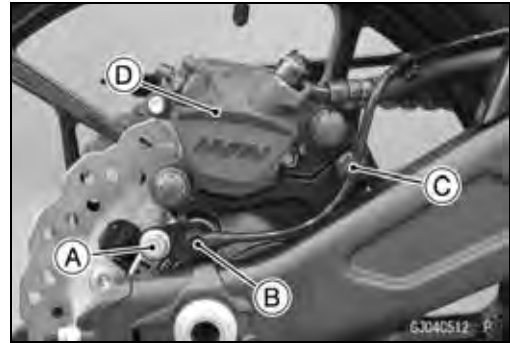

- Remove the cap [A].



- Remove:
  - Cotter Pin [A]
  - Rear Axle Nut [B]
  - Washer [C]
  - Wheel Alignment Indicator [D] (Both Sides)
  - Rear Axle [E] (from Right Side)

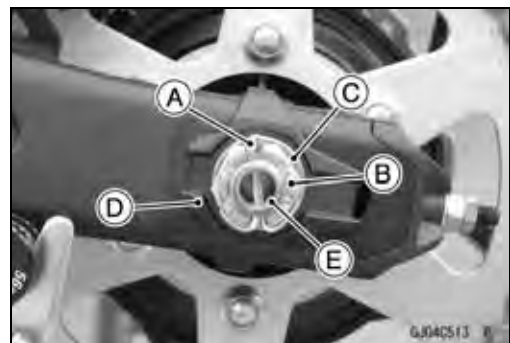

- Remove the drive chain [A] from the rear sprocket toward the left.
- Move the rear wheel back and remove it.




#### **NOTICE**

**Do not lay the wheel on the ground with the disc facing down. This can damage or warp the disc. Place blocks under the wheel so that the disc does not touch the ground.**


#### **Rear Wheel Installation**

- ★ If the chain adjuster assembly is removed, install the next procedure.
- Install the chain adjusters [A] to the swingarm as shown.
  - Left Side [B]
  - Right Side [C]

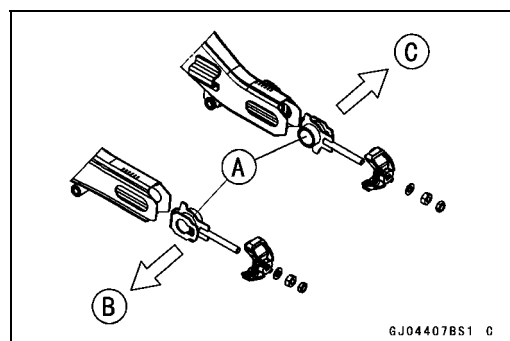


## Wheels (Rims)


- Install the caps [A] so that the stepped side [B] faces inside of the swingarm.
  - Left Side [C]
  - Right Side [D]

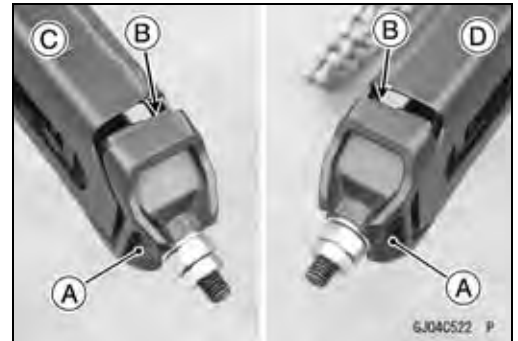

- Apply high-temperature grease to the grease seal lips.
- Fit the collars on the both sides of the hub.
  - Left Side Collar [A]
  - Right Side Collar [B] (with Flange)

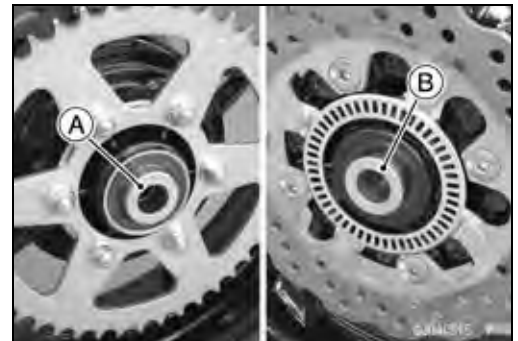

- Install the caliper bracket [A] onto the stopper [B] of the swingarm.
- Engage the drive chain with the rear sprocket.

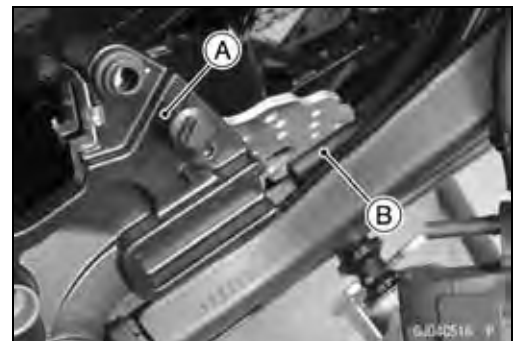


- Apply a thin coat of grease [A] to the rear axle [B] for rust prevention.
  - About 10 mm (0.4 in.) [C]
  - About 70 mm (2.8 in.) [D]

### NOTE

○ Do not apply grease to the threads of the axle.

- Insert the axle from the right side of the wheel.
- Wipe off any excess grease if necessary.
- Adjust the drive chain slack before tightening the axle nut (see Drive Chain Slack Inspection in the Periodic Maintenance chapter).
- Tighten:

**Torque - Rear Axle Nut: 108 N·m (11.0 kgf·m, 79.7 ft·lb)**

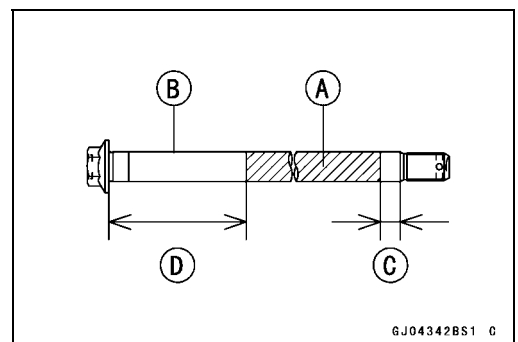


## 10-10 WHEELS/TIRES

### Wheels (Rims)

- Insert a new cotter pin [A].

#### NOTE

- When inserting the cotter pin, if the slots in the nut do not align with the cotter pin hole in the axle, tighten the nut clockwise [B] up to next alignment.
- It should be within 30 degrees.
- Loosen once and tighten again when the slot goes past the nearest hole.

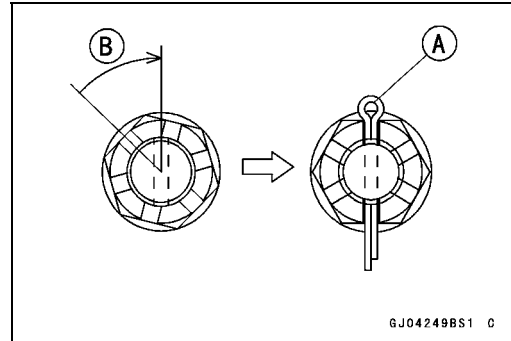


- Bend the cotter pin ends [A] along the nut [B].

#### ⚠ WARNING

**A loose axle nut can lead to an accident resulting in serious injury or death. Tighten the axle nut to the proper torque and install a new cotter pin.**

- Install the cap.

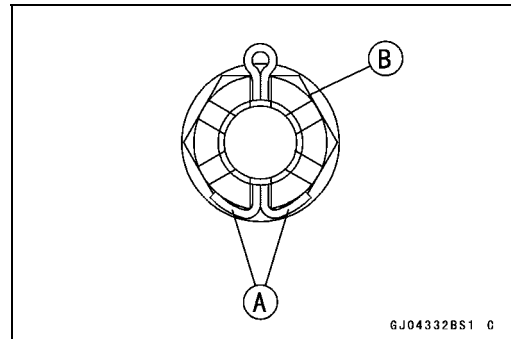

- Install the rear caliper (see Rear Caliper Installation in the Brakes chapter).
- For the ABS equipped models, install the rear wheel rotation sensor (see Rear Wheel Rotation Sensor Installation in the Brakes chapter).
- Check the rear brake effectiveness (see Brake Operation Inspection in the Periodic Maintenance chapter).

#### ⚠ WARNING


**After servicing, it takes several applications of the brake pedal before the brake pads contact the disc, which could result in increased stopping distance and cause an accident resulting in injury or death. Do not attempt to ride the motorcycle until a firm brake pedal is obtained by pumping the pedal until the pads are against the disc.**



## Wheels (Rims)

### Wheel Inspection

- Raise the front/rear wheel off the ground with a suitable stand.
- Spin the wheel lightly, and check for roughness or binding.
- ★ If roughness or binding is found, replace the hub bearings (see Hub Bearing Removal/Installation).
- Inspect the wheel for small cracks, dents, bending, or warp.
- ★ If there is any damage to the wheel, replace the wheel.
- Remove the wheel, and support it with the tire by the axle.
- Measure the rim runout, axial [A] and radial [B], with a dial gauge.
- ★ If rim runout exceeds the service limit, check the hub bearings (see Hub Bearing Inspection).
- ★ If the problem is not due to the bearings, replace the wheel.

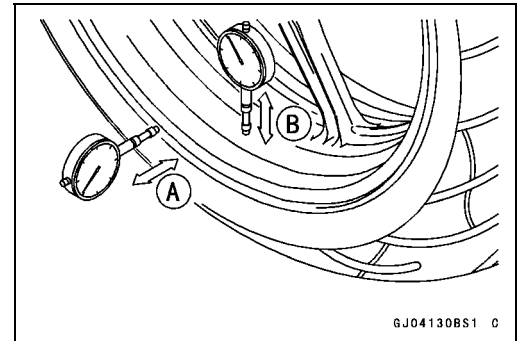

### Rim Runout (with tire installed)

#### Standard:

Axial TIR 0.5 mm (0.02 in.) or less

Radial TIR 0.8 mm (0.03 in.) or less

#### Service Limit:

Axial TIR 2.0 mm (0.08 in.)


Radial TIR 2.0 mm (0.08 in.)

### **⚠ WARNING**

**Damaged wheel parts may fail and cause an accident resulting in serious injury or death. Never attempt to repair a damaged wheel part. If the wheel part is damaged, it must be replaced with a new one.**

### Axle Inspection

- Remove the front and rear axles (see Front/Rear Wheel Removal).
- Visually inspect the front and rear axle for damages.
- ★ If the axle is damaged or bent, replace it.
- Place the axle in V blocks that are 100 mm (3.94 in.) [A] apart, and set a dial gauge [B] on the axle at a point halfway between the blocks. Turn [C] the axle to measure the runout. The difference between the highest and lowest dial readings is the amount of runout.
- ★ If axle runout exceeds the service limit, replace the axle.

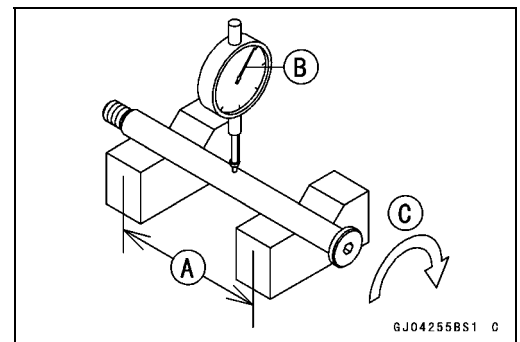

### Axle Runout/100 mm (3.94 in.)

Standard: TIR 0.03 mm (0.001 in.) or less


Service Limit: TIR 0.2 mm (0.008 in.)

## 10-12 WHEELS/TIRES

### Wheels (Rims)


#### **Balance Inspection**

- Remove the front and rear wheels (see Front/Rear Wheel Removal).
- Support the wheel so that it can be spun freely.
- Spin the wheel lightly, and mark [A] the wheel at the top when the wheel stops.
- Repeat this procedure several times. If the wheel stops of its own accord in various positions, it is well balanced.
- ★ If the wheel always stops in one position, adjust the wheel balance (see Balance Adjustment).

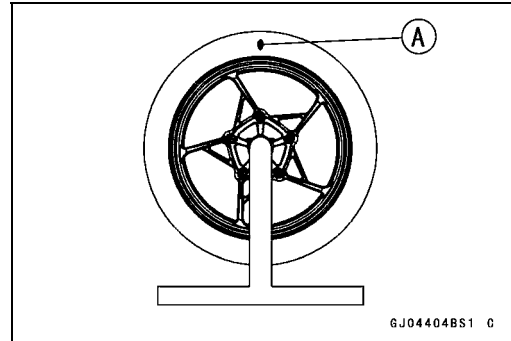


#### **Balance Adjustment**

- If the wheel always stops in one position, provisionally attach a balance weight [A] on the rim at the marking using adhesive tape.
- Rotate the wheel 1/4 turn [B], and see whether or not the wheel stops in this position. If it does, the correct balance weight is being used.
- ★ If the wheel rotates and the weight goes up, replace the weight with the next heavier size. If the wheel rotates and the weight goes down, replace the weight with the next lighter size. Repeat these steps until the wheel remains at rest after being rotated 1/4 turn.
- Rotate the wheel another 1/4 turn and then another 1/4 turn to see if the wheel is correctly balanced.
- Repeat the entire procedure as many times as necessary to achieve correct wheel balance.
- Permanently install the balance weight.

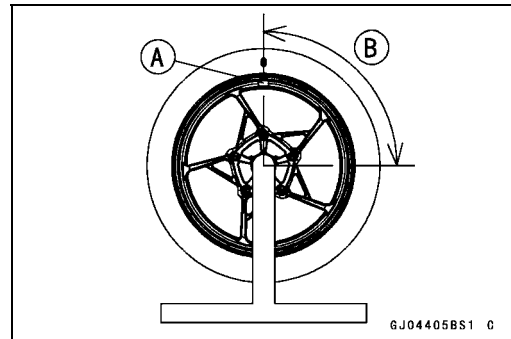

#### **Balance Weight Removal**

- Insert a flat tip screwdrivers [A] [B] between the rib [C] and weight [D] as shown.
- Pry the balance weight with two screwdrivers and remove the balance weight.
- Discard the used balance weight.

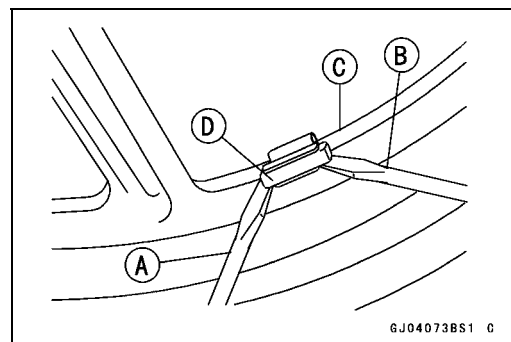

#### **NOTICE**


**Do not tap the screwdrivers. The rim could be damaged.**

#### **Balance Weight Installation**

- Check if the weight portion has any play on the blade [A] and clip [B].
- ★ If it does, discard it.

#### **⚠ WARNING**

**Unbalanced wheels can create an unsafe riding condition. If the balance weight has any play on the rib of the rim, the blade and/or clip have been stretched. Replace the loose balance weight. Do not reuse used balance weight.**

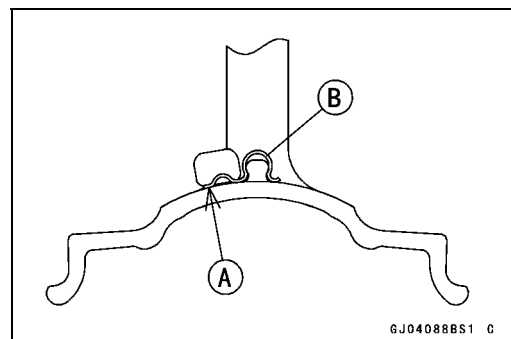

**Wheels (Rims)**

**Balance Weight**

Part Number	Weight
41075-0007	10 g (0.35 oz.)
41075-0008	20 g (0.71 oz.)
41075-0009	30 g (1.06 oz.)


**NOTE**

○Balance weights are available from Kawasaki dealers in 10, 20 and 30 grams (0.35, 0.71 and 1.06 oz.) sizes. An imbalance of less than 10 grams (0.35 oz.) will not usually affect running stability.

○Do not use four or more balance weight (more than 90 grams, 3.2 oz.). If the wheel requires an excess balance weight, disassemble the wheel to find the cause.

- Slip the balance weight [A] onto the rib [B] by pushing or lightly hammering [C] the clip [D].


Left Side [E]  
Right Side [F]

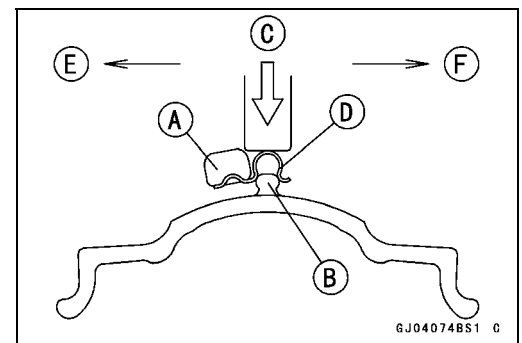

- Be sure to install the balance weight.

○Check that the blade [A] and clip [B] are fully seated on the rim [C] and that the clip is hooked over the rib [D].

Left Side [E]  
Right Side [F]

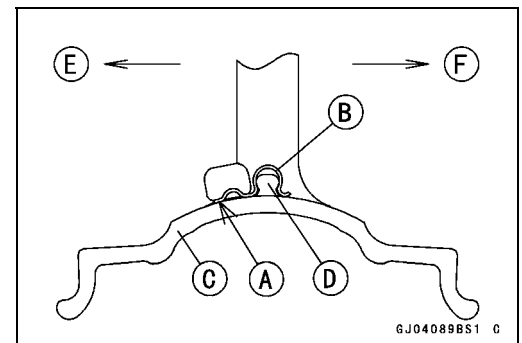

## 10-14 WHEELS/TIRES

### Tires

#### **Air Pressure Inspection/Adjustment**


- Refer to the Air Pressure Inspection in the Periodic Maintenance chapter.

#### **Tire Inspection**

- Refer to the Wheel/Tire Damage Inspection in the Periodic Maintenance chapter.

#### **Tire Removal**

- Remove:
  - Wheels (see Front/Rear Wheel Removal)
  - Valve Core (Let out the air)
- To maintain wheel balance, mark the valve stem position on the tire with chalk so that the tire can be reinstalled in the same position.
  - Chalk Mark or Yellow Mark [A]
  - Valve Stem [B]
  - Align [C]
- Lubricate the tire beads and rim flanges on both sides with a soap and water solution or rubber lubricant. This helps the tire beads slip off the rim flanges.

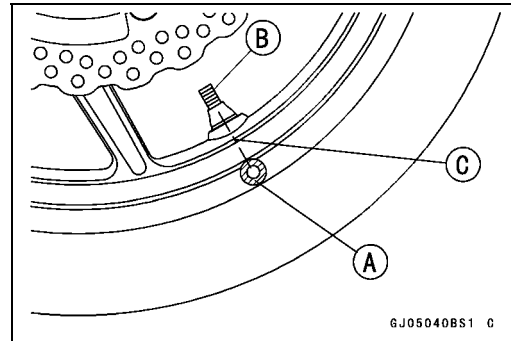

#### **NOTICE**

**Never lubricate with engine oil or petroleum distillates because they will deteriorate the tire.**

- Remove the tire from the rim using a suitable commercially available tire changer.

#### **NOTE**

- *The tires cannot be removed with hand tools because they fit the rims too tightly.*

#### **Tire Installation**

#### **⚠ WARNING**

**Some replacement tires may adversely affect handling and cause an accident resulting in serious injury or death. To ensure proper handling and stability, use only the recommended standard tires for replacement, inflated to the standard pressure.**

- Inspect the rim and tire, and replace them if necessary.
- Clean the sealing surfaces of the rim and tire, and smooth the sealing surfaces of the rim with a fine emery cloth if necessary.
- Remove the air valve and discard it.

#### **NOTICE**

**Replace the air valve whenever the tire is replaced. Do not reuse the air valve.**

**Tires**



- Install a new valve in the rim.
- Remove the valve cap, lubricate the stem seal [A] with a soap and water solution or rubber lubricant, and pull [B] the valve stem through the rim from the inside out until it snaps into place.

**NOTICE**

**Do not use engine oil or petroleum distillates to lubricate the stem because they will deteriorate the rubber.**


- The air valve is as shown.

- Valve Cap [A]
- Valve Core [B]
- Stem Seal [C]
- Valve Stem [D]
- Valve Seat [E]
- Valve Opened [F]

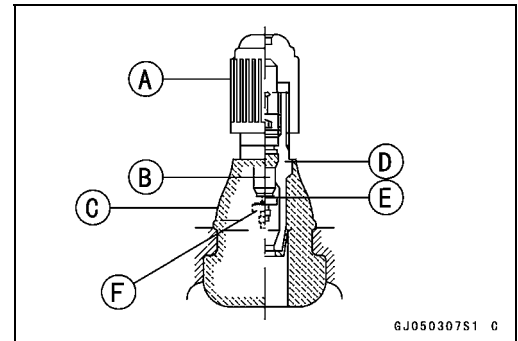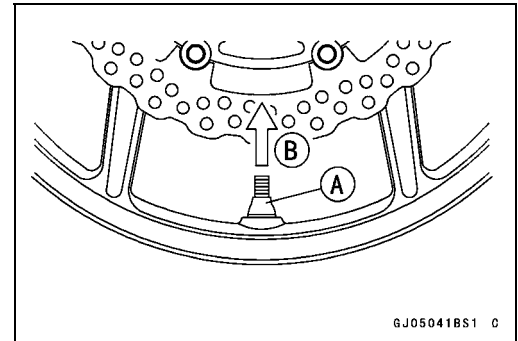


- Check the tire rotation mark on the front and rear tires and install them on the rim accordingly.

- Tire Rotation Mark [A]
- Wheel Rotation Mark [B] (Front Wheel)
- Rotating Direction [C]

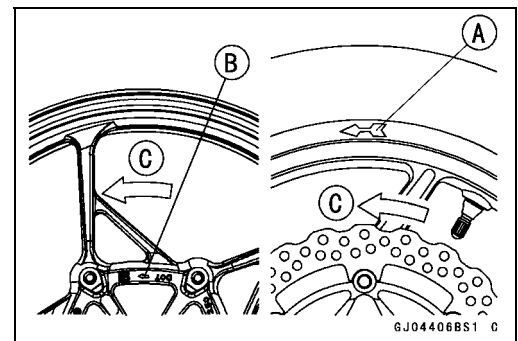

- Position the tire on the rim so that the valve [A] align with the tire balance mark [B] (the chalk mark made during removal, or the yellow paint mark on a new tire).
- Install the tire bead over the rim flange using a suitable commercially available tire changer.
- Lubricate the tire beads and rim flanges with a soap and water solution or rubber lubricant to help seat the tire beads in the sealing surfaces of the rim while inflating the tire.
- Center the rim in the tire beads, and inflate the tire with compressed air until the tire beads seat in the sealing surfaces.

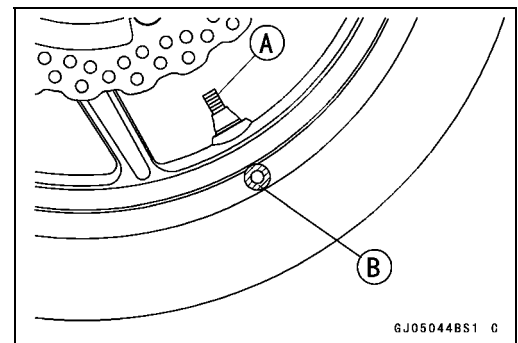


**⚠ WARNING**

**Overinflating a tire can cause it to explode, causing serious injury or death. Be sure to install the valve core whenever inflating the tire, and do not inflate the tire to more than 400 kPa (4.0 kgf/cm<sup>2</sup>, 57 psi).**

## 10-16 WHEELS/TIRES

### Tires

- Check to see that the rim lines [A] on both sides of the tire sidewalls are parallel with the rim flanges.
- ★ If the rim flanges and tire sidewall rim lines are not parallel, remove the valve core.
- Lubricate the rim flanges and tire beads.
- Install the valve core and inflate the tire again.
- After the tire beads seat in the rim flanges, check for air leakage.
- Inflate the tire slightly above standard inflation.
- Use a soap and water solution or submerge the tire, and check for bubbles that would indicate leakage.
- Adjust the air pressure to the specified pressure (see Air Pressure Inspection in the Periodic Maintenance chapter).
- Install the air valve cap.
- Adjust the wheel balance (see Balance Adjustment).

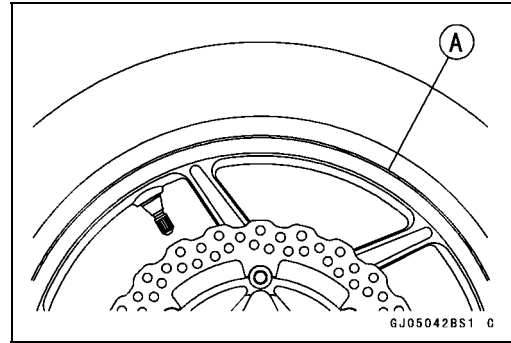


### ***Tire Repair***

Currently two types of repair for tubeless tires have come into wide use. One type is called a temporary (external) repair which can be carried out without removing the tire from the rim, and the other type is called permanent (internal) repair which requires tire removal. It is generally understood that higher running durability is obtained by permanent (internal) repairs than by temporary (external) ones. Also, permanent (internal) repairs have the advantage of permitting a thorough examination for secondary damage not visible from external inspection of the tire. For these reasons, Kawasaki does not recommend temporary (external) repair. Only appropriate permanent (internal) repairs are recommended. Repair methods may vary slightly from make to make. Follow the repair methods indicated by the manufacturer of the repair tools and materials so that safe results can be obtained.

## Hub Bearing

### Hub Bearing Removal

- Remove the wheels (see Front/Rear Wheel Removal), and take out the following.
  - Collars [A]
  - Coupling [B] (Out of rear hub)
  - Grease Seals [C]

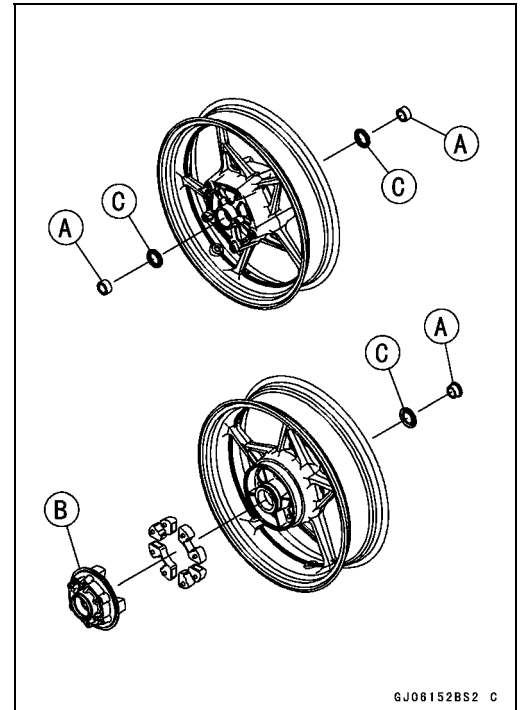


- Use the bearing remover to remove the hub bearings [A].

### NOTICE

Do not lay the wheel on the ground with the disc facing down. This can damage or warp the disc. Place blocks under the wheel so that the disc does not touch the ground.

Special Tools - Bearing Remover Head,  $\phi 20 \times \phi 22$  [B]:  
57001-1293

Bearing Remover Shaft,  $\phi 13$  [C]: 57001-1377

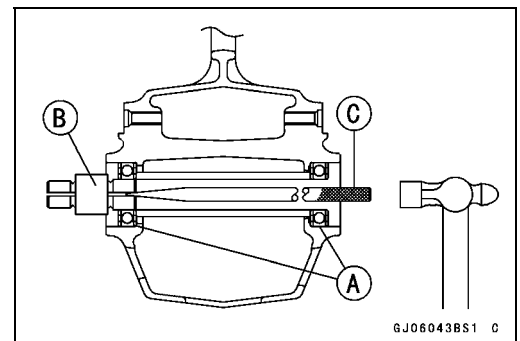

### Hub Bearing Installation

- Before installing the hub bearings, blow any dirt or foreign particles out of the hub with compressed air to prevent contamination of the bearings.
- Replace the bearings with new ones.
- Install the bearings by using the bearing driver set which does not contact the bearing inner race.



### NOTE

○ Install the bearings so that the marked side faces out.

## 10-18 WHEELS/TIRES

### Hub Bearing

- Press in each right bearing [A] until it is bottomed.  
**Special Tool - Bearing Driver Set [B]: 57001-1129**
- Install the collar [C].
- Press in each left bearing until it is bottomed.  
**Special Tool - Bearing Driver Set: 57001-1129**
- Confirm that the axle can be inserted smoothly.
- Confirm that the each bearing inner race can be turned smoothly. Then visually inspect that the inner race of the opposite side turns.
- ★ If they do not turn smoothly, remove the bearings and sleeve and visually inspect the wheel and sleeve.
  
- Replace the grease seals with new ones.
- Press in the grease seals [A] so that the seal surface is flush [B] with the end of the hole.  
**Special Tool - Bearing Driver Set [C]: 57001-1129**
- Apply high-temperature grease to the grease seal lips.
- Install the removed parts (see appropriate chapters).

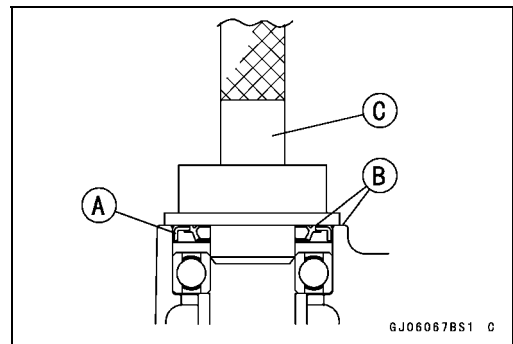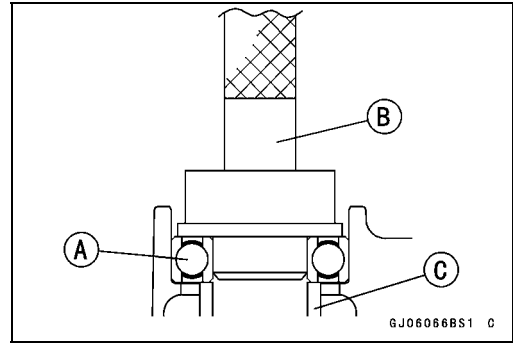

### Hub Bearing Inspection

Since the hub bearings are made to extremely close tolerances, the clearance can not normally be measured.

#### NOTE


○ Do not remove any bearings for inspection. If any bearings are removed, they will need to be replaced with new ones.

- Turn each bearing in the hub back and forth [A] while checking for plays, roughness, or binding.
- ★ If bearing play, roughness, or binding is found, replace the bearing.
- Examine the bearing seal [B] for tears or leakage.
- ★ If the seal is torn or is leaking, replace the bearing.

### Hub Bearing Lubrication

#### NOTE

○ Since the hub bearings are packed with grease and sealed, lubrication is not required.

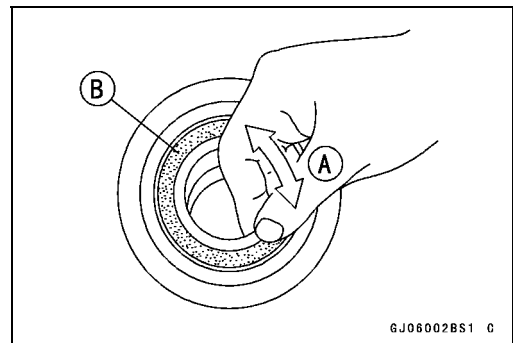




# Final Drive

## Table of Contents

- Exploded View ..... 11-2
- Specifications ..... 11-4
- Special Tools ..... 11-5
- Drive Chain ..... 11-6
  - Drive Chain Slack Inspection ..... 11-6
  - Drive Chain Slack Adjustment ..... 11-6
  - Wheel Alignment Inspection/Adjustment ..... 11-6
  - Drive Chain Wear Inspection ..... 11-6
  - Drive Chain Lubrication..... 11-6
  - Drive Chain Removal ..... 11-6
  - Drive Chain Installation ..... 11-7
  - Drive Chain Replacement..... 11-7
  - Drive Chain Installation ..... 11-8
- Sprocket, Coupling ..... 11-11
  - Engine Sprocket Removal ..... 11-11
  - Engine Sprocket Installation ..... 11-11
  - Rear Sprocket Removal..... 11-12
  - Rear Sprocket Installation..... 11-12
  - Coupling Installation..... 11-13
  - Coupling Bearing Removal ..... 11-13
  - Coupling Bearing Installation ..... 11-14
  - Coupling Bearing Inspection ..... 11-14
  - Coupling Bearing Lubrication..... 11-14
  - Coupling Damper Inspection..... 11-15
  - Sprocket Wear Inspection..... 11-15
  - Rear Sprocket Warp Inspection ..... 11-15

# 11-2 FINAL DRIVE

## Exploded View

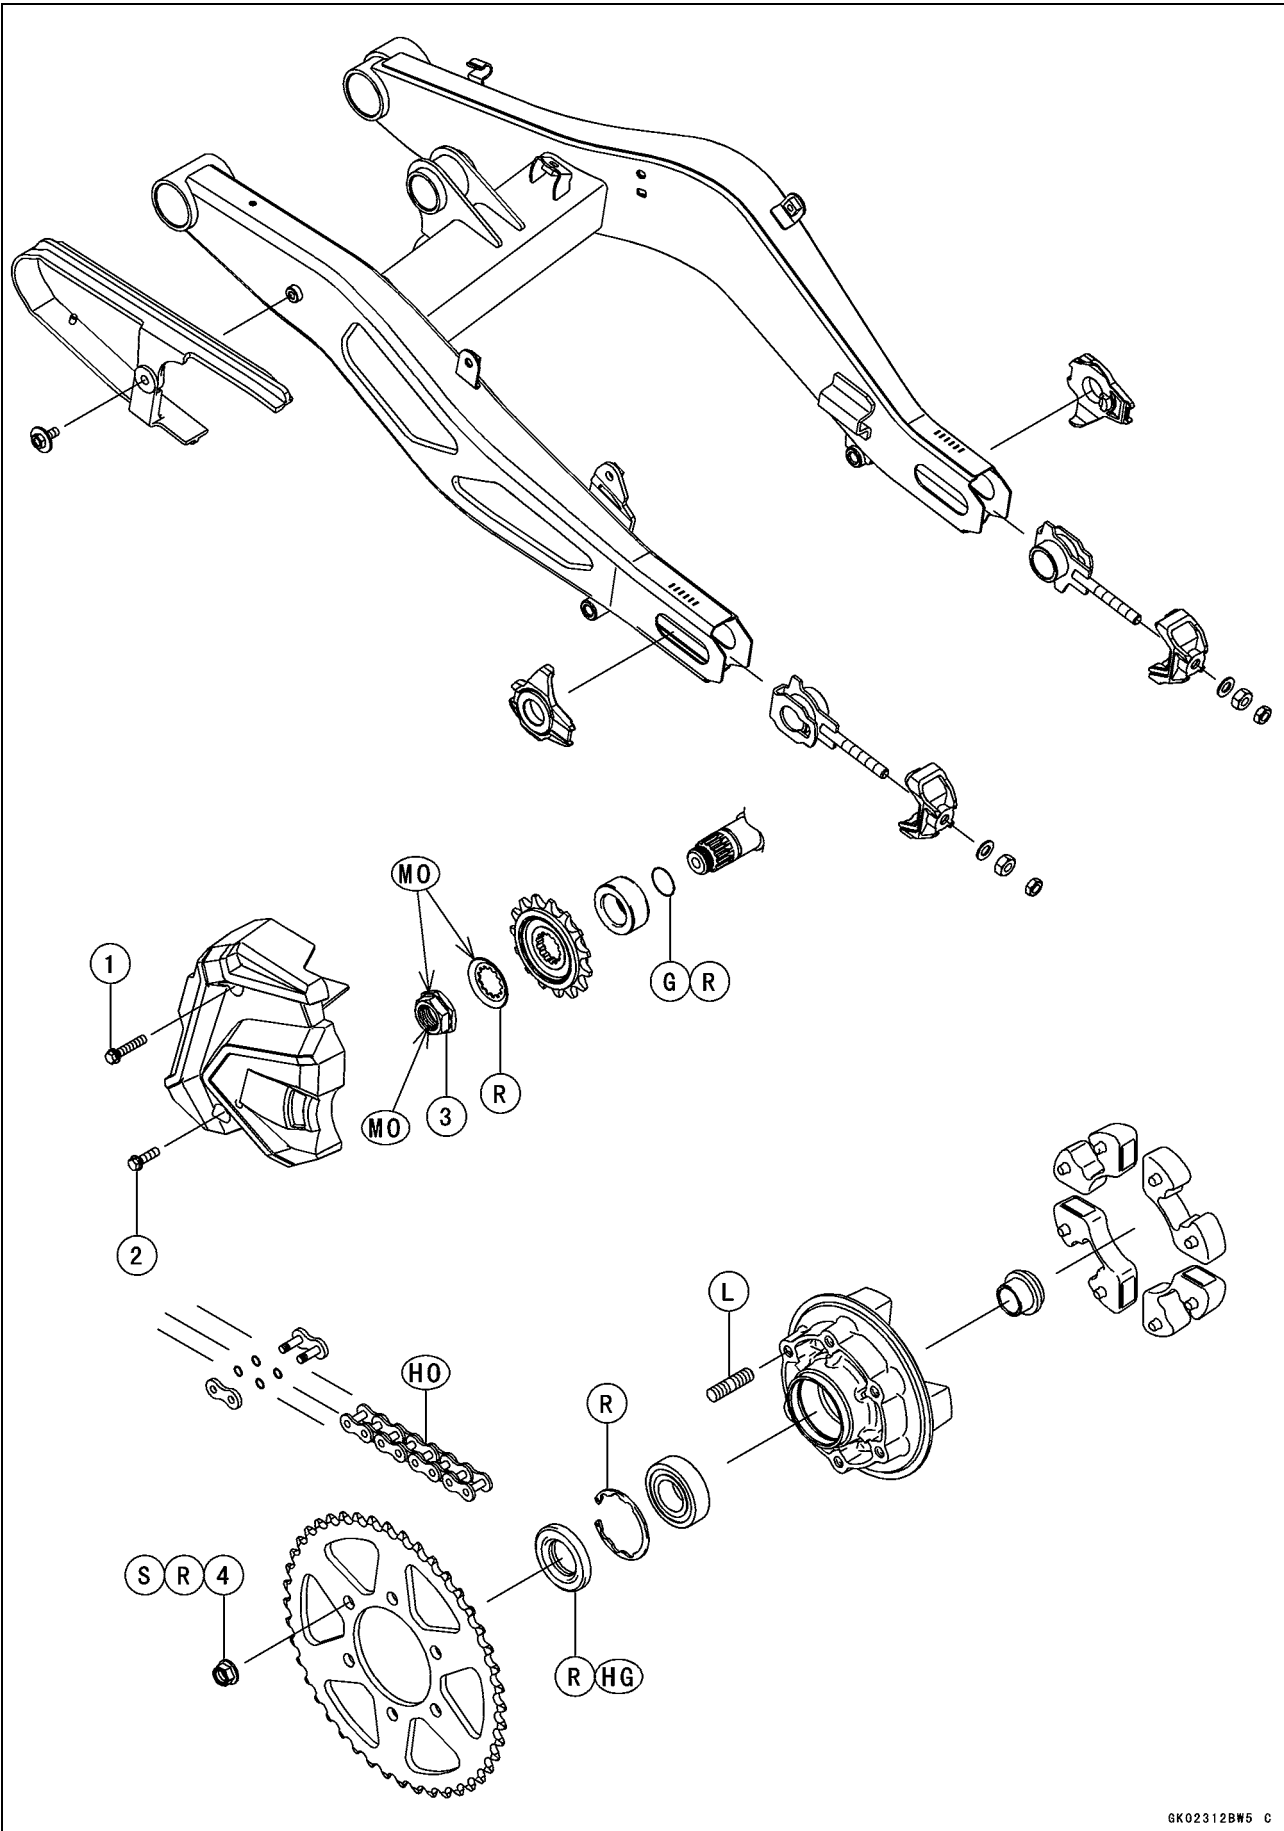

## Exploded View

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Engine Sprocket Cover Bolt, L = 30 mm (1.2 in.)	9.8	1.0	87 in·lb	
2	Engine Sprocket Cover Bolt, L = 20 mm (0.8 in.)	9.8	1.0	87 in·lb	
3	Engine Sprocket Nut	165	16.8	122	MO
4	Rear Sprocket Nuts	59	6.0	44	R, S

G: Apply grease.

HG: Apply high-temperature grease.

HO: Apply heavy oil.

L: Apply a non-permanent locking agent.

MO: Apply molybdenum disulfide oil solution.

(mixture of the engine oil and molybdenum disulfide grease in a weight ratio 10:1)

R: Replacement Parts

S: Follow the specified tightening sequence.

## 11-4 FINAL DRIVE


### Specifications

Item	Standard	Service Limit
<b>Drive Chain</b>		
Drive Chain Slack	20 ~ 30 mm (0.8 ~ 1.2 in.)	— — —
Drive Chain Wear (20-link Length)	317.5 ~ 318.2 mm (12.50 ~ 12.53 in.)	319 mm (12.6 in.)
Standard Chain:		
Make	DAIDO	— — —
Type	DID520VE	— — —
Link	114 links	— — —
Link Pin Outside Diameter (When drive chain replacing)	5.4 ~ 5.8 mm (0.21 ~ 0.23 in.)	— — —
Link Pin Length (When drive chain replacing)	19.6 mm (0.77 in.) or less	— — —
<b>Sprockets</b>		
Rear Sprocket Warp	TIR 0.4 mm (0.016 in.) or less	TIR 0.5 mm (0.020 in.)


**Special Tools**

---

**Inside Circlip Pliers:**  
**57001-143**

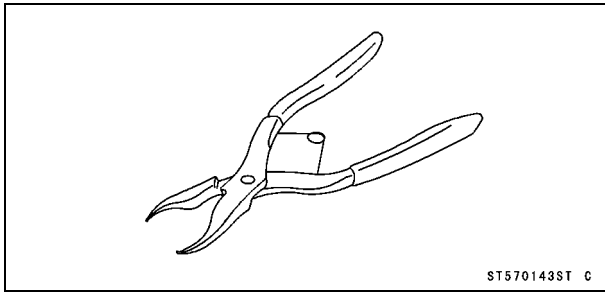

**Bearing Driver Set:**  
**57001-1129**

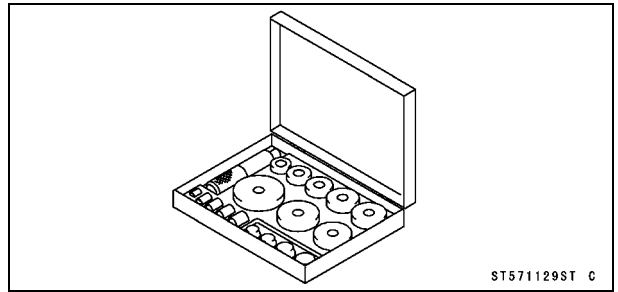

## 11-6 FINAL DRIVE

### Drive Chain

#### **Drive Chain Slack Inspection**

- Refer to the Drive Chain Slack Inspection in the Periodic Maintenance chapter.

#### **Drive Chain Slack Adjustment**

- Refer to the Drive Chain Slack Adjustment in the Periodic Maintenance chapter.

#### **Wheel Alignment Inspection/Adjustment**

- Refer to the Wheel Alignment Inspection in the Periodic Maintenance chapter.

#### **Drive Chain Wear Inspection**

- Refer to the Drive Chain Wear Inspection in the Periodic Maintenance chapter.

#### **Drive Chain Lubrication**

- Refer to the Drive Chain Lubrication Condition Inspection in the Periodic Maintenance chapter.


#### **Drive Chain Removal**

- Remove:
  - Engine Sprocket (see Engine Sprocket Removal)
  - Shift Pedal (see Shift Pedal Removal in the Crankshaft/Transmission chapter)
  - Mud Guard and Drive chain Cover (see Mud Guard Removal in the Frame chapter)
  - Frame Covers (see Frame Cover Removal in the Frame chapter)

- Loosen:
  - Right Swingarm Bracket Bolt [A]




- Loosen:
  - Left Swingarm Bracket Bolts [A]
- Remove:
  - Swingarm Pivot Shaft Nut [B]
  - Left Swingarm Bracket Bolts
  - Left Swingarm Bracket [C]

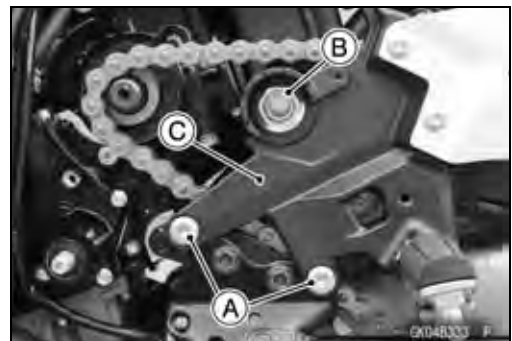


## Drive Chain

- Disengage the drive chain from the rear sprocket.
- Remove the drive chain [A] from the output shaft [B].

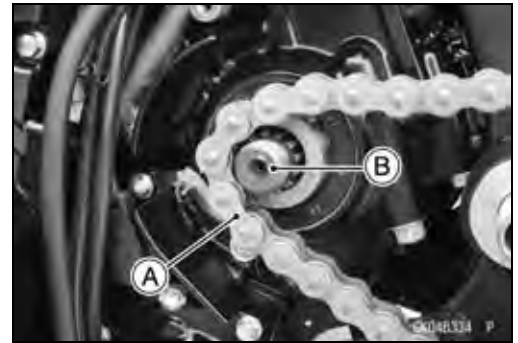

### Drive Chain Installation

- Install the drive chain, and engage the rear sprocket.
  - Install:
    - Left Swingarm Bracket [A]
  - Tighten the bolts and nut following the tightening sequence [1 ~ 4].
- Torque - Swingarm Pivot Shaft Nut [1]: 108 N·m (11.0 kgf·m, 79.7 ft·lb)**
- Left Swingarm Bracket Bolts [2, 3]: 25 N·m (2.5 kgf·m, 18 ft·lb)**
- Right Swingarm Bracket Bolt [4]: 25 N·m (2.5 kgf·m, 18 ft·lb)**

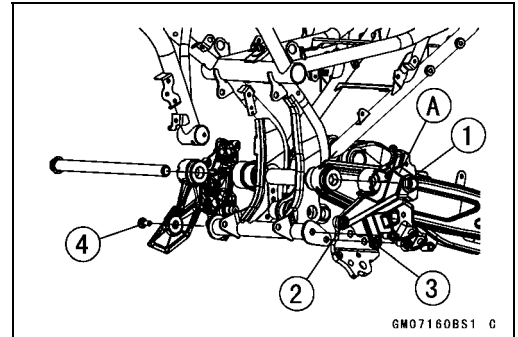

- Install the removed parts (see appropriate chapters).
- Adjust the chain slack after installing the chain (see Drive Chain Slack Adjustment in the Periodic Maintenance chapter).

### Drive Chain Replacement

#### NOTE

○ Since the drive chain is installed through the swingarm, the chain cannot be removed other than by cutting it. Prepare the new link pin, link plate, grease seals, and tools for rejoining the chain.


- Using a suitable tool, replace the drive chain.

**Recommended Tool - DID Chain Joint “ZJ”**  
**Make DAIDO KOGYO**

#### NOTICE

**Read the Tool Manual before replacing the chain.**


- Body [A]
- Pin Holder [B]
- Positioning Pin [C]
- “U” Holder [D]
- Plate Holder [E]
- Cutting and Riveting Pin [F]
- Part for Riveting [G]
- Part for Cutting [H]

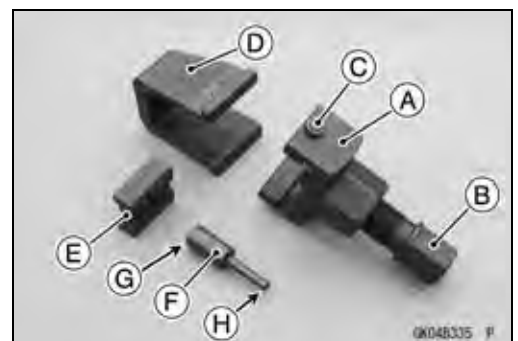


## 11-8 FINAL DRIVE

### Drive Chain


- Grind [A] the heads of the link pin to make it flat.
- Set the cutting and riveting pin [B] in the pin holder [C] as shown.

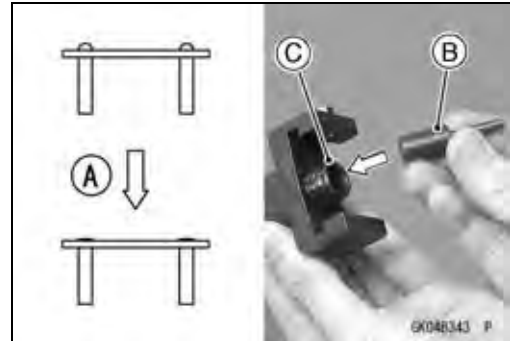

- Set the “U” holder and body, align the positioning pin [A] with the “A” mark [B].
- Tighten the pin holder by hand until the cutting and riveting pin touches the link pin.
- Be sure that the cutting and riveting pin hits center of the link pin.


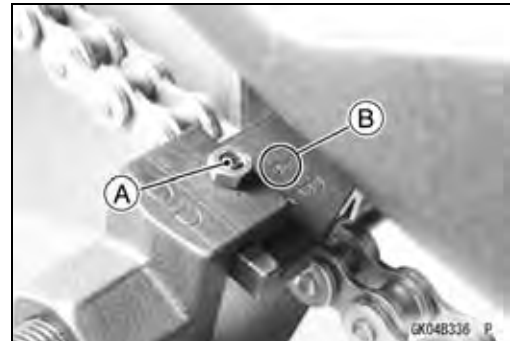


- Hold the body with a wrench [A].
- Turn the pin holder clockwise [B] with another wrench, and remove the link pin.
- Do the same procedure for removal of the other link pin.

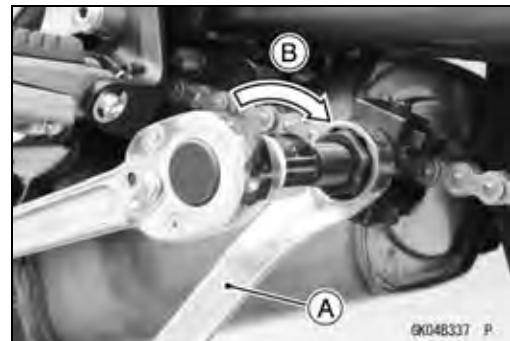

### Drive Chain Installation

- Engage the new drive chain to the old drive chain, and change the position of the chains by pulling the old chain.
  - Remove the old drive chain from the new drive chain.
  - Replace the link pin [A], link plate and grease seals [B] [C] with new ones.
  - Apply grease to the link pin and grease seals.
  - Install the grease seals on the link pin and insert it in the ends of the drive chain.
  - Install the link plate so that the mark [D] faces out.
- 
- Set the cutting and riveting pin [A] in the pin holder [B] as shown.

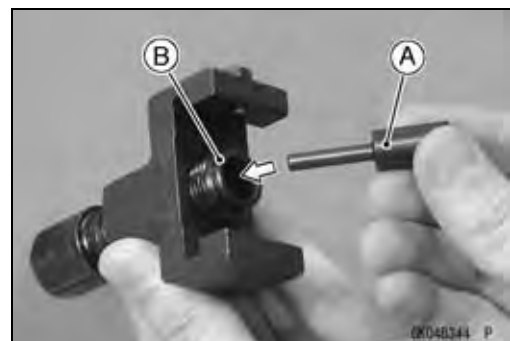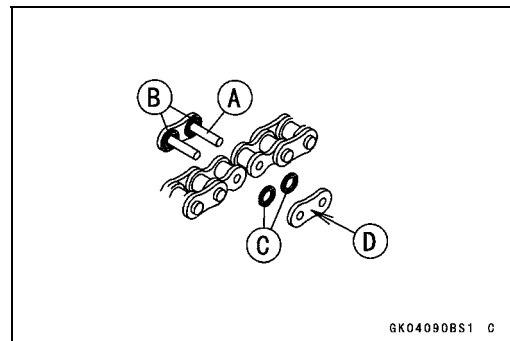




**Drive Chain**


- Set the plate holder [A] on the cutting and riveting pin [B] as shown.




- Set the "U" holder and body, align the positioning pin [A] with the "A" mark [B].
- Tighten the pin holder by hand until the cutting and riveting pin touches the link pin.

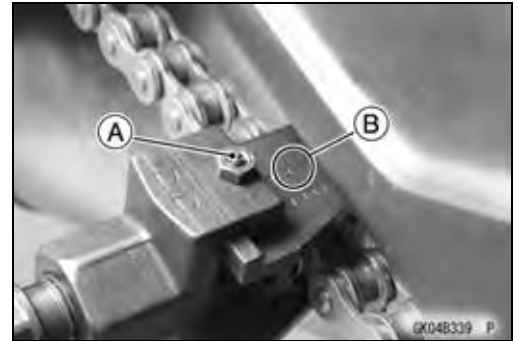

- Hold the body with a wrench [A].
- Turn the pin holder clockwise [B] with another wrench and press in the link plate on the link pin.
- Remove the "U" holder and body.
- Remove the plate holder.

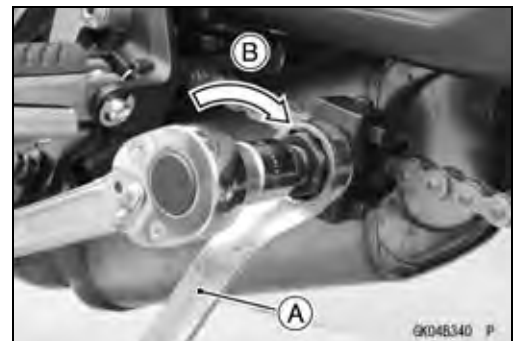

- Set the "U" holder and body, align the positioning pin [A] with the "B" mark [B].
- Tighten the pin holder by hand until the cutting and riveting pin touches the link pin.

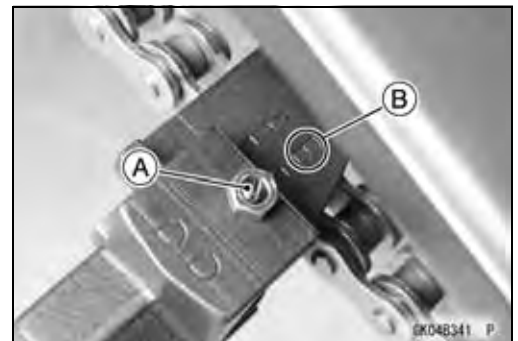

- Hold the body with a wrench [A].
- Turn the pin holder clockwise [B] with another wrench until the cutting and riveting pin touches the link plate.
- Do the same procedure for installation of the other link pin.



## 11-10 FINAL DRIVE

### Drive Chain

- After riveting, check the ends of the riveted pins for cracks.
- Measure the outside diameter [A] and the length [B] of the link pin.


#### Link Pin Outside Diameter

Standard: 5.4 ~ 5.8 mm (0.21 ~ 0.23 in.)

#### Link Pin Length

Standard: 19.6 mm (0.77 in.) or less


- ★ If the reading is not within the specified range, cut and rejoin the chain again.
- Check that the rollers move smoothly.
- Adjust the drive chain slack after installing the chain (see Drive Chain Slack Adjustment in the Periodic Maintenance chapter).

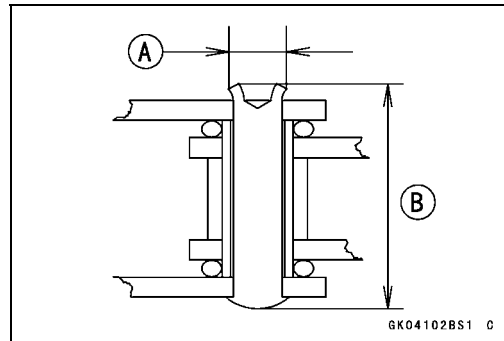

## Sprocket, Coupling

### Engine Sprocket Removal


- Remove:
  - Engine Sprocket Cover Bolts [A]
  - Engine Sprocket Cover [B]

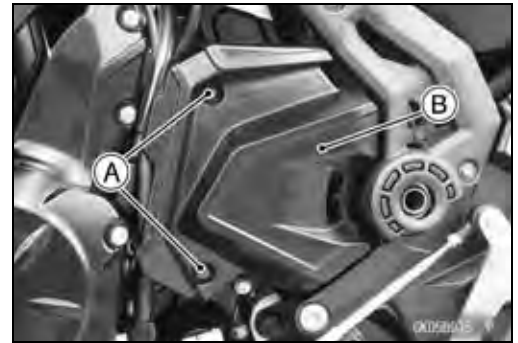


- Flatten out the bended washer [A].
- Remove the engine sprocket nut [B] and washer.

#### NOTE

- When loosening the engine sprocket nut, hold the rear brake on.

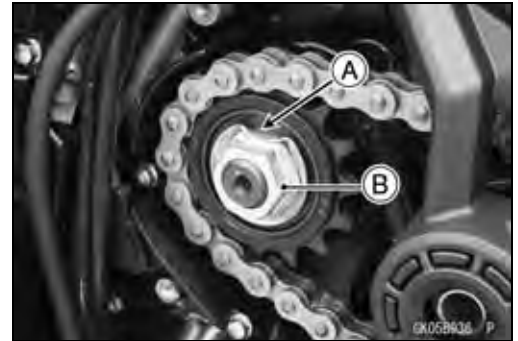

- Raise the rear wheel off the ground with the stand (see Rear Wheel Removal in the Wheels/Tires chapter).
- Loosen the drive chain (see Drive Chain Slack Adjustment in the Periodic Maintenance chapter).
- Remove the drive chain from the rear sprocket toward the right.
- Disengage the drive chain [A] from the engine sprocket [B].
- Pull the engine sprocket off the output shaft [C].

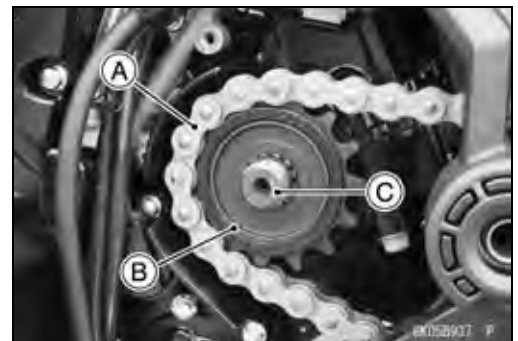


### Engine Sprocket Installation

- Replace the sprocket washer.
- Install the engine sprocket so that "OUT SIDE" letters [A] face outward.
- Apply molybdenum disulfide oil solution to the threads and the seating surface of the engine sprocket nut.
- Tighten:

**Torque - Engine Sprocket Nut: 165 N·m (16.8 kgf·m, 122 ft·lb)**

#### NOTE

- Tighten the engine sprocket nut while applying the rear brake.

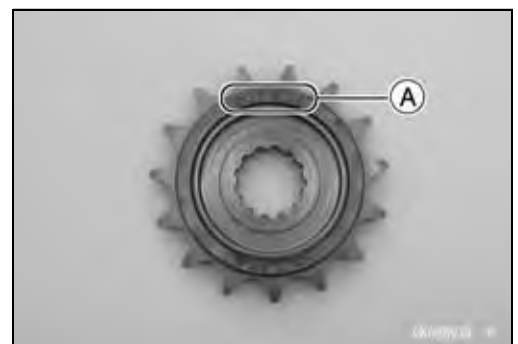

## 11-12 FINAL DRIVE

### Sprocket, Coupling

- After torquing the engine sprocket nut, bend [A] the one side of the washer over the nut.
- Adjust the drive chain slack after installing the engine sprocket (see Drive Chain Slack Adjustment in the Periodic Maintenance chapter).




- Run the leads and hoses correctly (see Cable, Wire, and Hose Routing section in the Appendix chapter).
- Install the engine sprocket cover [A].
- Tighten:

Torque - Engine Sprocket Cover Bolt, L = 30 mm (1.2 in.)

[B]: 9.8 N·m (1.0 kgf·m, 87 in·lb)

Engine Sprocket Cover Bolt, L = 20 mm (0.8 in.)

[C]: 9.8 N·m (1.0 kgf·m, 87 in·lb)

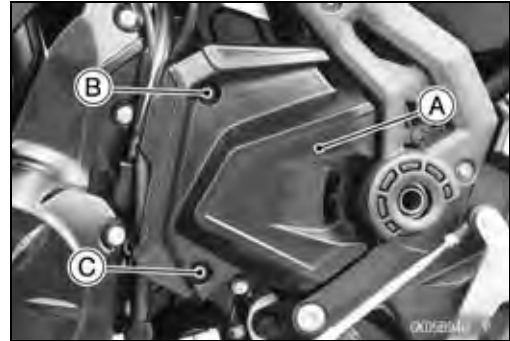

### Rear Sprocket Removal

- Remove the rear wheel (see Rear Wheel Removal in the Wheels/Tires chapter).

#### NOTICE

Do not lay the wheel on the ground with the disc facing down. This can damage or warp the disc. Place blocks under the wheel so that the disc does not touch the ground.



- Remove:
  - Rear Sprocket Nuts [A]
  - Rear Sprocket [B]

### Rear Sprocket Installation

- Replace the rear sprocket nuts with new ones.
- Install the sprocket facing the tooth number marking [A] outward.



## Sprocket, Coupling

- Tighten the rear sprocket nuts following the specified tightening sequence [1 ~ 8].


**Torque - Rear Sprocket Nuts: 59 N·m (6.0 kgf·m, 44 ft·lb)**

- After tightening, check that the bolt ends protrude from the nuts.
- Install the rear wheel (see Rear Wheel Installation in the Wheels/Tires chapter).




### Coupling Installation

- Apply high-temperature grease to the following.
  - Coupling Grease Seal Lips [A]
  - Coupling Internal Surface [B]

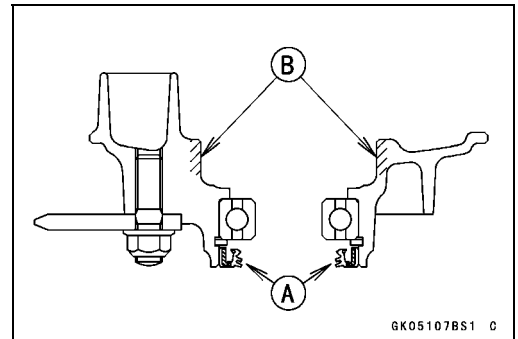


- Replace the O-ring [A] with a new one, and apply grease to it.
- Install:
  - O-ring
  - Collar [B]
  - Coupling [C]

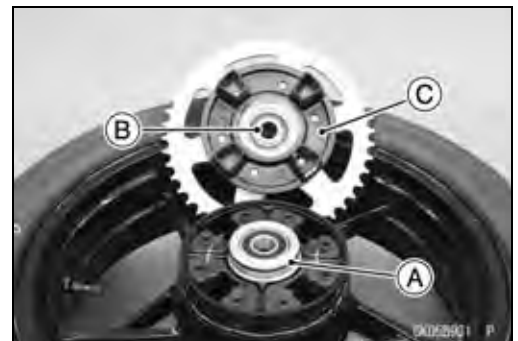

### Coupling Bearing Removal

- Remove:
  - Coupling
  - Grease Seal [A]
  - Collar [B]

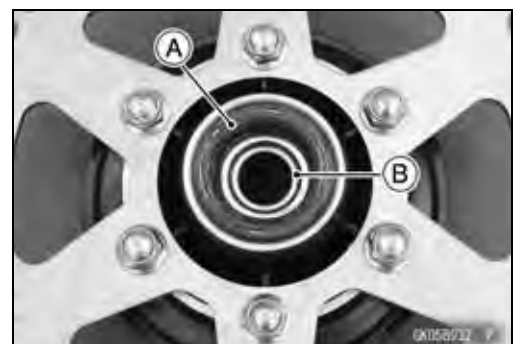

- Remove the circlip [A].
  - Special Tool - Inside Circlip Pliers: 57001-143**




## 11-14 FINAL DRIVE

### Sprocket, Coupling

- Remove the bearing [A] by tapping from the wheel side.

**Special Tool - Bearing Driver Set [B]: 57001-1129**

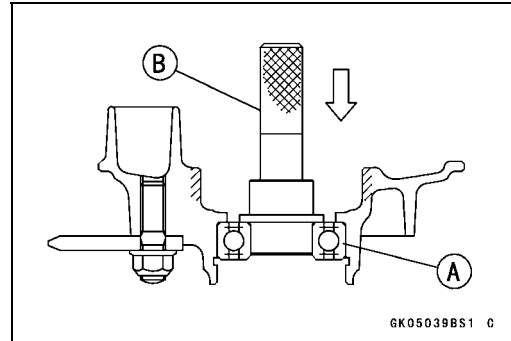


#### **Coupling Bearing Installation**

- Replace the bearing with a new one.
- Press in the bearing [A] until it is bottomed.

**Special Tool - Bearing Driver Set [B]: 57001-1129**

- Replace the circlip with a new one.

**Special Tool - Inside Circlip Pliers: 57001-143**

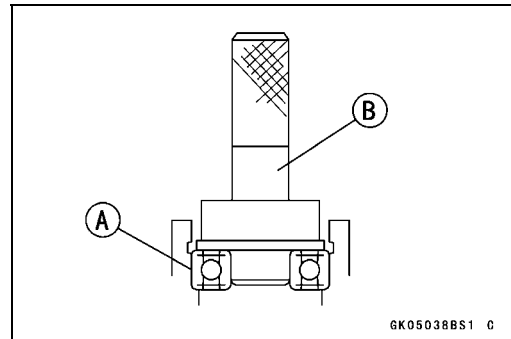

- Install the collar.
- Replace the grease seal with a new one.
- Press in the grease seal so that the seal surface is flush with the end of the hole.

**Special Tool - Bearing Driver Set: 57001-1129**

- Apply high-temperature grease to the grease seal lip.


#### **Coupling Bearing Inspection**

Since the coupling bearing is made to extremely close tolerances, the clearance can not normally be measured.

##### **NOTE**

○ *It is not necessary to remove the coupling bearing for inspection. If the bearing is removed, it will need to be replaced with a new one.*

- Turn the bearing in the coupling back and forth [A] while checking for plays, roughness or binding.
- ★ If the bearing play, roughness or binding is found, replace the bearing.
- Examine the bearing seal [B] for tears or leakage.
- ★ If the seal is torn or is leaking, replace the bearing.

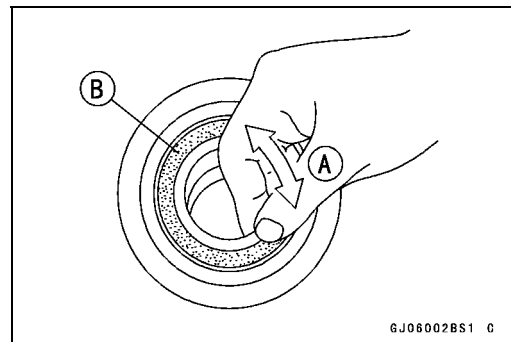

#### **Coupling Bearing Lubrication**


##### **NOTE**

○ *Since the coupling bearing is packed with grease and sealed, lubrication is not required.*

## Sprocket, Coupling


### Coupling Damper Inspection

- Remove the rear wheel coupling, and inspect the rubber dampers [A].
- Replace the damper if it appears damaged or deteriorated.

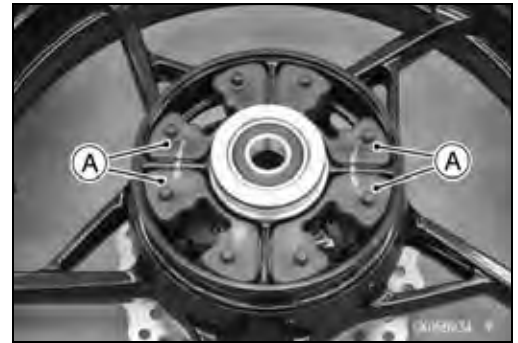

### Sprocket Wear Inspection

- Visually inspect the engine and rear sprocket teeth for wear and damage.
- ★ If the teeth are worn as illustrated, replace the sprocket, and inspect the drive chain wear (see Drive Chain Wear Inspection in the Periodic Maintenance chapter).
  - Worn Tooth (Engine Sprocket) [A]
  - Worn Tooth (Rear Sprocket) [B]
  - Direction of Rotation [C]

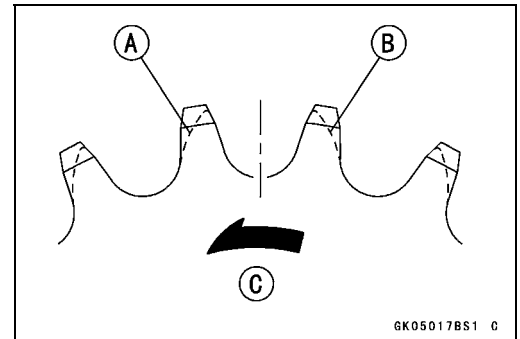


### NOTE

- If a sprocket requires replacement, the chain is probably worn also. When replacing a sprocket, inspect the chain.

### Rear Sprocket Warp Inspection

- Raise the rear wheel off the ground with the stand so that it will turn freely.
- Set a dial gauge [A] against the rear sprocket [B] near the teeth as shown, and rotate [C] the rear wheel to measure the sprocket runout (warp). The difference between the highest and lowest dial gauge readings is the amount of runout (warp).
- ★ If the runout exceeds the service limit, replace the rear sprocket.

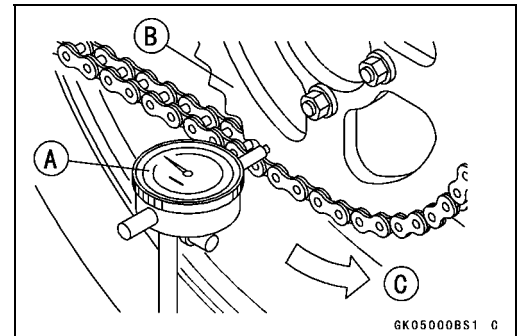

### Rear Sprocket Warp

Standard: TIR 0.4 mm (0.016 in.) or less

Service Limit: TIR 0.5 mm (0.020 in.)





# Brakes

## Table of Contents

Exploded View.....	12-3
Specifications .....	12-10
Special Tools .....	12-11
Brake Lever, Brake Pedal.....	12-12
Brake Lever Position Adjustment.....	12-12
Brake Pedal Position Inspection .....	12-12
Brake Pedal Position Adjustment.....	12-12
Brake Pedal Removal .....	12-12
Brake Pedal Installation .....	12-13
Calipers .....	12-14
Front Caliper Removal .....	12-14
Front Caliper Installation .....	12-14
Rear Caliper Removal.....	12-14
Rear Caliper Installation.....	12-15
Front Caliper Disassembly.....	12-15
Front Caliper Assembly.....	12-15
Rear Caliper Disassembly .....	12-15
Rear Caliper Assembly .....	12-16
Caliper Fluid Seal Damage Inspection.....	12-16
Caliper Dust Boot and Friction Boot Damage Inspection.....	12-16
Caliper Piston and Cylinder Damage Inspection .....	12-17
Caliper Holder Shaft/Pin/Collar Inspection.....	12-17
Brake Pads.....	12-18
Front Brake Pad Removal.....	12-18
Front Brake Pad Installation.....	12-18
Rear Brake Pad Removal .....	12-19
Rear Brake Pad Installation .....	12-19
Brake Pad Wear Inspection .....	12-19
Master Cylinder .....	12-20
Front Master Cylinder Removal .....	12-20
Front Master Cylinder Installation .....	12-20
Rear Master Cylinder Removal.....	12-20
Rear Master Cylinder Installation.....	12-21
Front Master Cylinder Disassembly .....	12-22
Rear Master Cylinder Disassembly.....	12-22
Master Cylinder Assembly .....	12-22
Master Cylinder Inspection (Visual Inspection).....	12-23
Brake Disc .....	12-24
Brake Disc Removal .....	12-24
Brake Disc Installation .....	12-24
Brake Disc Wear Inspection.....	12-24
Brake Disc Warp Inspection.....	12-25
Brake Fluid .....	12-26
Brake Fluid Level Inspection.....	12-26
Brake Fluid Change .....	12-26
Brake Line Bleeding.....	12-26
Brake Hose.....	12-29
Brake Hose Removal/Installation.....	12-29
Brake Hose and Pipe Inspection.....	12-29
Anti-Lock Brake System (Equipped Models).....	12-30

## 12-2 BRAKES

---

Parts Location .....	12-30
ABS Servicing Precautions .....	12-34
ABS Troubleshooting Outline .....	12-36
Inquiries to Rider .....	12-39
Self-diagnosis Outline .....	12-43
Self-diagnosis Procedures .....	12-43
Service Code Clearing Procedures .....	12-44
How to Read Service Codes .....	12-47
How to Erase Service Codes .....	12-47
Yellow ABS Indicator Light (LED) Inspection .....	12-49
Solenoid Valve Inspection (Service Code 13, 14, 17, 18) .....	12-49
ABS Solenoid Valve Relay Inspection (Service Code 19) .....	12-49
Front, Rear Tire Abnormal (Service Code 25) .....	12-50
ABS Motor Relay Inspection (Service Code 35) .....	12-50
Front Wheel Rotation Sensor Signal Abnormal (Service Code 42) .....	12-51
Front Wheel Rotation Sensor Wiring Inspection (Service Code 43) .....	12-52
Rear Wheel Rotation Sensor Signal Abnormal (Service Code 44) .....	12-52
Rear Wheel Rotation Sensor Wiring Inspection (Service Code 45) .....	12-53
Power Supply Voltage Abnormal [Low-Voltage] (Service Code 52) .....	12-53
Power Supply Voltage Abnormal [Over-Voltage] (Service Code 53) .....	12-54
ABS Solenoid Valve Relay Supply Voltage Inspection [Low-Voltage] (Service Code 54) .....	12-54
ECU Inspection (Service Code 55) .....	12-54
ABS Hydraulic Unit Removal .....	12-55
ABS Hydraulic Unit Installation .....	12-57
ABS Hydraulic Unit Inspection .....	12-58
Front Wheel Rotation Sensor Removal .....	12-59
Front Wheel Rotation Sensor Installation .....	12-60
Rear Wheel Rotation Sensor Removal .....	12-60
Rear Wheel Rotation Sensor Installation .....	12-61
Wheel Rotation Sensor Inspection .....	12-62
Wheel Rotation Sensor Air Gap Inspection .....	12-62
Wheel Rotation Sensor Rotor Inspection .....	12-63
ABS Solenoid Valve Relay Fuse (15 A) Removal .....	12-63
ABS Motor Relay Fuse (25 A) Removal .....	12-63
Fuse Installation .....	12-63
Fuse Inspection .....	12-63

---


**Exploded View**

---

This page intentionally left blank.

# 12-4 BRAKES

## Exploded View

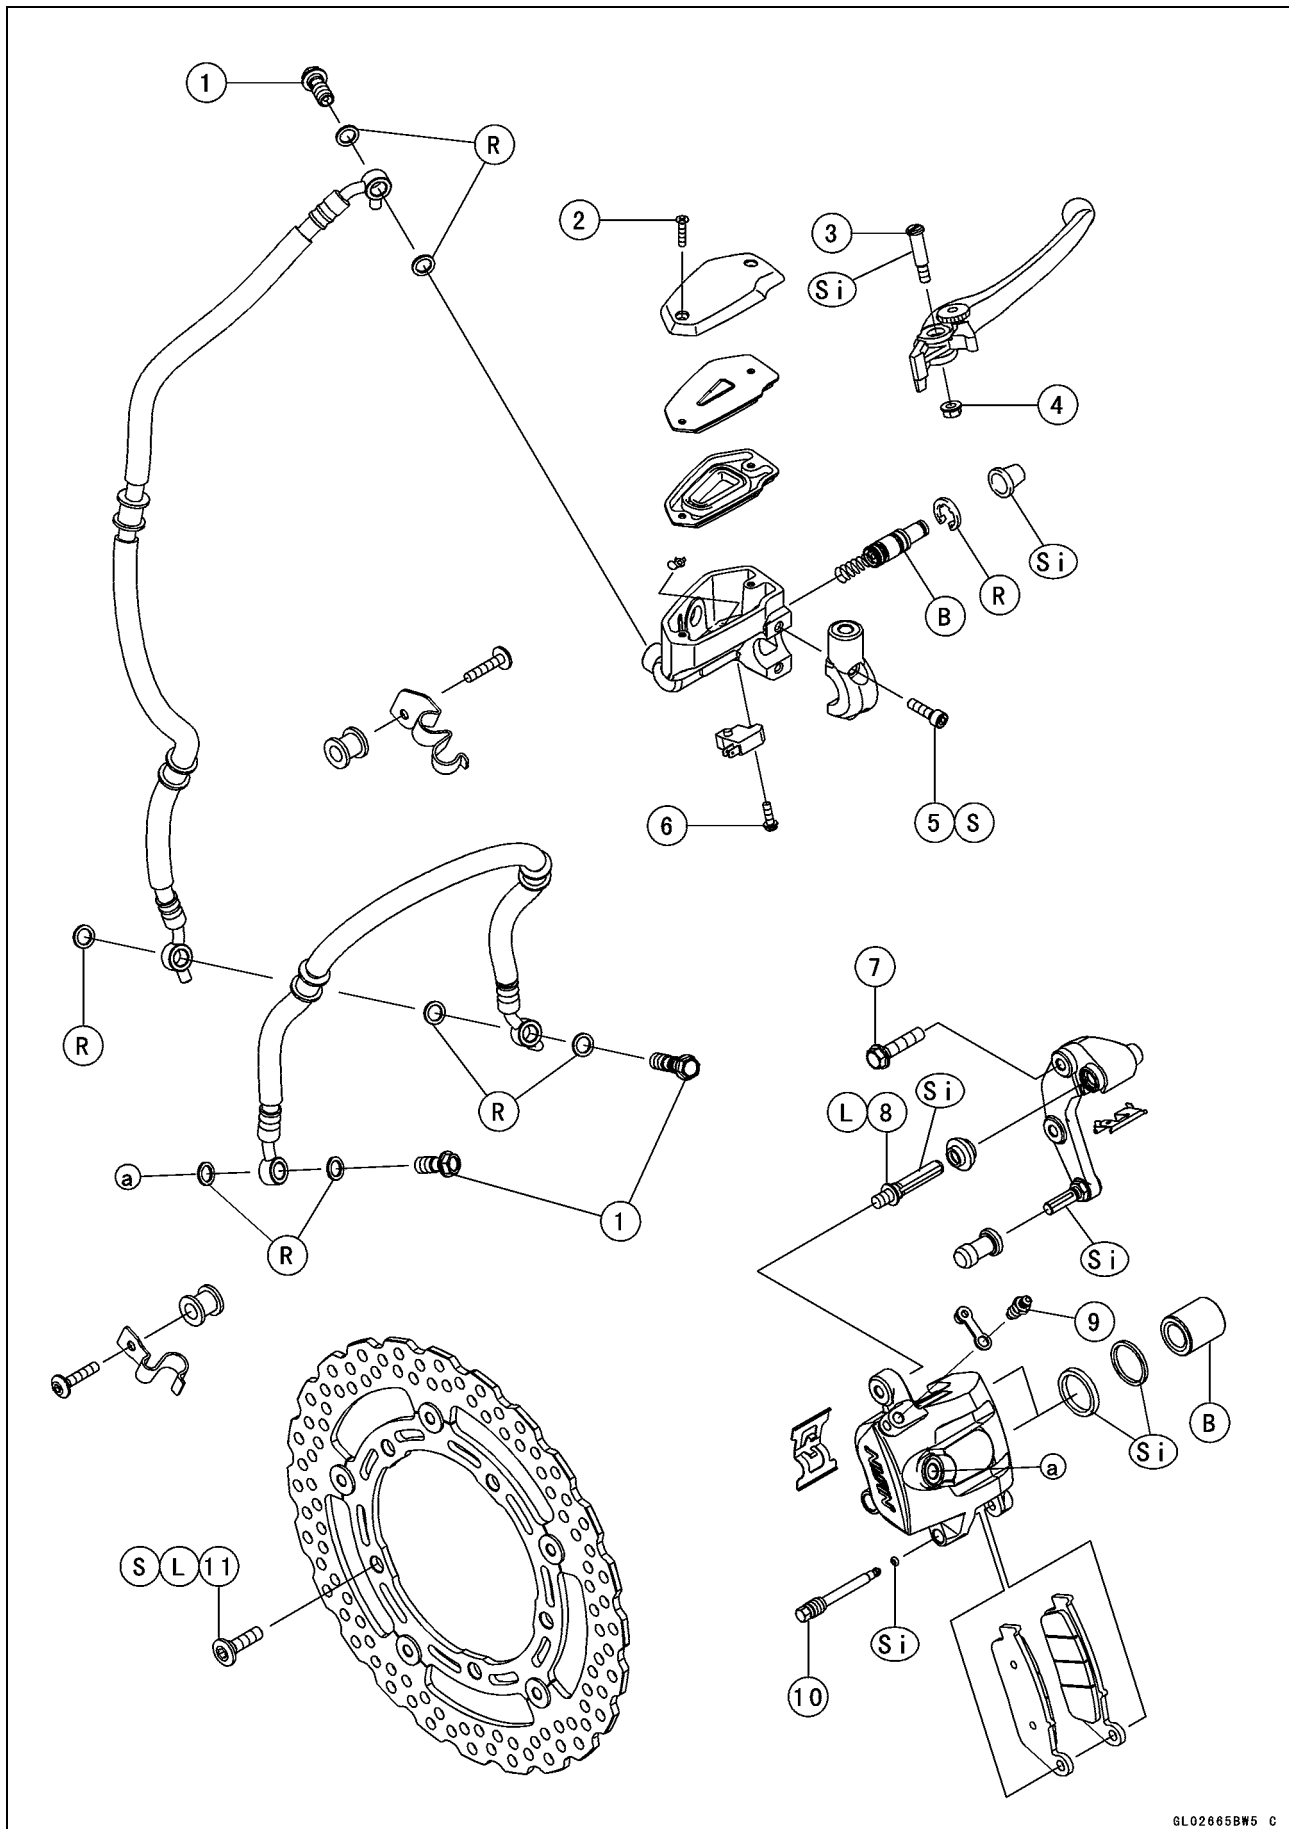

## Exploded View

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Brake Hose Banjo Bolts	25	2.5	18	
2	Front Brake Fluid Reservoir Cap Screws	1.5	0.15	13 in·lb	
3	Brake Lever Pivot Bolt	1.0	0.10	8.9 in·lb	Si
4	Brake Lever Pivot Bolt Locknut	5.9	0.60	52 in·lb	
5	Front Master Cylinder Clamp Bolts	11	1.1	97 in·lb	S
6	Front Brake Light Switch Screw	1.2	0.12	11 in·lb	
7	Front Caliper Mounting Bolts	25	2.5	18	
8	Front Caliper Holder Shaft	22	2.2	16	L, Si
9	Bleed Valve	7.8	0.80	69 in·lb	
10	Front Brake Pad Pin	17	1.7	13	
11	Front Brake Disc Mounting Bolts	27	2.8	20	L, S

B: Apply brake fluid.

L: Apply a non-permanent locking agent.


R: Replacement Parts

S: Follow the specified tightening sequence.

Si: Apply silicone grease.

# 12-6 BRAKES

## Exploded View

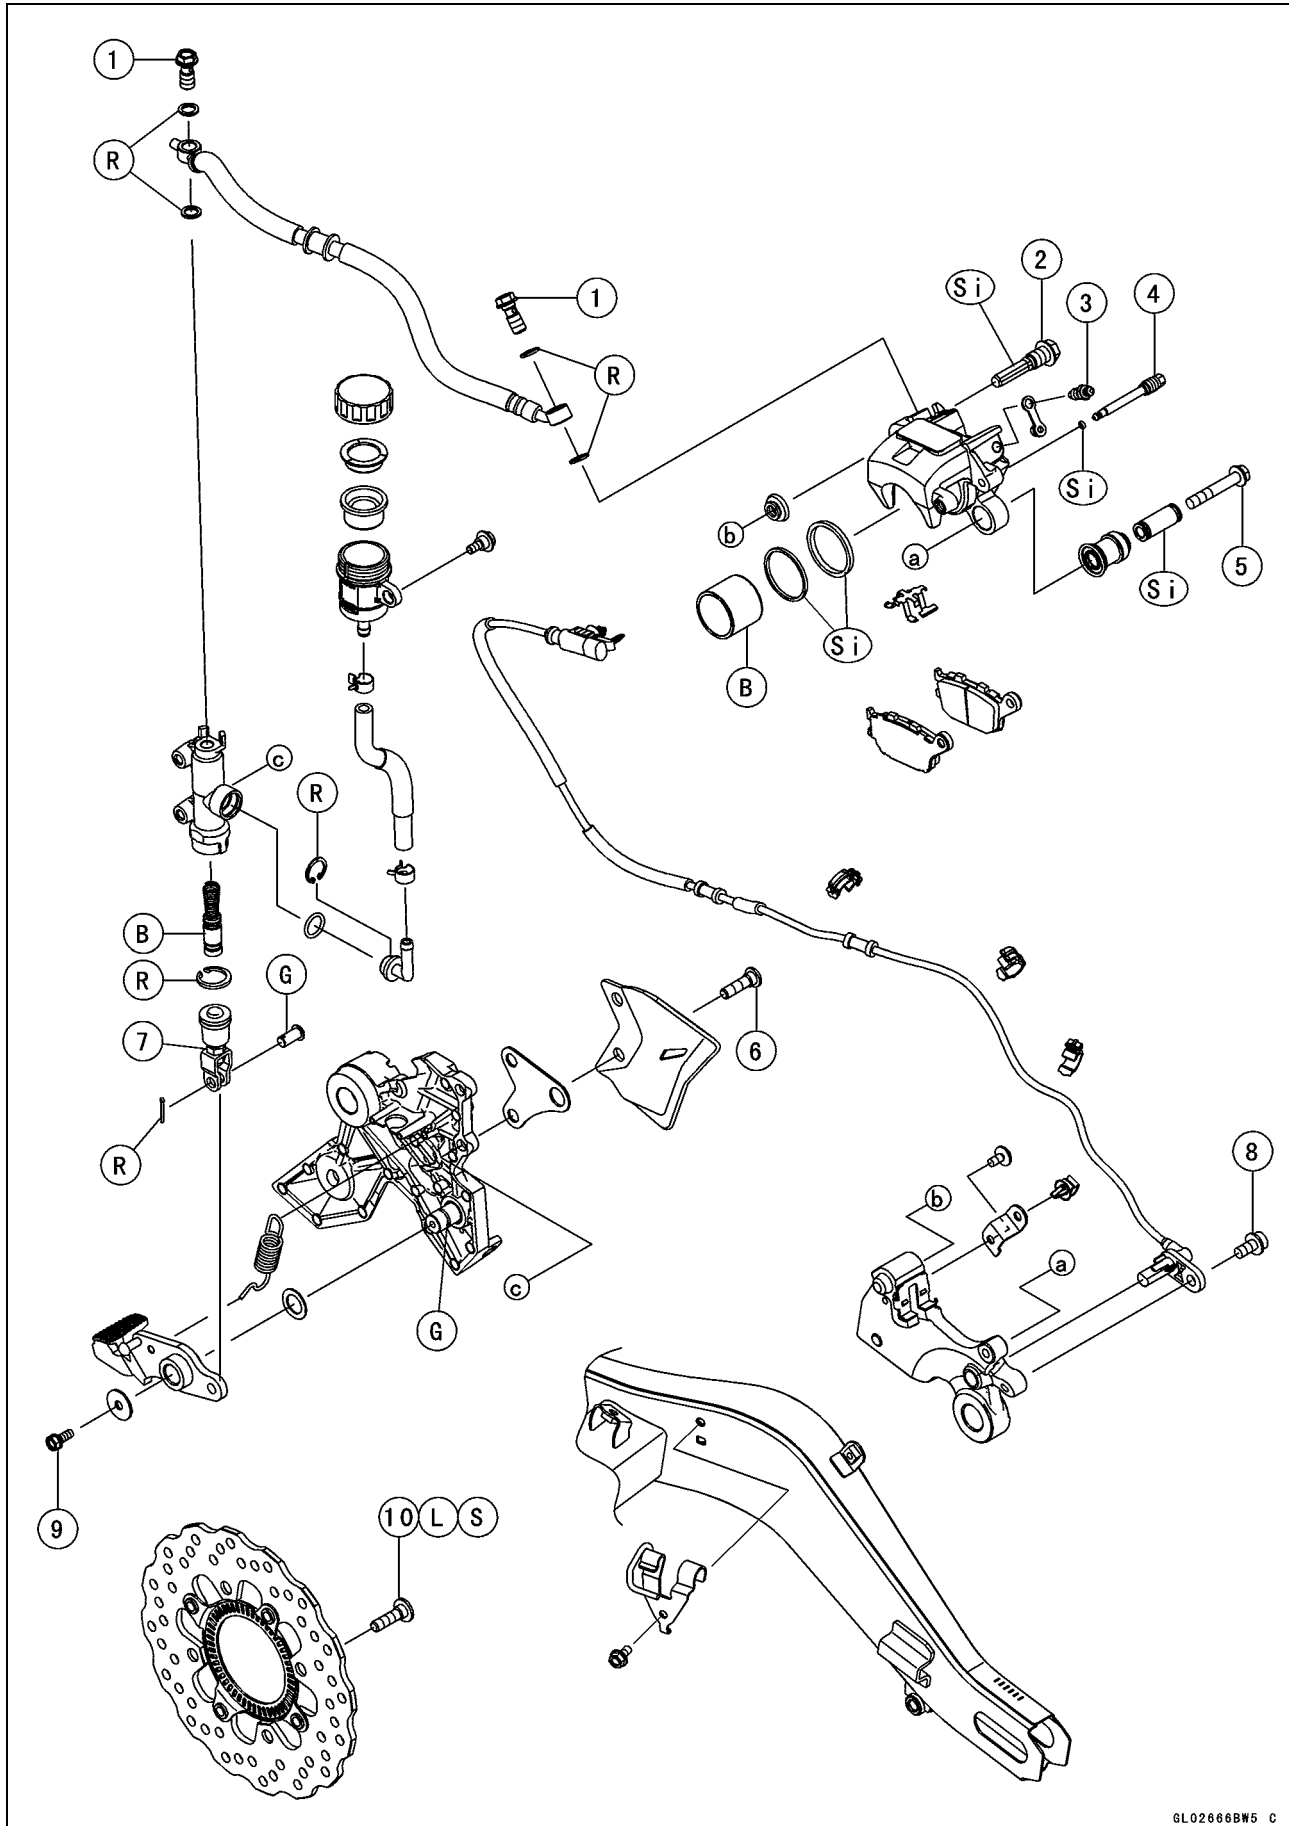

## Exploded View

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Brake Hose Banjo Bolts	25	2.5	18	
2	Rear Caliper Holder Pin Bolt	27	2.8	20	Si
3	Bleed Valve	7.8	0.80	69 in·lb	
4	Rear Brake Pad Pin	17	1.7	13	
5	Rear Caliper Holder Bolt	22	2.2	16	
6	Rear Master Cylinder Mounting Bolts	25	2.5	18	
7	Rear Master Cylinder Push Rod Locknut	17	1.7	13	
8	Rear Wheel Rotation Sensor Bolt	22	2.2	16	
9	Brake Pedal Bolt	8.8	0.90	78 in·lb	
10	Rear Brake Disc Mounting Bolts	27	2.8	20	L, S

B: Apply brake fluid.

G: Apply grease.

L: Apply a non-permanent locking agent.


R: Replacement Parts

Si: Apply silicone grease.

# 12-8 BRAKES

## Exploded View

### ABS Equipped Models

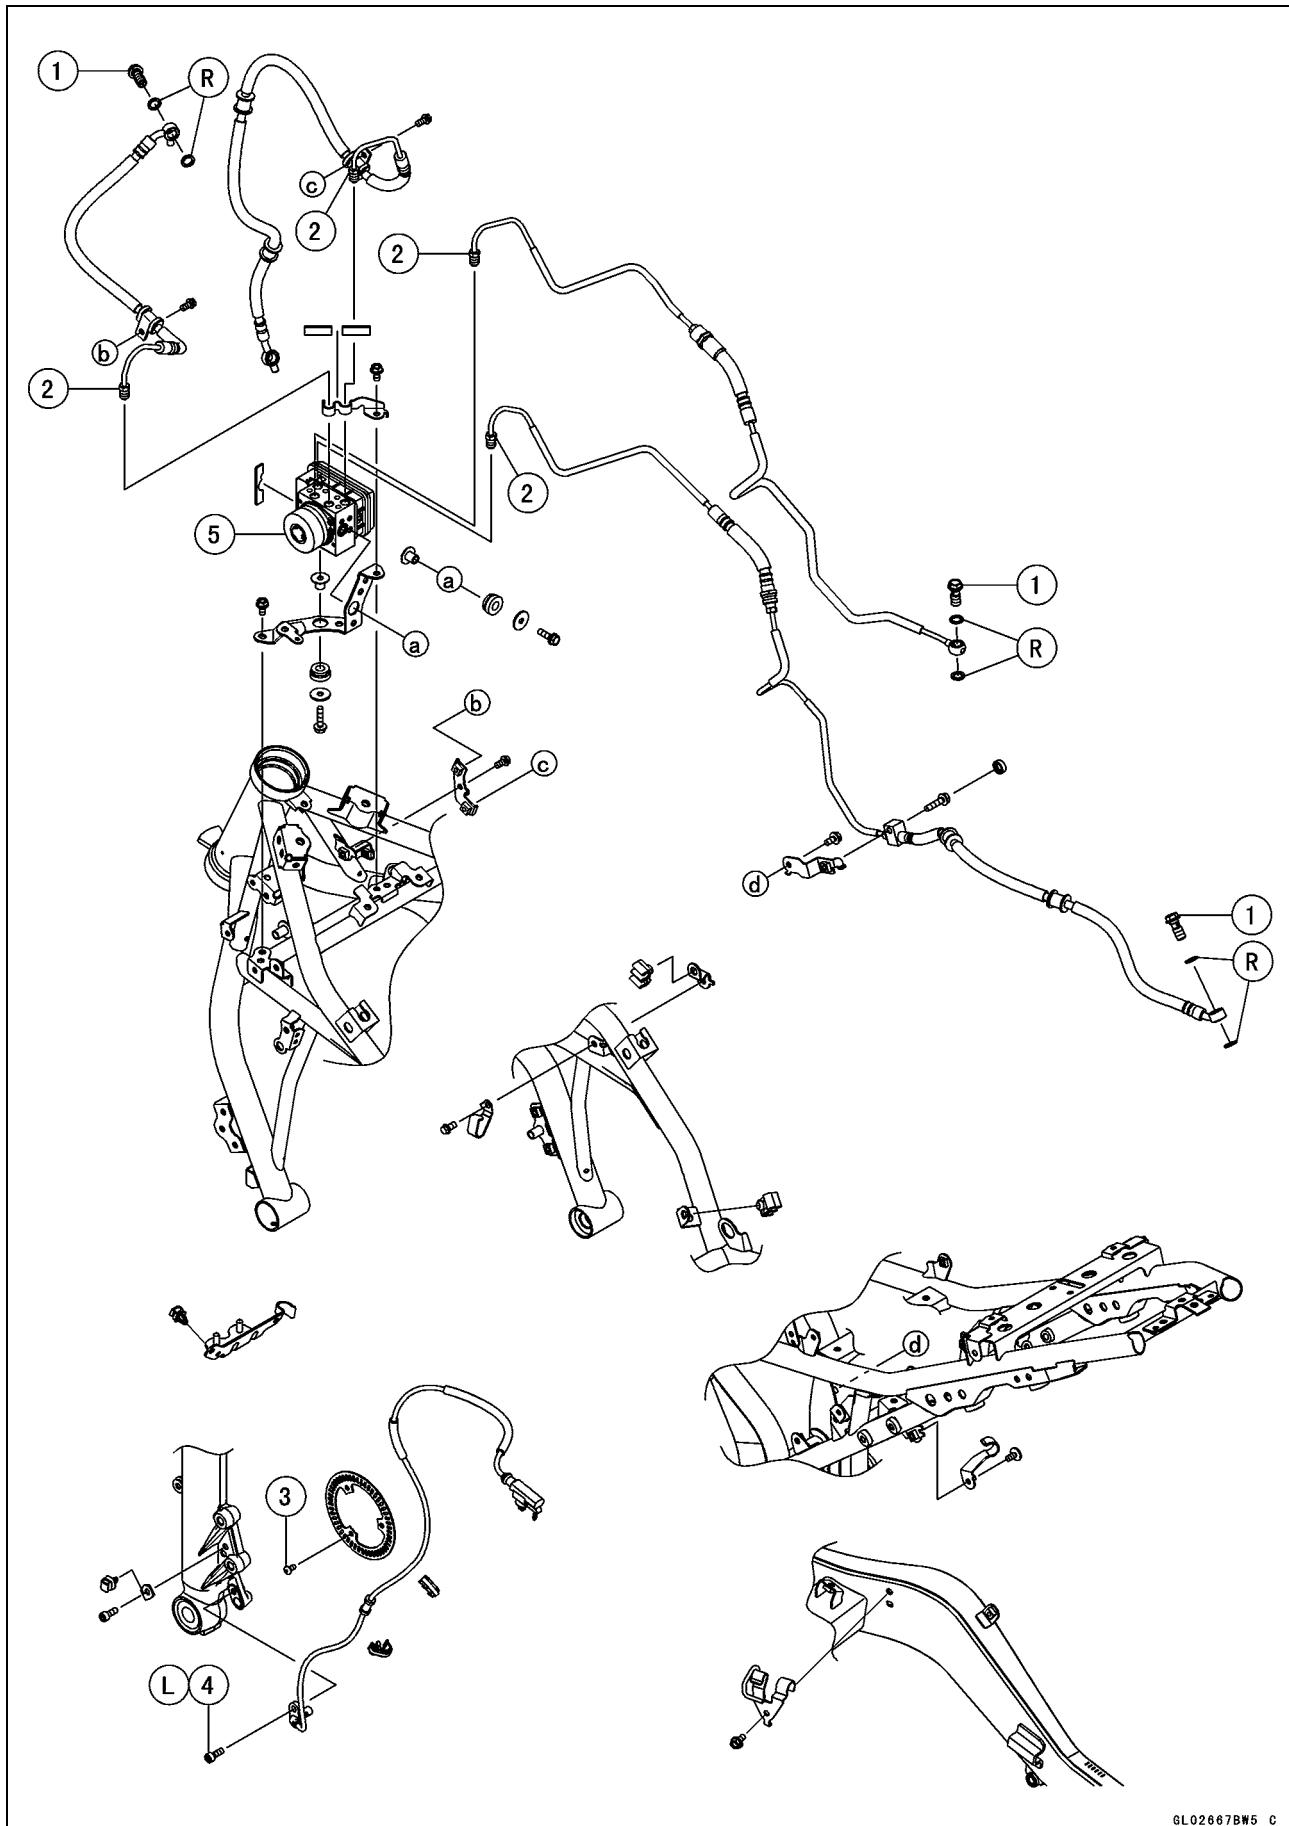



## Exploded View

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Brake Hose Banjo Bolts	25	2.5	18	
2	Brake Pipe Joint Nuts	18	1.8	13	
3	Front Wheel Rotation Sensor Rotor Bolts	4.2	0.43	37 in·lb	
4	Front Wheel Rotation Sensor Bolt	8.0	0.82	71 in·lb	L

5. ABS Hydraulic Unit

R: Replacement Parts

**NOTE**

○ When disassembling the brake hose and pipe, disassemble them by the unit as shown in the exploded view.

## 12-10 BRAKES


### Specifications

Item	Standard	Service Limit
<b>Brake Fluid</b>		
Grade:		
Front	DOT4	---
Rear	DOT4	---
<b>Brake Lever</b>		
Brake Lever Position	5-way adjustable (to suit rider)	---
Brake Lever Free Play	Non-adjustable	---
Pedal Position	52 mm (2.1 in.)	---
<b>Brake Pads</b>		
Lining Thickness:		
Front	4 mm (0.16 in.)	1 mm (0.04 in.)
Rear	5 mm (0.20 in.)	1 mm (0.04 in.)
<b>Brake Discs</b>		
Thickness:		
Front	4.8 ~ 5.2 mm (0.19 ~ 0.20 in.)	4.5 mm (0.18 in.)
Rear	4.8 ~ 5.2 mm (0.19 ~ 0.20 in.)	4.5 mm (0.18 in.)
Runout	TIR 0.15 mm (0.0059 in.) or less	TIR 0.3 mm (0.013 in.)
<b>ABS (Equipped Models)</b>		
ABS Hydraulic Unit:		
Make	BOSCH	---
Wheel Rotation Sensor		
Air Gap:		
Front	0.4 ~ 1.6 mm (0.02 ~ 0.06 in.)	---
Rear	0.4 ~ 1.6 mm (0.02 ~ 0.06 in.)	---


**Special Tools**

---

**Jack:  
57001-1238**

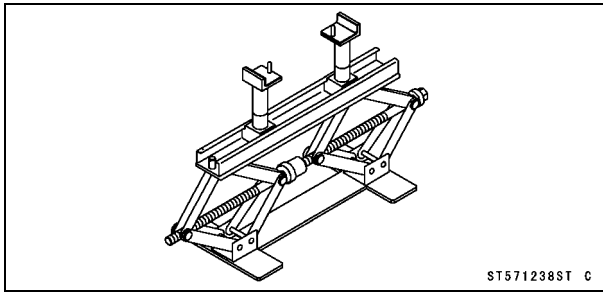

**Needle Adapter Set:  
57001-1457**

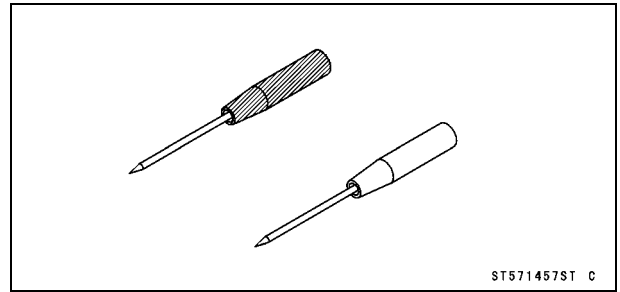


## 12-12 BRAKES

### Brake Lever, Brake Pedal

#### Brake Lever Position Adjustment

The brake lever adjuster has 5 positions so that the brake lever position can be adjusted to suit the operator's hand.

- Push the lever forward and turn the adjuster [A] to align the number with the arrow mark [B] on the lever.
- The distance from the grip to the lever is minimum at number 5 and maximum at number 1.

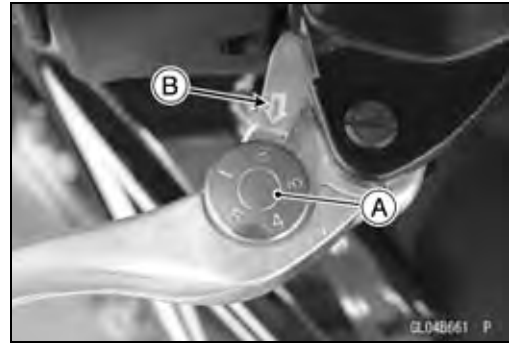


#### Brake Pedal Position Inspection

- Check that the brake pedal [A] is in the correct position. Footpeg [B]

##### Pedal Position

Standard: 52 mm (2.1 in.) [C]

- ★ If it is incorrect, adjust the brake pedal position.


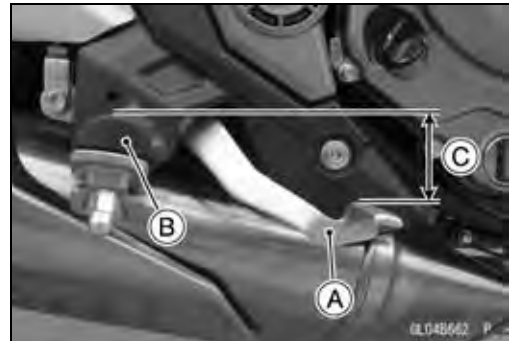


#### Brake Pedal Position Adjustment

##### NOTE


○ Usually it is not necessary to adjust the pedal position, but always adjust it when the push rod locknut has been loosened.

- Remove:
  - Rear Master Cylinder Mounting Bolts [A]
  - Guard [B]
  - Bracket and Damper [C]
- Temporary tighten the rear master cylinder mounting bolts [A].
- Loosen the locknut [B] and turn the push rod with the hex head [C] to achieve the correct pedal position.
- ★ If the length [D] shown is **70 ±1 mm (2.76 ±0.04 in.)**, the pedal position will be within the standard range.
- Tighten:
  - Torque - Rear Master Cylinder Push Rod Locknut: 17 N·m (1.7 kgf·m, 13 ft·lb)**
- Check the brake light switch operation (see Brake Light Switch Operation Inspection in the Periodic Maintenance chapter).

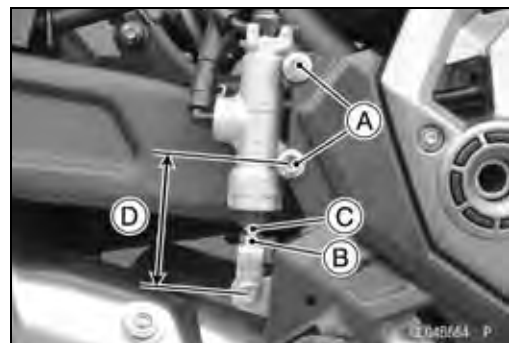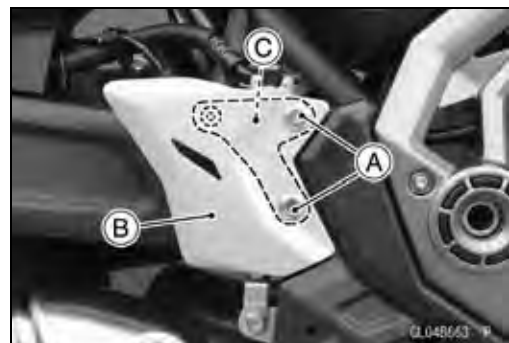

#### Brake Pedal Removal


- Remove:
  - Muffler (see Muffler Removal in the Engine Top End chapter)
  - Cotter Pin [A]
  - Joint Pin [B]
  - Rear Brake Light Switch Spring [C]
  - Return Spring [D]
  - Brake Pedal Bolt [E] and Washers
  - Brake Pedal [F]

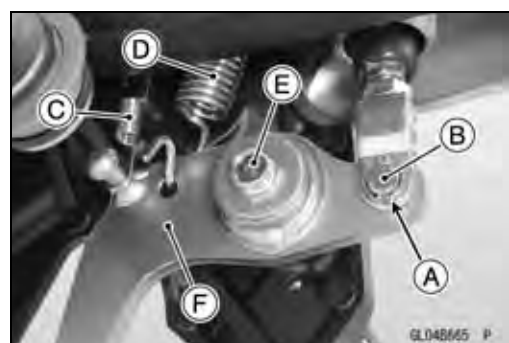

## Brake Lever, Brake Pedal

### Brake Pedal Installation


- Set the return spring [A] to the brake pedal [B] as shown.

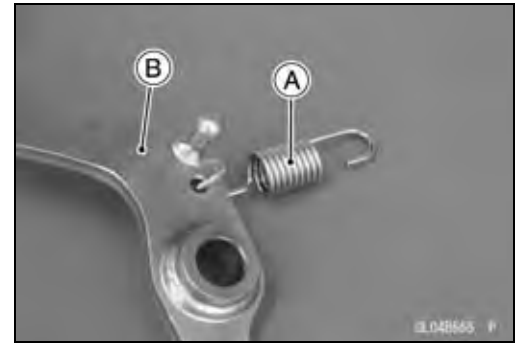


- Install:
  - Brake Pedal [A]
  - Washers [B]
- Apply a non-permanent locking agent to the threads of the brake pedal bolt [C], and tighten it.

**Torque - Brake Pedal Bolt: 8.8 N·m (0.90 kgf·m, 78 in·lb)**

- Hook the return spring [D] on the frame bracket hook.
- Hook the rear brake light switch spring [E] between the switch and brake pedal as shown.

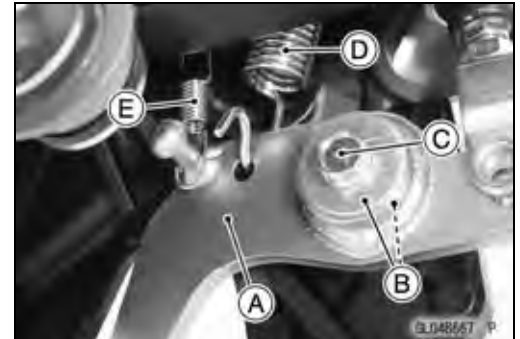

- Replace the cotter pin [A] with a new one.
- Insert the cotter pin into the joint pin [B] and bend the pin ends [C].
- Check the brake pedal position (see Brake Pedal Position Inspection).

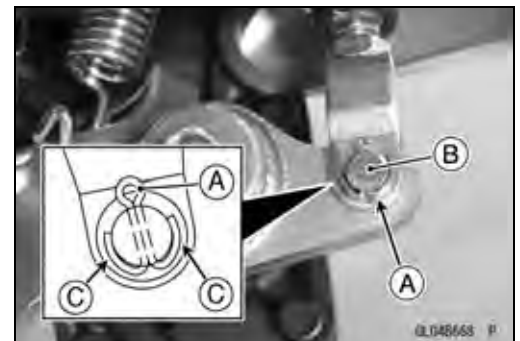

## 12-14 BRAKES

### Calipers

#### Front Caliper Removal

- Loosen the banjo bolt [A] at the brake hose lower end, and tighten it loosely.
- Unscrew the caliper mounting bolts [B], and detach the caliper [C] from the disc.
- Unscrew the banjo bolt and disconnect the brake hoses [D] from the caliper (see Brake Hose and Pipe Replacement in the Periodic Maintenance chapter).

#### NOTICE

Immediately wash away any brake fluid that spills.

#### Front Caliper Installation

- Installation is the reverse of removal.
- Replace the washers on each side of hose fitting with new ones.
- Connect the brake hoses [A] to the caliper [B] with the new washers [C] and banjo bolt [D].
- Position the brake hose fitting to the stopper on the caliper.
- Fit the brake hose fittings [E] into the groove on the caliper.
- Install the front caliper mounting bolts [F].
- Tighten:

**Torque - Brake Hose Banjo Bolt: 25 N·m (2.5 kgf·m, 18 ft·lb)**

**Front Caliper Mounting Bolts: 25 N·m (2.5 kgf·m, 18 ft·lb)**

- Bleed the brake line (see Brake Line Bleeding).
- Check the brake for good braking power, no brake drag, and no fluid leakage.

#### ⚠ WARNING




After servicing, it takes several applications of the brake lever before the brake pads contact the disc, which could result in increased stopping distance and cause an accident resulting in injury or death. Do not attempt to ride the motorcycle until a firm brake lever is obtained by pumping the lever until the pads are against the disc.

#### Rear Caliper Removal

- Loosen the banjo bolt [A] at the brake hose lower end, and tighten it loosely.
- Remove the rear caliper holder bolt [B], and detach the caliper [C] from the disc.
- Remove the banjo bolt and disconnect the brake hose [D] from the caliper.

#### NOTICE


Immediately wash away any brake fluid that spills.

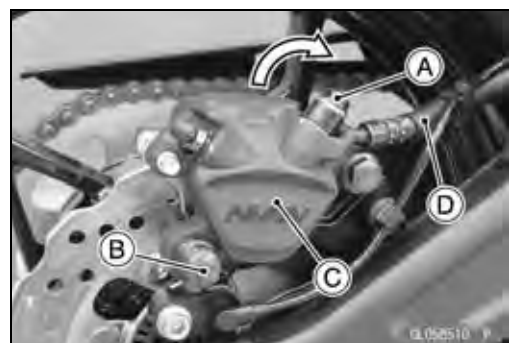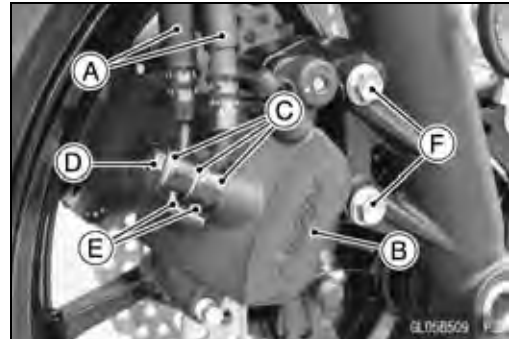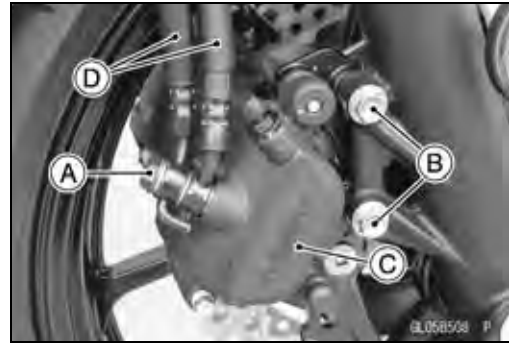

## Calipers

### Rear Caliper Installation

- Installation is the reverse of removal.
- Replace the washers on each side of hose fitting with new ones.
- Connect the brake hose [A] to the caliper [B] with the new washers [C] and banjo bolt [D].
- Position the brake hose fitting to the stopper on the caliper.
- Fit the brake hose fitting [E] into the groove on the caliper.
- Apply a silicone grease to the sliding surface of the caliper holder pin bolt [F].
- Insert the caliper holder pin bolt into the boot [G] of the caliper holder.
- Fit the boot into the groove [H] on the caliper holder pin bolt.
- Install the brake pad [A] to the caliper.
- Fit the tabs [B] of the brake pads on the step [C] of the caliper holder.

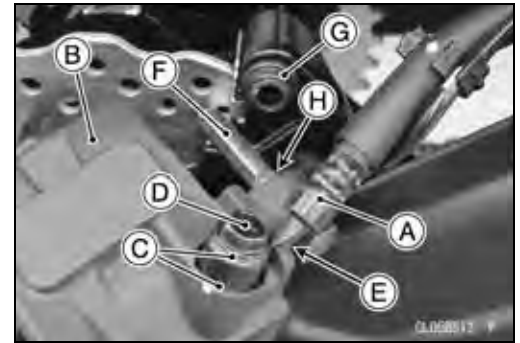

- Install the rear caliper holder bolt [A].
- Tighten:
  - Torque - Brake Hose Banjo Bolt [B]: 25 N·m (2.5 kgf·m, 18 ft·lb)
  - Rear Caliper Holder Bolt: 22 N·m (2.2 kgf·m, 16 ft·lb)
- Bleed the brake line (see Brake Line Bleeding).
- Check the brake for good braking power, no brake drag, and no fluid leakage.



### **⚠ WARNING**

After servicing, it takes several applications of the brake pedal before the brake pads contact the disc, which could result in increased stopping distance and cause an accident resulting in injury or death. Do not attempt to ride the motorcycle until a firm brake pedal is obtained by pumping the pedal until the pads are against the disc.

### Front Caliper Disassembly

- Refer to the Caliper Rubber Parts Replacement in the Periodic Maintenance chapter.

### Front Caliper Assembly

- Refer to the Caliper Rubber Parts Replacement in the Periodic Maintenance chapter.

### Rear Caliper Disassembly

- Refer to the Caliper Rubber Parts Replacement in the Periodic Maintenance chapter.

## 12-16 BRAKES

### Calipers

#### Rear Caliper Assembly

- Refer to the Caliper Rubber Parts Replacement in the Periodic Maintenance chapter.

#### Caliper Fluid Seal Damage Inspection

The fluid seal (piston seal) [A] is placed around the piston to maintain clearance between the pad and the disc. If the seal is in a poor condition, it could lead the pad to wear excessively or the brake to drag, which may cause the temperature of the discs or the brake fluid to increase.

- Replace the fluid seal if it exhibits any of the conditions listed below.

- Brake fluid leakage around the pad.
- Brakes overheat.
- Considerable difference in inner and outer pad wear.
- Seal and piston are stuck together.

- ★ If the fluid seal is replaced, replace the dust seal [B] as well. Also, replace all seals every other time the pads are changed.

Front Caliper [C]

Rear Caliper [D]





#### Caliper Dust Boot and Friction Boot Damage Inspection

- Check that the dust boot [A] and friction boot [B] are not cracked, worn, swollen, or otherwise damaged.

- ★ If they show any damage, replace it.

Front Caliper [C]

Rear Caliper [D]

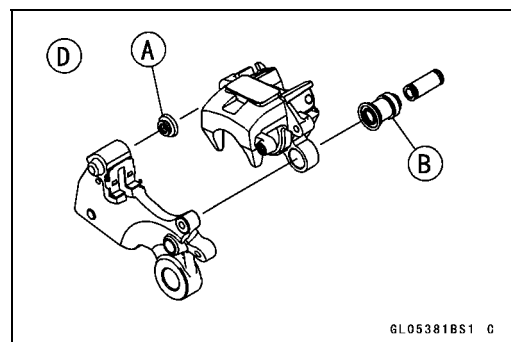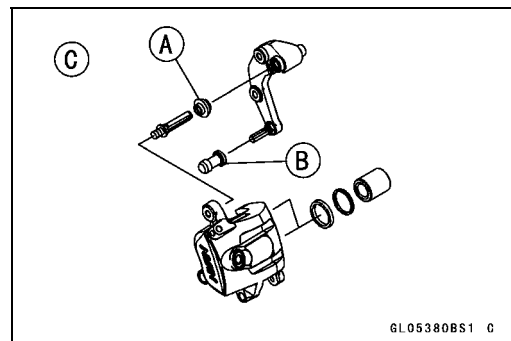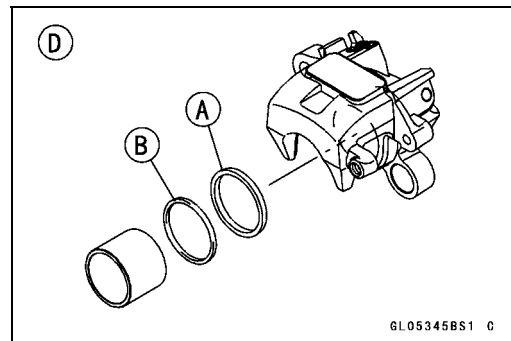
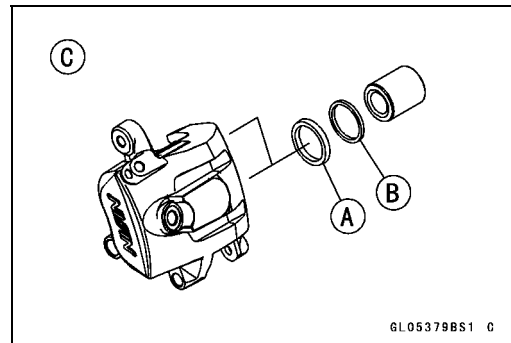




## Calipers

### Caliper Piston and Cylinder Damage Inspection

- Visually inspect the pistons [A] and cylinder surfaces [B].
- ★ Replace the caliper if the cylinder and piston are badly scored or rusty.
  - Front Caliper [C]
  - Rear Caliper [D]

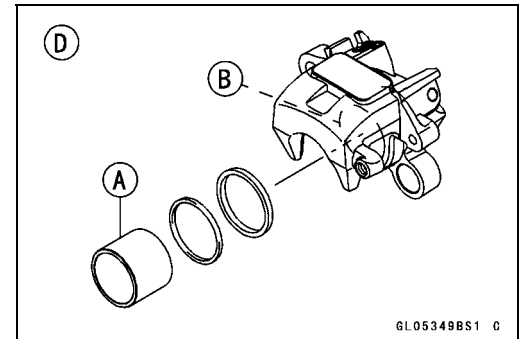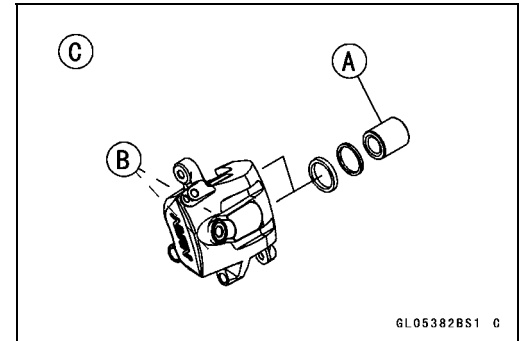



### Caliper Holder Shaft/Pin/Collar Inspection

The caliper body must slide smoothly on the front caliper holder shafts [A] and pin [B], rear caliper holder pin bolt [C] and collar [D]. If the caliper body does not slide smoothly, one pad will wear more than the other, pad wear will increase, and constant drag on the disc will raise brake and brake fluid temperature.

- Check to see that the front caliper holder shafts, rear caliper holder pin bolt and collar are not badly worn or stepped, and that the rubber friction boots are not damaged.
- ★ If the rubber friction boot is damaged, replace the rubber friction boot. To replace the friction boot, remove the pads and the caliper bracket.
- ★ If the front caliper holder shaft, rear caliper holder pin bolt and collar are damaged, replace them.
- Apply a non-permanent locking agent to the threads of the front caliper holder shaft.

**Torque - Front Caliper Holder Shaft: 22 N·m (2.2 kgf·m, 16 ft·lb)**

- Front Caliper [E]
- Rear Caliper [F]

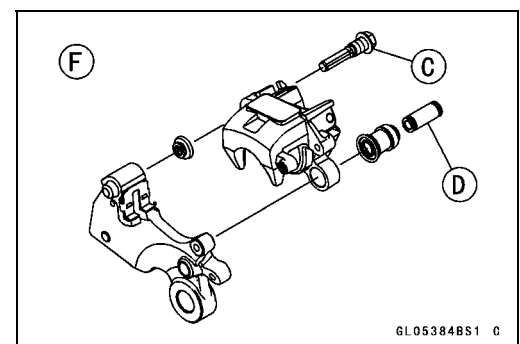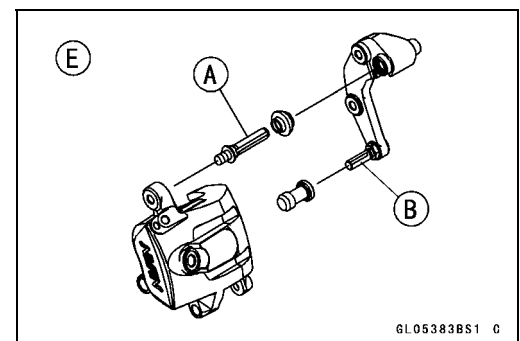


## 12-18 BRAKES


### Brake Pads

#### Front Brake Pad Removal

- Loosen the pad pin [A].
- Remove:
  - Front Caliper Mounting Bolts [B]
- Remove the front caliper [C] with the hose connected.

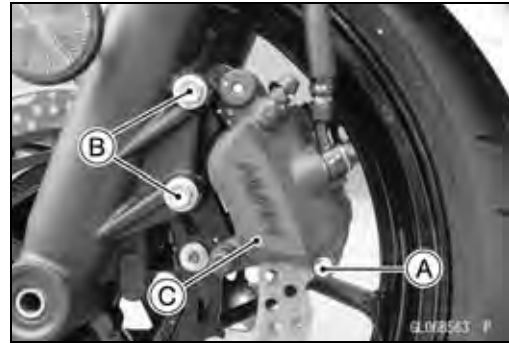


- Pull out the pad pin [A] and remove the brake pads [B] from the caliper [C].

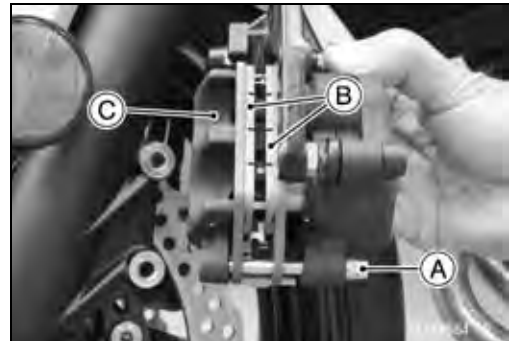


#### Front Brake Pad Installation

- Check that the pad spring [A] is in place on the caliper [B].
- Push the caliper pistons [C] in by hand as far as they will go.

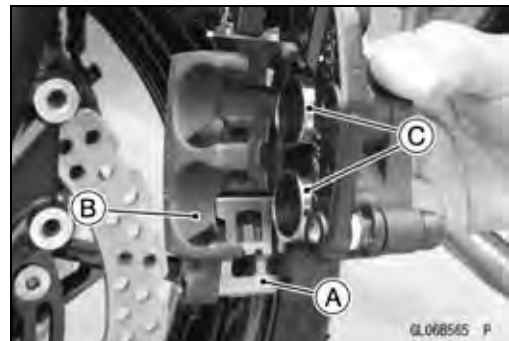

- Install the brake pads [A] to the caliper.
- Fit the tabs [B] of the brake pads on the step [C] of the caliper holder.
- Apply a silicone grease to the O-ring [D] on the pad pin.
- Insert the pad pin [E] through the brake pads and tighten the pad pin temporarily.
- Install the front caliper (see Caliper Installation).
- Tighten:
  - Torque - Front Brake Pad Pin: 17 N·m (1.7 kgf·m, 13 ft·lb)

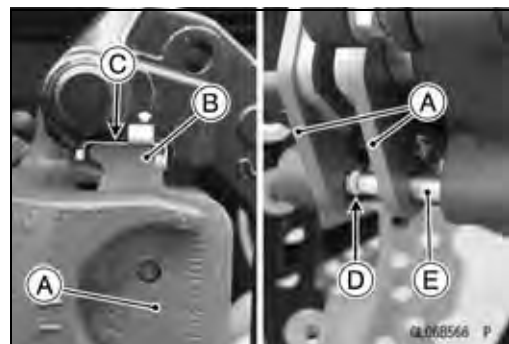


#### **⚠ WARNING**

After servicing, it takes several applications of the brake lever before the brake pads contact the disc, which could result in increased stopping distance and cause an accident resulting in injury or death. Do not attempt to ride the motorcycle until a firm brake lever is obtained by pumping the lever until the pads are against the disc.

## Brake Pads


### Rear Brake Pad Removal

- Remove the caliper holder bolt [A].
- Loosen the pad pin [B].
- Turn the rear caliper [C] forward.
- Remove the pad pin [D].
- Remove the brake pads [E] from the rear caliper.

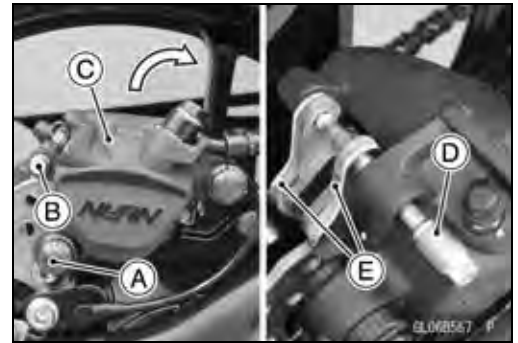


### Rear Brake Pad Installation


- Check that the pad spring [A] is in place on the caliper [B].
- Push the caliper piston [C] in by hand as far as they will go.

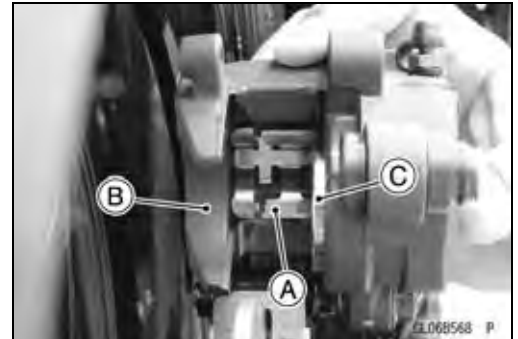

- Install the brake pads [A] to the caliper.
- Fit the tabs [B] of the brake pads on the step [C] of the caliper holder.
- Lower the rear caliper over the brake pads.
- Apply a silicone grease to the O-ring [D] on the pad pin.
- Insert the pad pin [E] through the brake pads and tighten the pad pin temporarily.

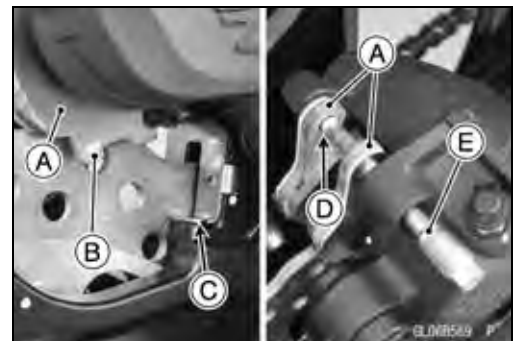

- Tighten:
  - Torque - Rear Caliper Holder Bolt [A]: 22 N-m (2.2 kgf-m, 16 ft-lb)
  - Rear Brake Pad Pin [B]: 17 N-m (1.7 kgf-m, 13 ft-lb)
- Secure the brake hose to the clamp on the swingarm.

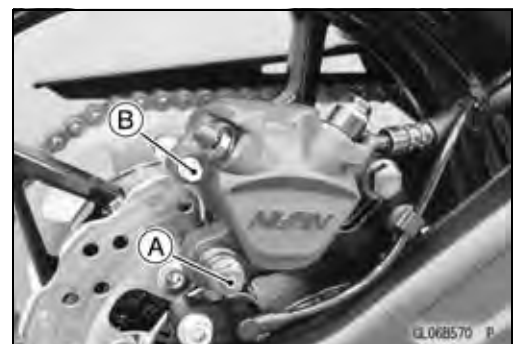

### **⚠ WARNING**

After servicing, it takes several applications of the brake pedal before the brake pads contact the disc, which could result in increased stopping distance and cause an accident resulting in injury or death. Do not attempt to ride the motorcycle until a firm brake pedal is obtained by pumping the pedal until the pads are against the disc.

### Brake Pad Wear Inspection

- Refer to the Brake Pad Wear Inspection in the Periodic Maintenance chapter.

## 12-20 BRAKES

### Master Cylinder

#### Front Master Cylinder Removal

- Remove the rear view mirror (see Rear View Mirror Removal in the Frame chapter).
- Loosen the banjo bolt [A] to disconnect the brake hose from the master cylinder [B] (see Brake Hose and Pipe Replacement in the Periodic Maintenance chapter).
- Disconnect the front brake light switch connectors [C].
- Remove the clamp bolts [D] and front master cylinder clamp [E] to remove the master cylinder assembly.

#### NOTICE

Immediately wash away any brake fluid that spills.

#### Front Master Cylinder Installation

- Install the front master cylinder so that the punch mark [A] of the handlebar is aligned with the mating surface [B] of the master cylinder and clamp.
- Install the master cylinder clamp with its mirror mount [C] facing up.
- Tighten the upper clamp bolt [D] first, and then the lower clamp bolt [E].
- There will be a gap at the lower part of the clamp after tightening.

**Torque - Front Master Cylinder Clamp Bolts: 11 N·m (1.1 kgf·m, 97 in·lb)**



- Connect the front brake light switch connectors.
- Replace the washers that are on each side of the hose fitting with new ones.
- Install the brake hose.
- Touch the brake hose to the stopper of the front master cylinder.
- Tighten:

**Torque - Brake Hose Banjo Bolt: 25 N·m (2.5 kgf·m, 18 ft·lb)**

- Bleed the brake line (see Brake Line Bleeding).
- Check the brake for good braking power, no brake drag, and no fluid leakage.


#### Rear Master Cylinder Removal

- Remove the muffler (see Muffler Removal in the Engine Top End chapter).
- Loosen the banjo bolt [A] at the brake hose lower end, and tighten it loosely.

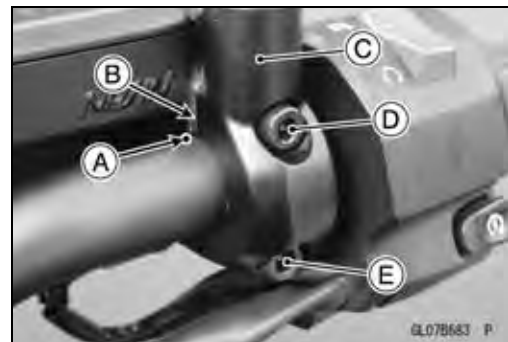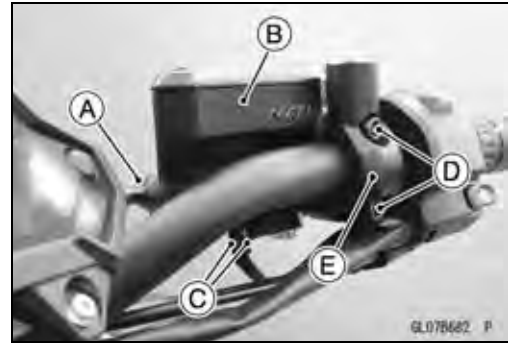


## Master Cylinder


- Remove:
  - Cotter Pin [A]
  - Joint Pin [B]

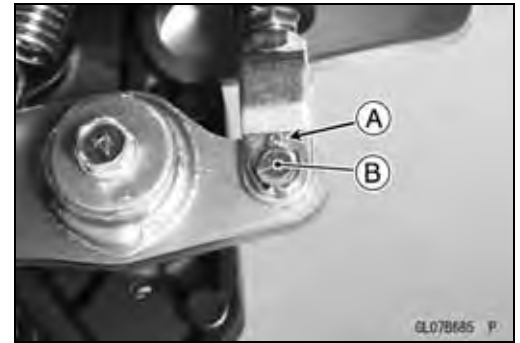

- Remove:
  - Rear Master Cylinder Mounting Bolts [A]
  - Guard [B]
  - Bracket and Damper [C]

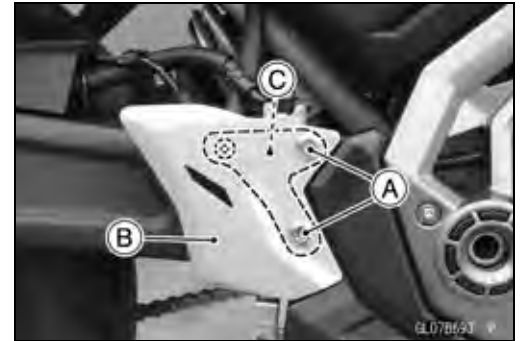


- Slide the reservoir hose lower end clamp [A].
- Pull off the reservoir hose lower end [B], and drain the brake fluid into a container.
- Remove the brake hose banjo bolt [C] to disconnect the brake hose [D] from the rear master cylinder [E].

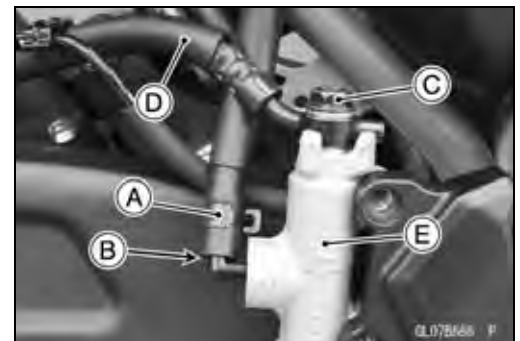


### ***Rear Master Cylinder Installation***

- Installation is the reverse of removal.
- Replace the washers on each side of the hose fitting with new ones.
- Connect the brake hose [A] to the rear master cylinder [B] with the new washers [C] and banjo bolt [D].
- Fit the brake hose fitting [E] into the groove on the rear master cylinder.
- Run the brake hose correctly (see Cable, Wire, and Hose Routing section in the Appendix chapter).

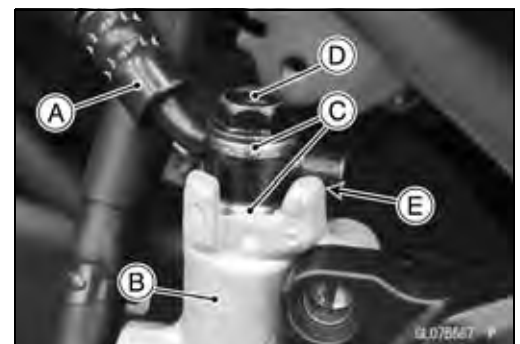

- Install:
  - Guard [A], Bracket and Damper [B]
  - Rear Master Cylinder Mounting Bolts [C]
- Tighten:


**Torque - Rear Master Cylinder Mounting Bolts: 25 N·m (2.5 kgf·m, 18 ft·lb)**

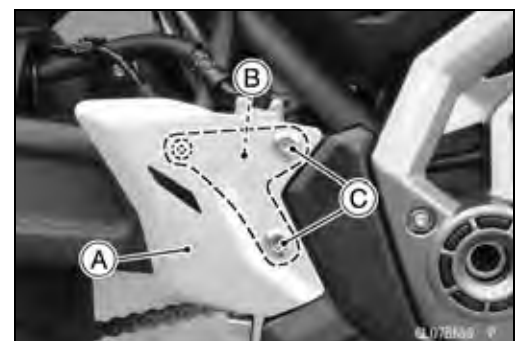

## 12-22 BRAKES

### Master Cylinder

- Replace the cotter pin [A] with a new one.
- Install the joint pin [B].
- Insert the cotter pin into the joint pin and bend the pin ends [C].

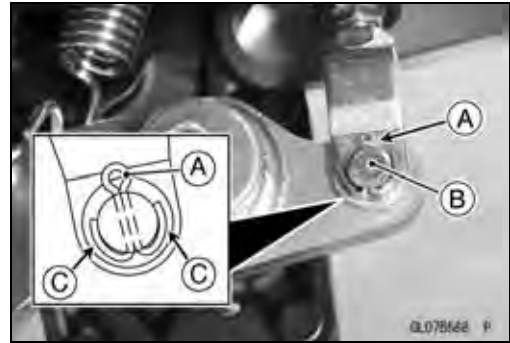

- Tighten the brake hose banjo bolt [A].  
**Torque - Brake Hose Banjo Bolt: 25 N·m (2.5 kgf·m, 18 ft·lb)**
- Install the muffler (see Muffler Installation in the Engine Top End chapter).



#### ***Front Master Cylinder Disassembly***

- Refer to the Master Cylinder Rubber Parts Replacement in the Periodic Maintenance chapter.

#### ***Rear Master Cylinder Disassembly***

- Refer to the Master Cylinder Rubber Parts Replacement in the Periodic Maintenance chapter.

#### ***Master Cylinder Assembly***

- Refer to the Master Cylinder Rubber Parts Replacement in the Periodic Maintenance chapter.



## Master Cylinder

### Master Cylinder Inspection (Visual Inspection)

- Remove the master cylinders (see Front/Rear Master Cylinder Removal).
- Disassemble the front and rear master cylinders (see Master Cylinder Rubber Parts Replacement in the Periodic Maintenance chapter).
- Check that there are no scratches, rust or pitting on the inner wall [A] of each master cylinder and on the outside of each piston [B].
- ★ If a master cylinder or piston shows any damage, replace them.
- Inspect the primary cup [C] and secondary cup [D].
- ★ If a cup is worn, damaged softened (rotted), or swollen, the piston assembly should be replaced to renew the cups.
- ★ If fluid leakage is noted at the brake lever, the piston assembly should be replaced to renew the cups.
- Check the dust covers [E] for damage.
- ★ If they are damaged, replace them.
- Check the piston return springs [F] for any damage.
- ★ If the springs are damaged, replace them.
- Check that relief port [G] and supply port [H] are not plugged.
- ★ If the relief port becomes plugged, the brake pads will drag on the disc. Blow the ports clean with compressed air.

Front Master Cylinder [I]

Rear Master Cylinder [J]

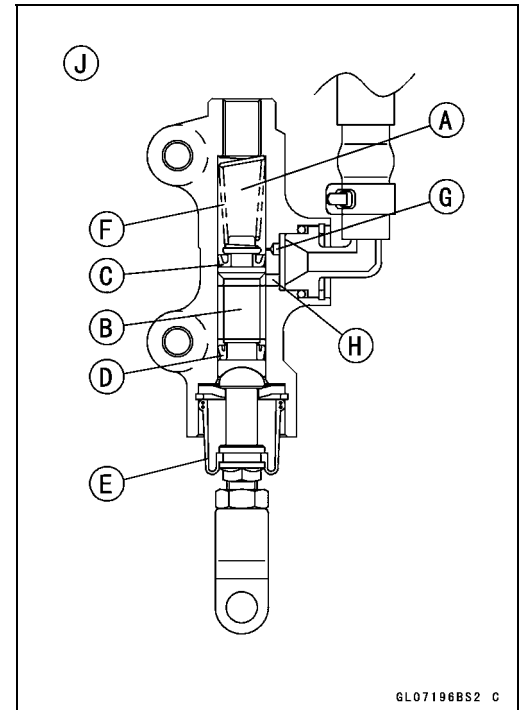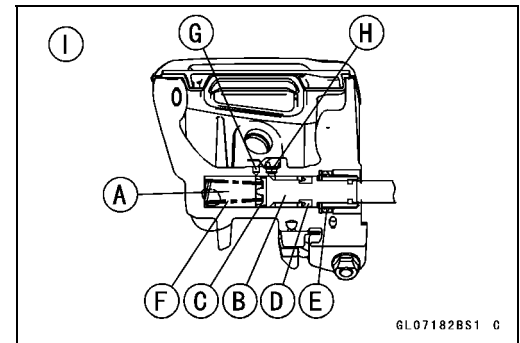

## 12-24 BRAKES


### Brake Disc

#### Brake Disc Removal

- Remove the wheels (see Front/Rear Wheel Removal in the Wheels/Tires chapter).
- Remove the brake disc mounting bolts [A] and brake disc [B].

#### NOTE

○ For the ABS equipped model, do not try to remove the wheel rotation sensor rotor.

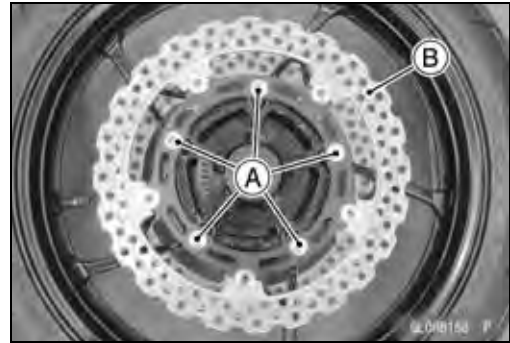



#### Brake Disc Installation

- Install the brake disc on the wheel so that the marked side [A] faces out.
- For the ABS equipped model, install the front brake disc with the wheel rotation sensor rotor [B] to the left side.
- Apply a non-permanent locking agent to the threads of the front and rear brake disc mounting bolts.
- Tighten the front and rear brake disc mounting bolts following the specified tightening sequence.

Front Brake Disc [C]

Rear Brake Disc [D]

**Torque - Brake Disc Mounting Bolts: 27 N·m (2.8 kgf·m, 20 ft·lb)**

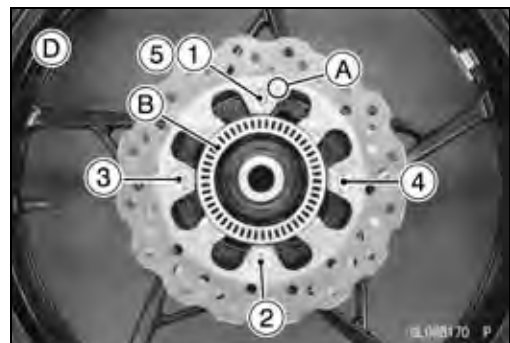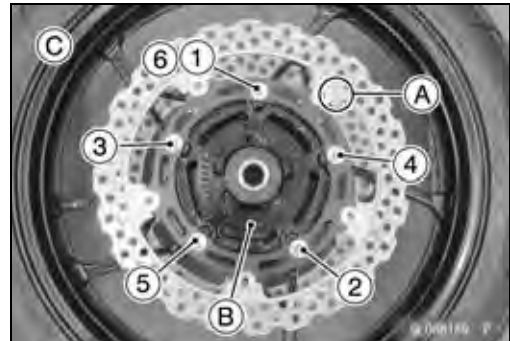

#### Brake Disc Wear Inspection

- Measure the thickness of each disc [A] at the point where it has worn the most. Measuring Area [B]

#### Brake Discs Thickness

##### Standard:

Front 4.8 ~ 5.2 mm (0.19 ~ 0.20 in.)


Rear 4.8 ~ 5.2 mm (0.19 ~ 0.20 in.)

##### Service Limit:

Front 4.5 mm (0.18 in.)

Rear 4.5 mm (0.18 in.)

★ If the disc has worn past the service limit, replace it.

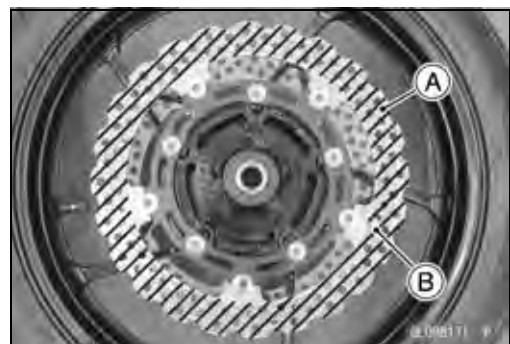



## Brake Disc

### ***Brake Disc Warp Inspection***

- Raise the front/rear wheel off the ground.


**Special Tool - Jack: 57001-1238**

- For front disc inspection, turn the handlebars fully to one side.
- Set up a dial gauge against the disc [A] as shown and measure disc runout, while turning [B] the wheel by hand.
- ★ If runout exceeds the service limit, replace the disc.

#### **Disc Runout**

**Standard      TIR 0.15 mm (0.0059 in.) or less**

**Service Limit    TIR 0.3 mm (0.013 in.)**

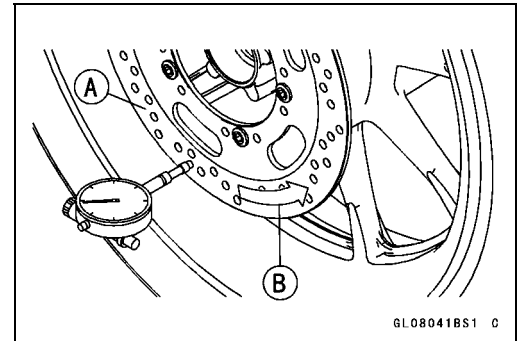

## 12-26 BRAKES

### Brake Fluid

#### **Brake Fluid Level Inspection**

- Refer to the Brake Fluid Level Inspection in the Periodic Maintenance chapter.

#### **Brake Fluid Change**

- Refer to the Brake Fluid Change in the Periodic Maintenance chapter.

#### **Brake Line Bleeding**

The brake fluid has a very low compression coefficient so that almost all the movement of the brake lever or pedal is transmitted directly to the caliper for braking action. Air, however, is easily compressed. When air enters the brake lines, brake lever or pedal movement will be partially used in compressing the air. This will make the lever or pedal feel spongy, and there will be a loss in braking power.

#### **⚠ WARNING**

**Air in the brake lines diminish braking performance and can cause an accident resulting in injury or death. If the brake lever or pedal has a soft or "spongy" feeling mushy when it is applied, there might be air in the brake lines or the brake may be defective. Do not operate the vehicle and service the brake system immediately.**

#### **NOTE**

- *The procedure to bleed the front brake line is as follows. Bleeding the rear brake line is the same as for the front brake.*

- Remove the reservoir cap [A] and diaphragm.
- Fill the reservoir with fresh brake fluid to the upper level line in the reservoir.
- Slowly pump the brake lever several times until no air bubbles can be seen rising up through the fluid from the holes at the bottom of the reservoir.
- Bleed the air completely from the master cylinder by this operation.



- Remove the rubber cap [A] from the bleed valve on the caliper.
- Attach a clear plastic hose [B] to the bleed valve, and run the other end of the hose into a container.



## Brake Fluid

- Bleed the brake line and the master cylinder.
- Repeat this operation until no more air can be seen coming out into the plastic hose.
  1. Pump the brake lever until it becomes hard, and apply the brake and hold it [A].
  2. Quickly open and close [B] the bleed valve while holding the brake applied.
  3. Release the brake lever [C].




### NOTICE

**After pumping the brake lever several times, releasing it without opening and closing of the bleed valve may cause brake fluid to be blown back from the master cylinder reservoir. Brake fluid spilt on painted surfaces and plastic parts will quickly damage them. Be sure to open and close the bleed valve.**

### NOTE

- The fluid level must be checked often during the bleeding operation and replenished with fresh brake fluid as necessary. If the fluid in the reservoir runs completely out any time during bleeding, the bleeding operation must be done over again from the beginning since air will have entered the line.
  - Tap the brake hose lightly from the caliper to the reservoir for more complete bleeding.
  - Front Brake: First bleeding the right caliper then repeat the above steps for the left caliper.
- Remove the clear plastic hose.
  - Tighten the bleed valve [A], and install the rubber cap [B].  
**Torque - Bleed Valve: 7.8 N·m (0.80 kgf·m, 69 in·lb)**
  - Check the fluid level (see Brake Fluid Level Inspection in the Periodic Maintenance chapter).


- Install the diaphragm and reservoir cap [A].
- Tighten:  
**Torque - Front Brake Fluid Reservoir Cap Screws [B]: 1.5 N·m (0.15 kgf·m, 13 in·lb)**

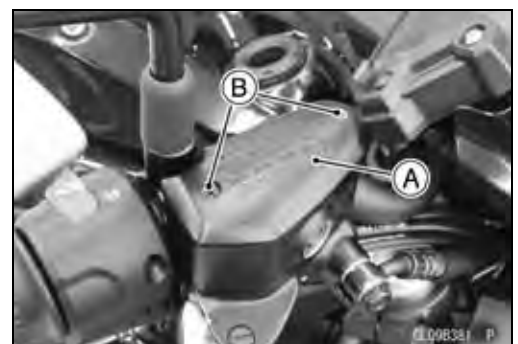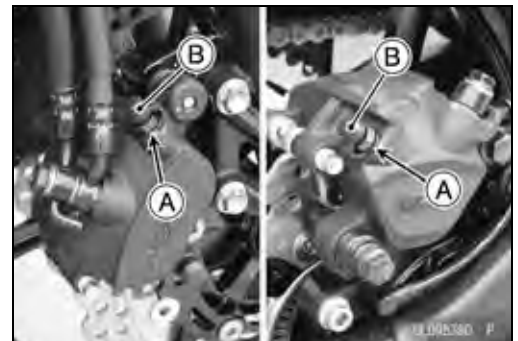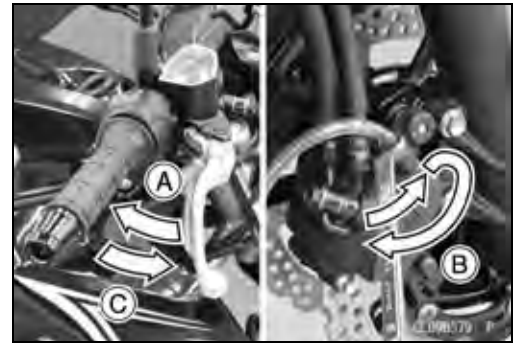

## 12-28 BRAKES

### Brake Fluid

- Follow the procedure below to install the rear brake fluid reservoir cap correctly.
- First, tighten the brake fluid reservoir cap [A] clockwise [B] by hand until slight resistance is felt indicating that the cap is seated on the reservoir body [C], then tighten the cap an additional 1/6 turn [D] while holding the brake fluid reservoir body.

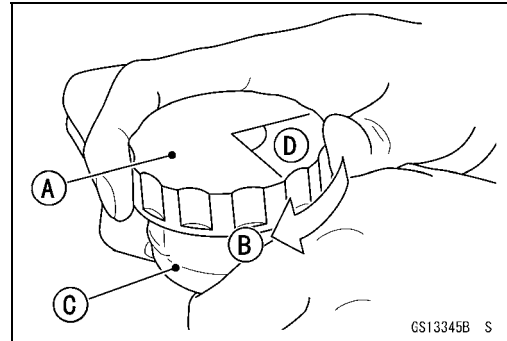

- After bleeding is done, check the brake for good braking power, no brake drag, and no fluid leakage.

#### **⚠ WARNING**

**When working with the disc brake, observe the precautions listed below.**

- **Never reuse old brake fluid.**
- **Do not use fluid from a container that has been left unsealed or that has been open for a long time.**
- **Do not mix two types and brands of fluid for use in the brake. This lowers the brake fluid boiling point and could cause the brake to be ineffective. It may also cause the rubber brake parts to deteriorate.**
- **Do not leave the reservoir cap off for any length of time to avoid moisture contamination of the fluid.**
- **Do not change the fluid in the rain or when a strong wind is blowing.**
- **Except for the disc pads and disc, use only disc brake fluid, isopropyl alcohol, or ethyl alcohol for cleaning of the brake parts. Do not use any other fluid for cleaning these parts. Gasoline, engine oil, or any other petroleum distillate will cause deterioration of the rubber parts. Oil spilled on any part will be difficult to wash off completely and will eventually deteriorate the rubber used in the disc brake.**
- **When handling the disc pads or disc, be careful that no disc brake fluid or any oil gets on them. Clean off any fluid or oil that inadvertently gets on the pads or disc with a high flash-point solvent. Do not use one which will leave an oily residue. Replace the pads with new ones if they cannot be cleaned satisfactorily.**
- **Brake fluid quickly damages painted surfaces; any spilled fluid should be completely wiped up immediately.**
- **If any of the brake line fittings or the bleed valve is opened at any time, the AIR MUST BE BLED FROM THE BRAKE LINE.**

**Brake Hose**

---

***Brake Hose Removal/Installation***

- Refer to the Brake Hose and Pipe Replacement in the Periodic Maintenance chapter.

***Brake Hose and Pipe Inspection***

- Refer to the Brake Hose and Pipe Damage and Installation Condition Inspection in the Periodic Maintenance chapter.

# 12-30 BRAKES


## Anti-Lock Brake System (Equipped Models)

### Parts Location

- Front Wheel Rotation Sensor [A]
- Front Wheel Rotation Sensor Rotor [B]



- Rear Wheel Rotation Sensor [A]
- Rear Wheel Rotation Sensor Rotor [B]

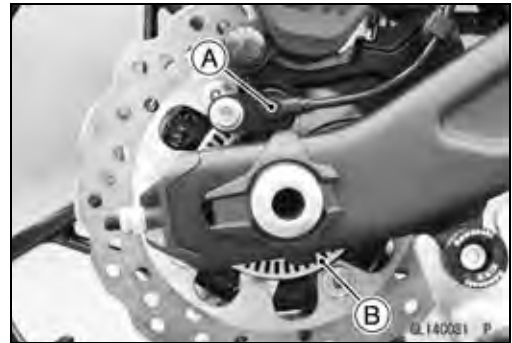

- Yellow ABS Indicator Light (LED) [A]



- ABS Hydraulic Unit [A]



- ABS Self-diagnosis Terminal [A]
- ABS Kawasaki Diagnostic System Connector [B]



---

**Anti-Lock Brake System (Equipped Models)**

---


Fuse Box (3) [A]



# 12-32 BRAKES

## Anti-Lock Brake System (Equipped Models)

### ABS System Wiring Diagram

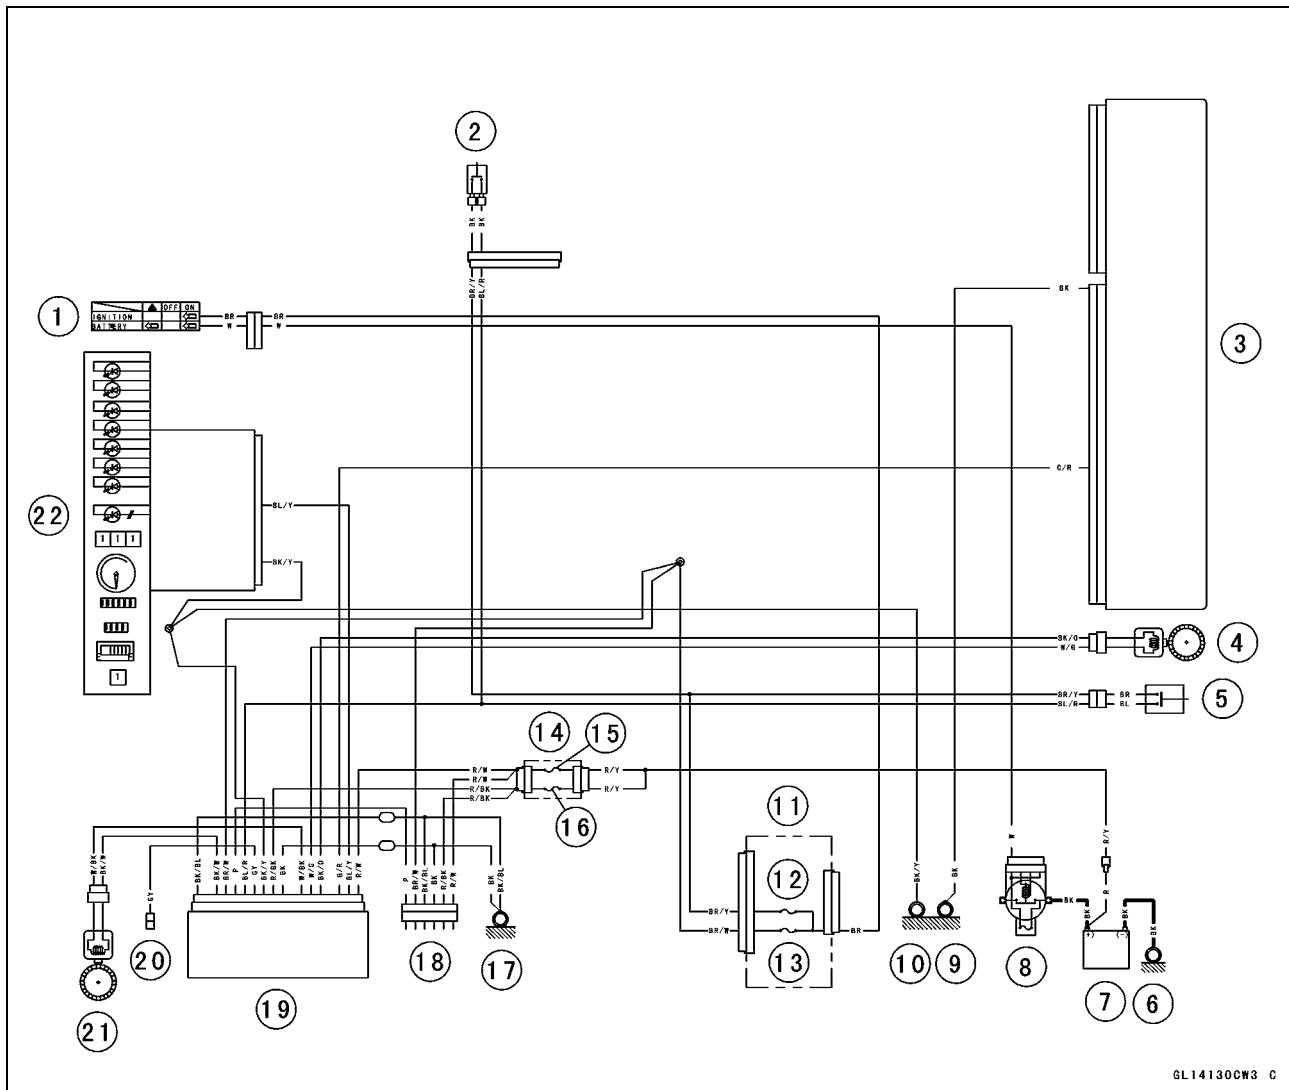

- |                               |  |
|-------------------------------|--|
| 1. Ignition Switch            | 12. Brake Light/Horn Fuse 10 A               |
| 2. Front Brake Light Switch   | 13. Ignition Fuse 10 A                       |
| 3. ECU                        | 14. Fuse Box (3)                             |
| 4. Rear Wheel Rotation Sensor | 15. ABS Motor Relay Fuse 25 A                |
| 5. Rear Brake Light Switch    | 16. ABS Solenoid Valve Relay Fuse 15 A       |
| 6. Engine Ground              | 17. Frame Ground (7)                         |
| 7. Battery                    | 18. ABS Kawasaki Diagnostic System Connector |
| 8. Main Fuse 30 A             | 19. ABS Hydraulic Unit                       |
| 9. Frame Ground (3)           | 20. ABS Self-diagnosis Terminal              |
| 10. Frame Ground (2)          | 21. Front Wheel Rotation Sensor              |
| 11. Fuse Box (1)              | 22. Meter Unit                               |


○Color Codes:

- |                |                 |            |
|----------------|-----------------|------------|
| BK: Black      | GY: Gray        | PU: Purple |
| BL: Blue       | LB: Light Blue  | R: Red     |
| BR: Brown      | LG: Light Green | V: Violet  |
| CH: Chocolate  | O: Orange       | W: White   |
| DG: Dark Green | P: Pink         | Y: Yellow  |
| G: Green       |                 |            |



## Anti-Lock Brake System (Equipped Models)

### ABS Hydraulic Unit Terminal Names

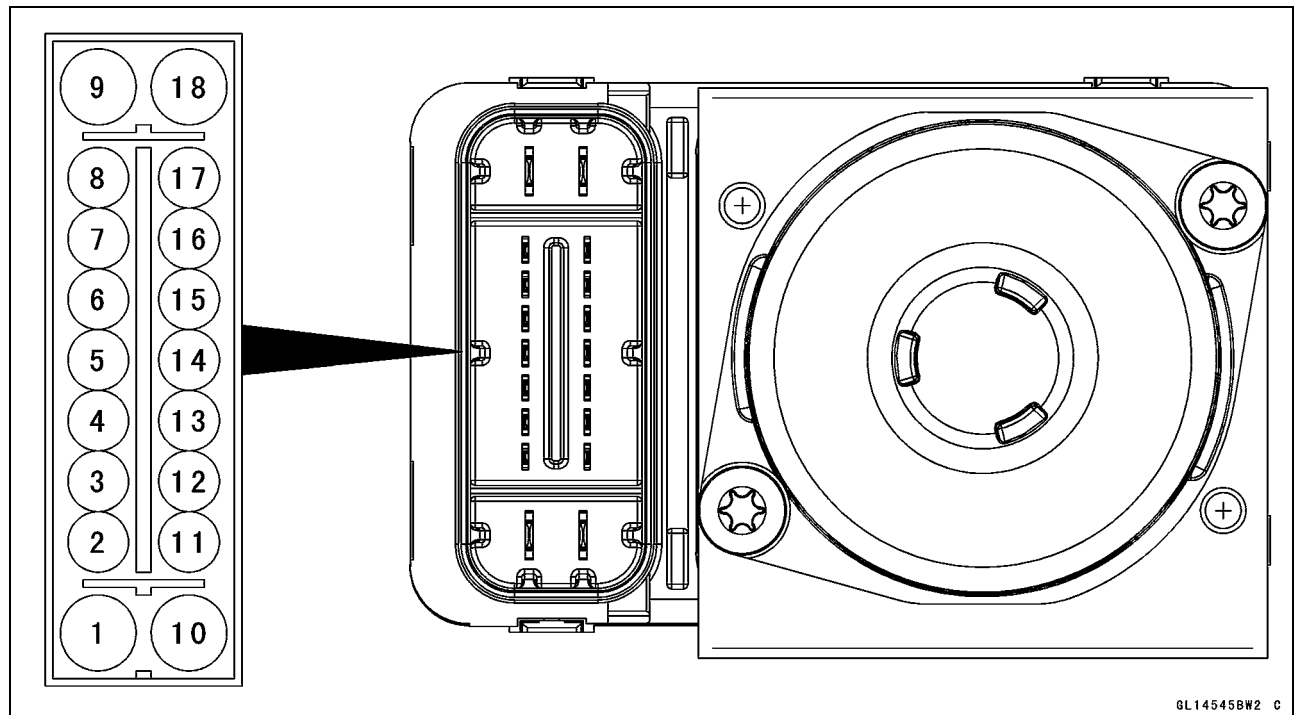

1. Ground: BK/BL
2. Unused
3. Front Wheel Rotation Sensor Signal Input: BK/W
4. Power Supply: BR/W
5. ABS Kawasaki Diagnostic System Terminal: P
6. Front and Rear Brake Light Switch Signal: BL/R
7. ABS Self-diagnosis Terminal: GY
8. Ground: BK/Y
9. Power Supply to ABS Solenoid Valve Relay: R/BK
10. Ground for Motor: BK
11. Unused
12. Power Supply to Front Wheel Rotation Sensor: W/BK
13. Power Supply to Rear Wheel Rotation Sensor: W/G
14. Rear Wheel Rotation Sensor Signal Input: BK/O
15. Unused
16. Rear Wheel Rotation Sensor Signal Output: G/R
17. Yellow ABS Indicator Light (LED): BL/Y
18. Power Supply to ABS Motor Relay: R/W

## 12-34 BRAKES

### Anti-Lock Brake System (Equipped Models)

---

#### ***ABS Servicing Precautions***

There are a number of important precautions that should be followed servicing the ABS system.

- This ABS system is designed to be used with a 12 V sealed battery as its power source. Do not use any other battery except for a 12 V sealed battery as a power source.
- Do not reverse the battery cable connections. This will damage the ABS hydraulic unit.
- To prevent damage to the ABS parts, do not disconnect the battery cables or any other electrical connections when the ignition switch is on or while the engine is running.
- Take care not to short the leads that are directly connected to the battery positive (+) terminal to the chassis ground.
- Do not turn the ignition switch on while any of the ABS electrical connectors are disconnected. The ABS hydraulic unit memorizes service codes.
- Do not spray water on the electrical parts, ABS parts, connectors, leads and wiring.
- If a transceiver is installed on the motorcycle, make sure that the operation of the ABS system is not influenced by electric wave radiated from the antenna. Locate the antenna as far as possible away from the ABS hydraulic unit.
- Whenever the ABS electrical connections are to be disconnected, first turn off the ignition switch.
- The ABS parts should never be struck sharply, as with a hammer, or allowed to fall on a hard surface. Such a shock to the parts can damage them.
- The ABS parts cannot be disassembled. Even if a fault is found, do not try to disassemble and repair the ABS parts, replace it.
- The ABS has many brake lines, pipes, and leads. And the ABS cannot detect problems with the conventional braking system (brake disc wear, unevenly worn brake pad, and other mechanical faults). To prevent trouble, check the brake lines and pipes for correct routing and connection, the wiring for correct routing, and the brakes for proper braking power. Be sure to check for fluid leakage, and bleed the brake line thoroughly.

**Anti-Lock Brake System (Equipped Models)****⚠ WARNING**

Air in the brake lines diminish braking performance and can cause an accident resulting in injury or death. If any of the brake line fittings, including the ABS hydraulic unit joint nuts, or the bleed valve is opened at any time, the air must be bled completely from the brake line. If the brake lever has a soft or "spongy" feeling mushy when it is applied, there might be air in the brake lines or the brake may be defective. Do not operate the vehicle and service the brake system immediately.

**NOTICE**

Do not ride the motorcycle with air in the brake line, or the ABS could malfunction.

- The yellow ABS indicator light (LED) [A] may come on if the tire pressure is incorrect, a non-recommended tire is installed, or the wheel is deformed. If the indicator light comes on, remedy the problem and clear the service code.

**⚠ WARNING**

Use of non-recommended tires may cause malfunctioning of ABS and can lead to extended braking distance resulting in an accident causing serious injury or death. Always use recommended standard tires for this motorcycle.




## 12-36 BRAKES

### Anti-Lock Brake System (Equipped Models)

- The yellow ABS indicator light (LED) may come on if the engine is run with the motorcycle on its stand and the transmission in gear. If the indicator light comes on, just turn the ignition switch off, then clear service code 42, which indicates a “Faulty front wheel rotation sensor.”
- When the ABS operates, the ABS makes noise and the rider feels the reaction force on the brake lever and brake pedal. This is a normal condition. It informs the rider that the ABS is operating normally.
- Service codes detected once by the ABS hydraulic unit will be memorized in the ABS hydraulic unit. Therefore, after maintenance work is finished, be sure to erase the service codes. Do not erase the service codes during troubleshooting. Wait until all the checks and repair work are finished to prevent duplication of previous service codes and unnecessary maintenance work.
- Before delivering the motorcycle to the customer, be sure to erase any service codes which might be stored in the ABS hydraulic unit. Using the self-diagnosis feature, make sure that the yellow ABS indicator light (LED) function. A fully charged battery is a must for conducting reliable self-diagnosis. Test run the motorcycle at a speed of more than 20 km/h (12 mph) to see that the yellow ABS indicator light (LED) does not come on. Finally, test run the motorcycle at a speed of more than 30 km/h (20 mph) and brake suddenly to see that the motorcycle stops without loss of steering control and the ABS operates normally (The reaction force generated is felt in the brake lever and pedal.). This completes the final inspection.

#### **ABS Troubleshooting Outline**

When an abnormality in the system occurs, the yellow ABS indicator light (LED) comes on to alert the rider. In addition, the nature of the fault is stored in the memory of the ABS hydraulic unit and when in the self-diagnosis mode, the service code [A] is indicated by the number of times the yellow ABS indicator light (LED) blinks. The service codes stored in memory are not erased until the mode has been changed to the fault erase mode after the fault has been corrected. Therefore, after correcting the problem, always erase the service codes and then run the self-diagnosis program to confirm normal signal output. When, due to a malfunction, the yellow ABS indicator light (LED) remains on, get a thorough understanding of the background before starting the repair work. Ask the rider about the conditions [B] under which the problem occurred and try to determine the cause [C]. Do not rely solely on the ABS self-diagnosis function, use common sense; check the brakes for proper braking power, and brake fluid level, search for leaks, etc.

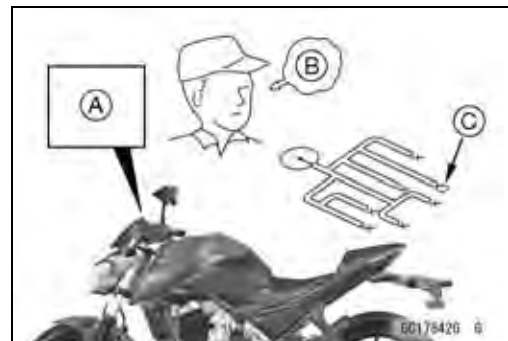

## Anti-Lock Brake System (Equipped Models)


Even when the ABS is operating normally, the yellow ABS indicator light (LED) may come on under the conditions listed below. Turn the ignition switch off to stop the indicator light. If the motorcycle runs without erasing the service code, the indicator light may come on again.

- After continuous riding on a rough road.
- When the engine is started with the stand raised and the transmission engaged, and the rear wheel turns.
- When accelerating so abruptly that the front wheel leaves the ground.
- When the ABS has been subjected to strong electrical interference.
- When tire pressure is abnormal. Adjust tire pressure.
- When a tire different in size from the standard size is being used. Replace with standard size.
- When the wheel is deformed. Replace the wheel.

Much of the ABS troubleshooting work consists of confirming continuity of the wiring. The ABS parts are assembled and adjusted by the manufacturer, so there is no need to disassemble or repair them. Replace the ABS hydraulic unit.

The basic troubleshooting procedures are listed below.


- Carry out pre-diagnosis inspections as a preliminary inspection.
- Determine the fault using the self-diagnosis function.
- Check wiring and connections from the ABS hydraulic unit connector to the suspected faulty ABS part, using a tester.
- Visually inspect the wiring for signs of burning or fraying.
- ★ If any wiring is poor, replace the damaged wiring.
- Pull each connector apart and inspect it for corrosion, dirt and damage.
- ★ If the connector is corroded or dirty, clean it carefully. If it is damaged, replace it.
- Check the wiring for continuity.
- Use the wiring diagram to find the ends of the lead which is suspected of being a problem.
- Connect a tester between the ends of the leads.
- ★ If the tester does not read about 0  $\Omega$ , the lead is defective. Replace the main harness [A] if necessary.
- Narrow down suspicious parts and close in on the faulty ABS part by repeating the continuity tests.
- ★ If no abnormality is found in the wiring or connectors, the ABS parts are the next likely suspects. Check each part one by one.
- ★ If an abnormality is found, replace the affected ABS part.

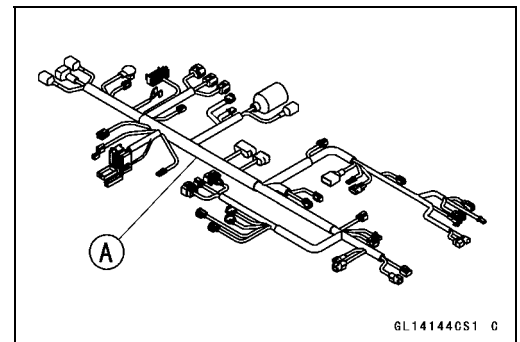

# 12-38 BRAKES

## Anti-Lock Brake System (Equipped Models)

### ABS Diagnosis Flow Chart

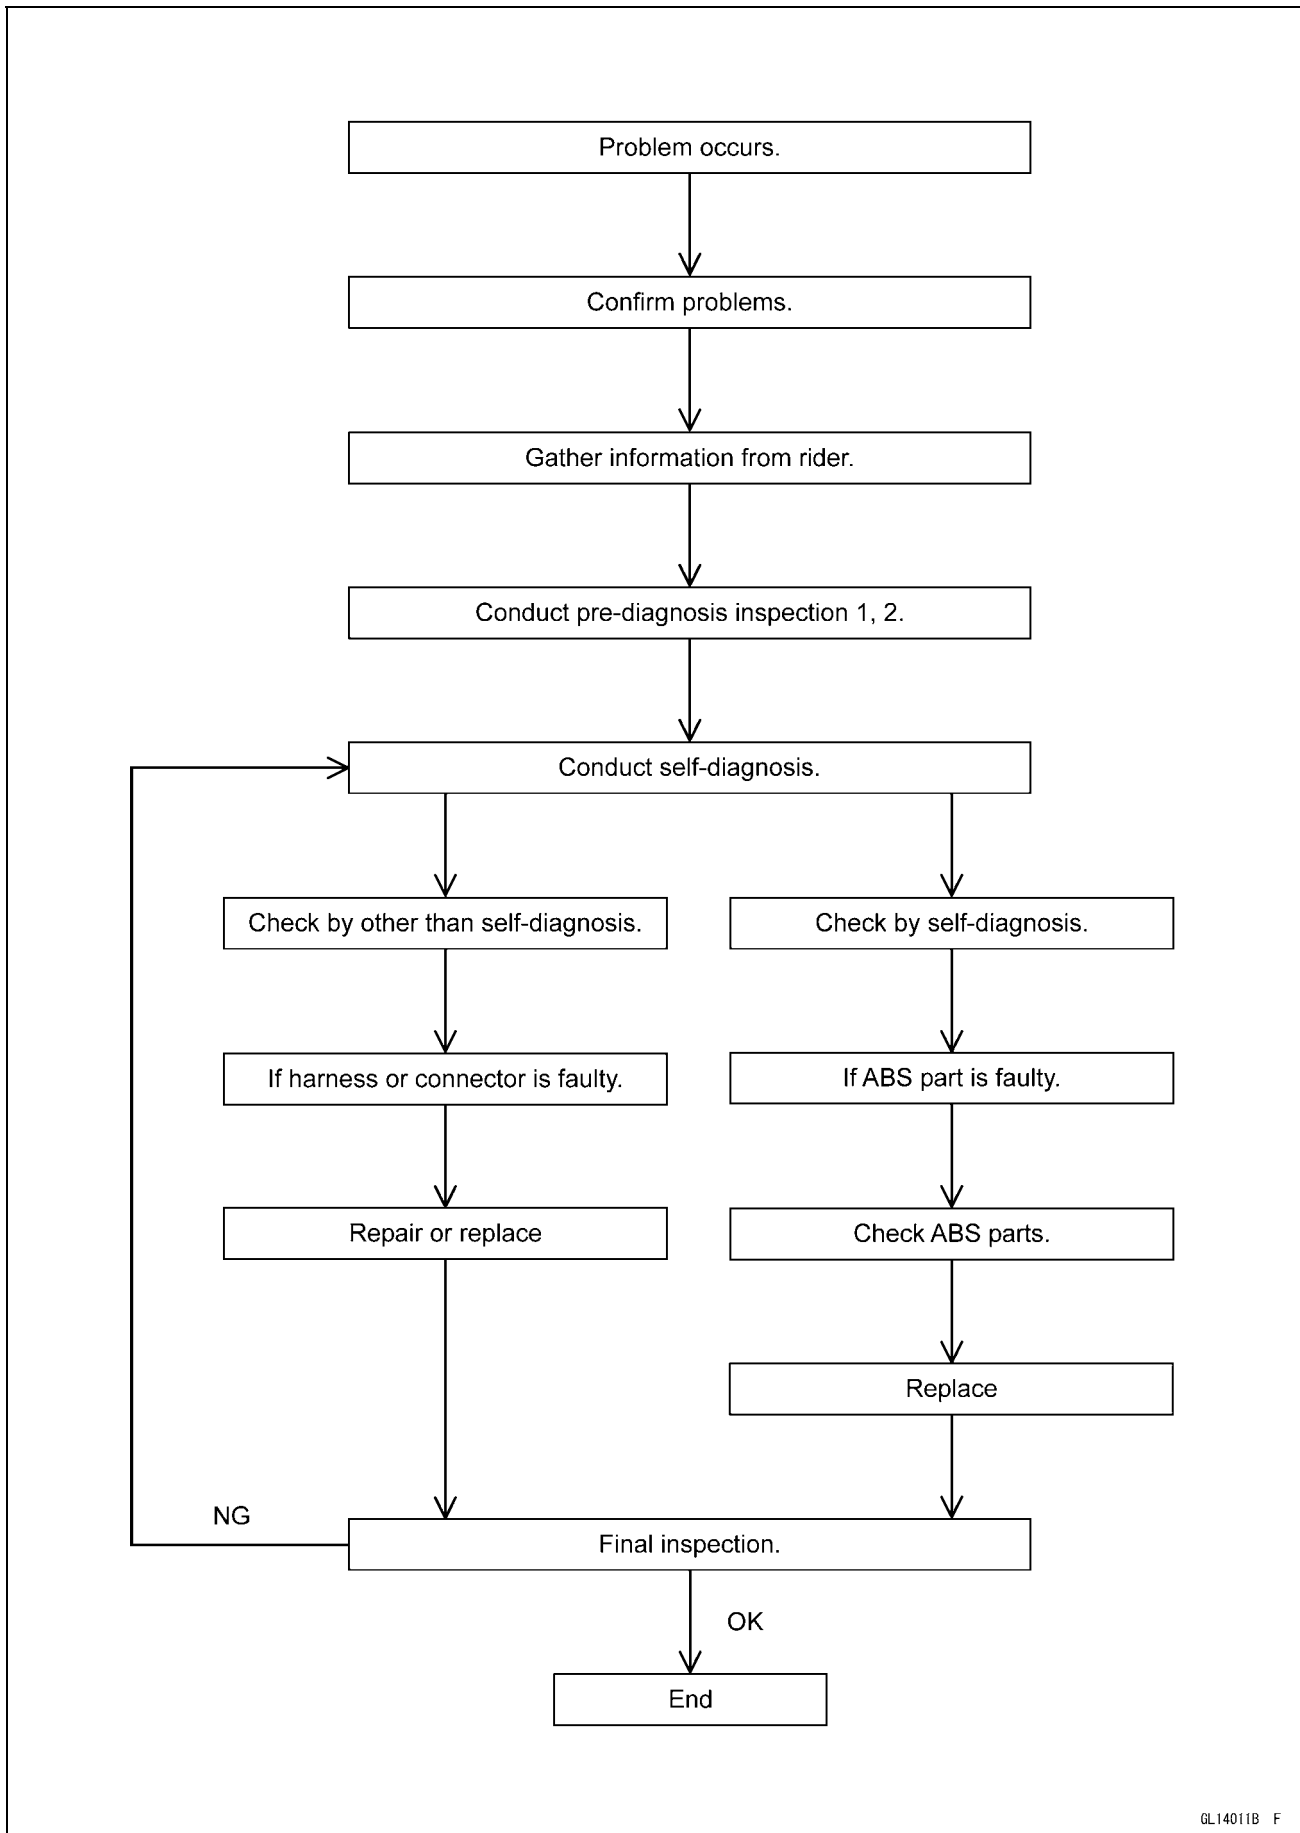

**Anti-Lock Brake System (Equipped Models)**

***Inquiries to Rider***

***Inquiries to Rider***

- o Each rider reacts to problems in different ways, so it is important to confirm what kind of problem the rider is experiencing.
- o Try to find out exactly what problem occurs under exactly what conditions by asking the rider; knowing this information may help you reproduce the problem in the workshop.
- o The diagnosis sheet will help prevent you from overlooking any key information, so always use it.

**Sample Diagnosis Sheet 1**

Rider Name: .....  
 Date of registration: .....  
 V/in No.: .....  
 Engine No.: .....  
 Registration No. (license plate No.): .....  
 Model: .....  
 Odometer reading: ..... km or miles  
 Odometer reading when problem first occurred: ..... km or miles

Question	Description	Answer	Advice to customer
Which statement/s best describes the fault with the ABS system?	Yellow ABS indicator light (LED) illuminated?	Flashing Continuous Not working	A fault has been detected with the ABS system.
	ABS not working		Further inspection by technician required.
	ABS operates too frequently		Continuous riding on rough or un-even surfaces can cause the ABS to operate more frequently.
	Stopping distance too long		Further inspection by technician required.
Do the front and rear brake levers feel normal during application?	Does the wheel lock when you apply the brakes		
	Brake can't be released		
	Other		
	Normal	Long stroke (lever feels soft and moves back close to the handle bar) Limited stroke (lever feels hard and has little movement) Pulsing/vibrating	Further inspection by technician required.  This indicates a probable fault with the braking system and should be inspected immediately.
When does the fault occur?	Which lever? (front, rear or both)		
	During start up / stationary	(Is a centre stand or service stand used)	If the motorcycle engine is left running whilst on its centre or service stand, mechanical drag can cause the rear wheel to rotate. If the rear wheel rotates the ABS system may detect a fault. Turning off the ignition switch and restarting should reset the yellow ABS indicator light (LED) if no problems are detected. However the service code will be stored in the ABS ECU and should be reset by the dealer.
	Driving below 6 km/h (4mph) (Speeds vary depending on model)		The ABS system is not active at these speeds.
	Driving above 6 km/h (4mph) (Speeds vary depending on model)	front only rear only both brakes	This may be normal ABS operation if the road conditions are poor.
When slowing or stopping (Rate of brake application)	Gradual braking	front only rear only both brakes	Abrupt braking may cause the ABS to function early as the suspension may not have had enough time to react to the situation.
	During abrupt braking	front only rear only both brakes	
	Other	There is no specific pattern	

# 12-40 BRAKES

## Anti-Lock Brake System (Equipped Models)

Question	Description	Answer	Advice to customer
How often does the fault occur?	Every time ignition is switched on		Further inspection by technician required.
	Every time the brakes are used (Continually)		
During which riding conditions does the fault occur?	No regularity (Intermittent)	Any comment on riding style maybe applicable.	Braking and handling characteristics can vary with vehicle speed, therefore ABS operation during braking at highway speed may be more frequent.
	Other		
	Highway riding		
	City riding		
	Minor/country roads riding		
	Cross country riding		
	Track/closed circuit riding		
All			
In what road conditions does the problem occur?	Dry		Further inspection by technician required.
	Wet		
	Snow/ice		
	Loose/rough surface (gravel)		
Motorcycle condition	Has the machine been regularly serviced according to the periodic maintenance schedule?		Excessive use of the ABS system due to continuous fast riding can trigger the ABS warning indicator. Normal riding on good condition roads should allow the yellow ABS indicator light (LED) to reset automatically. Further inspection by technician required.
	Have there been any previous braking problems?		
Motorcycle condition	Have any aftermarket parts been fitted?		In wet conditions it is possible that the ABS is operating normally In snow/icy conditions it is possible that the ABS is operating normally On loose/rough surfaces it is possible that the ABS is operating normally If the service history is incomplete it is possible that a fault may become apparent. For example, failure to replace the brake fluid during periodic maintenance can cause the hydraulic unit to become internally damaged. Any previous braking problems may be related to the ABS complaint. It is important that the customer provides as much information as possible so that diagnosis can be made as quickly as possible.
	Have the daily safety checks been carried out? (tire pressures / condition etc.)		
	OE Tires and brakes?		
			Further inspection by technician required.
			Worn tires or tires with incorrect pressures can cause an ABS fault. It is important to regularly check both tire condition and pressure.



**Anti-Lock Brake System (Equipped Models)**

*Dealer Findings*


**Sample Diagnosis Sheet 2**

Question/Action	Description	Answer	Advice to technician
Review customer feedback information	<i>Carefully analyze the information that has been collected from the customer. Use this information to help you perform your initial diagnosis.</i>		
Check to see if any diagnostic codes are present		1	If codes are present refer to service manual.
		2	
		3	
		4	
		5	
Inspect the following	<i>Battery voltage</i>		The ABS is designed to be used with a 12 V sealed battery as its power source. Only use the battery specified by the service manual as a power source. If low battery voltage is detected service codes: B52 or B53 will be displayed.
	<i>Tires type/size</i>	Front ..... Rear .....	Refer to service manual.
	<i>Tire pressures</i>	Front ..... Rear .....	
	<i>Tire condition</i>	Front ..... Rear .....	Excessive or abnormal wear can be recognized as an ABS fault.
	<i>Wheel rotation sensor air gap</i>	Front ..... Rear .....	Refer to service manual. Also check that the wheel orientation is correct.
	<i>Wheel condition (damaged or deformed)</i>	Front ..... Rear .....	Refer to service manual.
	<i>Brake system general condition</i>	Front ..... Rear .....	Pad wear/Front and rear operation/Condition of hoses etc.
	<i>Brake disc run-out</i>	Front ..... Rear .....	Refer to service manual.
Additional information on the yellow ABS indicator light (LED)	<i>Continuous</i>	<i>Stays on all the time while ignition on</i>	Check for diagnostic trouble codes.
		<i>Turns off when first moving off but turns on again and stays on</i>	
		<i>Turns on when brake(s) are operated</i>	
		<i>Other:</i>	
	<i>Not working</i>	<i>Turns off soon after moving off</i>	Test the operation of the light by turning on the ignition. If the light fails to illuminate ensure that the bike is equipped with ABS before inspecting the meter panel for faults as per the service manual.
		<i>Turns off after riding for a while</i>	
		<i>Other:</i>	
<i>How many times does it flash per 10 seconds?</i>		5, 15, or 20	By flashing the ABS unit is indicating additional fault codes that may not be listed in the service manual. Please carefully count the number of flashes per 10 seconds before contacting Kawasaki. ( <i>Kawasaki may request a video of the flashing sequence</i> )
		Other: ..... times	

# 12-42 BRAKES


## Anti-Lock Brake System (Equipped Models)

### Pre-Diagnosis Inspection 1

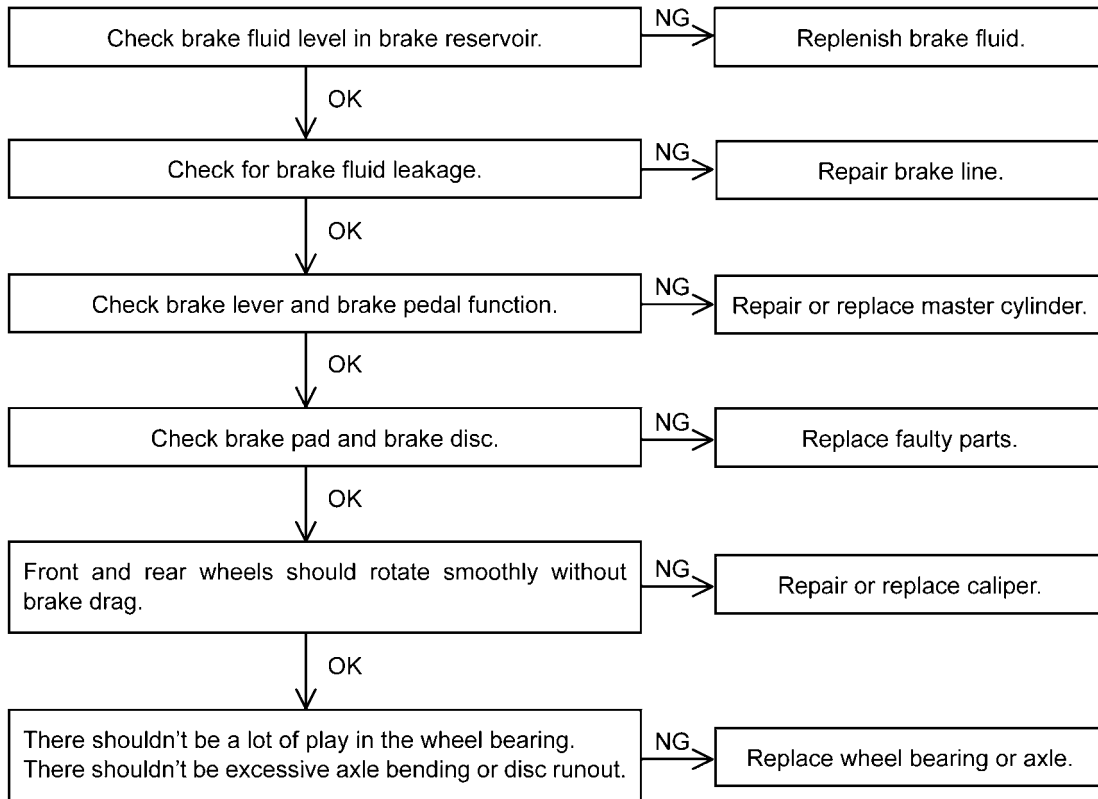

## Anti-Lock Brake System (Equipped Models)

### Pre-Diagnosis Inspection 2

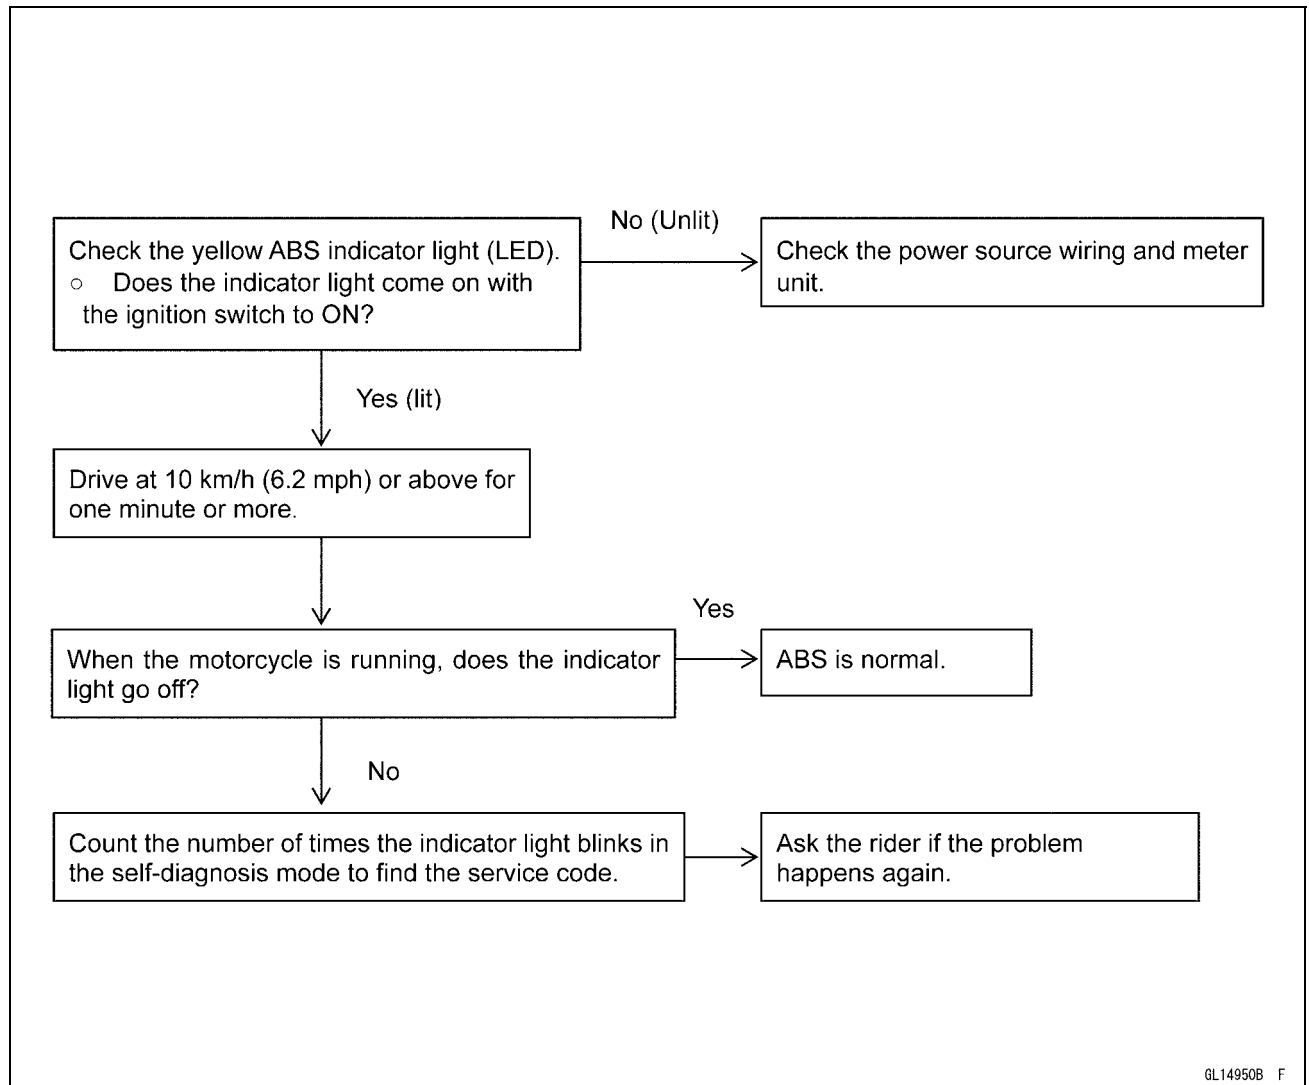

### Self-diagnosis Outline

When the indicator light has blinked or come on, the ABS hydraulic unit memorizes and stores the service code (16 codes including “Normal Code”) for the service person to troubleshoot easily. The service code memory is powered directly by the battery and cannot be canceled by the ignition switch.

The ABS hydraulic unit can memorize up to six service codes. Further service codes are memorized after erasing the preceding six service codes. If there is no fault, only the start code 12 is shown, indicating that “The ABS is normal.”

### Self-diagnosis Procedures

○When a problem occurs with the ABS system, the yellow ABS indicator light (LED) [A] come on.

#### NOTE

- Use a fully charged battery when conducting self-diagnosis. Otherwise, the indicator light blinks very slowly or doesn't blink.
- The motorcycle is stopped.
- Keep the self-diagnosis terminal grounded during self-diagnosis, with an auxiliary lead.



## 12-44 BRAKES

### Anti-Lock Brake System (Equipped Models)

- Remove the front seat (see Front Seat Removal in the Frame chapter).
- Ground the self-diagnosis terminal [A] (Gray) to the battery (-) terminal, using a suitable lead.
- Turn the ignition switch on.
- Count the blinks of the indicator light to read the service code. Keep the auxiliary lead ground until you finish reading the service code.

 



#### **Service Code Clearing Procedures**

- Start the service code erase mode with the following procedure.
- The erase mode starts when the ABS self-diagnosis terminal is disconnected from the battery (-) terminal after starting the self-diagnosis mode.
- The service code can be erased by grounding and ungrounding (each time for at least one second) the ABS self-diagnosis terminal three times within about 12.5 seconds after starting the erase mode.
- The yellow ABS indicator light (LED) remains on during the erase mode.
- Once erasing is finished, enter the self-diagnosis mode again to confirm that the service codes have been erased. If the ABS has been reset and all codes have been erased, only start code 12 will be shown.

**Anti-Lock Brake System (Equipped Models)**

## Erasing of Service Code

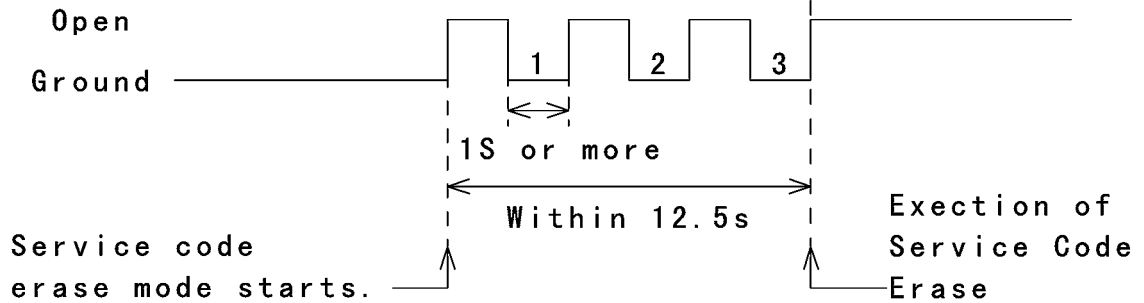
Yellow ABS Indicator Light(LED)ABS Self-diagnosis Terminal

GL14933BW2 C

# 12-46 BRAKES

## Anti-Lock Brake System (Equipped Models)


### Self-diagnosis Flow Chart

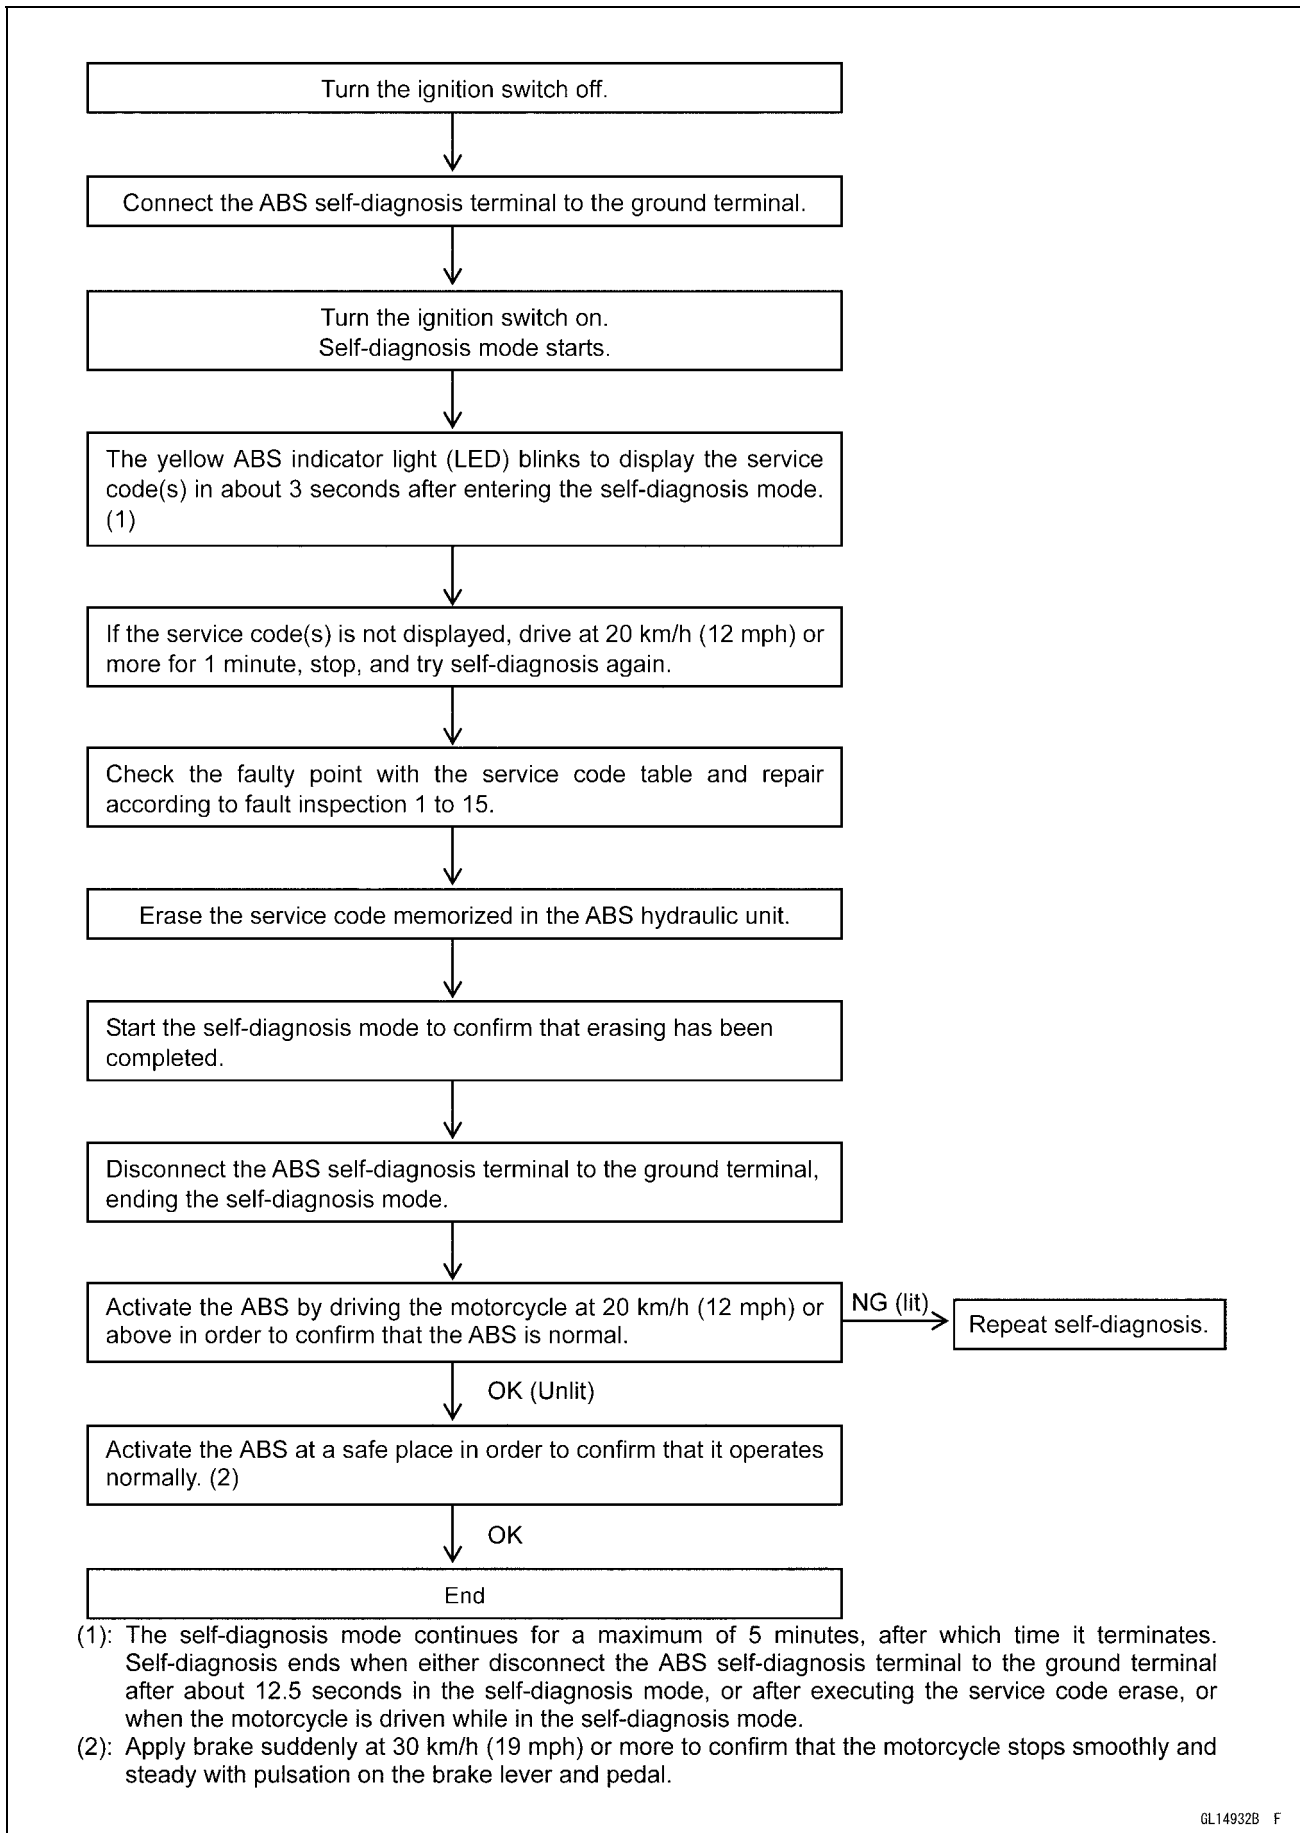


## Anti-Lock Brake System (Equipped Models)

### How to Read Service Codes

- Service codes are shown by a series of long and short blinks of the ABS indicator light (LED) as shown below.
- Read 10th digit and unit digit as the ABS indicator light (LED) blinks.
- When there are a number of faults, a maximum of 6 service codes can be stored and the display will begin starting from the last service code entered.
- For the display pattern, first, the start code 12 is shown, next up to 6 service codes then the display is repeated from the start code once again.

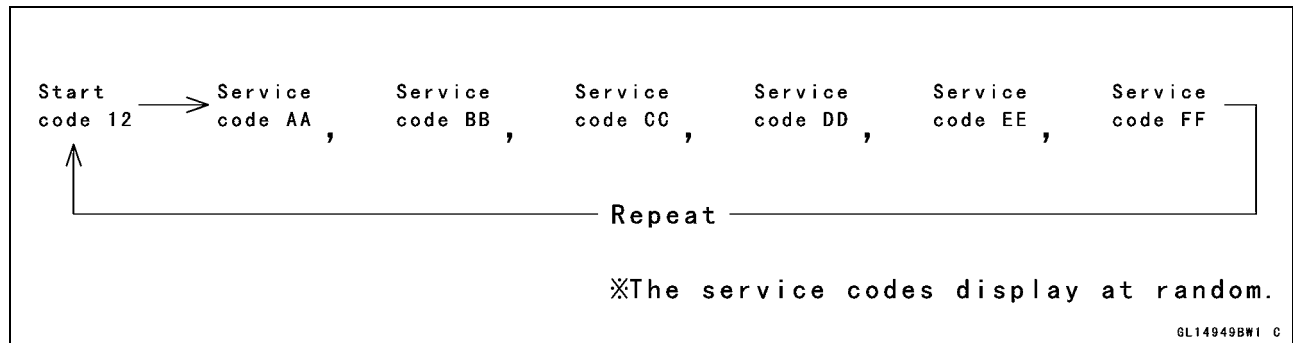

- If there is no fault, the yellow ABS indicator light (LED) blinks as shown.

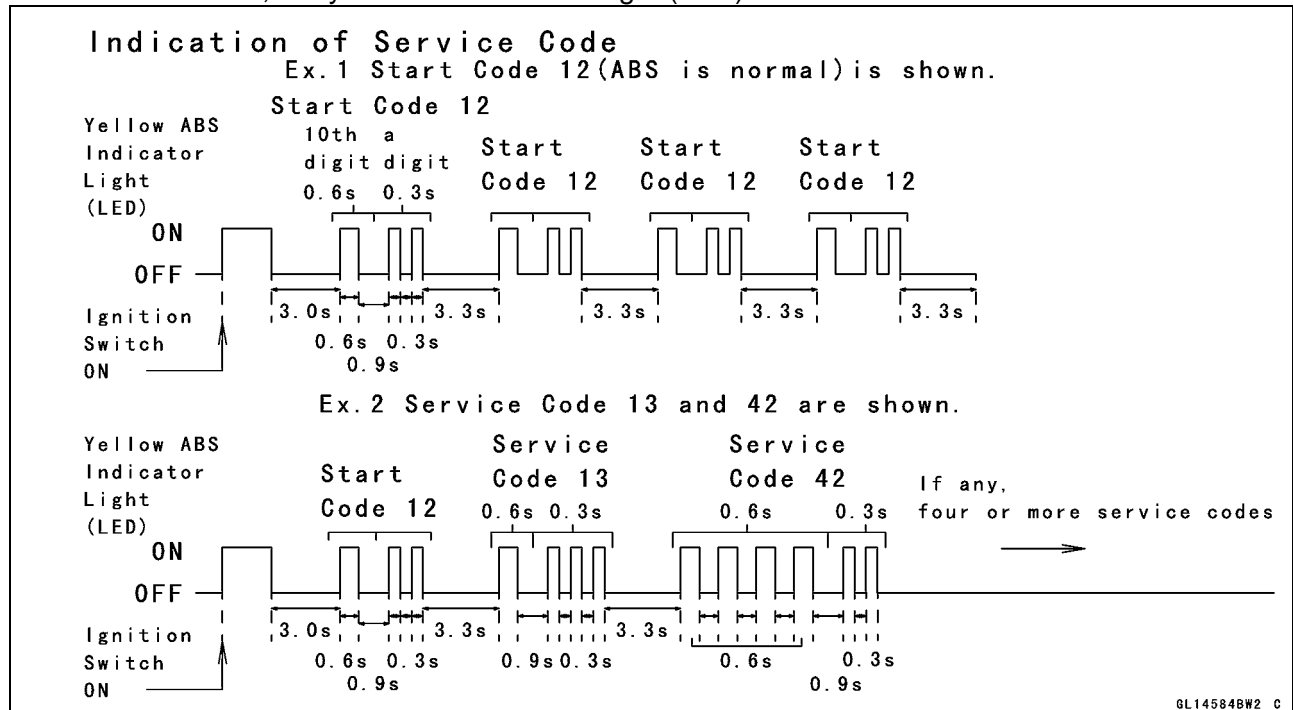

















### How to Erase Service Codes

- Even if the ignition switch is turned off, the battery or the ABS hydraulic unit are disconnected, all service codes remain in the ABS hydraulic unit.
- Refer to the Service Code Clearing Procedure for the service code erasure.

# 12-48 BRAKES

## Anti-Lock Brake System (Equipped Models)

### Service Code Table

Service Code	Yellow ABS Indicator Light (LED)	Problems	Light State
12		Start code (not fault)	After starts, turn off
13		Rear intake solenoid valve trouble (shorted or open, stuck valve)	ON
14		Rear outlet solenoid valve trouble (shorted or open, stuck valve)	ON
17		Front intake solenoid valve trouble (shorted or open, stuck valve)	ON
18		Front outlet solenoid valve trouble (shorted or open, stuck valve)	ON
19		ABS solenoid valve relay trouble (wiring shorted or open, stuck relay)	ON
25		Front, rear tire abnormal (substandard tire, deformation wheel, sensor rotor teeth number wrong)	ON
35		ABS motor relay trouble (wiring shorted, open or lock, stuck relay)	ON
42		Front wheel rotation sensor signal abnormal (sensor or rotor missing, too large clearance, rotor tooth worn or missing)	ON
43		Front wheel rotation sensor wiring abnormal (wiring shorted or open)	ON
44		Rear wheel rotation sensor signal abnormal (sensor or rotor missing, too large clearance, rotor tooth worn or missing)	ON
45		Rear wheel rotation sensor wiring abnormal (wiring shorted or open)	ON
52		Power supply voltage abnormal (low-voltage)	ON
53		Power supply voltage abnormal (over-voltage)	ON
54		ABS solenoid valve relay supply voltage abnormal (low voltage)	ON
55		ECU trouble (ECU operation abnormal)	ON



## Anti-Lock Brake System (Equipped Models)

### Yellow ABS Indicator Light (LED) Inspection

○ In this model, the yellow ABS indicator light (LED) [A] goes on or blinks by the control of the ABS hydraulic unit.

- Turn the ignition switch on.
- ★ If the yellow ABS indicator light (LED) comes on, it is normal.
- ★ If the yellow ABS indicator light (LED) does not come on, refer to the Meter Unit Inspection in the Electrical System chapter.




- ★ If the meter is good, check the wiring continuity of the BK/W lead in the main harness.

**Special Tool - Needle Adapter Set: 57001-1457**

### Wiring Continuity Inspection

**Meter Connector [A] ← → ABS Hydraulic Unit Connector [B]**

**Meter Terminal 8 [C] ← → ABS Hydraulic Unit Terminal 17 [D]**

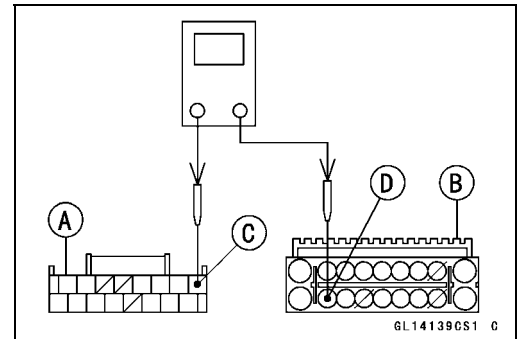

- ★ If there is not the continuity in the lead, replace or repair the main harness.
- ★ If there is the continuity in the lead, replace the ABS hydraulic unit.

### Solenoid Valve Inspection (Service Code 13, 14, 17, 18)

- Recheck the service code indication; erase the service code, perform the pre-diagnosis inspection 1 and 2, and retrieve the service code.
- ★ If the yellow ABS indicator light (LED) [A] comes on, the solenoid valve in the ABS hydraulic unit has trouble. Replace the ABS hydraulic unit.
- ★ If the yellow ABS indicator light (LED) does not come on, ABS system is normal (service code is not stored; temporary failure.).



### ABS Solenoid Valve Relay Inspection (Service Code 19)


- Remove:
  - Side Cover (see Side Cover Removal in the Frame chapter)
- Check the ABS solenoid valve relay fuse (15 A) [A] (see Fuse Inspection in the Electrical System chapter).



## 12-50 BRAKES

### Anti-Lock Brake System (Equipped Models)

- ★ If the fuse is good, check the wiring continuity between the positive (+) terminal [A] of the battery and R/BK lead terminal [B] in the ABS hydraulic unit lead connector [C].
- ★ If there is not the continuity in the lead, replace or repair the main harness.
- ★ If there is the continuity in the lead, go to next step.

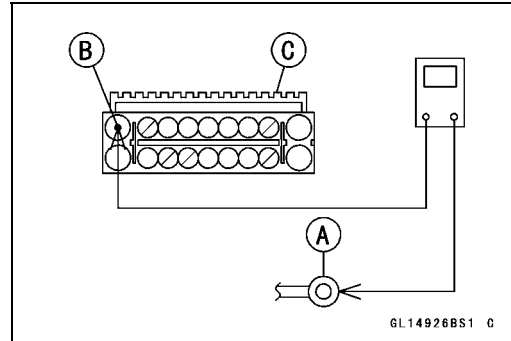

- Recheck the service code indication; erase the service code, perform the pre-diagnosis inspection 1 and 2, and retrieve the service code.
- ★ If the yellow ABS indicator light (LED) [A] comes on, the ABS hydraulic unit has trouble. Replace the ABS hydraulic unit.
- ★ If the yellow ABS indicator light (LED) does not come on, ABS system is normal (service code is not stored; temporary failure.).



#### Front, Rear Tire Abnormal (Service Code 25)

- Check the following and correct the faulty part.
  - Incorrect Tire Pressure
  - Tires not recommended for the motorcycle were installed (incorrect tire size).
  - Deformation of Wheel or Tire
  - Missing Teeth and Clogging with Foreign Matter of Sensor Rotor (see Wheel Rotation Sensor Inspection)
- ★ If the all parts correct, recheck the service code indication; erase the service code, perform the pre-diagnosis inspection 1 and 2, and retrieve the service code.
- ★ If the yellow ABS indicator light (LED) [A] comes on, the ABS hydraulic unit has trouble. Replace the ABS hydraulic unit.
- ★ If the yellow ABS indicator light (LED) does not come on, ABS system is normal (service code is not stored; temporary failure.).




#### ABS Motor Relay Inspection (Service Code 35)

- Remove:
  - Seat (see Seat Removal in the Frame chapter)
- Check the ABS motor relay fuse (25 A) [A] (see Fuse Inspection in the Electrical System chapter).



## Anti-Lock Brake System (Equipped Models)

- ★ If the fuse is good, check the wiring continuity between the positive (+) terminal [A] of the battery and R/W lead terminal [B] in the ABS hydraulic unit lead connector [C].
- ★ If there is not the continuity in the lead, replace or repair the main harness.
- ★ If there is the continuity in the lead, go to next step.

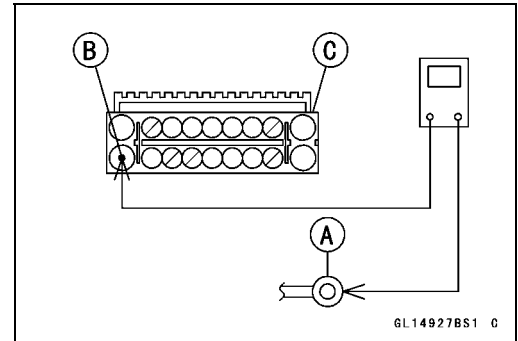


- Recheck the service code indication; erase the service code, perform the pre-diagnosis inspection 1 and 2, and retrieve the service code.
- ★ If the yellow ABS indicator light (LED) [A] comes on, the ABS hydraulic unit has trouble. Replace the ABS hydraulic unit.
- ★ If the yellow ABS indicator light (LED) does not come on, ABS system is normal (service code is not stored; temporary failure.).



### Front Wheel Rotation Sensor Signal Abnormal (Service Code 42)

- Measure the air gap between the front wheel rotation sensor and sensor rotor (see Wheel Rotation Sensor Air Gap Inspection).
- Check the front wheel rotation sensor (see Wheel Rotation Sensor Inspection).
- ★ If both inspections are good, go to next step.
- Check that there is iron or other magnetic deposits between the sensor [A] and sensor rotor [B], and the sensor rotor slots for obstructions.
- Check the installation condition of the sensor for looseness.
- Check the sensor rotor tip for deformation or damage (e.g., chipped sensor rotor teeth).
- ★ If the sensor rotor in bad condition, remove the any deposits. Install the proper part or replace faulty part.
- ★ If the all items are good, go to next step.
- Recheck the service code indication; erase the service code, perform the pre-diagnosis inspection 1 and 2, and retrieve the service code.
- ★ If the yellow ABS indicator light (LED) [A] comes on, the ABS hydraulic unit has trouble. Replace the ABS hydraulic unit.
- ★ If the yellow ABS indicator light (LED) does not come on, ABS system is normal (service code is not stored; temporary failure.).

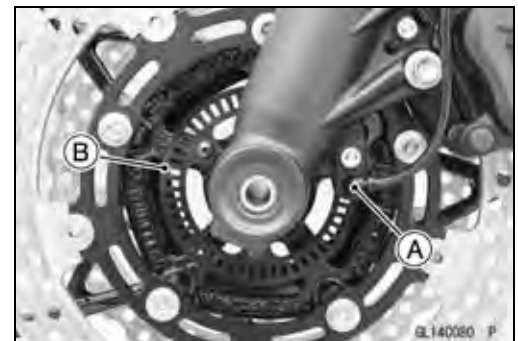

## 12-52 BRAKES

### Anti-Lock Brake System (Equipped Models)

#### Front Wheel Rotation Sensor Wiring Inspection (Service Code 43)

- Disconnect:
  - ABS Hydraulic Unit Connector (see ABS Hydraulic Unit Removal)
  - Front Wheel Rotation Sensor Connector (see Front Wheel Rotation Sensor Removal)
- Check the wiring continuity of the Y lead and W lead.


##### Wiring Continuity Inspection

ABS Hydraulic Unit Connector [A] ↔ Front Wheel Rotation Sensor Connector [B]

ABS Hydraulic Unit Terminal 3 [C] ↔ Sensor Terminal 1 [D]


ABS Hydraulic Unit Terminal 12 [E] ↔ Sensor Terminal 2 [F]

- ★ If there is not the continuity in the lead, replace or repair the main harness.
- ★ If the wiring is good, go to next step.
- Recheck the service code indication; erase the service code, perform the pre-diagnosis inspection 1 and 2, and retrieve the service code.
- ★ If the yellow ABS indicator light (LED) [A] comes on, replace the front wheel rotation sensor (see Front Wheel Rotation Sensor Removal).
- ★ Still, when it is not good, replace the ABS hydraulic unit.
- ★ If the yellow ABS indicator light (LED) does not come on, ABS system is normal (service code is not stored; temporary failure.).

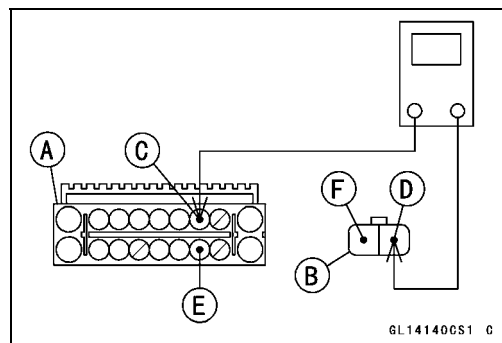

#### Rear Wheel Rotation Sensor Signal Abnormal (Service Code 44)

- Measure the air gap between the rear wheel rotation sensor and sensor rotor (see Wheel Rotation Sensor Air Gap Inspection).
- Check the rear wheel rotation sensor (see Rear Wheel Rotation Sensor Inspection).
- ★ If both inspections are good, go to next step.
- Check that there is iron or other magnetic deposits between the sensor [A] and sensor rotor [B], and the sensor rotor slots for obstructions.
- Check the installation condition of the sensor for looseness.
- Check the sensor rotor tip for deformation or damage (e.g., chipped sensor rotor teeth).
- ★ If the sensor rotor in bad condition, remove the any deposits. Install the proper part or replace faulty part.
- ★ If the all items are good, go to next step.

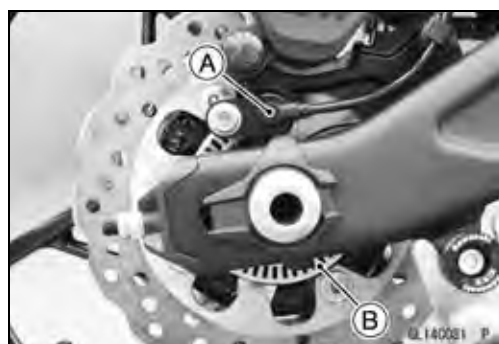

## Anti-Lock Brake System (Equipped Models)

- Recheck the service code indication; erase the service code, perform the pre-diagnosis inspection 1 and 2, and retrieve the service code.
- ★ If the yellow ABS indicator light (LED) [A] comes on, the ABS hydraulic unit has trouble. Replace the ABS hydraulic unit.
- ★ If the yellow ABS indicator light (LED) does not come on, ABS system is normal (service code is not stored; temporary failure.).



### Rear Wheel Rotation Sensor Wiring Inspection (Service Code 45)

- Disconnect:
  - ABS Hydraulic Unit Connector (see ABS Hydraulic Unit Removal)
  - Rear Wheel Rotation Sensor Connector (see Rear Wheel Rotation Sensor Removal)


- Check the wiring continuity of the G lead and R lead.

#### Wiring Continuity Inspection

ABS Hydraulic Unit Connector [A]	↔	Rear Wheel Rotation Sensor Connector [B]
ABS Hydraulic Unit Terminal 14 [C]	↔	Sensor Terminal 1 [D]
ABS Hydraulic Unit Terminal 13 [E]	↔	Sensor Terminal 2 [F]

- ★ If there is not the continuity in the lead, replace or repair the main harness.
- ★ If the wiring is good, go to next step.

- Recheck the service code indication; erase the service code, perform the pre-diagnosis inspection 1 and 2, and retrieve the service code.
- ★ If the yellow ABS indicator light (LED) [A] comes on, replace the rear wheel rotation sensor (see Rear Wheel Rotation Sensor Removal).
- ★ Still, when it is not good, replace the ABS hydraulic unit.
- ★ If the yellow ABS indicator light (LED) does not come on, ABS system is normal (service code is not stored; temporary failure.).

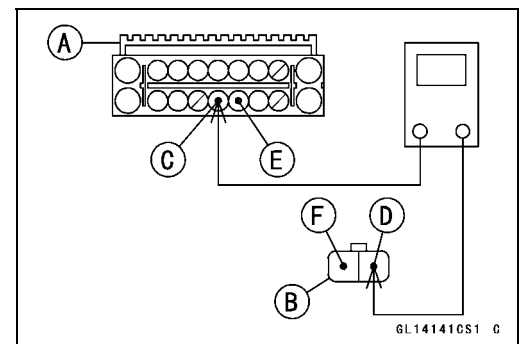

### Power Supply Voltage Abnormal [Low-Voltage] (Service Code 52)

- Check the battery condition (see Charging Condition Inspection in the Electrical System chapter).
- ★ If the battery is good condition, go to next step.

## 12-54 BRAKES

### Anti-Lock Brake System (Equipped Models)

- Recheck the service code indication; erase the service code, perform the pre-diagnosis inspection 1 and 2, and retrieve the service code.
- ★ If the yellow ABS indicator light (LED) [A] comes on, the ABS hydraulic unit has trouble. Replace the ABS hydraulic unit.
- ★ If the yellow ABS indicator light (LED) does not come on, ABS system is normal (service code is not stored; temporary failure.).



#### **Power Supply Voltage Abnormal [Over-Voltage] (Service Code 53)**

- Check the charging voltage (see Charging Voltage Inspection in the Electrical System chapter).
- ★ If the charging voltage is good, go to next step.
- Recheck the service code indication; erase the service code, perform the pre-diagnosis inspection 1 and 2, and retrieve the service code.
- ★ If the yellow ABS indicator light (LED) [A] comes on, the ABS hydraulic unit has trouble. Replace the ABS hydraulic unit.
- ★ If the yellow ABS indicator light (LED) does not come on, ABS system is normal (service code is not stored; temporary failure.).



#### **ABS Solenoid Valve Relay Supply Voltage Inspection [Low-Voltage] (Service Code 54)**

- Check the charging voltage (see Charging Voltage Inspection in the Electrical System chapter).
- ★ If the charging voltage is good, go to next step.
- Recheck the service code indication; erase the service code, perform the pre-diagnosis inspection 1 and 2, and retrieve the service code.
- ★ If the yellow ABS indicator light (LED) [A] comes on, the ABS hydraulic unit has trouble. Replace the ABS hydraulic unit.
- ★ If the yellow ABS indicator light (LED) does not come on, ABS system is normal (service code is not stored; temporary failure.).



#### **ECU Inspection (Service Code 55)**

- Recheck the service code indication; erase the service code, perform the pre-diagnosis inspection 1 and 2, and retrieve the service code.
- ★ If the yellow ABS indicator light (LED) [A] comes on, the ABS hydraulic unit has trouble. Replace the ABS hydraulic unit.
- ★ If the yellow ABS indicator light (LED) does not come on, ABS system is normal (service code is not stored; temporary failure.).



## Anti-Lock Brake System (Equipped Models)

### ABS Hydraulic Unit Removal

#### NOTICE

The ABS hydraulic unit [A] has been adjusted and set with precision at the factory. Therefore, it should be handled carefully, never struck sharply, as with a hammer, or allowed to fall on a hard surface.

Be careful not to get water or mud on the ABS hydraulic unit.




- Drain the brake fluid from the front and rear brake lines.
- Drain the brake fluid through the bleed valve by pumping the brake lever and pedal.
- Remove:
  - Air Cleaner Housing (see Air Cleaner Housing Removal in the Fuel System (DFI) chapter)
  - Left Inner Cover (see Inner Cover Removal in the Frame chapter)
- Clean the ABS hydraulic unit thoroughly.

#### NOTICE

Clean all fittings on the ABS hydraulic unit and the rear master cylinder because dirt around the banjo bolts could contaminate the brake fluid in the line during removal/installation.

Spread over a shop towel around the ABS hydraulic unit before removing the brake line so that brake fluid does not leak on the parts.

- Pull the main harness [A] to rearward and release the clamp [B] from the bracket.
- Remove:
  - Vehicle-down Sensor [C]
  - Turn Signal Relay [D]
  - Intake Air Pressure Sensor [E]
  - Fuse [F]
  - Bolts [G]
  - Bracket [H]
- Remove:
  - Bolt [A]
  - Bracket [B]

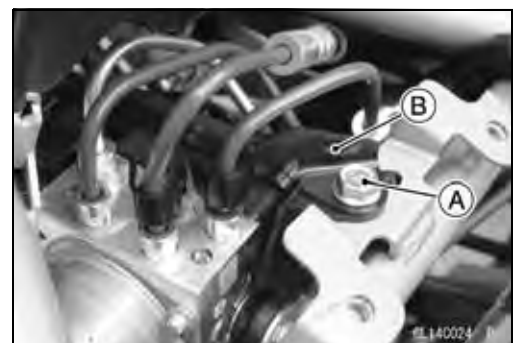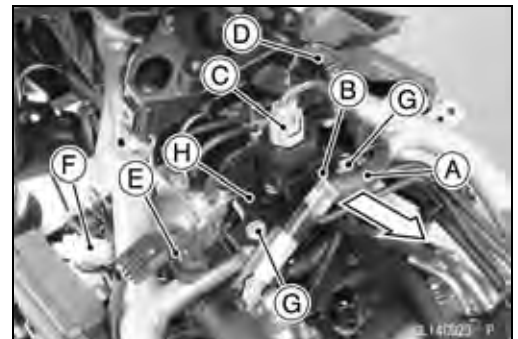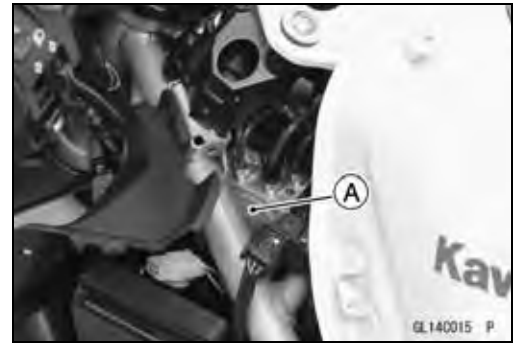


## 12-56 BRAKES

### Anti-Lock Brake System (Equipped Models)

- Temporarily install the bolt [A].
- Using the flare nut wrench, loosen the brake pipe joint nuts [1 ~ 4] fully and disconnect the brake pipes [B] in sequence numbers.

#### **NOTICE**

**Brake fluid quickly damages painted plastic surface; any spilled fluid should be completely washed away immediately.**

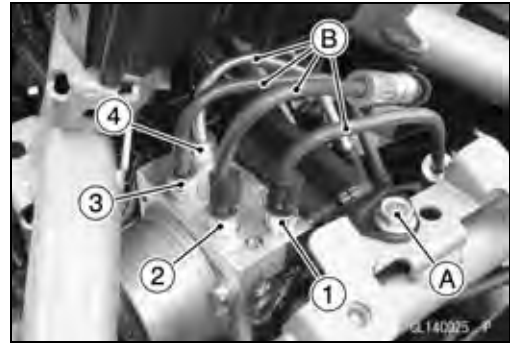


- Make sure that the ignition switch has been turned off.


#### **NOTICE**

**To protect the ABS hydraulic unit from the electrical surge, always disconnect the ABS hydraulic unit connector while the ignition switch is turned off.**

- Push the lock tab [A] and turn the connector lever [B] forward to disconnect the ABS hydraulic unit connector [C].

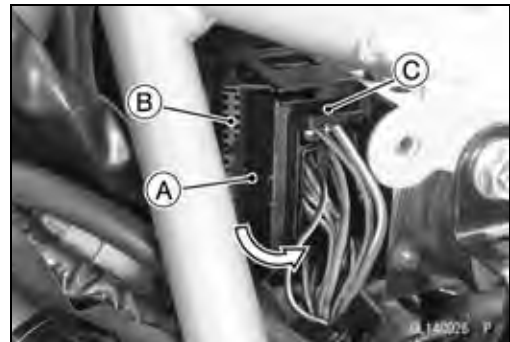


- Disconnect the front wheel rotation sensor lead connector [A].
- Remove the front wheel rotation sensor connector from the bracket [B].

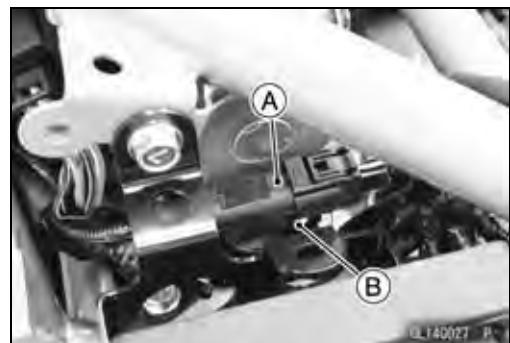



## Anti-Lock Brake System (Equipped Models)

- Remove:
  - ABS Hydraulic Unit Mounting Bolts [A]
  - ABS Hydraulic Unit [B] with Bracket

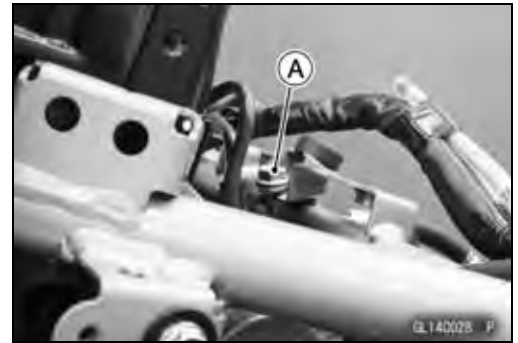

- Plug the ports on the ABS hydraulic unit to prevent entering a foreign matter into the unit.
- Wrap the brake pipe openings with a vinyl bag to prevent brake fluid leakage and entering a foreign matter into the hydraulic system.


### NOTICE

Do not allow entering a foreign matter into the hydraulic system while disconnecting the hydraulic lines.

- Remove:
  - Bolts [A]
  - Washers [B]
  - Bracket [C]
  - ABS Hydraulic Unit [D]

### NOTICE

The ABS hydraulic unit has been adjusted and set with precision at the factory. Do not try to disassemble and repair the ABS hydraulic unit.

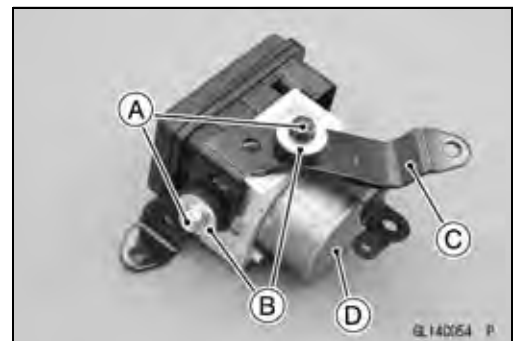

### ABS Hydraulic Unit Installation

### NOTICE


Brake fluid quickly damages painted plastic surfaces; any spilled fluid should be completely washed away immediately.

- Installation is the reverse of removal.


## 12-58 BRAKES

### Anti-Lock Brake System (Equipped Models)


- Check that the damper [A] is in place on the ABS hydraulic unit [B].

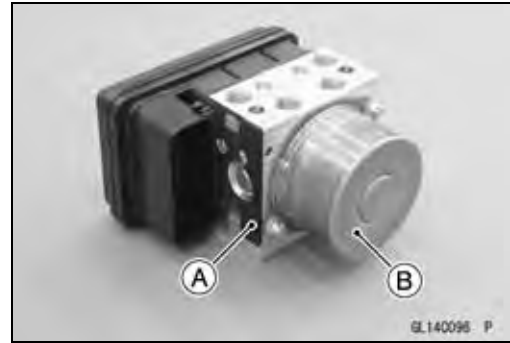

- Be sure to install the dampers [A] and flanged collars [B] on the bracket [C].

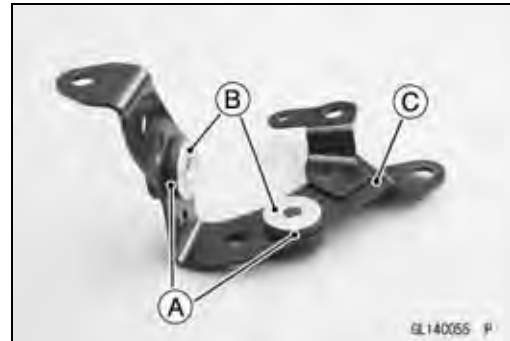


- Push the lever [A] forward until locked by the lock tab [B] to connect the ABS hydraulic unit connector [C].

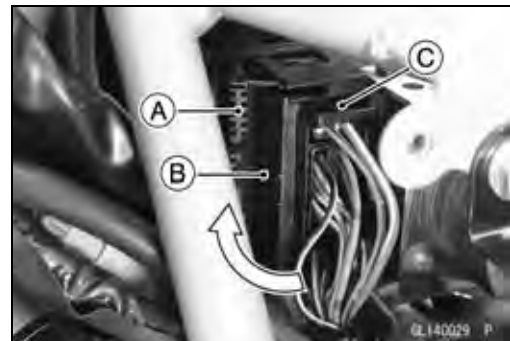

- Connect the brake pipes to the ABS hydraulic unit [A] and tighten the brake pipe joint nuts with the following order.
  - To Rear Caliper [1]
  - To Rear Master Cylinder [2]
  - To Front Master Cylinder [3]
  - To Front Calipers [4]

**Torque - Brake Pipe Joint Nuts: 18 N·m (1.8 kgf·m, 13 ft·lb)**

- Run the brake pipes and harness correctly (see Cable, Wire, and Hose Routing section in the Appendix chapter).
- Bleed the brake line (see Brake Line Bleeding).
- Check the brake for good braking power, no brake drag, and no fluid leakage.

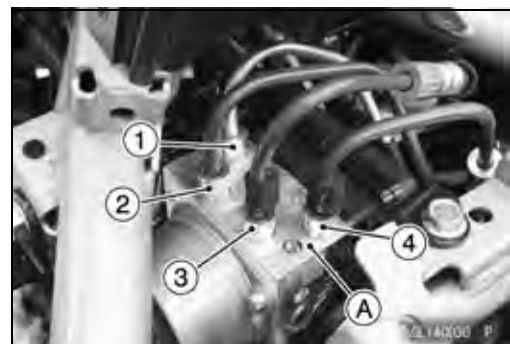


#### **ABS Hydraulic Unit Inspection**

- Remove the ABS hydraulic unit (see ABS Hydraulic Unit Removal).
- Visually inspect the ABS hydraulic unit.
- ★ Replace the ABS hydraulic unit if any of them are cracked, or otherwise damaged.

## Anti-Lock Brake System (Equipped Models)

- Visually inspect the connector terminals [A].
- ★ Replace the ABS hydraulic unit or main harness if either of the terminals are cracked, bent, or otherwise damaged.
- ★ If the ABS hydraulic unit connector is clogged with mud or dust, blow it off with compressed air.

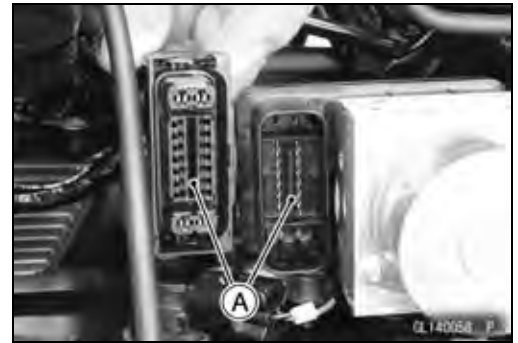


### Front Wheel Rotation Sensor Removal

#### NOTICE

The wheel rotation sensor should be handled carefully, never struck sharply, as with a hammer, or allowed to fall on a hard surface since the wheel rotation sensor is precision made. Be careful not to get water or mud on the wheel rotation sensor. Do not try to disassemble or repair the wheel rotation sensor.


- Remove:
  - Fuel Tank Side Cover (see Fuel Tank Side Cover Removal in the Frame chapter)
  - Front Wheel Rotation Sensor Bolt [A]
  - Front Wheel Rotation Sensor [B]
- Clear the sensor lead from the clamp [C].
  
- Clear the sensor lead from the clamps [A].

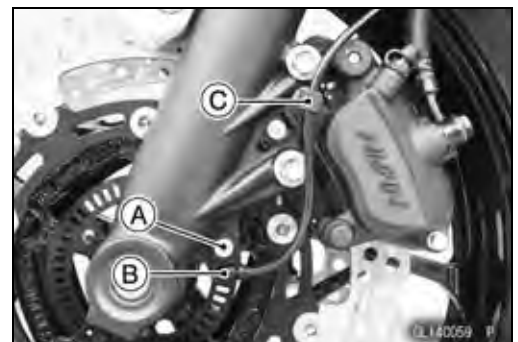


## 12-60 BRAKES

### Anti-Lock Brake System (Equipped Models)

- Clear the fuse [A] from the bracket [B].

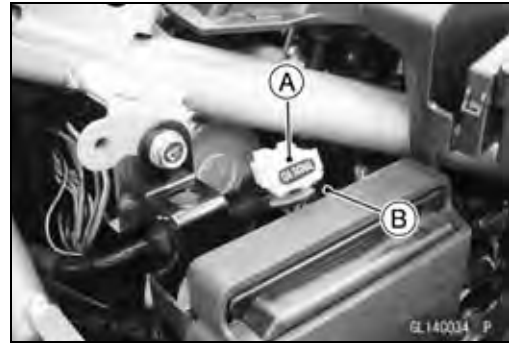

- Disconnect the front wheel rotation sensor lead connector [A].
- Remove the front wheel rotation sensor connector from the bracket [B].

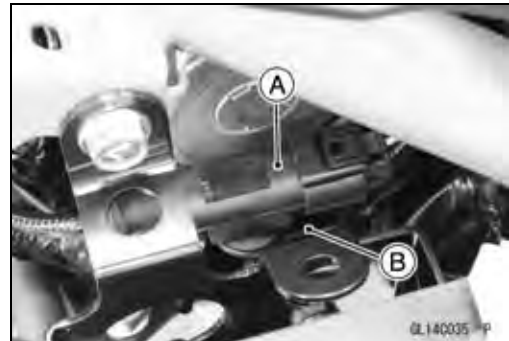

#### **Front Wheel Rotation Sensor Installation**

- Installation is the reverse of removal.
- Run the lead correctly (see Cable, Wire, and Hose Routing section in the Appendix chapter).
- Apply a non-permanent locking agent to the threads of the front wheel rotation sensor bolts, and tighten it.
- Tighten:

**Torque - Front Wheel Rotation Sensor Bolt: 8.0 N-m (0.82 kgf-m, 71 in-lb)**


○When installing the sensor which is fastened by bolt, tighten the bolt after placing the sensor on the bottom surface completely.

#### **Rear Wheel Rotation Sensor Removal**

##### **NOTICE**


**The wheel rotation sensor should be handled carefully, never struck sharply, as with a hammer, or allowed to fall on a hard surface since the wheel rotation sensor is precision made. Be careful not to get water or mud on the wheel rotation sensor. Do not try to disassemble or repair the wheel rotation sensor.**

- Remove:
  - Right Fuel Tank Side Cover (see Fuel Tank Side Cover Removal in the Frame chapter)
  - Right Frame Cover (see Frame Cover Removal in the Frame chapter)
  - Mud Guard (see Mud Guard Removal in the Frame chapter)
  - Rear Wheel Rotation Sensor Bolt [A]
  - Rear Wheel Rotation Sensor [B]
- Clear the sensor lead [C] from the clamps [D].

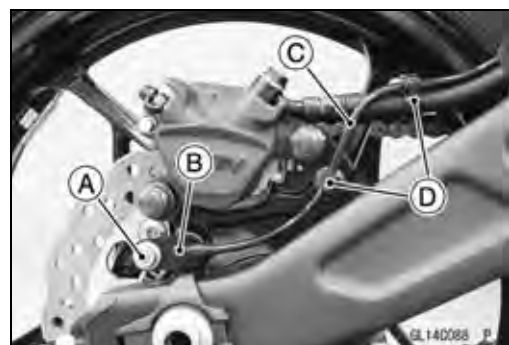

## Anti-Lock Brake System (Equipped Models)

- Clear the sensor lead [A] from the clamps [B].

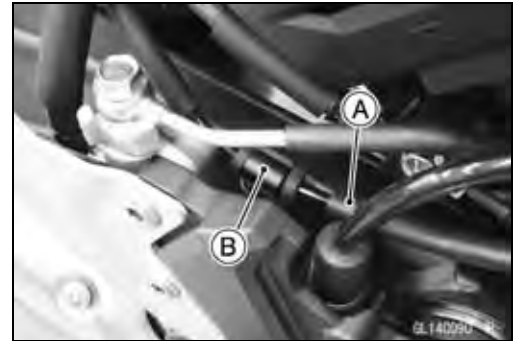

- Disconnect the rear wheel rotation sensor lead connector [A].
- Remove the rear wheel rotation sensor lead connector from the bracket [B] on the frame.



### ***Rear Wheel Rotation Sensor Installation***

- Installation is the reverse of removal.
- Run the lead correctly (see Cable, Wire, and Hose Routing section in the Appendix chapter).
- Tighten:

**Torque - Rear Wheel Rotation Sensor Bolt: 22 N·m (2.2 kgf·m, 16 ft·lb)**

- When installing the sensor which is fastened by bolt, tighten the bolt after placing the sensor on the bottom surface completely.

## 12-62 BRAKES

### Anti-Lock Brake System (Equipped Models)

#### Wheel Rotation Sensor Inspection

- Remove the front wheel rotation sensor [A] from the front fork.
- Remove the rear wheel rotation sensor [B] from the caliper bracket.
- Visually inspect the wheel rotation sensors.
- ★ Replace the wheel rotation sensor if it is cracked, bent, or otherwise damaged.



#### Wheel Rotation Sensor Air Gap Inspection

- Raise the front/rear wheel off the ground (see Front/Rear Wheel Removal in the Wheels/Tires chapter).
- Measure the air gap between the sensor and sensor rotor at several points by turning the wheel slowly.  
Thickness Gauge [A]

#### Air Gap

##### Standard:

Front	0.4 ~ 1.6 mm (0.02 ~ 0.06 in.)
Rear	0.4 ~ 1.6 mm (0.02 ~ 0.06 in.)

#### NOTE

○ The sensor air gap cannot be adjusted.



- ★ If the air gap is not within the specification, inspect the hub bearing (see Hub Bearing Inspection in the Wheels/Tires chapter), sensor installation condition and sensor (see Wheel Rotation Sensor Inspection).



## Anti-Lock Brake System (Equipped Models)

### Wheel Rotation Sensor Rotor Inspection

- Visually inspect the wheel rotation sensor rotor.
- ★ If the rotor is deformed or damaged (chipped teeth [A]), replace the sensor rotor with a new one.
- ★ If there is iron or other magnetic deposits [B], remove the deposits.

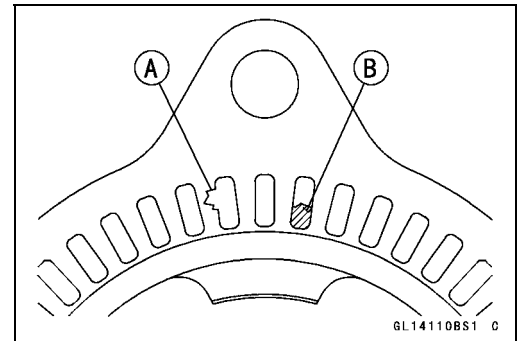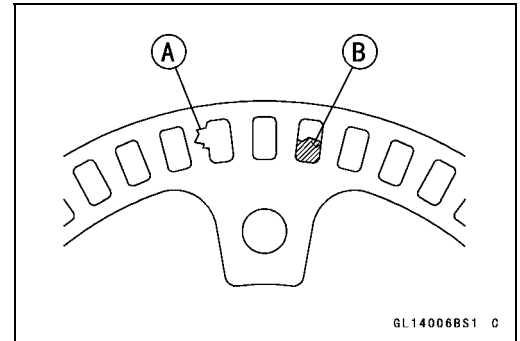

### ABS Solenoid Valve Relay Fuse (15 A) Removal

- Refer to the Fuse Box Fuse Removal in the Electrical System chapter.

### ABS Motor Relay Fuse (25 A) Removal

- Refer to the Fuse Box Fuse Removal in the Electrical System chapter.

### Fuse Installation

- If a fuse fails during operation, inspect the electrical system to determine the cause, and then replace it with a new fuse of proper amperage (see Fuse Installation in the Electrical System chapter).

### Fuse Inspection

- Remove the fuses (see ABS Solenoid Valve Relay Fuse (15 A)/ABS Motor Relay Fuse (25 A) Removal).
- Refer to the Fuse Inspection in the Electrical System chapter.






# Suspension

## Table of Contents

Exploded View.....	13-2
Specifications .....	13-6
Special Tools .....	13-7
Front Fork.....	13-9
Front Fork Removal (Each Fork Leg) .....	13-9
Front Fork Installation (Each Fork Leg) .....	13-9
Front Fork Oil Change .....	13-9
Front Fork Disassembly .....	13-11
Front Fork Assembly.....	13-12
Inner Tube, Outer Tube Inspection .....	13-14
Dust Seal Inspection.....	13-14
Spring Tension Inspection.....	13-14
Rear Shock Absorber .....	13-15
Spring Preload Adjustment .....	13-15
Rear Shock Absorber Removal .....	13-15
Rear Shock Absorber Installation .....	13-16
Rear Shock Absorber Inspection .....	13-16
Rear Shock Absorber Scrapping .....	13-17
Rear Shock Absorber Bearing Removal.....	13-17
Rear Shock Absorber Bearing Installation .....	13-17
Swingarm.....	13-18
Swingarm Removal.....	13-18
Swingarm Installation.....	13-19
Swingarm Bearing Removal .....	13-20
Swingarm Bearing Installation .....	13-21
Swingarm Bearing, Sleeve Inspection .....	13-22
Swingarm Bearing Lubrication .....	13-22
Chain Guide Inspection.....	13-22
Tie-Rod, Rocker Arm.....	13-23
Tie-Rod Removal .....	13-23
Tie-Rod Installation .....	13-24
Rocker Arm Removal.....	13-24
Rocker Arm Installation.....	13-25
Tie-Rod and Rocker Arm Bearing Removal.....	13-25
Tie-Rod and Rocker Arm Bearing Installation.....	13-26
Rocker Arm/Tie-Rod Bearing, Sleeve Inspection .....	13-27
Rocker Arm/Tie-Rod Bearing Lubrication .....	13-27

# 13-2 SUSPENSION

## Exploded View

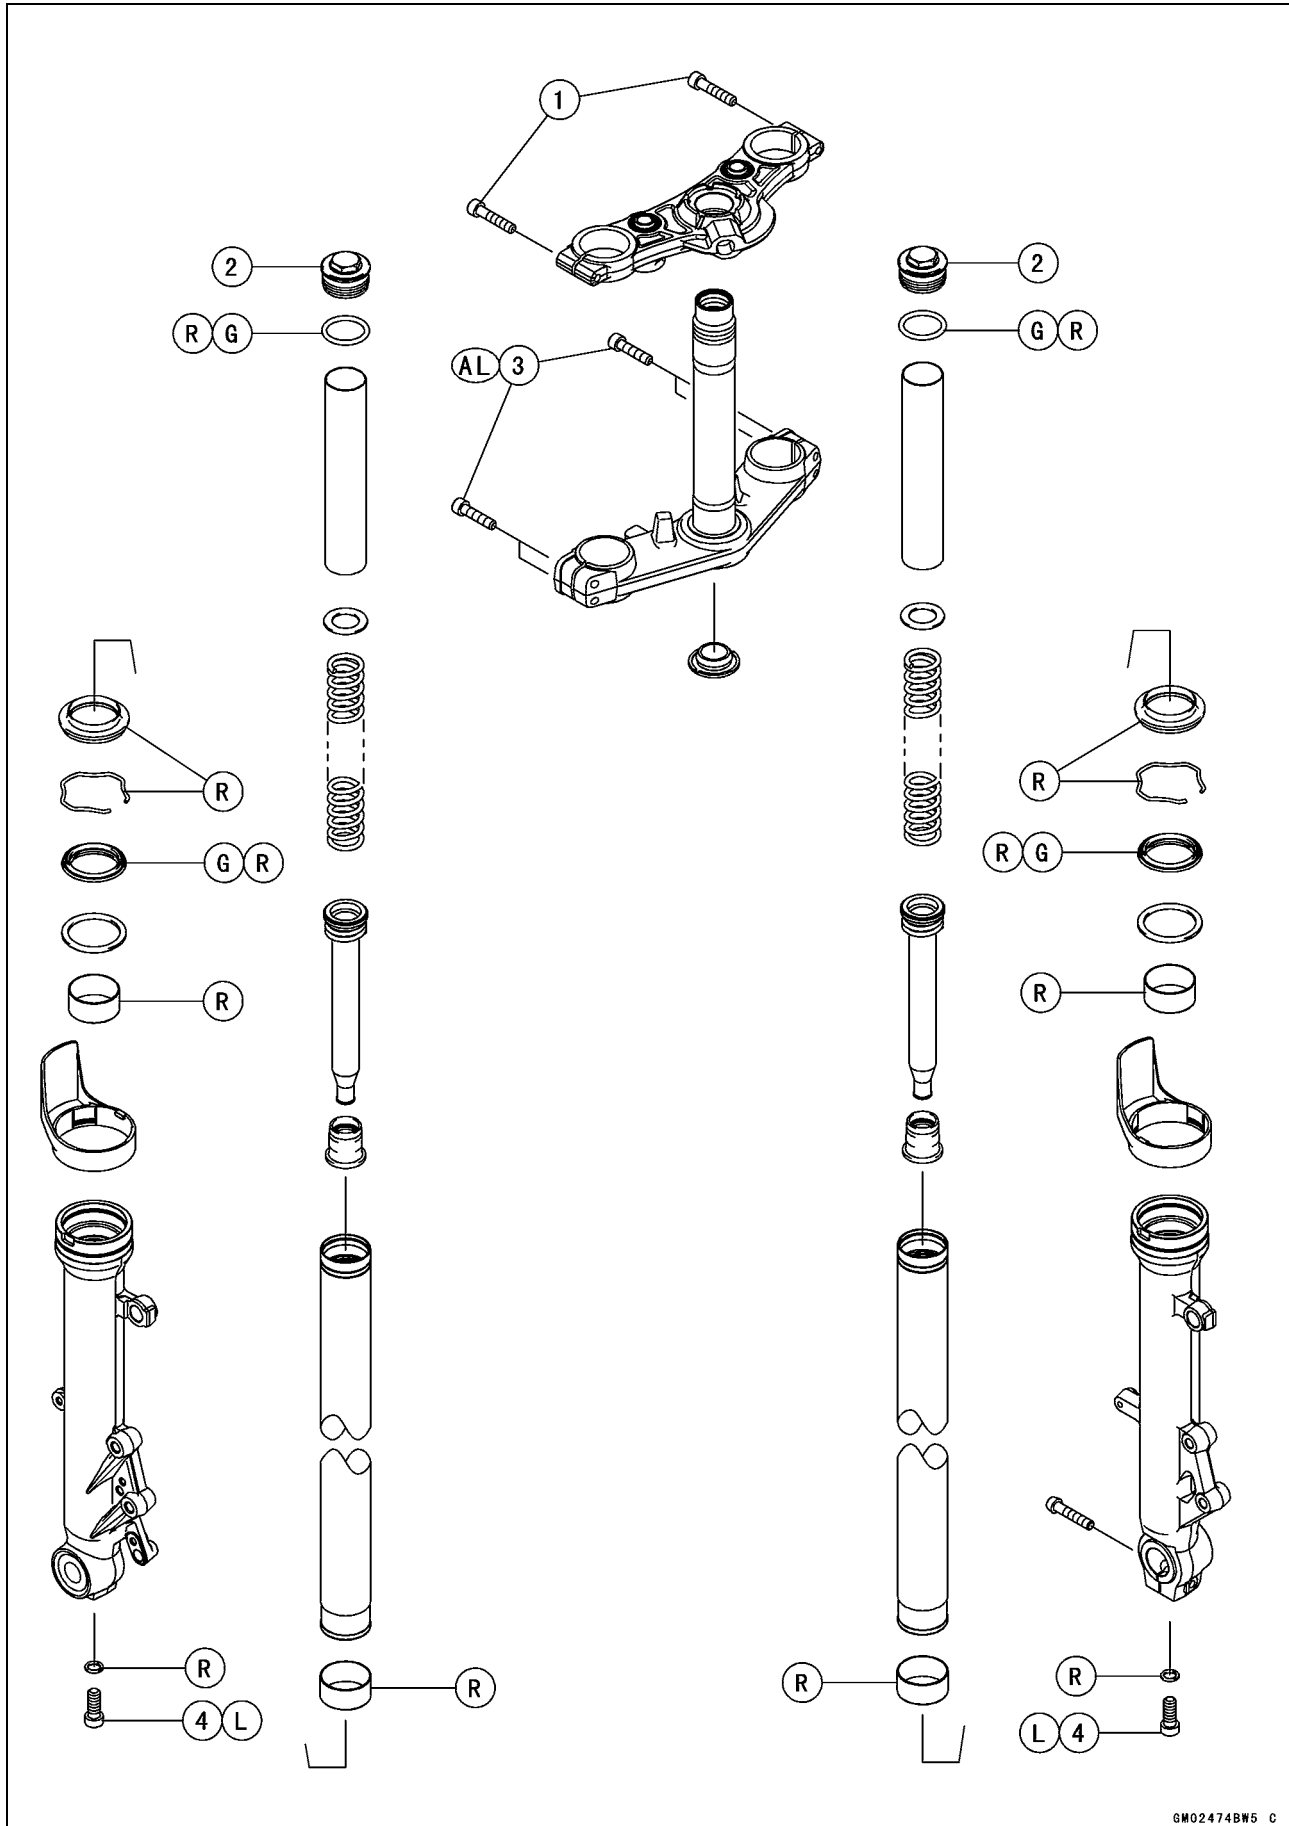

**Exploded View**

<b>No.</b>	<b>Fastener</b>	<b>Torque</b>			<b>Remarks</b>
		<b>N·m</b>	<b>kgf·m</b>	<b>ft·lb</b>	
1	Upper Front Fork Clamp Bolts	20	2.0	15	
2	Front Fork Top Plugs	22	2.2	16	
3	Lower Front Fork Clamp Bolts	20	2.0	15	AL
4	Front Fork Bottom Allen Bolts	30	3.1	22	L

AL: Tighten the two clamp bolts alternately two times to ensure even tightening torque.


G: Apply grease.

L: Apply a non-permanent locking agent.

R: Replacement Parts

# 13-4 SUSPENSION

## Exploded View

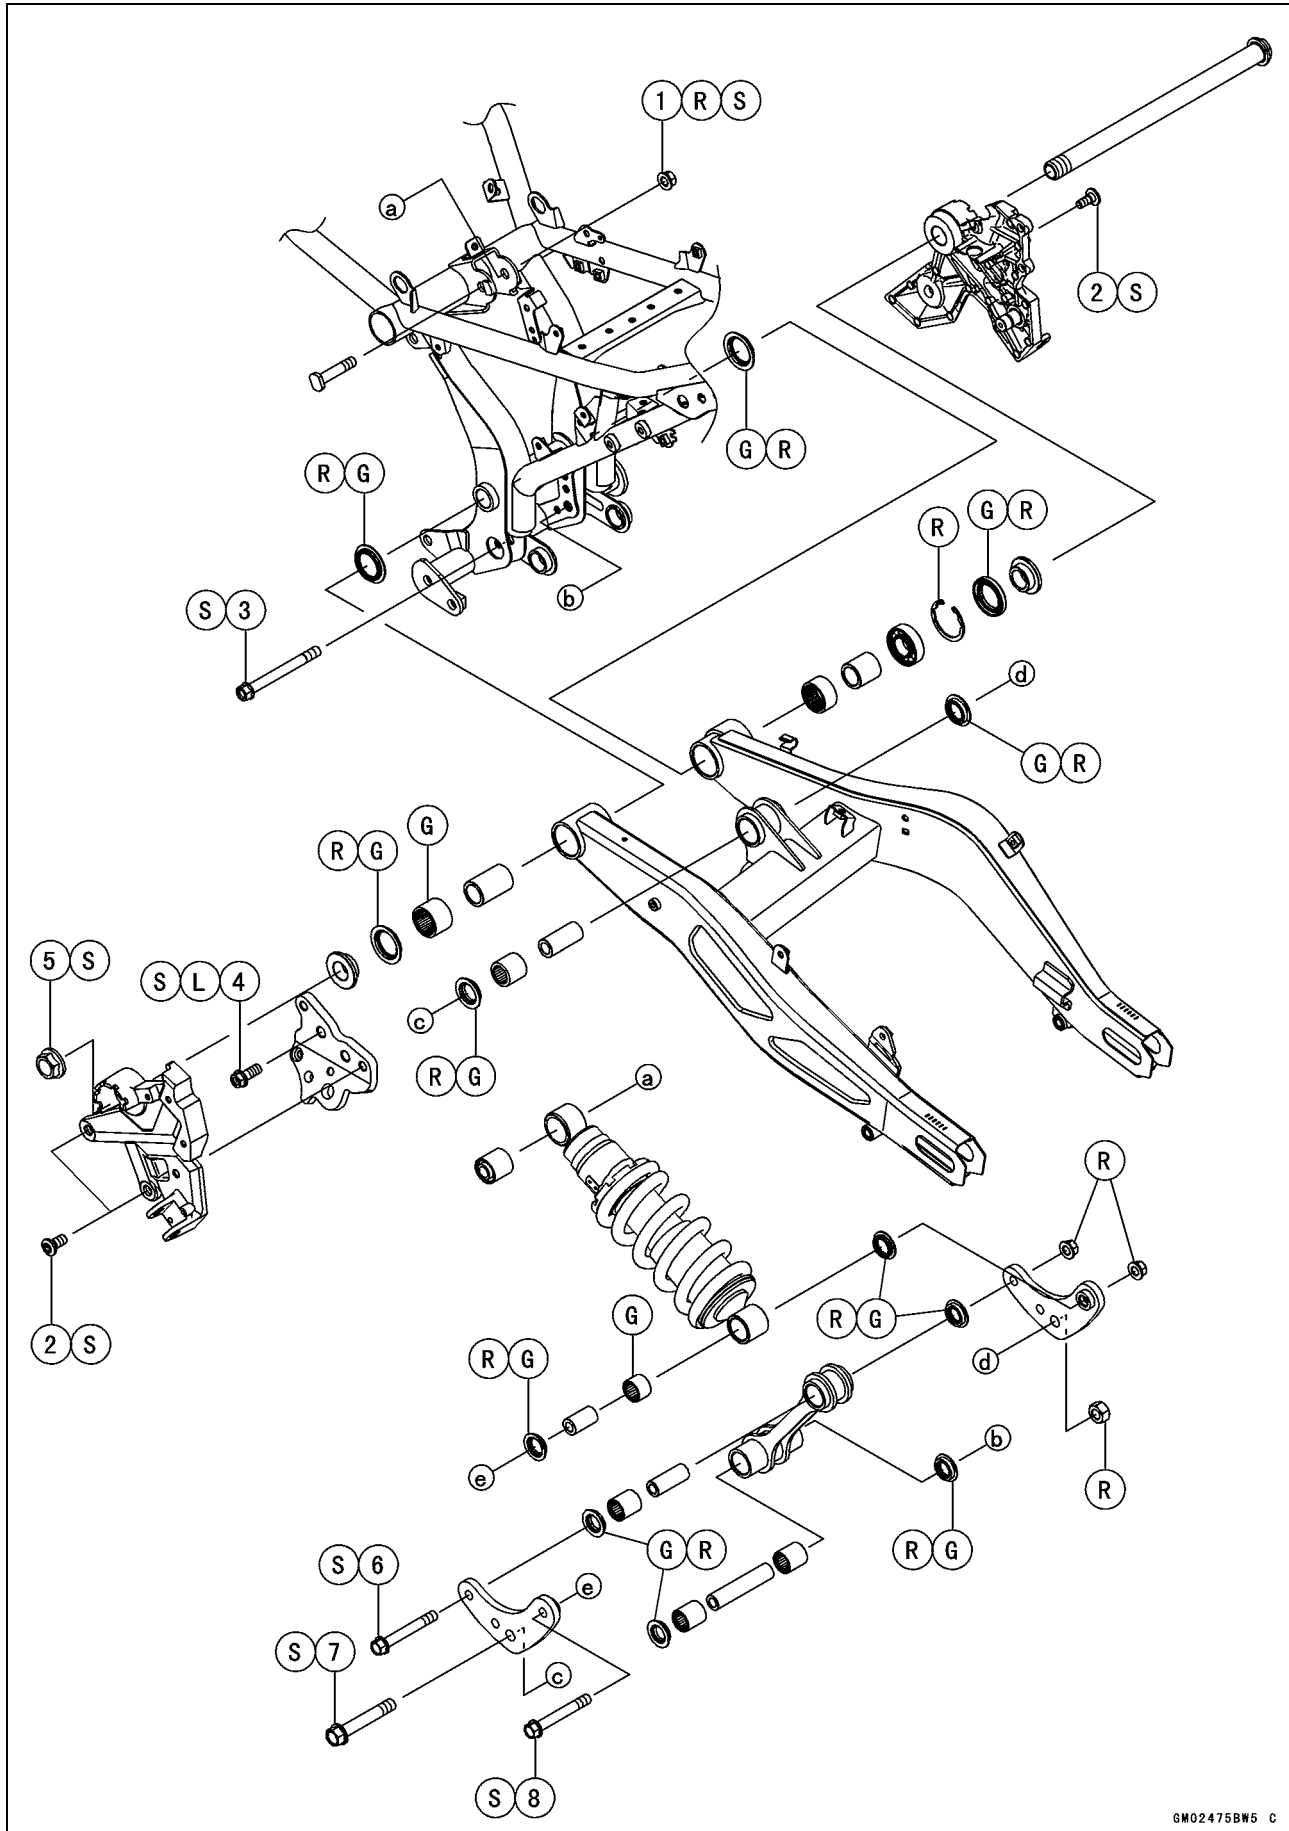

**Exploded View**

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Upper Rear Shock Absorber Nut	34	3.5	25	R, S
2	Swingarm Bracket Bolts	25	2.5	18	S
3	Tie-Rod Bolt (Lower)	44	4.5	32	S
4	Side Stand Bracket Bolts	49	5.0	36	L, S
5	Swingarm Pivot Shaft Nut	108	11.0	79.7	S
6	Tie-Rod Bolt (Upper)	44	4.5	32	S
7	Rocker Arm Bolt	59	6.0	44	S
8	Lower Rear Shock Absorber Bolt	34	3.5	25	S

G: Apply grease.

L: Apply a non-permanent locking agent.

R: Replacement Parts

S: Follow the specified tightening sequence.

## 13-6 SUSPENSION


### Specifications

Item	Standard
<b>Front Fork (Per One Unit)</b> Fork Inner Tube Diameter Air Pressure Suspension Oil Amount: After Disassembly and Completely Dry When Changing Oil Fork Oil Level Fork Spring Free Length	$\phi 41$ mm (1.6 in.) Atmospheric pressure (non-adjustable) Kawasaki KHL34-G10 or equivalent 479 $\pm$ 4 mL (16.2 $\pm$ 0.135 US oz.) Approx. 410 mL (13.9 US oz.) 101 $\pm$ 2 mm (4.0 $\pm$ 0.08 in.) (Fully Compressed, without Spring, below from the Top of the Inner Tube) 327.8 mm (12.91 in.) (Service Limit: 322 mm (12.7 in.))
<b>Rear Shock Absorber (Uni-Trak)</b> Rear Shock Absorber Spring Preload Gas Pressure	3rd position (Adjustable Range: 1st $\longleftrightarrow$ 7th position) 1 500 kPa (15.30 kgf/cm <sup>2</sup> , 217.5 psi, non-adjustable)

Special Tools

Inside Circlip Pliers:


57001-143

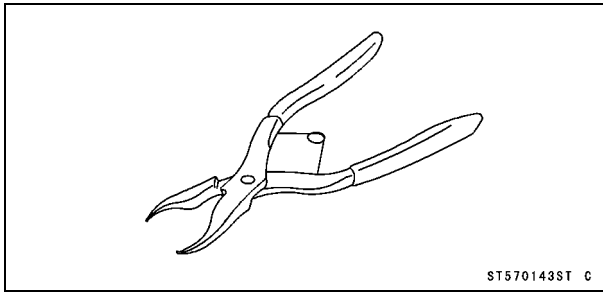

ST570143ST C

Jack:


57001-1238

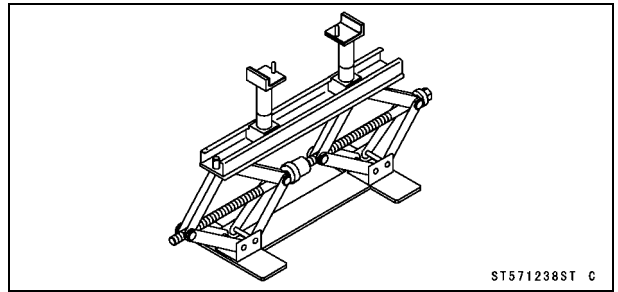

ST571238ST C

Fork Cylinder Holder Handle:


57001-183

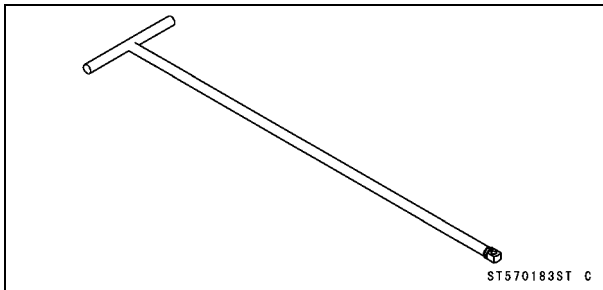

ST570183ST C

Fork Oil Seal Driver,  $\phi 41$ :


57001-1288

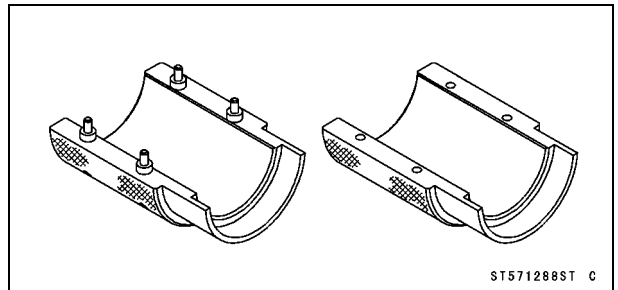

ST571288ST C

Fork Cylinder Holder Adapter:


57001-1057

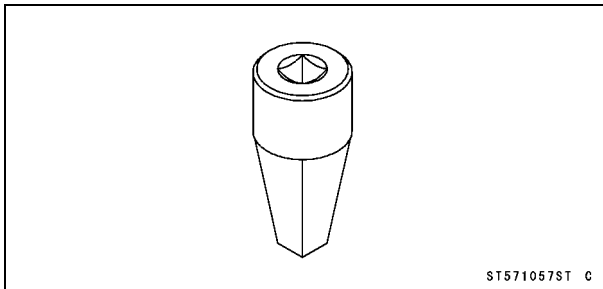

ST571057ST C

Fork Oil Level Gauge:


57001-1290

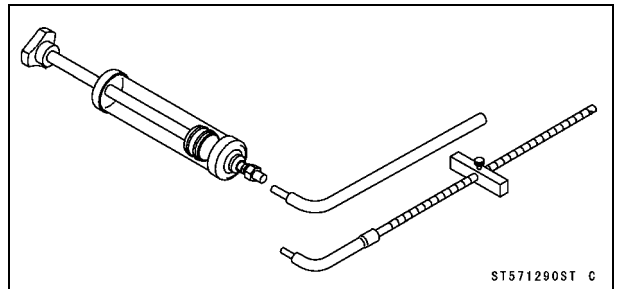

ST571290ST C

Oil Seal & Bearing Remover:


57001-1058

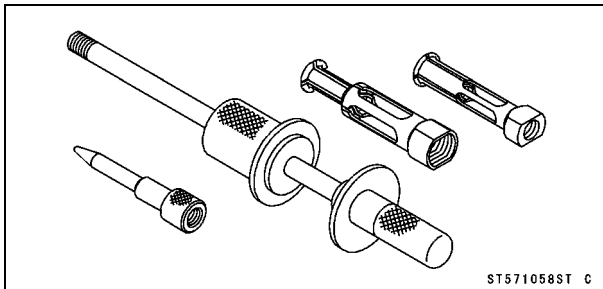

ST571058ST C

Hook Wrench T=3.2 R37:


57001-1539

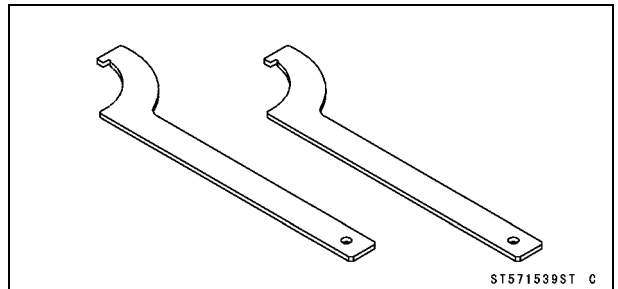

ST571539ST C

Bearing Driver Set:


57001-1129

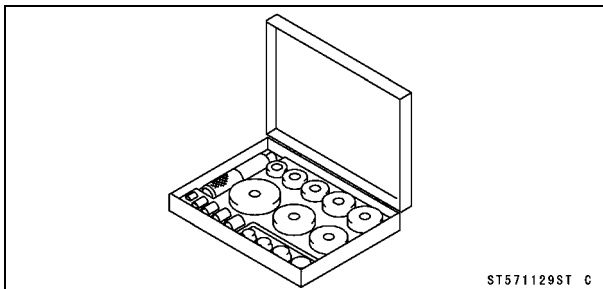

ST571129ST C

Needle Bearing Driver,  $\phi 17/\phi 18$ :

57001-1609

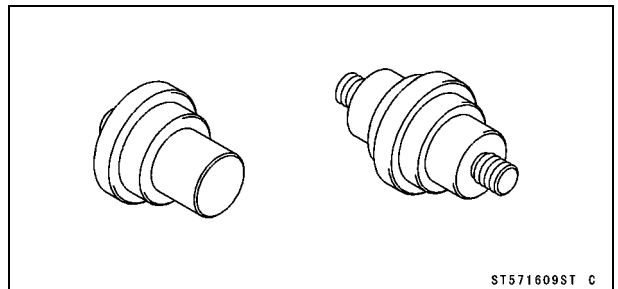


ST571609ST C

## 13-8 SUSPENSION


### Special Tools

---

Fork Oil Seal Driver Weight,  $\phi 26 \sim \phi 46$ :  
57001-1795

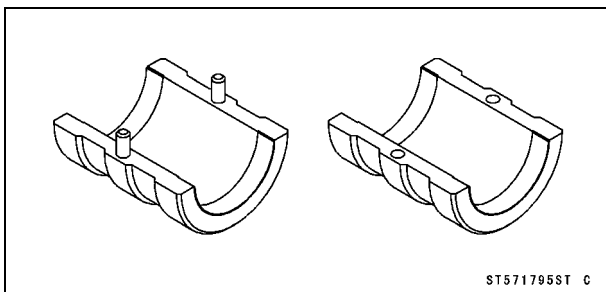

Fork Oil Seal Driver Attachment,  $\phi 36 \sim \phi 46$ :  
57001-1798

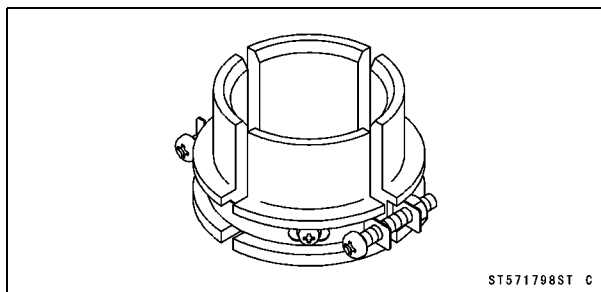




## Front Fork


### Front Fork Removal (Each Fork Leg)

- Remove:
  - Front Wheel (see Front Wheel Removal in the Wheels/Tires chapter)
  - Front Fender (see Front Fender Removal in the Frame chapter)
- ★ If fork leg is to be disassembled, loosen the upper front fork clamp bolt [A] and the front fork top plug [B] beforehand.
- Loosen the lower front fork clamp bolts [C].
- With a twisting motion, work the fork leg down and out.

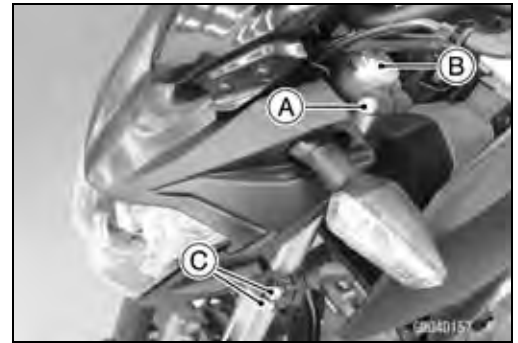

### Front Fork Installation (Each Fork Leg)

- Install the fork so that the distance between the top end [A] of the inner tube and upper surface [B] of the steering stem head is the 6 mm (0.24 in.) [C].
  - ★ Tighten the front fork top plug to the specified torque if the front fork top plug is removed.
- Torque - Front Fork Top Plugs: 22 N·m (2.2 kgf·m, 16 ft·lb)**

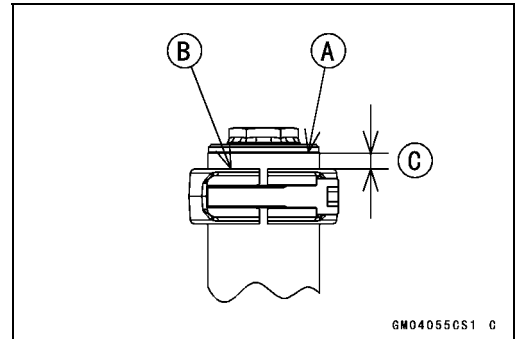

- Tighten:
  - Torque - Lower Front Fork Clamp Bolts: 20 N·m (2.0 kgf·m, 15 ft·lb)**


#### NOTE

- Tighten the top plug before tightening the upper front fork clamp bolt.
  - Tighten the two lower front fork clamp bolts alternately two times to ensure even tightening torque.
- Tighten:
    - Torque - Upper Front Fork Clamp Bolts: 20 N·m (2.0 kgf·m, 15 ft·lb)**

- Install the removed parts (see appropriate chapters).

### Front Fork Oil Change


- Remove:
  - Front Fork (see Front Fork Removal)
  - Front Fork Top Plug [A] with O-ring
  - Spacer [B]
  - Fork Spring Seat [C]
  - Fork Spring [D]

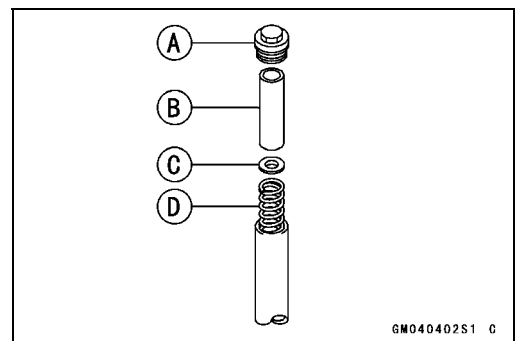

# 13-10 SUSPENSION

## Front Fork

- Drain the fork oil into a suitable container [A].
- Pump the inner tube up and down at least 10 times to expel the oil from the fork.

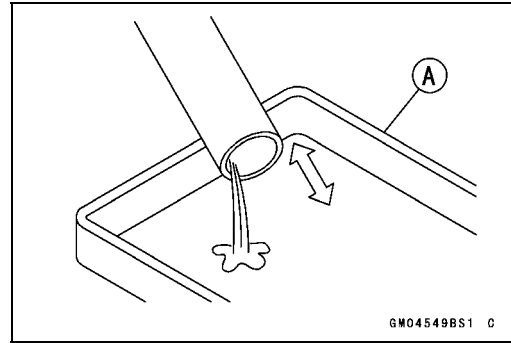

- Hold the fork tube upright, pour in the specified type and amount of fork oil.


**Suspension Oil - KHL34-G10 (1 L): 44091-0002**  
**KHL34-G10 (4 L): 44091-0011**

**Amount (Per Side):**

**When changing oil: approx. 410 mL (13.9 US oz.)**

**After disassembly and completely dry:**

**479 ±4 mL (16.2 ±0.135 US oz.)**

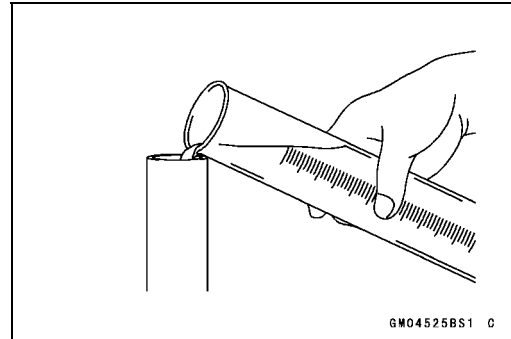

**NOTE**

- Move the outer tube up and down a few times to remove the air that is trapped in the fork oil in order to stabilize the oil level.

- Hold the outer tube vertically in a vise and compress the fork completely.
- Wait until the oil level stabilizes.
- Use the fork oil level gauge [A] to measure the distance from the top of the inner tube to the oil level.


**Special Tool - Fork Oil Level Gauge: 57001-1290**

- Set the oil level gauge stopper [B] so that the distance [C] from the bottom of the stopper to the lower end of the pipe is the standard oil level distance.
- A correct measurement can not be obtained unless the level gauge pipe is placed in the center of the inner tube.

**Oil Level (fully compressed, without spring)**


**Standard: 101 ±2 mm (4.0 ±0.08 in.)**

- Place the stopper of the level gauge at the top [D] of the inner tube [E] and pull the handle slowly to draw out the excess oil from fork into the gauge, thus attaining the standard level.
- ★ If no oil is drawn out, there is not enough oil in the fork. Pour in some more oil and measure again.
- Repeat the same procedure for adjusting the other fork.

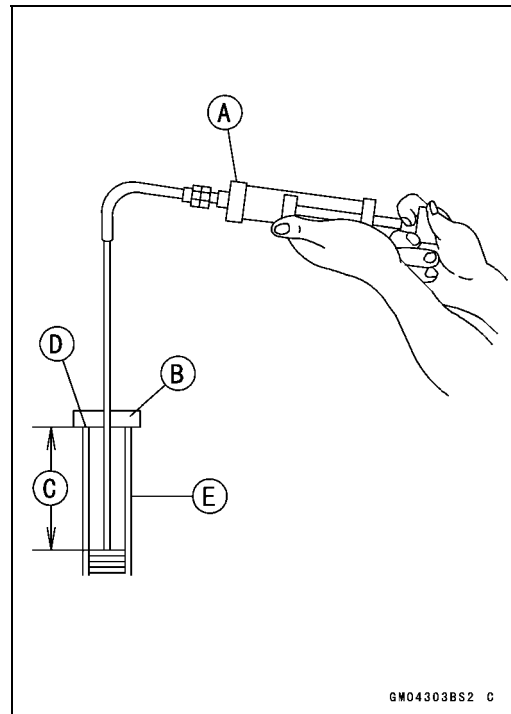

## Front Fork

- Install:
  - Fork Spring [A]
  - Fork Spring Seat [B]
  - Spacer [C]
- Replace the top plug O-ring with a new one.
- Apply grease to the top plug O-ring.
- Install:
  - Front Fork Top Plug
  - Front Fork (see Front Fork Installation)

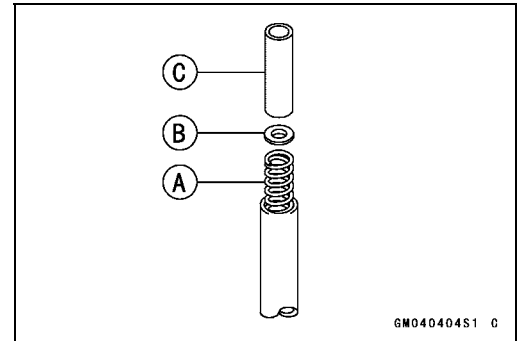


### Front Fork Disassembly

- Drain the fork oil (see Front Fork Oil Change).
- Remove the front fork bottom Allen bolt [A] and gasket from the bottom of the fork.

**Special Tools - Fork Cylinder Holder Handle [B]: 57001-183**  
**Fork Cylinder Holder Adapter [C]: 57001-1057**

#### NOTE


○ Hold the outer tube in a vise [D], stop the cylinder unit [E] from turning by using the special tools, and unscrew the Allen bolt.

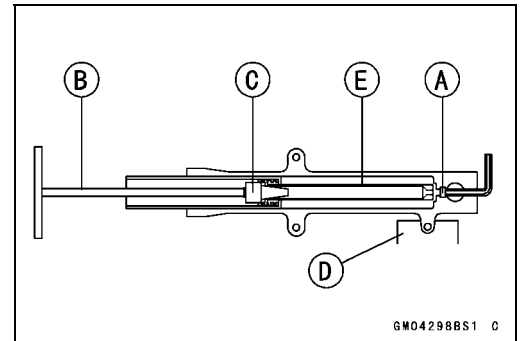

- Remove the cylinder unit [A] and the spring [B] from the inner tube.



- Remove the following parts from the top of the outer tube.
  - Dust Seal [A]
  - Retaining Ring [B]
  - Fork Guard [C]

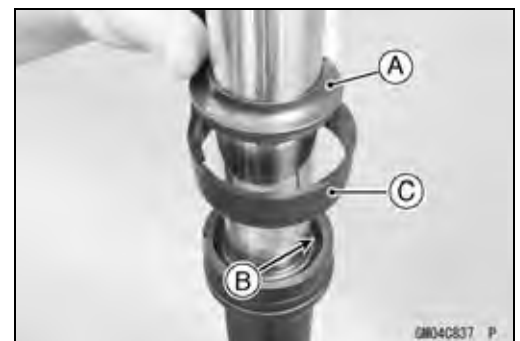


# 13-12 SUSPENSION

## Front Fork

- Separate the inner tube [A] from the outer tube [B].


### NOTE

○ From the compressed state, firmly pull down the outer tube a few times towards the direction of elongation.

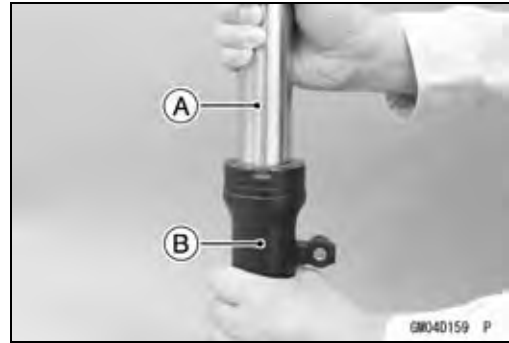

- Remove the following parts from the inner tube.

- Inner Guide Bushing [A]
- Outer Guide Bushing [B]
- Washer [C]
- Oil Seal [D]


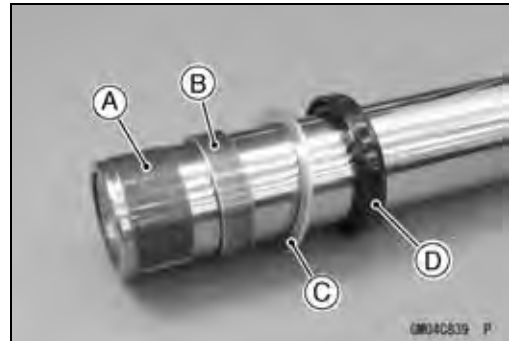


- Remove the cylinder base [A] from the bottom of the outer tube.



### Front Fork Assembly


- Replace the following parts with new ones.
  - Retaining Ring [A]
  - Dust Seal [B]
  - Oil Seal [C]
  - Inner Guide Bushing [D]
  - Outer Guide Bushing [E]
  - Front Fork Bottom Allen Bolt Gasket [F]
- Install the inner guide bushing to the groove on the inner tube.
- Insert the cylinder unit [A] and the spring into the inner tube.
- Be sure that the spring [B] is in position.
- Install the cylinder base [C] onto the end of the cylinder unit as shown.
- Install the inner tube, cylinder unit, and cylinder base as a set into the outer tube.

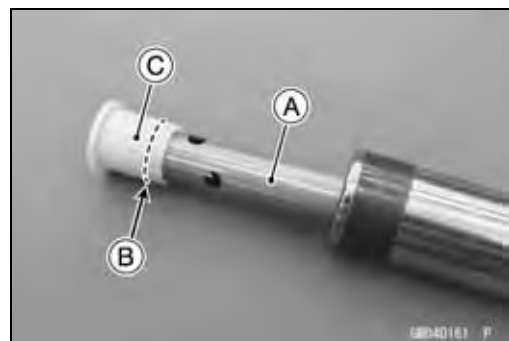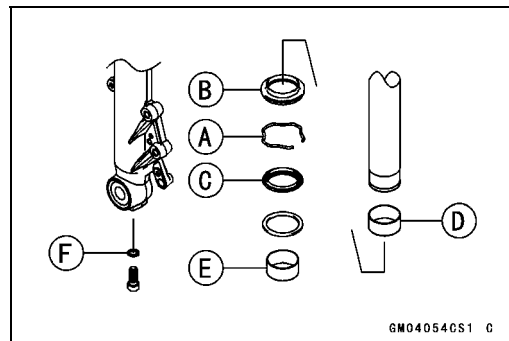

## Front Fork


- Install the outer guide bushing [A] and washer [B] into the outer tube using the fork oil seal driver [C], until the washer is bottomed.

**Special Tools - Fork Oil Seal Driver,  $\phi 41$ : 57001-1288 or Fork Oil Seal Driver Weight,  $\phi 26 \sim \phi 46$ : 57001-1795 Fork Oil Seal Driver Attachment,  $\phi 36 \sim \phi 46$ : 57001-1798**

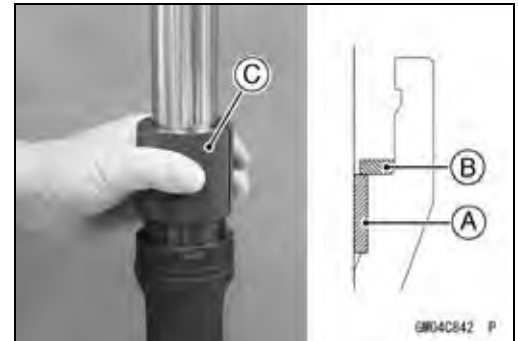


- Apply grease to the oil seal lips, and install the oil seal [A] to the outer tube from the top.
- Install the oil seal with its lip side (marked side) [B] facing up.
- Install the oil seal into the bottom case using the fork oil seal driver [C] until the oil seal is bottomed.

**Special Tools - Fork Oil Seal Driver,  $\phi 41$ : 57001-1288 or Fork Oil Seal Driver Weight,  $\phi 26 \sim \phi 46$ : 57001-1795 Fork Oil Seal Driver Attachment,  $\phi 36 \sim \phi 46$ : 57001-1798**

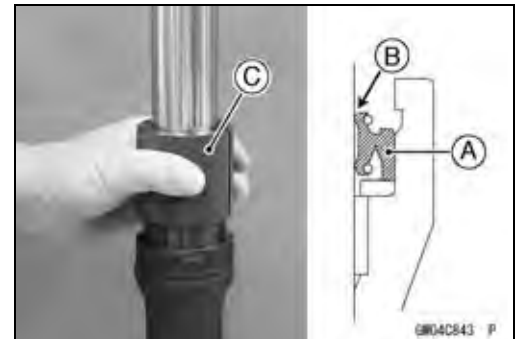


- Install the retaining ring [A] to the groove in the outer tube.
- Make sure that the retaining ring is properly seated into the groove.
- Install the fork guard [B] to the outer tube aligning the tab [C] with the groove [D] on the outer tube.
- Install the dust seal [E].

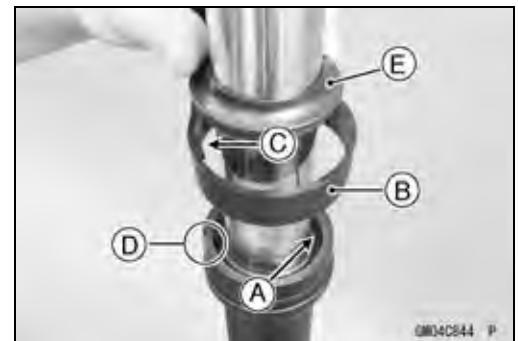

- Apply non-permanent locking agent to the threads of the bottom Allen bolt [A].
- Hold the front fork horizontally in a vise [B].
- Hold the cylinder unit [C] with the special tools and tighten the bottom Allen bolt to secure the cylinder in place.

**Special Tools - Fork Cylinder Holder Handle [D]: 57001-183 Fork Cylinder Holder Adapter [E]: 57001-1057**

**Torque - Front Fork Bottom Allen Bolt: 30 N-m (3.1 kgf-m, 22 ft-lb)**

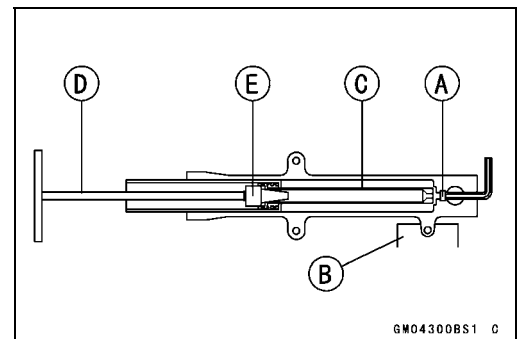

- Pour in the specified type of oil (see Front Fork Oil Change).
- Install the front fork (see Front Fork Installation).

# 13-14 SUSPENSION

## Front Fork

### Inner Tube, Outer Tube Inspection

- Visually inspect the inner tube [A].
- ★ If there is any damage, replace the inner tube. Since damage to the inner tube damages the oil seal and dust seal, replace the oil seal and dust seal whenever the inner tube is replaced.

#### NOTICE

If the inner tube is badly bent or creased, replace it. Excessive bending, followed by subsequent straightening, can weaken the inner tube.

- Temporarily assemble the inner [A] and outer [B] tubes, and pump them back and forth manually to check for smooth operation.
- ★ If you feel binding or catching, the inner and outer tubes must be replaced.

#### ⚠ WARNING

A straightened inner or outer fork tube may fall in use, possibly causing an accident resulting in serious injury or death. Replace a badly bent or damaged inner or outer tube and inspect the other tube carefully before reusing it.

### Dust Seal Inspection

- Inspect the dust seal [A] for any signs of deterioration or damage.
- ★ Replace it if necessary.





### Spring Tension Inspection

- Since a spring becomes shorter as it weakens, check its free length [A] to determine its condition.
- ★ If the spring of either fork leg is shorter than the service limit, it must be replaced. If the length of a replacement spring and that of the remaining spring vary greatly, the remaining spring should also be replaced in order to keep the fork legs balanced for motorcycle stability.

#### Spring Free Length

Standard: 327.8 mm (12.91 in.)

Service Limit: 322 mm (12.7 in.)

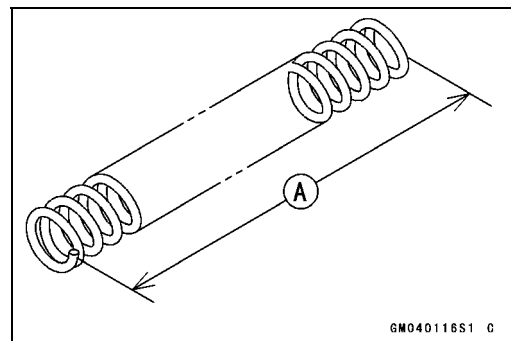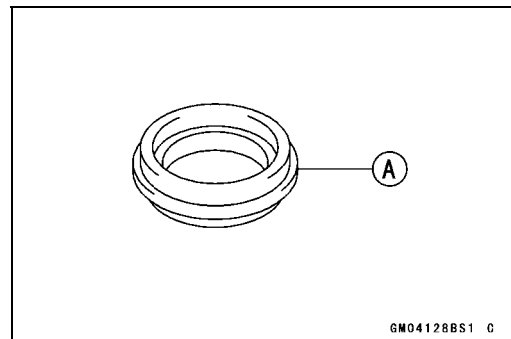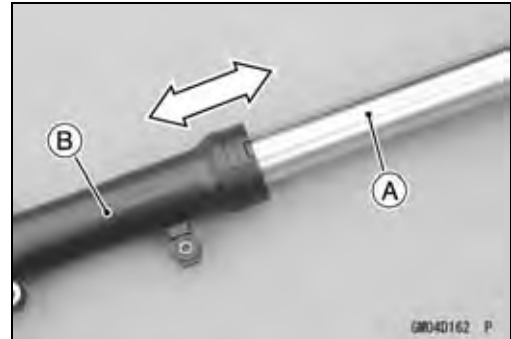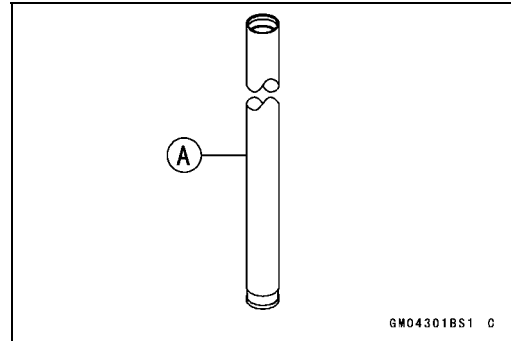

## Rear Shock Absorber

### Spring Preload Adjustment

- Remove:
  - Left Frame Cover (see Frame Cover Removal in the Frame chapter)
  - Left Side Cover (see Side Cover Removal in the Frame chapter)
- Using the hook wrench [A], turn the adjusting nut [B] to adjust the spring preload.

**Special Tool - Hook Wrench T = 3.2 R 37: 57001-1539**

### Spring Preload Setting

**Standard Position: 3rd position**

**Adjustable Range: 1st to 7th position**

- If the compression of the spring is not suited to the operating conditions, adjust it to an appropriate position by referring to the table below.

### Spring Preload Adjustment



Adjuster Position	Damping Force	Shock Absorber Hardness	Load	Road Conditions	Driving Speed
1st	Weak	Soft	Light	Good	Low
↑	↑	↑	↑	↑	↑
↓	↓	↓	↓	↓	↓
7th	Strong	Hard	Heavy	Bad	Highway

### Rear Shock Absorber Removal

- Remove:
    - Muffler (see Muffler Removal in the Engine Top End chapter)
  - Raise the rear wheel off the ground using the jack.
- Special Tool - Jack: 57001-1238**
- Squeeze the brake lever slowly and hold it with a band [A].

<b>⚠ WARNING</b>
<b>Be sure to hold the front brake when removing the shock absorber, or the motorcycle may fall over. It could cause an accident and injury.</b>



- Remove:
  - Fuel Tank (see Fuel Tank Removal in the Fuel System (DFI) chapter)

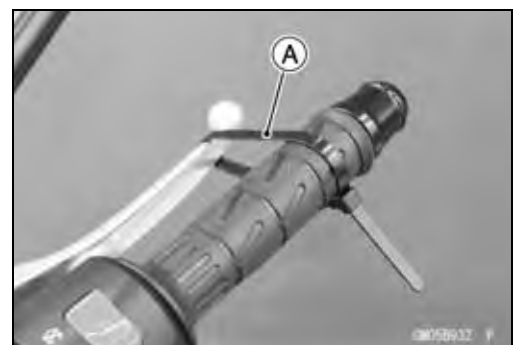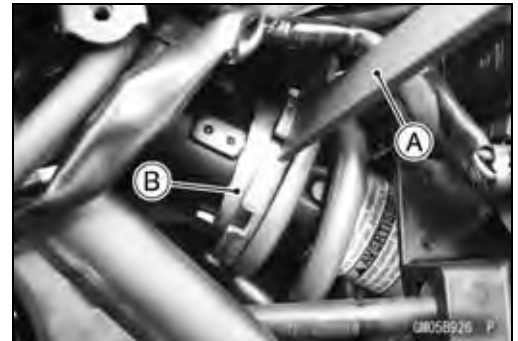

## 13-16 SUSPENSION

### Rear Shock Absorber

- Remove:
  - Upper Rear Shock Absorber Bolt and Nut [A]
  - Lower Rear Shock Absorber Bolt and Nut [B]
- Remove the rear shock absorber [C].

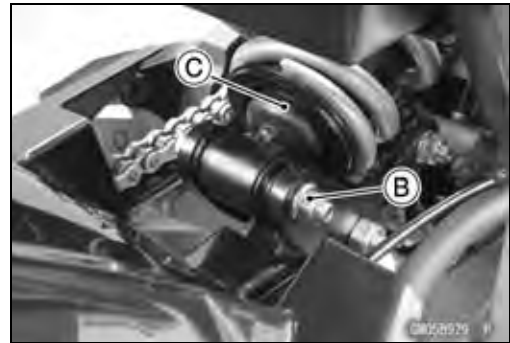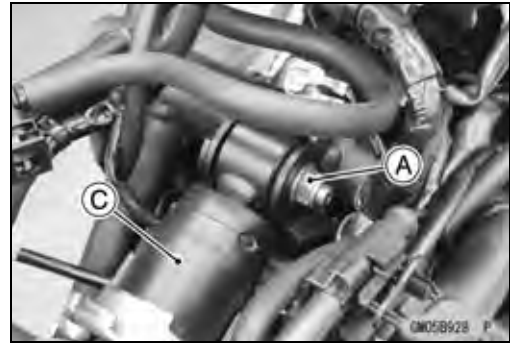

#### ***Rear Shock Absorber Installation***

- Replace the rear shock absorber nuts with new ones.
- Apply grease to the lip of grease seals.
  - Be sure to install the grease seals to the rear shock absorber.
- Install the rear shock absorber so that the label side faces inside.
- Pull up the swingarm, and tighten the rear shock absorber bolts and nuts.

**Torque - Upper Rear Shock Absorber Nut: 34 N·m (3.5 kgf·m, 25 ft·lb)**

**Lower Rear Shock Absorber Bolt: 34 N·m (3.5 kgf·m, 25 ft·lb)**

- Install the removed parts (see appropriate chapters).

#### ***Rear Shock Absorber Inspection***

- Remove the rear shock absorber (see Rear Shock Absorber Removal).
- Visually inspect the following items.
  - Oil Leakage
  - Crack or Dent
- ★ If there is any damage to the rear shock absorber, replace it.
- Visually inspect the rubber bushing.
- ★ If it show any signs of damage, replace it.



## Rear Shock Absorber

### Rear Shock Absorber Scrapping


#### **⚠ WARNING**

Since the rear shock absorber contains nitrogen gas, do not incinerate the rear shock absorber without first releasing the gas or it may explode. Before a rear shock absorber is scrapped, drill a hole at the point [A] shown to release the nitrogen gas completely. Wear safety glasses when drilling the hole, as the gas may blow out bits of drilled metal when the hole opens.




### Rear Shock Absorber Bearing Removal

- Remove:
  - Rear Shock Absorber (see Rear Shock Absorber Removal)
  - Sleeve [A]
  - Grease Seals [B]
- Remove the needle bearing, using a suitable tool.

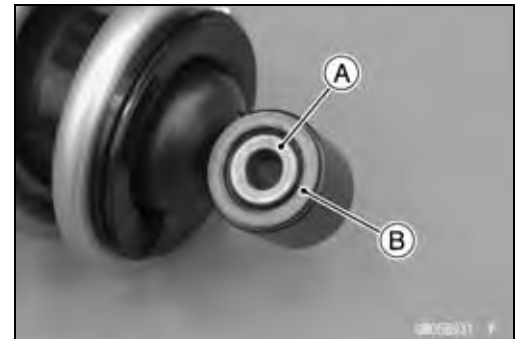

### Rear Shock Absorber Bearing Installation

- Replace the needle bearing [A] and grease seals [B] with new ones.
- Install the needle bearing position as shown.
  - 5.5 mm (0.22 in.) [C]
- Apply plenty of grease to the lips of the grease seals.
- Install the grease seals and sleeve [D].

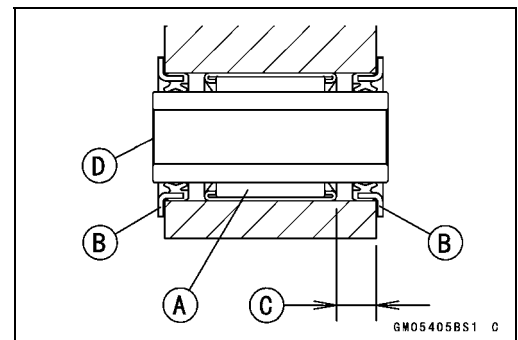

# 13-18 SUSPENSION

## Swingarm


### Swingarm Removal

- Remove:
  - Rear Wheel (see Rear Wheel Removal in the Wheels/Tires chapter)
  - Shift Pedal (see Shift Pedal Removal in the Crankshaft/Transmission chapter)
  - Mud Guard and Chain Cover (see Mud Guard Removal in the Frame chapter)
  - Frame Cover (see Frame Cover Removal in the Frame chapter)
  - Muffler (see Muffler Removal in the Engine Top End chapter)

- Support the frame using the jack.

**Special Tool - Jack: 57001-1238**

- Remove:
  - Rocker Arm (see Rocker Arm Removal)
  - Rear Brake Hose Bracket Bolt [A]
  - Rear Brake Hose Bracket [B]

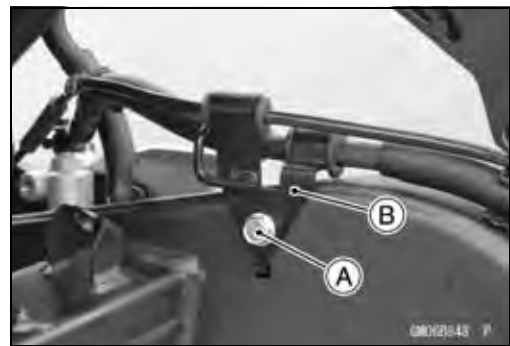

- Clear the rear wheel rotation sensor lead from the clamp [A].




- Loosen:
  - Right Swingarm Bracket Bolt [A]



## Swingarm

- Loosen:  
Left Swingarm Bracket Bolts [A]
- Remove:  
Swingarm Pivot Shaft Nut [B]
- Pull out the swingarm pivot shaft [C] to the right side, and remove the swingarm.

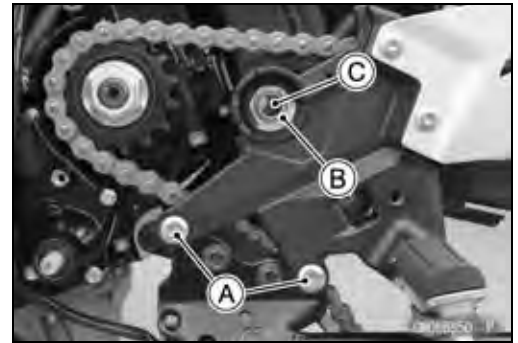

- After removing the swingarm, insert the swingarm pivot shaft [A] to hold the right swingarm bracket [B].




### Swingarm Installation

- Visually inspect the chain guide [A].
- ★ Replace the chain guide if it shows any signs of abnormal wear or damage.



- Apply grease to the lip of the grease seals [A].
- Be sure to install the grease seals and sleeves [B] to the swingarm.
- Fit the collar [C] on the grease seal.  
Left Side [D]  
Right Side [E]

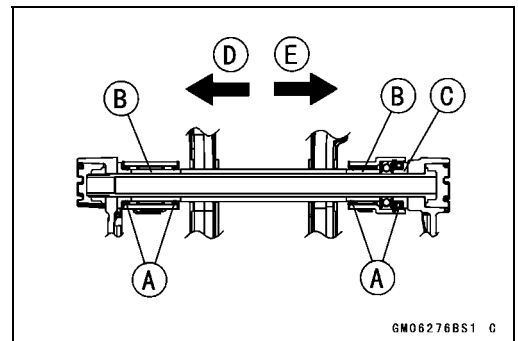

## 13-20 SUSPENSION


### Swingarm

- Install the swingarm [A] and insert the swingarm pivot shaft [B].
- Tighten the bolts and nut following the tightening sequence [1 ~ 4].

**Torque - Swingarm Pivot Shaft Nut [1]: 108 N·m (11.0 kgf·m, 79.7 ft·lb)**

**Left Swingarm Bracket Bolt [2, 3]: 25 N·m (2.5 kgf·m, 18 ft·lb)**

**Right Swingarm Bracket Bolt [4]: 25 N·m (2.5 kgf·m, 18 ft·lb)**

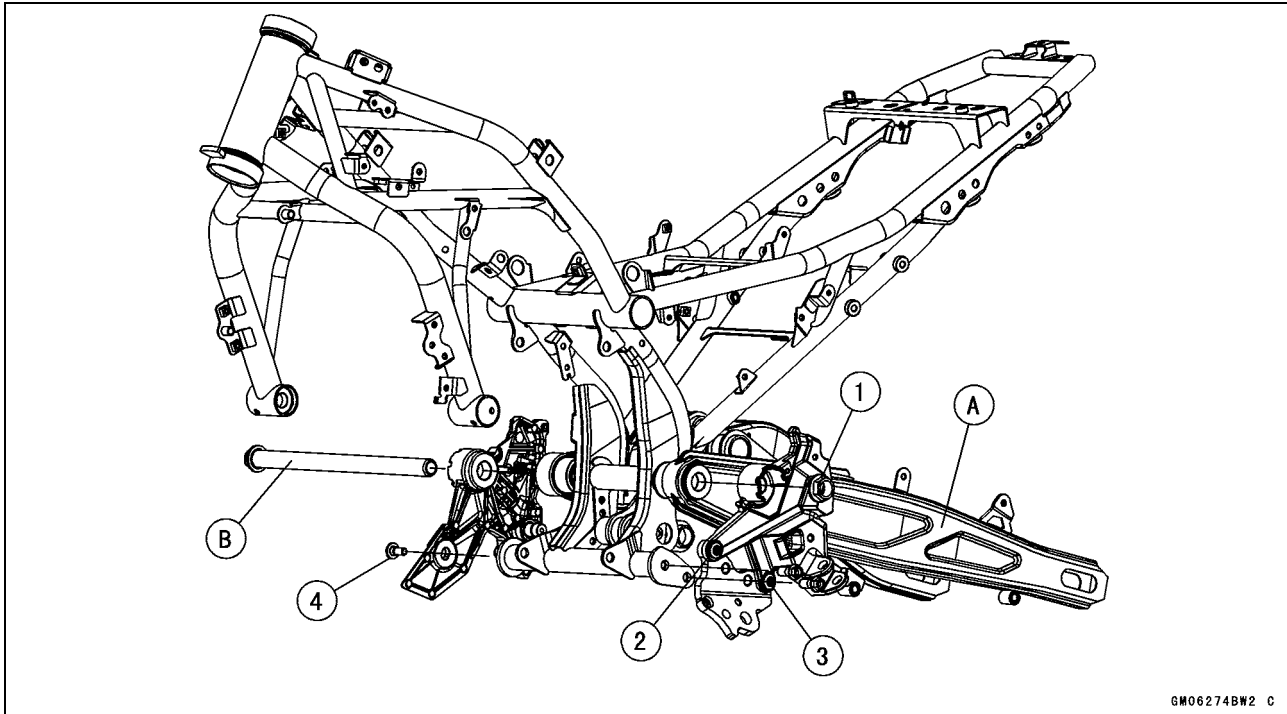


- Move the swingarm up and down to check for abnormal friction.
- Install the removed parts (see appropriate chapters).

### Swingarm Bearing Removal


- Remove:
  - Swingarm (see Swingarm Removal)
  - Collars [A]
  - Grease Seals [B]
  - Sleeves [C]
  - Circlip (Right Side) [D]

**Special Tool - Inside Circlip Pliers: 57001-143**

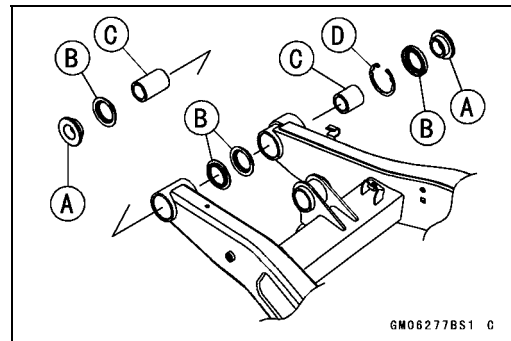

**Swingarm**


- Remove the ball bearing and needle bearings.  
**Special Tool - Oil Seal & Bearing Remover [A]: 57001-1058**

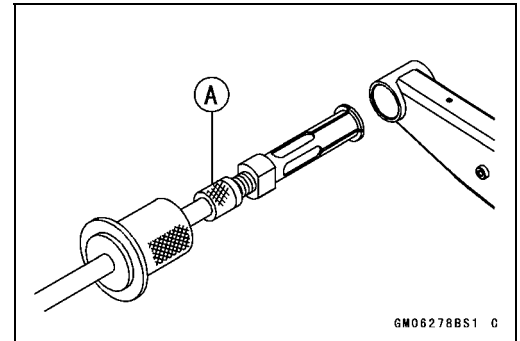

**Swingarm Bearing Installation**

- Replace the needle bearings [A], ball bearing [B], grease seals [C] and circlip [D] with new ones.
- Apply grease to the left needle bearing and the lip of the grease seals.
- Install the needle bearings, ball bearing, grease seals and circlip as shown.
  - 11.6 mm (0.46 in.) [E]
  - 24 mm (0.94 in.) [F]
  - 5.5 mm (0.22 in.) [G]
  - 17 mm (0.67 in.) [H]
  - 26.7 mm (10.05 in.) [I]
  - Left Side [J]
  - Right Side [K]
- Using a suitable bearing driver and the bearing driver set (special tool: 57001-1129).

**Special Tool - Bearing Driver Set: 57001-1129**

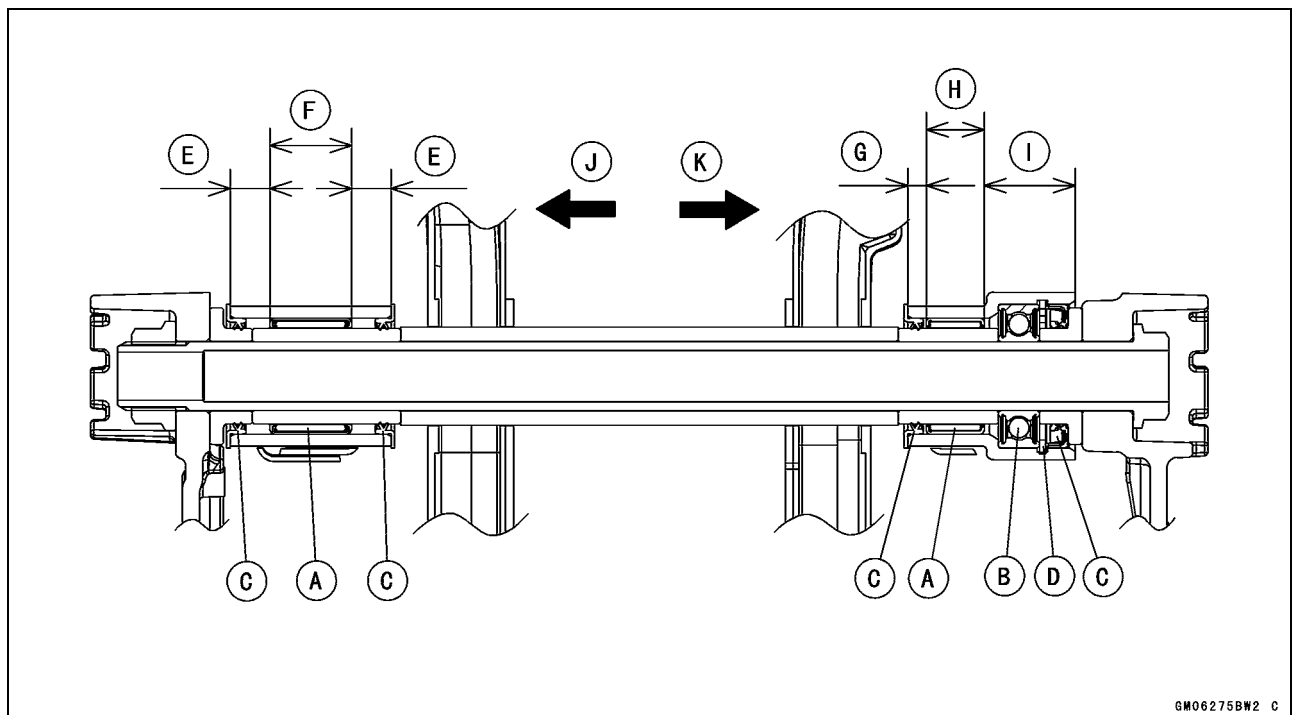

**NOTE**

- Install the needle and ball bearings so that the marked side faces out.

## 13-22 SUSPENSION

### Swingarm

- Press in the ball bearing until it bottomed.  
**Special Tool - Bearing Driver Set: 57001-1129**
- Install the circlip.  
**Special Tool - Inside Circlip Pliers: 57001-143**
- Press in the grease seals so that seal surface is flushed with the end of housing.  
**Special Tool - Bearing Driver Set: 57001-1129**

#### **Swingarm Bearing, Sleeve Inspection**

##### **NOTICE**

**Do not remove the bearings for inspection. Removal may damage them.**

- Inspect the needle bearings [A] and ball bearing [B] installed in the swingarm.
  - The rollers and ball in a bearing normally wear very little, and wear is difficult to measure. Instead of measuring, visually inspect the bearing for abrasion, discoloration, or other damage.
  - ★ If the needle bearing and sleeves [C] show any signs of abnormal wear, discoloration, or damage, replace them as a set.
- 
- Turn the bearing in the swingarm back and forth [A] while checking for plays, roughness, or binding.
  - ★ If bearing play, roughness, or binding is found, replace the bearing.
  - Examine the bearing seal [B] for tears or leakage.
  - ★ If the seal is torn or is leaking, replace the bearing.

#### **Swingarm Bearing Lubrication**



- Refer to the Suspension System Inspection in the Periodic Maintenance chapter.

##### **NOTE**

- Since the bearing [A] is packed with grease and sealed, lubrication is not required.

#### **Chain Guide Inspection**

- Refer to the Chain Guide Wear Inspection in the Periodic Maintenance chapter.

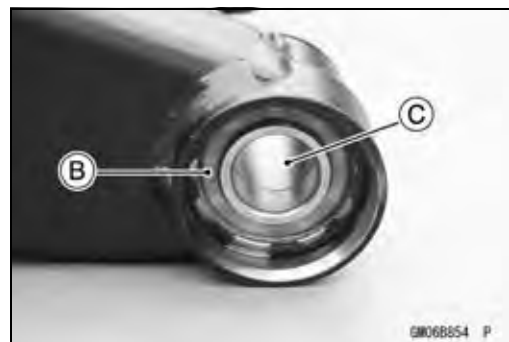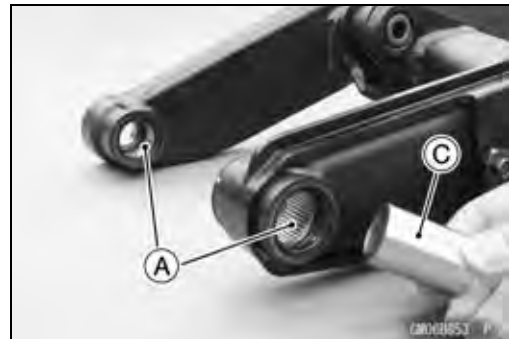


## Tie-Rod, Rocker Arm

### Tie-Rod Removal

- Squeeze the brake lever slowly and hold it with a band [A].
- Raise the rear wheel off the ground with the jack (see Rear Shock Absorber Removal).

**⚠ WARNING**


When raising the rear wheel off the ground with the jack and removing part(s) from the motorcycle, be sure to hold the front brake, or the motorcycle may fall over. It could cause an accident and injury.

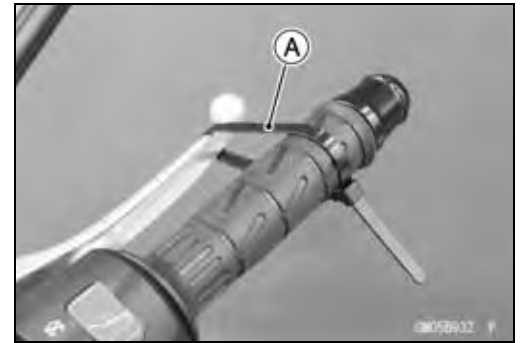


- Remove:
  - Frame Cover (see Frame Cover Removal in the Frame chapter)
  - Shift Pedal (see Shift Pedal Removal in the Crankshaft/Transmission chapter)
- Loosen:
  - Right Swingarm Bracket Bolt [A]



- Loosen:
  - Left Swingarm Bracket Bolts [A]
- Remove:
  - Swingarm Pivot Shaft Nut [B]
  - Left Swingarm Bracket Bolts
  - Left Swingarm Bracket [C]

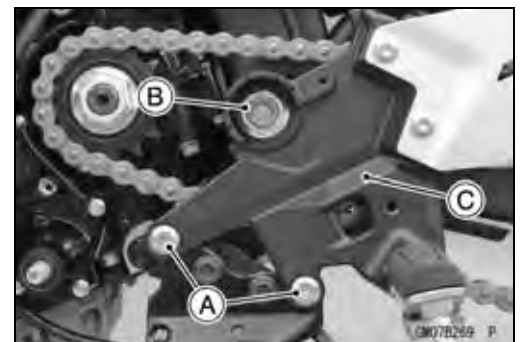

- Remove:
  - Tie-Rod Bolt (Upper) [A] and Nut
  - Tie-Rod Bolt (Lower) [B] and Nut
  - Tie-Rod

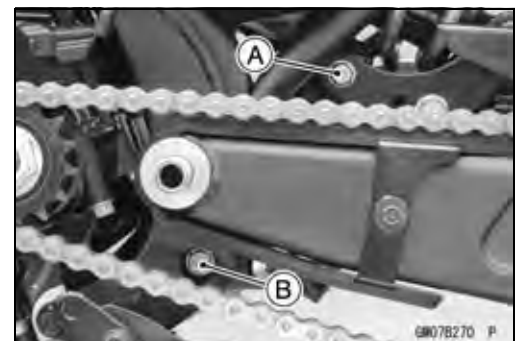


## 13-24 SUSPENSION

### Tie-Rod, Rocker Arm

#### **Tie-Rod Installation**

- Apply grease to the inside of the grease seals.
- Pull up the swingarm, and install the tie-rod.
- Replace the tie-rod nuts with new ones.
- Tighten:
  - Torque - Tie-Rod Bolt (Lower): 44 N·m (4.5 kgf·m, 32 ft·lb)
- Pull up the swingarm, and tighten the bolt.
  - Torque - Tie-Rod Bolt (Upper): 44 N·m (4.5 kgf·m, 32 ft·lb)
- Install:
  - Left Swingarm Bracket [A]
- Tighten the bolts and nut following the tightening sequence [1 ~ 4].
  - Torque - Swingarm Pivot Shaft Nut [1]: 108 N·m (11.0 kgf·m, 79.7 ft·lb)
  - Left Swingarm Bracket Bolts [2, 3]: 25 N·m (2.5 kgf·m, 18 ft·lb)
  - Right Swingarm Bracket Bolt [4]: 25 N·m (2.5 kgf·m, 18 ft·lb)

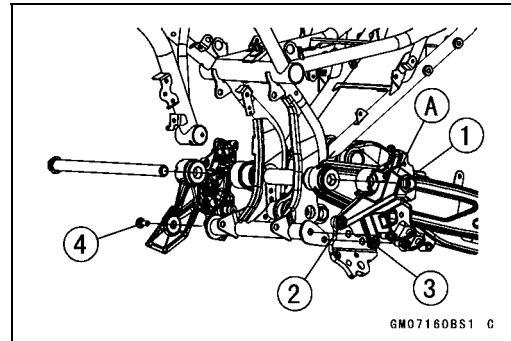


- Install the removed parts (see appropriate chapters).

#### **Rocker Arm Removal**


- Squeeze the brake lever slowly and hold it with a band [A].
- Raise the rear wheel off the ground with the jack (see Rear Shock Absorber Removal).

#### **⚠ WARNING**

When raising the rear wheel off the ground with the jack and removing part(s) from the motorcycle, be sure to hold the front brake, or the motorcycle may fall over. It could cause an accident and injury.

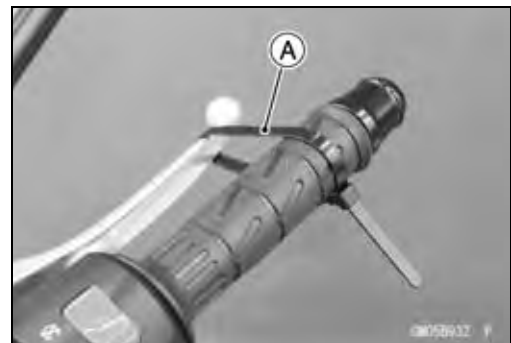

- Remove:
  - Lower Rear Shock Absorber Bolt [A] and Nut
  - Tie-Rod Bolt (Upper) [B] and Nut
  - Rocker Arm Bolt [C] and Nut
  - Rocker Arms [D]

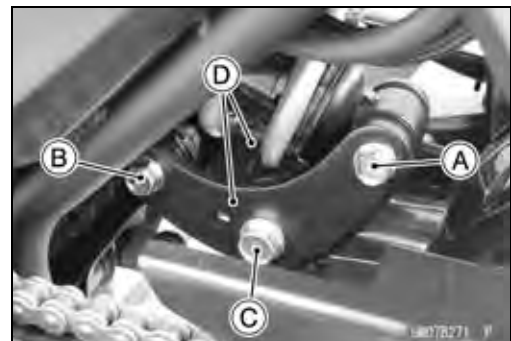




## Tie-Rod, Rocker Arm

### Rocker Arm Installation

- Apply grease to the inside of the oil seals.
- Replace the following nuts with new ones.
  - Rocker Arm Nut
  - Upper Tie-Rod Nut
  - Lower Rear Shock Absorber Nut
- Pull up the swingarm, and tighten the bolts following the tightening sequence [1 ~ 3].


**Torque - Rocker Arm Bolt [1]: 59 N·m (6.0 kgf·m, 44 ft·lb)**  
**Tie-Rod Bolt (Upper) [2]: 44 N·m (4.5 kgf·m, 32 ft·lb)**  
**Lower Rear Shock Absorber Bolt [3]: 34 N·m (3.5 kgf·m, 25 ft·lb)**

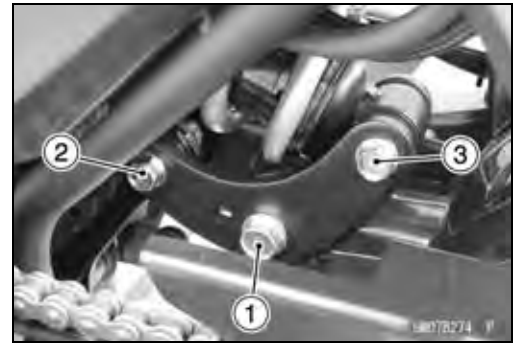

- Install the removed parts (see appropriate chapters).

### Tie-Rod and Rocker Arm Bearing Removal

- Remove:
  - Tie-Rod (see Tie-Rod Removal)
  - Rocker Arms (see Rocker Arm Removal)
  - Swingarm [A] (see Swingarm Removal)
  - Sleeves [B]
  - Grease Seals [C]
- Remove the needle bearings [D], using a suitable tool.

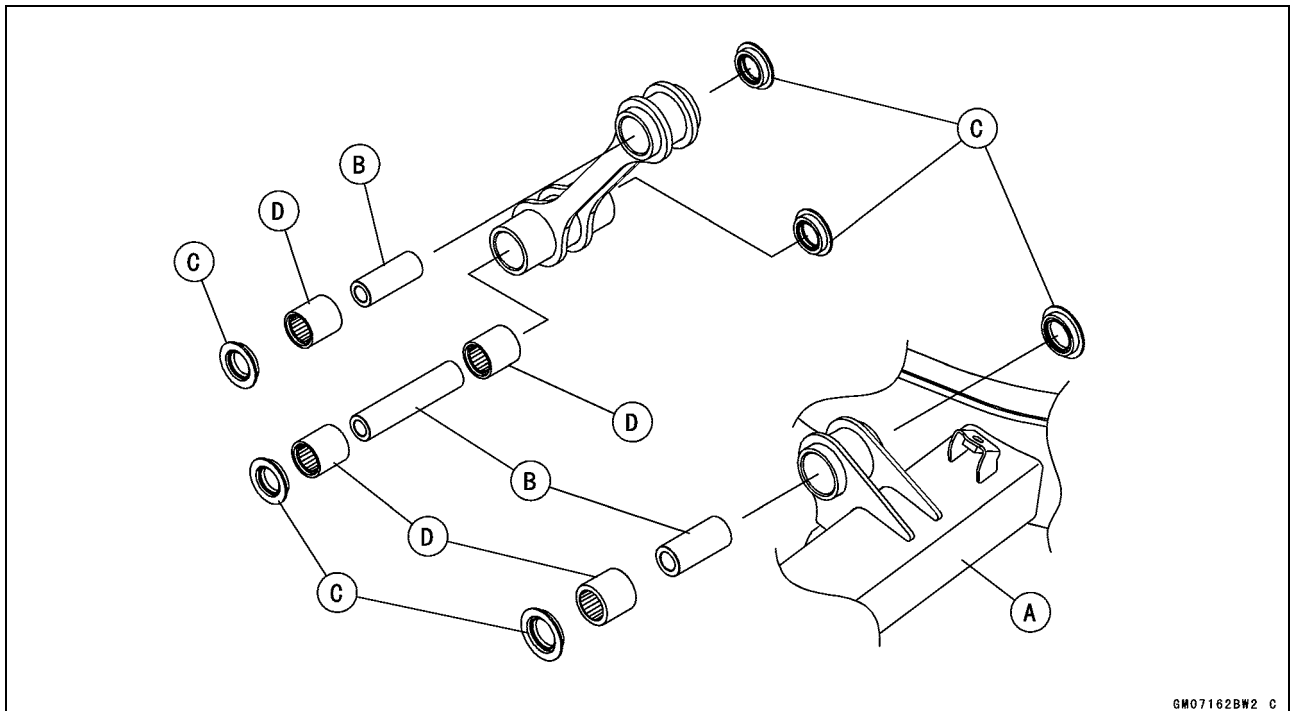

# 13-26 SUSPENSION

## Tie-Rod, Rocker Arm

### Tie-Rod and Rocker Arm Bearing Installation

- Replace the needle bearings and grease seals with new ones.
- Apply grease to the lips of the grease seals.
- Install the new needle bearings and grease seals position as shown.

#### For Tie-Rod Bearing

- Screw the needle bearing driver into the driver holder.
- Insert the needle bearing driver into the needle bearing and press the needle bearing.

#### NOTE

- For a bearing of inner diameter 17, select the pressing side of the needle bearing driver according to its pressing depth.

**Special Tools - Bearing Driver Set: 57001-1129**  
**Needle Bearing Driver,  $\phi 17/\phi 18$ : 57001-1609**


#### For Rocker Arm Bearing

- Using a suitable bearing driver and the bearing driver set (special tool: 57001-1129).

**Special Tool - Bearing Driver Set: 57001-1129**

#### NOTE

- Install the needle bearings so that the marked side faces outward.

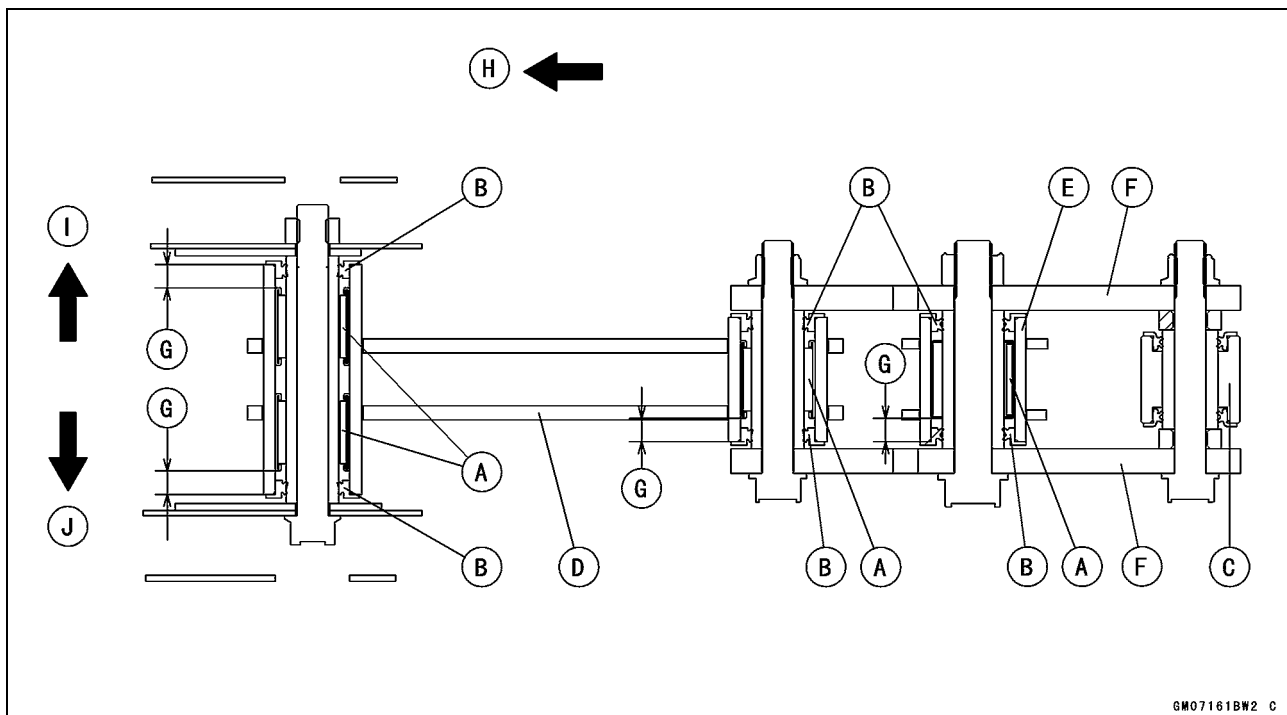

Needle Bearings [A]  
Grease Seals [B]  
Rear Shock Absorber [C]  
Tie-Rod [D]  
Swingarm [E]

Rocker Arms [F]  
7.5 mm (0.30 in.) [G]  
Front [H]  
Right Side [I]  
Left Side [J]

---

**Tie-Rod, Rocker Arm**

---

**Rocker Arm/Tie-Rod Bearing, Sleeve Inspection****NOTICE**

**Do not remove the bearings for inspection. Removal may damage them.**

- Visually inspect the rocker arm, or tie-rod sleeves [A] and needle bearings [B].
- The rollers in a needle bearing normally wear very little, and wear is difficult to measure. Instead of measuring, inspect the bearing for abrasion, color change, or other damage.
- ★ If there is any doubt as to the condition of any of the needle bearings or sleeve, replace the sleeve and needle bearings as a set.

**Rocker Arm/Tie-Rod Bearing Lubrication****NOTE**

○ Since the bearings are packed with grease, lubrication is not required.





---


# Steering

## Table of Contents

Exploded View.....	14-2
Special Tools .....	14-4
Steering .....	14-5
Steering Inspection .....	14-5
Steering Adjustment.....	14-5
Steering Stem.....	14-6
Steering Stem, Stem Bearing Removal .....	14-6
Steering Stem, Stem Bearing Installation .....	14-7
Steering Stem Bearing Lubrication .....	14-9
Steering Stem Warp Inspection .....	14-9
Stem Cap Deterioration, Damage Inspection .....	14-9
Handlebars .....	14-10
Handlebar Removal .....	14-10
Handlebar Installation .....	14-10

# 14-2 STEERING

## Exploded View

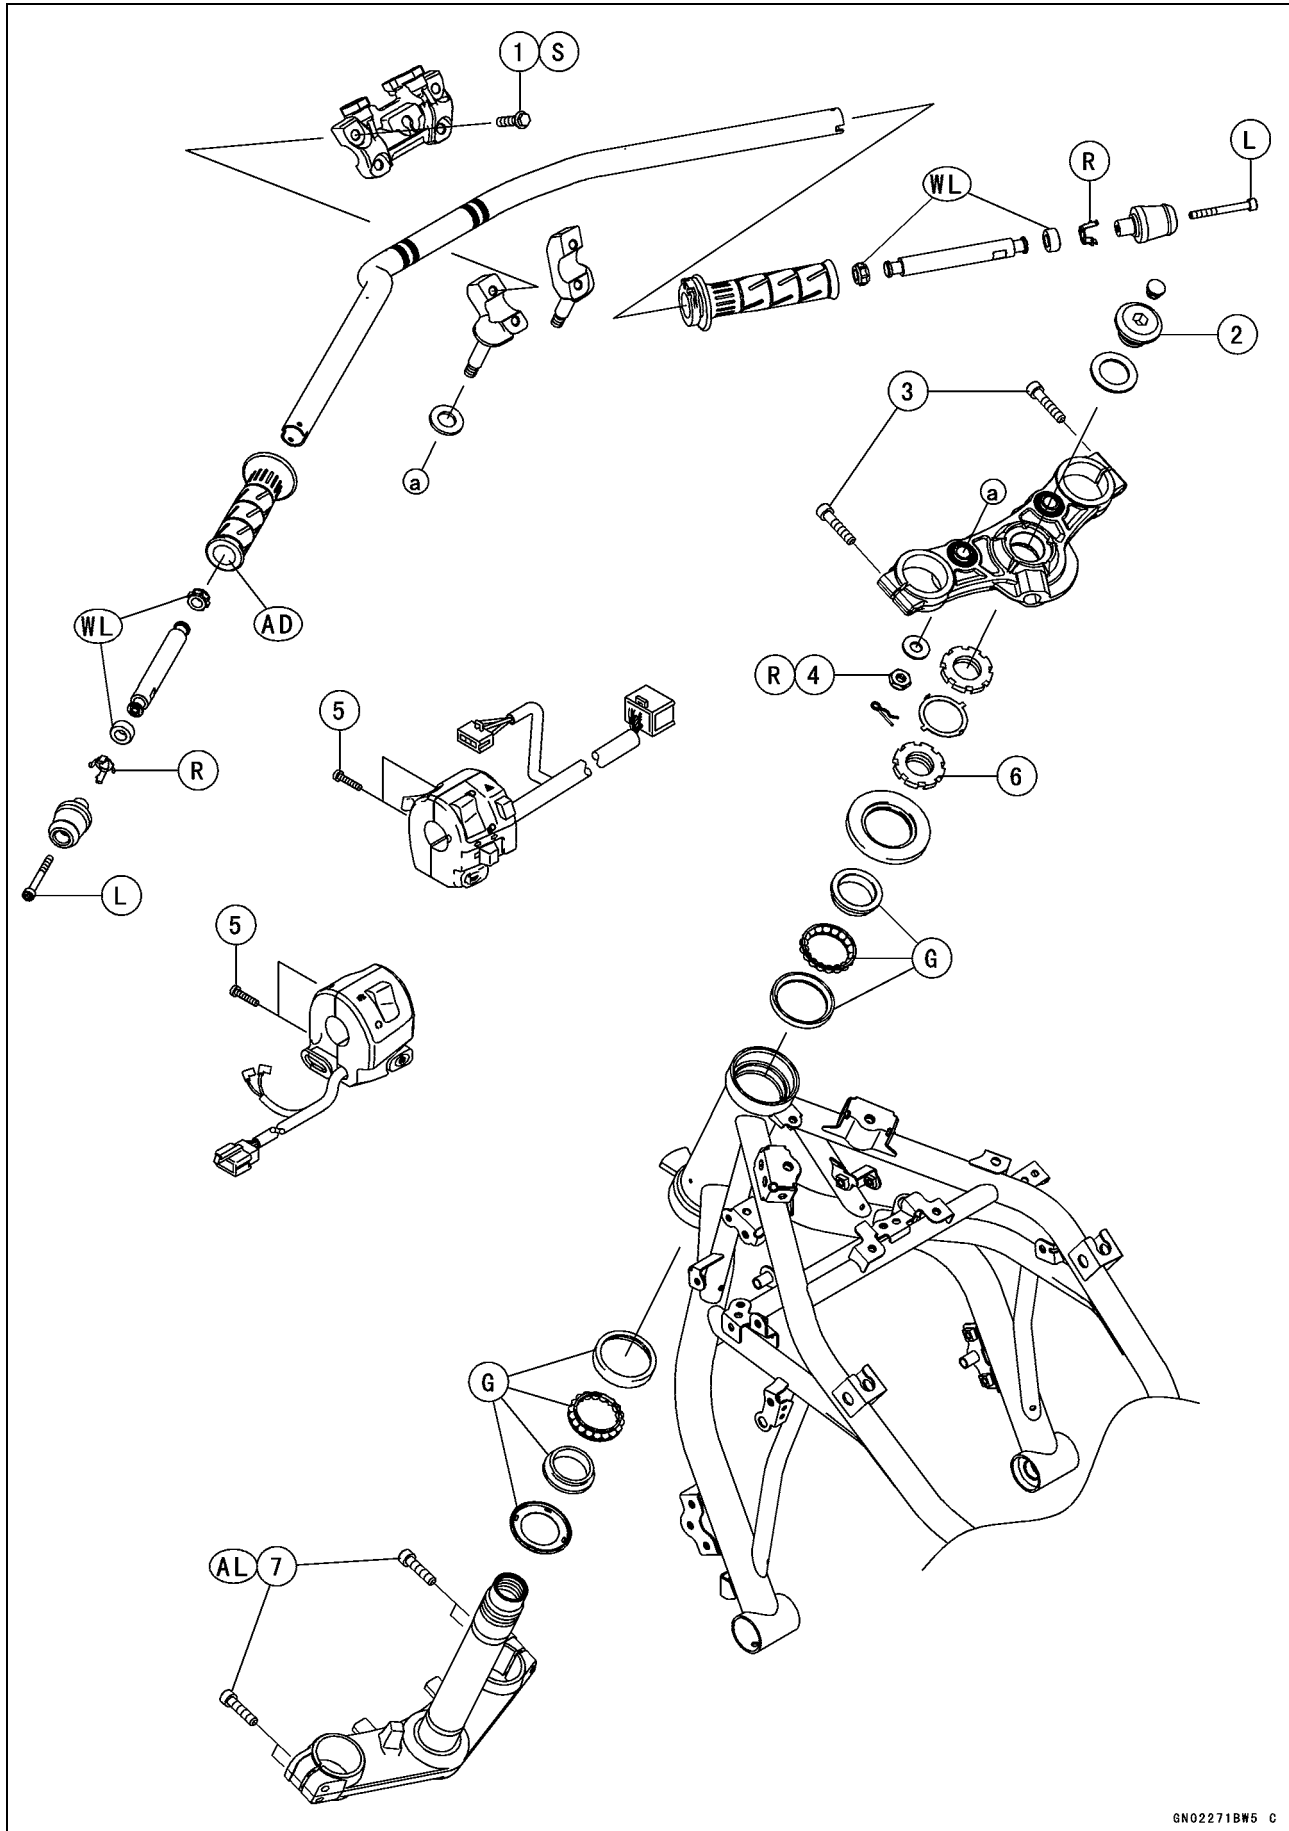

**Exploded View**

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Handlebar Holder Bolts	25	2.5	18	S
2	Steering Stem Head Bolt	108	11.0	79.7	
3	Upper Front Fork Clamp Bolts	20	2.0	15	
4	Lower Handlebar Holder Mounting Nuts	34	3.5	25	R
5	Switch Housing Screws	3.5	0.36	31 in·lb	
6	Steering Stem Nut	20	2.0	15	
7	Lower Front Fork Clamp Bolts	20	2.0	15	AL

AD: Apply adhesive.

AL: Tighten the two clamp bolts alternately two times to ensure even tightening torque.

G: Apply grease.

L: Apply a non-permanent locking agent.

R: Replacement Parts


S: Follow the specified tightening sequence.

WL: Apply soap and water solution or rubber lubricant.


# 14-4 STEERING

## Special Tools


**Head Pipe Outer Race Press Shaft:**  
57001-1075

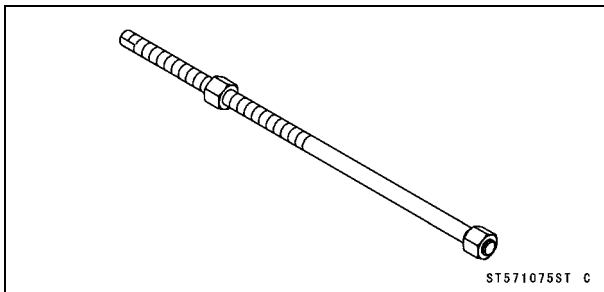


**Head Pipe Outer Race Driver,  $\phi$ 54.5:**  
57001-1077

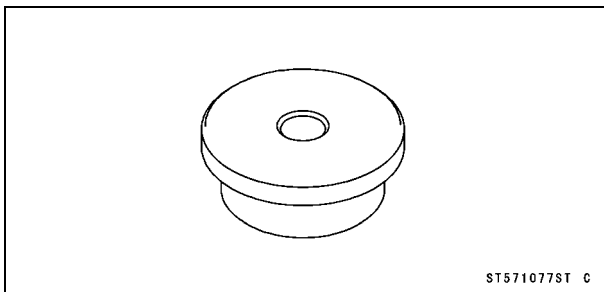


**Steering Stem Nut Wrench:**  
57001-1100

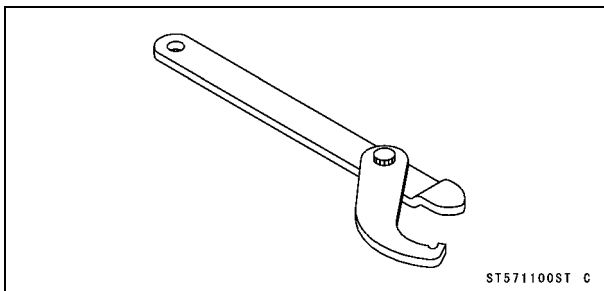

**Steering Stem Bearing Driver,  $\phi$ 42.5:**  
57001-1344

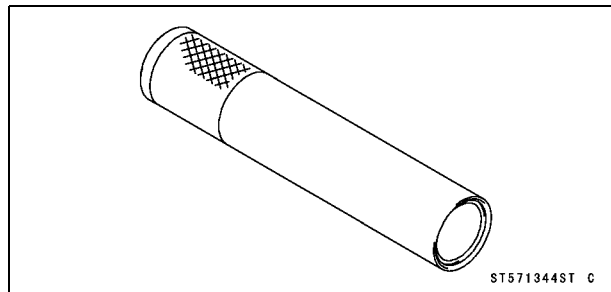

**Steering Stem Bearing Driver Adapter,  $\phi$ 41.5:**  
57001-1345

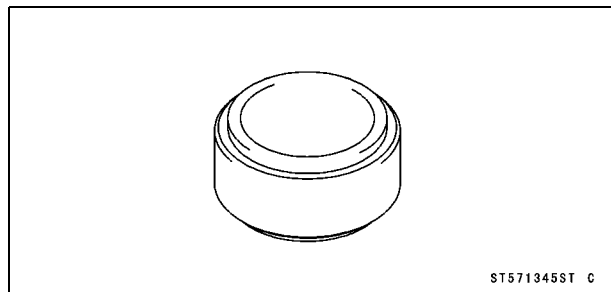



---

## Steering

---

### ***Steering Inspection***

- Refer to the Steering Play Inspection in the Periodic Maintenance chapter.

### ***Steering Adjustment***

- Refer to the Steering Play Adjustment in the Periodic Maintenance chapter.

## 14-6 STEERING

### Steering Stem

#### **Steering Stem, Stem Bearing Removal**


- Remove:
  - Handlebars (see Handlebar Removal)
  - Ignition Switch Cover (see Ignition Switch Cover Removal in the Frame chapter)
  - Upper Fairing (see Upper Fairing Removal in the Frame chapter)
  - Meter Cover Bracket (see Upper Fairing Removal in the Frame chapter)
  - Upper Harness Bracket Bolts [A]



- Remove the brake hose bracket bolts [A].



- Remove the steering stem head bolt plug [A].
- Loosen the steering stem head bolt [B].
- Remove:
  - Front Forks (see Front Fork Removal (Each Fork Leg) in the Suspension chapter)

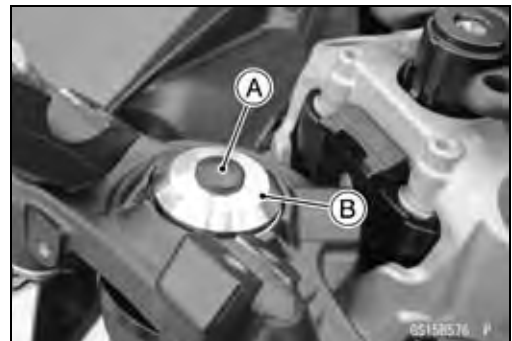

- Remove:
  - Steering Stem Head Bolt [A]
  - Washer [B]
  - Steering Stem Head [C]



- Bend the claws [A] of claw washer straighten.
- Remove the steering stem locknut [B].
  - Special Tool - Steering Stem Nut Wrench: 57001-1100**
- Remove the claw washer.




## Steering Stem

- Pushing up the stem base, and remove the steering stem nut [A].

**Special Tool - Steering Stem Nut Wrench [B]: 57001-1100**


- Remove:
  - Steering Stem
  - Stem Cap [C]
  - Upper Ball Bearing Inner Race and Ball Bearing

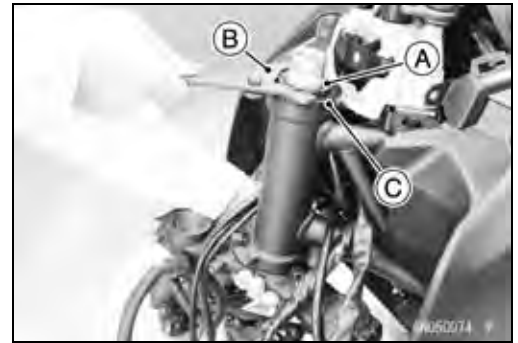


- To remove the bearing outer races [A] pressed into the head pipe [B], insert a bar [C] into the recesses [D] of head pipe, and applying it to both recess alternately hammer it to drive the race out.

### NOTE

○ If either steering stem bearing is damaged, it is recommended that both the upper and lower bearings (including outer races) should be replaced with new ones.

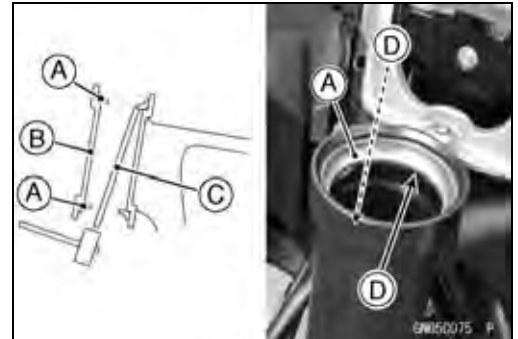

- Remove the lower ball bearing from the steering stem.
- Remove the lower ball bearing inner race (with its oil seal) [A] which is pressed onto the steering stem with a suitable commercially available chisel [B].

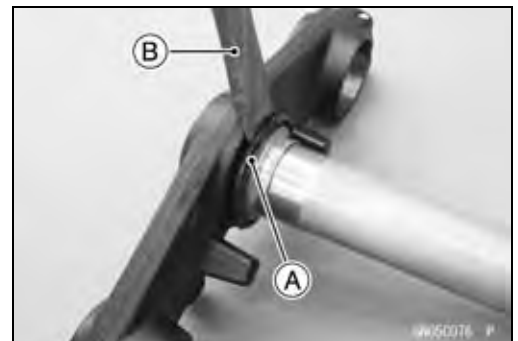

### Steering Stem, Stem Bearing Installation

- Replace the bearing outer races with new ones.
- Apply grease to the outer races, and drive them into the head pipe at the same time using the head pipe outer race press shaft [A] and drivers.



**Special Tools - Head Pipe Outer Race Press Shaft: 57001-1075**

**Head Pipe Outer Race Driver,  $\phi 54.5$  [B]: 57001-1077**

- Apply grease to the outer races.
- Replace the bearing inner races and oil seal with new ones.
- Apply grease to the oil seal.
- Install the oil seal [A] on the steering stem.
- Apply grease to the stem and hammer the lower ball bearing inner race [B].

**Special Tools - Steering Stem Bearing Driver,  $\phi 42.5$  [C]: 57001-1344**


**Steering Stem Bearing Driver Adapter,  $\phi 41.5$  [D]: 57001-1345**

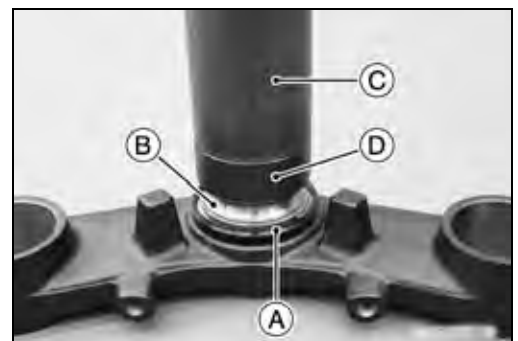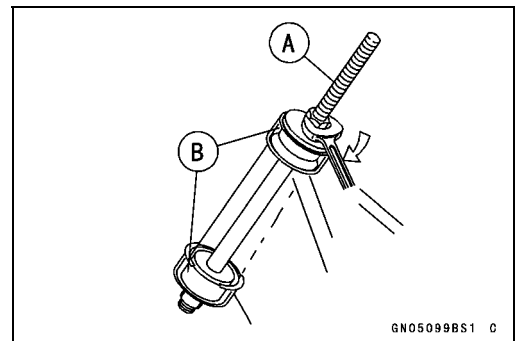


## 14-8 STEERING

### Steering Stem

- Apply grease to the lower ball bearing [A], and install it onto the steering stem.
- The lower and upper ball bearings are identical.
- Apply grease to the upper ball bearing [B] and inner race [C].
- Install the lower ball bearing to the steering stem.

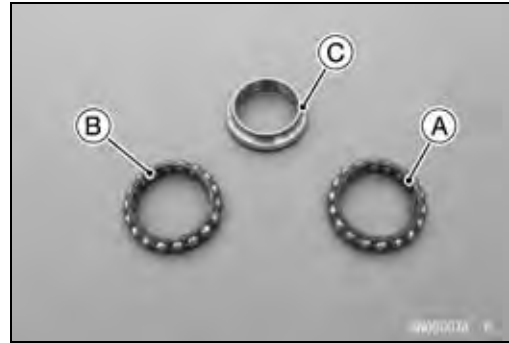

- Install the stem [A] through the head pipe and install the ball bearing [B] and inner race [C] on it.
- Install:
  - Stem Cap [D]
  - Steering Stem Nut [E]


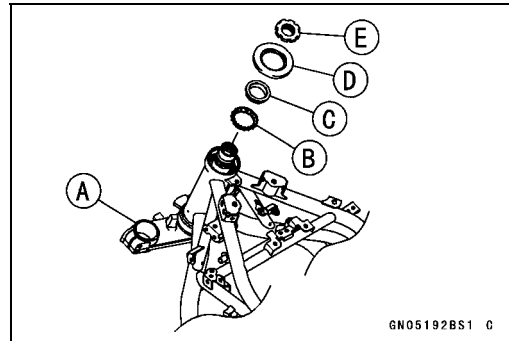


- Settle the bearings in place as follows.
- Tighten the steering stem nut with **65 N·m (6.6 kgf·m, 48 ft·lb)** of torque first, and loosen it a fraction of a turn until it turns lightly. Afterward tighten it again with specified torque using a steering stem nut wrench [A].
- Check that there is no play and the steering stem turns smoothly without rattles. If not, the steering stem bearings may be damaged.

**Special Tool - Steering Stem Nut Wrench: 57001-1100**

**Torque - Steering Stem Nut: 20 N·m (2.0 kgf·m, 15 ft·lb)**

- Install the claw washer [A] so that its bent side [B] faces upward, and engage the bent claws with the grooves of stem locknut [C].
- Hand tighten the stem locknut until it touches the claw washer.
- Hand tighten the stem locknut clockwise until the claws are aligned with the second groove of stem nut [D], and bend the 2 claws downward [E].
- Install the stem head.
- Install the washer, and temporarily tighten the steering stem head bolt.
- Install the front forks (see Front Fork Installation (Each Fork Leg) in the Suspension chapter).

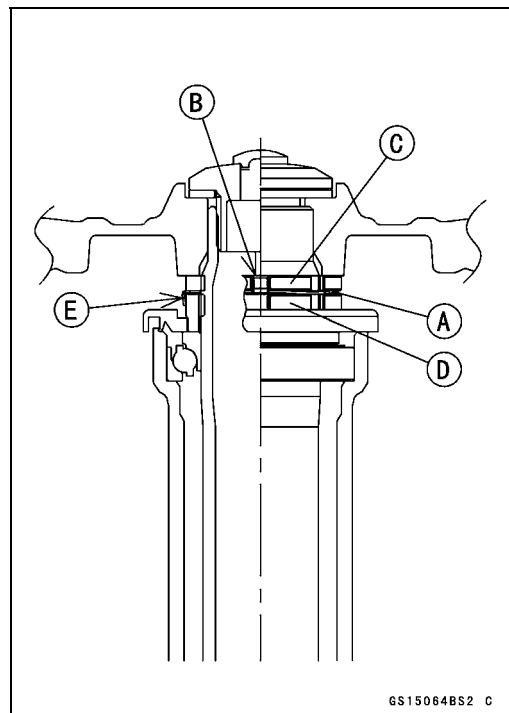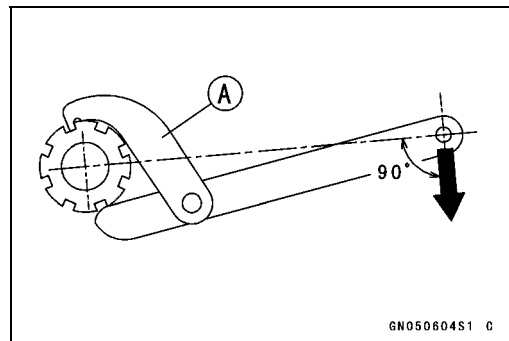

## Steering Stem

### NOTE

- Tighten the upper front fork clamp bolts first, next the stem head bolt, last the lower front fork clamp bolts.
- Tighten the two lower front fork clamp bolts alternately two times to ensure even tightening torque.

**Torque - Upper Front Fork Clamp Bolts:** 20 N·m (2.0 kgf·m, 15 ft·lb)

**Steering Stem Head Bolt:** 108 N·m (11.0 kgf·m, 79.7 ft·lb)

**Lower Front Fork Clamp Bolts:** 20 N·m (2.0 kgf·m, 15 ft·lb)

### WARNING

If the handlebars do not turn to the steering stop, they may cause an accident resulting in injury or death. Be sure the cables, harnesses and hoses are routed properly and do not interfere with handlebar movement (see Cable, Wire, and Hose Routing section in the Appendix chapter).

- Install the removed parts (see appropriate chapters).

### **Steering Stem Bearing Lubrication**

- Refer to the Steering Stem Bearing Lubrication in the Periodic Maintenance chapter.

### **Steering Stem Warp Inspection**

- Whenever the steering stem is removed, or if the steering can not be adjusted for smooth action, check the steering stem for straightness.
- ★ If the steering stem [A] is bent, replace the steering stem.



### **Stem Cap Deterioration, Damage Inspection**

- ★ Replace the stem cap if its oil seal [A] shows damage.




## 14-10 STEERING

### Handlebars

#### Handlebar Removal


● Remove:

- Rear View Mirror [A] (see Rear View Mirror Removal in the Frame chapter)
- Clutch Lever Holder Clamp Bolts [B]
- Clutch Lever Assembly [C]
- Left Switch Housing [D]
- Handlebar Weight [E]
- Left Handlebar Grip [F]

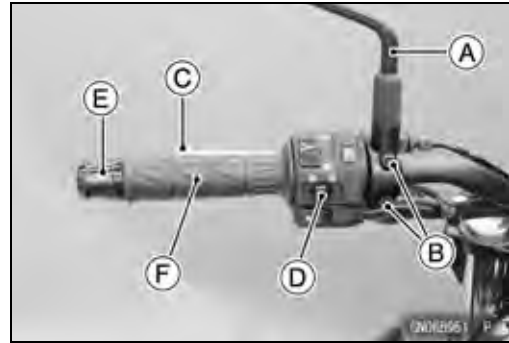


● Remove:

- Rear View Mirror [A] (see Rear View Mirror Removal in the Frame chapter)
- Front Master Cylinder [B] (see Front Master Cylinder Removal in the Brakes chapter)
- Right Switch Housing [C]
- Handlebar Weight [D]
- Throttle Grip [E]

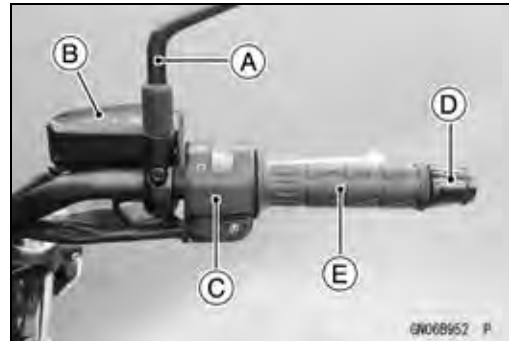


● When removing the lower handlebar holders, remove the following parts.

- Upper Fairing (see Upper Fairing Removal in the Frame chapter)
- Snap Pin [A] (Both Sides)
- Handlebar Holder Mounting Nut [B] (Both Sides)
- Washer [C] (Both Sides)

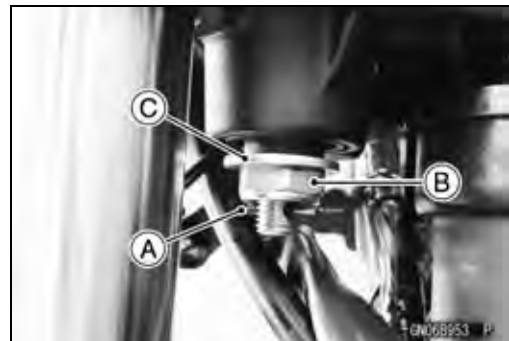


● Remove:

- Meter Unit (see Meter Unit Removal in the Electrical System chapter)
- Meter Cover Bracket (see Upper Fairing Removal in the Frame chapter)
- Handlebar Holder Bolts [A]
- Upper Handlebar Holder [B]
- Handlebars [C]
- Lower Handlebar Holder [D] (Both Sides, if necessary)
- Damper [E] (Both Sides, if necessary)

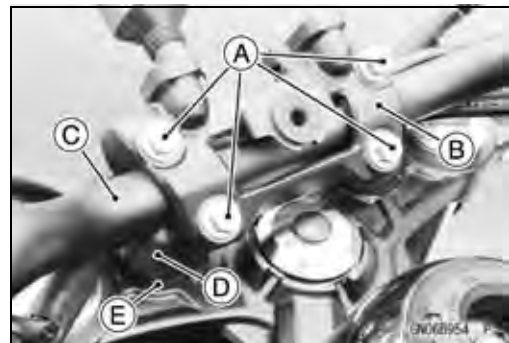


#### Handlebar Installation

- Install the damper and lower handlebar holder if removed (both sides).
- Align the punch mark [A] on the handlebars and the corner edge [B] of the lower handlebar holder.

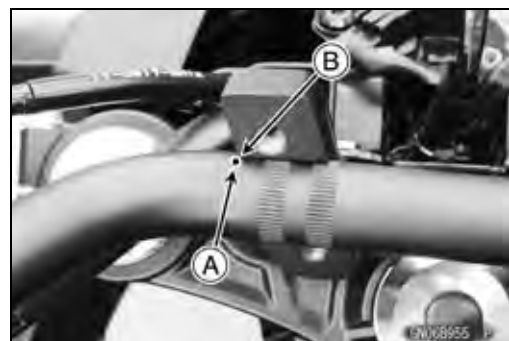


## Handlebars


- When installing the lower handlebar holders, install the upper handlebar holder [A] and handlebar holder bolts [B] temporarily.

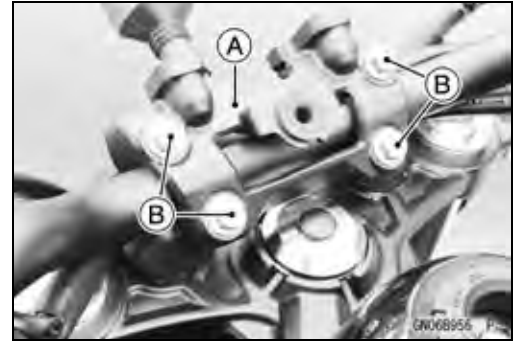


- Replace the lower handlebar holder nut on both sides [A] with new ones.
- Install (Both Sides):
  - Washer [B]
  - Handlebar Holder Nut
- Tighten:
  - Torque - Lower Handlebar Holder Mounting Nuts: 34 N·m (3.5 kgf·m, 25 ft·lb)**
- Install the snap pin [C] from forward.

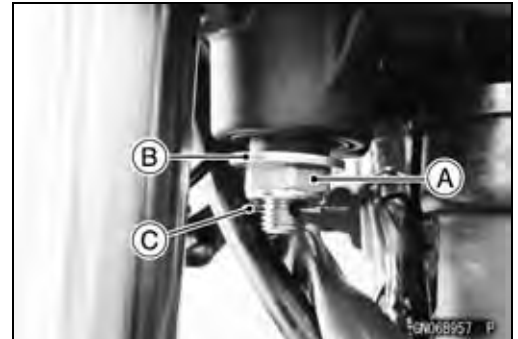

- Tighten the handlebar holder bolts following tightening sequence [1 ~ 4].
- There will be a gap [A] at the rear part of the holder after tightening.
  - Torque - Handlebar Holder Bolts: 25 N·m (2.5 kgf·m, 18 ft·lb)**

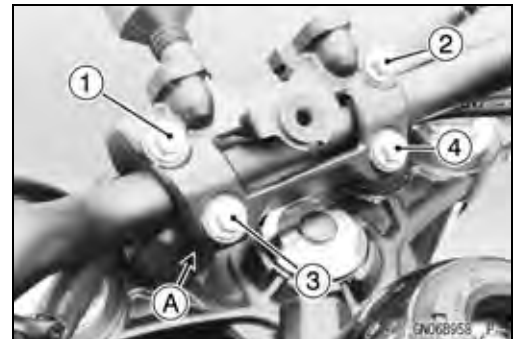


- Using a high flash-point solvent, clean off any oil or dirt that may be on the adhesive coating area. Dry them with a clean cloth.
- Apply adhesive to the inside of the left handlebar grip.
- Install the left handlebar grip and left handlebar weight.
- Apply a non-permanent locking agent to the threads of the left handlebar weight bolt, and tighten it.
- Install the left switch housing.
  - Fit the projection [A] into a small hole [B] of the handlebars.
- Tighten:
  - Torque - Switch Housing Screws: 3.5 N·m (0.36 kgf·m, 31 in·lb)**

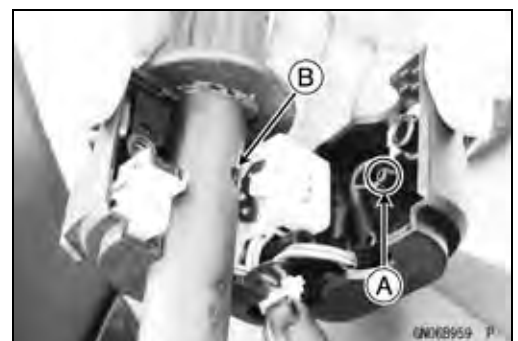


## 14-12 STEERING

### Handlebars



- Install:
  - Throttle Grip
  - Throttle Cable Tips [A]
  - Right Switch Housing
- Fit the projection [B] into a small hole [C] of the handlebars.
- Tighten:
  - Torque - Switch Housing Screws: 3.5 N·m (0.36 kgf·m, 31 in·lb)**

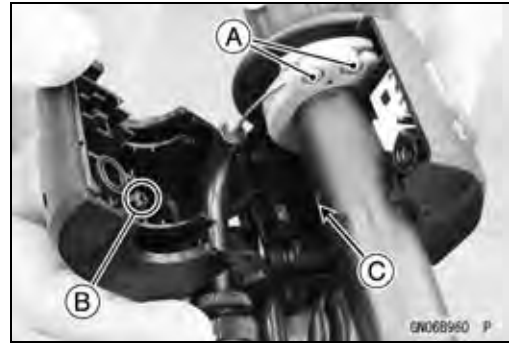

- When installing the handlebar weight shaft, note the following.
- Prepare a new clamp [A] and handlebar weight shaft [B] with dampers [C].
- Apply a non-permanent locking agent to the threads of the handlebar weight bolt [D].
- Assemble:
  - Clamp
  - Handlebar Weight [E]
  - Handlebar Weight Bolt

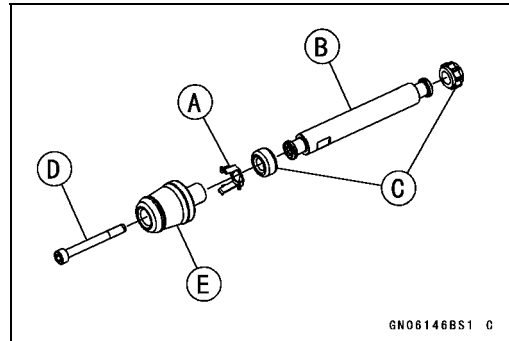

- Apply soap and water solution or rubber lubricant to the handlebar weight [A] and inside of the handlebars [B].
- Insert the handlebar weight shaft assembly [C] into the handlebar [D] until it stops at the stoppers [E] of the clamp. Holes [F] of the Handlebar
- Tighten the bolt securely.

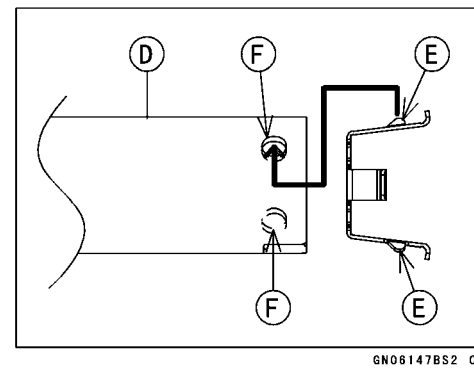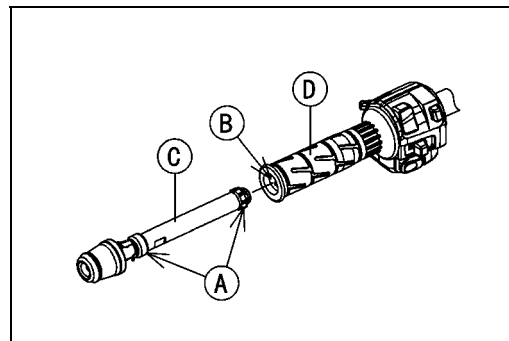

- Install:
  - Clutch Lever Assembly (see Clutch Lever Assembly Installation in the Clutch chapter)
  - Front Master Cylinder (see Front Master Cylinder Installation in the Brakes chapter)
- Run the leads, cables and hoses correctly (see Cable, Wire, and Hose Routing section in the Appendix chapter).
- Install the removed parts (see appropriate chapters).
- Adjust the throttle grip free play (see Throttle Control System Inspection in the Periodic Maintenance chapter).




# Frame

## Table of Contents

Exploded View.....	15-2
Seats .....	15-10
Rear Seat Removal.....	15-10
Rear Seat Installation.....	15-10
Front Seat Removal.....	15-10
Front Seat Installation.....	15-10
Fairings.....	15-11
Middle Fairing Removal .....	15-11
Middle Fairing Installation .....	15-12
Middle Fairing Disassembly.....	15-12
Middle Fairing Assembly.....	15-12
Upper Fairing Removal.....	15-13
Upper Fairing Installation.....	15-13
Covers .....	15-14
Frame Cover Removal.....	15-14
Frame Cover Installation.....	15-14
Side Cover Removal.....	15-14
Side Cover Installation.....	15-14
Inner Cover Removal.....	15-14
Inner Cover Installation.....	15-14
Ignition Switch Cover Removal.....	15-15
Ignition Switch Cover Installation.....	15-15
Fuel Tank Side Cover Removal.....	15-16
Fuel Tank Side Cover Installation.....	15-16
Seat Cover Removal.....	15-17
Seat Cover Installation.....	15-18
Fenders .....	15-19
Front Fender Removal.....	15-19
Front Fender Installation.....	15-19
Rear Fender Removal.....	15-19
Rear Fender Installation.....	15-21
Flap Removal.....	15-21
Flap Installation.....	15-21
Frame .....	15-22
Frame Inspection .....	15-22
Battery Case.....	15-23
Battery Case Removal.....	15-23
Battery Case Installation.....	15-23
Guard.....	15-24
Mud Guard Removal.....	15-24
Mud Guard Installation.....	15-24
Side Stand.....	15-25
Side Stand Removal.....	15-25
Side Stand Installation.....	15-26
Rear View Mirrors.....	15-28
Rear View Mirror Removal.....	15-28
Rear View Mirror Installation.....	15-28

# 15-2 FRAME

## Exploded View

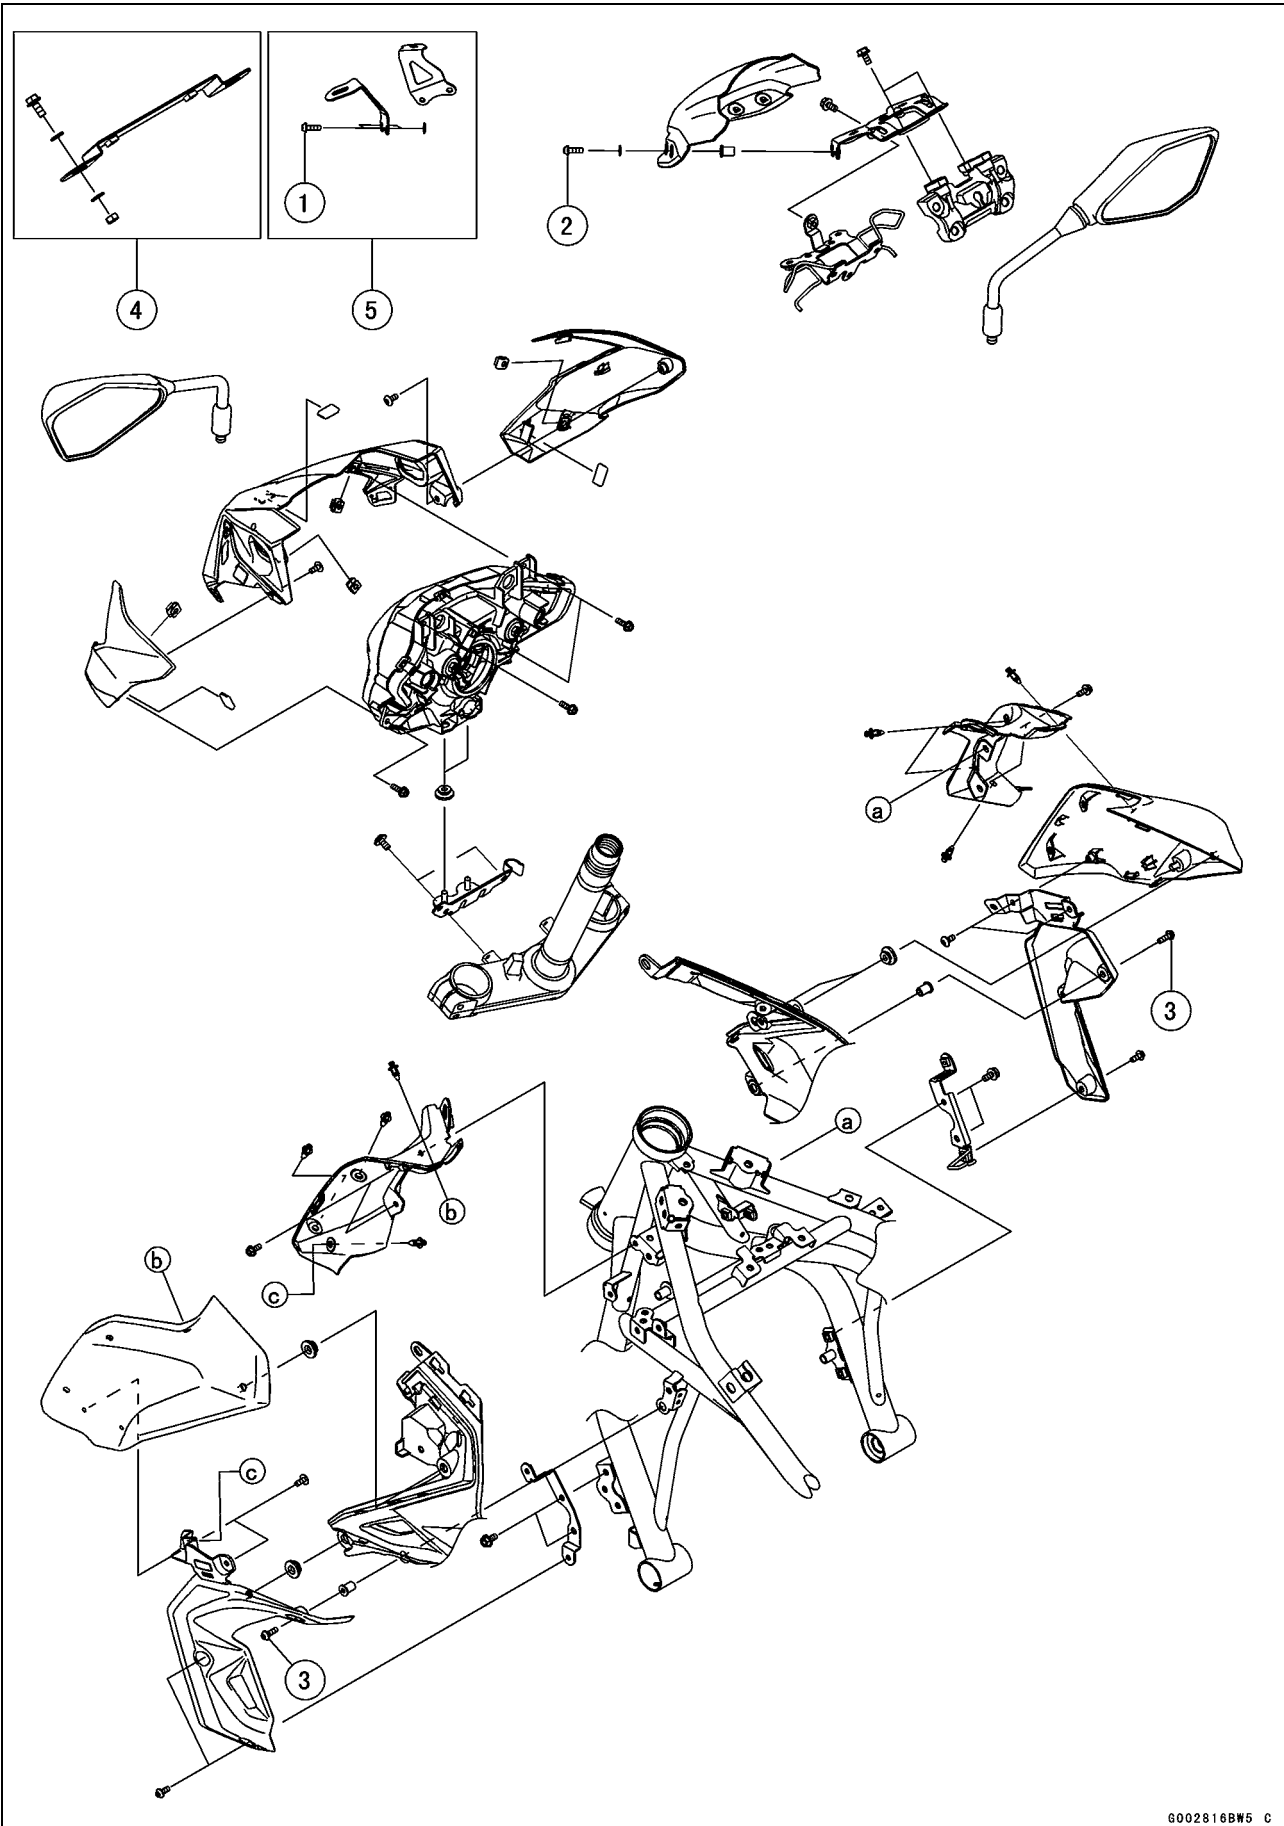

**Exploded View**


No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	License Plate Bolts	0.50	0.05	4.4 in·lb	
2	Meter Cover Bolts	0.50	0.05	4.4 in·lb	
3	Middle Fairing Bolts, L = 16 mm (0.63 in.)	0.50	0.05	4.4 in·lb	

4. IN Model

5. ID and IN Models

# 15-4 FRAME

## Exploded View

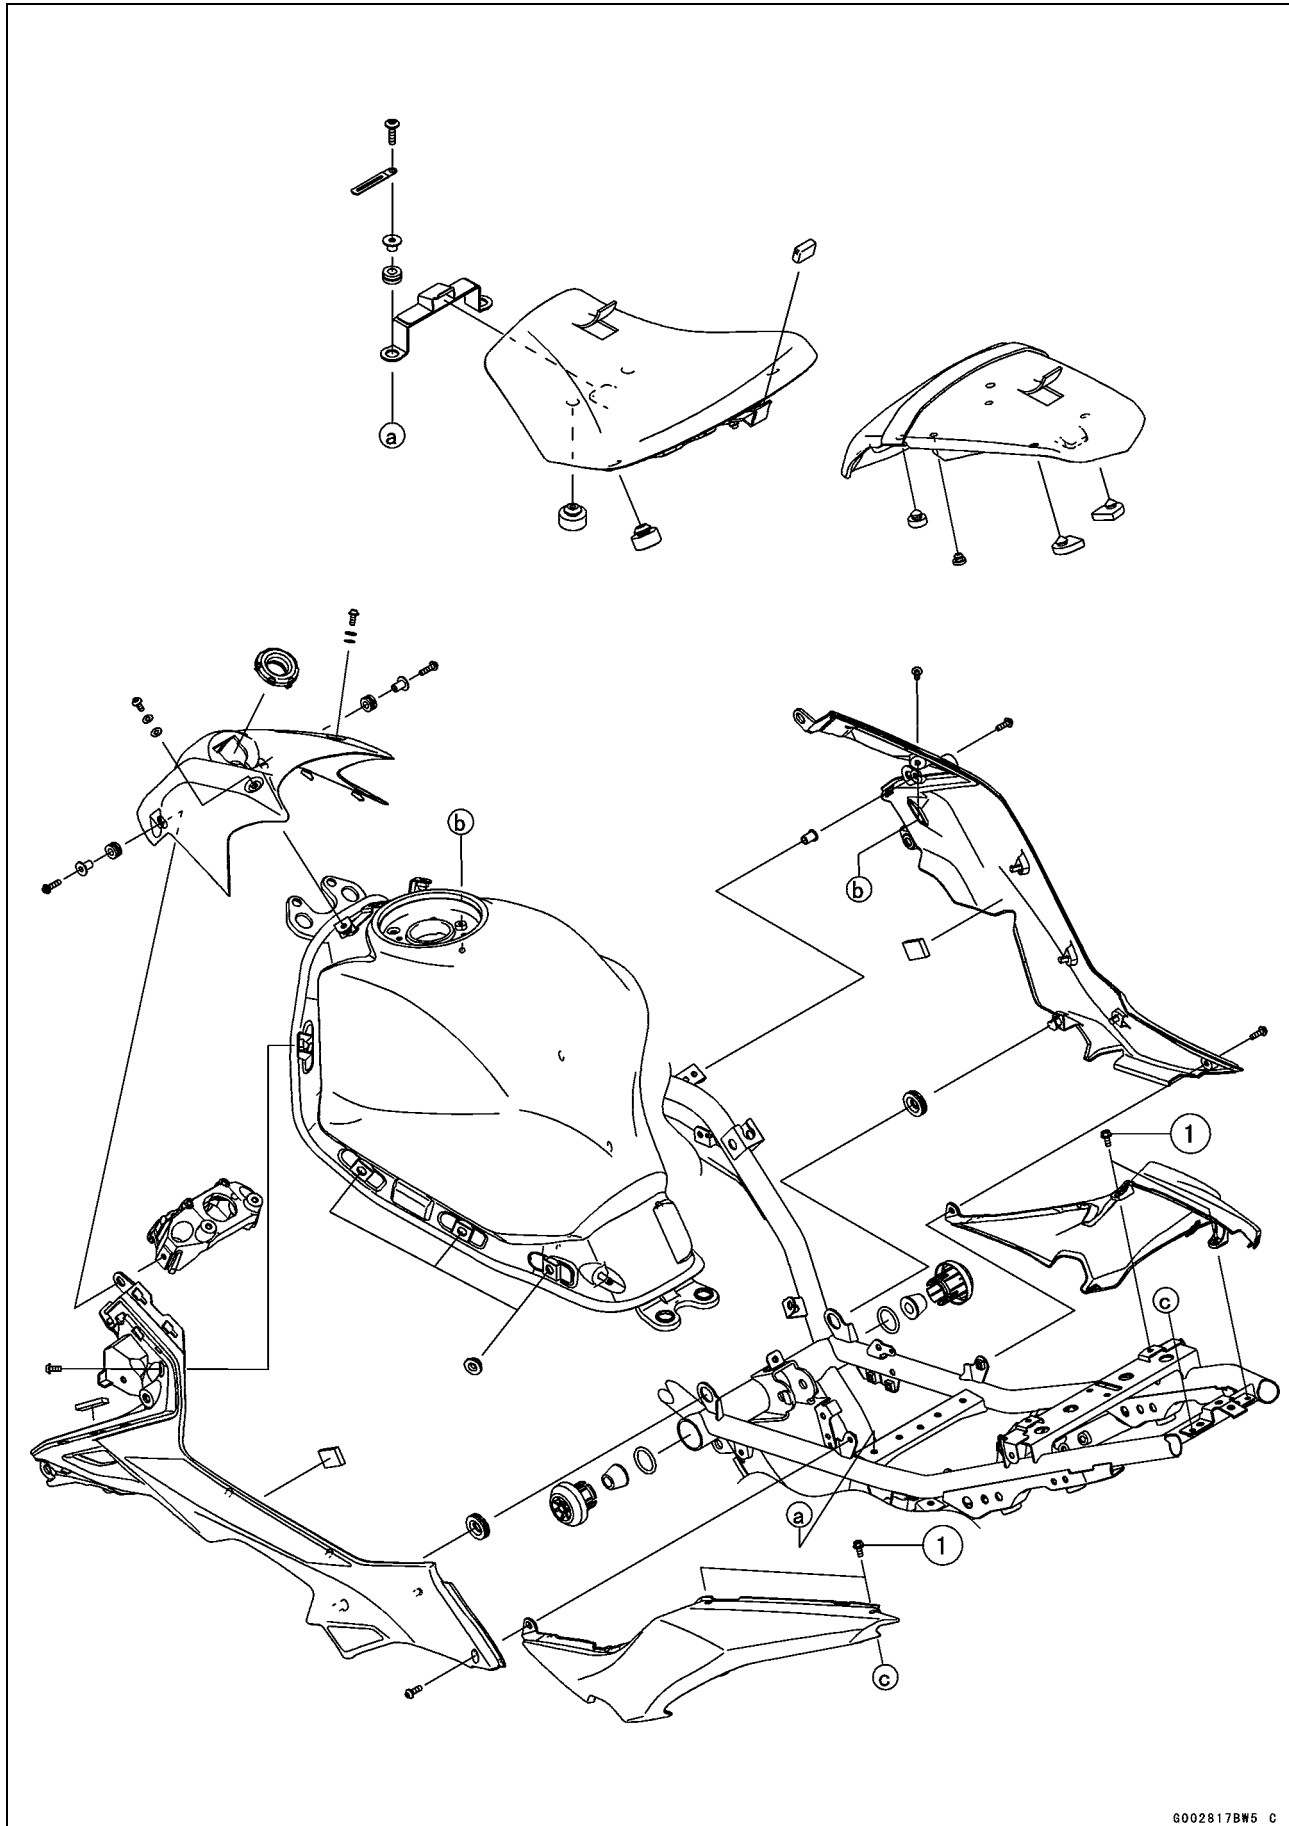


**Exploded View**

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Seat Cover Bolts	3.0	0.31	27 in·lb	

# 15-6 FRAME

## Exploded View

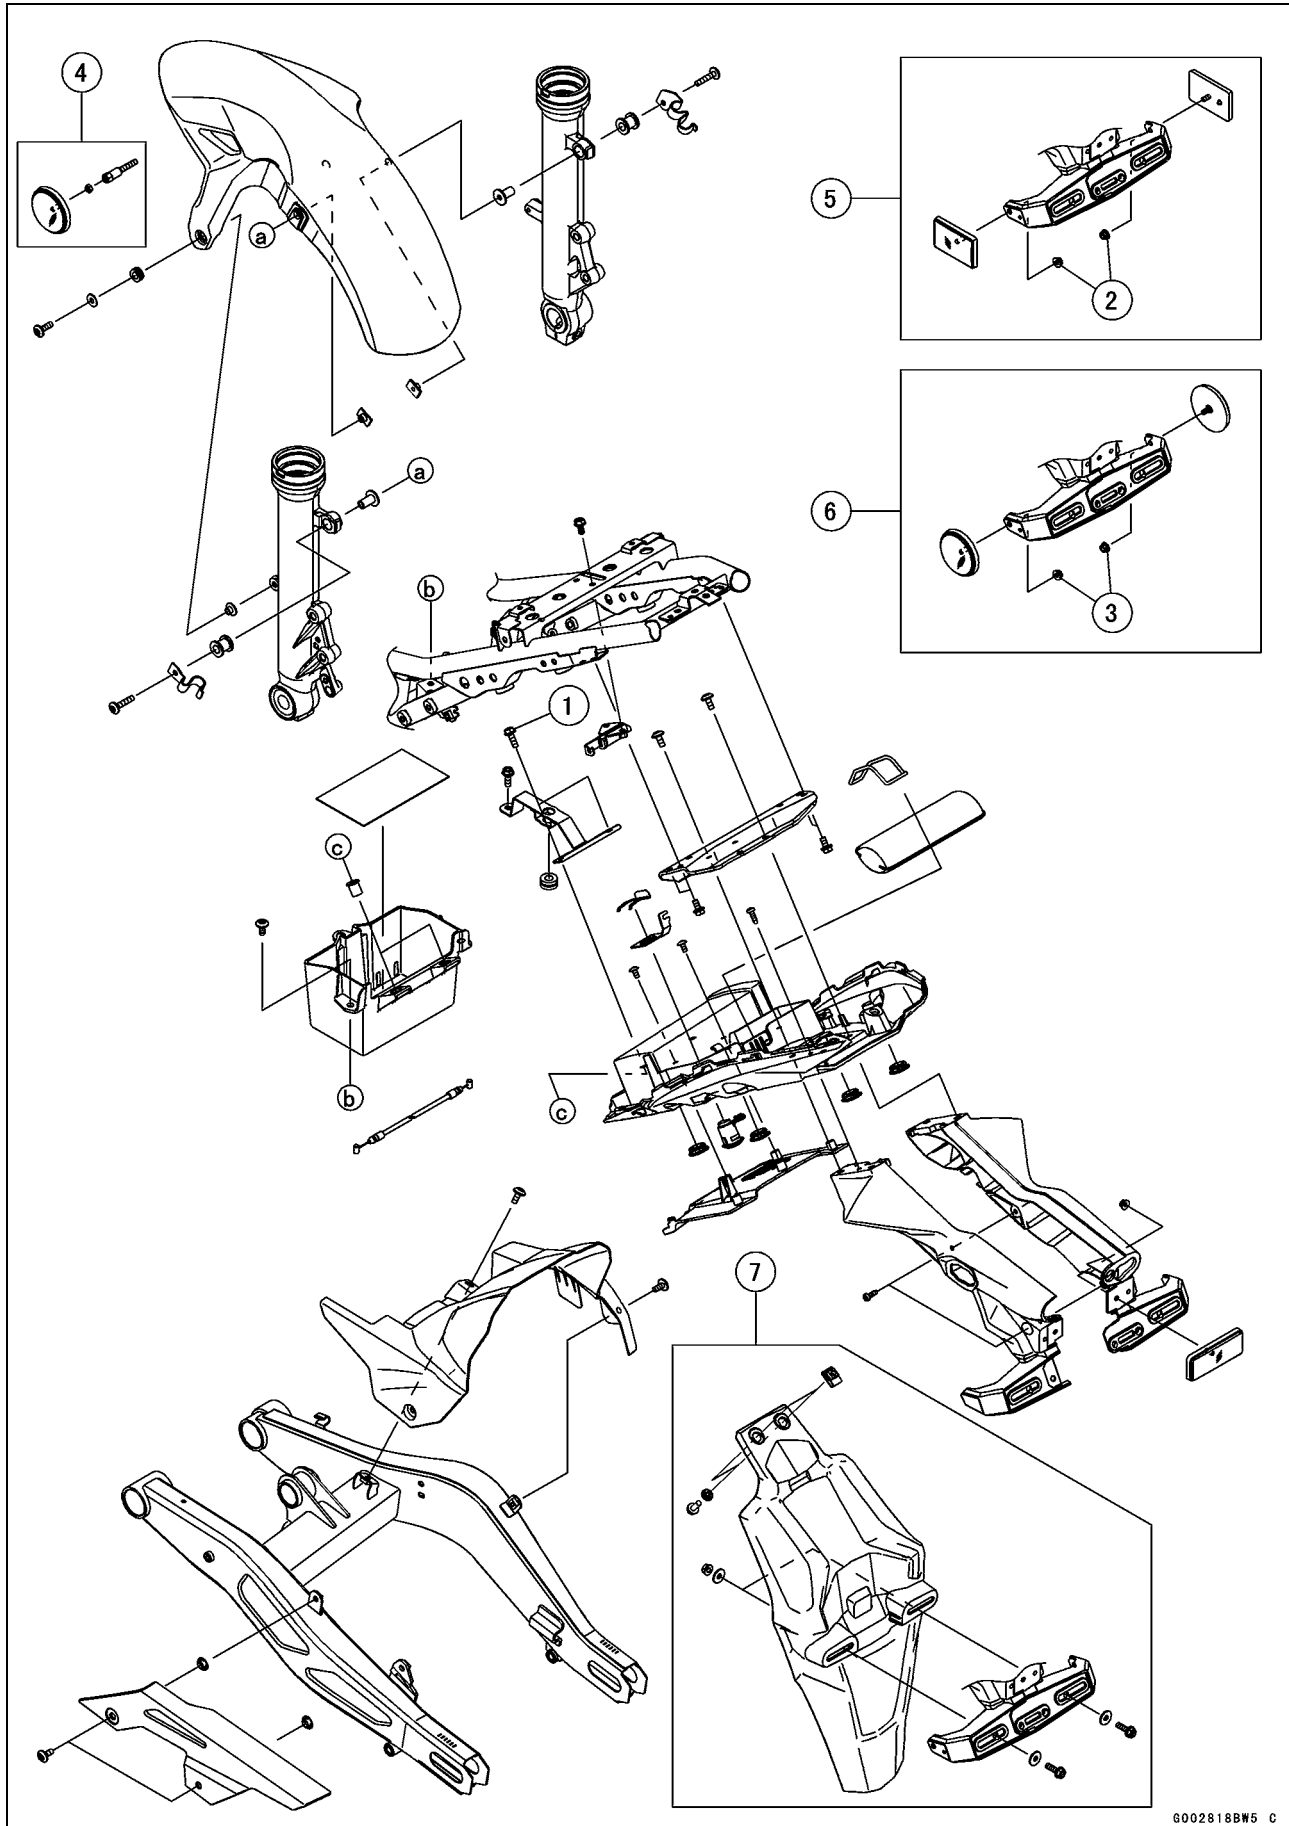

---

**Exploded View**


---

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Battery Holder Bolts, L = 18 mm (0.71 in.)	1.0	0.10	8.9 in·lb	
2	Rear Reflector Nuts	3.0	0.31	27 in·lb	
3	Rear Reflector Nuts (CN Model)	4.0	0.41	35 in·lb	

4. US, CA and CAL Models


5. US, CA, CAL, AU, AU LAMS, SEA-B1, MY and WVTA (FULL) Models

6. CN Model

7. SEA-B3, PH, MY, IN, TH, and CN Models

# 15-8 FRAME

## Exploded View

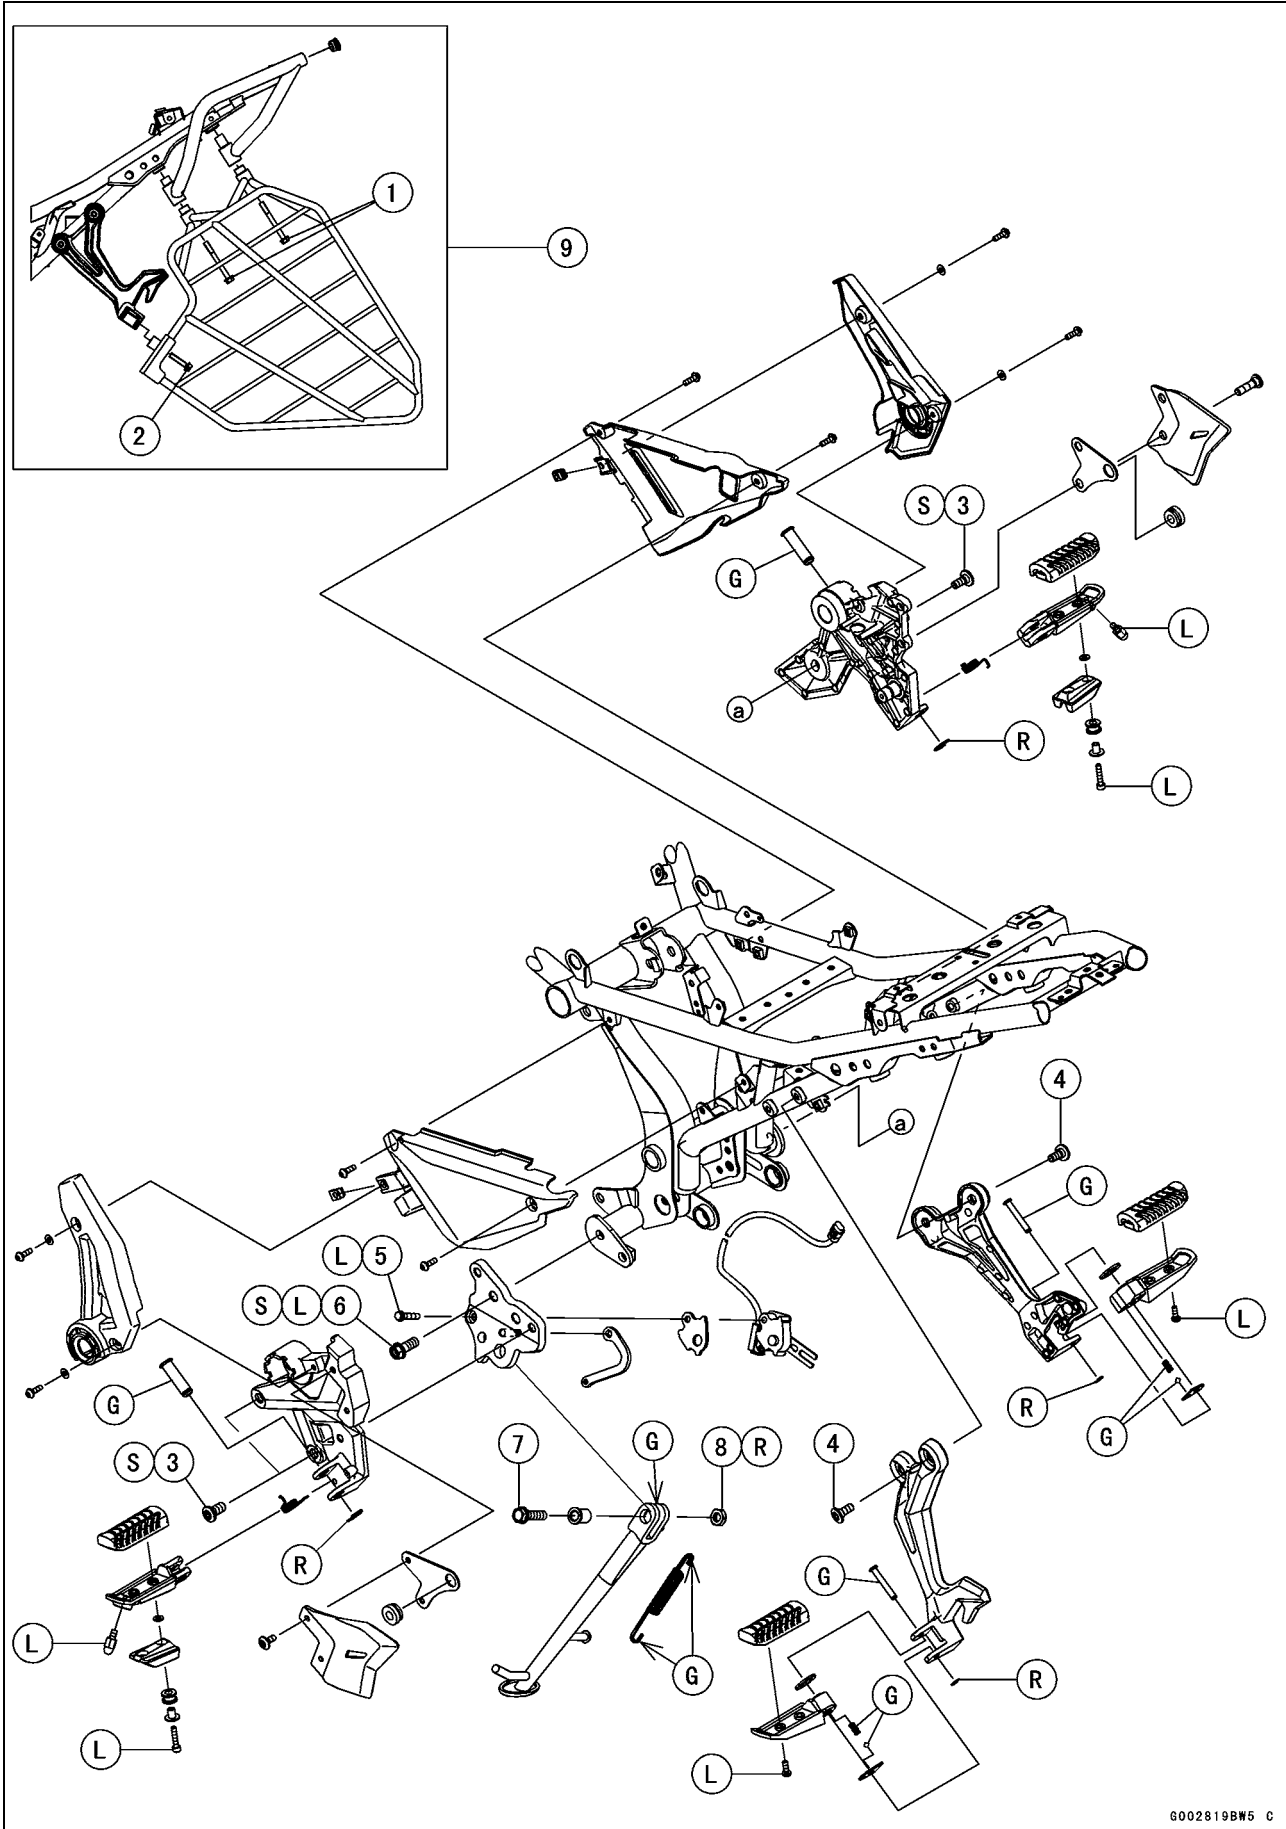



**Exploded View**

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Grab Rail Mounting Bolts	17	1.7	13	
2	Saree Guard Mounting Bolt	17	1.7	13	
3	Swingarm Bracket Bolts	25	2.5	18	S
4	Rear Footpeg Bracket Bolts	25	2.5	18	
5	Side Stand Switch Bolt	8.8	0.90	78 in·lb	L
6	Side Stand Bracket Bolts	49	5.0	36	L, S
7	Side Stand Bolt	29	3.0	21	
8	Side Stand Nut	44	4.5	32	R

9. IN Model

G: Apply grease.

L: Apply a non-permanent locking agent.

S: Follow the specified tightening sequence.


R: Replacement Parts

# 15-10 FRAME

## Seats


### **Rear Seat Removal**

- Insert the ignition switch key [A] into the seat lock.
- Turn the key clockwise, and pull up the front part of the rear seat [B].
- Remove the rear seat forward.

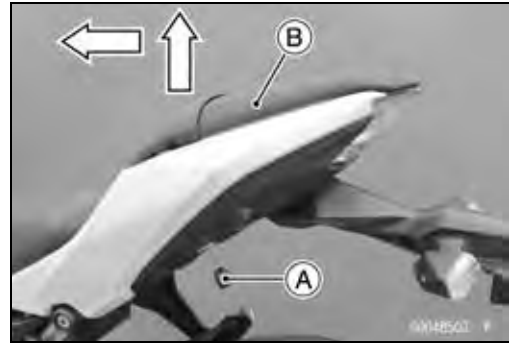


### **Rear Seat Installation**

- Insert the seat hook [A] into the frame hole [B].
- Push down the front part of the seat until the lock clicks.

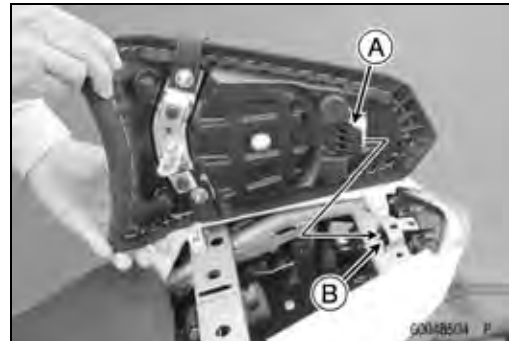


### **Front Seat Removal**

- Remove the rear seat (see Rear Seat Removal).
- Pull up the rear part of the front seat [A].
- Slide the front seat rearward [B] to remove it.

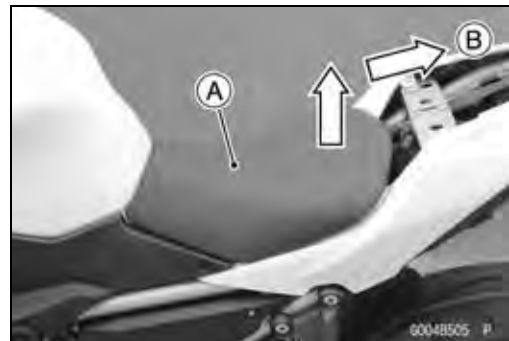

### **Front Seat Installation**

- Insert the front seat tab [A] under the front seat bracket [B].
- Position the damper [C] to the bracket [D] on the frame.

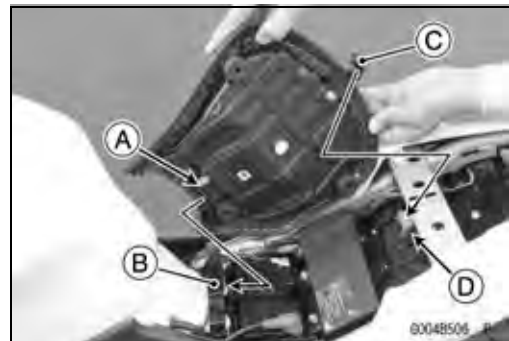


Fairings

**Middle Fairing Removal**

Hooks [A]

Slots [B]

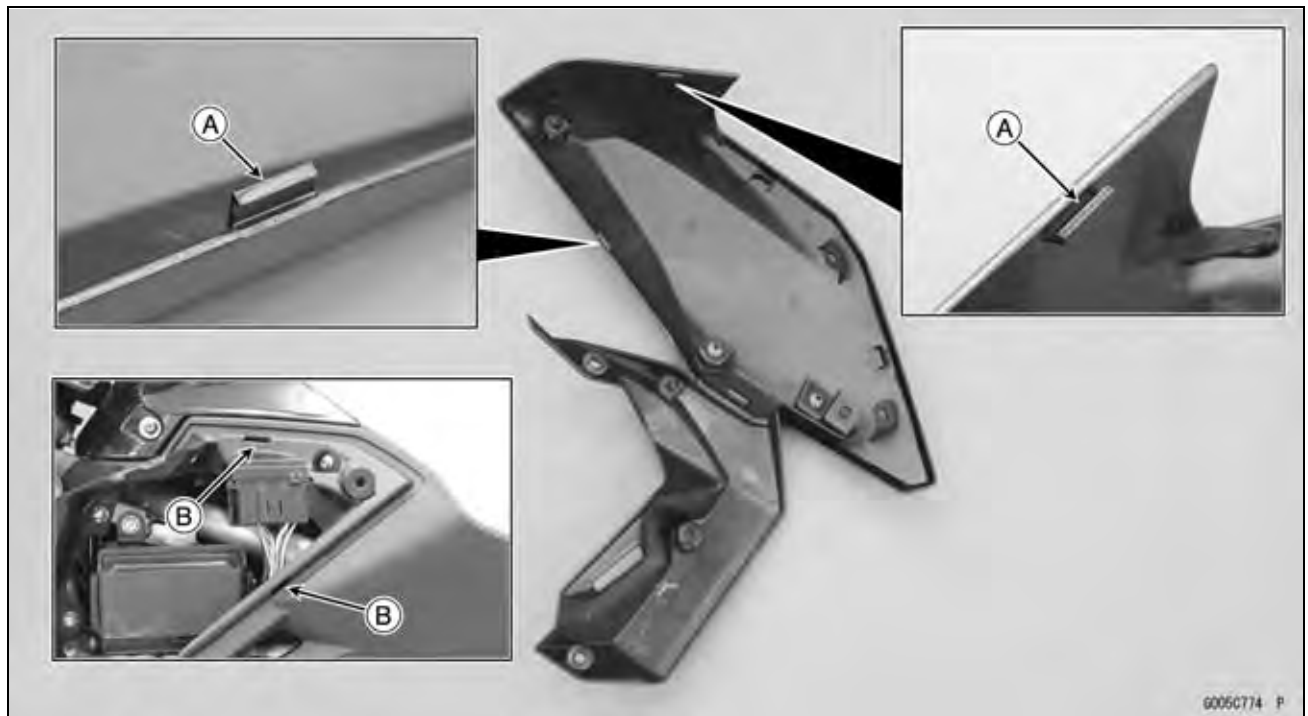


- Remove:  
Quick Rivets [A]



## 15-12 FRAME

### Fairings

- Remove:
  - Bolts [A]
- Pull out the middle fairing [B] outward to clear the hooks [C] and projections [D].

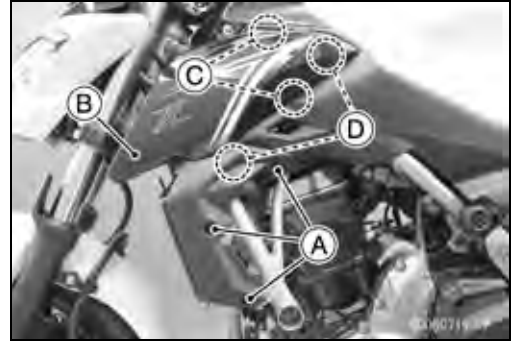


#### **Middle Fairing Installation**

- Installation is the reverse of removal.
- Check that the grommets [A] are in place on the fuel tank side cover.



- Install the middle fairing so that the projections [A] fit into the grommets [B].

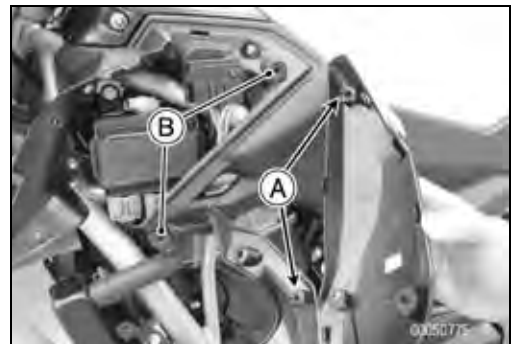


- Tighten:

**Torque - Middle Fairing Bolt, L = 16 mm (0.63 in.) [A]: 0.50 N-m (0.05 kgf-m, 4.4 in-lb)**



#### **Middle Fairing Disassembly**

- Remove:
  - Screws [A]
  - Outer Cover [B]
  - Radiator Cover [C]

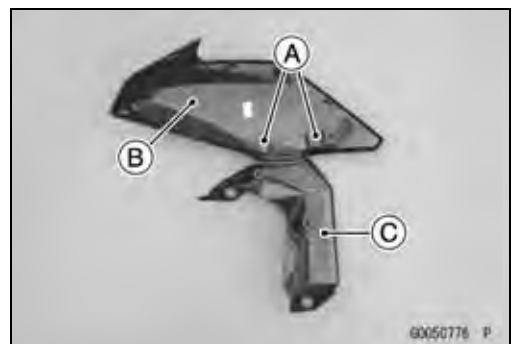


#### **Middle Fairing Assembly**

- Assembly is the reverse of disassembly.


**Fairings**

**Upper Fairing Removal**

- Hooks [A]
- Side Upper Fairing [B]

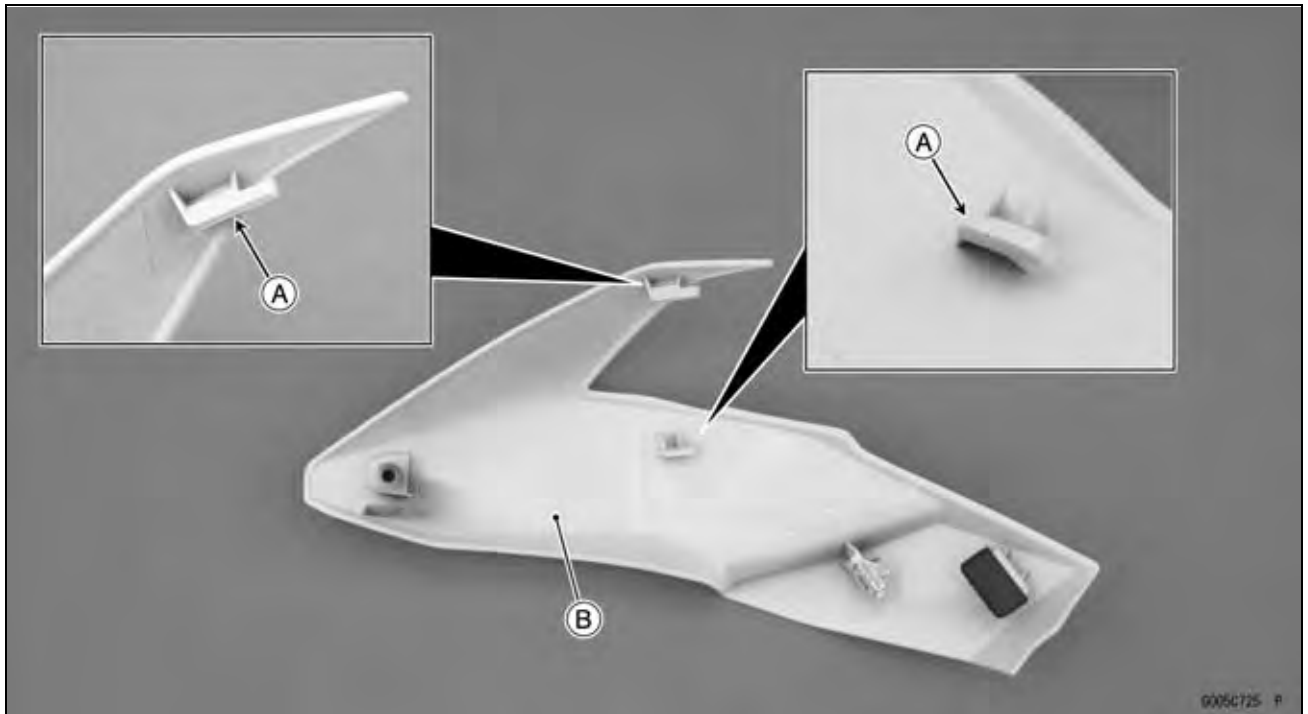


- Remove:
  - Headlight Unit Assy (see Headlight Unit Removal in the Electrical System chapter)
  - Screw [A]
- Slide the side upper fairing [B] to clear the hooks, and remove the side upper fairing.

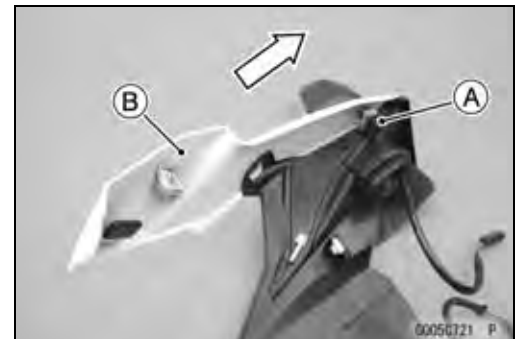


**Upper Fairing Installation**

- Installation is the reverse of removal.
- Insert the hooks [A] of the side upper fairing into the slits [B] on the center upper fairing.

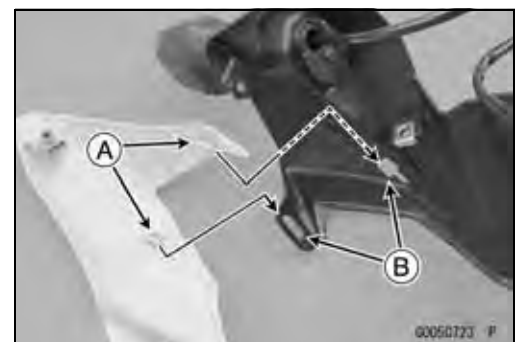

- Check that the dampers [A] and clip nuts [B] are in place on the upper fairing.

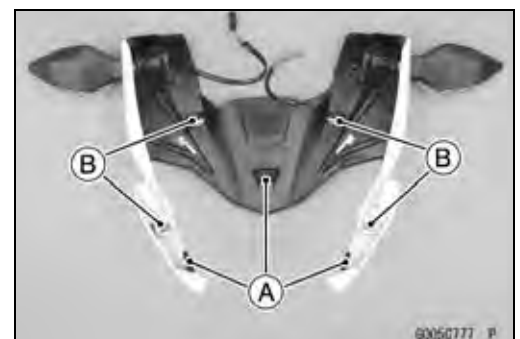


## 15-14 FRAME

### Covers

#### **Frame Cover Removal**

- Remove:
  - Bolts [A] and Washers
  - Frame Cover [B]

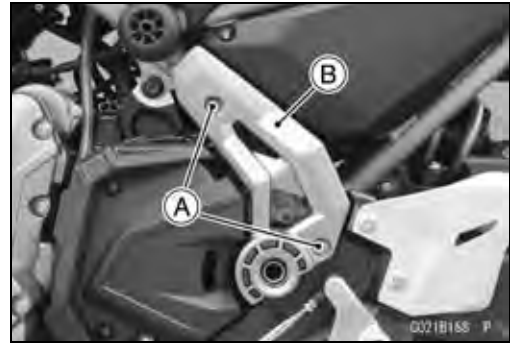


#### **Frame Cover Installation**

- Installation is the reverse of removal.

#### **Side Cover Removal**

- Remove:
  - Frame Cover (see Frame Cover Removal)
  - Bolts [A]
  - Side Cover [B]

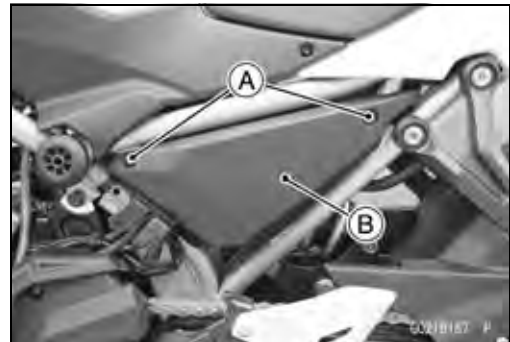


#### **Side Cover Installation**

- Installation is the reverse of removal.

#### **Inner Cover Removal**

- Remove:
  - Middle Fairing (see Middle Fairing Removal)
  - Bolts [A]
  - Inner Cover [B]

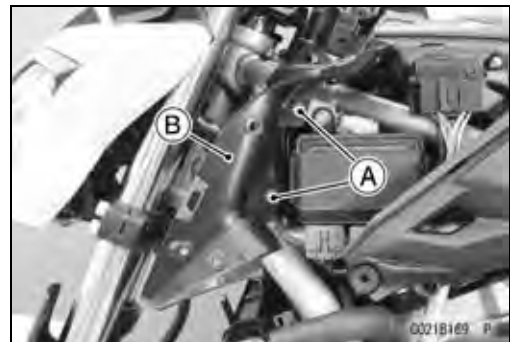

#### **Inner Cover Installation**


- Installation is the reverse of removal.

**Covers**


**Ignition Switch Cover Removal**

Hooks [A]

Ignition Switch Cover [B]

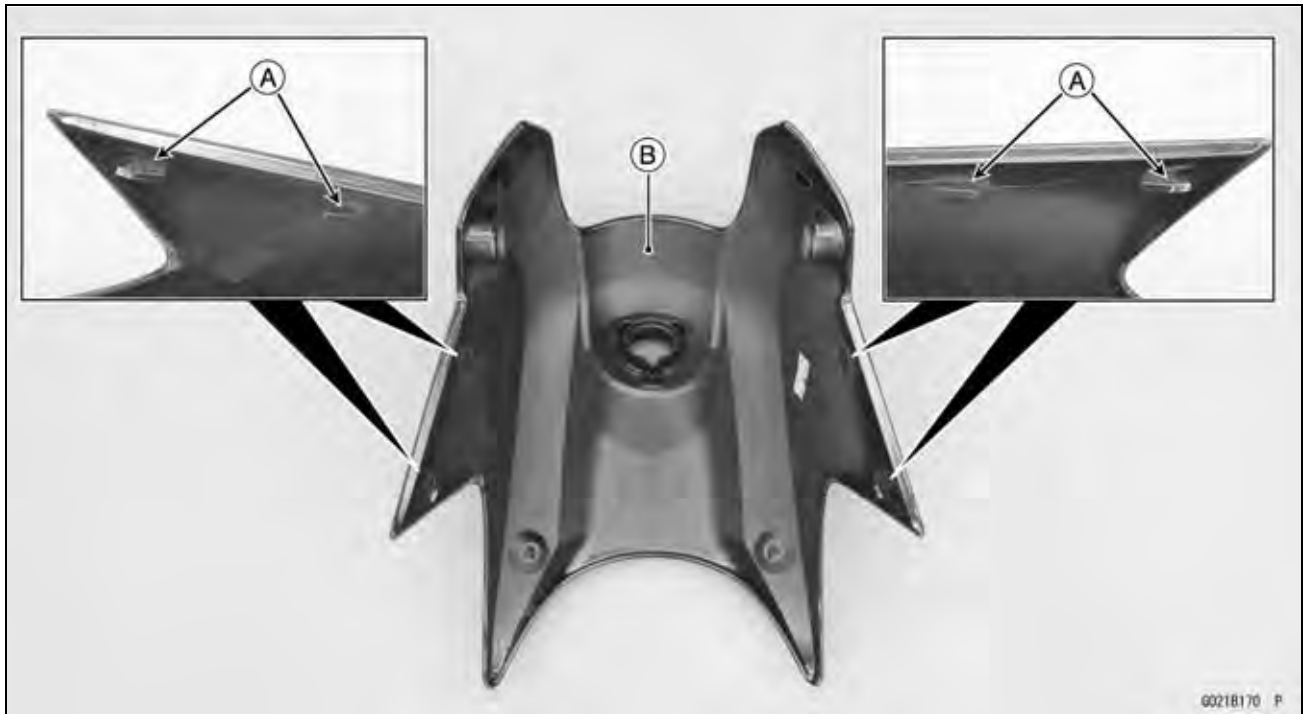


- Remove:
  - Bolt [A] and Collar [B] (Both Sides)
  - Bolt [C], Washer and Plastic Washer (Both Sides)
- Slide the ignition switch cover [D] forward to clear the hooks, and remove it.

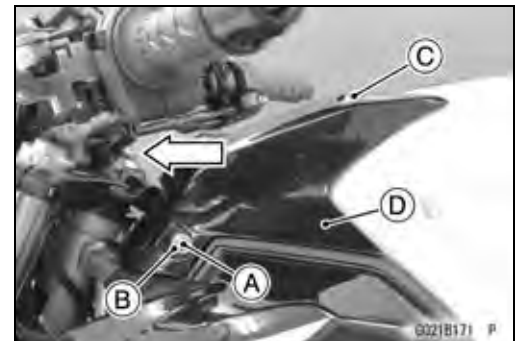

**Ignition Switch Cover Installation**

- Installation is the reverse of removal.
- Insert the hooks [A] of the ignition switch cover into the slits [B] on the fuel tank side cover.


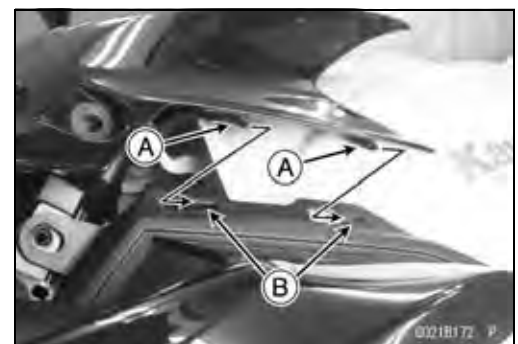


## 15-16 FRAME

### Covers


#### **Fuel Tank Side Cover Removal**

- Remove:
  - Front Seat (see Front Seat Removal)
  - Middle Fairing (see Middle Fairing Removal)
  - Fuse Box [A]
  - Bolts [B]
  - Left Side [C]
  - Right Side [D]
- Pull out the fuel tank side cover [E] outward to clear the projections [F], and remove it.

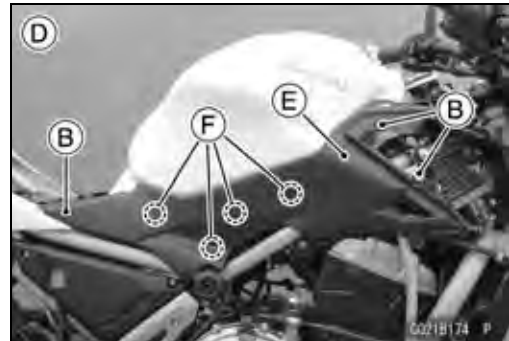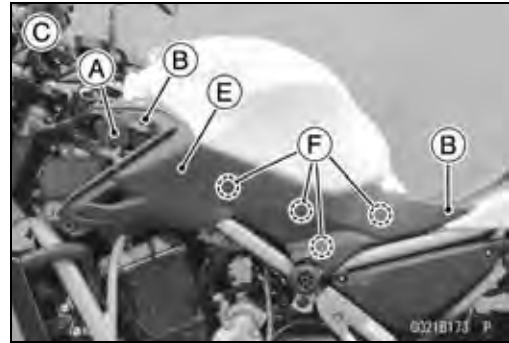

#### **Fuel Tank Side Cover Installation**

- Installation is the reverse of removal.
  - Check that the grommets [A] are in place on the fuel tank and frame.
- 
- Install the fuel tank side cover [A] so that the projections [B] fit into the grommets.

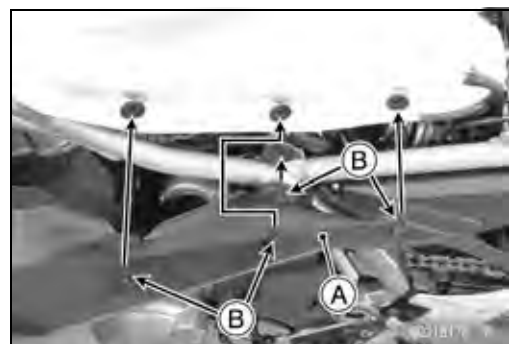




Covers


**Seat Cover Removal**

Tab [A]


Hooks [B]

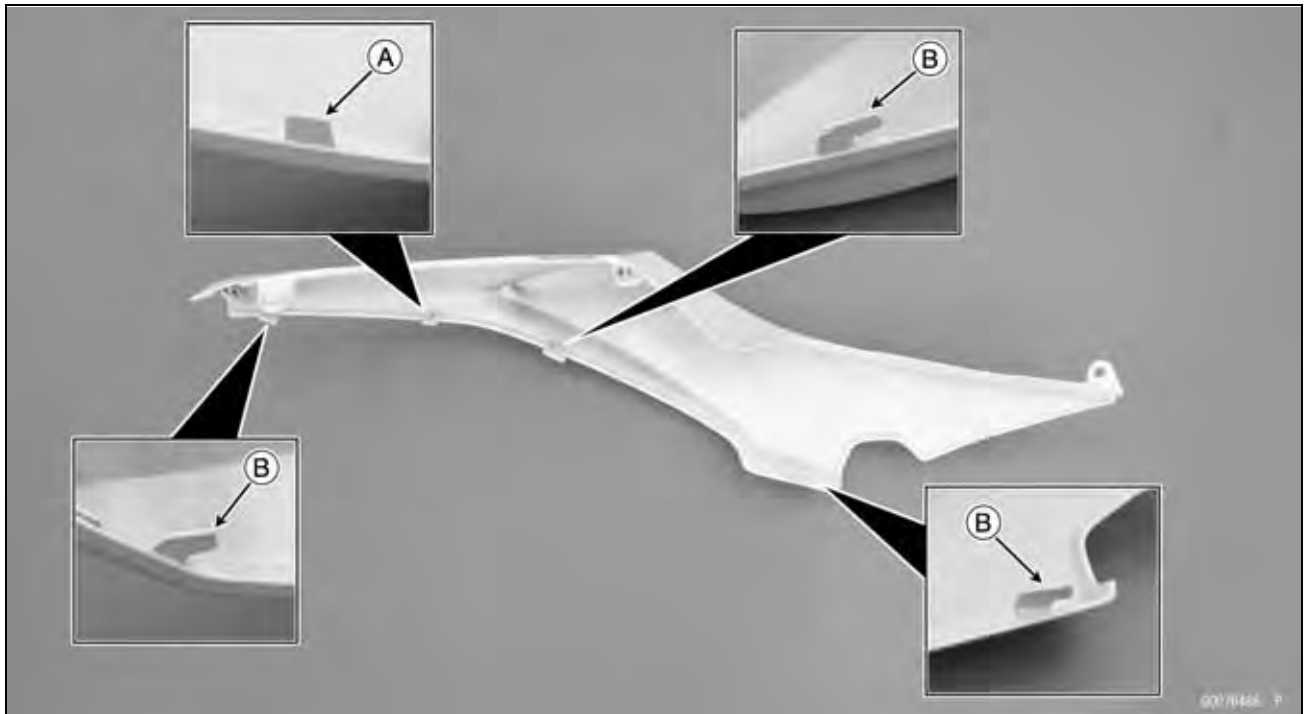

- Remove:  
Front Seat (see Front Seat Removal)  
Seat Cover Bolts [A]

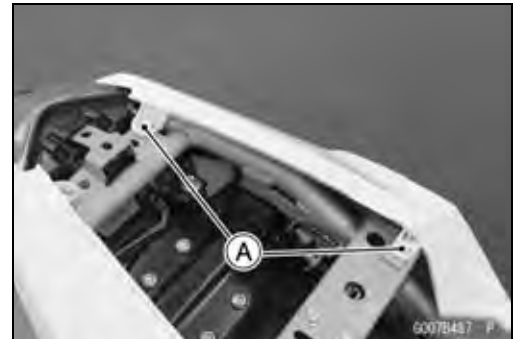

- Remove:  
Bolt [A]
- Pull out the seat cover [B] rearward to clear the hooks [C] and tab [D], and remove it.

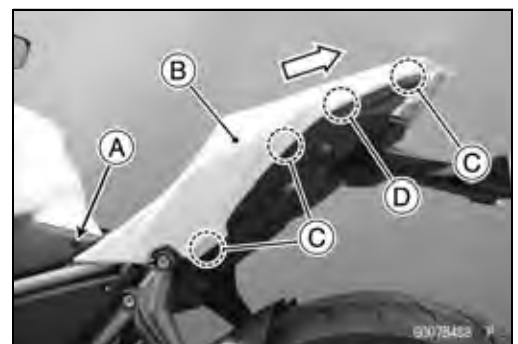


## 15-18 FRAME


### Covers

#### ***Seat Cover Installation***

- Installation is the reverse of removal.
- Insert the hooks [A] and tab [B] of the seat cover into the slits [C] on the rear fender.

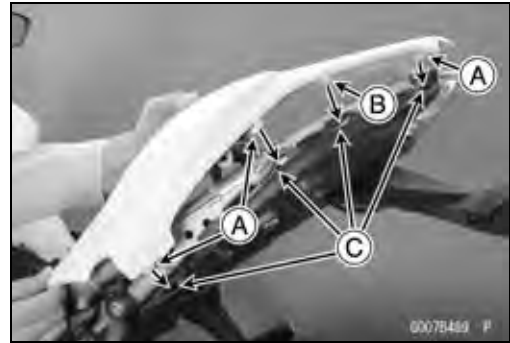


- Tighten:  
Torque - Seat Cover Bolts [A]: 3.0 N·m (0.31 kgf·m, 27 in·lb)

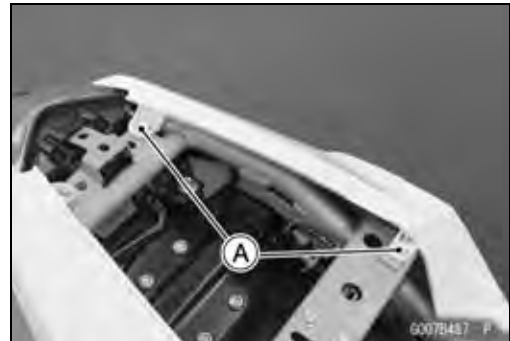

## Fenders


### Front Fender Removal

- Remove:
  - Bolt [A] and Washer (Both Sides)
  - Bolt [B] (Both Sides)
  - Front Fender [C]

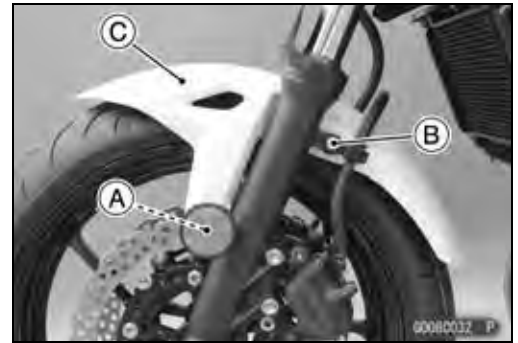


### Front Fender Installation

- Install the front fender [A] together with the brake hose clamp [B] on both sides.

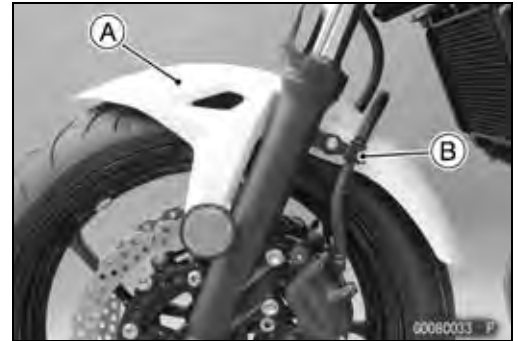


### Rear Fender Removal


- Remove:
  - Seat Cover (see Seat Cover Removal)
  - Tail/Brake Light (LED) Unit (see Tail/Brake Light (LED) Unit Removal in the Electrical System chapter)
  - Bolts [A]
  - Clamps [B]
  - Bracket [C]

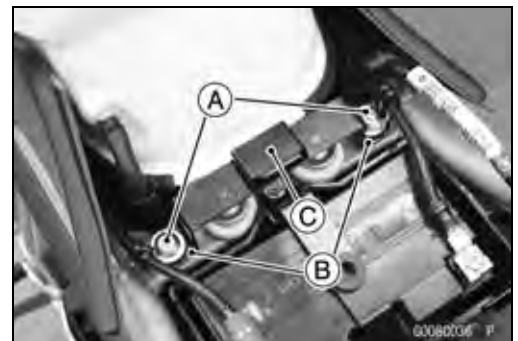

- Remove:
  - Bolts [A]
  - Bracket [B]

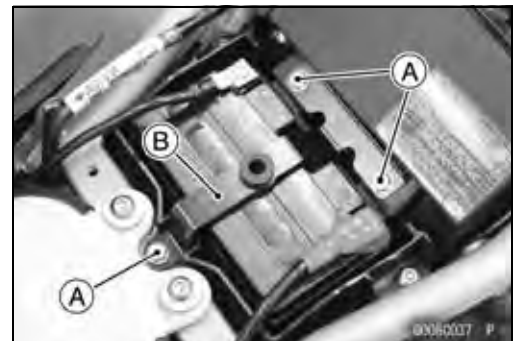


- Remove:
  - Screws [A]

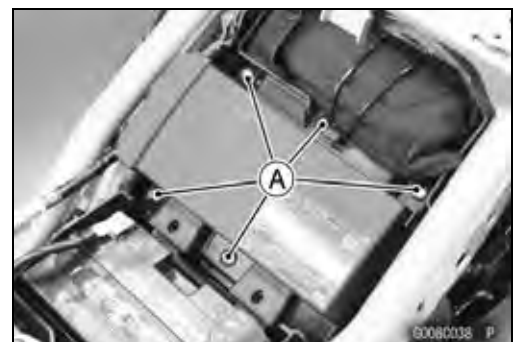

## 15-20 FRAME

### Fenders


- Clear the tab [A] on the cover [B] from the rear fender [C], and remove the cover.

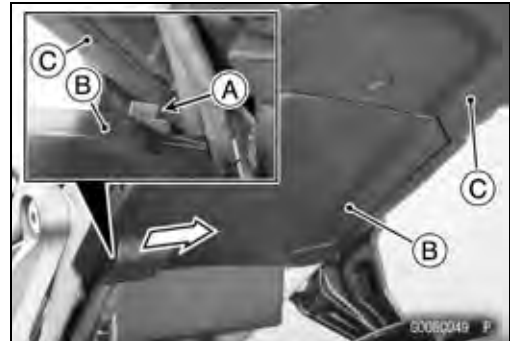



- Remove:  
Canister [A] (Evaporative Emission Control System Equipped Models)



- Disconnect:  
License Plate Light Lead Connector [A]  
Turn Signal Light Lead Connectors [B]

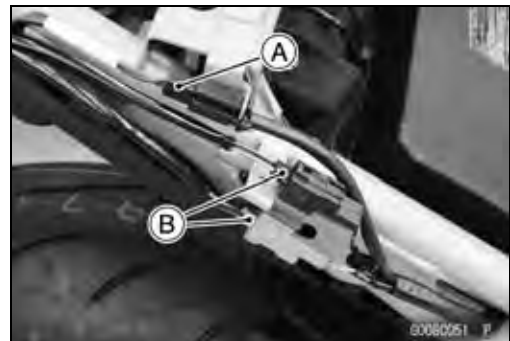


- Remove:  
Bolts [A]  
Kawasaki Diagnostic System connector [B]  
ABS Kawasaki Diagnostic System connector (ABS Equipped models)
- Clear the seat lock cable [C] from the guide [D] on the frame.
- Remove the bolts [E], and remove the rear fender [F] together with the flap.

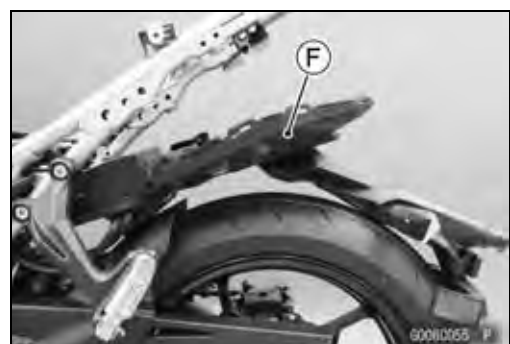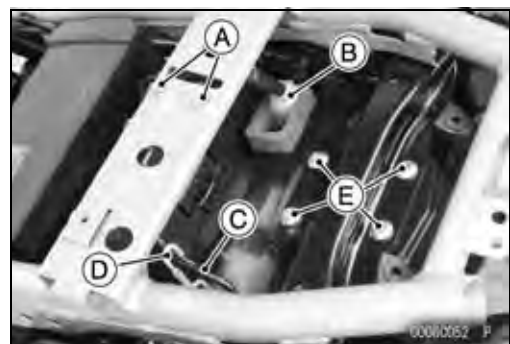

## Fenders


### Rear Fender Installation

- Installation is the reverse of removal.
- Tighten:
  - Torque - Battery Holder Bolts, L = 18 mm (0.71 in.) [A]: 1.0 N·m (0.10 kgf·m, 8.9 in·lb)
- Run the leads correctly (see Cable, Wire, and Hose Routing section in the Appendix chapter).

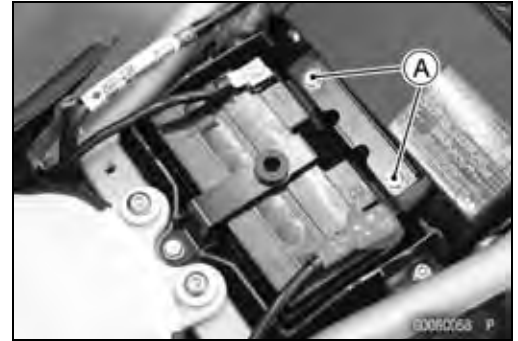


### Flap Removal

- Remove the rear fender (see Rear Fender Removal).
- Clear the license plate light and turn signal light leads [A] from the clamp [B].
- Remove:
  - Screw [C]
- Remove the flap [D] together with the reinforce.

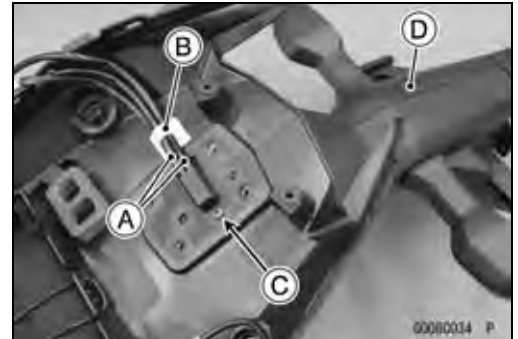

### Flap Installation

- Installation is the reverse of removal.
- Install the flap [A] so that the projections [B] fit into the holes [C] on the rear fender.
- Run the leads correctly (see Cable, Wire, and Hose Routing section in the Appendix chapter).

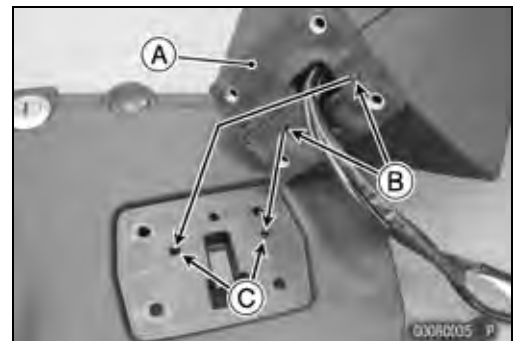

## 15-22 FRAME

---

### Frame

---

#### ***Frame Inspection***

- Visually inspect the frame for cracks, dents, bending or warp.
- ★ If there is any damage to the frame, replace it.

<b> WARNING</b>
--

<b>A repaired frame may fail in use, possibly causing an accident resulting in injury or death. If the frame is bent, dented, cracked, or warped, replace it.</b>
---


---

## Battery Case

---

### ***Battery Case Removal***

- Remove:
  - Rear Fender (see Rear Fender Removal)
  - Battery (see Battery Removal in the Electrical System chapter)
  - Bolts [A]
  - Battery Case [B]

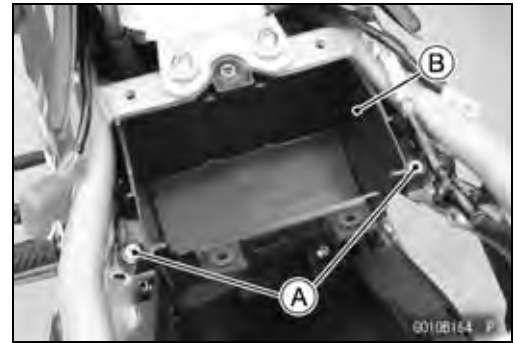

### ***Battery Case Installation***


- Installation is the reverse of removal.

## 15-24 FRAME

### Guard

#### ***Mud Guard Removal***

- Remove:
  - Bolts [A]
  - Mud Guard [B]
- Remove the following parts if necessary.
  - Bolt [C]
  - Chain Cover [D]

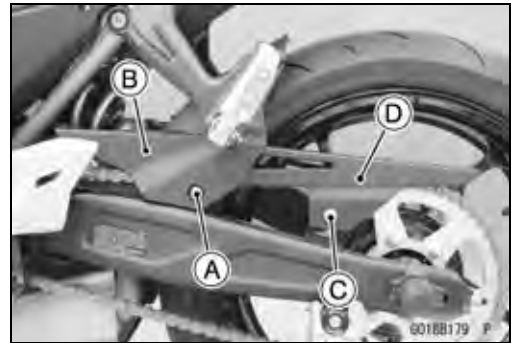

#### ***Mud Guard Installation***

- Installation is the reverse of removal.




## Side Stand

### Side Stand Removal


- Raise the rear wheel off the ground using a stand [A].



- Remove the side stand switch bolt [A] and plate [B] to free the side stand switch [C].

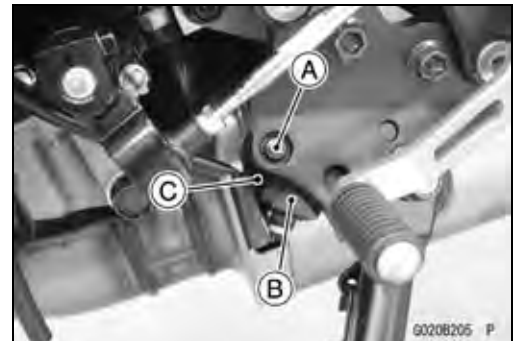


- Remove:
  - Spring [A]
  - Side Stand Nut [B]
  - Side Stand Bolt [C]
  - Collar [D]
  - Side Stand [E]

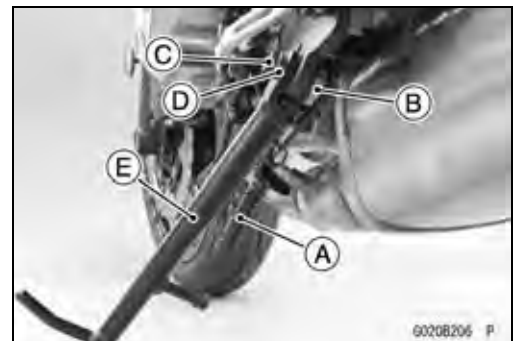


- ★ If the side stand bracket removal is necessary, follow the below procedures.

- Remove the shift lever bolt [A].
- Take the shift lever [B] off the shift shaft.

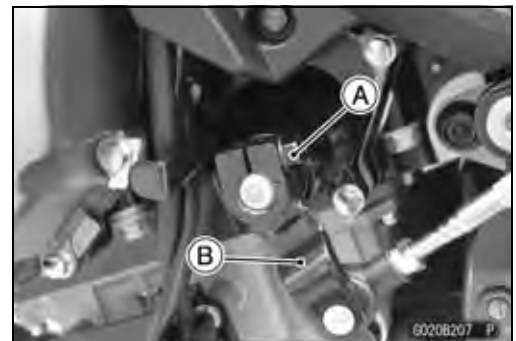

- Remove:
  - Swingarm Bracket Bolts [A]
  - Side Stand Bracket Bolt [B]
  - Side Stand Bracket [C]
  - Link Arm [D]

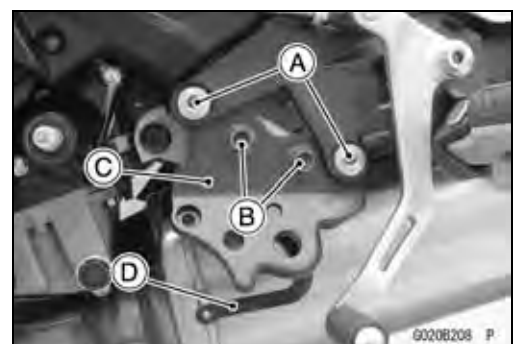


# 15-26 FRAME


## Side Stand

### Side Stand Installation


- Apply a non-permanent locking agent to the side stand bracket bolts.
- Apply grease to the side stand bracket [A] as shown. Outside of the Vehicle [B]

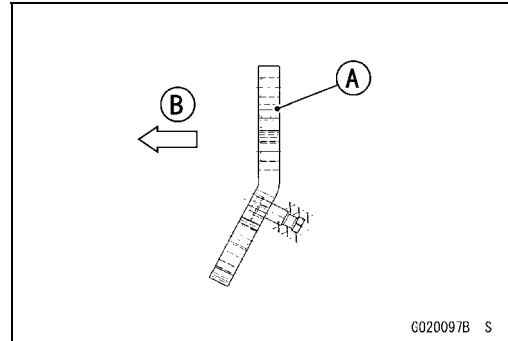

- Install the side stand bracket [A] to the frame.
- Tighten:
  - Torque - Side Stand Bracket Bolts [B]: 49 N-m (5.0 kgf-m, 36 ft-lb)**
  - Swingarm Bracket Bolts [C]: 25 N-m (2.5 kgf-m, 18 ft-lb)**

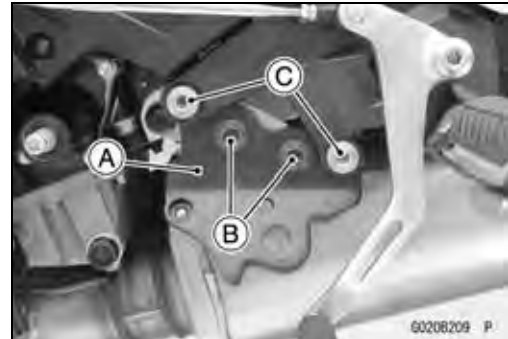


- Apply grease to sliding areas [A] of the side stand [B], link arm [C] and spring [D] as shown.

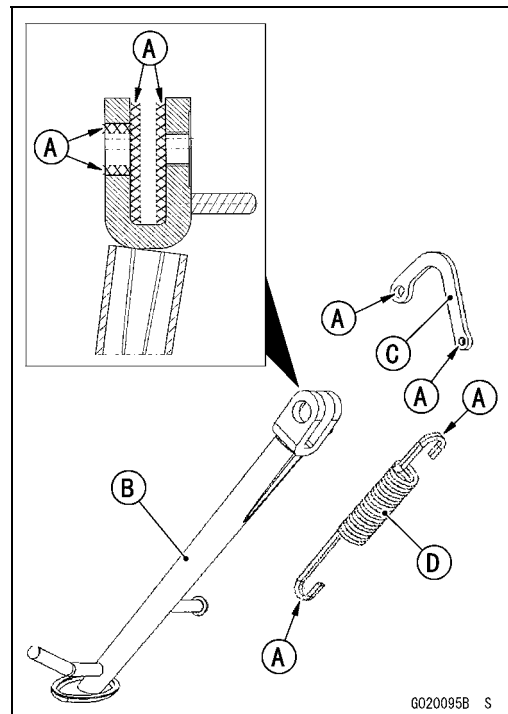

## Side Stand

- Install:
  - Side Stand [A]
  - Collar [B]
  - Side Stand Bolt [C]
- Tighten:
  - Torque - Side Stand Bolt: 29 N·m (3.0 kgf·m, 21 ft·lb)**
- Replace the side stand nut [D] with a new one.
- Tighten:
  - Torque - Side Stand Nut: 44 N·m (4.5 kgf·m, 32 ft·lb)**
- Face the flat side of the side stand nut to outside.
- Install the link arm [E] and the spring [F].
- Check that the spring ends fit to the groove of the installation portion.
- Install the plate [G] and side stand switch [H]
- Insert the side stand switch arm [I] to the pin on the side stand.
- Apply a non-permanent locking agent to the side stand switch bolt [J], and tighten it.
  - Torque - Side Stand Switch Bolt: 8.8 N·m (0.90 kgf·m, 78 in·lb)**

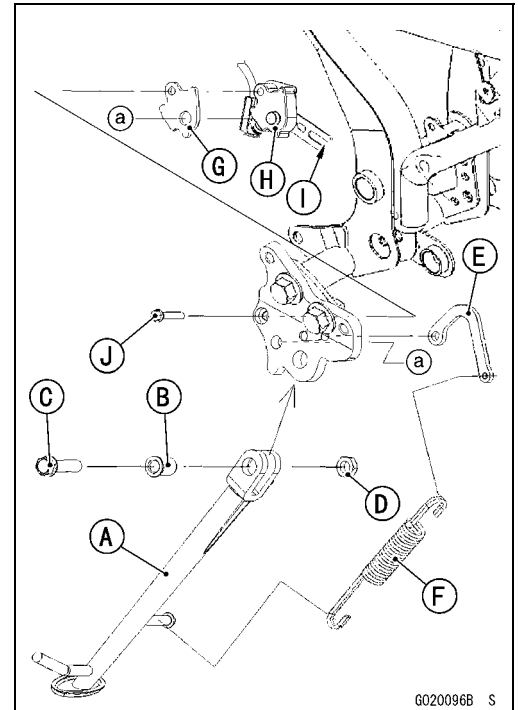


## 15-28 FRAME

### Rear View Mirrors


#### **Rear View Mirror Removal**

- Slide out the dust cover [A].
- Loosen the lower hexagonal area [B], and remove the rear view mirror [C] from the holder.
- The upper hexagonal area has left-hand threads.

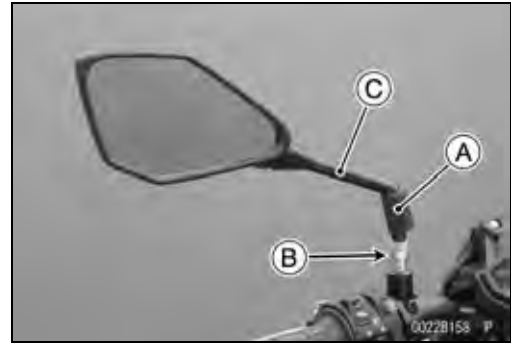

#### **Rear View Mirror Installation**

- Screw the lower hexagonal area [A] of the rear view mirror into the holder all the way, and tighten the lower hexagonal area securely.
- Turn the stay [B] to assure the safe conditions of the rear with the rider sitting on the motorcycle by loosening the upper hexagonal area [C] clockwise.
- The upper hexagonal area has left-hand threads.
- While holding the lower hexagonal area, tighten the upper hexagonal area (locknut).
- Install the dust cover [D].
- Adjust the rear view mirror [E] by slightly moving only the mirror portion of the assembly.
- Installation and adjustment of the right side mirror is common with the left side. Follow the procedure specified for the left side.

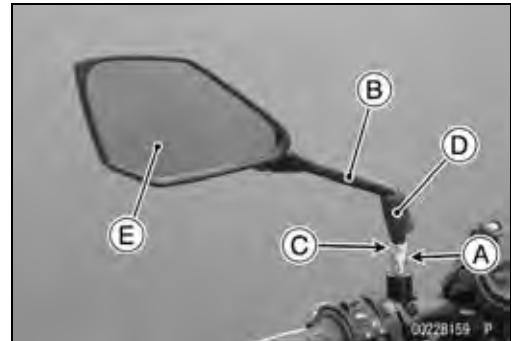

# Electrical System

## Table of Contents

Exploded View.....	16-4
Specifications .....	16-10
Special Tools and Sealant .....	16-11
Parts Location.....	16-12
Wiring Diagram (ER650G).....	16-14
Wiring Diagram (ER650H).....	16-16
Precautions.....	16-18
Electrical Wiring.....	16-19
Wiring Inspection .....	16-19
Battery .....	16-20
Battery Removal .....	16-20
Battery Installation .....	16-20
Battery Activation .....	16-21
Precautions .....	16-23
Interchange .....	16-24
Charging Condition Inspection.....	16-24
Refreshing Charge.....	16-24
Charging System .....	16-26
Alternator Cover Removal.....	16-26
Alternator Cover Installation.....	16-26
Stator Coil Removal .....	16-27
Stator Coil Installation .....	16-28
Alternator Rotor Removal .....	16-28
Alternator Rotor Installation .....	16-29
Charging Voltage Inspection .....	16-31
Alternator Inspection .....	16-31
Regulator/Rectifier Removal .....	16-33
Regulator/Rectifier Installation .....	16-33
Regulator/Rectifier Inspection.....	16-33
Ignition System .....	16-36
Crankshaft Sensor Removal .....	16-36
Crankshaft Sensor Installation .....	16-37
Crankshaft Sensor Inspection.....	16-37
Crankshaft Sensor Peak Voltage Inspection.....	16-38
Timing Rotor Removal .....	16-38
Timing Rotor Installation .....	16-38
Stick Coil Removal.....	16-39
Stick Coil Installation.....	16-39
Stick Coil Inspection.....	16-39
Stick Coil Primary Peak Voltage Inspection .....	16-39
Spark Plug Removal .....	16-40
Spark Plug Installation .....	16-40
Spark Plug Condition Inspection.....	16-41
Interlock Operation Inspection .....	16-41
IC Igniter Inspection .....	16-42
Electric Starter System .....	16-45
Starter Motor Removal.....	16-45
Starter Motor Installation.....	16-45
Starter Motor Disassembly.....	16-46
Starter Motor Assembly .....	16-47

## 16-2 ELECTRICAL SYSTEM

---


Brush Inspection .....	16-48
Commutator Cleaning and Inspection.....	16-49
Armature Inspection.....	16-49
Brush Lead Inspection .....	16-49
Right-hand End Cover Inspection .....	16-49
Starter Relay Inspection.....	16-50
Lighting System .....	16-52
Headlight Beam Horizontal Adjustment .....	16-52
Headlight Beam Vertical Adjustment.....	16-52
Headlight Bulb Replacement .....	16-52
Headlight Unit Removal .....	16-53
Headlight Unit Installation .....	16-55
City Light Bulb Replacement.....	16-55
Tail/Brake Light (LED) Unit Removal .....	16-56
Tail/Brake Light (LED) Unit Installation .....	16-56
License Plate Light Bulb Replacement .....	16-57
Turn Signal Light Bulb Replacement .....	16-58
Turn Signal Relay Inspection .....	16-59
Switches and Sensors .....	16-62
Brake Light Timing Inspection.....	16-62
Brake Light Timing Adjustment .....	16-62
Switch Inspection .....	16-62
Water Temperature Sensor Removal/Installation .....	16-62
Water Temperature Sensor Inspection .....	16-63
Rear Wheel Rotation Sensor Removal .....	16-63
Rear Wheel Rotation Sensor Installation.....	16-63
Rear Wheel Rotation Sensor Inspection.....	16-63
Fuel Level Sensor Inspection.....	16-63
Oxygen Sensor Removal.....	16-64
Oxygen Sensor Installation .....	16-64
Oxygen Sensor Inspection.....	16-65
Gear Position Sensor Removal.....	16-65
Gear Position Sensor Installation.....	16-66
Gear Position Sensor Inspection .....	16-66
Air Switching Valve .....	16-67
Air Switching Valve Operation Test .....	16-67
Air Switching Valve Unit Test .....	16-67
Radiator Fan System.....	16-69
Fan Motor Removal .....	16-69
Fan Motor Installation .....	16-69
Fan Motor Inspection .....	16-69
Meter, Gauge, Indicator Unit.....	16-70
Meter Unit Removal .....	16-70
Meter Unit Installation .....	16-70
Meter Unit Disassembly/Assembly .....	16-70
Meter Operation Inspection.....	16-71
Meter System Inspection .....	16-73
Meter Unit Inspection .....	16-74
Fuel Level Sensor Line Self-Diagnosis Mode Inspection.....	16-81
Relay Box .....	16-84
Relay Box Removal .....	16-84
Relay Box Installation .....	16-84
Relay Circuit Inspection .....	16-84
Diode Circuit Inspection .....	16-85
Fuses.....	16-87
Main Fuse (30 A) Removal .....	16-87
Fuse Box Fuse Removal.....	16-87

---

Fuse Installation.....	16-87
Fuse Inspection.....	16-88

# 16-4 ELECTRICAL SYSTEM

## Exploded View

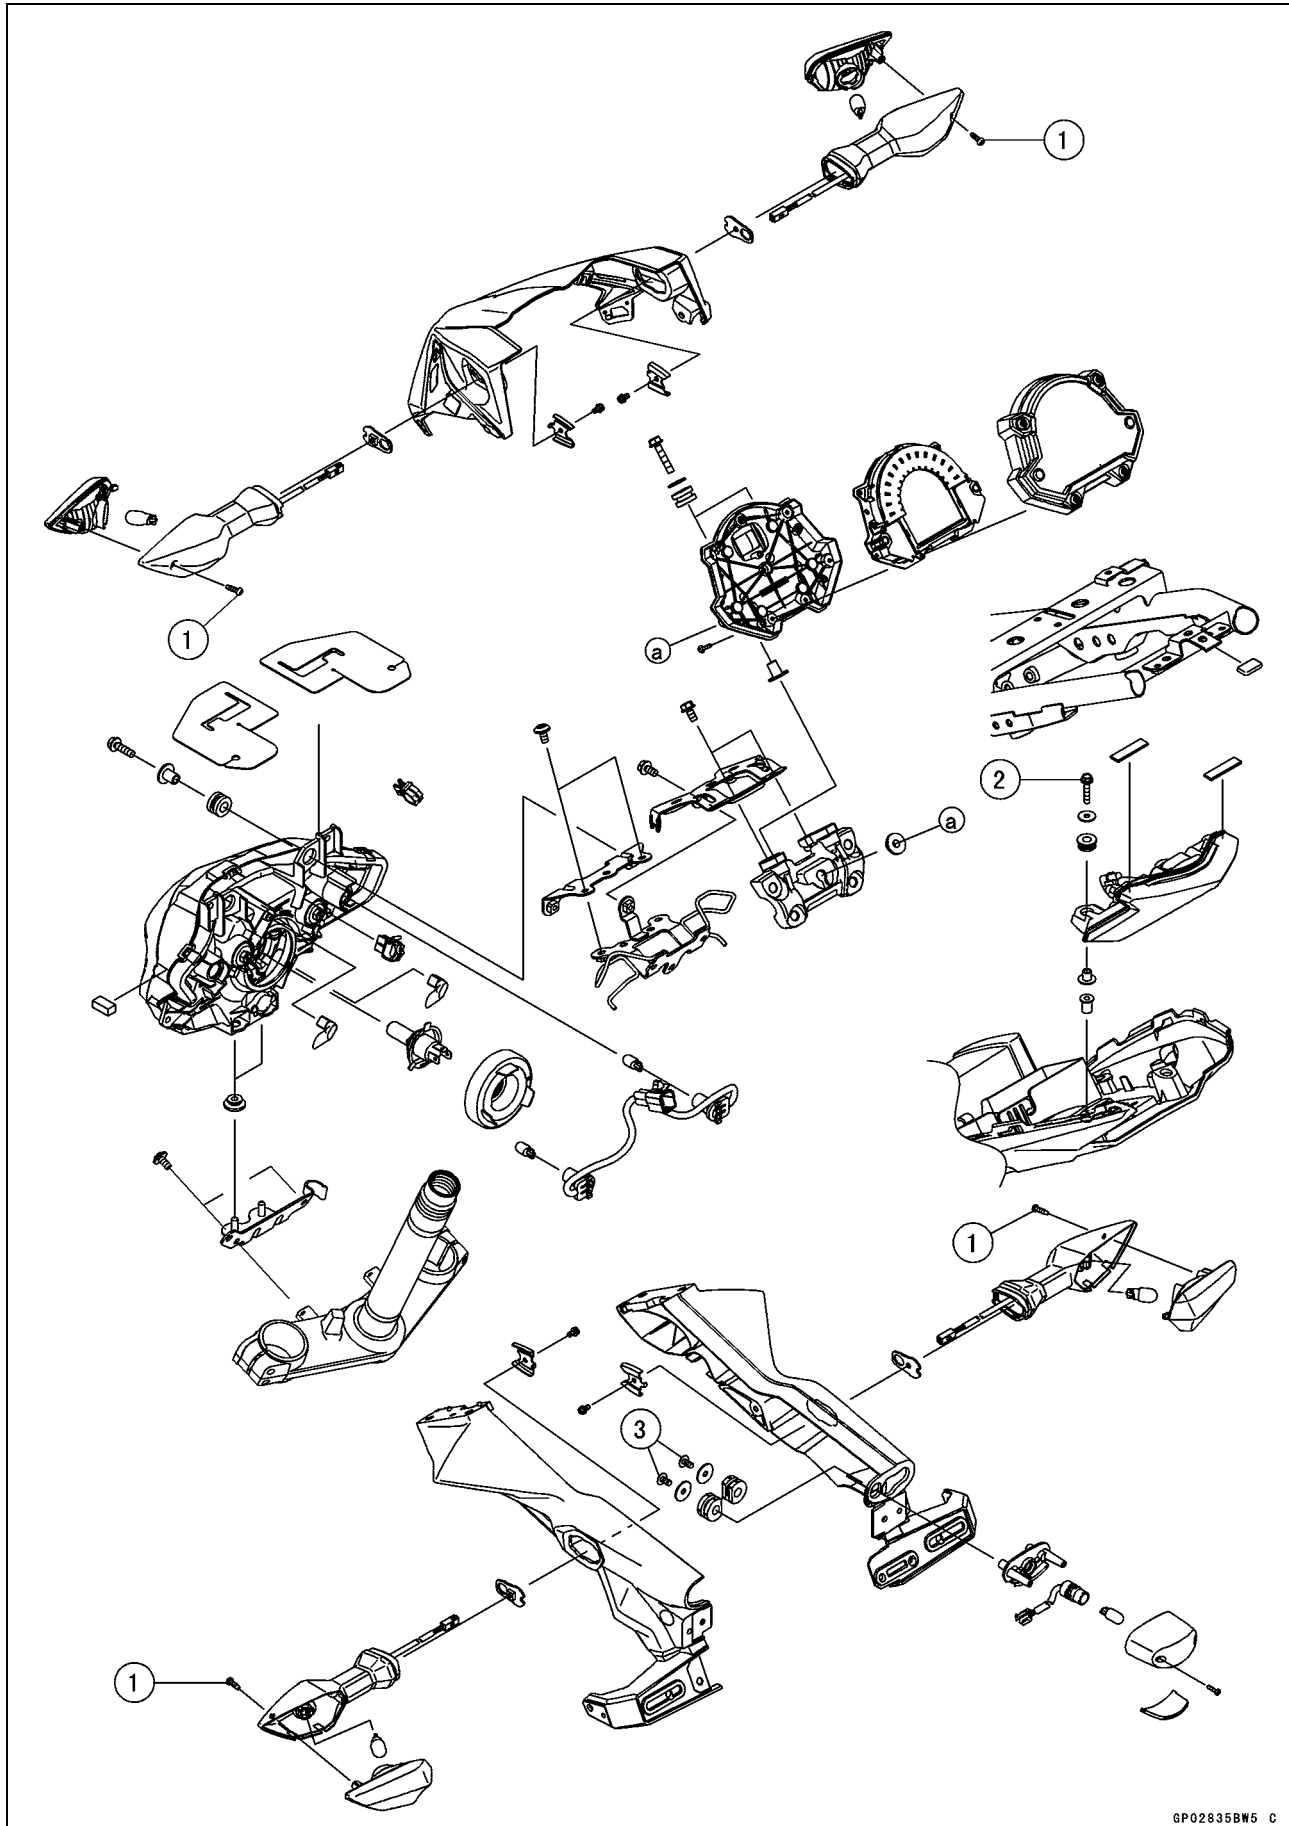




## ELECTRICAL SYSTEM 16-5

### Exploded View

No.	Fastener	Torque			Remarks
		N-m	kgf-m	ft-lb	
1	Turn Signal Light Lens Screw	1.0	0.10	8.9 in-lb	
2	Tail/Brake Light Bolts	0.50	0.05	4.4 in-lb	
3	License Plate Light Screws	1.2	0.12	11 in-lb	

# 16-6 ELECTRICAL SYSTEM

## Exploded View

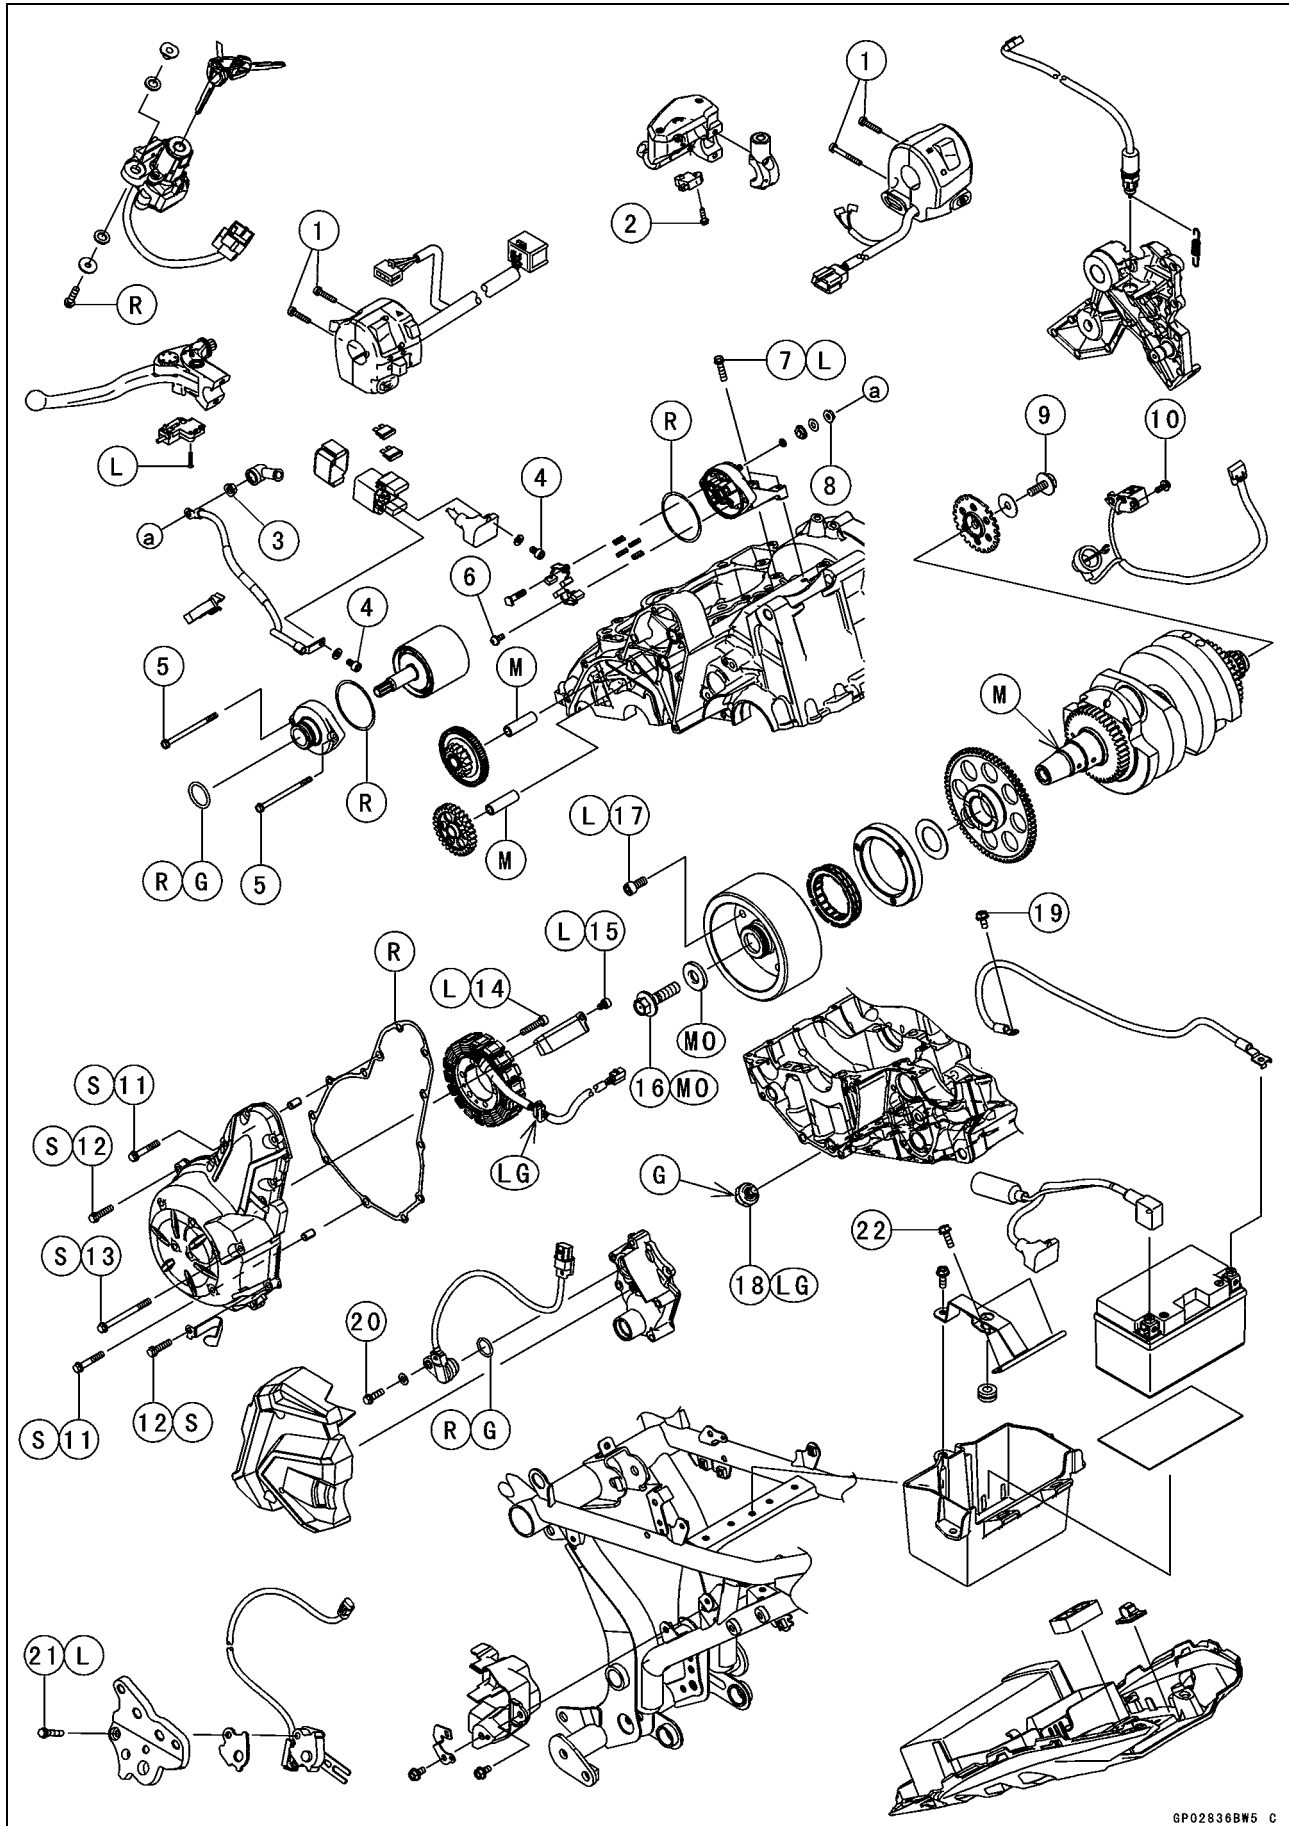

## Exploded View

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Switch Housing Screws	3.5	0.36	31 in·lb	
2	Front Brake Light Switch Screw	1.2	0.12	11 in·lb	
3	Starter Motor Cable Terminal Nut	6.0	0.61	53 in·lb	
4	Starter Relay Terminal Bolts	3.6	0.37	32 in·lb	
5	Starter Motor Through Bolts	5.0	0.51	44 in·lb	
6	Brush Holder Screw	3.8	0.39	34 in·lb	
7	Starter Motor Mounting Bolts	9.8	1.0	87 in·lb	L
8	Starter Motor Terminal Locknut	11	1.1	97 in·lb	
9	Timing Rotor Bolt	40	4.1	30	
10	Crankshaft Sensor Bolts	6.0	0.61	53 in·lb	
11	Alternator Cover Bolts, L = 35 mm (1.4 in.)	12	1.2	106 in·lb	S
12	Alternator Cover Bolts, L = 25 mm (1.0 in.)	12	1.2	106 in·lb	S
13	Alternator Cover Bolts, L = 70 mm (2.8 in.)	12	1.2	106 in·lb	S
14	Stator Coil Bolts	12	1.2	106 in·lb	L
15	Alternator Lead Holding Plate Bolt	9.8	1.0	87 in·lb	L
16	Alternator Rotor Bolt	200	20.4	148	MO
17	Starter Motor Clutch Bolts	34	3.5	25	L
18	Oil Pressure Switch	15	1.5	11	LG
19	Engine Ground Terminal Bolt	9.8	1.0	87 in·lb	
20	Gear Position Sensor Bolt	9.8	1.0	87 in·lb	
21	Side Stand Switch Bolt	8.8	0.90	78 in·lb	L
22	Battery Holder Bolts, L = 18 mm (0.71 in.)	1.0	0.10	8.9 in·lb	

G: Apply grease.

L: Apply a non-permanent locking agent.

LG: Apply liquid gasket.

M: Apply molybdenum disulfide grease.

MO: Apply molybdenum disulfide oil solution.


(Mixture of the engine oil and molybdenum disulfide grease in a weight ratio 10:1)

R: Replacement Parts

S: Follow the specified tightening sequence.

# 16-8 ELECTRICAL SYSTEM

## Exploded View

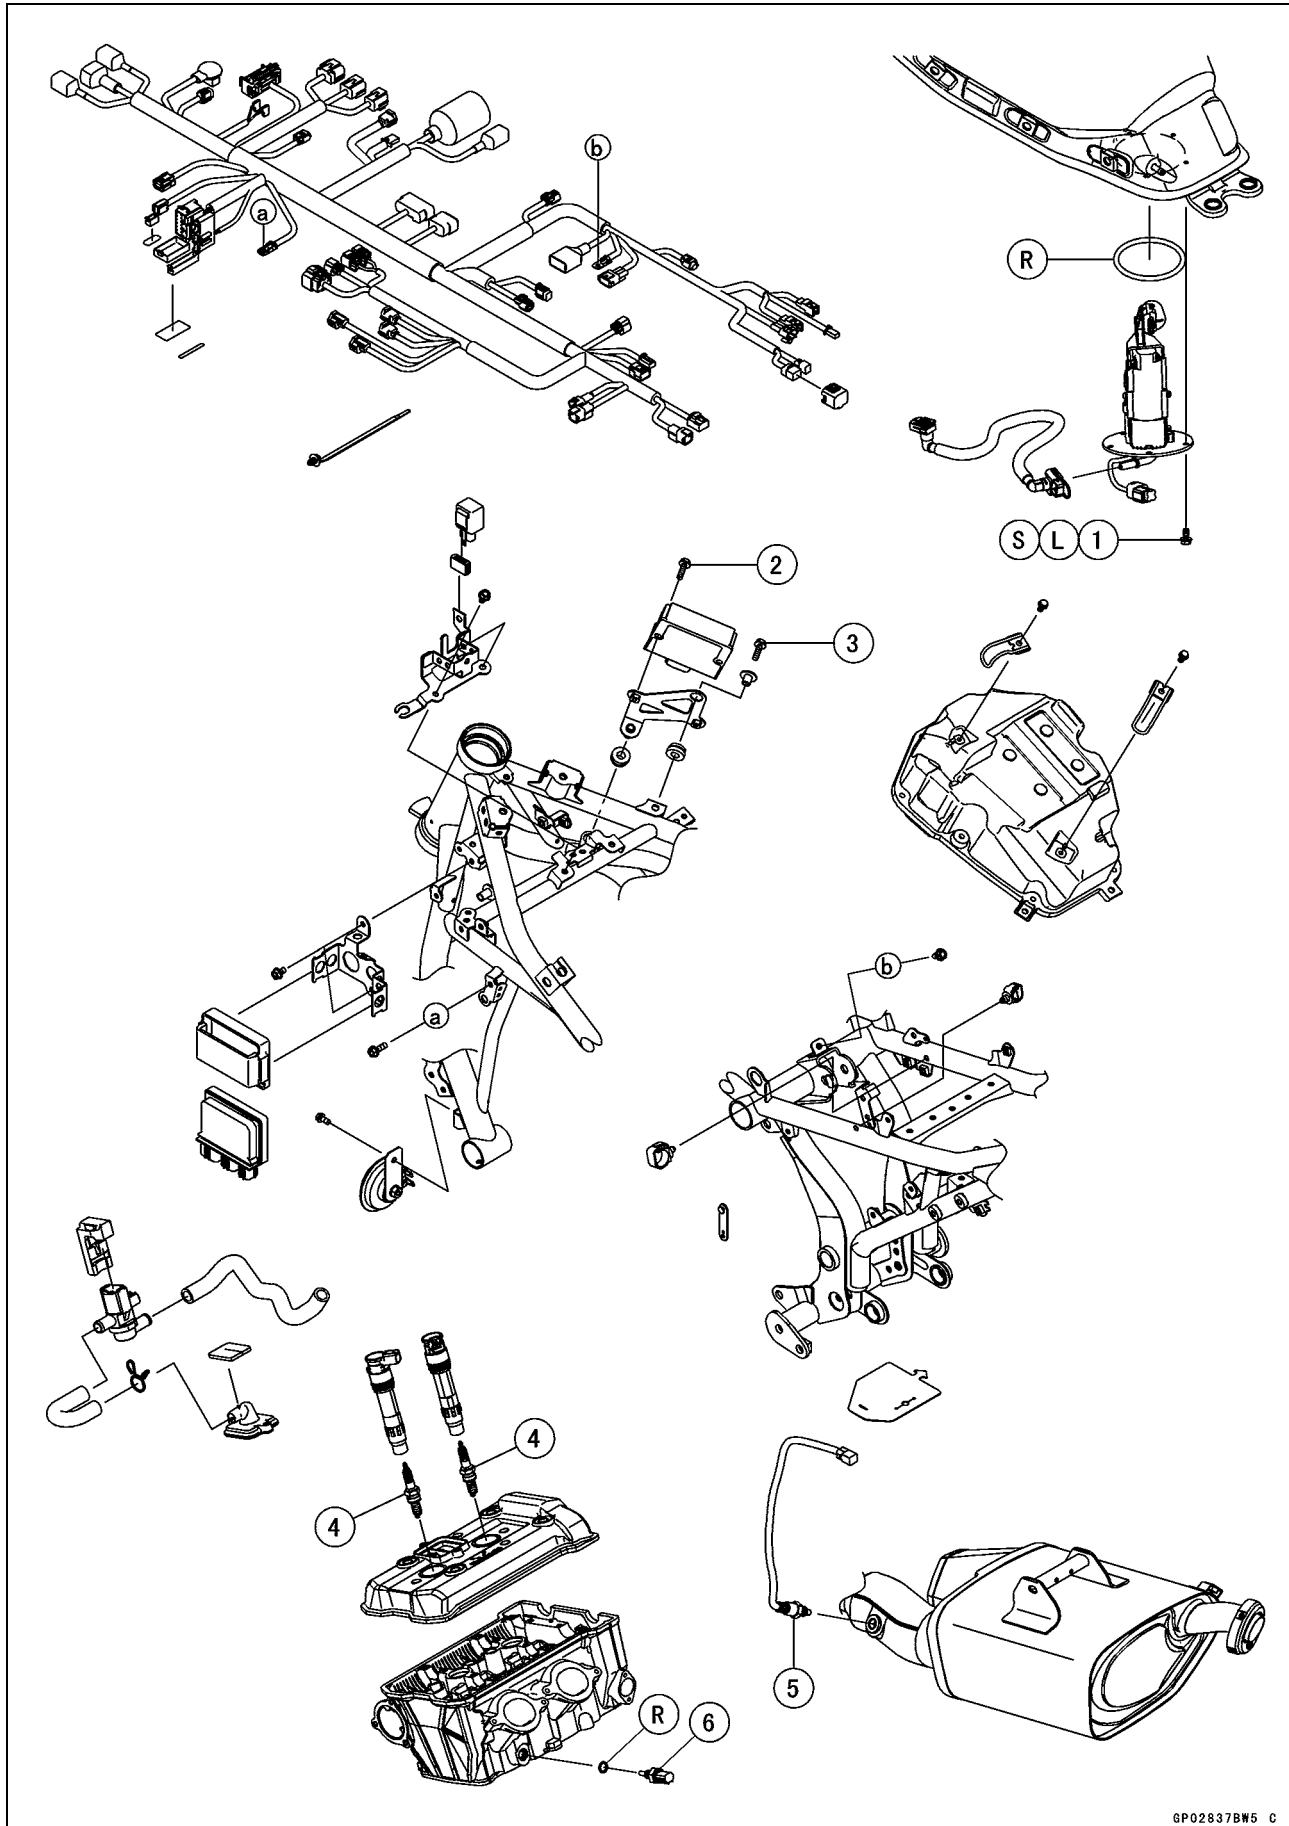

**Exploded View**

<b>No.</b>	<b>Fastener</b>	<b>Torque</b>			<b>Remarks</b>
		<b>N·m</b>	<b>kgf·m</b>	<b>ft·lb</b>	
1	Fuel Pump Bolts	9.8	1.0	87 in·lb	L, S
2	Regulator/Rectifier Bolts	9.8	1.0	87 in·lb	
3	Regulator/Rectifier Bracket Bolt	9.8	1.0	87 in·lb	
4	Spark Plugs	15	1.5	11	
5	Oxygen Sensor	25	2.5	18	
6	Water Temperature Sensor	12	1.2	106 in·lb	

L: Apply a non-permanent locking agent.

R: Replacement Parts

S: Follow the specified tightening sequence.


# 16-10 ELECTRICAL SYSTEM

## Specifications


Item	Standard
<b>Battery</b> Type Model Name Capacity Voltage Gross Weight Electrolyte Volume	Sealed Battery (AU, IN, MY, PH, TH) YTZ10 (US, CA, CAL, EUR, SEA-B1, SEA-B3, CN) YTZ10S (ID) YT12A-BS (Other than ID) 12 V 8.6 Ah (10 HR) (ID) 12 V 10 Ah (10 HR) 12.8 V or more (Other than ID) 3.2 kg (7.1 lb) (ID) 3.5 kg (7.7 lb) (Other than ID) 0.45 L (27 cu in.) (ID) 0.47 L (29 cu in.)
<b>Charging System</b> Alternator Type Alternator Output Voltage (no load) Stator Coil Resistance Charging Voltage (Regulator/Rectifier Output Voltage)	Three-phase AC AC41 ~ 62 V @4 000 r/min (rpm) 0.176 ~ 0.264 $\Omega$ @20°C (68°F) 14.3 ~ 14.7 V @25°C (77°F)
<b>Ignition System</b> Crankshaft Sensor: Resistance Peak Voltage Stick Coil: Primary Winding Resistance Secondary Winding Resistance Primary Peak Voltage Spark Plug: Type Gap	376 ~ 564 $\Omega$ @20°C (68°F) 3.0 V or more 1.11 ~ 1.50 $\Omega$ @20°C (68°F) 6.4 ~ 9.6 k $\Omega$ @20°C (68°F) 110 V or more NGK CR9EIA-9 0.8 ~ 0.9 mm (0.031 ~ 0.035 in.)
<b>Electric Starter System</b> Starter Motor: Brush Length	12 mm (0.47 in.) [Service Limit: 6.5 mm (0.26 in.)]
<b>Air Switching Valve</b> Resistance	18 ~ 22 $\Omega$ @20°C (68°F)
<b>Switches and Sensors</b> Rear Brake Light Switch Timing Engine Oil Pressure Switch Connections Water Temperature Sensor Resistance Fuel Level Sensor Resistance: Full Position Empty Position	ON after about 10 mm (0.39 in.) of pedal travel When engine is stopped: ON When engine is running: OFF in the text 9 ~ 11 $\Omega$ 213 ~ 219 $\Omega$

**Special Tools and Sealant**


**Peak Voltage Adapter:  
57001-1415**

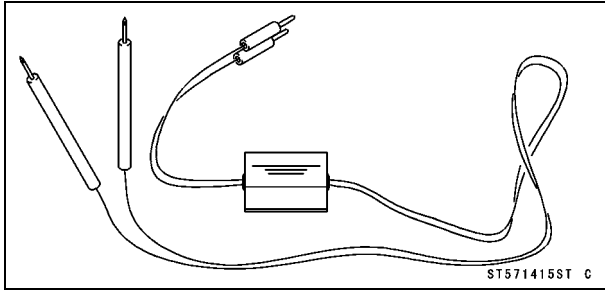


**Lead Wire - Peak Voltage Adapter:  
57001-1449**

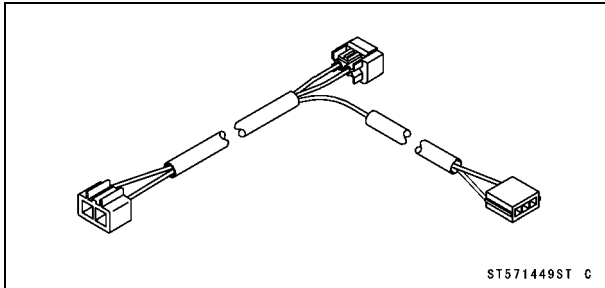


**Needle Adapter Set:  
57001-1457**

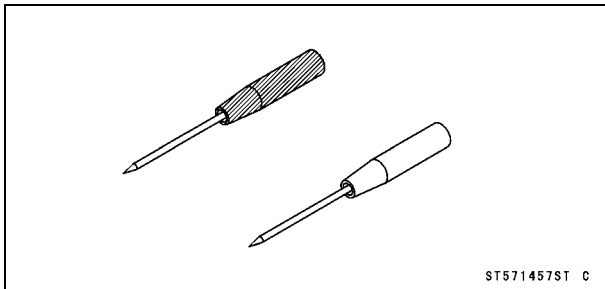


**Rotor Holder:  
57001-1567**

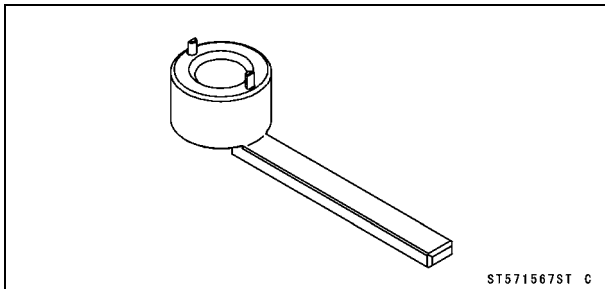


**Grip:  
57001-1591**

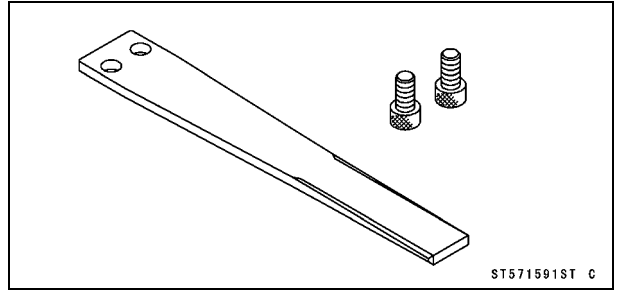


**Flywheel Puller Assembly, M38 x 1.5/M35 x 1.5:  
57001-1615**

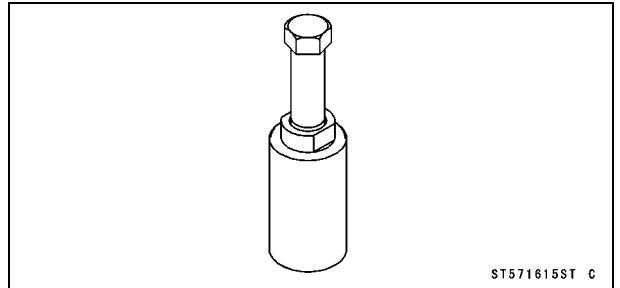

**Rotor Holder:  
57001-1658**

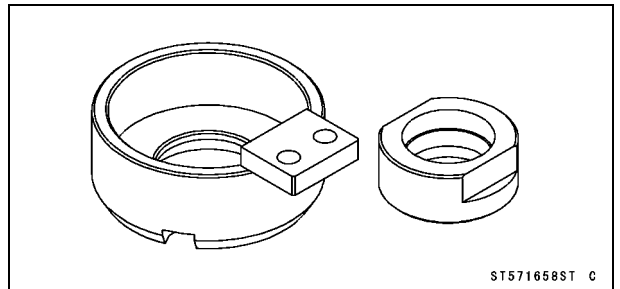


**Liquid Gasket, TB1211F:  
92104-0004**

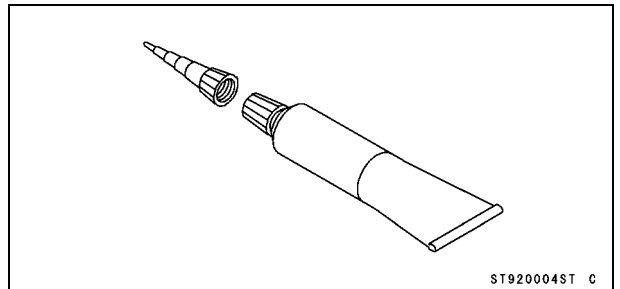


# 16-12 ELECTRICAL SYSTEM

## Parts Location


ECU [A]

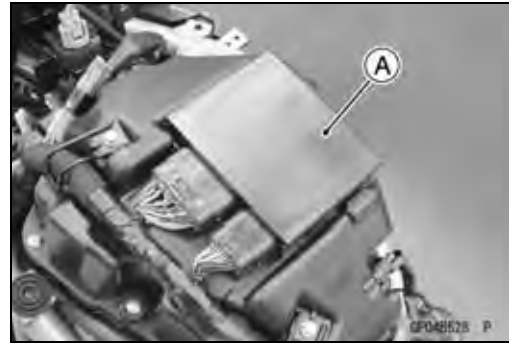


Battery [A]  
Starter Relay [B]

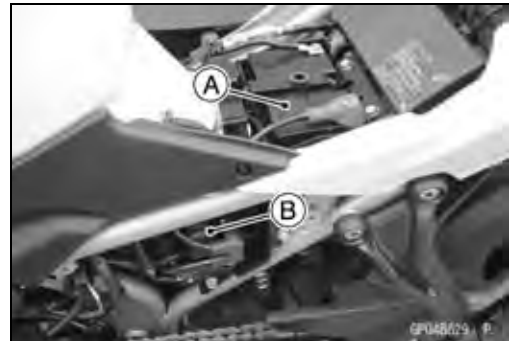


Relay Box [A]  
Fuse Box (1) [B]  
Fuse Box (2) [C]  
Fuse Box (3) [D] (ABS Equipped Models)

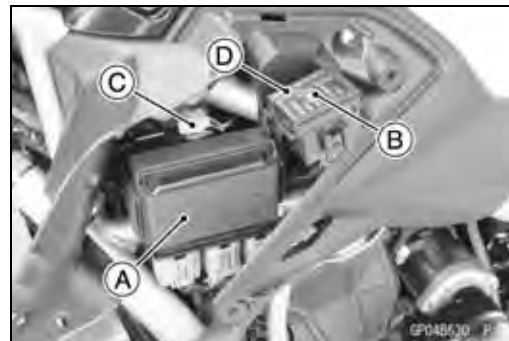

Turn Signal Relay [A]  
Regulator/Rectifier [B]  
Radiator Fan Motor [C]

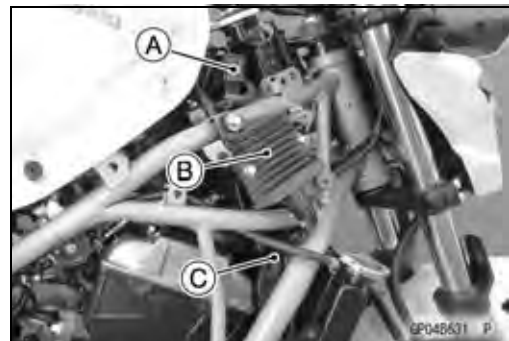


Water Temperature Sensor [A]  
Starter Motor [B]

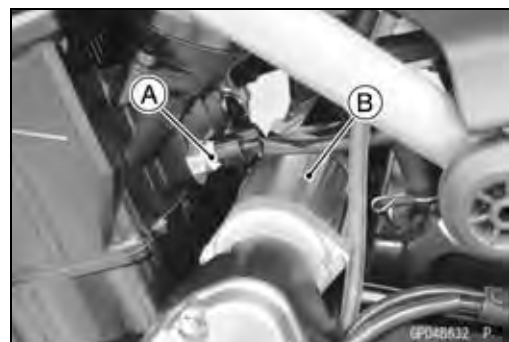




**Parts Location**


- Rear Brake Light Switch [A]
- Crankshaft Sensor [B]
- Timing Rotor [C]
- Oil Pressure Switch [D]

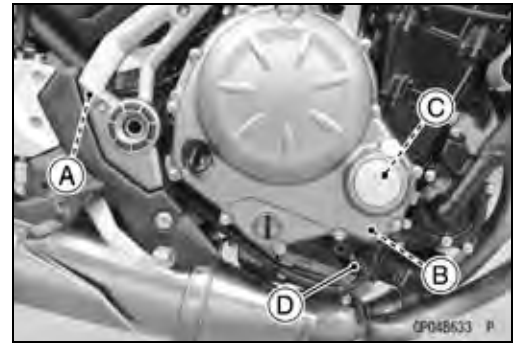


- Gear Position Sensor [A]
- Alternator [B]
- Side Stand Switch [C]
- Oxygen Sensor [D]

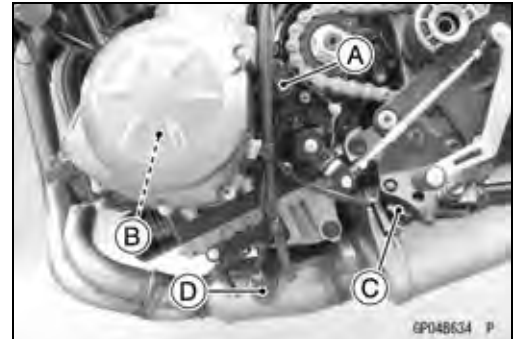

- Air Switching Valve [A]
- Stick Coils [B]
- Spark Plugs [C]

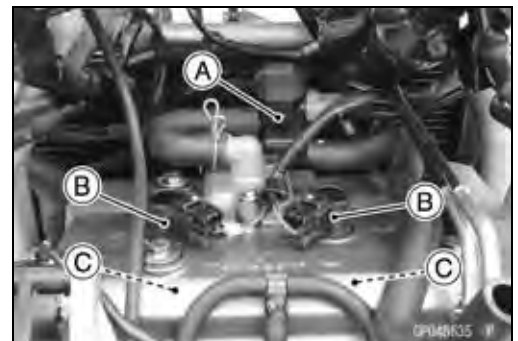

- Starter Lockout Switch [A]
- Meter Unit [B]
- Ignition Switch [C]
- Front Brake Light Switch [D]






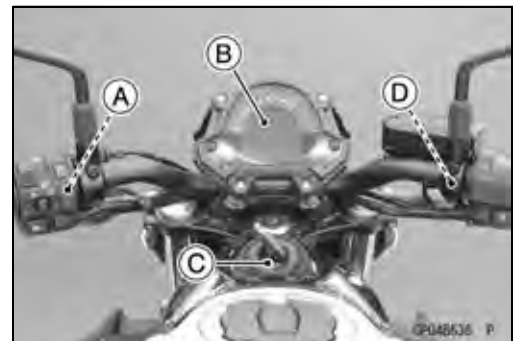


# 16-14 ELECTRICAL SYSTEM


## Wiring Diagram (ER650G)

- Meter Unit**
1. Green Left Turn Signal Indicator Light(LED)
  2. Green Right Turn Signal Indicator Light(LED)
  3. Blue High Beam Indicator Light(LED)
  4. Green Neutral Indicator Light(LED)
  5. Yellow Engine Warning Indicator Lights(LED)
  6. Red Warning Indicator Light(LED) (Oil Pressure/Battery/ Water Temperature)
  7. Illumination Light(LED)
  8. Speedometer
  9. Tachometer
  10. Odometer/Trip Meter
  11. Clock/Current Mileage/Average Mileage/ Cruising Range
  12. Fuel Level Gauge
  13. Gear Position Indicator
- \*LED:Light Emitting Diode

 - Right Switch Housing**
1. Front Brake Light Switch
  2. Engine Stop Switch
  3. Starter Button

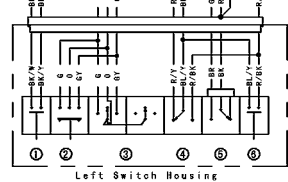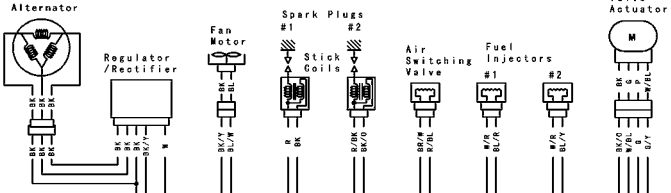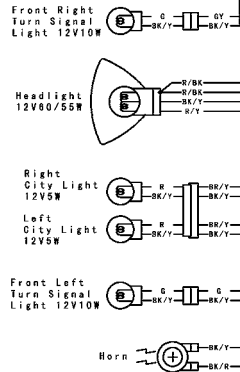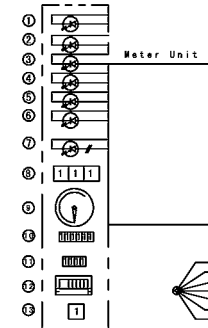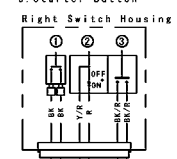

- Left Switch Housing**
1. Horn Button
  2. Hazard Button
  3. Turn Signal Switch
  4. Dimmer Switch
  5. Starter Lockout Switch
  6. Passing Button

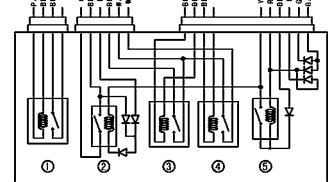


- Relay Box**
1. Fan Relay
  2. Headlight Circuit Relay
  3. EDU Main Relay
  4. Fuel Pump Relay
  5. Starter Circuit Relay

**LEFT SWITCH HOUSING CONNECTIONS**


Horn Button	Hazard Switch	Turn Signal Switch	Dimmer Switch	Starter Lockout Switch	Passing Button
Color BK/WBK/Y	Color G O GY	Color G O GY	Color R/Y BL/YR/BK	Color BK BR	Color R/BK/BL/Y
Released	OFF	L	HI	Clutch Lever	Push
Push	ON	OFF (Push)	LO	Released	Push
		R		Pulled in	

Wiring Diagram (ER650G)

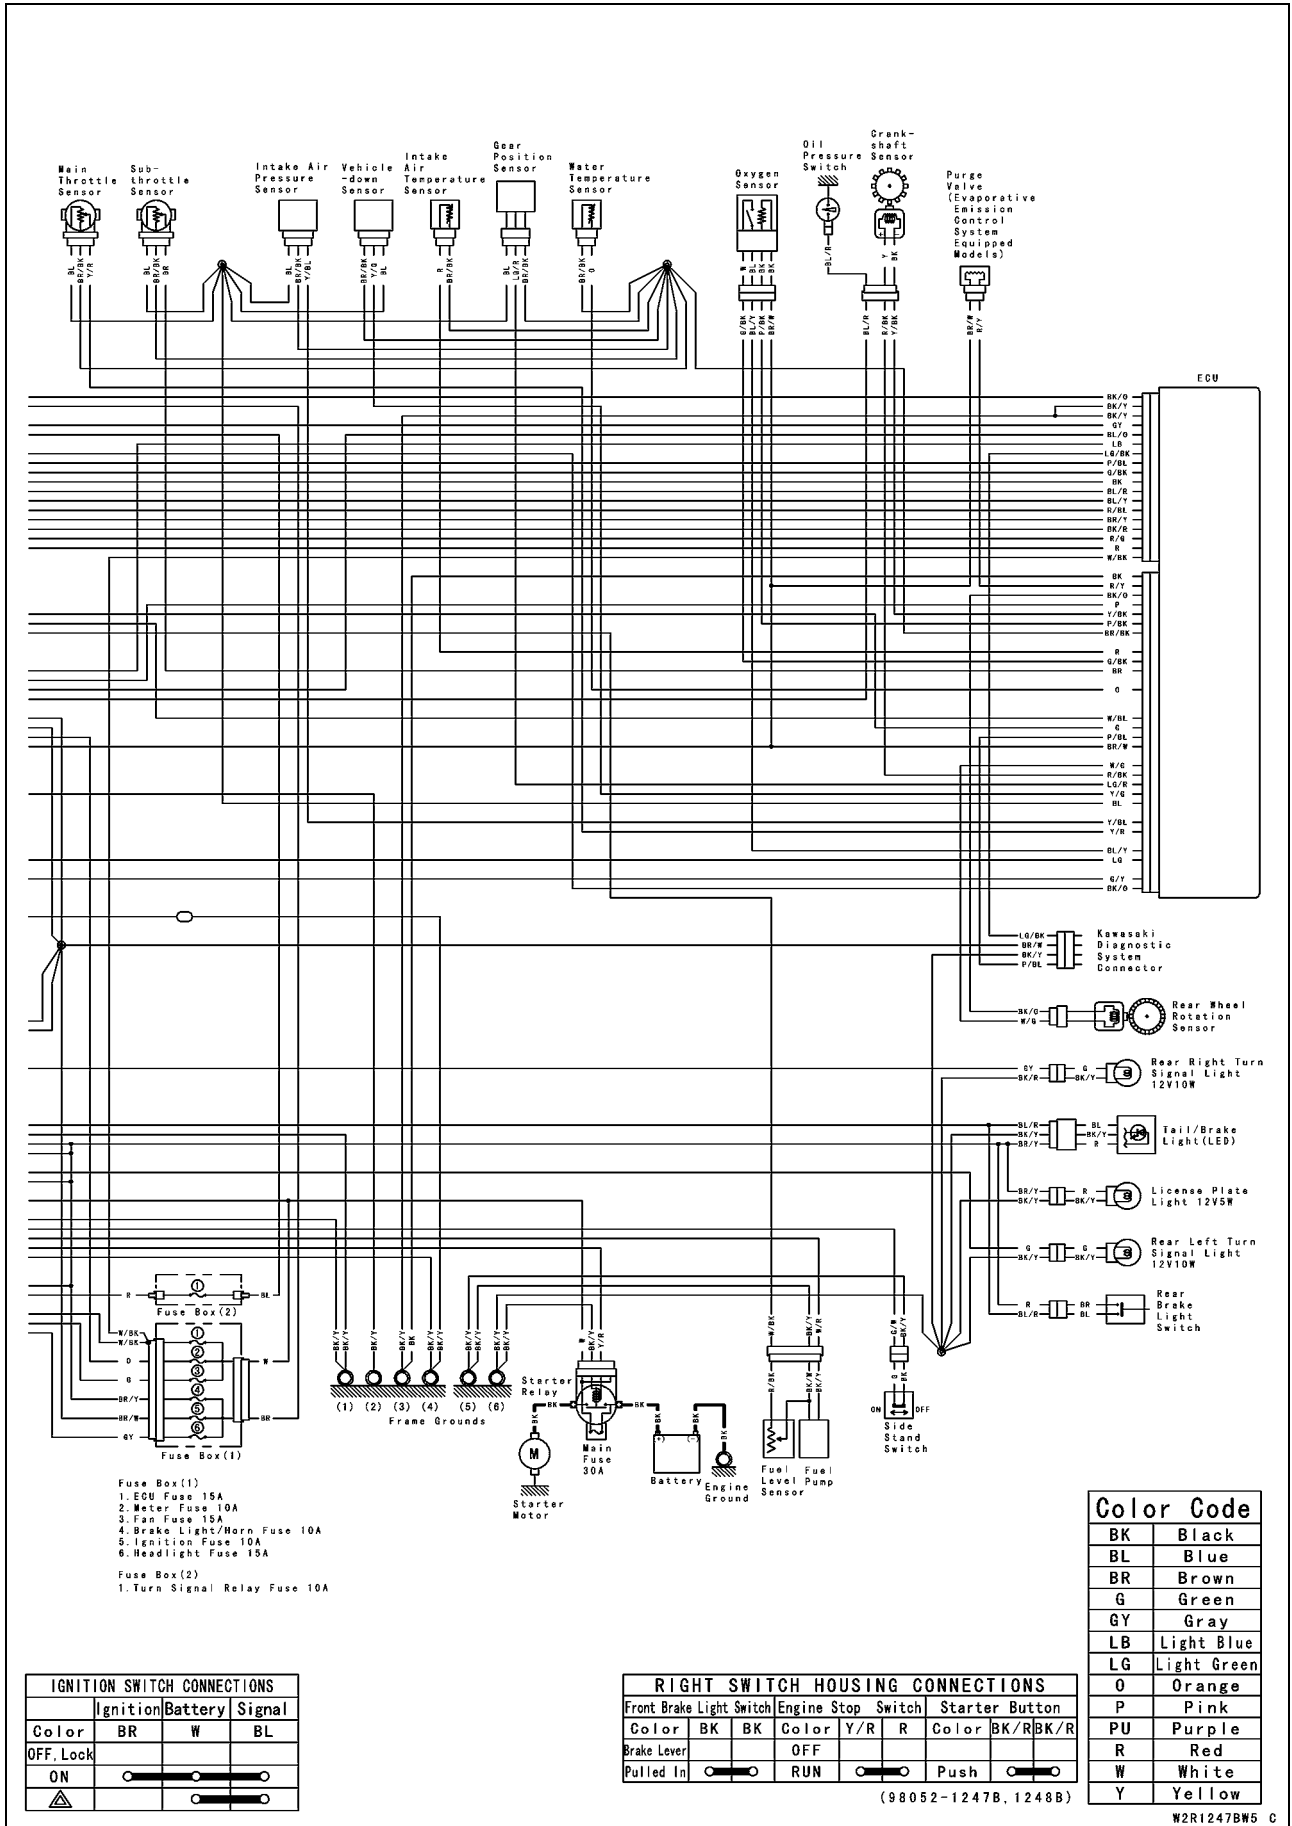


# 16-16 ELECTRICAL SYSTEM

## Wiring Diagram (ER650H)

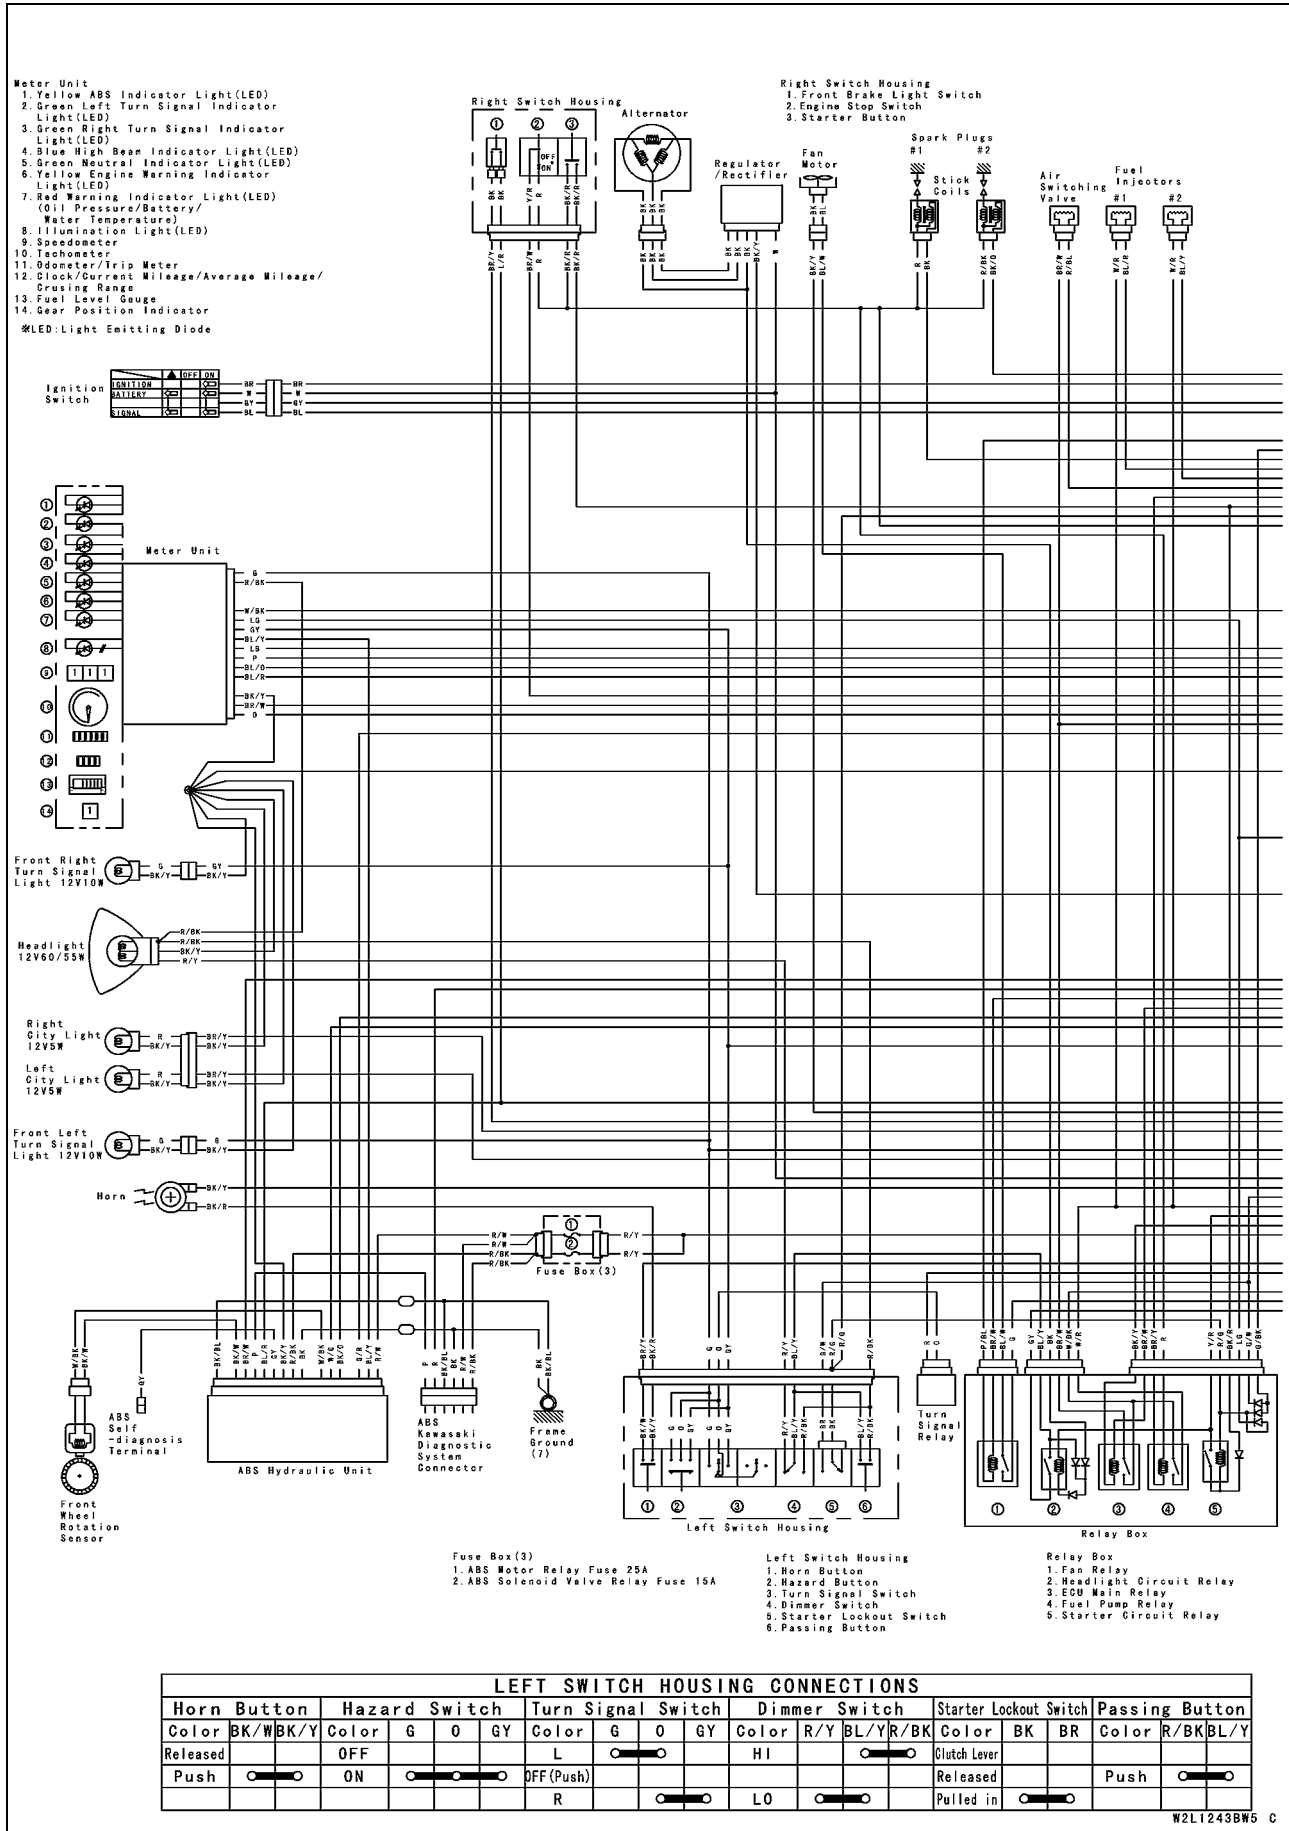

## Wiring Diagram (ER650H)

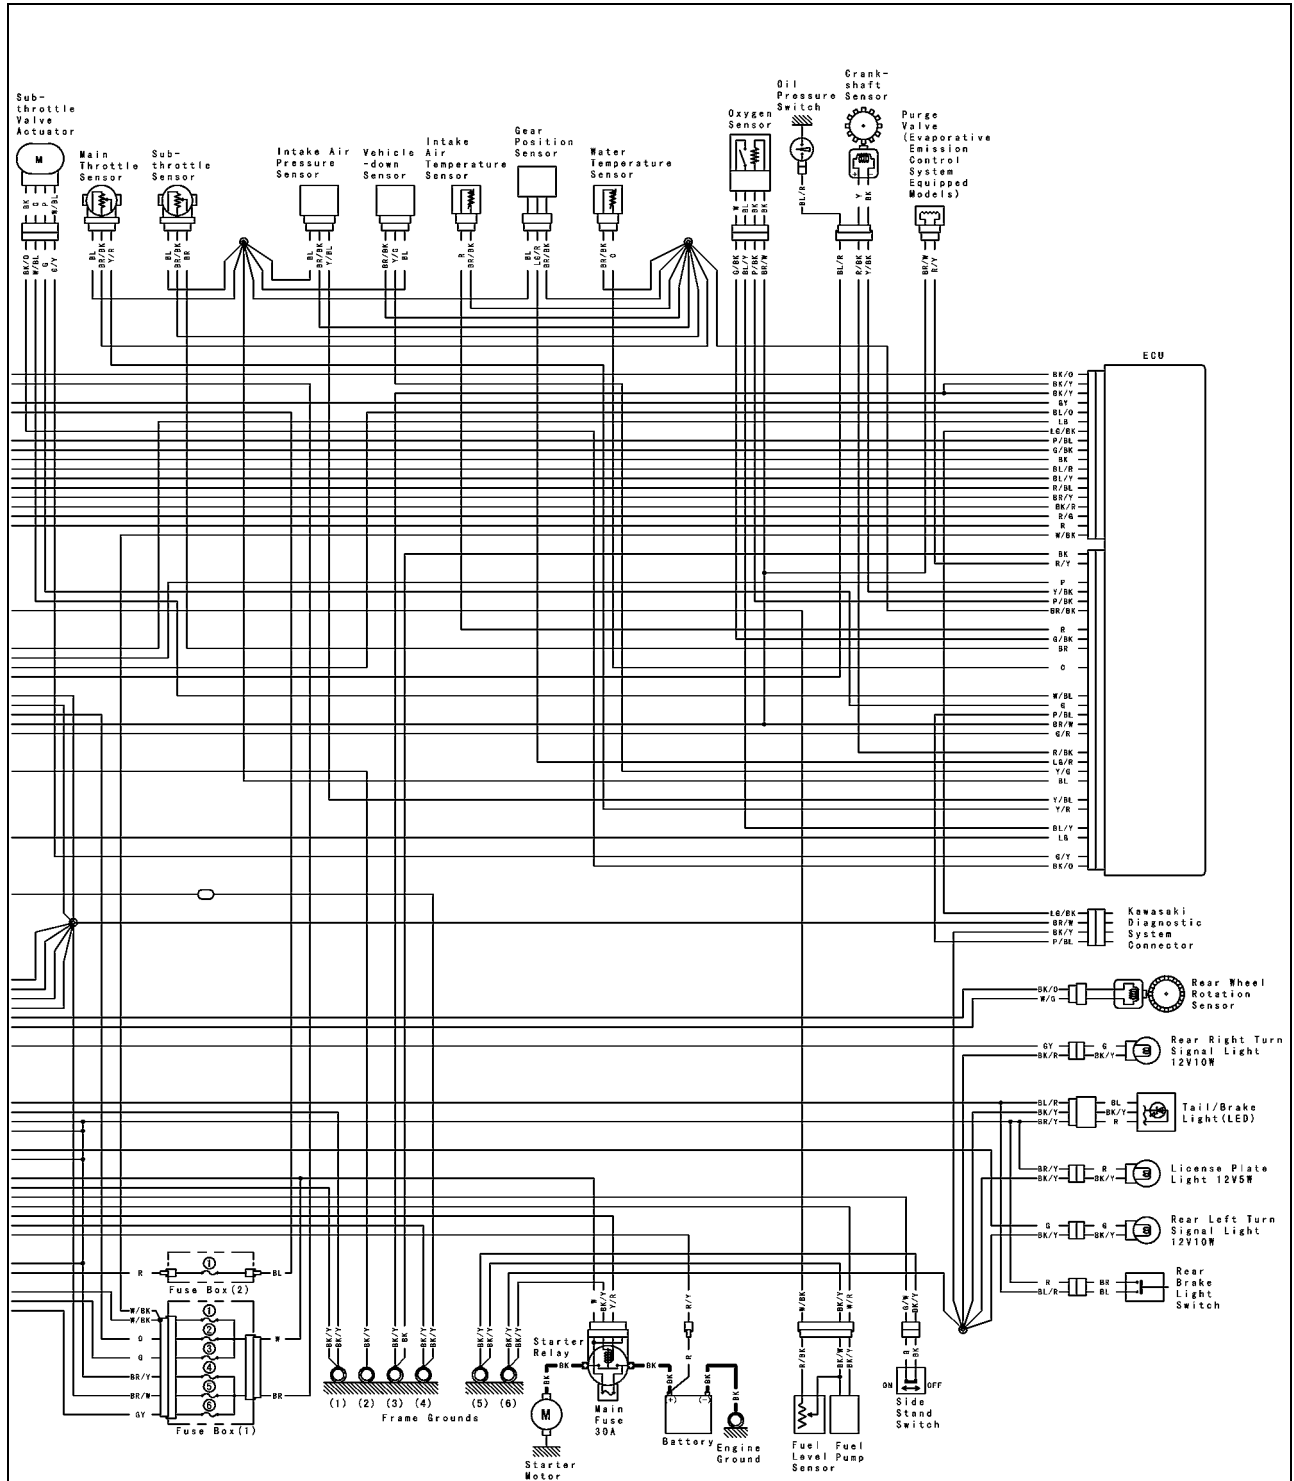

- Fuse Box (1)**
1. ECU Fuse 15A
  2. Meter Fuse 10A
  3. Fan Fuse 15A
  4. Brake Light/Horn Fuse 10A
  5. Ignition Fuse 10A
  6. Headlight Fuse 15A

- Fuse Box (2)**
1. Turn Signal Relay Fuse 10A

IGNITION SWITCH CONNECTIONS			
	Ignition	Battery	Signal
Color	BR	W	BL
OFF, Lock	○	○	○
ON	●	●	●

RIGHT SWITCH HOUSING CONNECTIONS							
Front Brake Light Switch		Engine Stop Switch		Starter Button			
Color	BK	BK	Color	Y/R	R	Color	BK/R/BK/R
Brake Lever	○	OFF	○	○	○	○	○
Pulled In	○	RUN	○	○	○	○	○

Color Code	
BK	Black
BL	Blue
BR	Brown
G	Green
GY	Gray
LB	Light Blue
LG	Light Green
O	Orange
P	Pink
PU	Purple
R	Red
W	White
Y	Yellow

(98052-1243B, 1244B)

## 16-18 ELECTRICAL SYSTEM

---

### Precautions

---



There are a number of important precautions that are musts when servicing electrical systems. Learn and observe all the rules below.

- Do not reverse the battery cable connections. This will burn out the diodes on the electrical parts.
- Always check battery condition before condemning other parts of an electrical system. A fully charged battery is a must for conducting accurate electrical system tests.
- The electrical parts should never be struck sharply, as with a hammer, or allowed to fall on a hard surface. Such a shock to the parts can damage them.
- To prevent damage to electrical parts, do not disconnect the battery cables or any other electrical connections when the ignition switch is on, or while the engine is running.
- Because of the large amount of current, never keep the starter button pushed when the starter motor will not turn over, or the current may burn out the starter motor windings.
- Take care not to short the cables that are directly connected to the battery positive (+) terminal to the chassis ground.
- Troubles may involve one or in some cases all items. Never replace a defective part without determining what CAUSED the failure. If the failure was caused by some other item or items, they must be repaired or replaced, or the new replacement will soon fail again.
- Make sure all connectors in the circuit are clean and tight, and examine wires for signs of burning, fraying, etc. Poor wires and bad connections will affect electrical system operation.
- Measure coil and winding resistance when the part is cold (at room temperature).

## Electrical Wiring

### Wiring Inspection

- Visually inspect the wiring for signs of burning, fraying, etc.
- ★ If any wiring is poor, replace the damaged wiring.
- Pull each connector [A] apart and inspect it for corrosion, dirt, and damage.
- ★ If the connector is corroded or dirty, clean it carefully. If it is damaged, replace it.
- Check the wiring for continuity.
- Use the wiring diagram to find the ends of the lead which is suspected of being a problem.
- Connect a tester between the ends of the leads.
- ★ If the tester does not read about  $0\ \Omega$ , the lead is defective. Replace the lead or the wiring harness [B] if necessary.

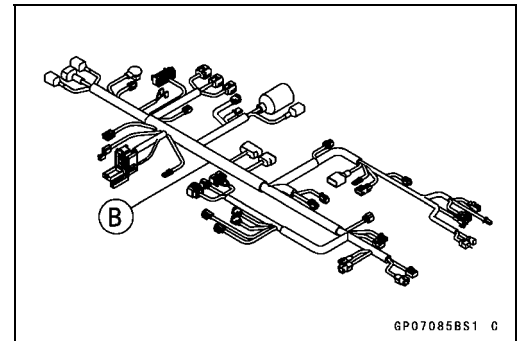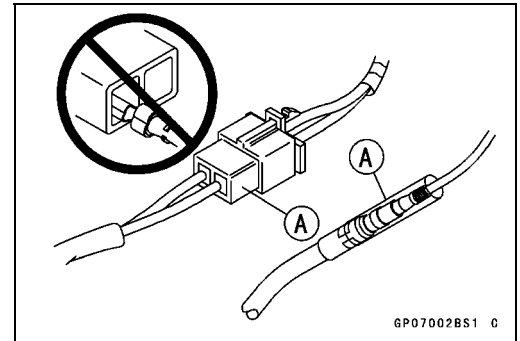


## 16-20 ELECTRICAL SYSTEM

### Battery

#### **Battery Removal**

- Turn the ignition switch off.
- Remove:
  - Front Seat (see Front Seat Removal in the Frame chapter)
  - Bolts [A]
  - Clamps [B]
  - Bracket [C]

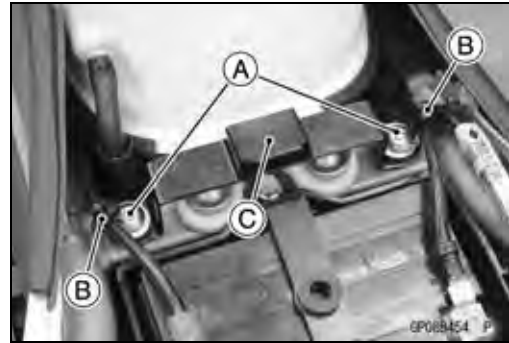


- Remove the bolts [A] and holder [B].
- Disconnect the negative (-) cable [C].

#### **NOTICE**

**Be sure to disconnect the negative (-) cable first.**

- Slide out the positive (+) terminal cap [D] and disconnect the positive (+) cable [E].
- Remove the battery.

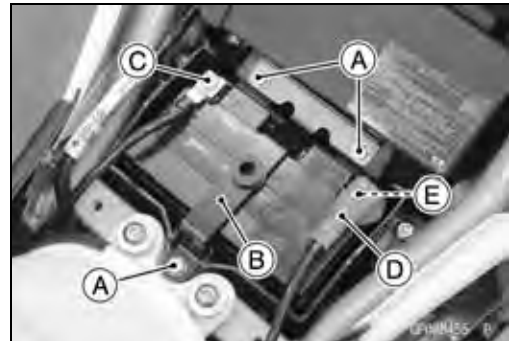


#### **Battery Installation**

- Turn the ignition switch off.
- Put the battery into the battery case.
- Connect the positive (+) cable [A] first.
- Connect the negative (-) cable [B].
- Apply a light coat of grease on the terminals to prevent corrosion.
- Cover the positive (+) terminal with the cap [C].




- Check that the damper [A] is in place on the holder [B].
- Install the holder.
- Tighten the bolt [C].
- Tighten:

**Torque - Battery Holder Bolts, L = 18 mm (0.71 in.) [D]: 1.0 N-m (0.10 kgf-m, 8.9 in-lb)**

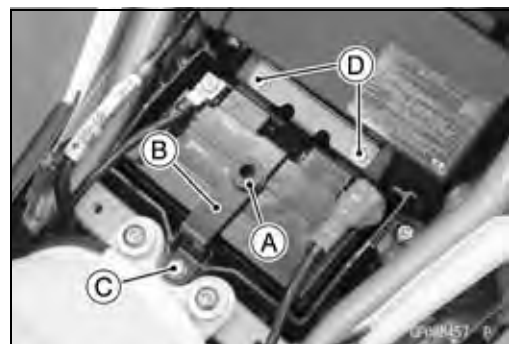

- Install:
  - Bracket [A]
  - Clamps [B]
  - Bolts [C]
  - Front Seat (see Front Seat Installation in the Frame chapter)

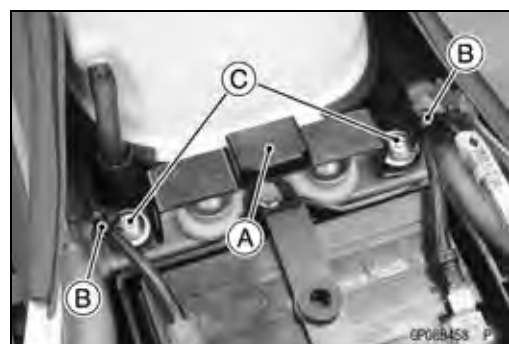



## Battery

### Battery Activation

#### Electrolyte Filling

- Make sure that the model name [A] of the electrolyte container matches the model name [B] of the battery. These names must be the same.

#### Battery Model Name

ER650H: YT12A-BS (ID Model)

#### NOTICE

Each battery comes with its own specific electrolyte container; using the wrong container may overfill the battery with incorrect electrolyte, which can shorten battery life and deteriorate battery performance. Be sure to use the electrolyte container with the same model name as the battery since the electrolyte volume and specific gravity vary with the battery type.

#### NOTICE

Do not remove the aluminum sealing sheet [A] from the filler ports [B] until just prior to use. Be sure to use the dedicated electrolyte container for correct electrolyte volume.

#### **⚠ DANGER**

Sulfuric acid in battery electrolyte can cause severe burns. To prevent burns, wear protective clothing and safety glasses when handling electrolyte. If the electrolyte comes in contact with your skin or eyes, wash the area with liberal amounts of water and seek medical attention for more severe burns.

- Place the battery on a level surface.
- Check to see that the sealing sheet has no peeling, tears, or holes in it.
- Remove the sealing sheet.




#### NOTE

○ The battery is vacuum sealed. If the sealing sheet has leaked air into the battery, it may require a longer initial charge.

- Remove the electrolyte container from the vinyl bag.
- Detach the strip of caps [A] from the container and set aside, these will be used later to seal the battery.

#### NOTE

○ Do not pierce or otherwise open the sealed cells [B] of the electrolyte container. Do not attempt to separate individual cells.

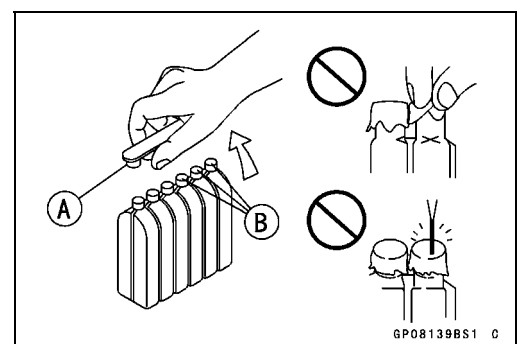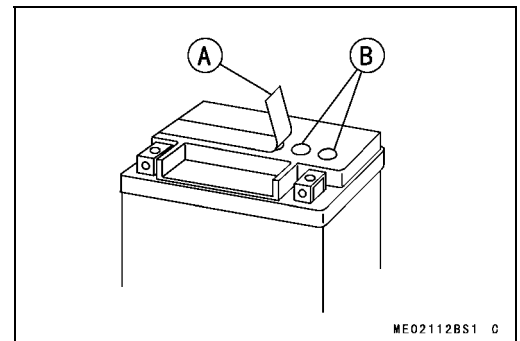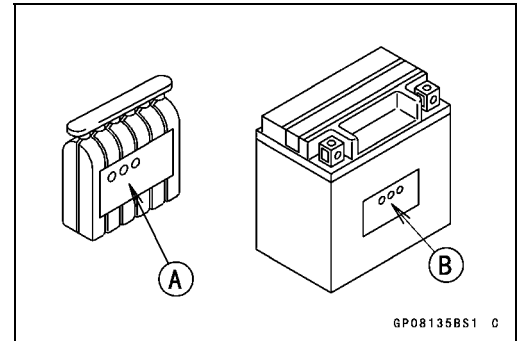

## 16-22 ELECTRICAL SYSTEM

### Battery

- Place the electrolyte container upside down with the six sealed cells into the filler ports of the battery. Hold the container level, push down to break the seals of all six cells. You will see air bubbles rising into each cell as the ports fill.

#### NOTE

○ Do not tilt the electrolyte container.

- Check the electrolyte flow.
- ★ If no air bubbles [A] are coming up from the filler ports, or if the container cells have not emptied completely, tap the container [B] a few times.

#### NOTE

○ Be careful not to have the battery fall down.

- Keep the container in place. Don't remove the container from the battery, the battery requires all the electrolyte from the container for proper operation.

#### NOTICE

**Removal of the container before it is completely empty can shorten the service life of the battery. Do not remove the container until it is completely empty.**





- After filling, let the battery sit for 20 ~ 60 minutes with the electrolyte container kept in place, which is required for the electrolyte to fully permeate into the plates.
- Make sure that the container cells have emptied completely, and remove the container from the battery.
- Place the strip of caps [A] loosely over the filler ports, press down firmly with both hands to seat the strip of caps into the battery (don't pound or hammer). When properly installed, the strip of caps will be level with the top of the battery.

#### NOTICE

**Once the strip of caps is installed onto the battery, never remove the caps, nor add water or electrolyte to the battery.**

#### NOTE

○ Charging the battery immediately after filling can shorten service life.

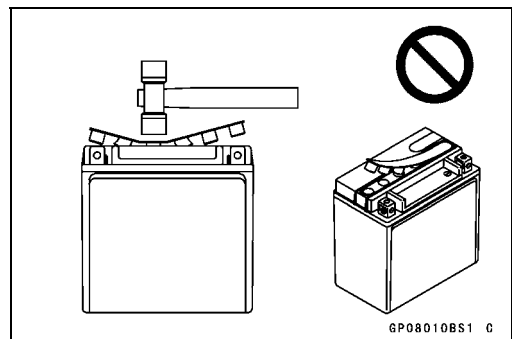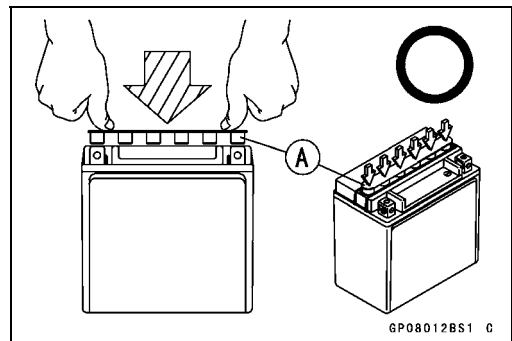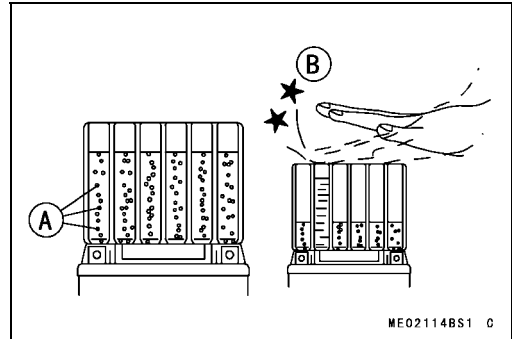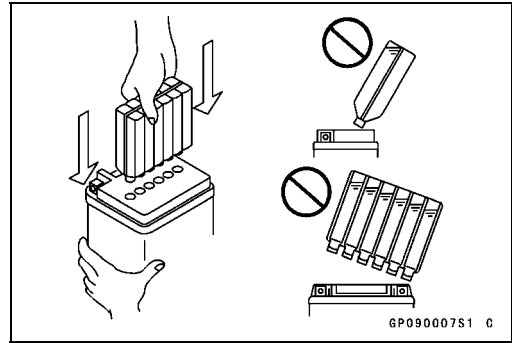

## Battery

### Initial Charge

- Newly activated sealed batteries require an initial charge.

#### Standard Charge:

1.2 A × 5 ~ 10 hours

- ★ If using a recommended battery charger, follow the charger's instructions for newly activated sealed battery.

#### Kawasaki-recommended chargers:

Battery Mate 150-9

OptiMate PRO 4-S/PRO S/PRO2

Yuasa MB-2040/2060

Christie C10122S

- ★ If the above chargers are not available, use equivalent one.
- Let battery sit 30 minutes after initial charge, then check voltage using a voltmeter. (Voltage immediately after charging becomes temporarily high. For accurate measuring, let the battery sit for given time.)

### NOTE

- *Charging rates will vary depending on how long the battery has been stored, temperature, and the type of charger used. If voltage is not at least 12.8 V, repeat charging cycle.*
- *To ensure maximum battery life and customer satisfaction, it is recommended the battery be load tested at three times its amp-hour rating for 15 seconds. Re-check voltage and if less than 12.8 V repeat the charging cycle and load test. If still below 12.8 V the battery is defective.*

### Precautions

- 1) No need of topping-up  
No topping-up is necessary in this battery until it ends its life under normal use. Forcibly prying off the seal cap to add water is very dangerous. Never do that.
- 2) Refreshing charge.  
If an engine will not start, a horn sounds weak, or lamps are dim, it indicates the battery has been discharged. Give refresh charge for 5 to 10 hours with charge current shown in the specification (see Refreshing Charge).  
When a fast charge is inevitably required, do it following precisely the maximum charge current and time conditions indicated on the battery.

### NOTICE

**This battery is designed to sustain no unusual deterioration if refresh-charged according to the method specified above. However, the battery's performance may be reduced noticeably if charged under conditions other than given above. Never remove the seal cap during refresh charge.**

**If by chance an excessive amount of gas is generated due to overcharging, the relief valve releases the gas to keep the battery normal.**

- 3) When you do not use the motorcycle for months.  
Give a refresh charge before you store the motorcycle and store it with the negative cable removed. Give a refresh charge **once a month** during storage.
- 4) Battery life.

# 16-24 ELECTRICAL SYSTEM

## Battery

If the battery will not start the engine even after several refresh charges, the battery has exceeded its useful life. Replace it (Provided, however, the vehicle's starting system has no problem).

### **⚠ DANGER**

Batteries produce an explosive gas mixture of hydrogen and oxygen that can cause serious injury and burns if ignited. Keep the battery away from sparks and open flames during charging. When using a battery charger, connect the battery to the charger before turning on the charger. This procedure prevents sparks at the battery terminals which could ignite any battery gases. The electrolyte contains sulfuric acid. Be careful not to have it touch your skin or eyes. If touched, wash it off with liberal amount of water and seek medical attention for more severe burns.

### Interchange

A sealed battery can fully display its performance only when combined with a proper vehicle electric system. Therefore, replace a sealed battery only on a motorcycle which was originally equipped with a sealed battery.

Be careful, if a sealed battery is installed on a motorcycle which had an ordinary battery as original equipment, the sealed battery's life will be shortened.

### Charging Condition Inspection

- Battery charging condition can be checked by measuring battery terminal voltage with a digital meter [A].
- Remove:
  - Battery (see Battery Removal)
- Measure the battery terminal voltage.

#### NOTE

○ Measure with a digital voltmeter which can be read one decimal place voltage.

- ★ If the reading is 12.8 V or more, no refresh charge is required, however, if the read is below the specified, refresh charge is required.

#### Battery Terminal Voltage



Standard: 12.8 V or more

Terminal Voltage (V) [A]

Battery Charge Rate (%) [B]

Good [C]

Refresh charge is required [D]

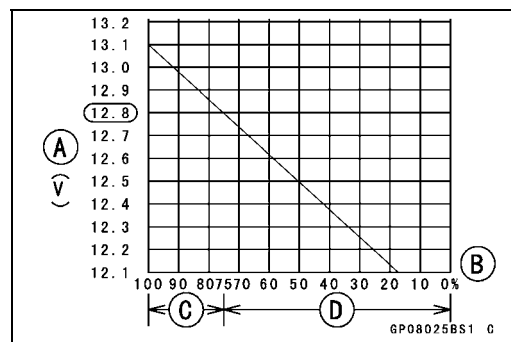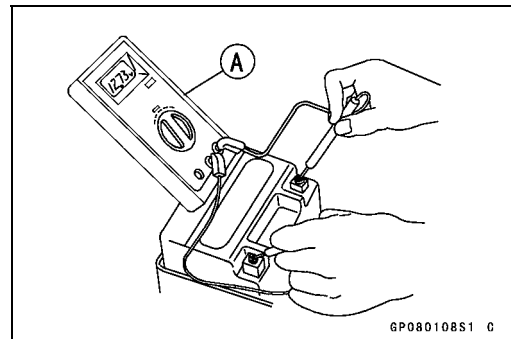


### Refreshing Charge

- Remove the battery [A] (see Battery Removal).
- Do refresh charge by following method according to the battery terminal voltage.

### **⚠ WARNING**

This battery is sealed type. Never remove sealing cap [B] even at charging. Never add water. Charge with current and time as stated below.

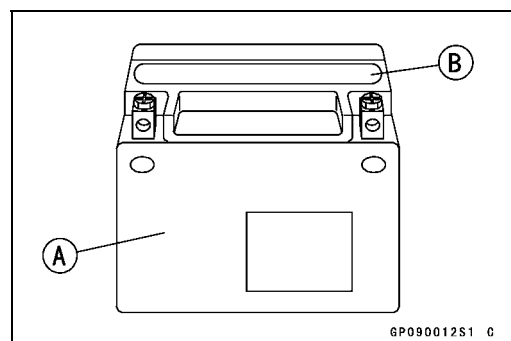

**Battery**

**Terminal Voltage: 11.5 ~ less than 12.8 V**

**Standard Charge (see following chart):**


**YTZ10/YTZ10S: 0.9 A × 5 ~ 10 h**

**YT12A-BS: 1.2 A × 5 ~ 10 h**

**Quick Charge:**

**YTZ10/YTZ10S: 4.5 A × 1 h**

**YT12A-BS: 5 A × 1 h**

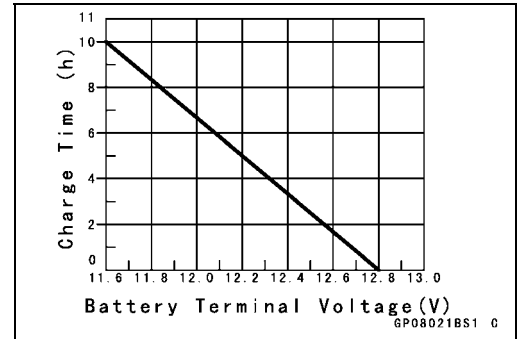

**NOTICE**

**If possible, do not quick charge. If quick charge is done unavoidably, do standard charge later on.**

**Terminal Voltage: less than 11.5 V**

**Charging Method:**


**YTZ10/YTZ10S: 0.9 A × 20 h**

**YT12A-BS: 1.2 A × 20 h**

**NOTE**

○ Increase the charging voltage to a maximum voltage of 25 V if the battery will not accept current initially. Charge for no more than 5 minutes at the increased voltage then check if the battery is drawing current. If the battery will accept current decrease the voltage and charge by the standard charging method described on the battery case. If the battery will not accept current after 5 minutes, replace the battery.

- Battery [A]
- Battery Charger [B]
- Standard Value [C]
- Current starts to flow [D]

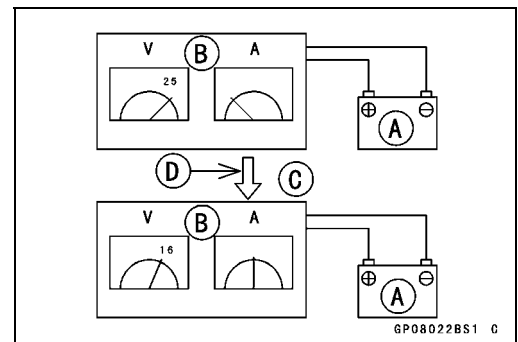


- Determine the battery condition after refresh charge.
- Determine the condition of the battery left for 30 minutes after completion of the charge by measuring the terminal voltage according to the table below.

Criteria	Judgement
12.8 V or higher	Good
12.0 ~ lower than 12.8 V	Charge insufficient → Recharge
lower than 12.0 V	Unserviceable → Replace

**(Other than ID Models)**

- After recharging, record [A] the charging date and the name of person in charge of this job to the battery recharging record label [B] if necessary.

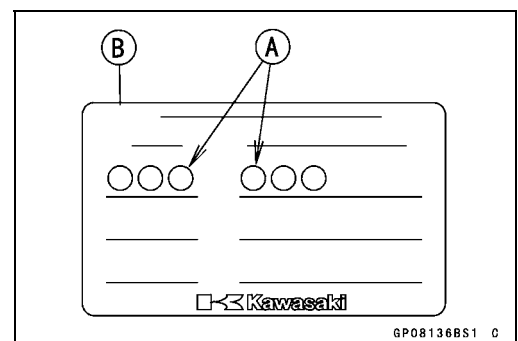


## 16-26 ELECTRICAL SYSTEM


### Charging System

#### **Alternator Cover Removal**

- Drain the engine oil (see Engine Oil Change in the Periodic Maintenance chapter).
- Remove :
  - Left Side Cover (see Side Cover Removal in the Frame chapter)
  - Engine Sprocket Cover (see Engine Sprocket Cover Removal in the Final Drive chapter)
- Disconnect the alternator lead connector [A].
- Open the rubber band [B].

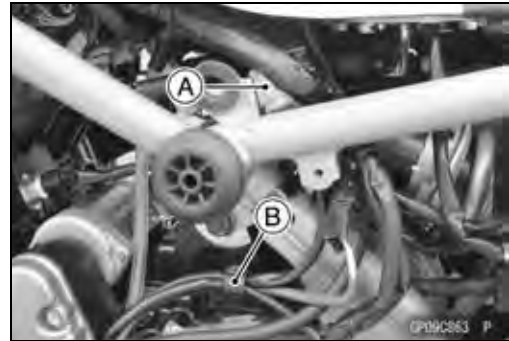

- Place a suitable container under the alternator cover [A].
- Remove:
  - Alternator Cover Bolts [B]
  - Clamp [C]
  - Alternator Cover

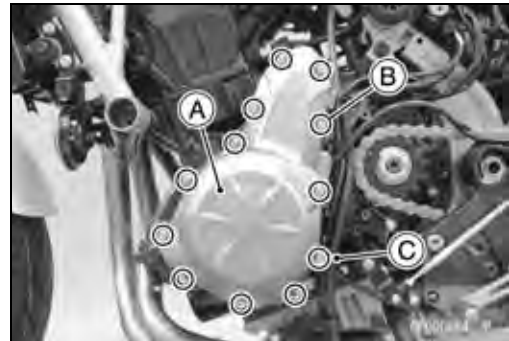


#### **Alternator Cover Installation**


- Using a high flash-point solvent, clean off any oil or dirt that may be on the liquid gasket coating area. Dry them with a clean cloth.
- Apply liquid gasket to the alternator lead grommet and crankcase halves mating surface [A] on the front and rear sides of the cover mount.

**Sealant - Liquid Gasket, TB1211F: 92104-0004**

- Check that dowel pins [B] are in place on the crankcase.
- Replace the alternator cover gasket with a new one.

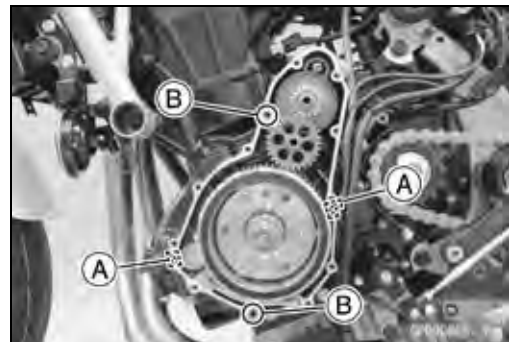


- Install:
  - Alternator Cover [A]
  - Alternator Cover Bolts, 25 mm (1.0 in.) [B]
  - Alternator Cover Bolts, 35 mm (1.4 in.) [C]
  - Alternator Cover Bolts, 70 mm (2.8 in.) [D]
  - Clamp [E]

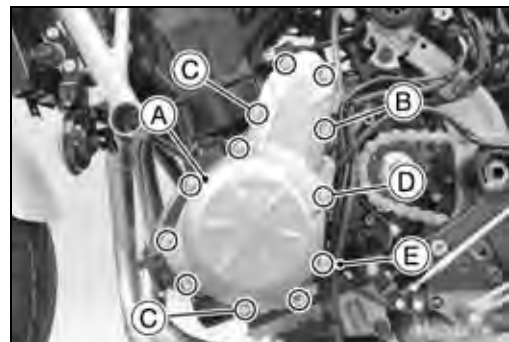

## Charging System

- Tighten the alternator cover bolts following the specified tighten sequence [1 ~ 14].

**Torque - Alternator Cover Bolts: 12 N·m (1.2 kgf·m, 106 in·lb)**

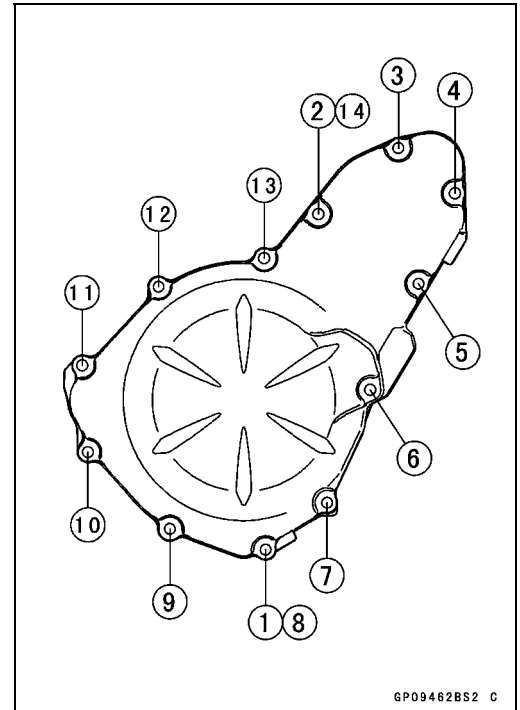

- Run the alternator lead correctly (see Cable, Wire, and Hose Routing section in the Appendix chapter).
- Connect the alternator lead connector.
- Install the removed parts (see appropriate chapters).

### **Stator Coil Removal**

- Remove:
  - Alternator Cover (see Alternator Cover Removal)
  - Alternator Lead Holding Plate Bolt [A] and Plate
  - Alternator Lead Grommet [B]
  - Stator Coil Bolts [C]
- Remove the stator coil [D] from the alternator cover.



## 16-28 ELECTRICAL SYSTEM

### Charging System

#### Stator Coil Installation

- Install the stator coil [A] to the alternator cover.
- Apply a non-permanent locking agent to the threads of the stator coil bolts [B] and tighten them.

**Torque - Stator Coil Bolts: 12 N·m (1.2 kgf·m, 106 in·lb)**


- Secure the alternator lead with a holding plate [C].
- Align the cut-out [D] on the holding plate with the pin on the alternator cover.
- Apply a non-permanent locking agent to the threads of the plate bolt [E] and tighten it.

**Torque - Alternator Lead Holding Plate Bolt: 9.8 N·m (1.0 kgf·m, 87 in·lb)**

- Using a high flash-point solvent, clean off any oil or dirt that may be on the liquid gasket coating area. Dry them with a clean cloth.
- Apply liquid gasket to the circumference of the alternator lead grommet [F], and fit the grommet into the notch of the cover securely.


**Sealant - Liquid Gasket, TB1211F: 92104-0004**

- Install the alternator cover (see Alternator Cover Installation).

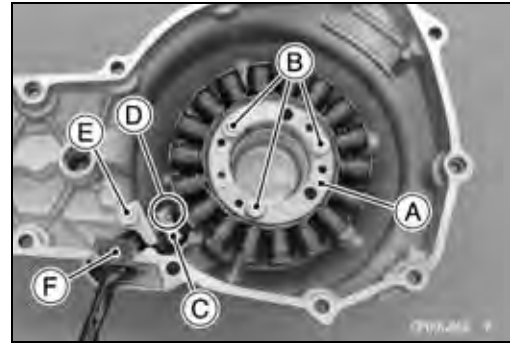

#### Alternator Rotor Removal


- Remove:
  - Alternator Cover (see Alternator Cover Removal)
  - Starter Idle Gear [A] and Shaft [B]
  - Torque Limiter [C] and Shaft [D]

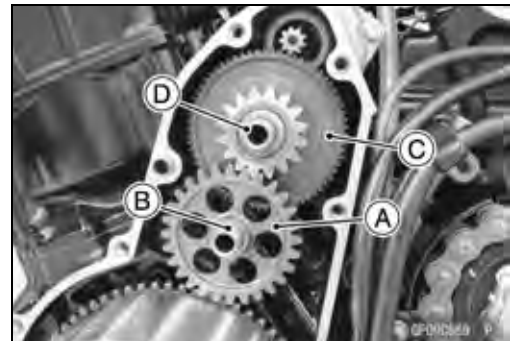

- Hold the alternator rotor steady with the rotor holder [A].
- Remove the rotor bolt [B] and washer.

**Special Tools - Grip [C]: 57001-1591**

**Rotor Holder: 57001-1658**

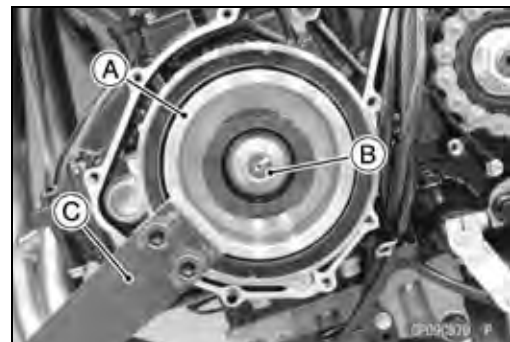



## Charging System


- Using the flywheel puller [A], remove the alternator rotor [B] from the crankshaft.

**Special Tool - Flywheel Puller Assembly, M38 x 1.5/M35 x 1.5: 57001-1615**

### NOTICE


**Do not attempt to strike the alternator rotor itself. Striking the rotor can cause the magnets to lose their magnetism.**

- Remove:  
Washer [A]  
Starter Clutch Gear [B]

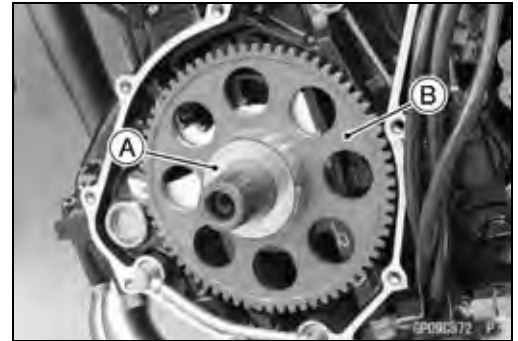


### Alternator Rotor Installation


- Using a cleaning fluid, clean off any oil or dirt on the following portions and dry them with a clean cloth.  
Crankshaft Tapered Portion [A]  
Alternator Rotor Tapered Portion [B]
- Apply a thin coat of molybdenum disulfide grease [C] to the crankshaft.

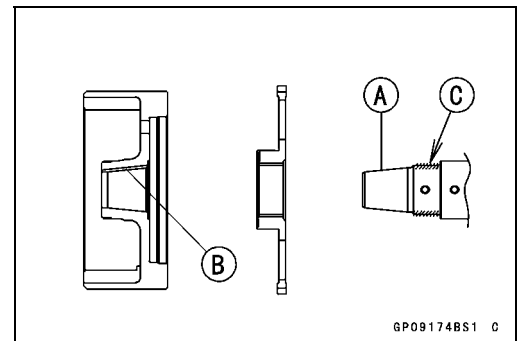

- Install the starter clutch gear [A] and washer [B].
- Again, clean the crankshaft tapered portion [C] and dry there.

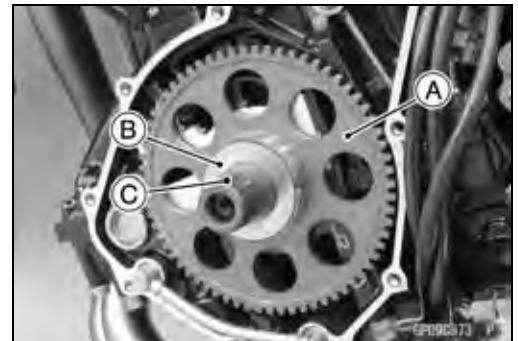

- Install the alternator rotor [A] while turning the starter clutch gear [B] clockwise [C].

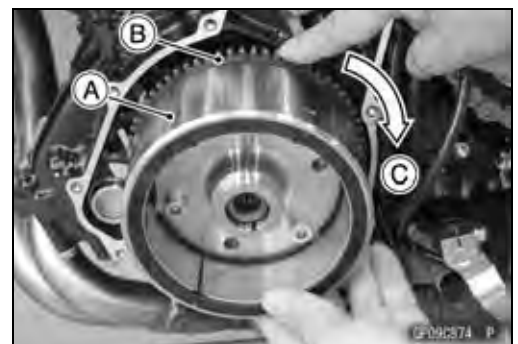

## 16-30 ELECTRICAL SYSTEM


### Charging System

- Install the washer [A].
- Apply molybdenum disulfide oil solution to the threads and seating surface of the rotor bolt [B].

#### NOTE

○ Confirm the alternator rotor fit or not to the crankshaft before tightening it with specified torque.

- Install the rotor bolt and tighten it with 70 N·m (7.1 kgf·m, 52 ft·lb) of torque.

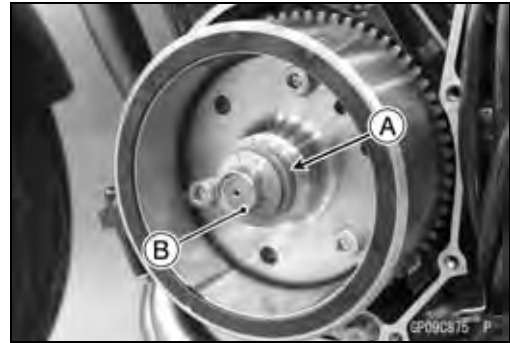

- Remove the rotor bolt and washer.
- Check the tightening torque with flywheel puller [A].

**Special Tool - Flywheel Puller Assembly, M38 x 1.5/M35 x 1.5: 57001-1615**


- ★ If the rotor [B] is not pulled out with 20 N·m (2.0 kgf·m, 15 ft·lb) of drawing torque, it is installed correctly.
- ★ If the rotor is pulled out with under 20 N·m (2.0 kgf·m, 15 ft·lb) of drawing torque, clean off any oil dirt or flaw of the crankshaft and rotor tapered portion, and dry them with a clean cloth. Then, confirm that it is not pulled out with above torque.




- Apply molybdenum disulfide oil solution to the threads and seating surface of the rotor bolt [A].
- Install the washer and rotor bolt.
- Tighten the alternator rotor bolt while holding the alternator rotor steadily with the holder [B].

**Special Tools - Grip [C]: 57001-1591**  
**Rotor Holder: 57001-1658**

**Torque - Alternator Rotor Bolt: 200 N·m (20.4 kgf·m, 148 ft·lb)**

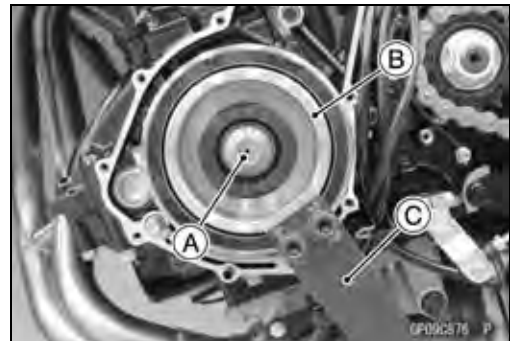


- Apply a thin coat of molybdenum disulfide grease to the shafts [A].
- Instal:
  - Shafts
  - Torque Limiter [B]
  - Starter Idle Gear [C]
  - Alternator Cover (see Alternator Cover Installation)

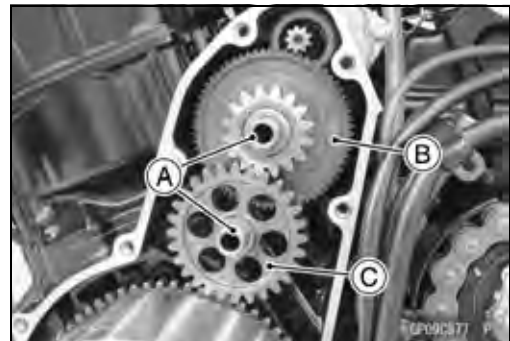

## Charging System

### Charging Voltage Inspection

- Check the battery condition (see Charging Condition Inspection).
- Warm up the engine to obtain actual alternator operating conditions.
- Remove the front seat (see Front Seat Removal in the Frame chapter).
- Check that the ignition switch is turned off, and connect a tester [A] to the battery terminals [B].
- Start the engine, and note the voltage readings at various engine speeds (except idling engine speed) with the headlight turned on and then turned off (To turn off the headlight; disconnect the headlight connector on the headlight unit.). The readings should show nearly battery voltage when the engine speed is low, and, as the engine speed rises, the readings should also rise. But they must be kept under the specified voltage.

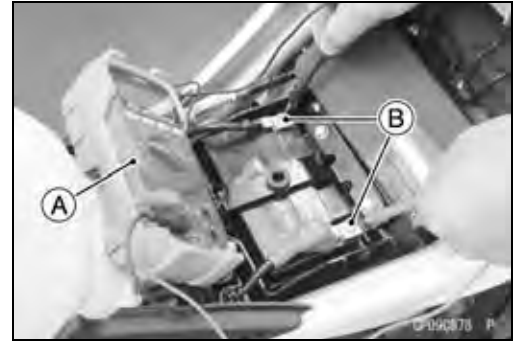

### Charging Voltage

@25°C (77°F)

Connections		Reading
Tester (+) to	Tester (-) to	
Battery (+)	Battery (-)	DC 14.3 ~ 14.7 V

- Turn off the ignition switch to stop the engine, and disconnect the tester.
- ★ If the charging voltage is kept between the values given in the table, the charging system is considered to be working normally.
- ★ If the charging voltage is much higher than the values specified in the table, the regulator/rectifier is defective or the regulator/rectifier leads are loose or open.
- ★ If the charging voltage does not rise as the engine speed increases, then the regulator/rectifier is defective or the alternator output is insufficient for the loads. Check the alternator and regulator/rectifier to determine which part is defective.

### Alternator Inspection

There are three types of alternator failures: short, open (wire burned out), or loss in rotor magnetism. A short or open in one of the coil wires will result in either a low output, or no output at all. A loss in rotor magnetism, which may be caused by dropping or hitting the alternator, by leaving it near an electromagnetic field, or just by aging, will result in low output.

# 16-32 ELECTRICAL SYSTEM

## Charging System

- To check the alternator output voltage, do the following procedures.
- Turn the ignition switch off.
- Remove the left front frame cover (see Front Frame Cover Removal in the Frame chapter).
- Remove the left side cover (see Side Cover Removal in the Frame chapter)
- Disconnect the alternator lead connector [A].
- Connect a tester as shown in the table 1.
- Start the engine.
- Run it at the rpm given in the table 1.
- Note the voltage readings (total 3 measurements).



**Table 1 Alternator Output Voltage @ 4 000 r/min (rpm)**

Connections		Reading
Tester (+) to	Tester (-) to	
One Black lead	Another Black lead	AC 41 ~ 62 V

- ★ If the output voltage shows the value in the table, the alternator operates properly.
- ★ If the output voltage shows a much lower reading than that given in the table, stop the engine and inspect the stator coil resistance.
- Check the stator coil resistance as follows.
- Stop the engine.
- Connect the tester as shown in the table 2.
- Note the readings (total 3 measurements).

**Table 2 Stator Coil Resistance @ 20°C (68°F)**


Connections		Reading
Tester (+) to	Tester (-) to	
One Black lead	Another Black lead	0.176 ~ 0.264 Ω

- When measuring the resistance, use a tester that can measure the standard value.
- ★ If there is more resistance than shown in the table, or no tester reading (infinity) for any two leads, the stator has an open lead and must be replaced. Much less than this resistance means the stator is shorted, and must be replaced.
- Measure the resistance between each of the black leads and chassis ground.
- ★ Any tester reading less than infinity ( $\infty$ ) indicates a short, necessitating stator replacement.
- ★ If the stator coils have normal resistance, but the voltage check showed the alternator to be defective; then the rotor magnets have probably weakened, and the rotor must be replaced.

## Charging System


### Regulator/Rectifier Removal

- Remove :
  - Right Middle Fairing (see Middle Fairing Removal in the Frame chapter)
  - Regulator/Rectifier Bolts [A]
- Disconnect the connector [B] and remove the regulator/rectifier [C].
- Remove the regulator/rectifier bracket bolt [D] and collar to remove the bracket if necessary.

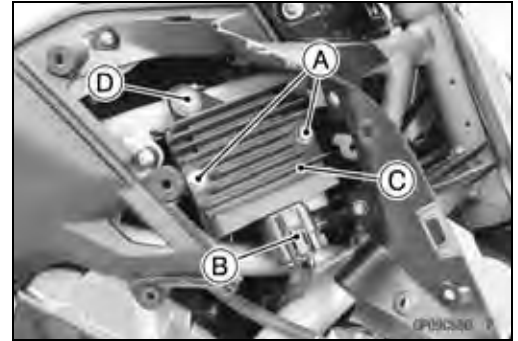


### Regulator/Rectifier Installation

- Install the rubber dampers [A] so that its thicker side [B] faces to the outward [C] or upward [D] as shown.
- Install the regulator/rectifier bracket [E].
- Tighten:
  - Torque - Regulator/Rectifier Bracket Bolt [F]: 9.8 N·m (1.0 kgf·m, 87 in·lb)

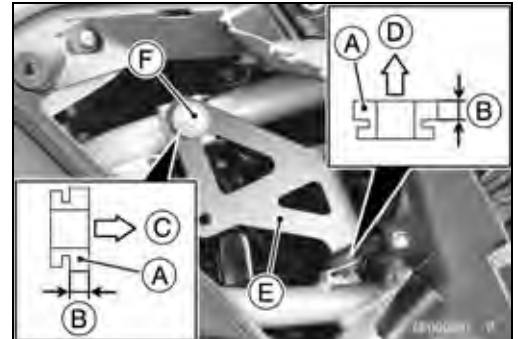

- Install the regulator/rectifier [A] on the bracket.
- Tighten:
  - Torque - Regulator/Rectifier Bolts [B]: 9.8 N·m (1.0 kgf·m, 87 in·lb)
- Connect the connector [C] to the regulator/rectifier.

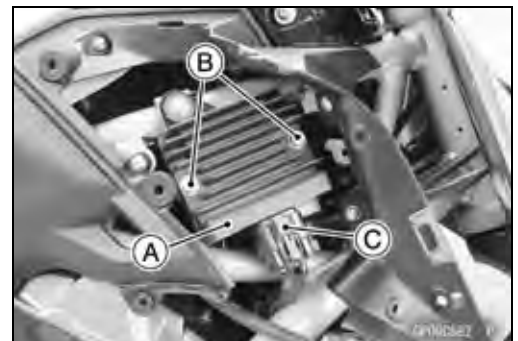

### Regulator/Rectifier Inspection

- Refer to the Charging System Troubleshooting for the Regulator/Rectifier Inspection.

### Charging System Troubleshooting

- Before inspection, remove all accessories that consume electrical power.


#### NOTE

○ Even when the charging system is working properly, the battery may discharge if the motorcycle is equipped with too many accessories.

- Pay attention to riding conditions and the customer's riding habits which could affect the charging system such as:
  - Frequent use at low engine speed
  - Frequent and unnecessary brake pedal dragging
 → Battery Discharged
- Recharge the battery if it is discharged.


# 16-34 ELECTRICAL SYSTEM

## Charging System

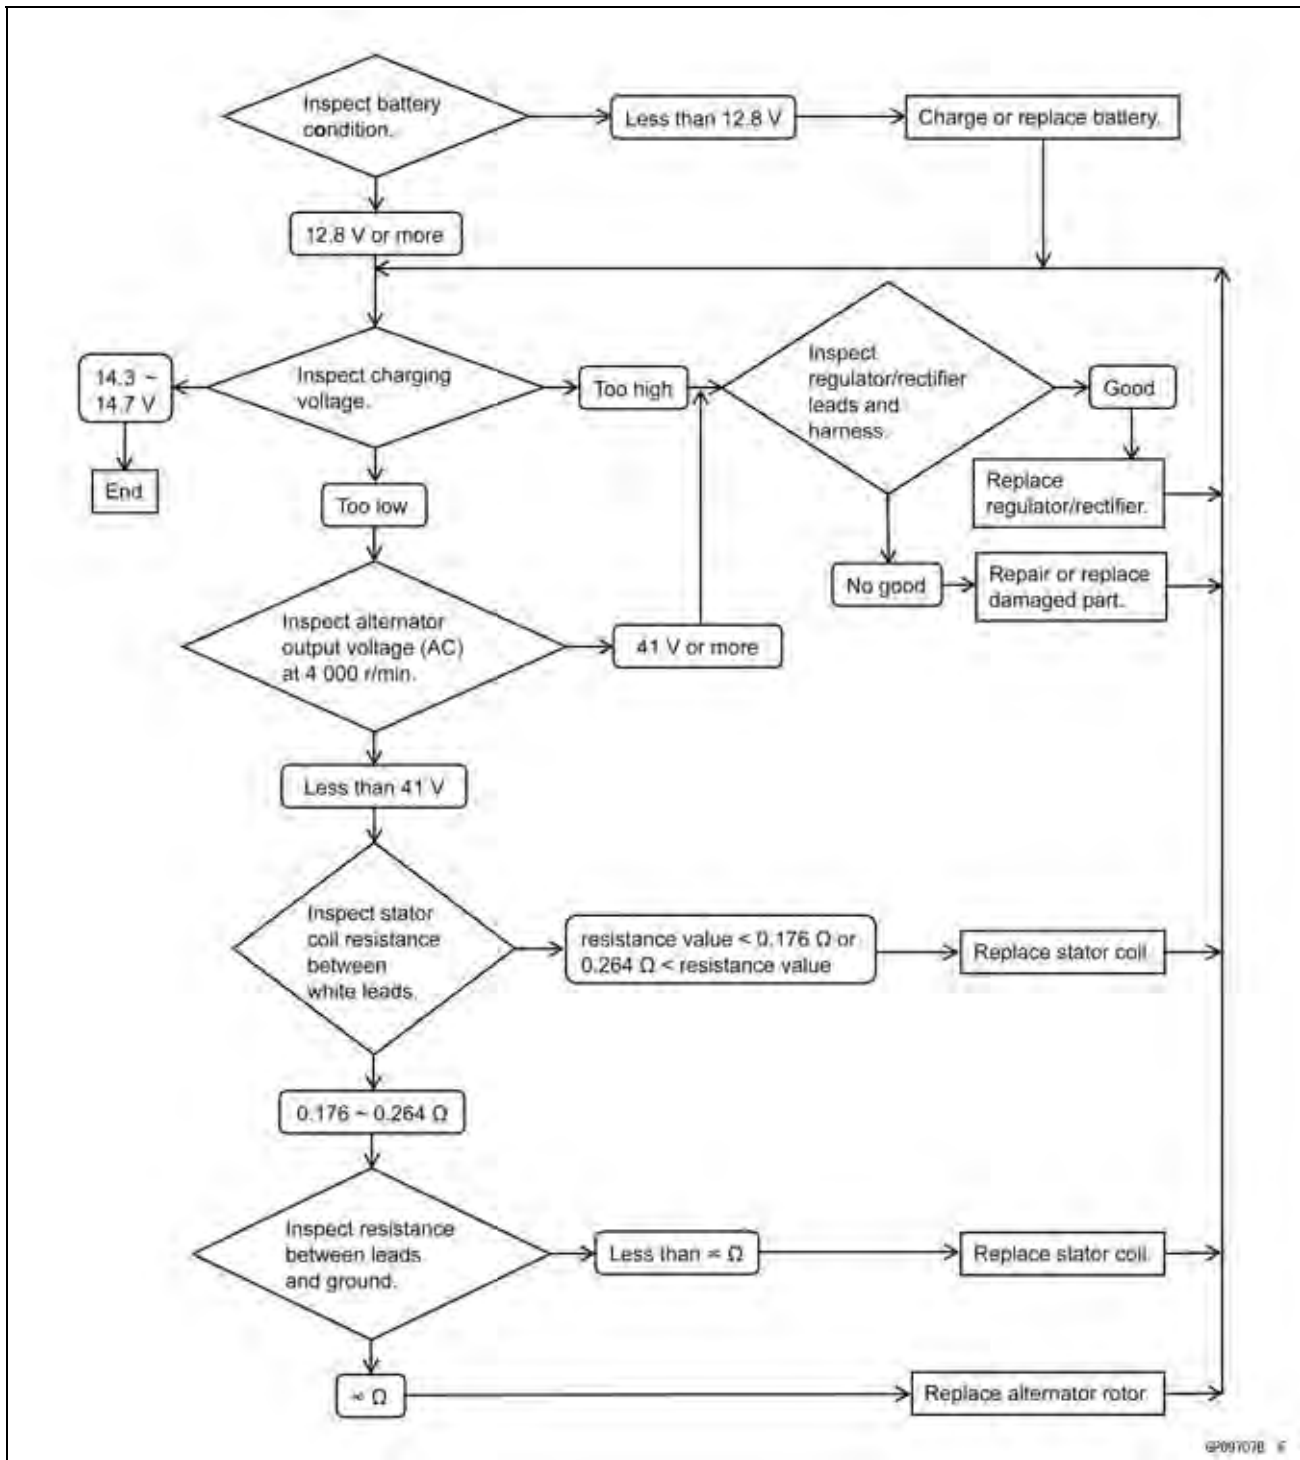

Charging System

Charging System Circuit

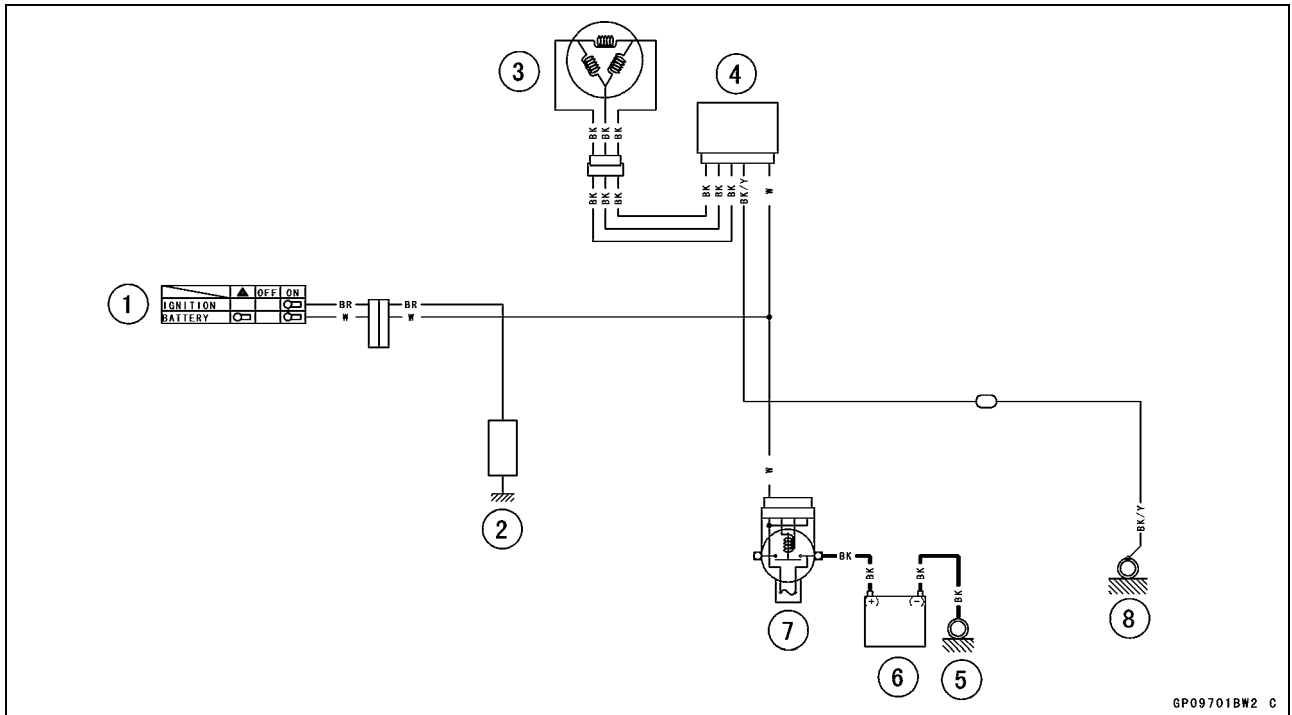

GP09701BW2 C

1. Ignition Switch
2. Load
3. Alternator
4. Regulator/Rectifier
5. Engine Ground
6. Battery
7. Main Fuse 30 A
8. Frame Ground (4)

## 16-36 ELECTRICAL SYSTEM

### Ignition System

#### **⚠ WARNING**

The ignition system produces extremely high voltage. Do not touch the spark plug, stick coil or stick coil lead while the engine is running, or you could receive a severe electrical shock.

#### **NOTICE**

Do not disconnect the battery cables or any other electrical connections when the ignition switch is on, or while the engine is running. This is to prevent ECU damage.


Do not install the battery backwards. The negative side is grounded. This is to prevent damage to the ECU.

### *Crankshaft Sensor Removal*

#### **NOTICE**

Never drop the sensor, especially on a hard surface. Such a shock to the sensor can damage it.

- Remove the right frame cover (see Frame Cover Removal in the Frame chapter).
- Disconnect:
  - Oil Pressure Switch Lead [A] (see Oil Pressure Switch Removal in the Engine Lubrication chapter)
- Clear the crankshaft sensor lead from the clamp [B] and guide [C].
- Remove the clutch cover [D] (see Clutch Cover Removal in the Clutch chapter).
  
- Remove:
  - Crankshaft Sensor Bolts [A]
- Pull out the grommet [B] to remove the crankshaft sensor [C].
  
- Disconnect the crankshaft sensor lead connector [A].
- Remove the crankshaft sensor.

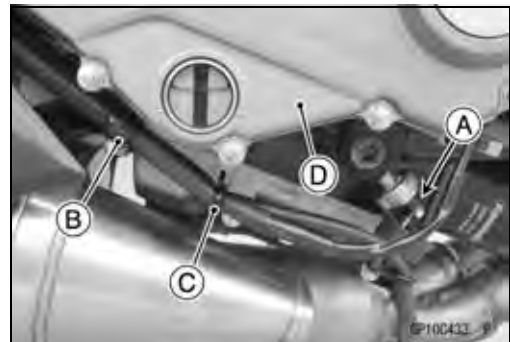




## Ignition System

### Crankshaft Sensor Installation

- Install the crankshaft sensor [A].
- When installing the sensor which is fastened by bolt, tighten the bolt after placing the sensor on the bottom surface completely.
- Tighten:
  - Torque - Crankshaft Sensor Bolts [B]: 6.0 N·m (0.61 kgf·m, 53 in·lb)**
- Using a high flash-point solvent, clean off any oil or dirt and apply liquid gasket to the circumference of the crankshaft sensor lead grommet [C].
- Sealant - Liquid Gasket, TB1211F: 92104-0004**
- Insert the grommet into the groove of the crankcase.
- Run the crankshaft sensor lead and oil pressure switch lead correctly (see Cable, Wire, and Hose Routing section in the Appendix chapter).
- Connect the crankshaft sensor lead connector [A].
- Connect the oil pressure switch lead to the oil pressure switch terminal (see Oil Pressure Switch Installation in the Engine Lubrication chapter).
- Install the removed parts (see appropriate chapters).

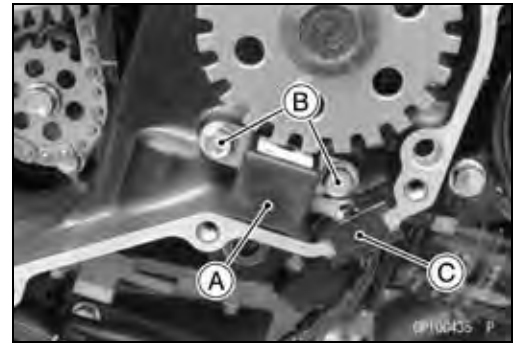


### Crankshaft Sensor Inspection

- Remove the right frame cover (see Frame Cover Removal in the Frame chapter).
- Disconnect the crankshaft sensor lead connector [A].
- Using a digital meter, measure the resistance between the yellow lead terminal [B] and black lead terminal [C] in the connector.

#### Crankshaft Sensor Resistance:

**Standard: 376 ~ 564  $\Omega$  @20°C (68°F)**

- ★ If there is more resistance than the specified value, the coil has an open lead and must be replaced. Much less than this resistance means the coil is shorted, and must be replaced.
- Measure the resistance between the crankshaft sensor leads and chassis ground.
- ★ Any tester reading less than infinity ( $\infty$ ) indicates a short, necessitating replacement of the crankshaft sensor.

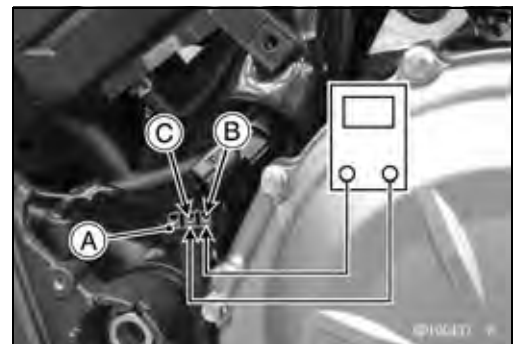

## 16-38 ELECTRICAL SYSTEM

### Ignition System

#### Crankshaft Sensor Peak Voltage Inspection

##### NOTE

- Be sure the battery is fully charged.
- Using the peak voltage adapter [A] is more reliable way to determine the condition of the crankshaft sensor than crankshaft sensor internal resistance measurements.

- Disconnect the crankshaft sensor lead connector [B] (see Alternator Cover Removal).
- Set a tester [C], and connect it peak voltage adapter.

**Special Tools - Peak Voltage Adapter: 57001-1415**

**Type: KEK-54-9-B**

**Needle Adapter Set [D]: 57001-1457**

- Connect the adapter to the terminals of the crankshaft sensor lead connector.

##### Connections:

Crankshaft Sensor Lead		Peak Voltage Adapter		Tester
Y lead	←	R lead	→	(+)
BK lead	←	BK lead	→	(-)

- Turn the engine stop switch to run position.
- Turn the ignition switch on.
- Pushing the starter button, turn the engine 4 ~ 5 seconds with the transmission gear in neutral to measure the crankshaft sensor peak voltage.
- Repeat the measurement 5 or more times.

##### Crankshaft Sensor Peak Voltage

**Standard: 3.0 V or more**

- ★ If the reading is less than the standard, inspect the crankshaft sensor (see Crankshaft Sensor Inspection).

#### Timing Rotor Removal

- Remove the crankshaft sensor (see Crankshaft Sensor Removal).
- Holding the timing rotor [A] with the rotor holder [B] and remove the timing rotor bolt [C] and washer.

**Special Tool - Rotor Holder: 57001-1567**

- Remove the timing rotor.




#### Timing Rotor Installation

- Install the timing rotor [A] with its stepped side [B] facing inward.
- Align the pin [C] on the crankshaft to the groove [D] of the timing rotor.
- Holding the timing rotor with the rotor holder and tighten the timing rotor bolt with washer.

**Torque - Timing Rotor Bolt: 40 N·m (4.1 kgf·m, 30 ft·lb)**

**Special Tool - Rotor Holder: 57001-1567**

- Install the crankshaft sensor (see Crankshaft Sensor Installation).

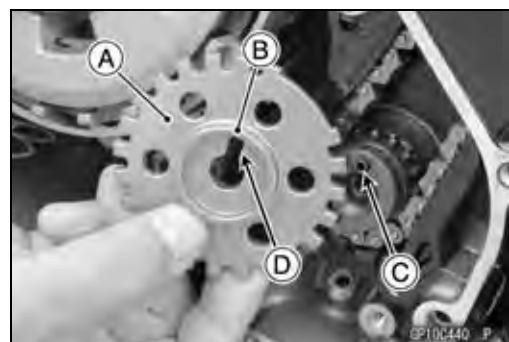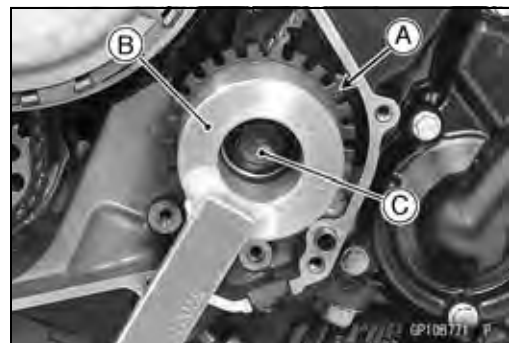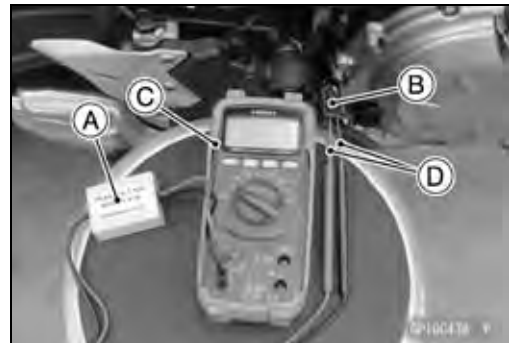

## Ignition System

### Stick Coil Removal

#### NOTICE

Never drop the stick coils, especially on a hard surface.  
Such a shock to the stick coils can damage it.

- Remove:
  - Air Cleaner Housing (see Air Cleaner Housing Removal in the Fuel System (DFI) chapter)
- Disconnect the stick coil connectors [A].
- Remove the stick coils [B].

#### NOTICE

Do not pry the connector part of the coil while removing the coil.

### Stick Coil Installation

- Insert the stick coils [A] so that the coil heads faces the arrow marks [B] on the cylinder head cover.

#### NOTICE

Do not tap the coil head while installing the coil.

- After installation, be sure the stick coils are installed securely by pulling up them lightly.
- Run the leads correctly (see Cable, Wire, and Hose Routing section in the Appendix chapter).
- Install the removed parts (see appropriate chapters).

### Stick Coil Inspection




- Remove the stick coils (see Stick Coil Removal).
- Measure the primary winding resistance [A] as follows.
  - Connect a tester between the coil terminals.
- Measure the secondary winding resistance [B] as follows.
  - Connect the tester between the plug terminal and (-) coil terminal.

#### Stick Coil Winding Resistance

Primary Windings: 1.11 ~ 1.50  $\Omega$  @20°C (68°F)

Secondary Windings: 6.4 ~ 9.6 k $\Omega$  @20°C (68°F)

- ★ If the tester does not read as specified, replace the coil.

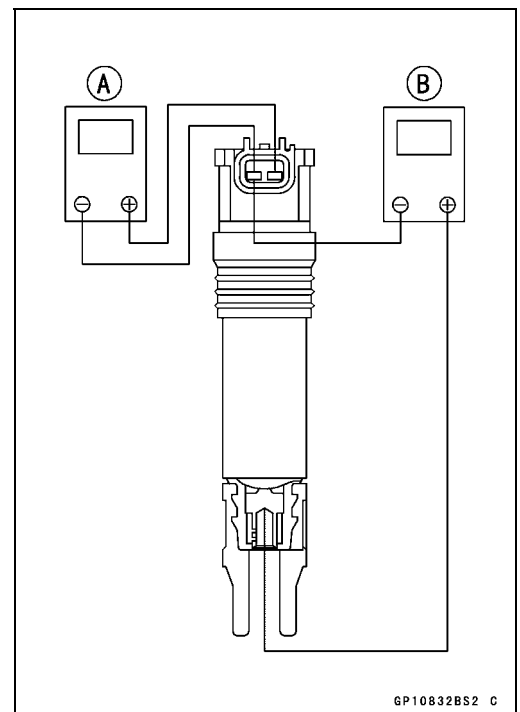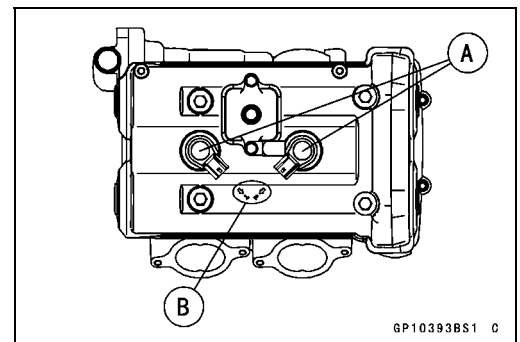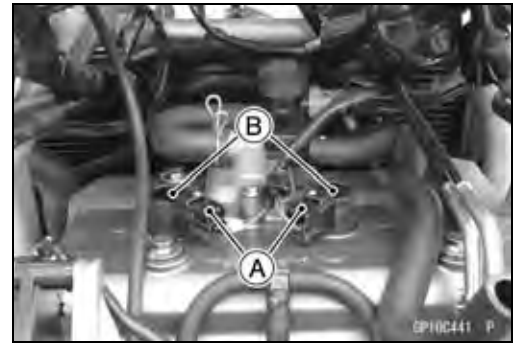

### Stick Coil Primary Peak Voltage Inspection


#### NOTE

- Be sure the battery is fully charged.

## 16-40 ELECTRICAL SYSTEM

### Ignition System


- Remove the stick coils (see Stick Coil Removal), but do not remove the spark plugs.
- Measure the primary peak voltage as follows.
- Install the new spark plug [A] into each stick coil [B], and ground them onto the engine.
- Connect the peak voltage adapter [C] into a tester [D].
- Connect the adapter to the lead wire-peak voltage adapter [E] which is connected between the stick coil connector and stick coil.
- ECU [F]
- Battery [G]

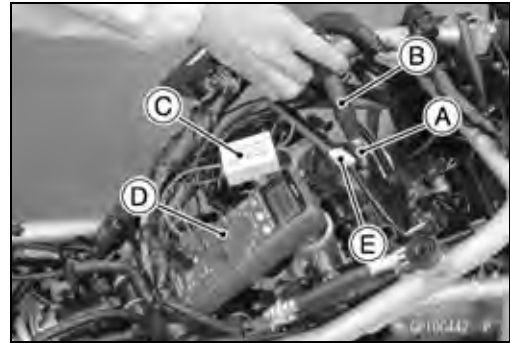

**Special Tools - Peak Voltage Adapter: 57001-1415**  
**Type: KEK-54-9-B**  
**Lead Wire - Peak Voltage Adapter: 57001-1449**

#### Primary Lead Connection

- Adapter (R, +) to lead wire-peak voltage adapter (R)
- Adapter (BK, -) to lead wire-peak voltage adapter (W)

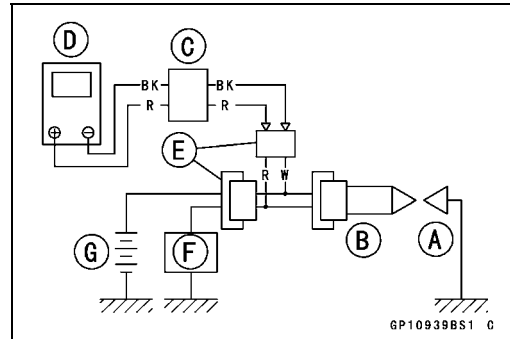

### **⚠ WARNING**

**To avoid extremely high voltage shocks, do not touch the spark plugs or tester connections.**

- Turn the engine stop switch to run position.
- Turn the ignition switch on.
- Pushing the starter button, turn the engine 4 ~ 5 seconds with the transmission in neutral to measure the primary peak voltage.
- Repeat the measurements 5 times for one stick coil.

#### Stick Coil Primary Peak Voltage

**Standard: 110 V or more**

- Repeat the test for the other stick coil.
- ★ If the reading is less than the specified value, check the following.
  - Stick Coils (see Stick Coil Inspection)
  - Crankshaft Sensor (see Crankshaft Sensor Inspection)
  - ECU (see ECU Power Supply Inspection in the Fuel System (DFI) chapter)

#### **Spark Plug Removal**

- Refer to the Spark Plug Replacement in the Periodic Maintenance chapter.

#### **Spark Plug Installation**

- Refer to the Spark Plug Replacement in the Periodic Maintenance chapter.

## Ignition System


### Spark Plug Condition Inspection

- Remove the spark plugs (see Spark Plug Replacement in the Periodic Maintenance chapter).
- Visually inspect the spark plugs.
- ★ If the spark plug center electrode [A] and/or side electrode [B] are corroded or damaged, or if the insulator [C] is cracked, replace the plug.
- ★ If the spark plug is dirtied or the carbon is accumulated, replace the spark plug.
- Measure the gap [D] with a wire-type thickness gauge.
- ★ If the gap is incorrect, replace the spark plug.

**Spark Plug Gap: 0.8 ~ 0.9 mm (0.031 ~ 0.035 in.)**

- Use the standard spark plug or its equivalent.

**Spark Plug: NGK CR9EIA-9**

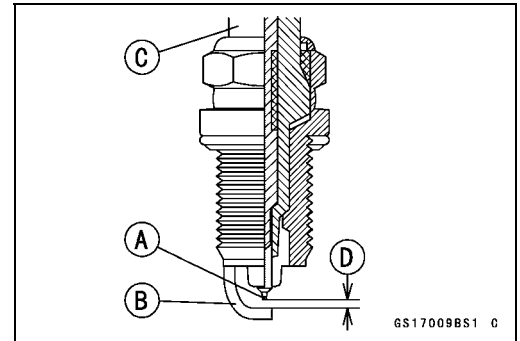

### Interlock Operation Inspection

- Raise the rear wheel off the ground with the stand.
- Turn the engine stop switch on (run position).

#### 1st Check

- Start the engine to the following conditions.

##### Condition:

**Transmission Gear → 1st Position**

**Clutch Lever → Release**

**Side Stand → Down or Up**

- Turn the ignition switch on and push the starter button.
- Then the starter motor should not turn when the starter system circuit is normality.
- ★ If the engine is start, inspect the starter lockout switch, gear position sensor and relay box.

#### 2nd Check

- Start the engine to the following conditions.

##### Condition:

**Transmission Gear → 1st Position**

**Clutch Lever → Pulled in**

**Side Stand → Up**

- Turn the ignition switch on and push the starter button.
- Then the starter motor should turn when the starter system circuit is normality.
- ★ If the starter motor is not turn, inspect the starter lockout switch, side stand switch, relay box, and starter relay.

## 16-42 ELECTRICAL SYSTEM

### Ignition System

---

#### 3rd Check

- Inspect the engine for its secure stop after the following operations are completed.
- Run the engine to the following conditions.

#### Condition:

**Transmission Gear** → 1st Position

**Clutch Lever** → Release


**Side Stand** → Up

- Set the side stand on the ground, then the engine will stop.
- ★ If the engine does not stop, inspect the gear position sensor, side stand switch and relay box.
- ★ If their parts are normality, replace the ECU.

#### **IC Igniter Inspection**


○ The IC igniter is built in the ECU [A].

- Refer to the following items.
  - Interlock Operation Inspection (see Interlock Operation Inspection)
  - Ignition System Troubleshooting (see Ignition System section)
  - ECU Power Supply Inspection (see ECU Power Supply Inspection in the Fuel System (DFI) chapter)

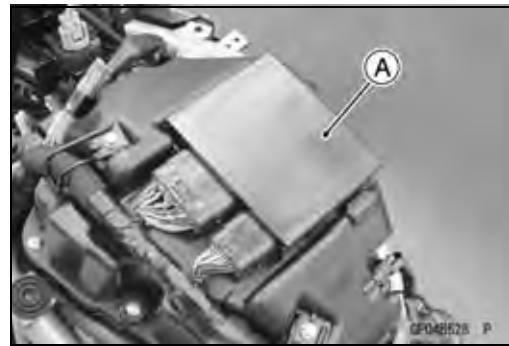

Ignition System


Ignition System Troubleshooting

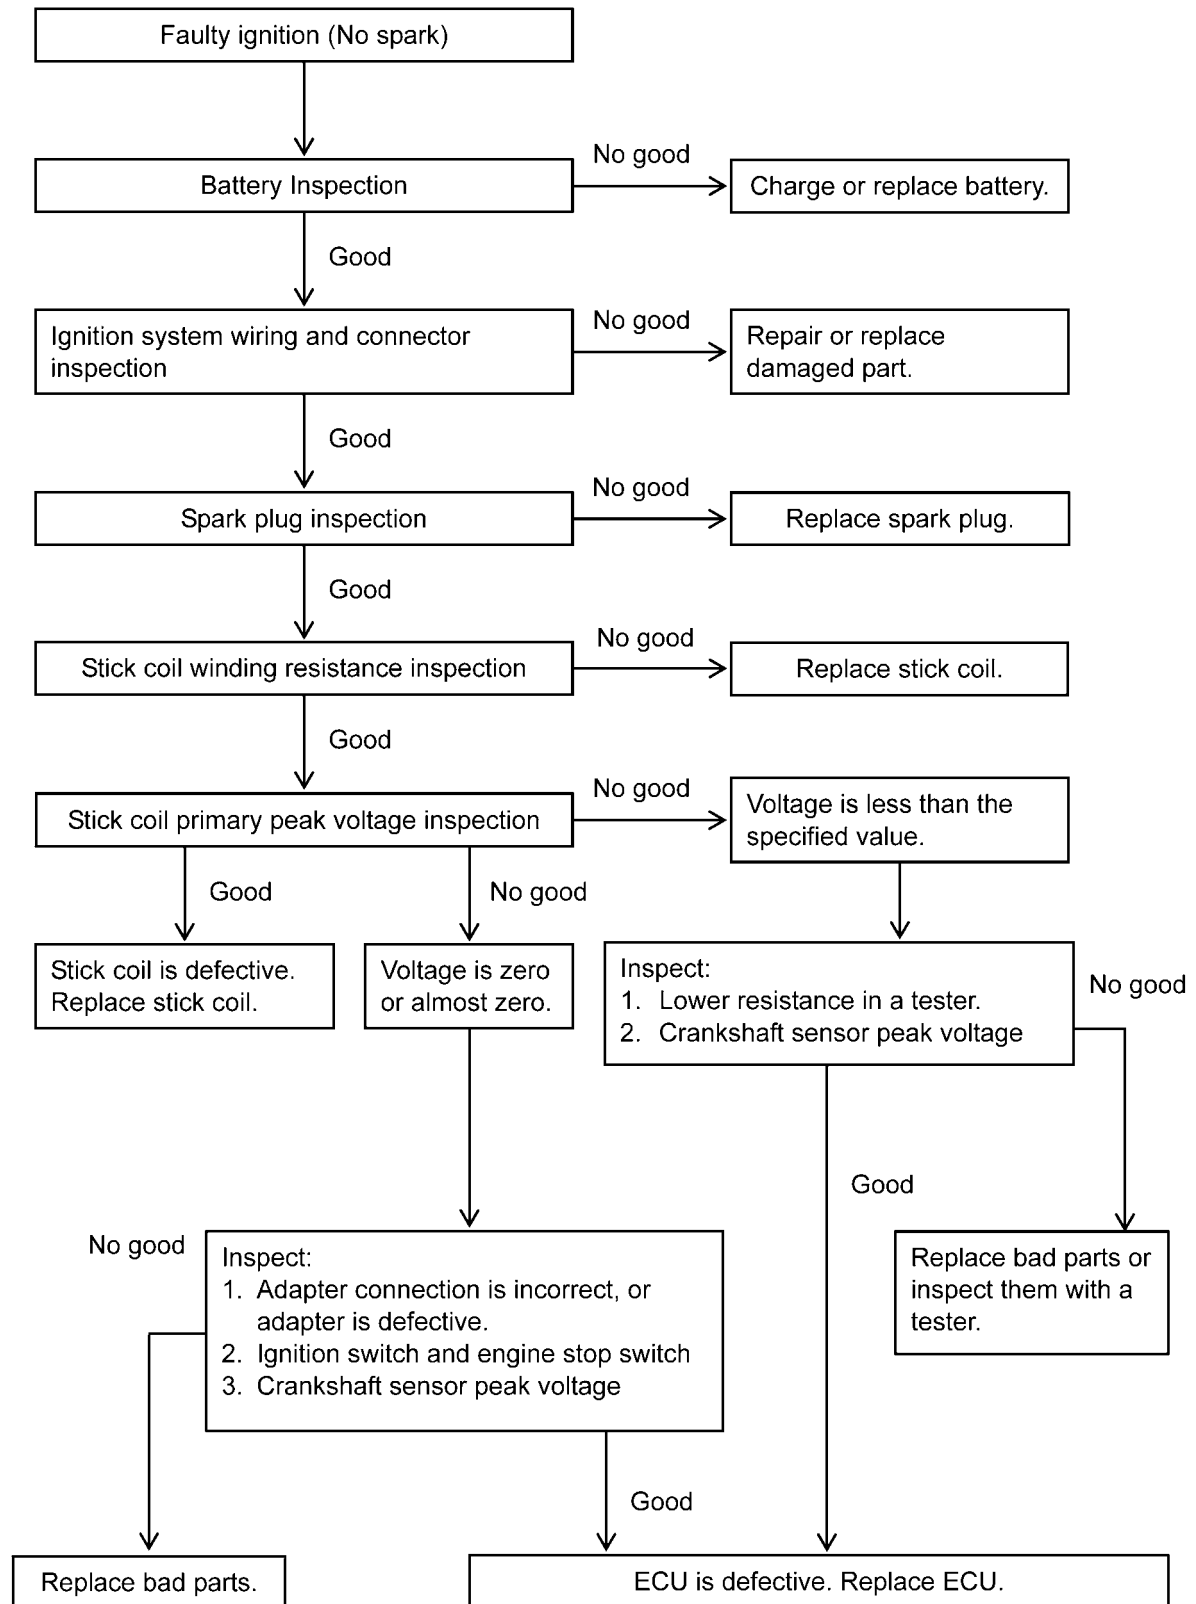

# 16-44 ELECTRICAL SYSTEM

## Ignition System

### Ignition System Circuit

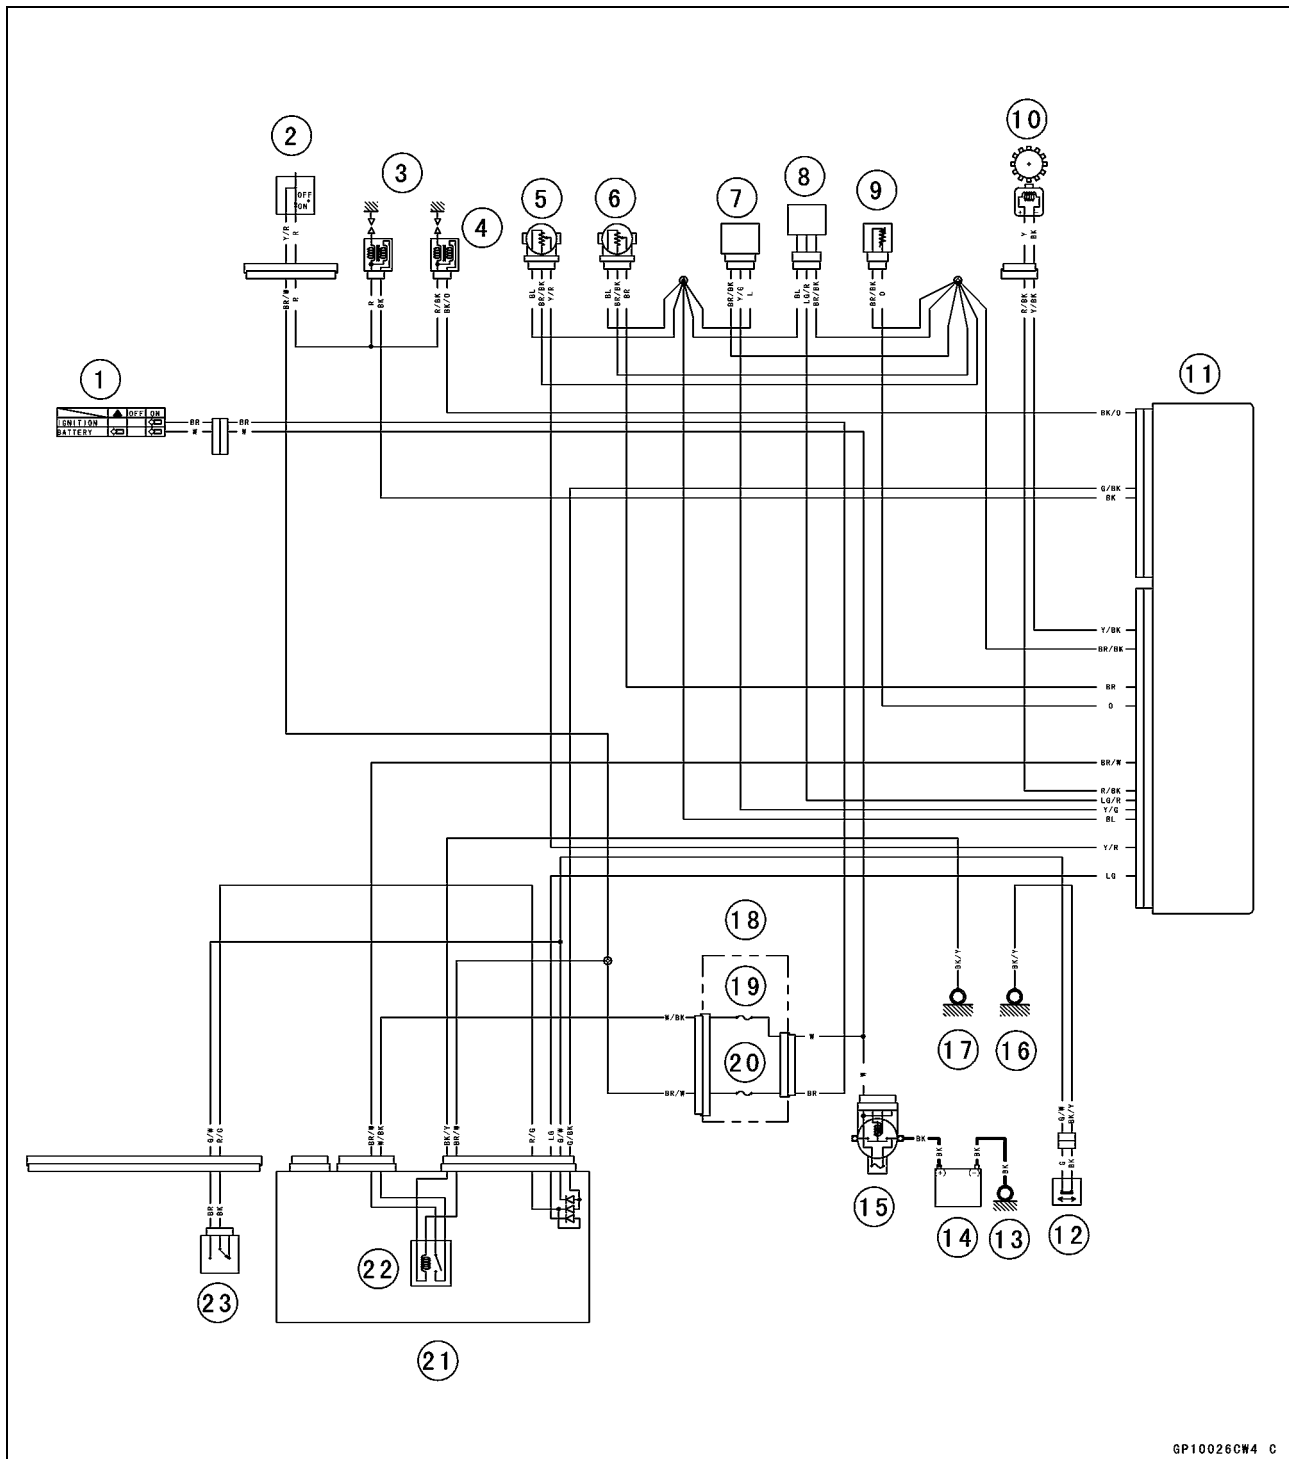

GP10026CW4 C

- |                             |                            |
|-----------------------------|----------------------------|
| 1. Ignition Switch          | 13. Engine Ground          |
| 2. Engine Stop Switch       | 14. Battery                |
| 3. Spark Plugs              | 15. Main Fuse 30 A         |
| 4. Stick Coils              | 16. Frame Ground (5)       |
| 5. Main Throttle Sensor     | 17. Frame Ground (4)       |
| 6. Subthrottle Sensor       | 18. Fuse Box (1)           |
| 7. Vehicle-down Sensor      | 19. ECU Fuse 15 A          |
| 8. Gear Position Sensor     | 20. Ignition Fuse 10 A     |
| 9. Water Temperature Sensor | 21. Relay Box              |
| 10. Crankshaft Sensor       | 22. ECU Main Relay         |
| 11. ECU                     | 23. Starter Lockout Switch |
| 12. Side Stand Switch       |                            |



## Electric Starter System

### Starter Motor Removal


#### NOTICE

**Do not tap the starter motor shaft or body. Tapping the shaft or body could damage the motor.**

- Disconnect the water temperature sensor connector [A].



- Slide back the rubber cap [A].
- Remove the starter motor cable terminal nut [B].
- Remove the mounting bolts [C].
- Pull out the starter motor [D] to the right side.

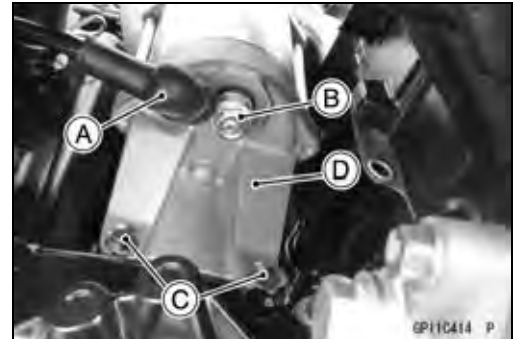

- Remove the starter motor [A] from the left side on the engine.




### Starter Motor Installation

#### NOTICE

**Do not tap the starter motor shaft or body. Tapping the shaft or body could damage the motor.**

- When installing the starter motor, clean the starter motor legs [A] and crankcase [B] where the starter motor is grounded.

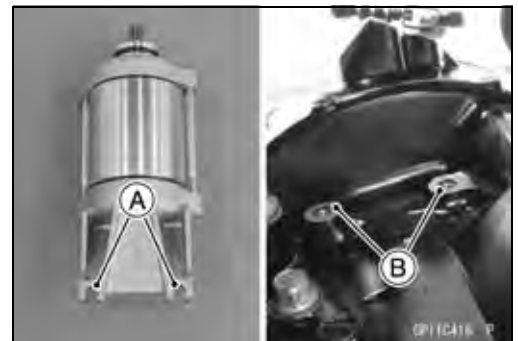

- Replace the O-ring [A] with a new one.
- Apply grease to the O-ring.
- Apply a non-permanent locking agent to the threads of the bolts and tighten them.


**Torque - Starter Motor Mounting Bolts: 9.8 N-m (1.0 kgf-m, 87 in-lb)**



# 16-46 ELECTRICAL SYSTEM

## Electric Starter System

- Position the starter motor cable [A] as shown.  
About 90° [B]  
Rear [C]
- Tighten:  
**Torque - Starter Motor Cable Terminal Nut: 6.0 N-m (0.61 kgf-m, 53 in-lb)**
- Slide back the rubber cap to the original position.

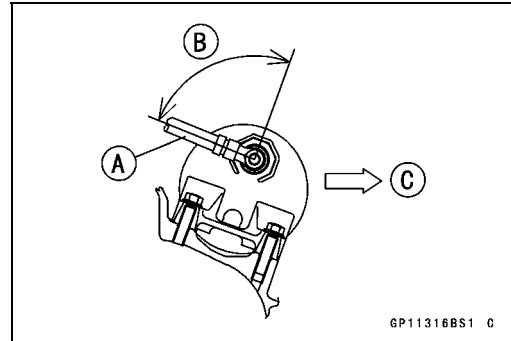

### Starter Motor Disassembly


- Remove the starter motor (see Starter Motor Removal).
- Take off the starter motor through bolts [A] and remove the both end covers [B].



- Remove the armature [A] from the commutator side.

#### NOTE


○Do not remove the circlip [B] from the shaft.

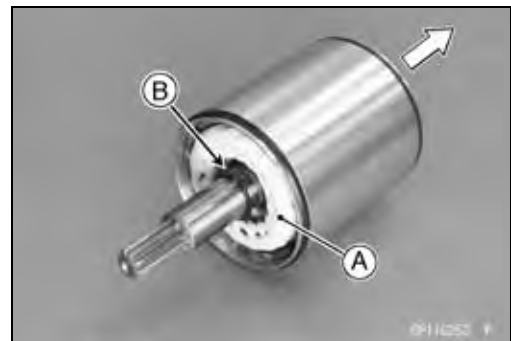

- Remove:  
Starter Motor Terminal Locknut [A]  
Washer  
Collar




- Pull out the brushes from the brush holder [A].
- Remove:  
Brush Springs [B]  
Starter Motor Terminal [C] and O-ring  
Positive Brush Assy [D]  
Starter Motor Brush Holder Screw [E]  
Negative Brush Assy [F]  
Brush Holder

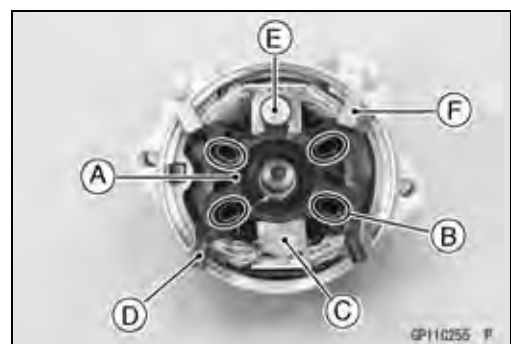


## Electric Starter System

### Starter Motor Assembly


- Align the hole [A] of the brush holder [B] to the boss [C] of the right-hand end cover [D].

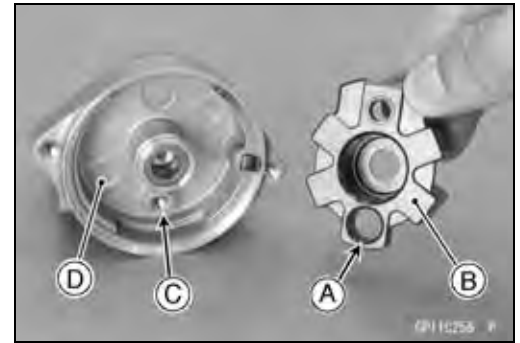


- Align the stoppers [A] of the negative brush assy [B] to the grooves [C] of the brush holder [D].
- Tighten:  
**Torque - Brush Holder Screw: 3.8 N·m (0.39 kgf·m, 34 in·lb)**

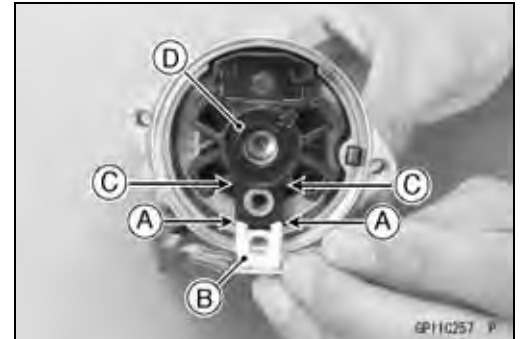


- Align the stoppers [A] of the positive brush assy [B] to the grooves [C] of the brush holder [D].
- Install the starter motor terminal.

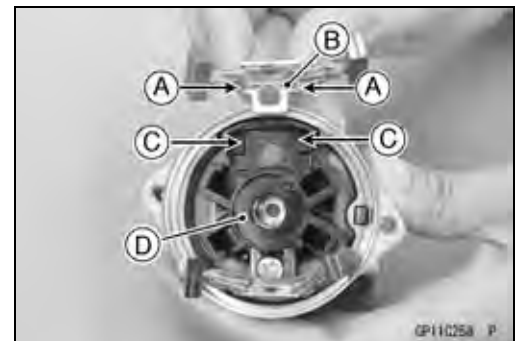

- Replace the O-ring [A] with a new one.
- Install the following parts to the starter motor terminal [B].  
 New O-ring  
 Collar [C]  
 Washer [D]  
 Starter Motor Terminal Locknut [E]
- Install the collar so that stepped side faces outward.
- Tighten:  
**Torque - Starter Motor Terminal Locknut: 11 N·m (1.1 kgf·m, 97 in·lb)**

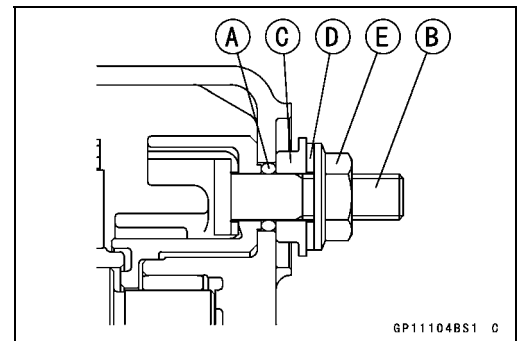

- Install the brush springs [A] and insert the brushes [B].

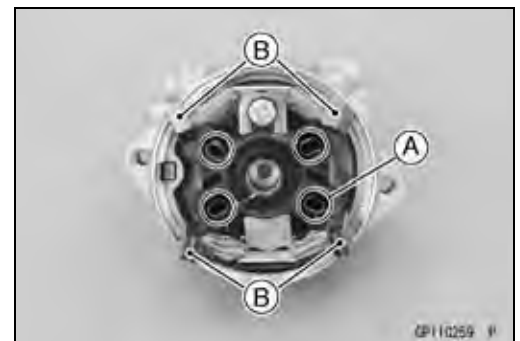


## 16-48 ELECTRICAL SYSTEM

### Electric Starter System

- Apply thin coat of grease to the oil seal [A].



- Replace the O-rings [A] with new ones.
- Insert the armature [B] so that commutator side [C] faces hollow side [D] of the yoke.

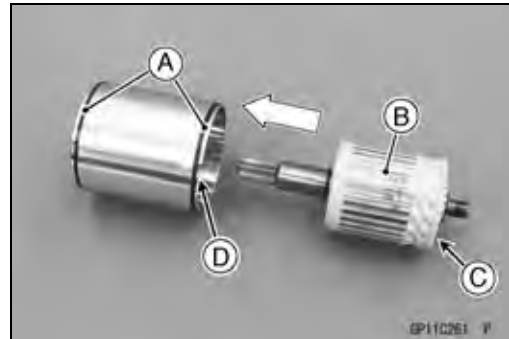


- Install the end cover [A] so that the stopper [B] is aligned with the hollow [C] of the yoke.



- Align the marks [A] to assembly the yoke and the end covers [B] as shown.
- Tighten the through bolts.

**Torque - Starter Motor Through Bolts: 5.0 N·m (0.51 kgf·m, 44 in·lb)**

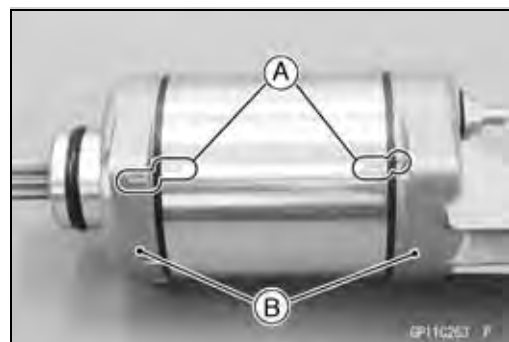

#### **Brush Inspection**

- Measure the length of each brush [A].
- ★ If any is worn down to the service limit, replace the brush assy.

#### **Starter Motor Brush Length**

**Standard: 12.0 mm (0.47 in.)**

**Service Limit: 6.5 mm (0.26 in.)**



## Electric Starter System


### Commutator Cleaning and Inspection

- Clean the metallic debris off the between commutator segments [A].

#### NOTE


○ Do not use emery or sand paper on the commutator.

- Check the commutator for damage or abnormal wear.
- ★ Replace the starter motor with a new one if there is any damage or wear.
- Visually inspect the commutator segments for discoloration.
- ★ Replace the starter motor with a new one if discoloration is noticed.

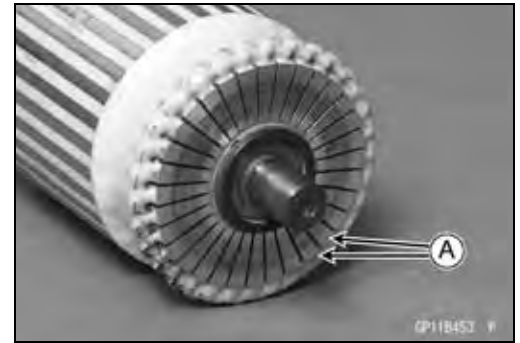

### Armature Inspection

- Using a tester, measure the resistance between any two commutator segments [A].
- ★ If there is a high resistance or no reading ( $\infty$ ) between any two segments, a winding is open and the starter motor must be replaced.
- Using the tester, measure the resistance between the segments and the shaft [B].
- ★ If there is any reading at all, the armature has a short and the starter motor must be replaced.

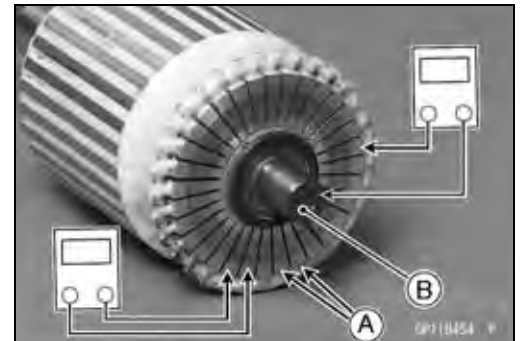


#### NOTE

○ Even if the foregoing checks show the armature to be good, it may be defective in some manner not readily detectable with the tester. If all other starter motor and starter motor circuit components check good, but the starter motor still does not turn over or only turns over weakly, replace the starter motor with a new one.


### Brush Lead Inspection

- Using a tester, measure the resistance as shown. Terminal Bolt and Positive Brushes [A]  
Right-hand End Cover and Negative Brushes [B]
- ★ If there is not close to zero ohms, the brush lead has an open. Replace the brush plate assy.

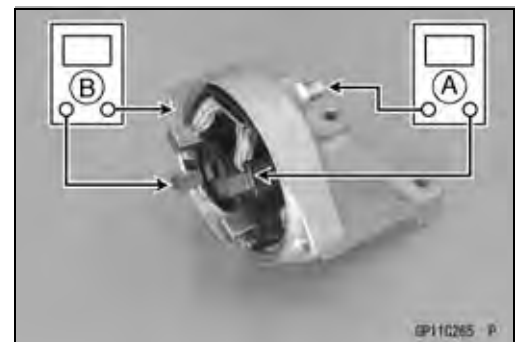

### Right-hand End Cover Inspection

- Using a tester, measure the resistance as shown. Terminal Bolt and Right-hand End Cover [A]  
Terminal Bolt and Negative Brushes [B]
- ★ If there is any reading, the brush assy and/or terminal bolt assy have a short. Replace the starter motor.

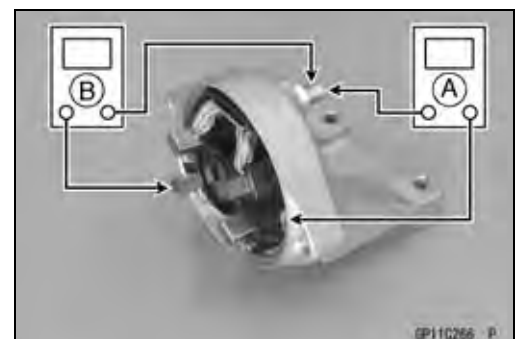

# 16-50 ELECTRICAL SYSTEM


## Electric Starter System

### Starter Relay Inspection

- Disconnect the negative (-) cable (see Battery Removal)
- Remove the left side cover (see Side Cover Removal in the Frame chapter).
- Pull the starter relay [A] out from the bracket.




- Slide the dust cover [A].
- Disconnect:
  - Connector [B]
- Remove:
  - Cable Terminal Bolts [C]
  - Starter Relay [D]

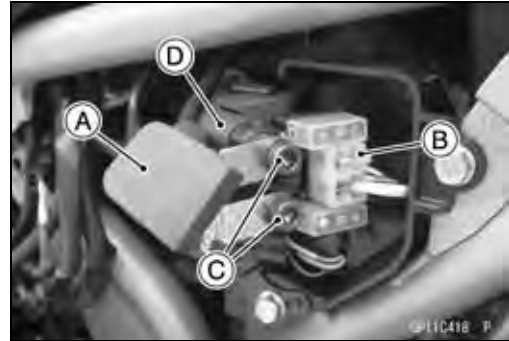

- Connect a tester [A] and 12 V battery [B] to the starter relay [C] as shown.
- ★ If the relay does not work as specified, the relay is defective. Replace the relay.


### Testing Relay

- Criteria: When battery is connected →  $0 \Omega$   
When battery is disconnected →  $\infty \Omega$

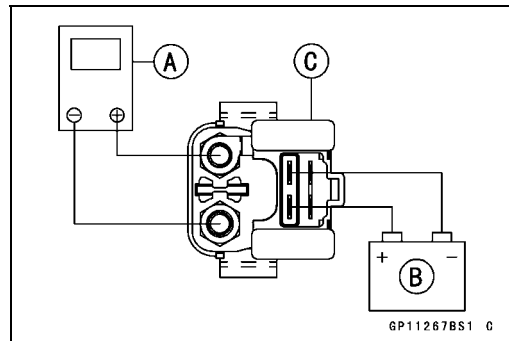

Electric Starter System

Electric Starter Circuit

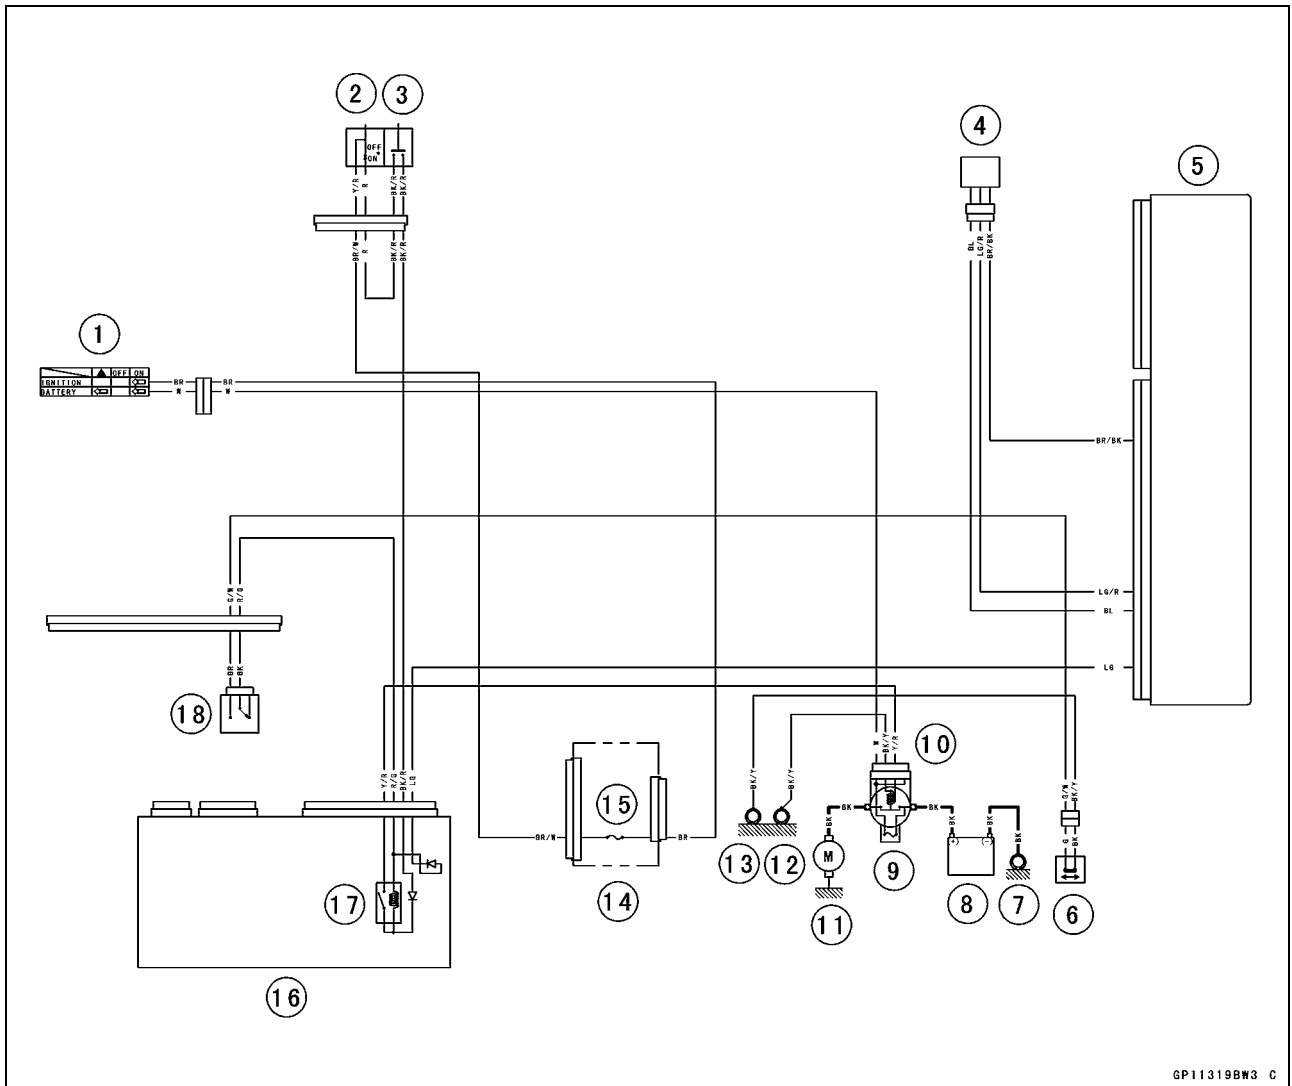

GP11319BW3 C

- |                         |                            |
|-------------------------|----------------------------|
| 1. Ignition Switch      | 11. Starter Motor          |
| 2. Engine Stop Switch   | 12. Frame Ground (6)       |
| 3. Starter Button       | 13. Frame Ground (5)       |
| 4. Gear Position Sensor | 14. Fuse Box (1)           |
| 5. ECU                  | 15. Ignition Fuse 10 A     |
| 6. Side Stand Switch    | 16. Relay Box              |
| 7. Engine Ground        | 17. Starter Circuit Relay  |
| 8. Battery              | 18. Starter Lockout Switch |
| 9. Main Fuse 30 A       |                            |
| 10. Starter Relay       |                            |

## 16-52 ELECTRICAL SYSTEM

### Lighting System

This motorcycle adopt the daylight system and have a headlight circuit relay in the relay box. The headlight does not go on when the ignition switch and the engine stop switch are first turned on. The headlight comes on after the starter button is released and stays on until the ignition switch is turned off. The headlight will go out momentarily whenever the starter button is pressed and come back on when the button is released.

#### **Headlight Beam Horizontal Adjustment**

- Refer to the Headlight Aiming Inspection in the Periodic Maintenance chapter.

#### **Headlight Beam Vertical Adjustment**

- Refer to the Headlight Aiming Inspection in the Periodic Maintenance chapter.

#### **Headlight Bulb Replacement**

- Remove:
  - Headlight Unit (see Headlight Unit Removal)
  - Dust Cover [A]



- Clear the hook [A] from the stopper [B].
- Remove:
  - Headlight Bulb [C]




#### **NOTICE**

**When handling the quartz-halogen bulb, never touch the glass portion with bare hands. Always use a clean cloth. Oil contamination from hands or dirty rags can reduce bulb life or cause the bulb to explode. Use the correct type of headlight bulb with specified voltage and wattage only.**

#### **NOTE**

○Clean off any contamination that inadvertently gets on the bulb with alcohol or soap and water solution.

- Replace the headlight bulb.
- Fit the projection [A] on the bulb in the cutout [B] on the headlight.

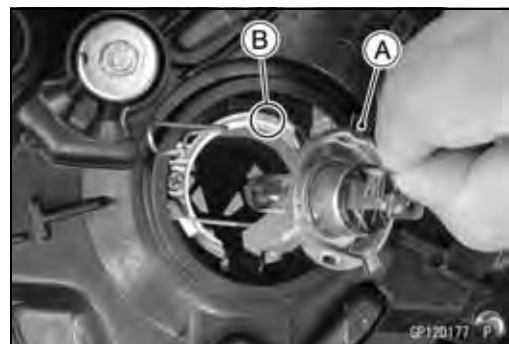




## Lighting System

- Install the hook [A] to the stopper [B].





- Fit the dust cover [A] onto the bulb [B] firmly as shown.
  - Good [C]
  - Bad [D]
- Install the headlight unit (see Headlight Unit Installation).
- After installation, adjust the headlight aim (see Headlight Aiming Inspection in the Periodic Maintenance chapter).

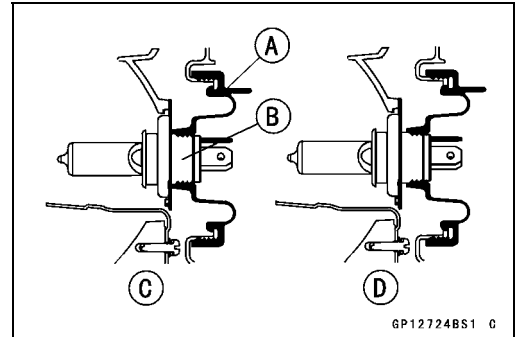

### Headlight Unit Removal


- Remove:
  - Meter Cove Bolts [A] and Washer
  - Meter Cover [B]
- Slide the boot [A] and disconnect the connector [B] from the meter unit.
- Remove:
  - Bolts [C]
  - Bracket [D]
- Remove the bolts [A] and pull the headlight assembly forward.

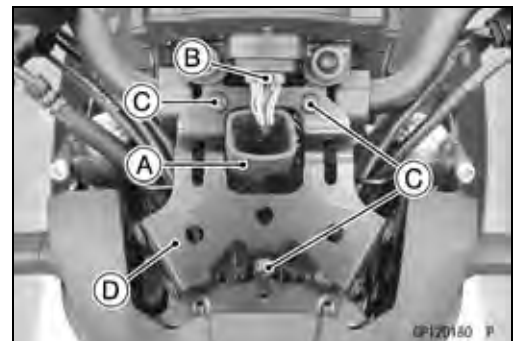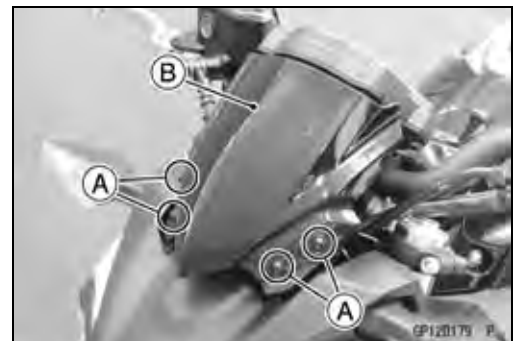


## 16-54 ELECTRICAL SYSTEM

### Lighting System

- Disconnect:
  - City Light Lead Connector [A]
  - Turn Signal Light Lead Connectors [B]

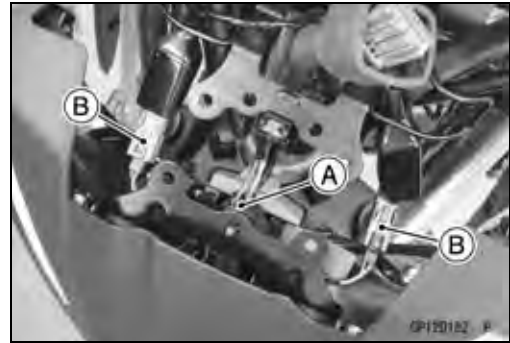


- Disconnect the headlight lead connector [A].
- Pull the headlight unit upward to clear the grommets [B] from the projections [C] on the bracket.
- Remove the headlight unit.

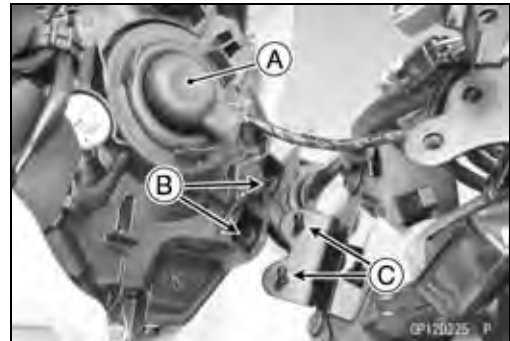


- Remove the four bolts [A] behind the headlight.



- Slide the upper fairing [A] forward to disengage the rubber damper and slots [B] at three points on the headlight [C].

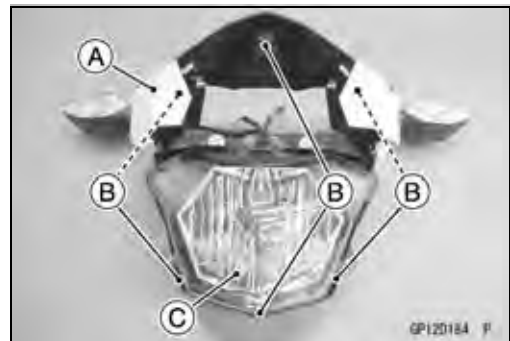


- Pull off the city light connector [A].
- Remove:
  - Bolts [B]
  - Bracket [C]

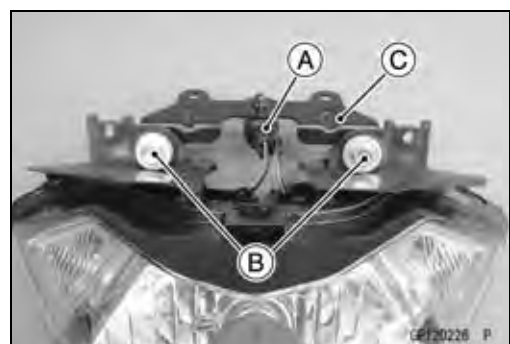


## Lighting System

### Headlight Unit Installation


- Installation is the reverse of removal.
- Assemble the headlight unit and upper fairing.
- Apply a detergent to the three rubber dampers [A] and insert them into the slots [B] on the headlight.

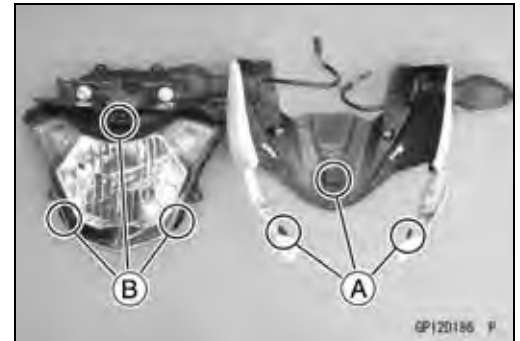

- If removed, install the grommets [A] with its smaller diameter side [B] facing upward.

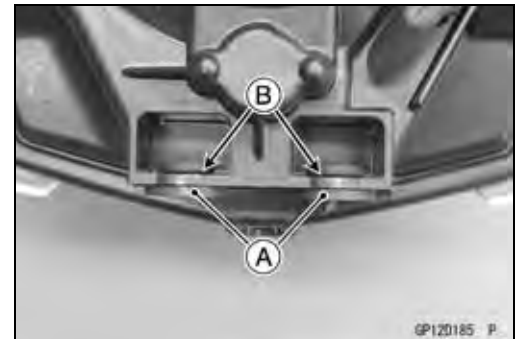

- Install the bracket [A] and screw the bolts in sequence [1 ~ 3] as shown, then tighten the bolts in same sequence.

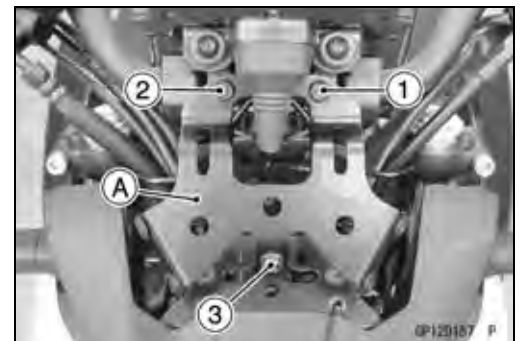

### City Light Bulb Replacement

- Remove the headlight unit (see Headlight Unit Removal).
- Pull out the socket [A] from the headlight housing.




- Pull the bulb [A] out from the socket [B].

#### **NOTICE**

**Do not turn the bulb. Pull the bulb out to prevent damage to the bulb. Do not use bulb rated for greater wattage than the specified valve.**

- Replace the bulb with a new one.
- Insert the socket into the headlight unit.

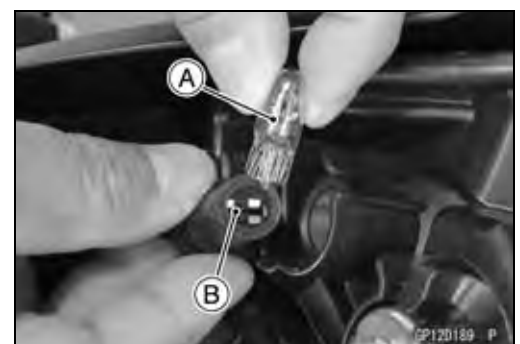


## 16-56 ELECTRICAL SYSTEM

### Lighting System


#### Tail/Brake Light (LED) Unit Removal

- Remove:
  - Rear Seat Covers (see Rear Seat Cover Removal in the Frame chapter)
- Disconnect the tail/brake light lead connector [A].
- Remove:
  - Tail/Brake Light Bolts [B] and Washers
  - Tail/Brake Light Unit [C]

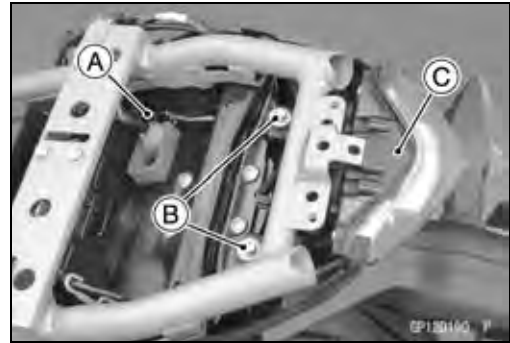


#### Tail/Brake Light (LED) Unit Installation


- Installation is the reverse of removal.
- If necessary, attach the pad [A] on the lens [B] along the edge of the rounded line [C] as shown.

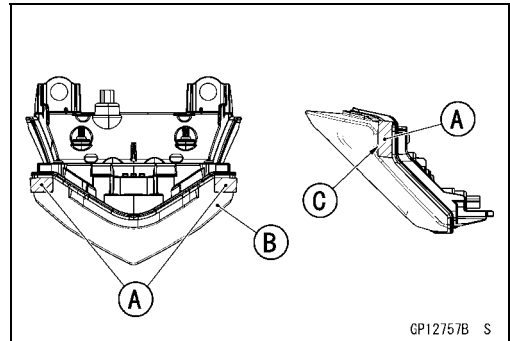


- Install the grommets [A] to the tail/brake light unit [B] with its larger diameter side [C] facing upward [D].
- Install the collars [E] from underside.

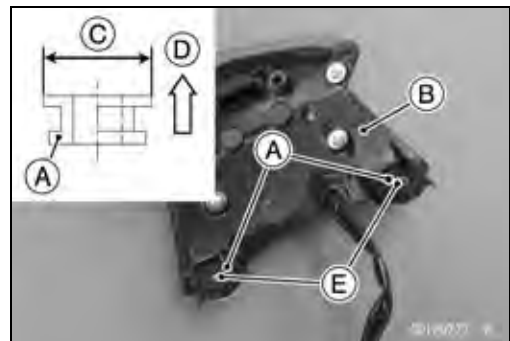

- Insert the rubber damper [A] into the slot [B] to install the tail/brake light unit on the frame.

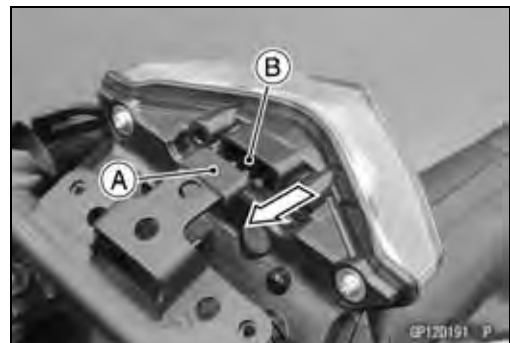

- Tighten the tail/brake light bolts [A] with washers.
  - Torque - Tail/Brake Light Bolts: 0.50 N·m (0.05 kgf·m, 4.4 in·lb)**
- Connect the tail/brake light lead connector [B].
- Install the removed parts (see appropriate chapters).

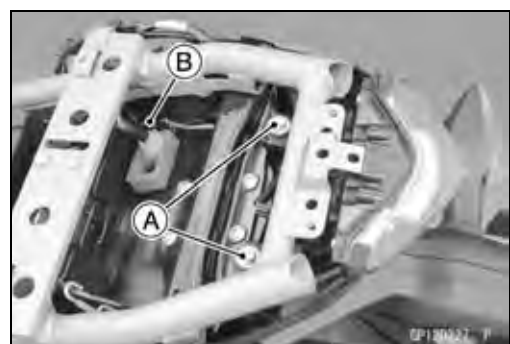


## Lighting System

### License Plate Light Bulb Replacement

- Remove:

- License Plate Light Cover Screws [A]
- License Plate Light Cover [B] and Lens

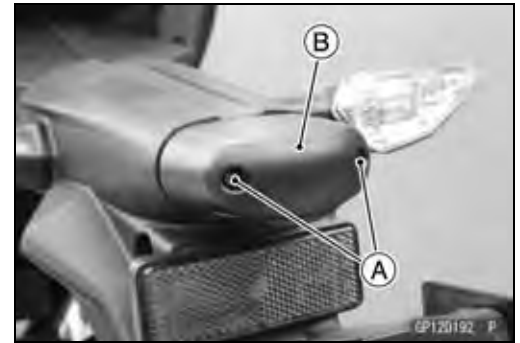


- Pull out the bulb [A] straight from the socket [B].

#### **NOTICE**

**Do not turn the bulb. Pull the bulb out to prevent damage to the bulb. Do not use bulb rated for greater wattage than the specified value.**


- Replace the bulb with a new one.
- Insert the new bulb into the socket.
- Install the license plate light cover and lens.
- Tighten the license plate light cover screws.

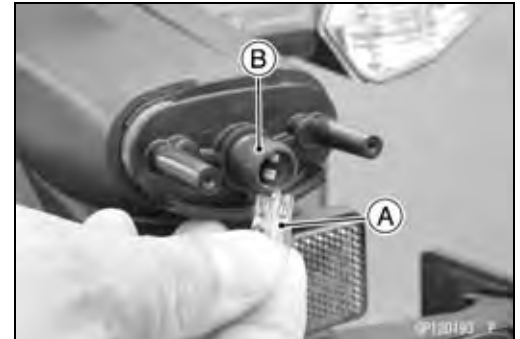

# 16-58 ELECTRICAL SYSTEM

## Lighting System

### Headlight/Tail Light Circuit

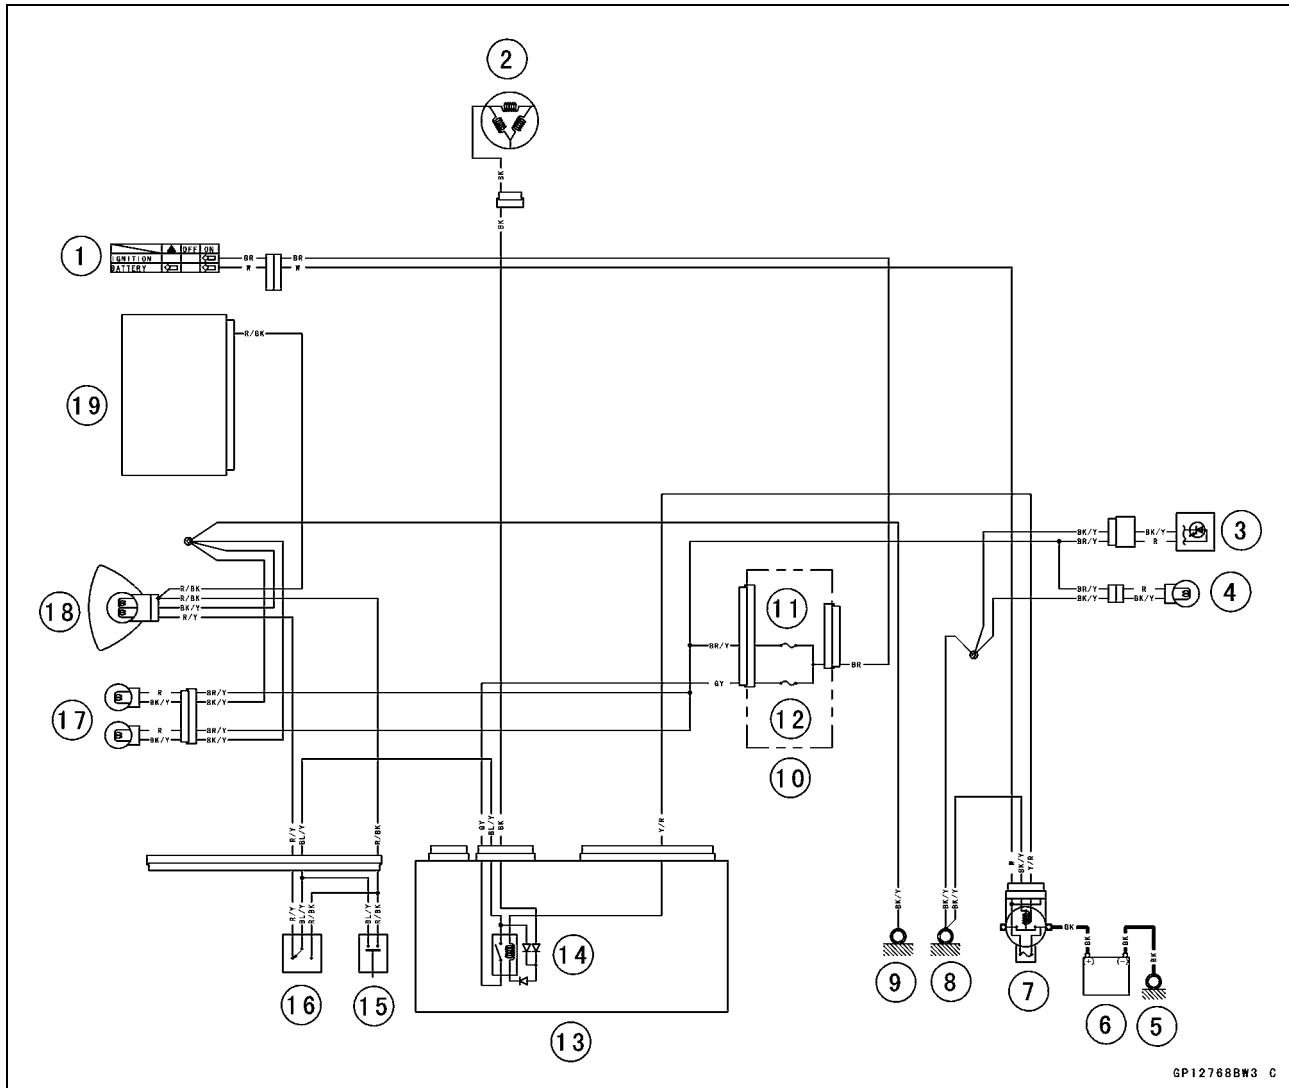


GP127688W3 C

- |                                 |                                |
|---------------------------------|--------------------------------|
| 1. Ignition Switch              | 11. Brake Light/Horn Fuse 10 A |
| 2. Alternator                   | 12. Headlight Fuse 15 A        |
| 3. Tail/Brake Light (LED)       | 13. Relay Box                  |
| 4. License Plate Light 12 V 5 W | 14. Headlight Circuit Relay    |
| 5. Engine Ground                | 15. Passing Button             |
| 6. Battery                      | 16. Dimmer Switch              |
| 7. Main Fuse 30 A               | 17. City Lights 12 V 5 W       |
| 8. Frame Ground (6)             | 18. Headlight 12 V 60/55 W     |
| 9. Frame Ground (2)             | 19. Meter Unit                 |
| 10. Fuse Box (1)                |                                |

### Turn Signal Light Bulb Replacement

- Remove:
  - Turn Signal Light Lens Screw [A]
  - Turn Signal Light Lens Housing [B]

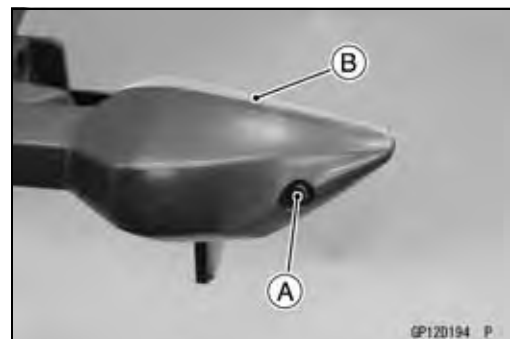


GP120194 P

## Lighting System


- Turn the socket [A] counterclockwise and remove the lens housing [B].
- Pull out the bulb [C] straight from the socket.

### NOTICE

**Do not turn the bulb. Pull the bulb out to prevent damage to the bulb. Do not use bulb rated for greater wattage than the specified value.**

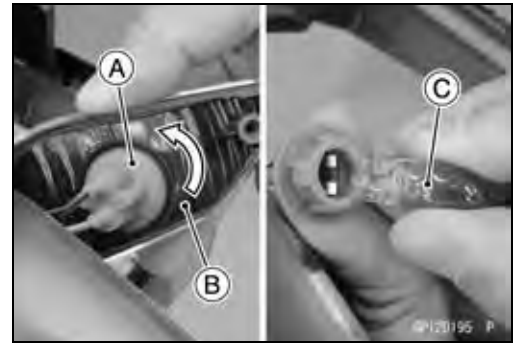


- Replace the bulb [A] with a new one.
- Push the new bulb into the socket.
- Insert the socket by aligning its tabs [B] with the cutout [C] of the lens.
- Turn the socket clockwise until it stops.

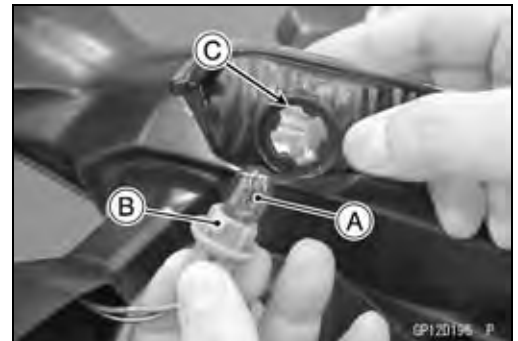


- Fit the lens housing [A] to the light case [B] by inserting the projection [C] on the lens housing to the inside of the light case.
- Tighten the turn signal light lens screw.

**Torque - Turn Signal Light Lens Screw: 1.0 N·m (0.10 kgf·m, 8.9 in·lb)**

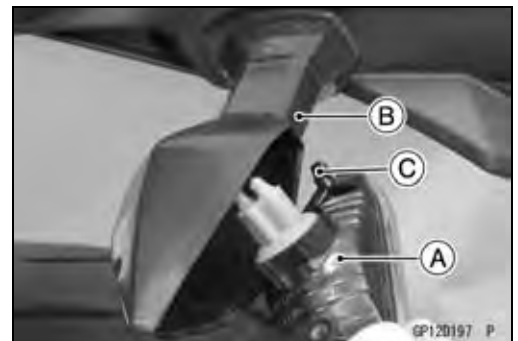

### Turn Signal Relay Inspection

- Remove:
  - Right Middle Fairing (see Middle Fairing Removal in the Frame chapter)
- Remove the turn signal relay [A].
- Disconnect the turn signal relay connector [B].

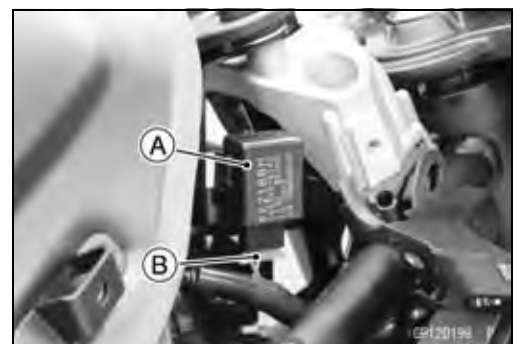

# 16-60 ELECTRICAL SYSTEM

## Lighting System

- Connect one 12 V battery and turn signal lights as indicated, and count how many times the lights blink for one minute.

Turn Signal Relay [A]

Turn Signal Lights [B]

12 V Battery [C]


- ★ If the lights do not blink as specified, replace the turn signal relay.

### Testing Turn Signal Relay

Load		Blinking Times (c/m*)
The Number of Turn Signal Lights	Wattage (W)	
1**	10	140 ~ 250
2	20	75 ~ 95

(\*): Cycle(s) per minute


(\*\*): Correspond to "one light burned out."

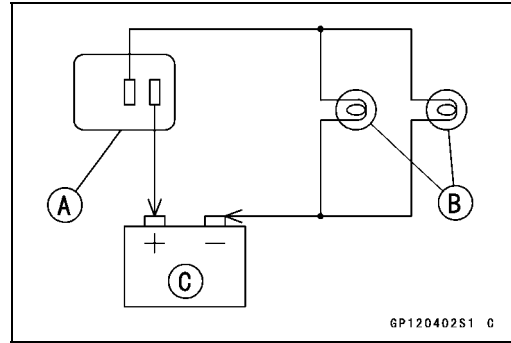



Lighting System

Turn Signal Light Circuit

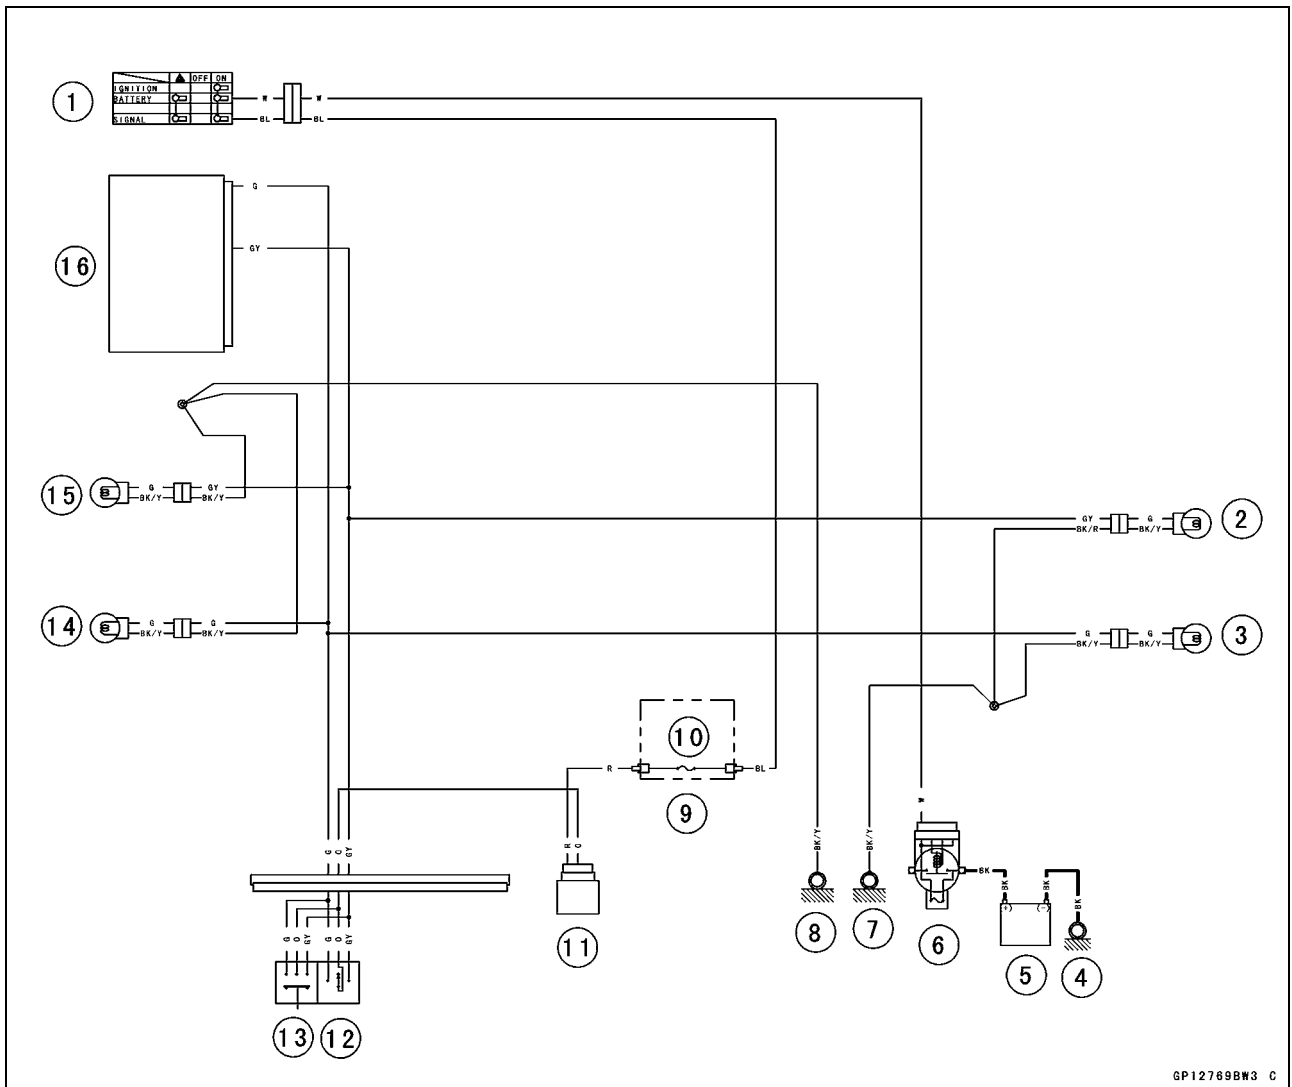

GP12769BW3 C

- |   |   |
|---|---|
| 1. Ignition Switch                        | 9. Fuse Box (2)                             |
| 2. Rear Right Turn Signal Light 12 V 10 W | 10. Turn Signal Relay Fuse 10 A             |
| 3. Rear Left Turn Signal Light 12 V 10 W  | 11. Turn Signal Relay                       |
| 4. Engine Ground                          | 12. Turn Signal Switch                      |
| 5. Battery                                | 13. Hazard Button                           |
| 6. Main Fuse 30 A                         | 14. Front Left Turn Signal Light 12 V 10 W  |
| 7. Frame Ground (6)                       | 15. Front Right Turn Signal Light 12 V 10 W |
| 8. Frame Ground (2)                       | 16. Meter Unit                              |

# 16-62 ELECTRICAL SYSTEM

## Switches and Sensors

### **Brake Light Timing Inspection**

- Refer to the Brake Light Switch Operation Inspection in the Periodic Maintenance chapter.


### **Brake Light Timing Adjustment**

- Refer to the Brake Light Switch Operation Inspection in the Periodic Maintenance chapter.


### **Switch Inspection**

- Using a tester, check to see that only the connections shown in the table have continuity (about zero ohms).
- For the switch housings and the ignition switch, refer to the tables in the Wiring Diagram.
- ★ If the switch has an open or short, repair it or replace it with a new one.


### **Rear Brake Light Switch Connections**

Rear Brake Light Switch Connections		
Color	BR	BL
When brake pedal is pushed down		
When brake pedal is released		

### **Side Stand Switch Connections**

Side Stand Switch Connections		
Color	BK	G
When side stand is down		
When side stand is up		

### **Oil Pressure Switch Connections\***

Oil Pressure Switch Connections *		
Color	SW. Terminal	Ground
When engine is stopped		
When engine is running		

\*: Engine lubrication system is in good condition.

### **Water Temperature Sensor Removal/Installation**

- Refer to the water temperature Sensor Removal/Installation in the Fuel System (DFI) chapter.

## Switches and Sensors

### Water Temperature Sensor Inspection

- Remove the water temperature sensor (see Water Temperature Sensor Removal/Installation in the Fuel System (DFI) chapter).
- Suspend the sensor [A] in a container of coolant so that the threaded portion is submerged.
- Suspend an accurate thermometer [B] with temperature sensing portions [C] located in almost the same depth.

#### NOTE

○ The sensor and thermometer must not touch the container side or bottom.

- Place the container over a source of heat and gradually raise the temperature of the coolant while stirring the coolant gently.
- Using a digital meter, measure the internal resistance of the sensor.
- ★ If the digital meter does not show the specified values, replace the sensor.

### Water Temperature Sensor Resistance

Temperature	Resistance (kΩ)
-20°C (-4°F)	*18.80 ±2.37
0°C (32°F)	*(about 6.544)
40°C (104°F)	1.136 ±0.095
100°C (212°F)	0.1553 ±0.0070

\*: Reference Information

### Rear Wheel Rotation Sensor Removal

- Refer to the Rear Wheel Rotation Sensor Removal/Installation in the Fuel System (DFI) chapter.

### Rear Wheel Rotation Sensor Installation



- Refer to the Rear Wheel Rotation Sensor Removal/Installation in the Fuel System (DFI) chapter.

### Rear Wheel Rotation Sensor Inspection

- Refer to the Rear Wheel Rotation Sensor Inspection in the Fuel System (DFI) chapter.

### Fuel Level Sensor Inspection

- Remove:
  - Fuel Pump (see Fuel Pump Removal in the Fuel System (DFI) chapter)
- Check that the float moves up and down smoothly without binding. It should go down under its own weight.
- ★ If the float does not move smoothly, replace the fuel pump.
  - Float in Full Position [A]
  - Float in Empty Position [B]

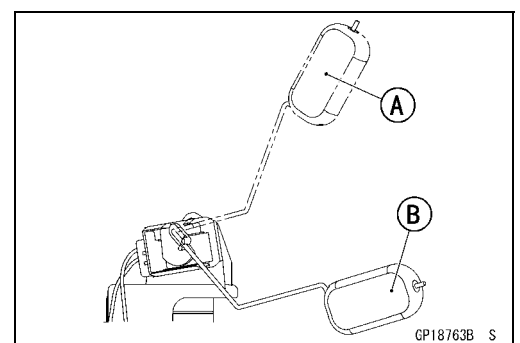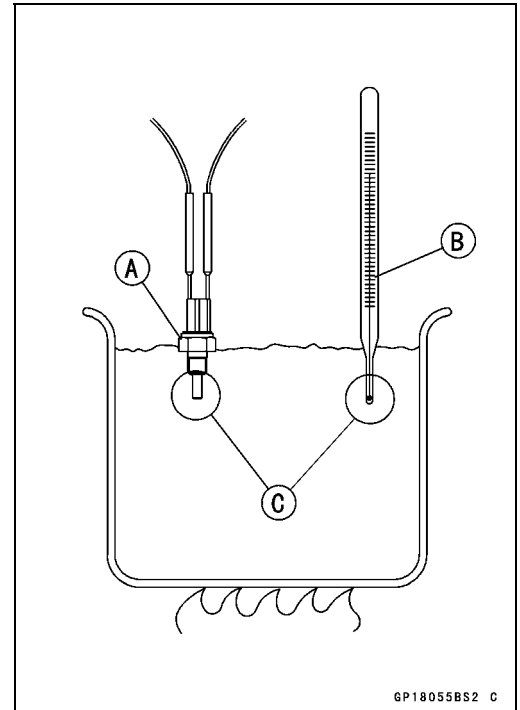

## 16-64 ELECTRICAL SYSTEM

### Switches and Sensors


- Using a digital meter [A], measure the resistance across the terminals in the fuel level sensor lead connector [B].
- ★ If the tester readings are not as specified, or do not change smoothly according as the float moves up and down, replace the fuel pump.

#### Fuel Level Sensor Resistance

Connections: R/BK lead ← → BK/W lead

Standard: Full position: 9 ~ 11 Ω

Empty position: 213 ~ 219 Ω

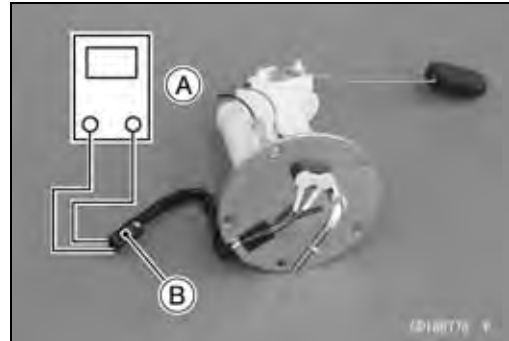


### Oxygen Sensor Removal

#### NOTICE


Never drop the sensor especially on a hard surface. Such a shock to the sensor can damage it.

#### NOTICE

Do not pull strongly, twist, or bend the oxygen sensor lead. This may cause the wiring open.

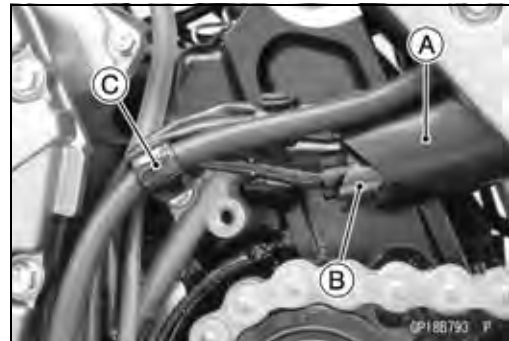

- Remove the engine sprocket cover (see Engine Sprocket Removal in the Final Drive chapter).
- Slide the dust cover [A] and disconnect the oxygen sensor lead connector [B].
- Open the clamp [C].
- Open the clamps [A] and [B].
- Remove the oxygen sensor [C].

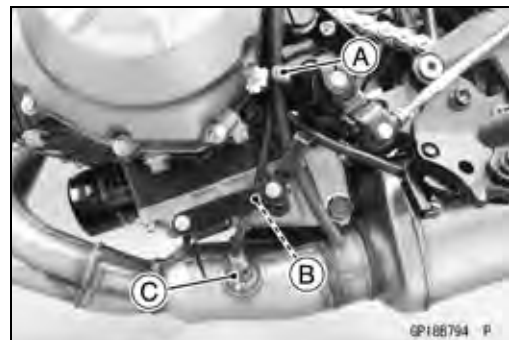


### Oxygen Sensor Installation

#### NOTICE


Never drop the oxygen sensor [A], especially on a hard surface. Such a shock to the unit can damage it. Do not touch the sensing part [B] and filter holes [C] of the sensor to prevent oil contact. Oil contamination from hands can reduce sensor performance.

- Tighten:  
Torque - Oxygen Sensor: 25 N·m (2.5 kgf·m, 18 ft·lb)
- Run the oxygen sensor lead correctly (see Cable, Wire, and Hose Routing section in the Appendix chapter).
- Install the removed parts (see appropriate chapters).

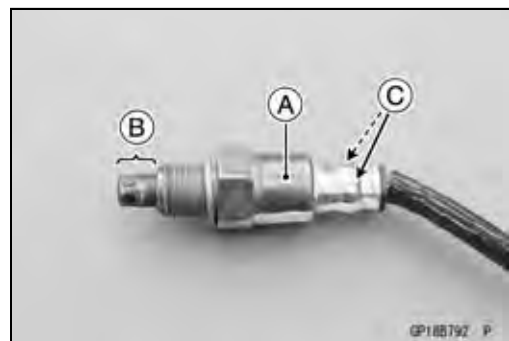


## Switches and Sensors


- When removing the dust cover, install it as following.
- Remove the left frame cover (see Frame Cover Removal in the Frame chapter).
- Run the side stand switch lead [A] through the slit [B] of the dust cover [C].
- Wrap the oxygen sensor connector [D] and side stand switch lead.

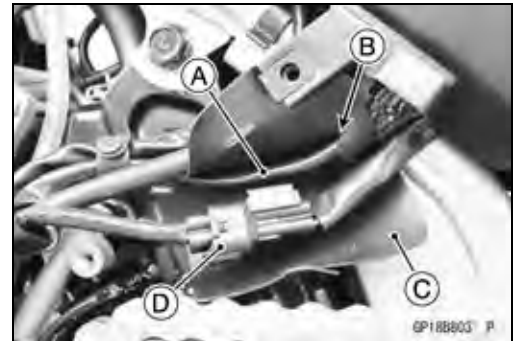

- Insert the tab [A] into the slit [B].

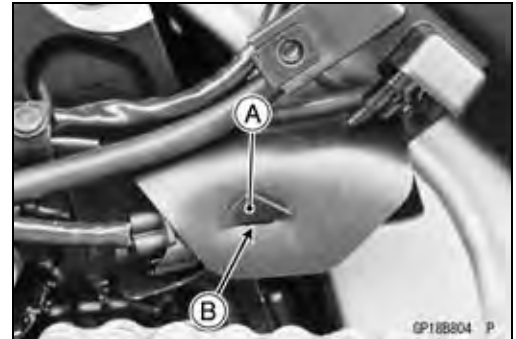

- Insert the dust cover [A] into the side cover [B].

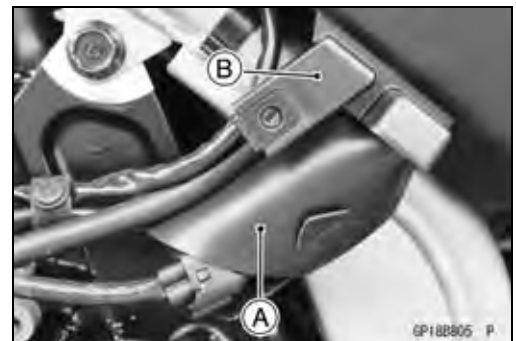


### ***Oxygen Sensor Inspection***

- Refer to the Oxygen Sensor Inspection in the Fuel System (DFI) chapter.

### ***Gear Position Sensor Removal***


- Remove:
  - Engine Sprocket Cover (see Engine Sprocket Removal in the Final Drive chapter)
  - Left Side Cover (see Side Cover Removal in the Frame chapter)
- Disconnect the gear position sensor connector [A].
- Open the rubber band [B].

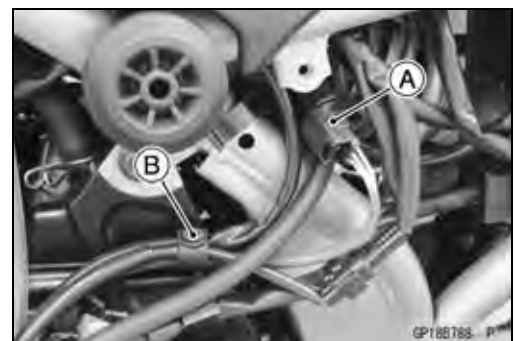

## 16-66 ELECTRICAL SYSTEM


### Switches and Sensors

- Remove:
  - Gear Position Sensor Bolt [A] and Washer
  - Gear Position Sensor [B]

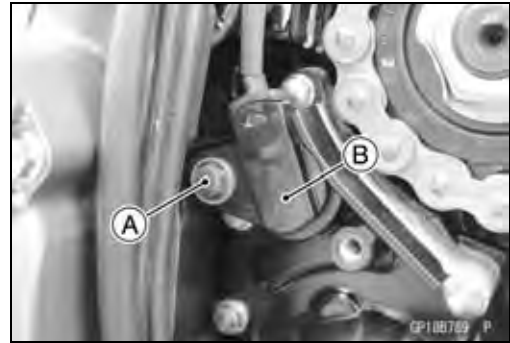

#### ***Gear Position Sensor Installation***

- Replace the O-ring [A] with a new one.
- Apply grease to the O-ring.
- Install the gear position sensor so that the slit [B] fits to the projection [C] of the holder.

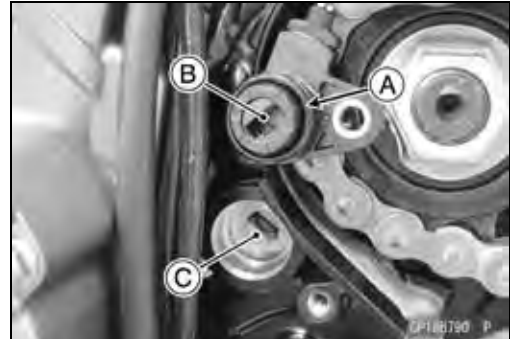

○When installing the sensor which is fastened by bolt, tighten the bolt after placing the sensor on the bottom surface completely.

- Tighten:
  - Torque - Gear Position Sensor Bolt [A]: 9.8 N·m (1.0 kgf·m, 87 in·lb)**
- Run the leads correctly (see Cable, Wire, and Hose Routing section in the Appendix chapter).
- Install the removed parts (see appropriate chapters).



#### ***Gear Position Sensor Inspection***

- Refer to the Gear Position Sensor Output Voltage Inspection in the Fuel System (DFI) chapter.

## Air Switching Valve

### Air Switching Valve Operation Test

- Refer to the Air Suction System Damage Inspection in the Periodic Maintenance chapter.

### Air Switching Valve Unit Test

- Remove the air switching valve (see Air Switching Valve Removal in the Engine Top End chapter).
- Connect a tester [A] to the air switching valve terminals as shown.

#### Air Switching Valve Resistance

Standard: 18 ~ 22  $\Omega$  @20°C (68°F)

- ★ If the resistance reading is out of the specified value, replace it with a new one.





- Connect the 12 V battery [A] to the air switching valve terminals as shown.

- Blow the air to the intake air duct [A], and make sure does not flow the blown air from the outlet air ducts [B].

- Disconnect the 12 V battery.
- Blow the air to the intake air duct [A] again, and make sure flow the blown air from the outlet air duct [B].
- ★ If the air switching valve does not operate as described, replace it with a new one.

#### NOTE


- To check air flow through the air switching valve, just blow through the air switching valve hose (intake side) [C].

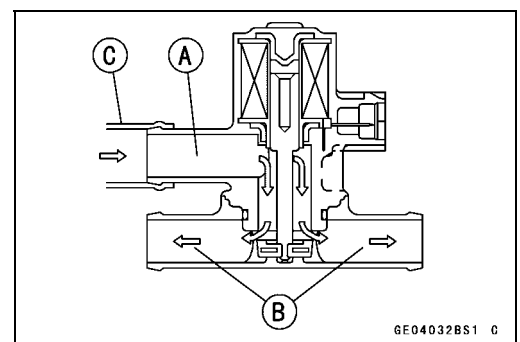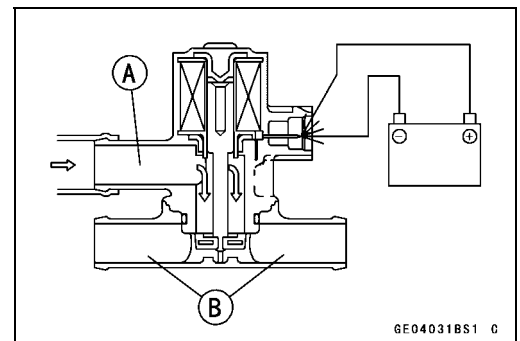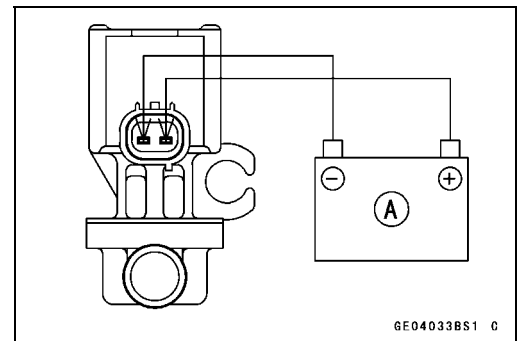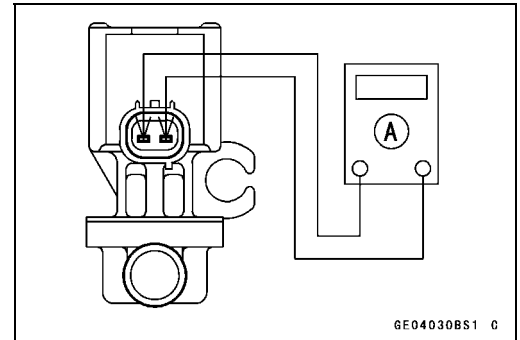

# 16-68 ELECTRICAL SYSTEM

## Air Switching Valve

### Air Switching Valve Circuit

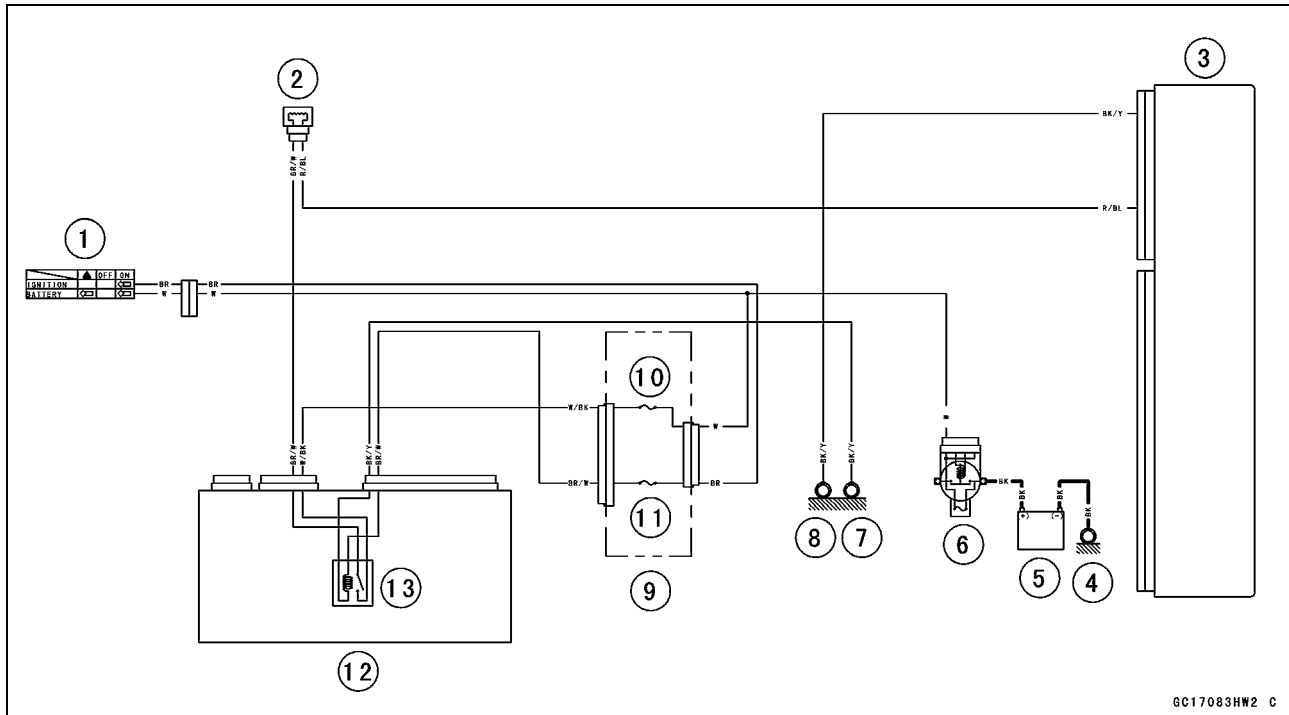

GC17083HW2 C

1. Ignition Switch
2. Air Switching Valve
3. ECU
4. Engine Ground
5. Battery
6. Main Fuse 30 A
7. Frame Ground (4)
8. Frame Ground (3)
9. Fuse Box (1)
10. ECU Fuse 15 A
11. Ignition Fuse 10 A
12. Relay Box
13. ECU Main Relay



## Radiator Fan System

### Fan Motor Removal

- Refer to the Radiator and Radiator Fan Removal in the Cooling System chapter.

### Fan Motor Installation


- Refer to the Radiator and Radiator Fan Installation in the Cooling System chapter.

### Fan Motor Inspection

- Remove the regulator/rectifier (see Regulator/Rectifier Removal).
- Disconnect the connector [A].
- Using an auxiliary leads, supply battery power to the fan motor.
- ★ If the fan does not rotate, the fan motor is defective and must be replaced.



## Radiator Fan Circuit

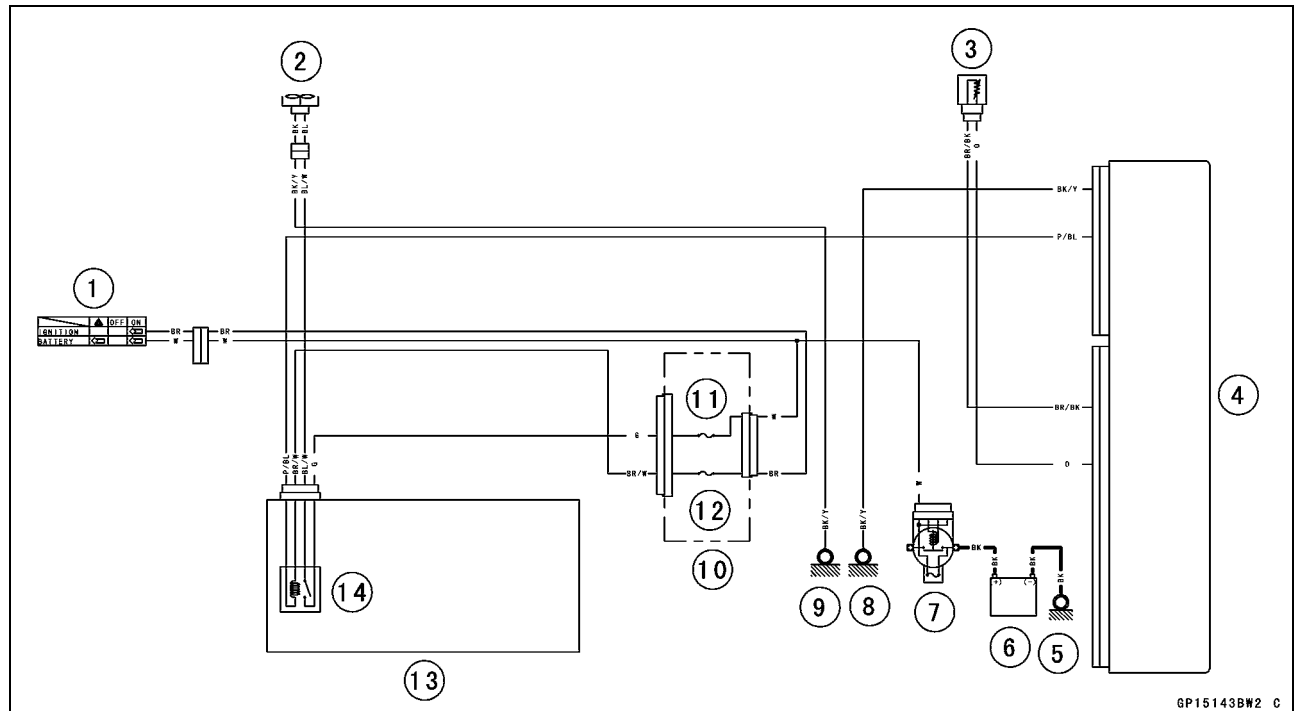



1. Ignition Switch
2. Fan Motor
3. Water Temperature Sensor
4. ECU
5. Engine Ground
6. Battery
7. Main Fuse 30 A
8. Frame Ground (3)
9. Frame Ground (1)
10. Fuse Box (1)
11. Fan Fuse 15 A
12. Ignition Fuse 10 A
13. Relay Box
14. Radiator Fan Relay

# 16-70 ELECTRICAL SYSTEM

## Meter, Gauge, Indicator Unit



### Meter Unit Removal

- Remove:
  - Meter Cover Bolts [A] and Washers
  - Meter Cover [B]
- Slide the dust cover [A], and disconnect the meter connector [B].
- Remove:
  - Meter Mounting Bolts [C] and Washers
- Pull the meter unit [D] upward to clear the projection.

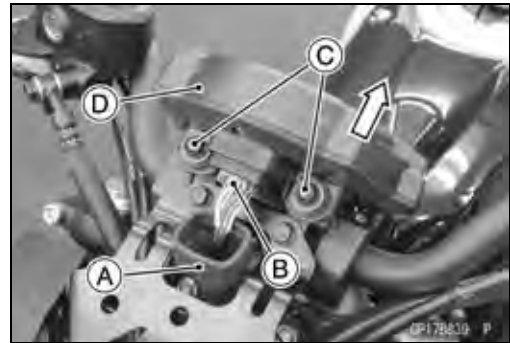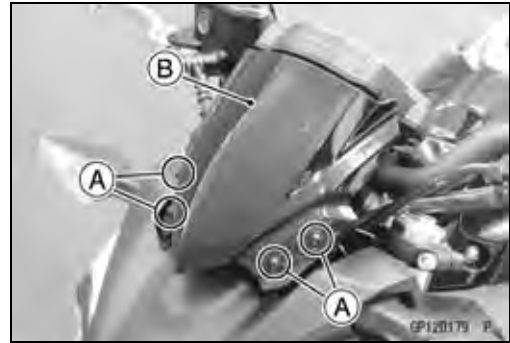


### Meter Unit Installation

- Install:
  - Dampers [A]
  - Collars [B]
- Install the grommet [C] with its larger diameter side [D] facing upward [E], if necessary.
- Insert the projection [F] on the meter unit into the grommet.
- Tighten the meter mounting bolts [A] together with the washers.
- Connect the meter connector [B], and install the dust cover [C].
- Install the meter cover, and tighten its bolts together with the washers.

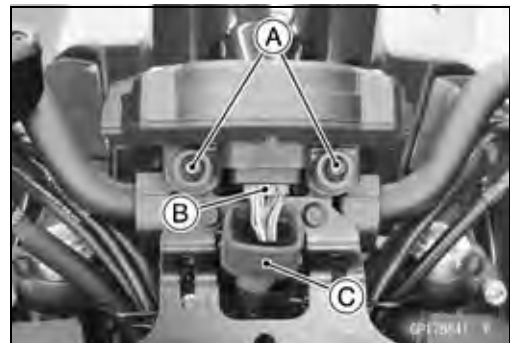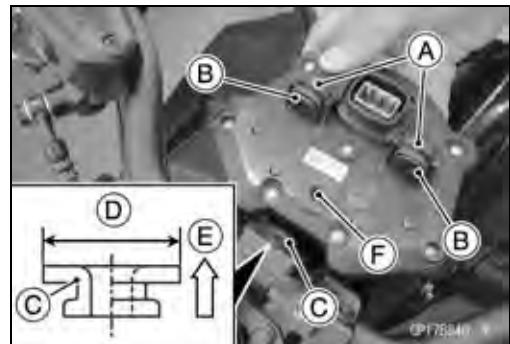


### Meter Unit Disassembly/Assembly

- Remove:
  - Meter Unit (see Meter Unit Removal)
  - Meter Assembly Screws [A]
  - Lower Meter Cover [B]

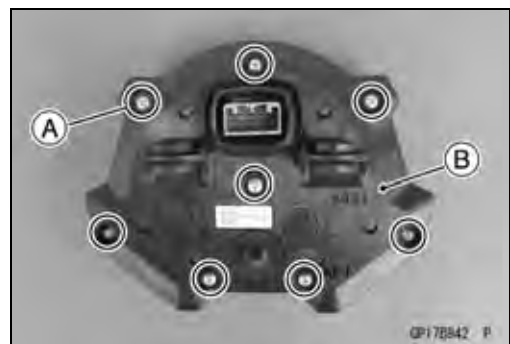

## Meter, Gauge, Indicator Unit

- Separate the meter assembly [A] and upper meter cover [B].
- Assembly is the reverse of removal.

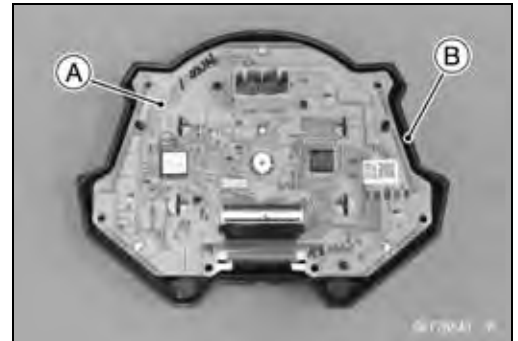

### Meter Operation Inspection

#### Check 1: Meter Unit Switching Inspection


##### Display Mode Setting

- Turn the ignition switch on and check the following.
- By pushing the left meter button [A] or right meter button [B] each time, check that the display [C] changes as shown.

Pushing Left Meter Button [D]

Pushing Right Meter Button [E]

- ★ If the display function does not work, replace the meter assembly.

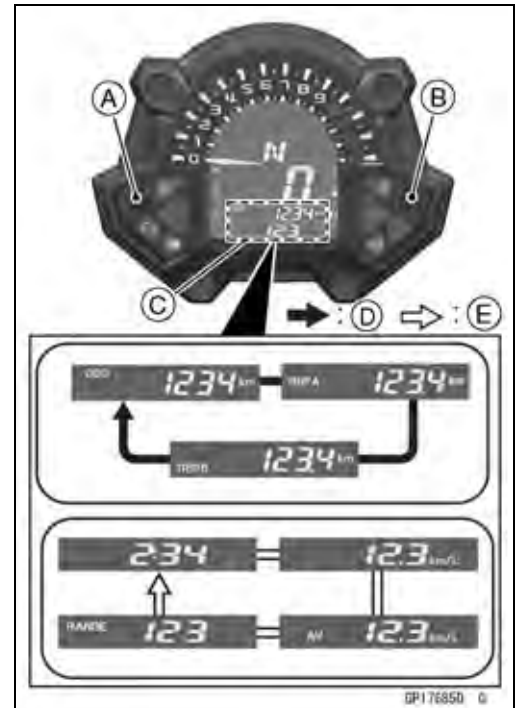


### Unit Setting

- Set the ODO mode by pushing the left meter button.
- By pushing the right meter button each time while the left meter button pushed in, check that the display changes as shown.

#### NOTE

○ Mile/Km Display can alternate between English and metric modes (mile and km) in the digital meter. Make sure that km or mile according to local regulations is correctly displayed before riding.

- ★ If the display function does not work, replace the meter assembly.

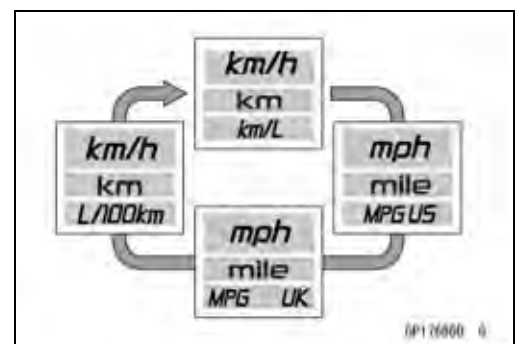


# 16-72 ELECTRICAL SYSTEM


## Meter, Gauge, Indicator Unit

### Clock Setting


- Set the clock display mode [A] by pushing the right meter button [B].

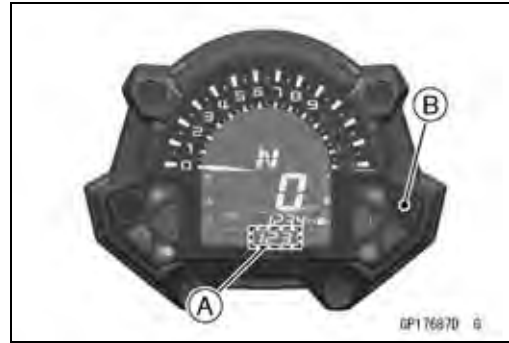


- Push the right meter button and hold it.
- The clock setting menu (hour and minute) should blink.

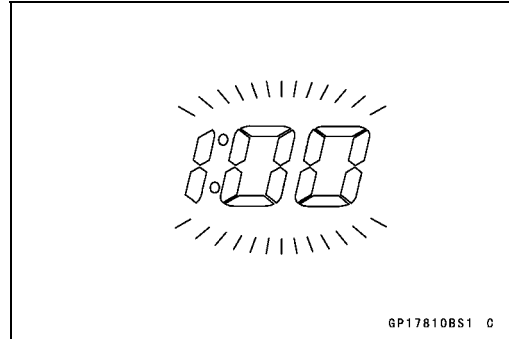


- Push the right meter button and hold it.
- "12h" or "24h" display is appeared.
- Push the left meter button to select "12h" or "24h" [A].

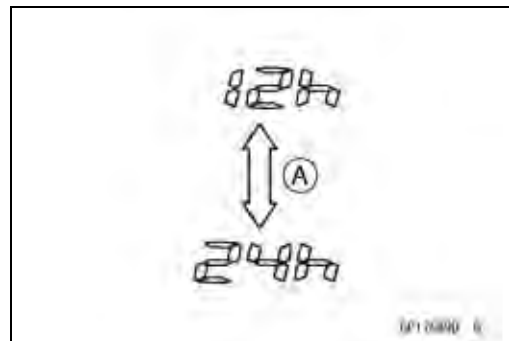

- Push the right meter button.
- The hour display [A] starts blinking.
- By pushing the left meter button each time, check that the hour display changes.

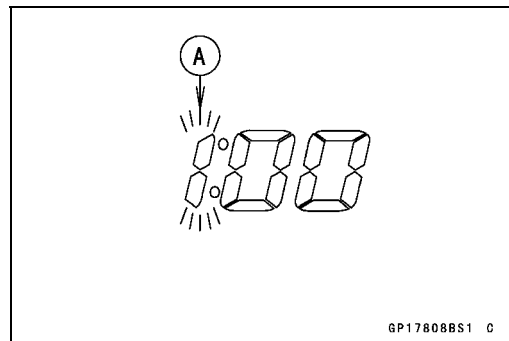


- By pushing the right meter button, check that the hour display decides and minute display [A] starts blinking.
- By pushing the left meter button each time, check that the minute display changes.

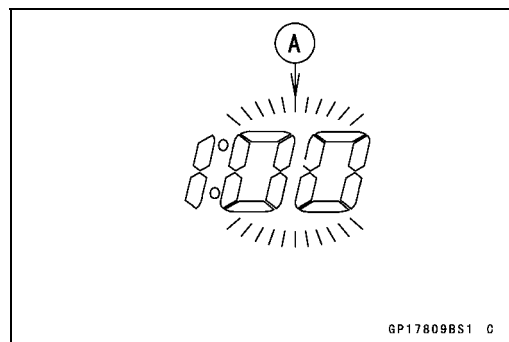

## Meter, Gauge, Indicator Unit


- By pushing the right meter button, check that the hour and minute display start blinking.
- By pushing the left meter button, check that the hour and minute display decide.
- When both hour and minute display is blinking, by pushing the right meter button, check that the hour display start blinking. This blinking returns the hour setting display.
- ★ If the display function does not work, replace the meter assembly.

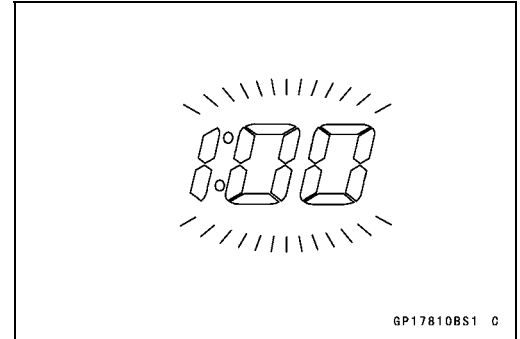

### Meter System Inspection

#### Check 2-1: Battery Warning Indicator Inspection

- When the battery condition is low voltage (10.8 ~ 11.2 V or less) or high voltage (15.5 ~ 16.5 V or more), the battery warning indicator [A] and red warning indicator light (LED) [B] go on.
- ★ If the battery warning indicator and red warning indicator light (LED) go on, inspect the charging voltage (see Charging Voltage Inspection).
- ★ If the charging voltage is good, replace the meter assembly.

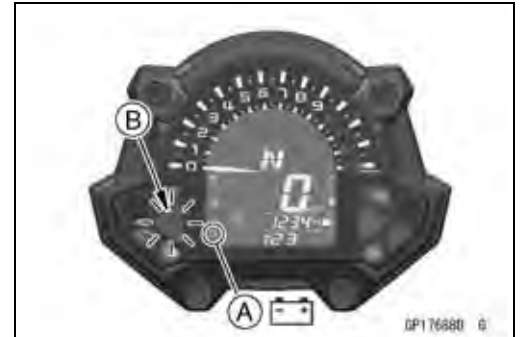

#### Check 2-2: Gear Position Indication Inspection

- Turn the ignition switch on and shift the transmission gear into neutral position.
- The green neutral indicator light (LED) [A] goes on, and the gear position indicator is display the "N" position [B].



- Set the low gear position, and check that the display changes to "1" mark [A] and the green neutral indicator light (LED) [B] goes off.
- Using the rear stand, raise the rear wheel off the ground.
- Rotate the rear wheel by hand and change the gear position.
- Check that the display corresponding to each gear position (1, N, 2, 3, 4, 5 or 6) appears.
- ★ If the display function does not work, check the following parts.
  - Gear Position Sensor (see Gear Position Sensor Inspection)
  - Wiring (see Meter Unit Circuit)
- ★ If the above parts are good, replace the meter unit and/or ECU.




# 16-74 ELECTRICAL SYSTEM

## Meter, Gauge, Indicator Unit

### Meter Unit Inspection

- Remove the meter unit (see Meter Unit Removal).
  - [1] Green Left Turn Signal Indicator Light (LED) (+)
  - [2] Blue High Beam Indicator Light (LED) (+)
  - [3] Unused
  - [4] Unused
  - [5] Fuel Level Gauge
  - [6] Green Neutral Indicator Light (LED) (-)
  - [7] Green Right Turn Signal Indicator Light (LED) (+)
  - [8] Yellow ABS Indicator Light (LED) (Equipped Models) (-)
  - [9] Tachometer Signal
  - [10] Rear Wheel Rotation Sensor Signal
  - [11] Meter Communication Line
  - [12] Red Warning Indicator Light (LED), Oil Pressure Warning Indicator (-)
  - [13] Unused
  - [14] Ground (-)
  - [15] Ignition (+)
  - [16] Battery (+)


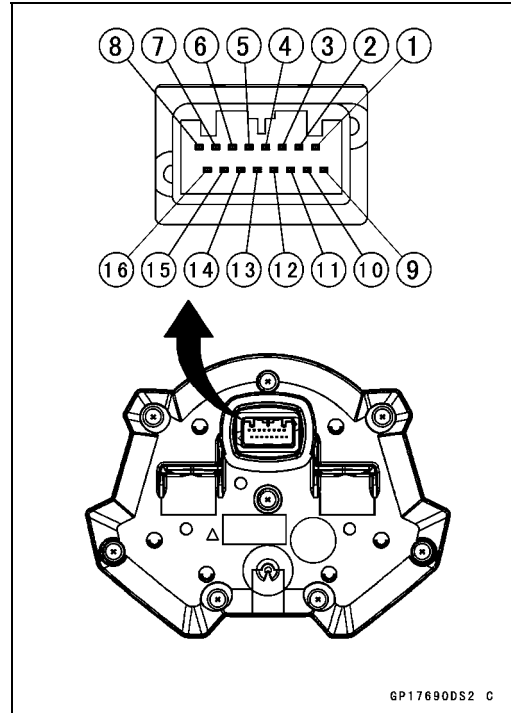


### NOTICE

**Do not drop the meter unit. Do not short each terminals.**

### Check 3-1: Meter Unit Primary Operation Check


- Using the auxiliary leads, connect the 12 V battery to the meter unit connector as follows.
  - Connect the battery positive (+) terminal to the terminal [16].
  - Connect the battery negative (-) terminal to the terminal [14].
  
- Connect the terminal [15] to the battery (+) terminal.

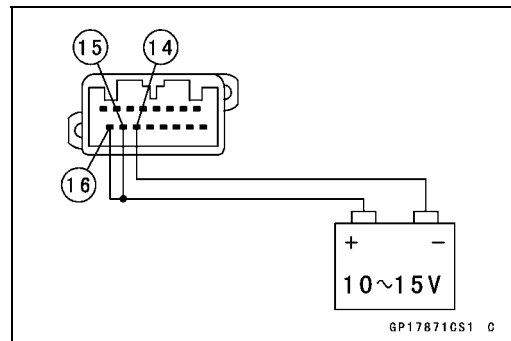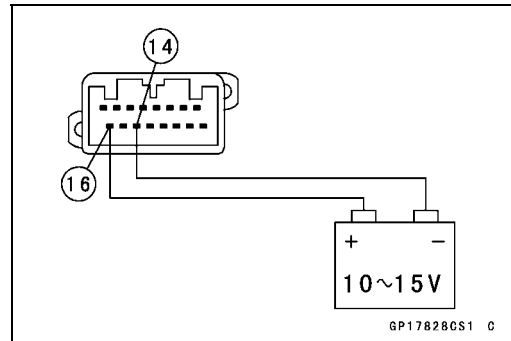

## Meter, Gauge, Indicator Unit

- Check the following items.

- The tachometer segments [A] sweeps to the maximum reading, then sweeps back to the minimum reading.
- The LCD display and meter illuminations should turn on.
- All the LCD segments [B] appear for few seconds.
- The red engine warning indicator light (LED) [C] goes on for few second.
- The yellow engine warning indicator light (LED) [D] and yellow ABS indicator light (LED) [E] (if equipped) remains on.
- ★ If the meter unit does not work properly, replace the meter assembly.

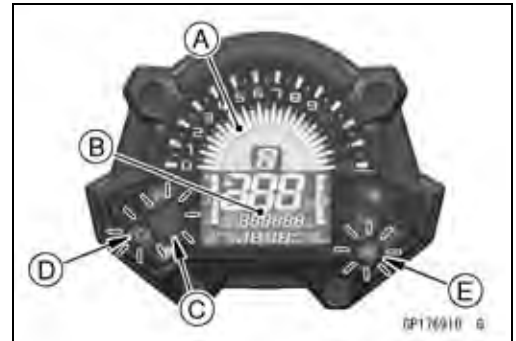

### NOTE

- This meter unit has a failure detection function of the communication. When the communication error was detected, the meter unit alerts the rider by the yellow engine warning indicator light (LED) goes on.
- Make sure that the all fuel level gauge segments [A] and indicator on the LCD start blinking approx. 5 seconds after turning on the meter unit.
- ★ If the fuel level gauge does not work properly, replace the meter assembly.

### NOTE


- This meter unit has a failure detection function (for open or short) of the fuel level gauge. When the fuel level gauge is open or short, the meter unit alerts the rider by the all fuel level gauge segments blink in the display.
- Make sure that the coolant temperature gauge segments [A] and "- -" message [B] on the gear position indicator start blinking approx. 10 seconds after turning on the meter unit.

### NOTE

- This meter unit has a failure detection function (for open or short) of the fuel level gauge. When the fuel level gauge is open or short, the meter unit alerts the rider by the all coolant temperature gauge segments blink in the display.
- ★ If the fuel level gauge does not work properly, replace the meter assembly.

### Check 3-2: Meter Communication Line (Service Code 39) Check


- Connect the leads in the same circuit as Check 3-1.
- The yellow engine warning indicator light (LED) should remains on.

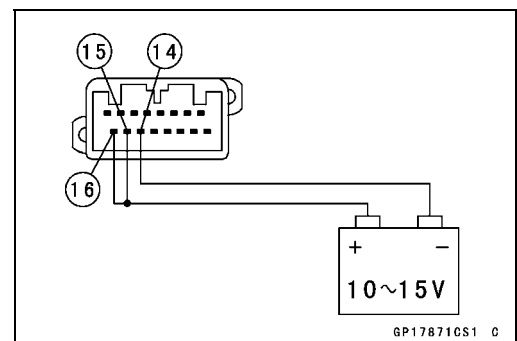

## 16-76 ELECTRICAL SYSTEM

### Meter, Gauge, Indicator Unit

- Set the ODO mode [A] by pushing the left meter button [B].
- Push the left meter button and right meter button [C] simultaneously for more than 2 seconds.

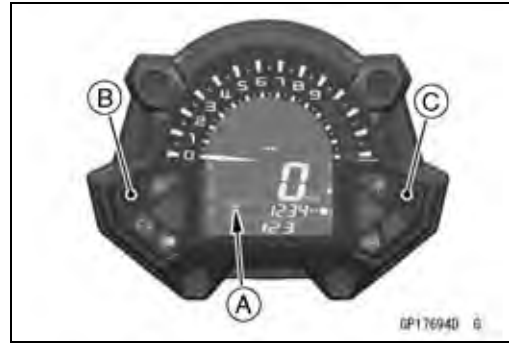

- Check the following items.
  - The number "39" [A] in the display appears.
- Push the left and right meter buttons again for more than 2 seconds.
- Check the following items.
  - The display returns ODO mode from number "39".
- ★ If the meter unit does not work, replace the meter assembly.




#### NOTE

- The number "39" is service code of Self-Diagnosis (see Fuel System (DFI) chapter). It is the service code of the meter communication line error.
- The number "39" in the display disappear when the meter unit is connected to main harness of the normal motorcycle.

#### Check 3-3: Blue High Beam Indicator Light (LED) Inspection

- Connect the terminal [2] to the battery (+) terminal.
- Connect the terminal [14] to the battery (-) terminal.

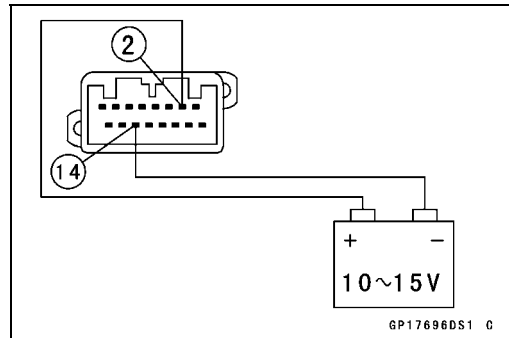

- Check that the blue high beam indicator light (LED) [A] goes on.
- ★ If the indicator light (LED) does not go on, replace the meter assembly.






Meter, Gauge, Indicator Unit

**Check 3-4: Green Left Turn Signal Indicator Light (LED) Inspection**

- Connect the terminal [1] to the battery (+) terminal.
- Connect the terminal [14] to the battery (-) terminal.

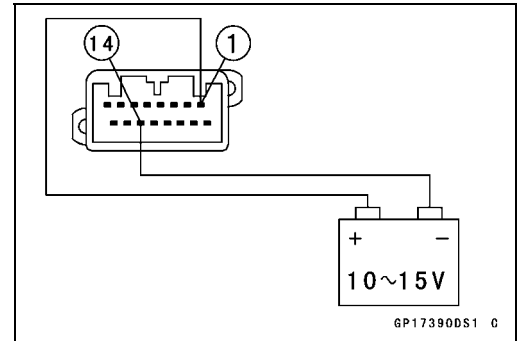


- Check that the green left turn signal indicator light (LED) [A] goes on.
- ★ If the indicator light (LED) does not go on, replace the meter assembly.



**Check 3-5: Green Right Turn Signal Indicator Light (LED) Inspection**

- Connect the terminal [7] to the battery (+) terminal.
- Connect the terminal [14] to the battery (-) terminal.

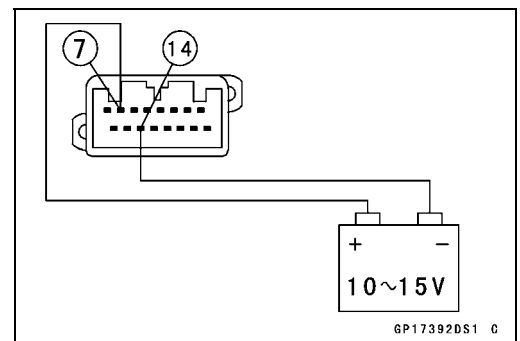


- Check that the green right turn signal indicator light (LED) [A] goes on.
- ★ If the indicator light (LED) does not go on, replace the meter assembly.



**Check 3-6: Green Neutral Indicator Light (LED) Inspection**


- Connect the leads in the same circuit as Check 3-1.
- Connect the terminal [6] to the battery (-) terminal.

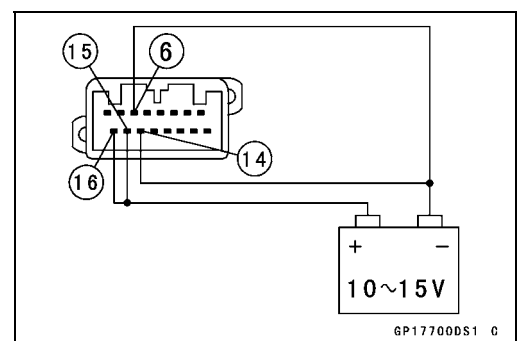

# 16-78 ELECTRICAL SYSTEM


## Meter, Gauge, Indicator Unit

- Check that the green neutral indicator light (LED) [A] goes on.
- ★ If the indicator light (LED) does not go on, replace the meter assembly.

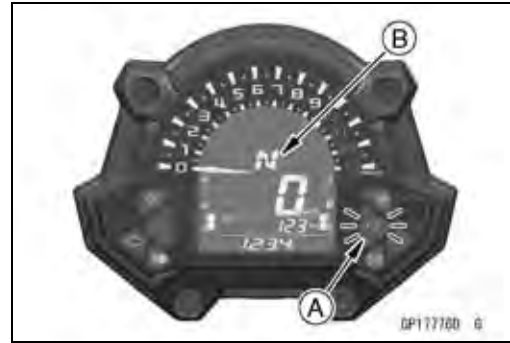

### Check 3-7: Yellow ABS Indicator Light (LED) Inspection (Equipped Models)

- Connect the leads in the same circuit as Check 3-1.
- The yellow ABS indicator light (LED) goes on.
- Connect the terminal [8] to the battery (-) terminal.

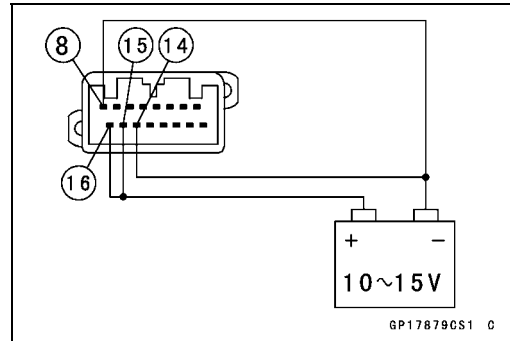


- Check that the yellow ABS indicator light (LED) [A] goes off.
- ★ If the indicator light (LED) does not go off, replace the meter assembly.



### Check 3-8: Red Warning Indicator Light (LED) Inspection (Oil Pressure Warning)

- Connect the leads in the same circuit as Check 3-1.
- Connect the terminal [12] to the battery (-) terminal.

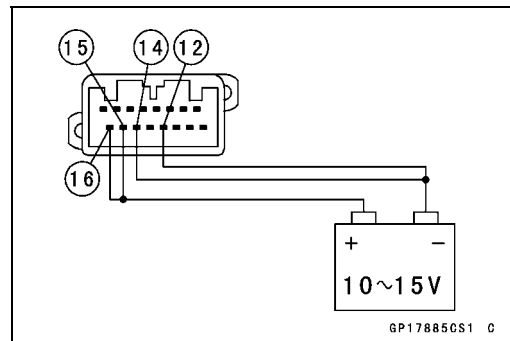


- Check that the oil pressure warning indicator [A] and red warning indicator light (LED) [B] go on.
- ★ If the oil pressure warning indicator and indicator light (LED) do not go on, replace the meter assembly.



Meter, Gauge, Indicator Unit

**Check 3-9: Fuel Gauge Inspection**

- Connect the leads in the same circuit as Check 3-1.
- The all segments of the fuel gauge in the display will blink.
- Connect the variable rheostat [A] to the terminal [5] and the battery (-) terminal.

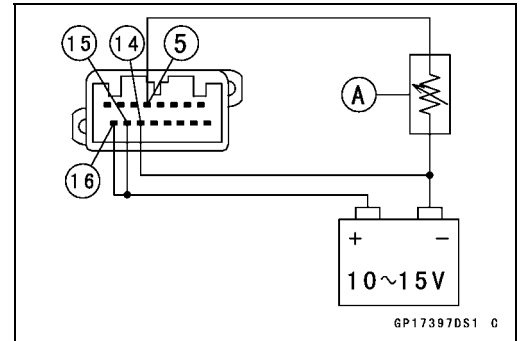

- Check that the number of segments on the fuel level gauge [A] matches the resistance value of the variable rheostat.
- When the terminal [5] is connected, 1 segment in the fuel level gauge should appear about every 15 seconds.


Variable Rheostat Resistance ( $\Omega$ )	Display Segments
15	6 segments go on
40	5 segments go on
70	4 segments go on
100	3 segments go on
140	2 segments go on
170	1 segment goes on
210	1 segment and Fuel level warning indicator blink



★ If the display function does not work, replace the meter assembly.

**Check 3-10: Speedometer Inspection**

- Connect the leads in the same circuit as Check 3-1.
- The speed equivalent to the input frequency is indicated in the oscillator [A], if the square wave is input into terminal [10].
- Indicates approximately 60 km/h if the input frequency is approximately 435 Hz.
- Indicates approximately 60 mph if the input frequency is approximately 700 Hz.
- ★ If the meter function does not work, replace the meter assembly.

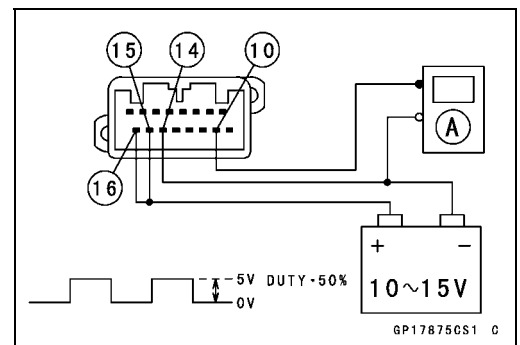

**NOTE**

- The input frequency of the oscillator adds the integrated value of the odometer.
- The integrated value of the odometer cannot be reset.

## 16-80 ELECTRICAL SYSTEM

### Meter, Gauge, Indicator Unit

#### Check 3-11: Odometer Check

- Check the odometer with the speedometer check in the same way.
- ★ If value indicated in the odometer is not added, replace the meter assembly.

#### NOTE

- The data is maintained even if the battery is disconnected.
- When the figures come to 999999, they are stopped and locked.
- The integrated value of the odometer cannot be reset.

#### Check 3-12: Trip A/B Meter Check

- Check the trip meter with the speedometer in the same way.
- ★ If value indicated in the trip meter is not added, replace the meter assembly.

#### NOTE


- The integrated value of the odometer cannot be reset.
- Check that when the right button is pushed for more than two seconds, the figure display turns to 0.0.
- ★ If the figure display does not indicate 0.0, replace the meter unit.

#### Check 3-13: Tachometer Inspection

- Connect the leads in the same circuit as Check 3-1.
- The engine speed (rpm) equivalent to the input frequency is indicated in the oscillator [A], if the square wave is input into terminal [9].
- Indicates approximately 6 000 rpm if the input frequency is approximately 200 Hz.
- ★ If the meter function does not work, replace the meter unit.

#### Check 3-14: Other Inspection

- The following items are displayed while running.
  - AVERAGE
  - CURRENT
  - RANGE
  - ECO Mark
- When the above item is faulty indication check the following items.
  - Wiring (see Wiring Inspection)
  - ECU Communication Line (see ECU Communication Line Inspection in the Fuel System (DFI) chapter)
  - Fuel Injectors (see Fuel Injectors (Service Code 41, 42) section in the Fuel System (DFI) chapter)
  - Rear Wheel Rotation Sensor (see Rear Wheel Rotation Sensor (Service Code 24) section in the Fuel System (DFI) chapter)
  - Crankshaft Sensor (see Crankshaft Sensor Inspection)
- ★ If the above items are good, replace the meter assembly and/or ECU.

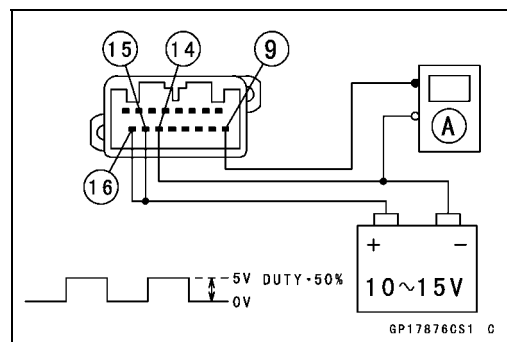

---

**Meter, Gauge, Indicator Unit**

---

**Fuel Level Sensor Line Self-Diagnosis Mode Inspection****NOTE**


- Usually when the open or short of the fuel level sensor circuit is detected, it becomes the Fuel Level Sensor Line Self-Diagnosis Mode.
- The all segments of the fuel level gauge [A] and fuel level warning indicator [B] in the display will blink. (This function is Fuel Level Sensor Line Self-Diagnosis Mode.)
- ★ If the meter enters the self-diagnosis mode when the meter is installed in the motorcycle, check the fuel level sensor (see Fuel Level Sensor Inspection) and wiring.
- ★ If the fuel level sensor and wiring are good, replace the meter assembly.



# 16-82 ELECTRICAL SYSTEM

## Meter, Gauge, Indicator Unit

### Meter Circuit (ER650G)

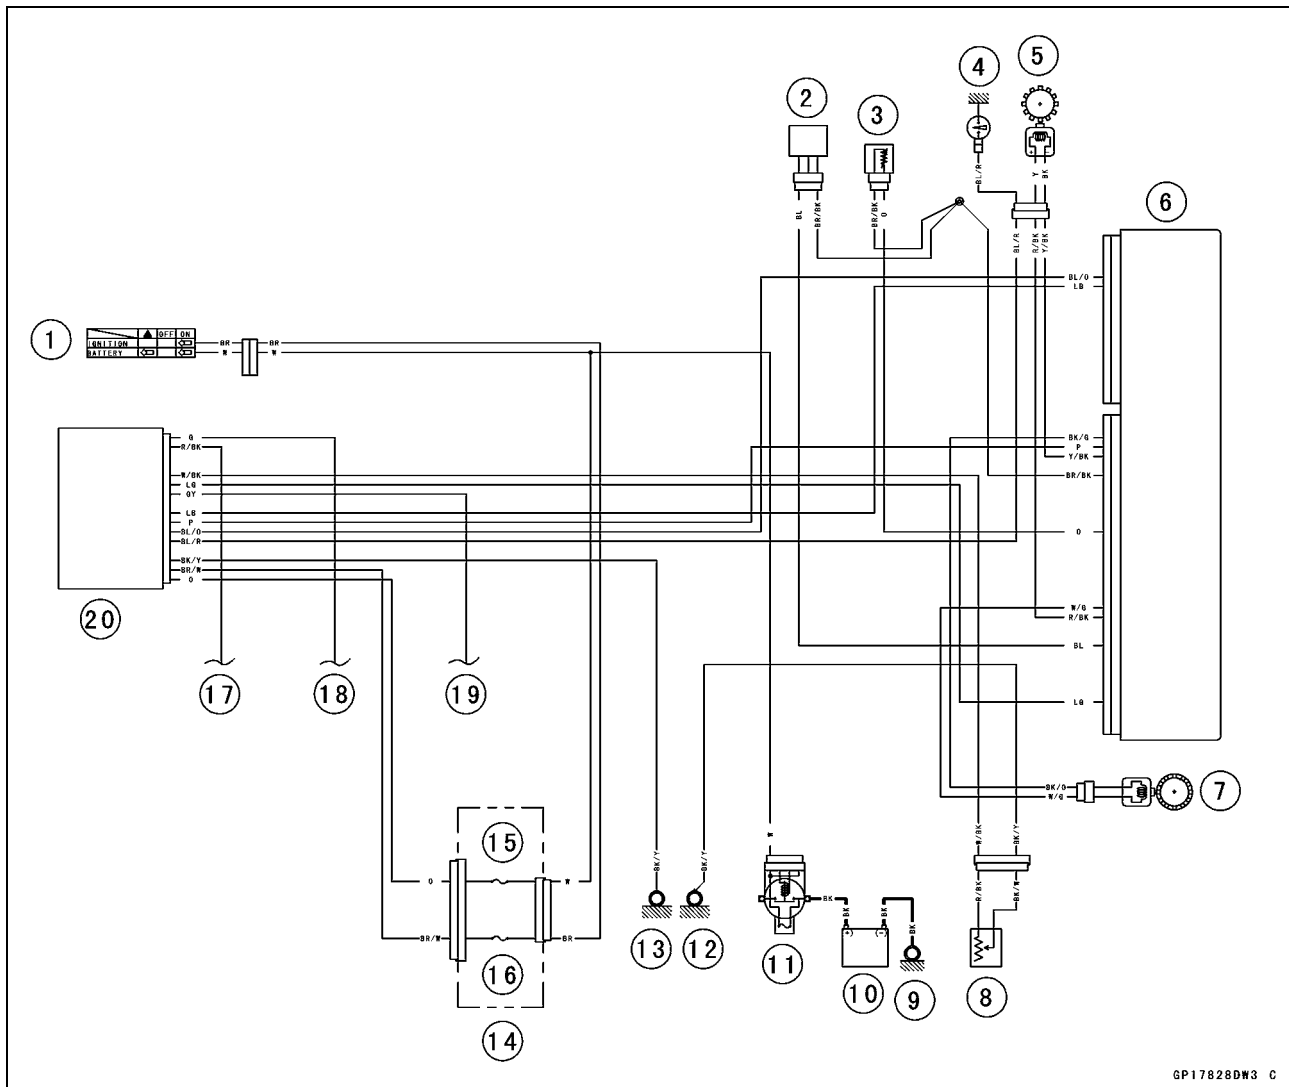


GP17828DW3 C

- 1. Ignition Switch
- 2. Gear Position Sensor
- 3. Water Temperature Sensor
- 4. Oil Pressure Switch
- 5. Crankshaft Sensor
- 6. ECU
- 7. Rear Wheel Rotation Sensor
- 8. Fuel Level Sensor
- 9. Engine Ground
- 10. Battery
- 11. Main Fuse 30 A
- 12. Frame Ground (5)
- 13. Frame Ground (2)
- 14. Fuse Box (1)
- 15. Meter Fuse 10 A
- 16. Ignition Fuse 10 A
- 17. to Headlight Hi Beam
- 18. to Turn Signal Switch (Left)
- 19. to Turn Signal Switch (Right)
- 20. Meter Unit

Meter, Gauge, Indicator Unit

Meter Circuit (ER650H)

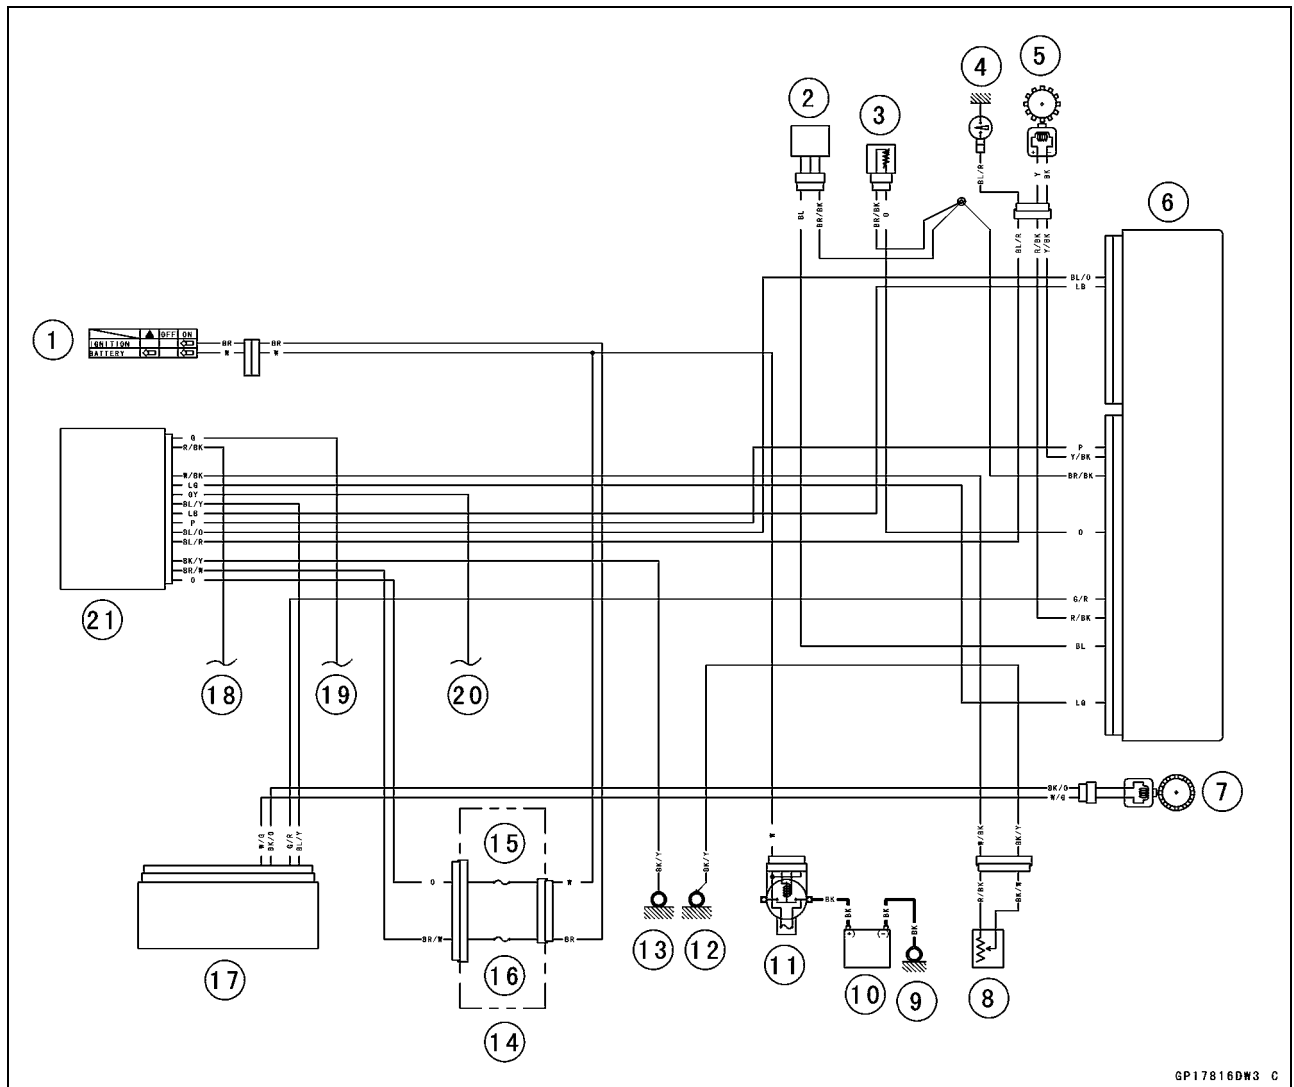

GP17816DW3 C

- |                               |                                   |
|-------------------------------|-----------------------------------|
| 1. Ignition Switch            | 12. Frame Ground (5)              |
| 2. Gear Position Sensor       | 13. Frame Ground (2)              |
| 3. Water Temperature Sensor   | 14. Fuse Box (1)                  |
| 4. Oil Pressure Switch        | 15. Meter Fuse 10 A               |
| 5. Crankshaft Sensor          | 16. Ignition Fuse 10 A            |
| 6. ECU                        | 17. ABS Hydraulic Unit            |
| 7. Rear Wheel Rotation Sensor | 18. to Headlight Hi Beam          |
| 8. Fuel Level Sensor          | 19. to Turn Signal Switch (Left)  |
| 9. Engine Ground              | 20. to Turn Signal Switch (Right) |
| 10. Battery                   | 21. Meter Unit                    |
| 11. Main Fuse 30 A            |                                   |

# 16-84 ELECTRICAL SYSTEM

## Relay Box

The relay box [A] has relays and diodes. The relays and diodes can not be removed.




### Relay Box Removal

**NOTICE**

**Never drop the relay box especially on a hard surface.  
Such a shock to the relay box can damage it.**

- Remove:  
Left Middle Fairing (see Middle Fairing Removal in the Frame chapter)
- Pull the relay box [A] out from the brackets [B].
- Disconnect the connectors [C].
- Remove the relay box.

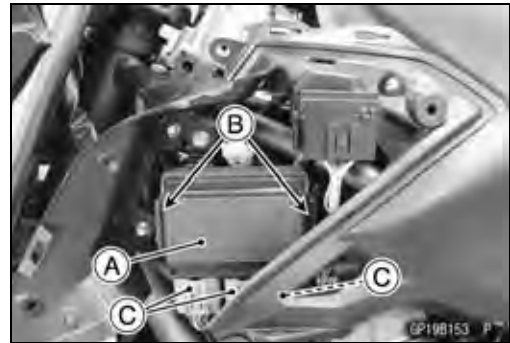

### Relay Box Installation

- Installation is the reverse of removal.

### Relay Circuit Inspection

- Remove the relay box (see Relay Box Removal).
- Check conductivity of the following numbered terminals by connecting a tester and one 12 V battery to the relay box as shown (see Relay Box Internal Circuit in this section).
- ★ If the tester does not read as specified, replace the relay box.

### Relay Circuit Inspection (with the battery disconnected)

	Tester Connection	Tester Reading ( $\Omega$ )
Headlight Circuit Relay	1-3	$\infty$
ECU Main Relay	7-6	$\infty$
	4-5	Not $\infty^*$
Fuel Pump Relay	7-8	$\infty$
	9-10	Not $\infty^*$
Starter Circuit Relay	11-16	$\infty$
	11-12	$\infty$
Fan Relay	17-20	$\infty$
	18-19	Not $\infty^*$

\*: The actual reading varies with the tester used.



## Relay Box

### Relay Circuit Inspection (with the battery connected)

	Battery Connection (+) (-)	Tester Connection	Tester Reading ( $\Omega$ )
Headlight Relay	2-11	1-3	0
ECU Main Relay	4-5	7-6	0
Fuel Pump Relay	9-10	7-8	0
Fan Relay	18-19	17-20	0

	Battery Connection (+) (-)	Tester Connection (+) (-)	Tester Reading (V)
Starter Circuit Relay	16-12	11-12	Battery Voltage

(+): Apply positive lead.

(-): Apply negative lead.

### Diode Circuit Inspection

- Remove the relay box (see Relay Box Removal).
- Check conductivity of the following pairs of terminals (see Relay Box Internal Circuit in this section).

### Diode Circuit Inspection

Tester Connection	1-11, 2-11, 12-13, 12-15, 12-16, 13-14, 13-15
-------------------	---

- ★ The resistance should be low in one direction and more than 10 times as much in the other direction. If any diode shows low or high in both directions, the diode is defective and the relay box must be replaced.


### NOTE

- *The actual meter reading varies with the meter or tester used and the individual diodes, but generally speaking, the lower reading should be from zero to one half the scale.*

# 16-86 ELECTRICAL SYSTEM

## Relay Box

### Relay Box Internal Circuit

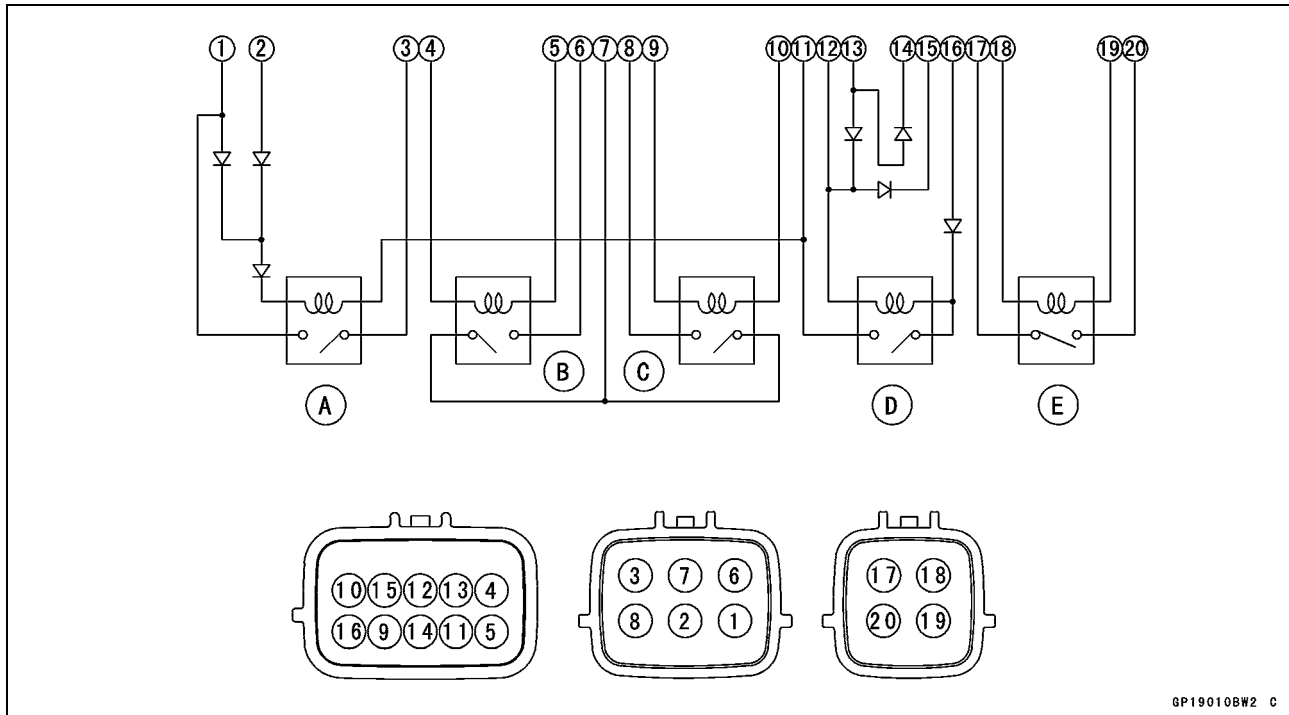

- A: Headlight Circuit Relay
- B: ECU Main Relay
- C: Fuel Pump Relay
- D: Starter Circuit Relay
- E: Fan Relay


## Fuses

### Main Fuse (30 A) Removal

- Remove the left side cover (see Side Cover Removal in the Frame chapter).
- Pull the starter relay [A] out from the bracket.



- Remove the fuse cap [A].
- Pull out the main fuse (30 A) from the starter relay with a needle nose pliers.  
Spare Fuse (30 A) [B]

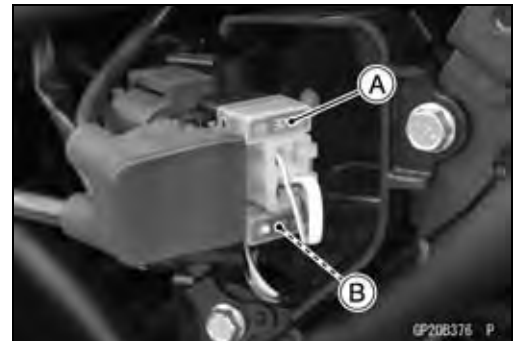

### Fuse Box Fuse Removal Inside of the Right Radiator Cover

- Remove:  
Left Middle Fairing (see Middle Fairing Removal in the Frame chapter)
- Unlock the hook to open the lid.  
Fuse Box (1) [A]  
Fuse Box (2) [B]  
Fuse Box (3) [C] (ABS Equipped Models)



- Pull the fuses [A] straight out of the fuse box with a needle nose pliers.



### Fuse Installation

- ★ If a fuse fails during operation, inspect the electrical system to determine the cause, and then replace it with a new fuse of proper amperage.
- Install the fuse box fuses on the original position as specified on the lid.

## 16-88 ELECTRICAL SYSTEM

### Fuses

#### **Fuse Inspection**


- Remove the fuse (see Main Fuse (30 A)/Fuse Box Fuse Removal).
- Inspect the fuse element.
- ★ If it is blown out, replace the fuse. Before replacing a blown fuse, always check the amperage in the affected circuit. If the amperage is equal to or greater than the fuse rating, check the wiring and related components for a short circuit.

Housing [A]

Fuse Element [B]

Terminals [C]

Blown Element [D]

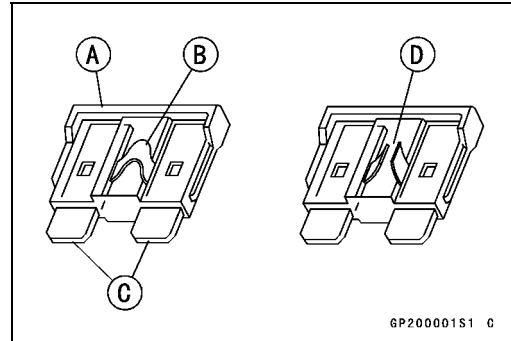

#### **NOTICE**

**When replacing a fuse, be sure the new fuse matches the specified fuse rating for that circuit. Installation of a fuse with a higher rating may cause damage to wiring and components.**



# Appendix

## Table of Contents

Cable, Wire, and Hose Routing .....	17-2
Troubleshooting Guide .....	17-65

# 17-2 APPENDIX

## Cable, Wire, and Hose Routing

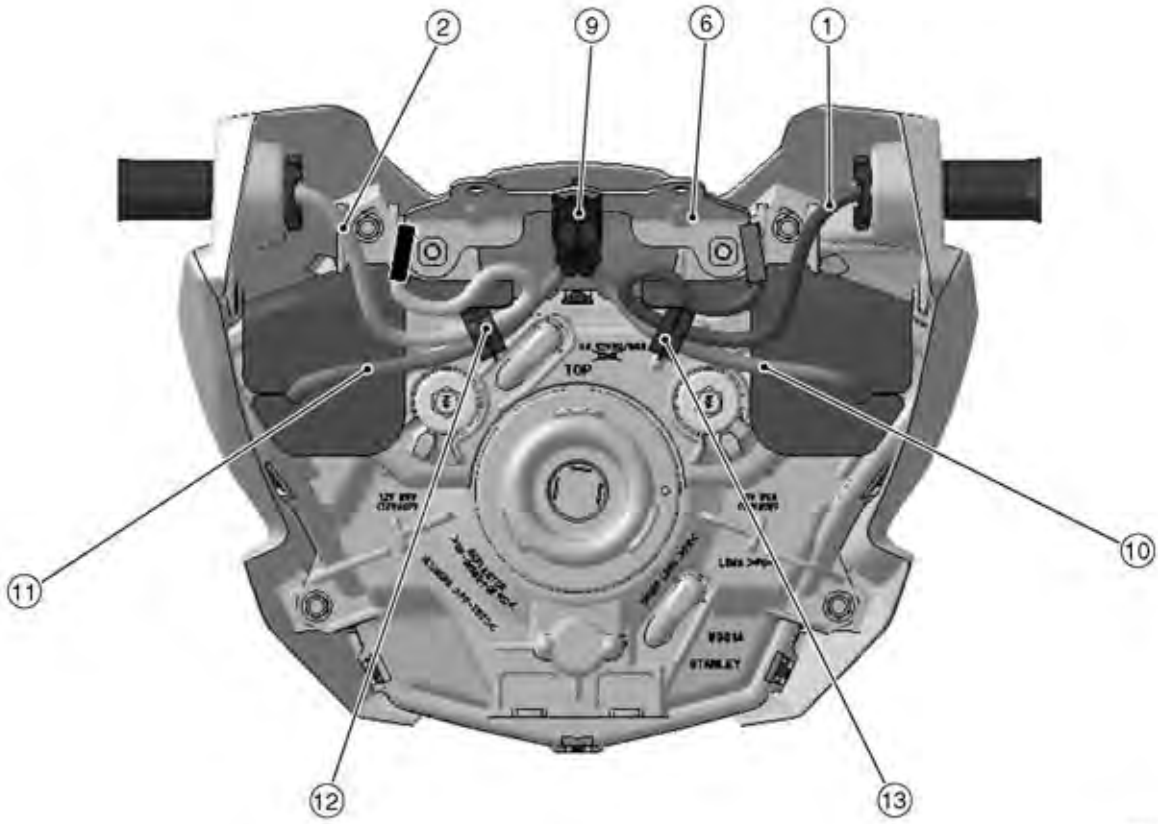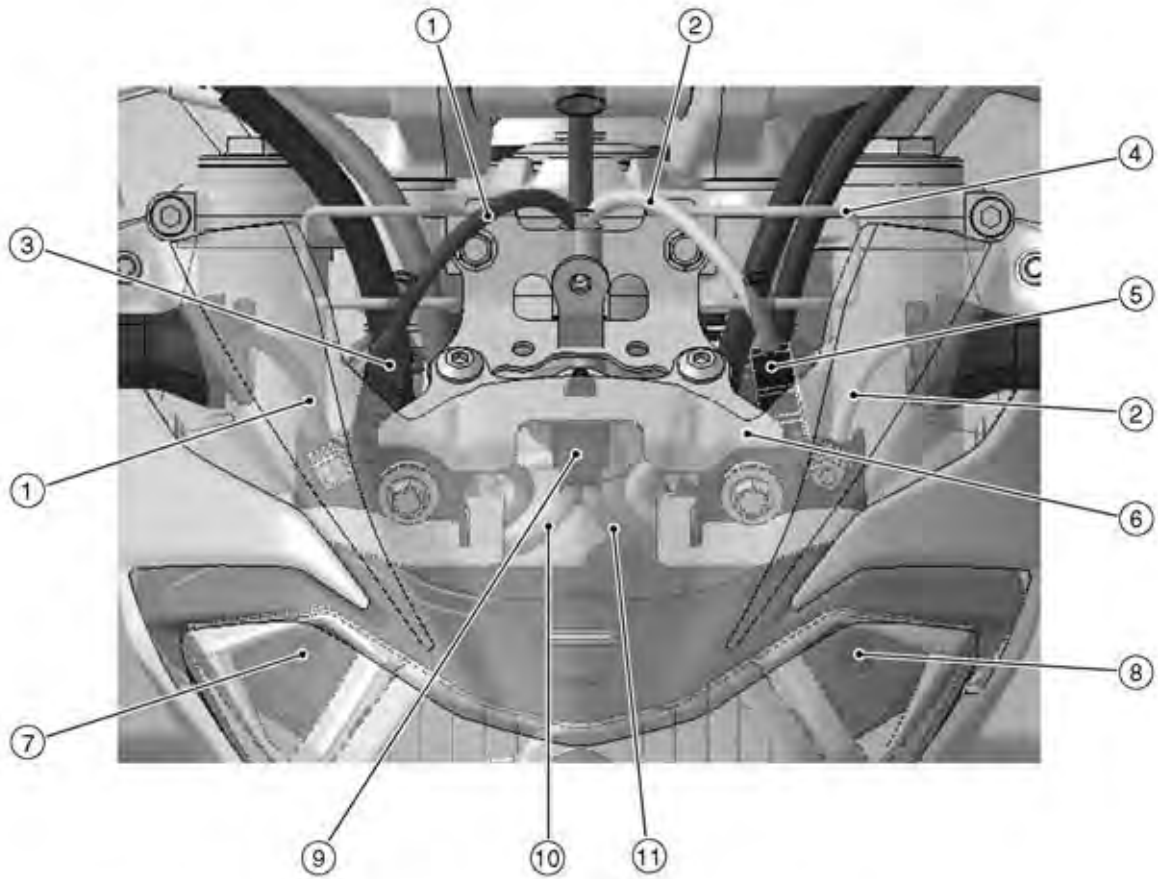

---



**Cable, Wire, and Hose Routing**

---

1. Front Right Turn Signal Light Lead (Run the front right turn signal lead in front of the bracket [4].)
2. Front Left Turn Signal Light Lead (Run the front left turn signal lead in front of the bracket [4].)
3. Front Right Turn Signal Light Lead Connector
4. Bracket
5. Front Left Turn Signal Light Lead Connector
6. Bracket
7. Right City Light
8. Left City Light
9. City Light Lead Connector (Insert the city light lead connector to the bracket [6].)
10. Right City Light Lead
11. Left City Light Lead
12. Clamp (Hold the front left turn signal light lead and left city light lead.)
13. Clamp (Hold the front right turn signal light lead and right city light lead.)

# 17-4 APPENDIX

## Cable, Wire, and Hose Routing

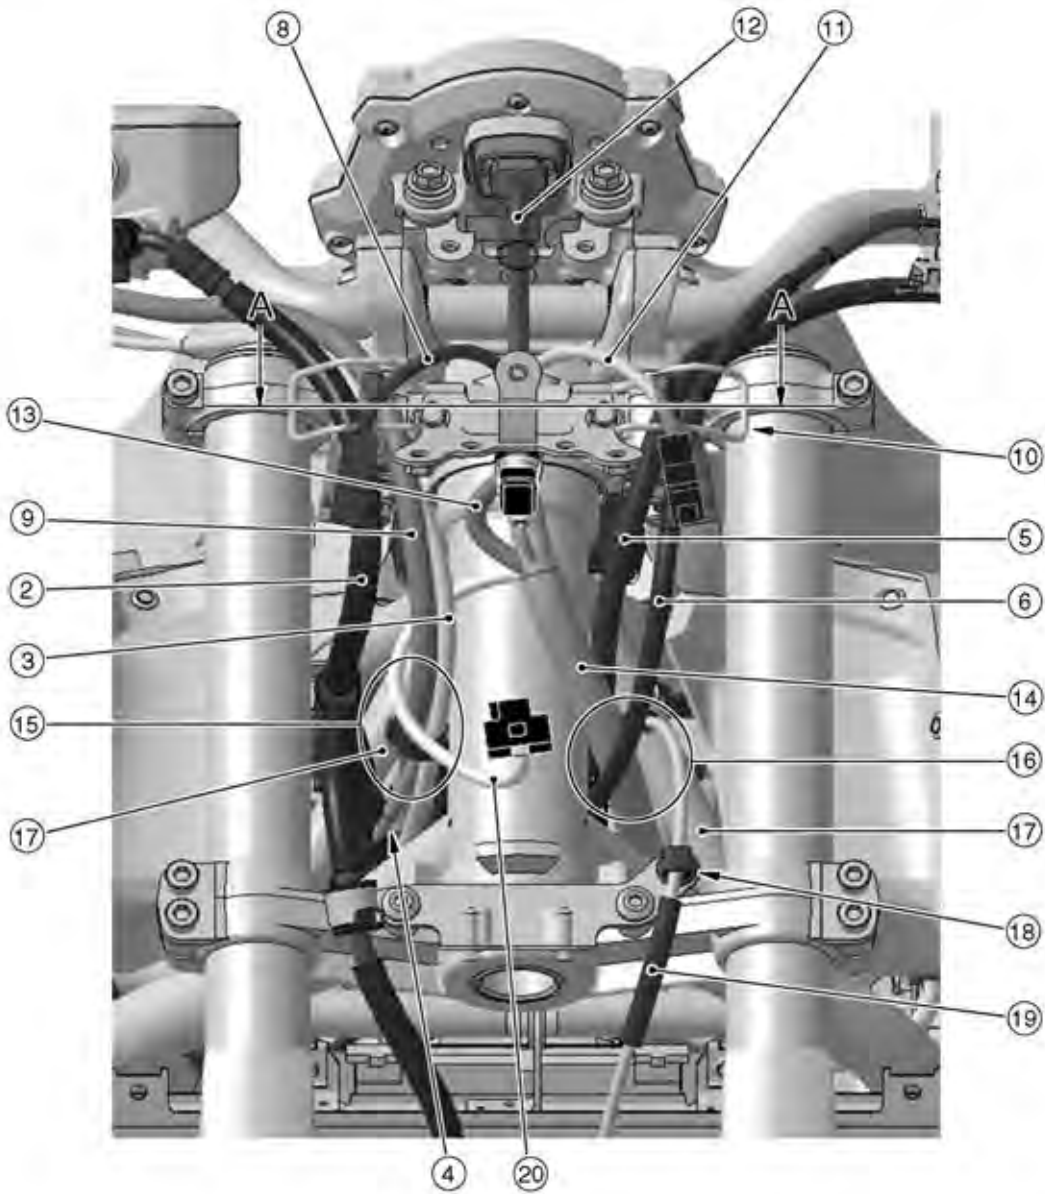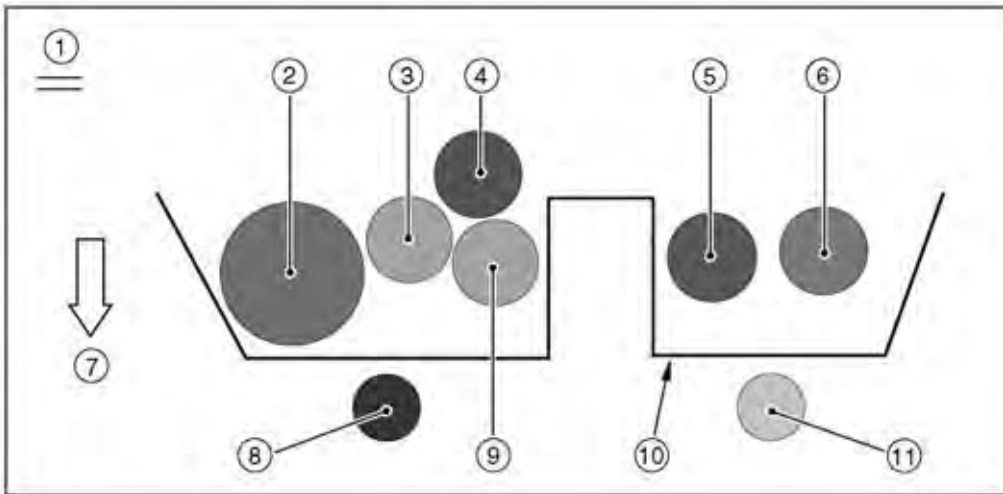



---


**Cable, Wire, and Hose Routing**

---

1. Section A - A
2. Front Brake Hose
3. Throttle Cable (Accelerator Cable)
4. Throttle Cable (Decelerator Cable)
5. Left Switch Housing Lead
6. Clutch Cable
7. Front Side
8. Front Right Turn Signal Light Lead
9. Right Switch Housing Lead
10. Bracket
11. Front Left Turn Signal Light Lead
12. Meter Unit Lead
13. City Light Lead
14. Main Harness
15. Run the right switch housing lead, throttle cables and front brake hose (ABS Equipped Models) to the inside of the frame cross pipe.
16. Run the left switch housing lead, main harness, clutch cable and front wheel rotation sensor lead (ABS Equipped Models) to the inside of the frame cross pipe.
17. Frame Cross Pipes
18. Clamp (Hold the front wheel rotation sensor lead.) (ABS Equipped Models)
19. Front Wheel Rotation Sensor Lead (ABS Equipped Models)
20. Headlight Lead

# 17-6 APPENDIX

## Cable, Wire, and Hose Routing

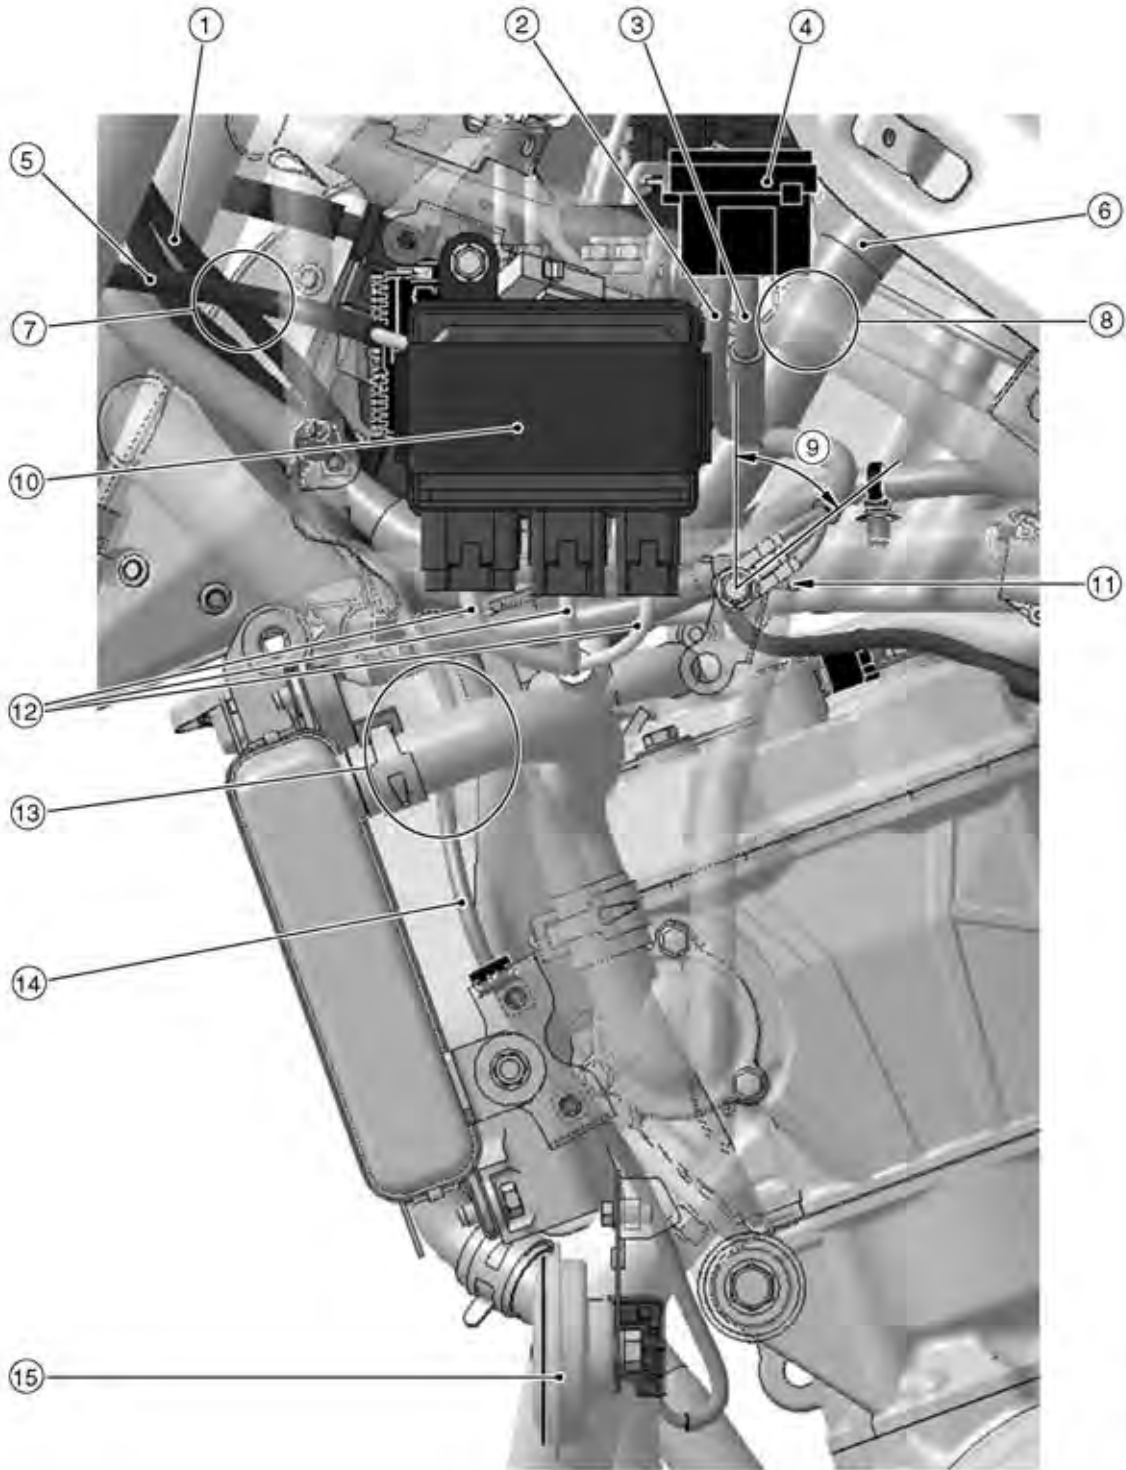

---


**Cable, Wire, and Hose Routing**

---

1. Clutch Cable
2. Intake Air Pressure Sensor Vacuum Hose
3. Fuse Box (1) Lead
4. Fuse Box (1)
5. Front Wheel Rotation Sensor Lead (ABS Equipped Models)
6. Main Harness
7. Run the clutch cable to the inside of the front wheel rotation sensor lead. (ABS Equipped Models)
8. Run the main harness to the inside of the frame pipe.
9. About 30° ~ 55°
10. Relay Box
11. Frame Ground Terminals
12. Relay Box Leads
13. Run the horn lead to the inside of the frame pipe.
14. Horn Lead
15. Horn

## 17-8 APPENDIX



### Cable, Wire, and Hose Routing

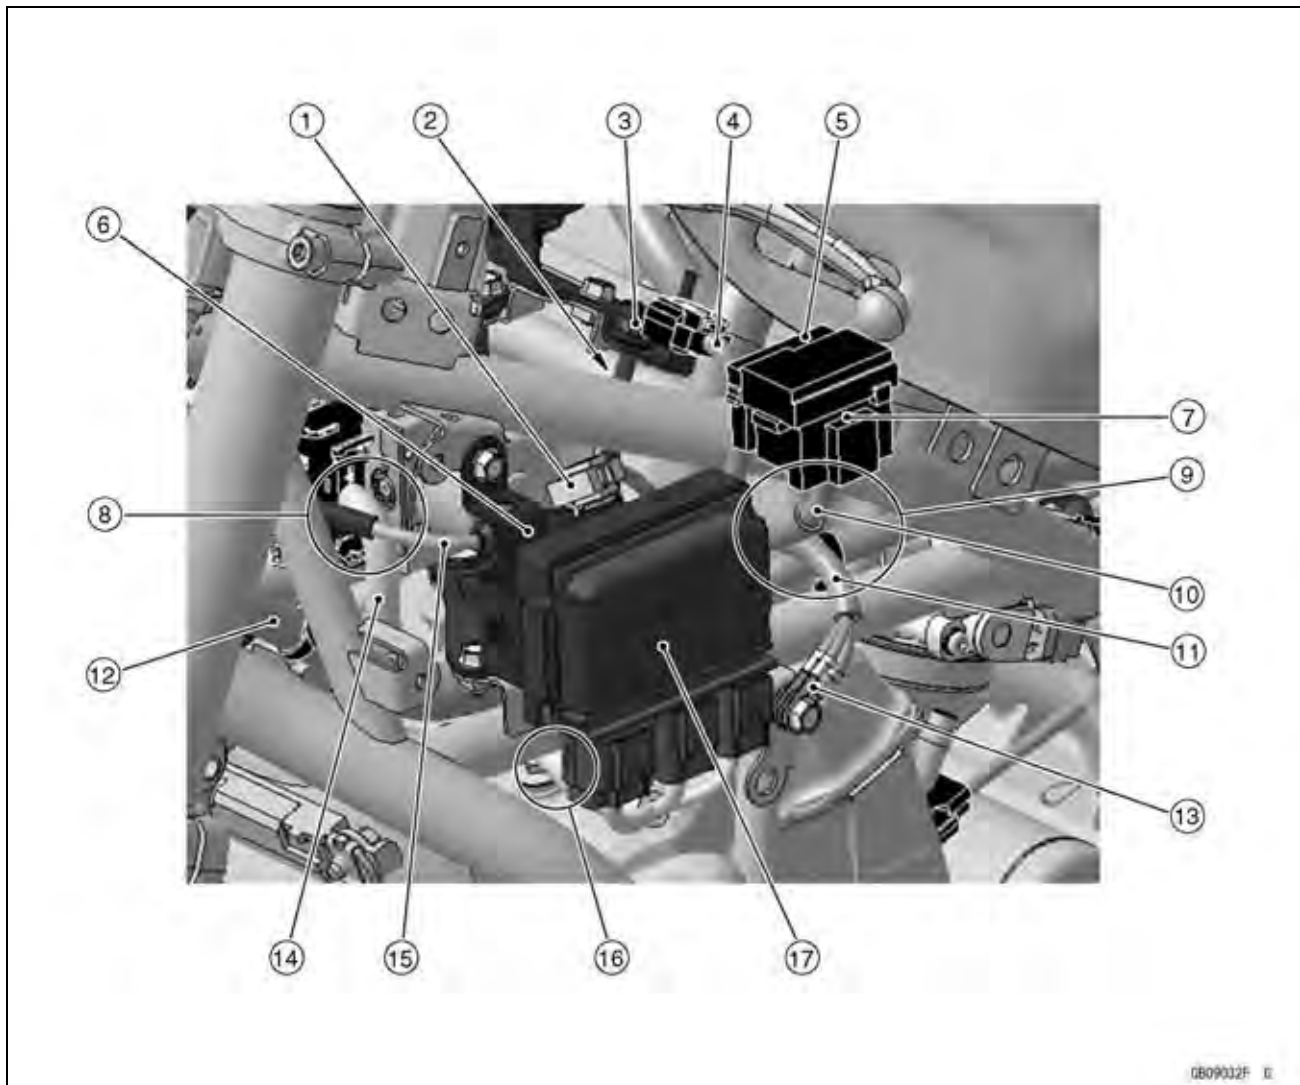

GB09012F E

1. Fuse Box (2) (Insert the fuse box (2) to the bracket [6].)
2. Intake Air Pressure Sensor Vacuum Hose
3. Intake Air Pressure Sensor
4. Intake Air Pressure Sensor Lead
5. Fuse Box (3) (ABS Equipped Models)
6. Bracket
7. Fuse Box (1)
8. Run the ABS hydraulic unit lead under the front wheel rotation sensor lead. (ABS Equipped Models)
9. Run the fuse box (1) lead and frame ground lead between the frame pipe and frame cross pipe.
10. Fuse Box (1) Lead
11. Frame Ground Lead
12. Main Harness
13. Frame Ground Terminals
14. ABS Hydraulic Unit Lead (ABS Equipped Models)
15. Front Wheel Rotation Sensor Lead (ABS Equipped Models)
16. Run the relay box lead under the frame cross pipe.
17. Relay Box

## Cable, Wire, and Hose Routing

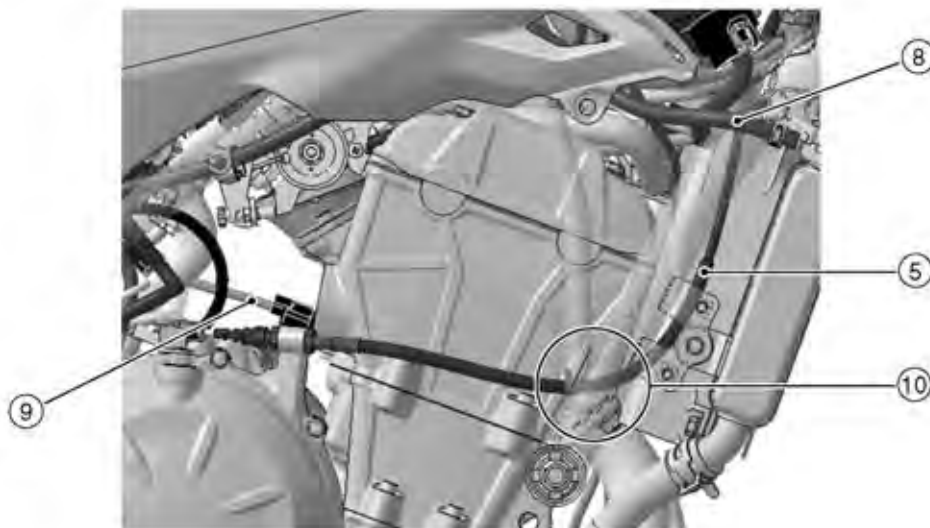
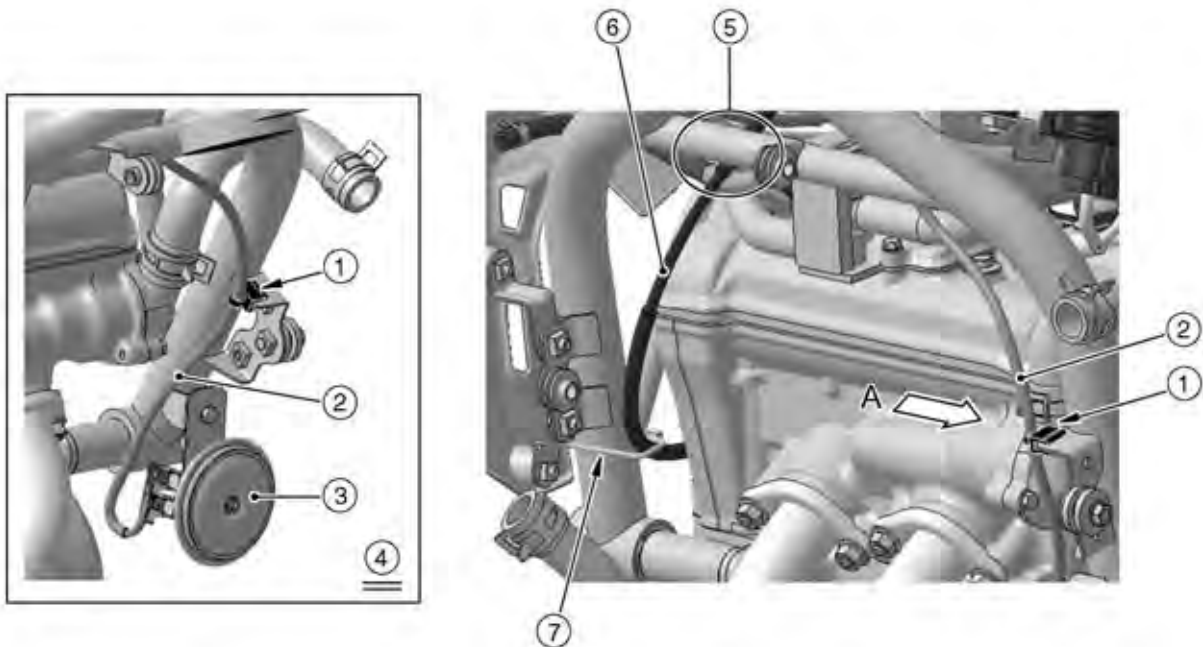


GB09033F 6

1. Clamp (Hold the horn lead, and fit the clamp to the frame bracket.)
2. Horn Lead
3. Horn
4. Viewed from A
5. Run the clutch cable under the frame cross pipe.
6. Clutch Cable
7. Bracket (Hold the clutch cable to the guide of the bracket.)
8. Reserve Tank Hose
9. Water Temperature Sensor Lead
10. Run the clutch cable to the inside of the frame pipe, and hold it to the guide of the bracket [7].

# 17-10 APPENDIX

## Cable, Wire, and Hose Routing

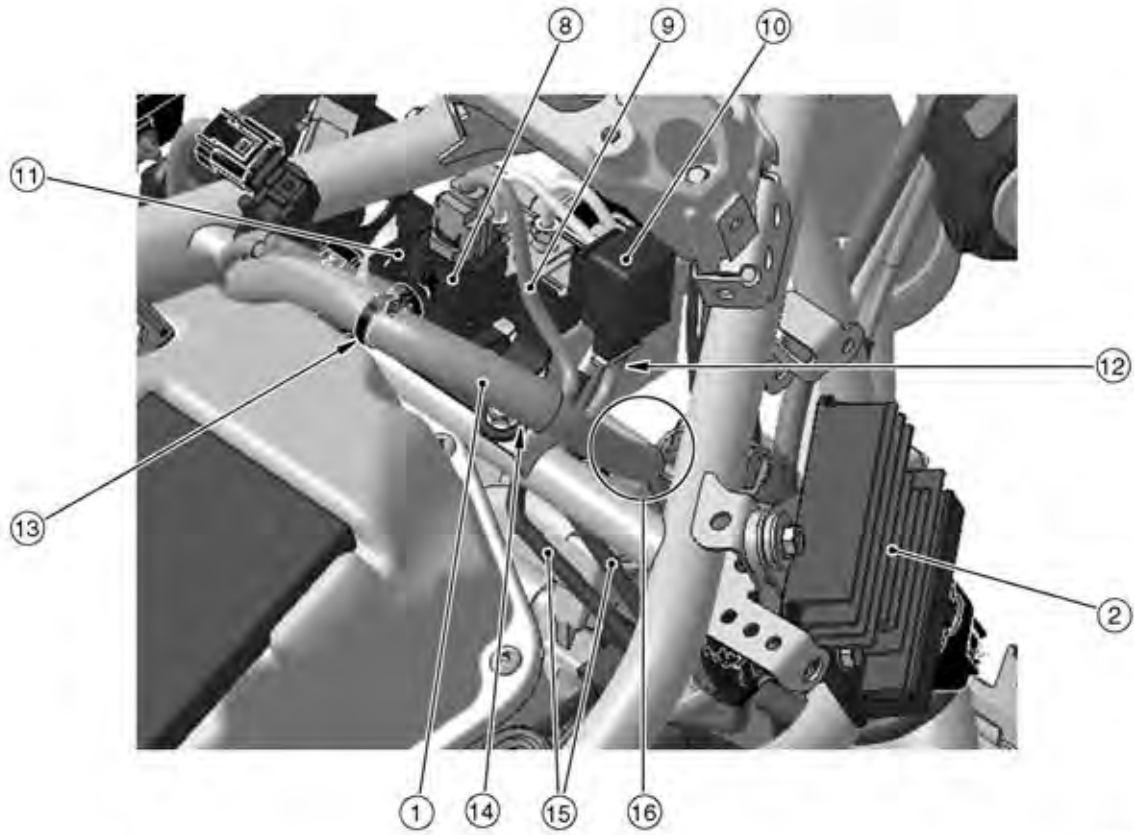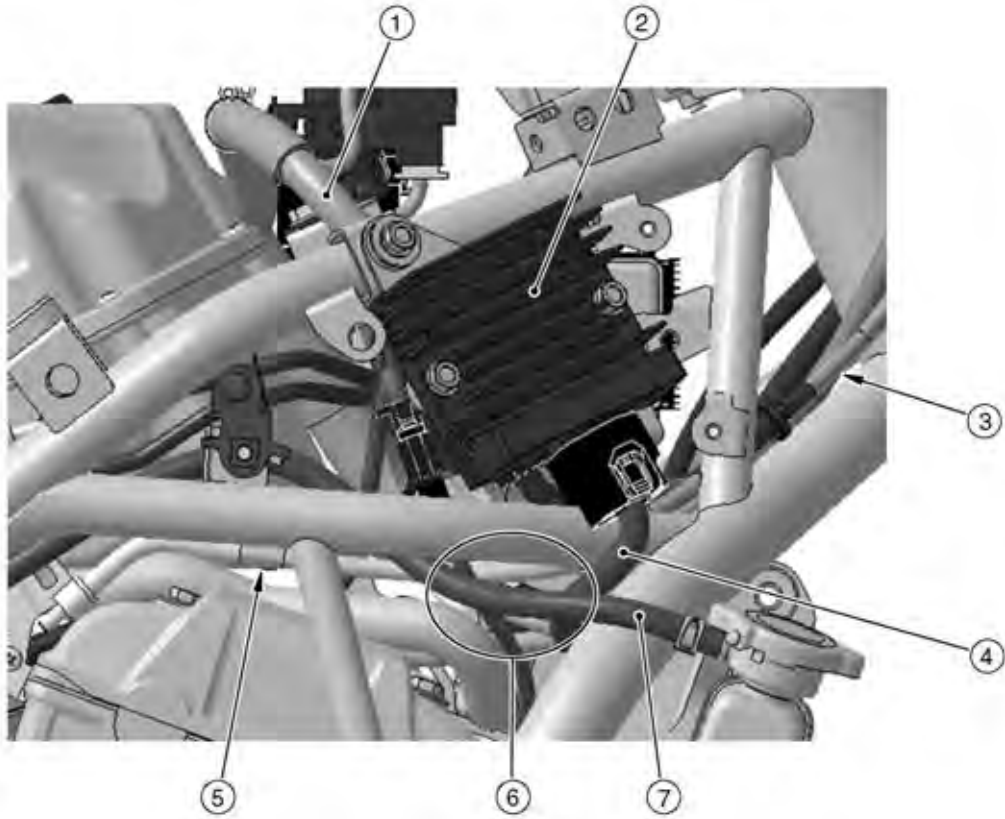

---



**Cable, Wire, and Hose Routing**

---

1. Main Harness
2. Regulator/Rectifier
3. Throttle Cable (Decelerator Cable)
4. Regulator/Rectifier Lead
5. Throttle Cable (Accelerator Cable)
6. Run the regulator/rectifier lead and reserve tank hose under the frame cross pipe.
7. Reserve Tank Hose
8. Vehicle-down Sensor
9. Vehicle-down Sensor Lead
10. Turn Signal Relay
11. Bracket
12. Turn Signal Relay Lead
13. Clamp (Hold the main harness, and insert the clamp to the bracket [10].)
14. Do not twist the main harness around here.
15. Rear Brake Pipes (ABS Equipped Models)
16. Run the main harness in front of the rear brake pipes. (ABS Equipped Models)

# 17-12 APPENDIX

## Cable, Wire, and Hose Routing

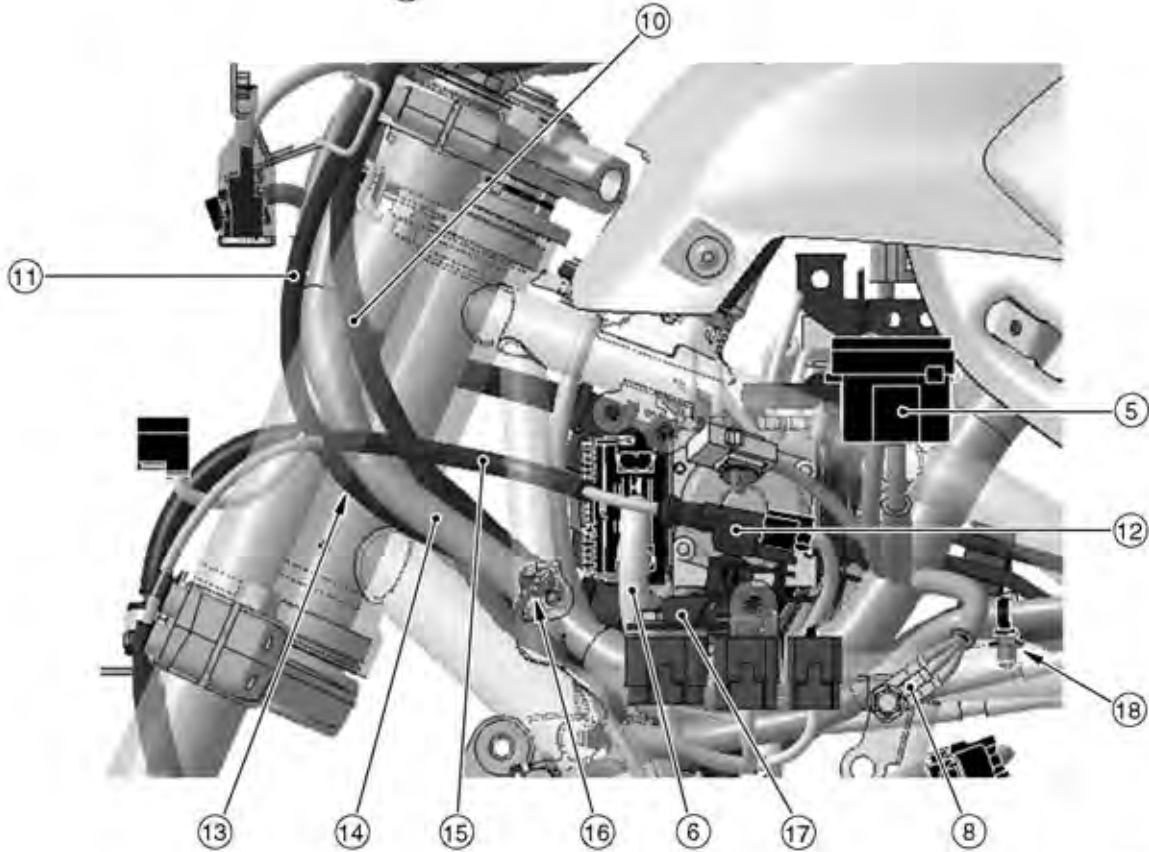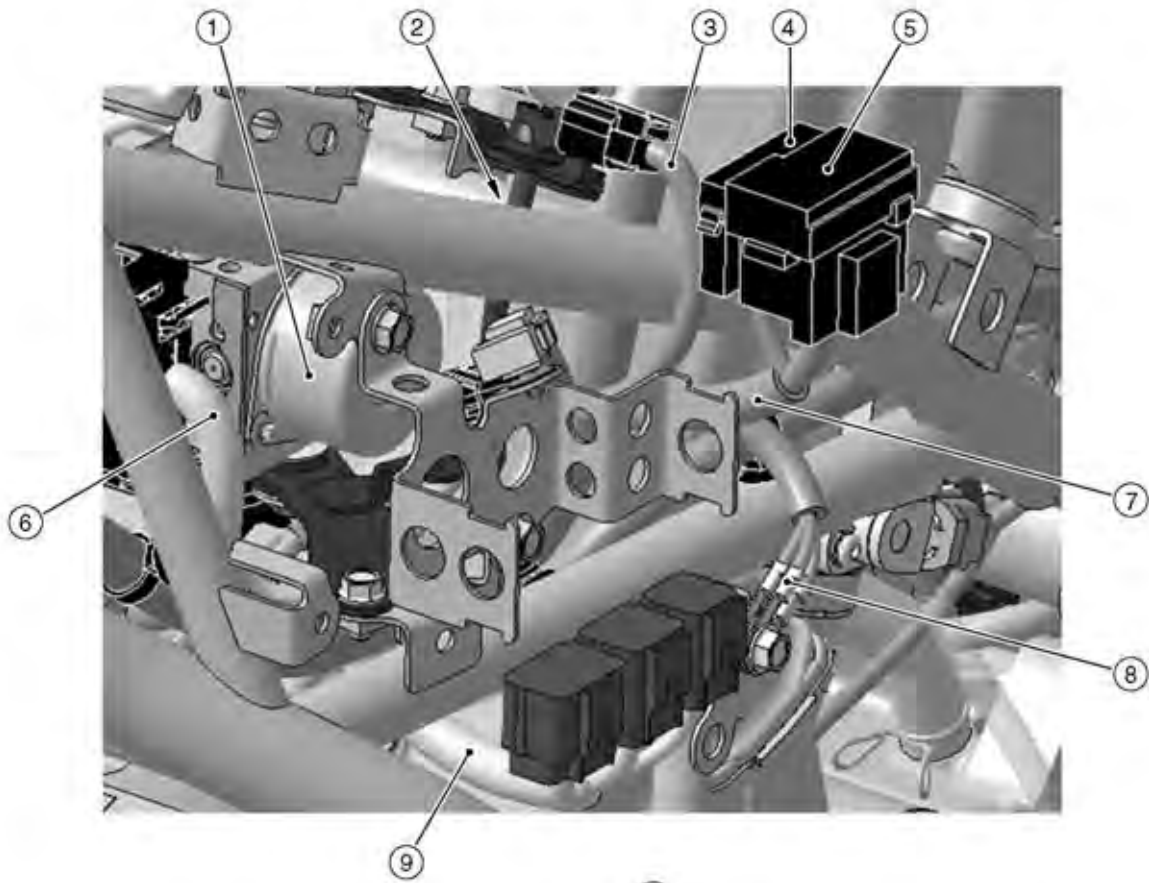



---



**Cable, Wire, and Hose Routing**

---

1. ABS Hydraulic Unit (ABS Equipped Models)
2. Intake Air Pressure Sensor Vacuum Hose
3. Intake Air Pressure Sensor Lead
4. Fuse Box (3) (ABS Equipped Models)
5. Fuse Box (1)
6. ABS Hydraulic Unit Lead (ABS Equipped Models)
7. Fuse Box Lead
8. Frame Ground Terminals
9. Relay Box Lead
10. Left Switch Housing Lead
11. Clutch Cable
12. Front Wheel Rotation Sensor Lead Connector (Insert the front wheel rotation sensor lead connector to the bracket [16].) (ABS Equipped Models)
13. Run the clutch cable to the lower of the main harness and left switch housing lead.
14. Main Harness
15. Front Wheel Rotation Sensor Lead (ABS Equipped Models)
16. Clamp (Hold the main harness, and insert the clamp to the frame cross pipe.)
17. Bracket
18. Clamp (Hold the main harness, and insert the clamp to the frame pipe.)

# 17-14 APPENDIX

## Cable, Wire, and Hose Routing

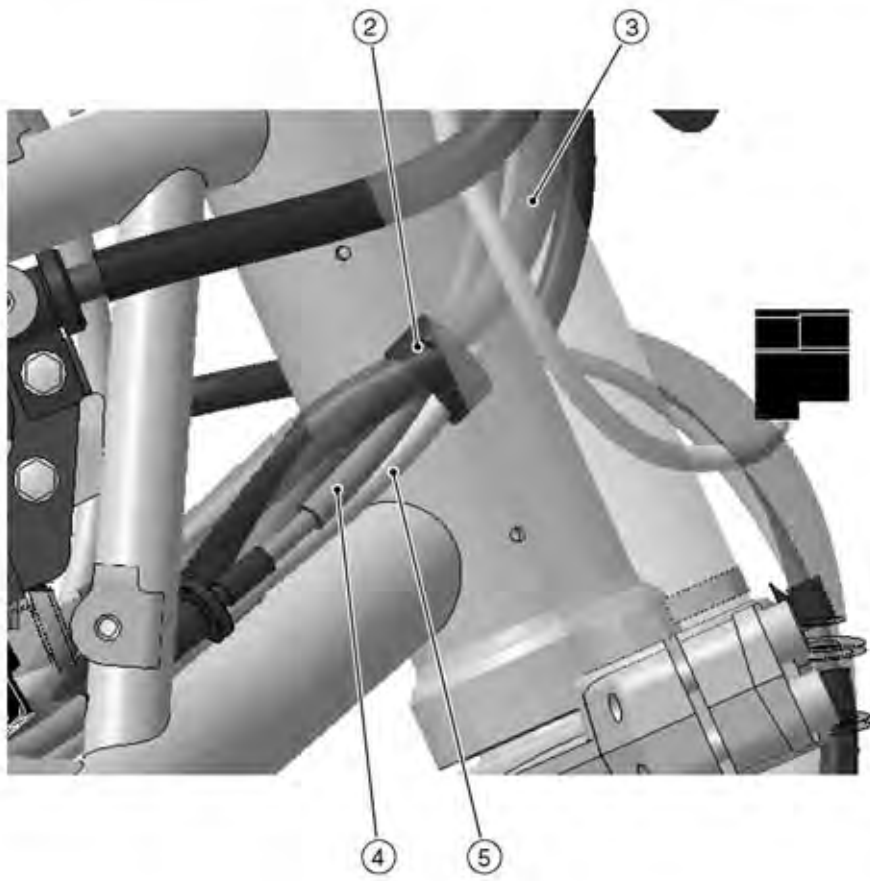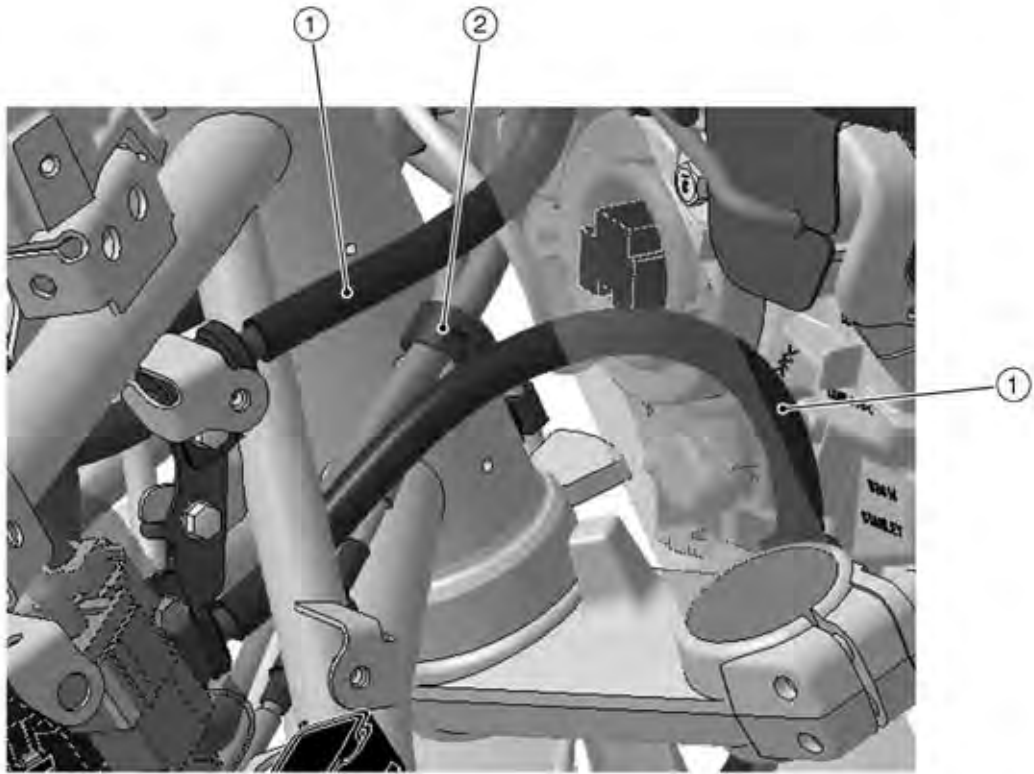

---


**Cable, Wire, and Hose Routing**

---

1. Front Brake Hoses (ABS Equipped Models)
2. Band (Hold the throttle cables and right switch housing lead. Install the band behind the frame number.)
3. Right Switch Housing Lead
4. Throttle Cable (Decelerator Cable)
5. Throttle Cable (Accelerator Cable)

# 17-16 APPENDIX

## Cable, Wire, and Hose Routing

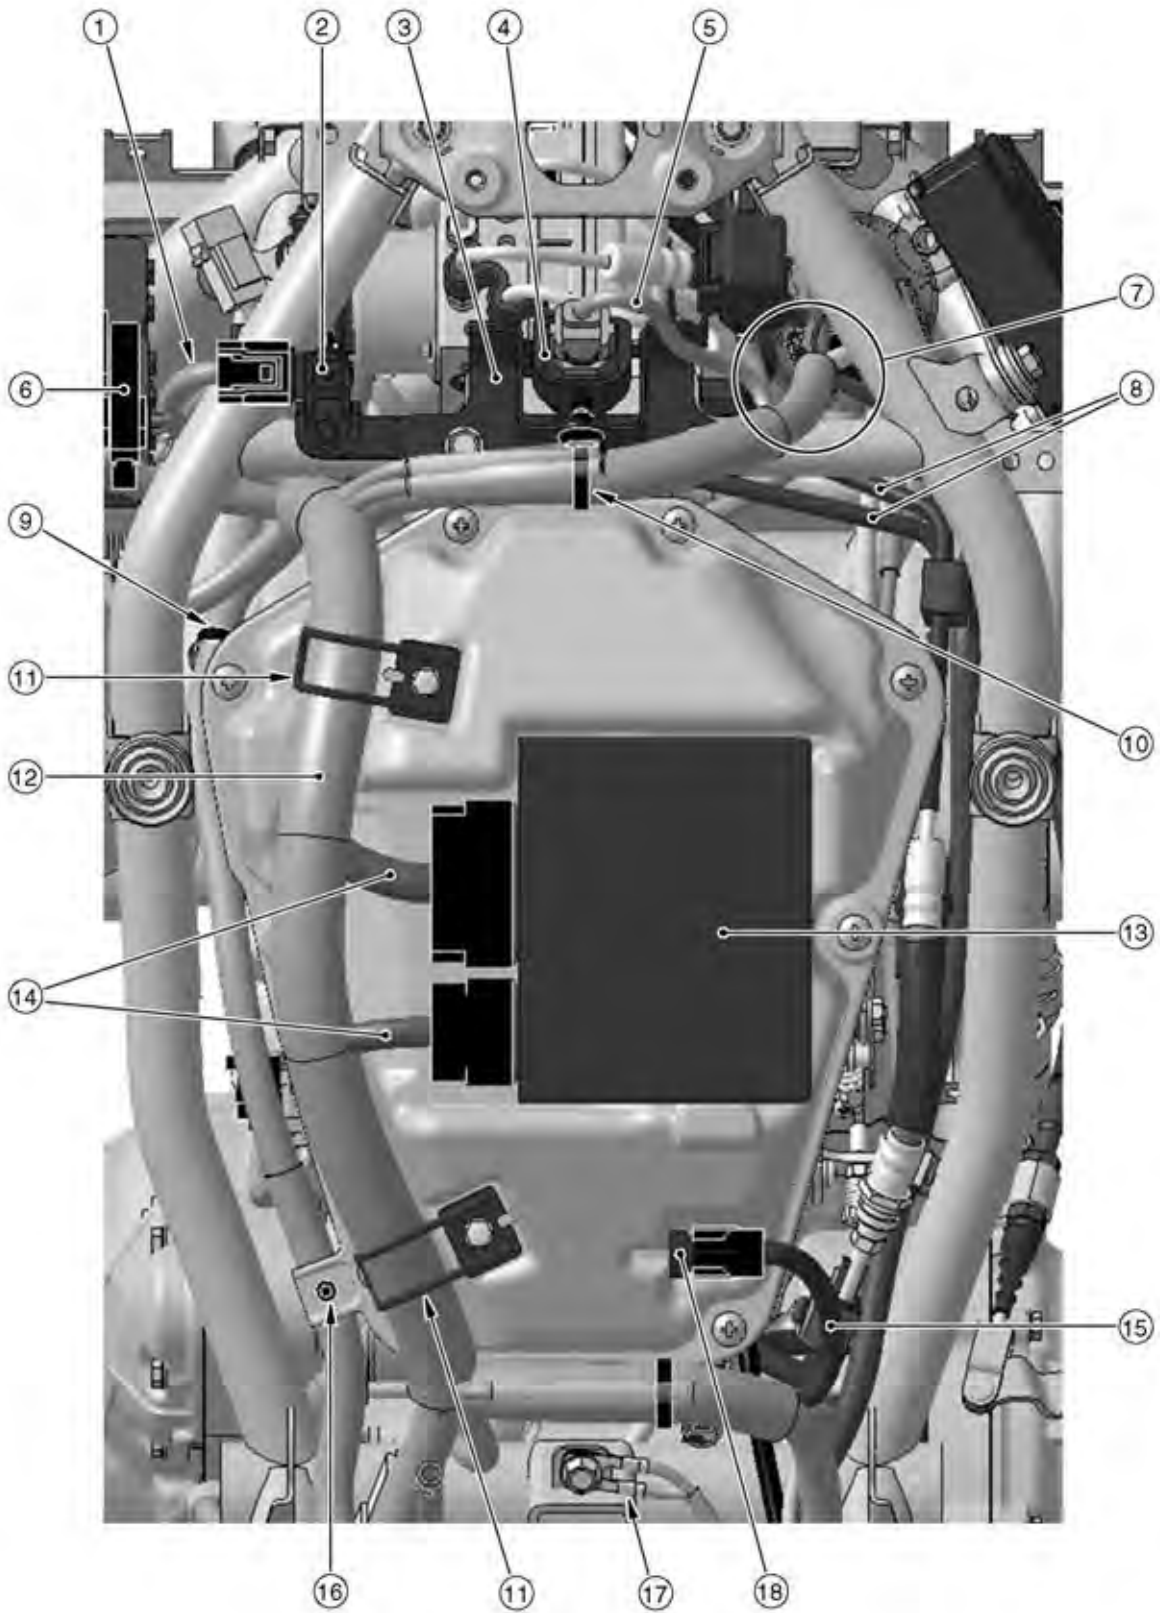

---



**Cable, Wire, and Hose Routing**

---

1. Intake Air Pressure Sensor Lead
2. Intake Air Pressure Sensor
3. Bracket
4. Vehicle-down Sensor
5. Vehicle-down Sensor Lead
6. Fuse Box (1) (2) (ABS Equipped Models) (Insert the fuse box to the left fuel tank side cover.)
7. Run the main harness in front of the rear brake pipes. (ABS Equipped Models)
8. Rear Brake Pipes (ABS Equipped Models)
9. Clamp (Hold the main harness, and insert the clamp to the frame pipe.)
10. Clamp (Hold the main harness, and insert the clamp to the bracket [3].)
11. Brackets (Hold the main harness to the guide of the bracket.)
12. Main Harness
13. ECU
14. ECU Leads
15. Intake Air Temperature Sensor Lead
16. Clamp (Hold the main harness, and insert the clamp to the air cleaner housing.)
17. Frame Ground Terminal
18. Intake Air Temperature Sensor

# 17-18 APPENDIX

## Cable, Wire, and Hose Routing

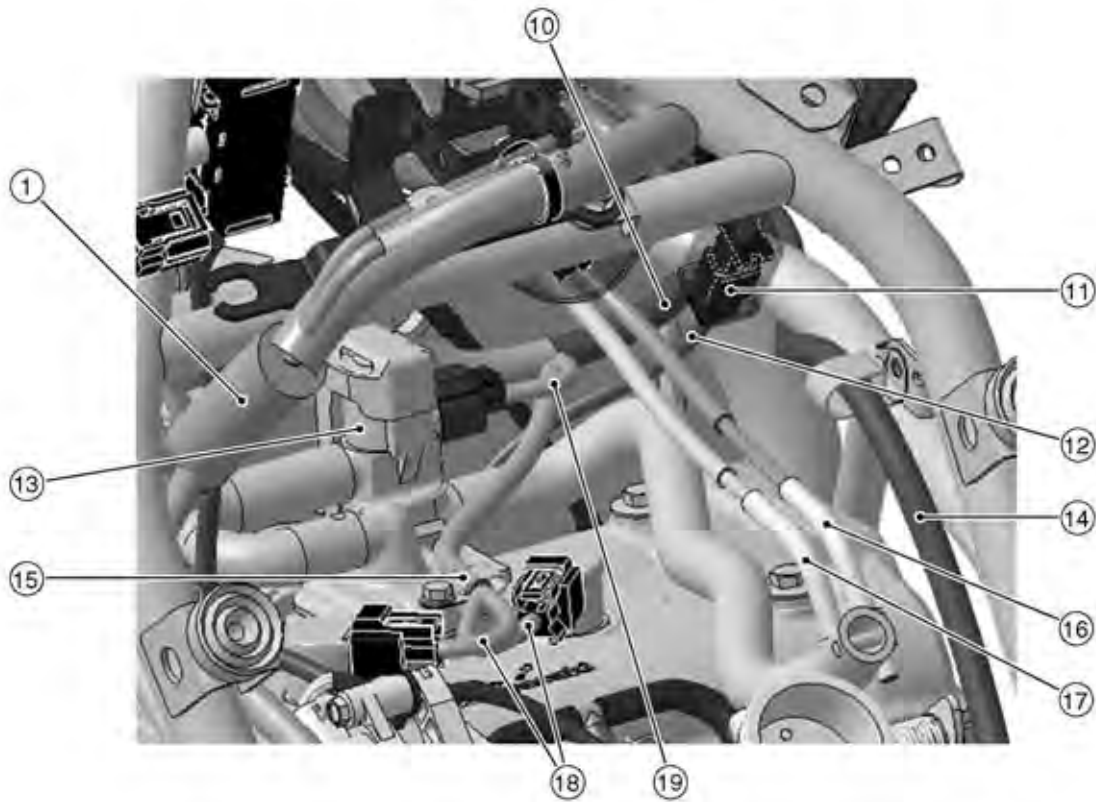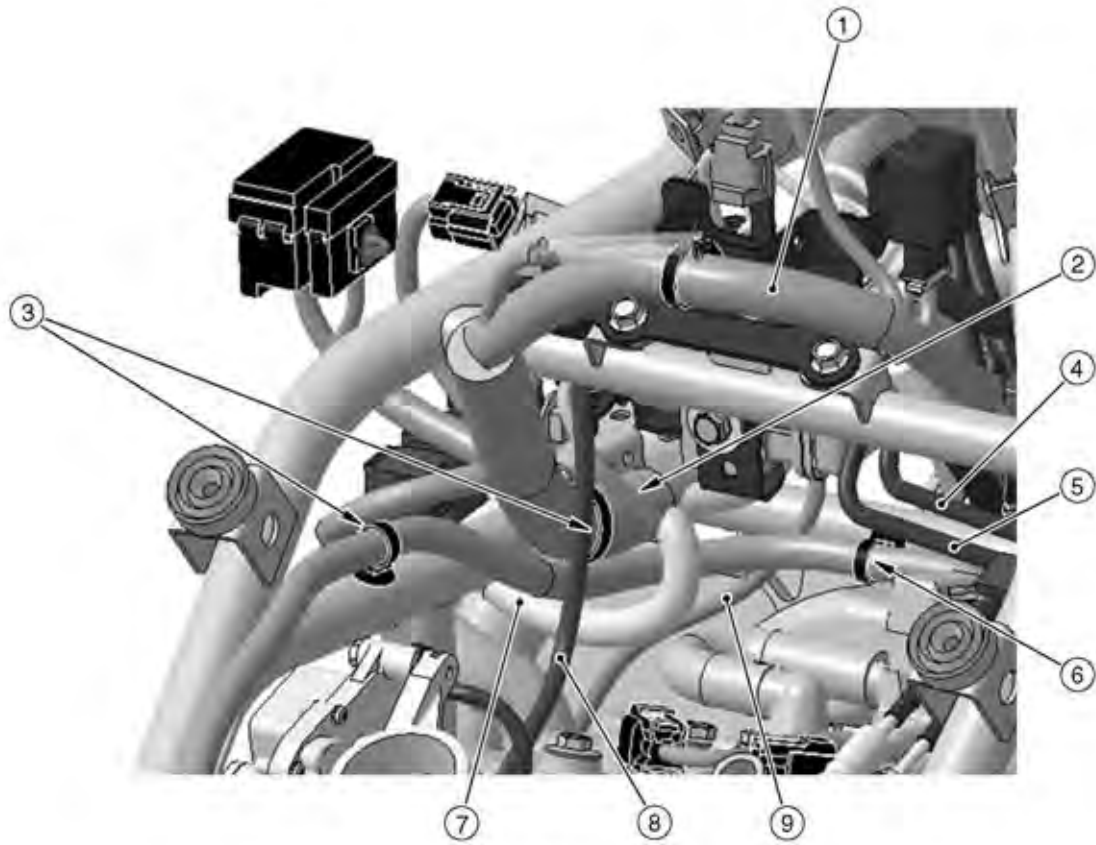

---



**Cable, Wire, and Hose Routing**

---

1. Main Harness
2. Front Wheel Rotation Sensor Lead (ABS Equipped Models)
3. Clamps (Hold the main harness, and insert the clamp to the frame pipe.)
4. Rear Brake Pipe (ABS Hydraulic Unit ~ Rear Caliper) (ABS Equipped Models)
5. Rear Brake Pipe (ABS Hydraulic Unit ~ Rear Master Cylinder) (ABS Equipped Models)
6. Clamp (Hold the main harness, and insert the clamp to the frame cross pipe.)
7. Relay Box Lead
8. Intake Air Pressure Sensor Vacuum Hose
9. Horn Lead
10. Regulator/Rectifier Lead
11. Radiator Fan Lead Connector
12. Radiator Fan Lead
13. Air Switching Valve
14. Reserve Tank Hose
15. Clamp (Hold the stick coil lead. Do not touch the lead to the uncoated edge of the clamp.)
16. Throttle Cable (Decelerator Cable)
17. Throttle Cable (Accelerator Cable)
18. Stick Coil Leads
19. Air Switching Valve Lead

# 17-20 APPENDIX

## Cable, Wire, and Hose Routing

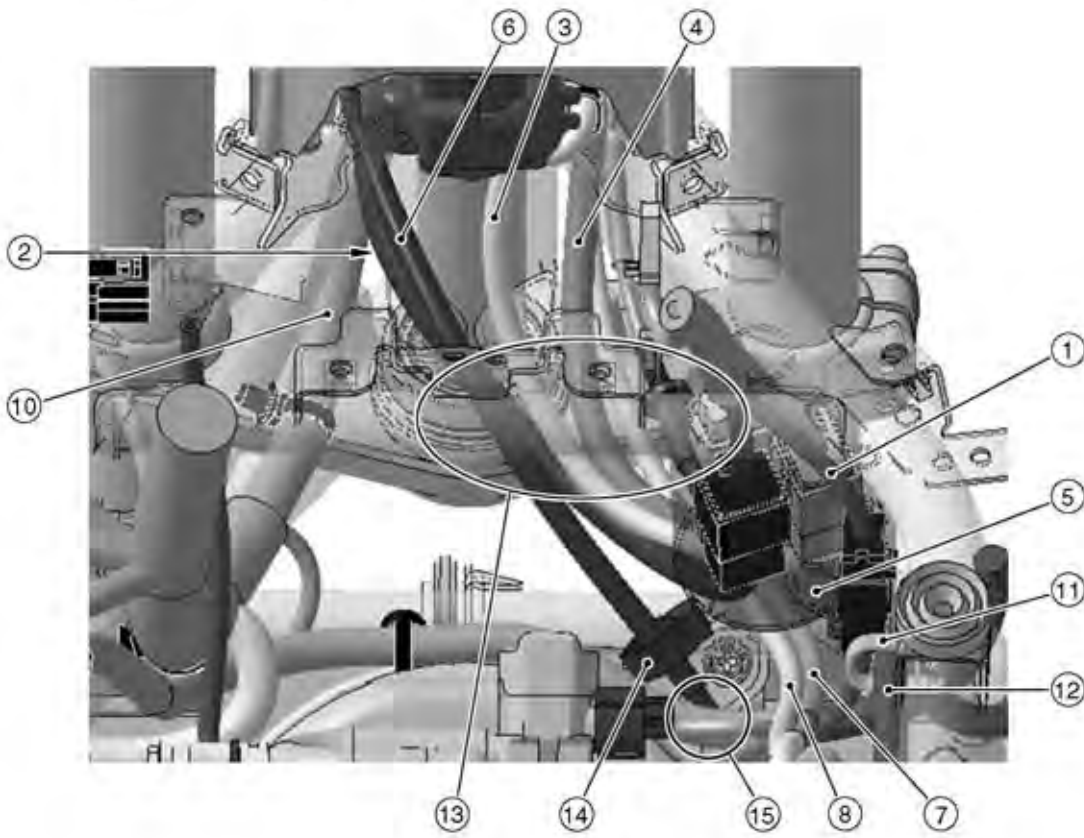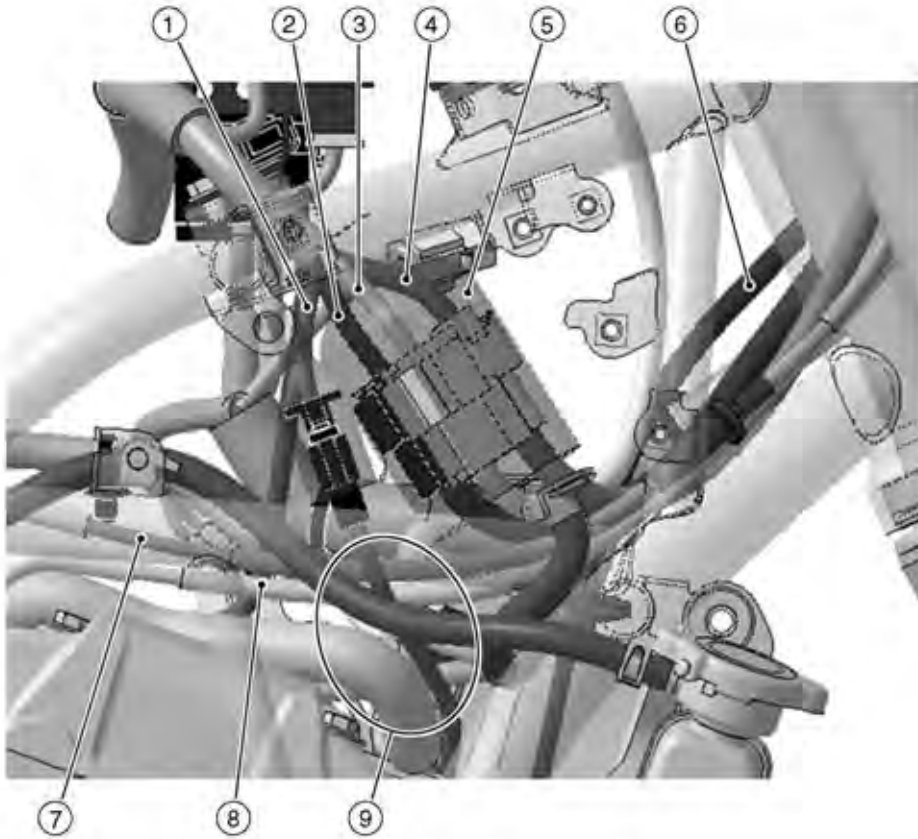



---


**Cable, Wire, and Hose Routing**

---

1. Radiator Fan Lead
2. Left Switch Housing Lead
3. Ignition Switch Lead
4. Right Switch Housing Lead
5. Rubber Boot
6. Clutch Cable
7. Throttle Cable (Decelerator Cable)
8. Throttle Cable (Accelerator Cable)
9. Run the radiator fan switch lead under the throttle cables and stick coil lead.
10. Main Harness
11. Clamp (Hold the reserve tank hose.)
12. Reserve Tank Hose
13. Run the clutch cable, left switch housing lead, ignition switch lead, right switch housing lead and throttle cables over the steering stem.
14. Clamp (Hold the clutch cable. Position the clamp so that the open side faces rightward.)
15. Run the clutch cable in front of the main harness.

# 17-22 APPENDIX

## Cable, Wire, and Hose Routing

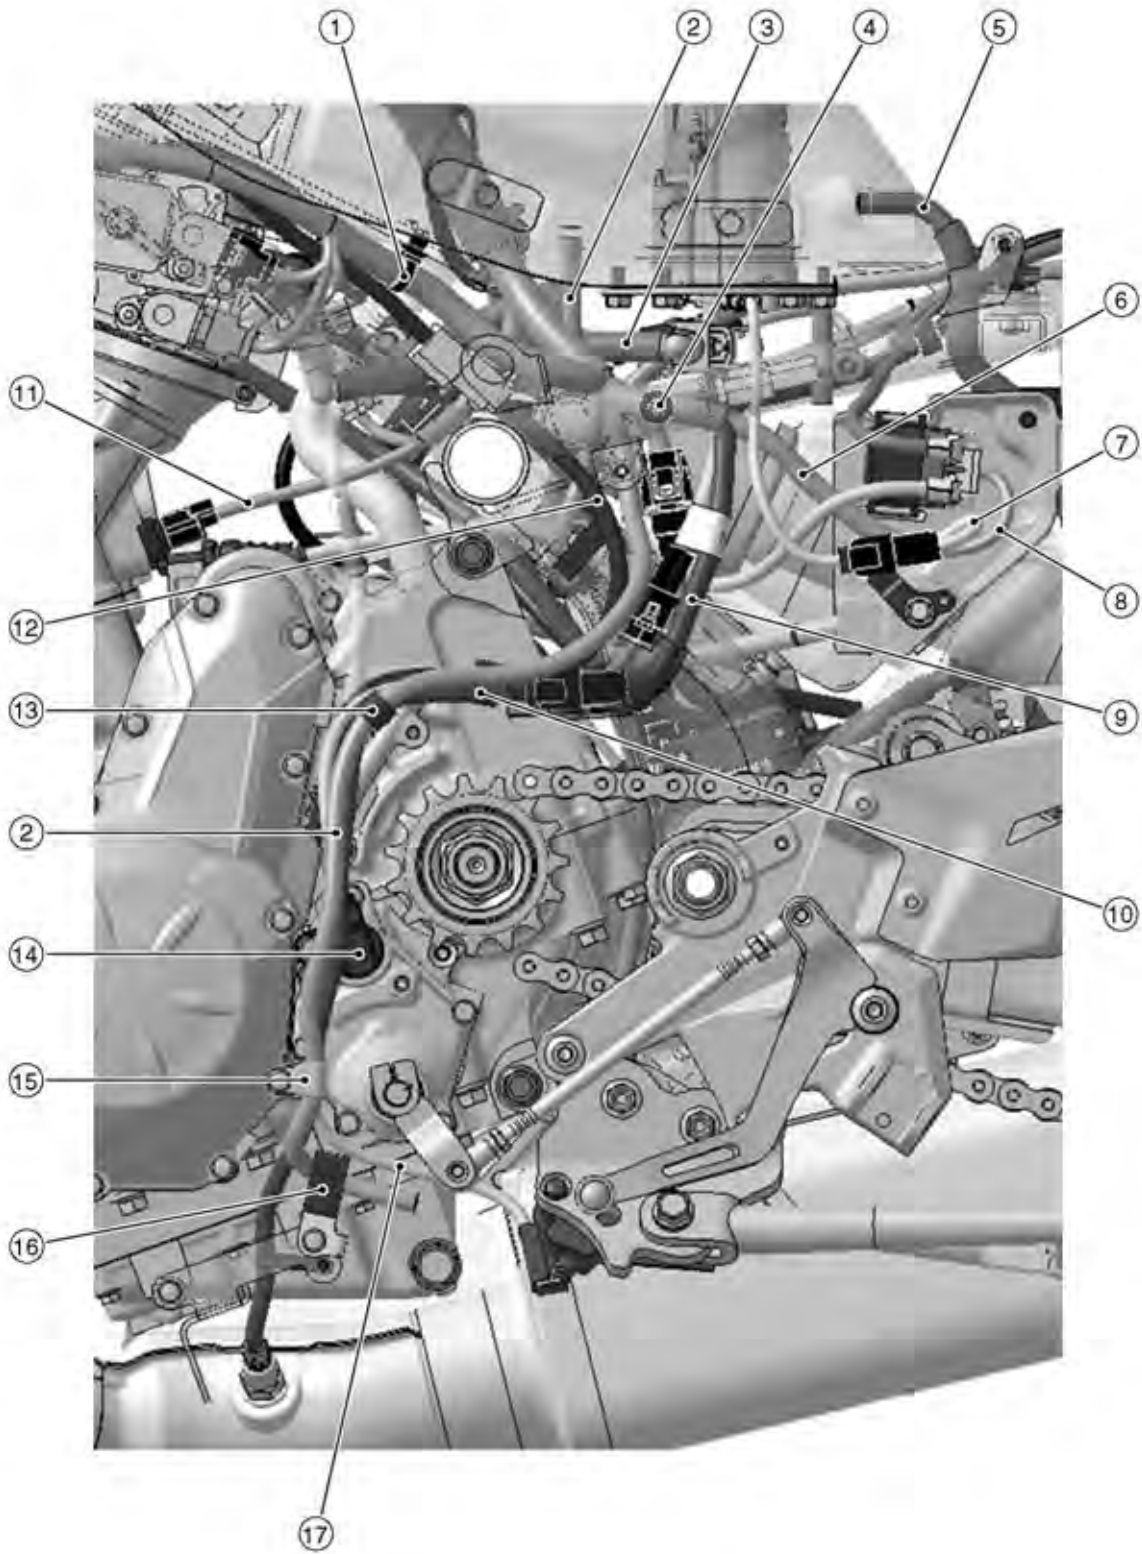

---


**Cable, Wire, and Hose Routing**

---

1. Clamp (Hold the main harness. Insert the clamp to the air cleaner housing.)
2. Fuel Tank Drain Hose
3. Fuel Hose
4. Clamp (Hold the main harness. Insert the clamp to the frame.)
5. Fuel Tank Breather Hose (Fuel Tank ~ Canister (Evaporative Emission Control System Equipped Models))
6. Main Harness
7. Fuel Pump Lead
8. Starter Relay Lead
9. Oxygen Sensor Lead
10. Band (Hold the gear position sensor lead, alternator lead and side stand switch lead.)
11. Water Temperature Sensor Lead
12. Alternator Lead
13. Clamp (Hold the fuel tank drain hose and oxygen sensor lead.)
14. Gear Position Sensor
15. Clamp (Hold the fuel tank drain hose, oxygen sensor lead and side stand switch lead.)
16. Clamp (Hold the fuel tank drain hose.)
17. Side Stand Switch Lead

# 17-24 APPENDIX

## Cable, Wire, and Hose Routing

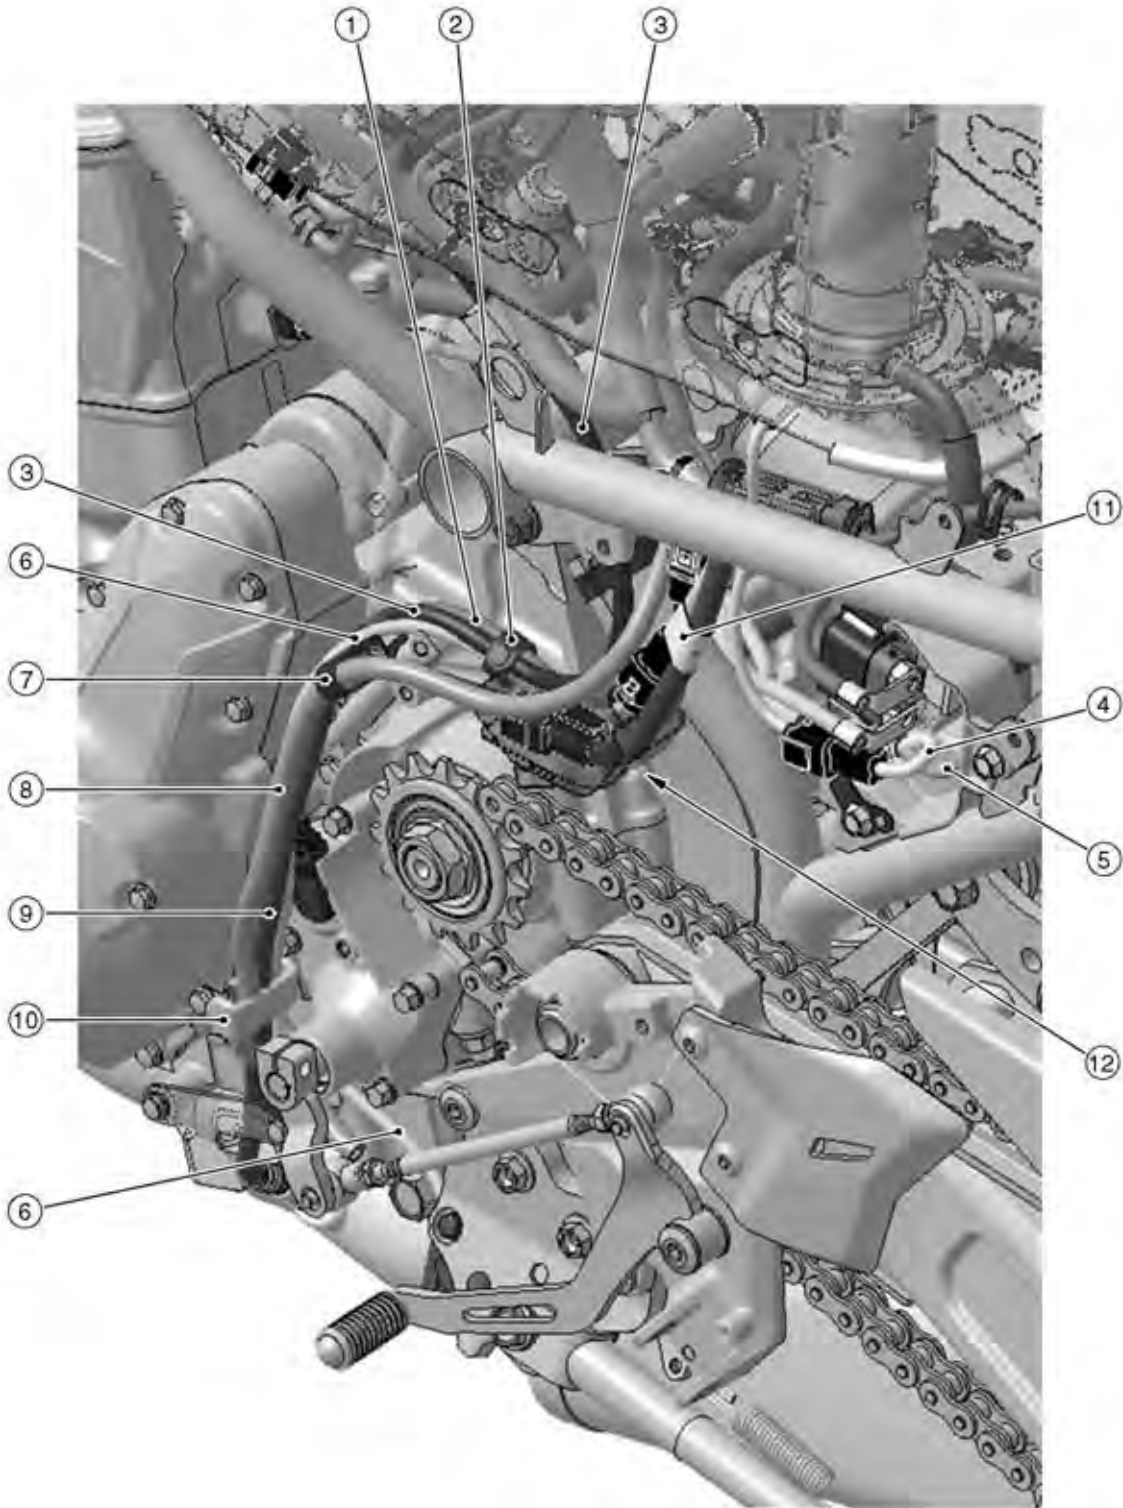

---

**Cable, Wire, and Hose Routing**


---

1. Gear Position Sensor Lead
2. Band (Hold the gear position sensor lead, alternator lead and side stand switch lead.)
3. Alternator Lead
4. Fuel Pump Lead
5. Starter Relay Lead
6. Side Stand Switch Lead
7. Clamp (Hold the fuel tank drain hose and oxygen sensor lead.)
8. Fuel Tank Drain Hose
9. Oxygen Sensor Lead
10. Clamp (Hold the fuel tank drain hose, oxygen sensor lead and side stand switch lead.)
11. White Tape (Hold the side stand switch lead and oxygen sensor lead.)
12. Wrap the rubber cover.

# 17-26 APPENDIX

## Cable, Wire, and Hose Routing

US, CA, AU, ID, PH and MY Models

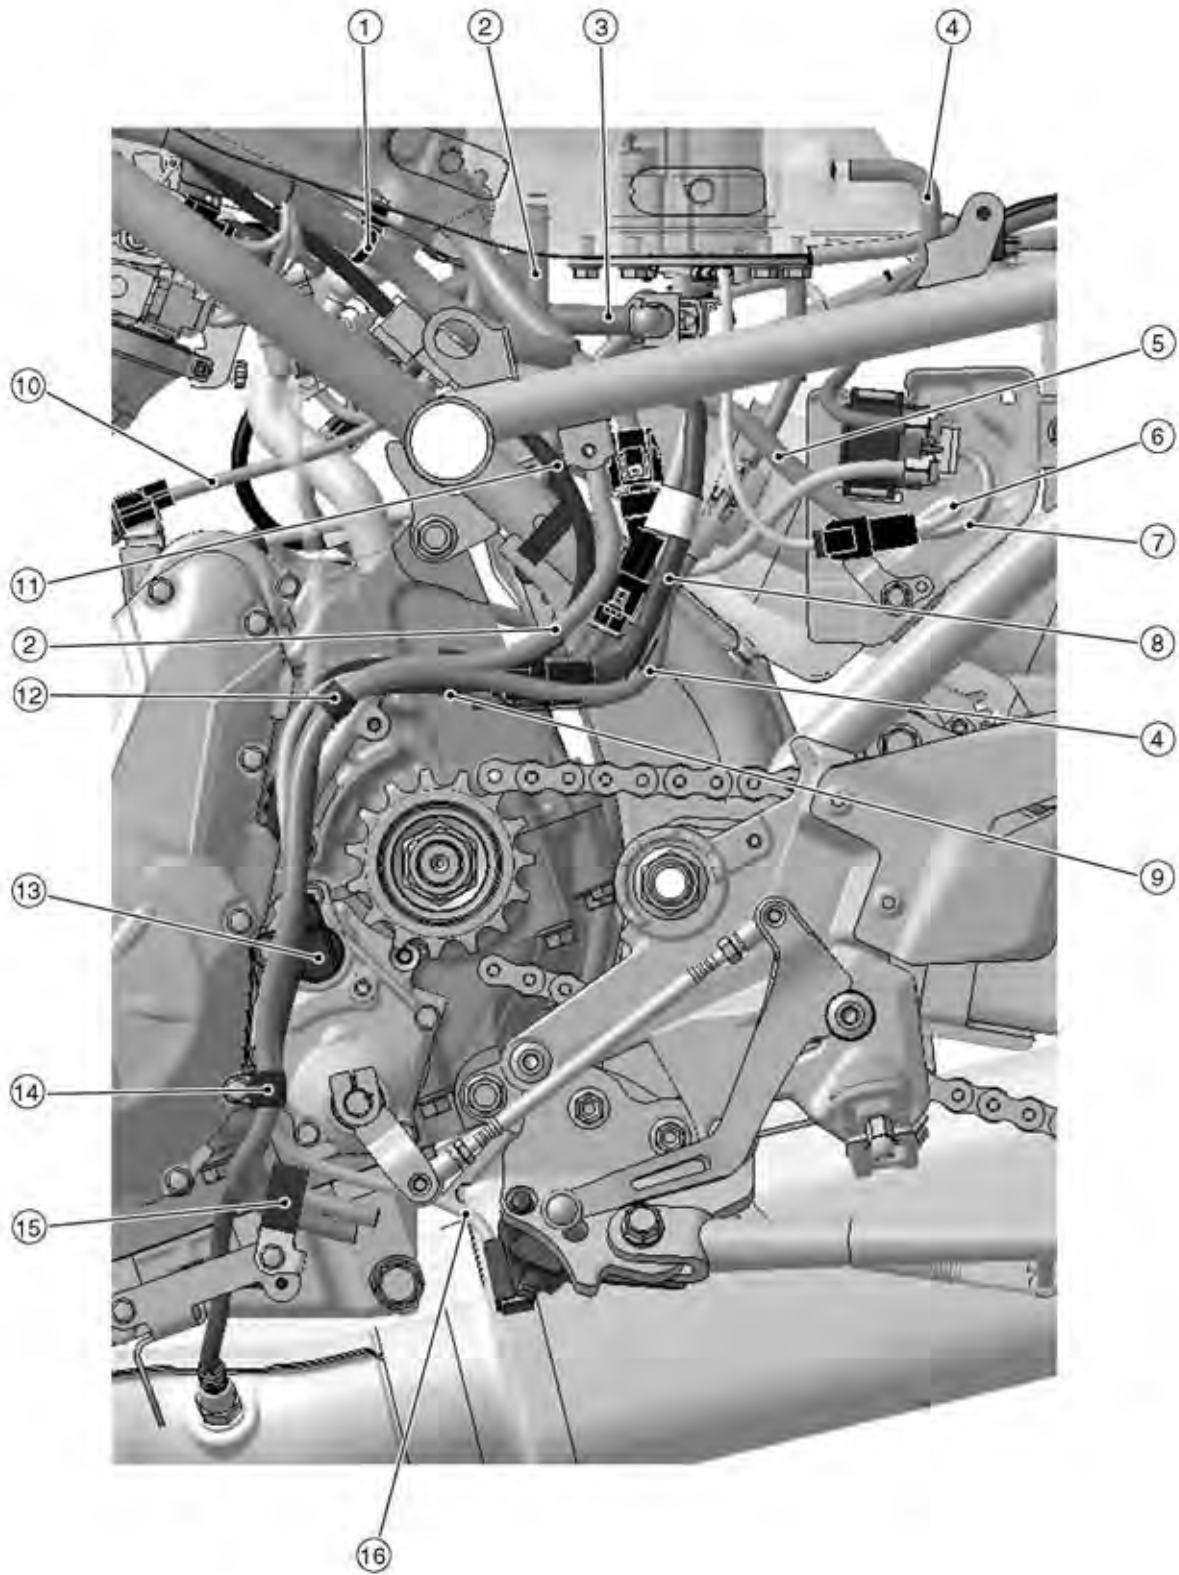

---


**Cable, Wire, and Hose Routing**

---

1. Clamp (Hold the main harness. Insert the clamp to the air cleaner housing.)
2. Fuel Tank Drain Hose
3. Fuel Hose
4. Fuel Tank Breather Hose
5. Main Harness
6. Fuel Pump Lead
7. Starter Relay Lead
8. Oxygen Sensor Lead
9. Band (Hold the gear position sensor lead, alternator lead and side stand switch lead.)
10. Water Temperature Sensor Lead
11. Alternator Lead
12. Clamp (Hold the fuel tank breather hose, fuel tank drain hose and oxygen sensor lead.)
13. Gear Position Sensor
14. Clamp (Hold the fuel tank breather hose, fuel tank drain hose, oxygen sensor lead and side stand switch lead.)
15. Clamp (Hold the fuel tank breather hose and fuel tank drain hose.)
16. Side Stand Switch Lead

# 17-28 APPENDIX

## Cable, Wire, and Hose Routing

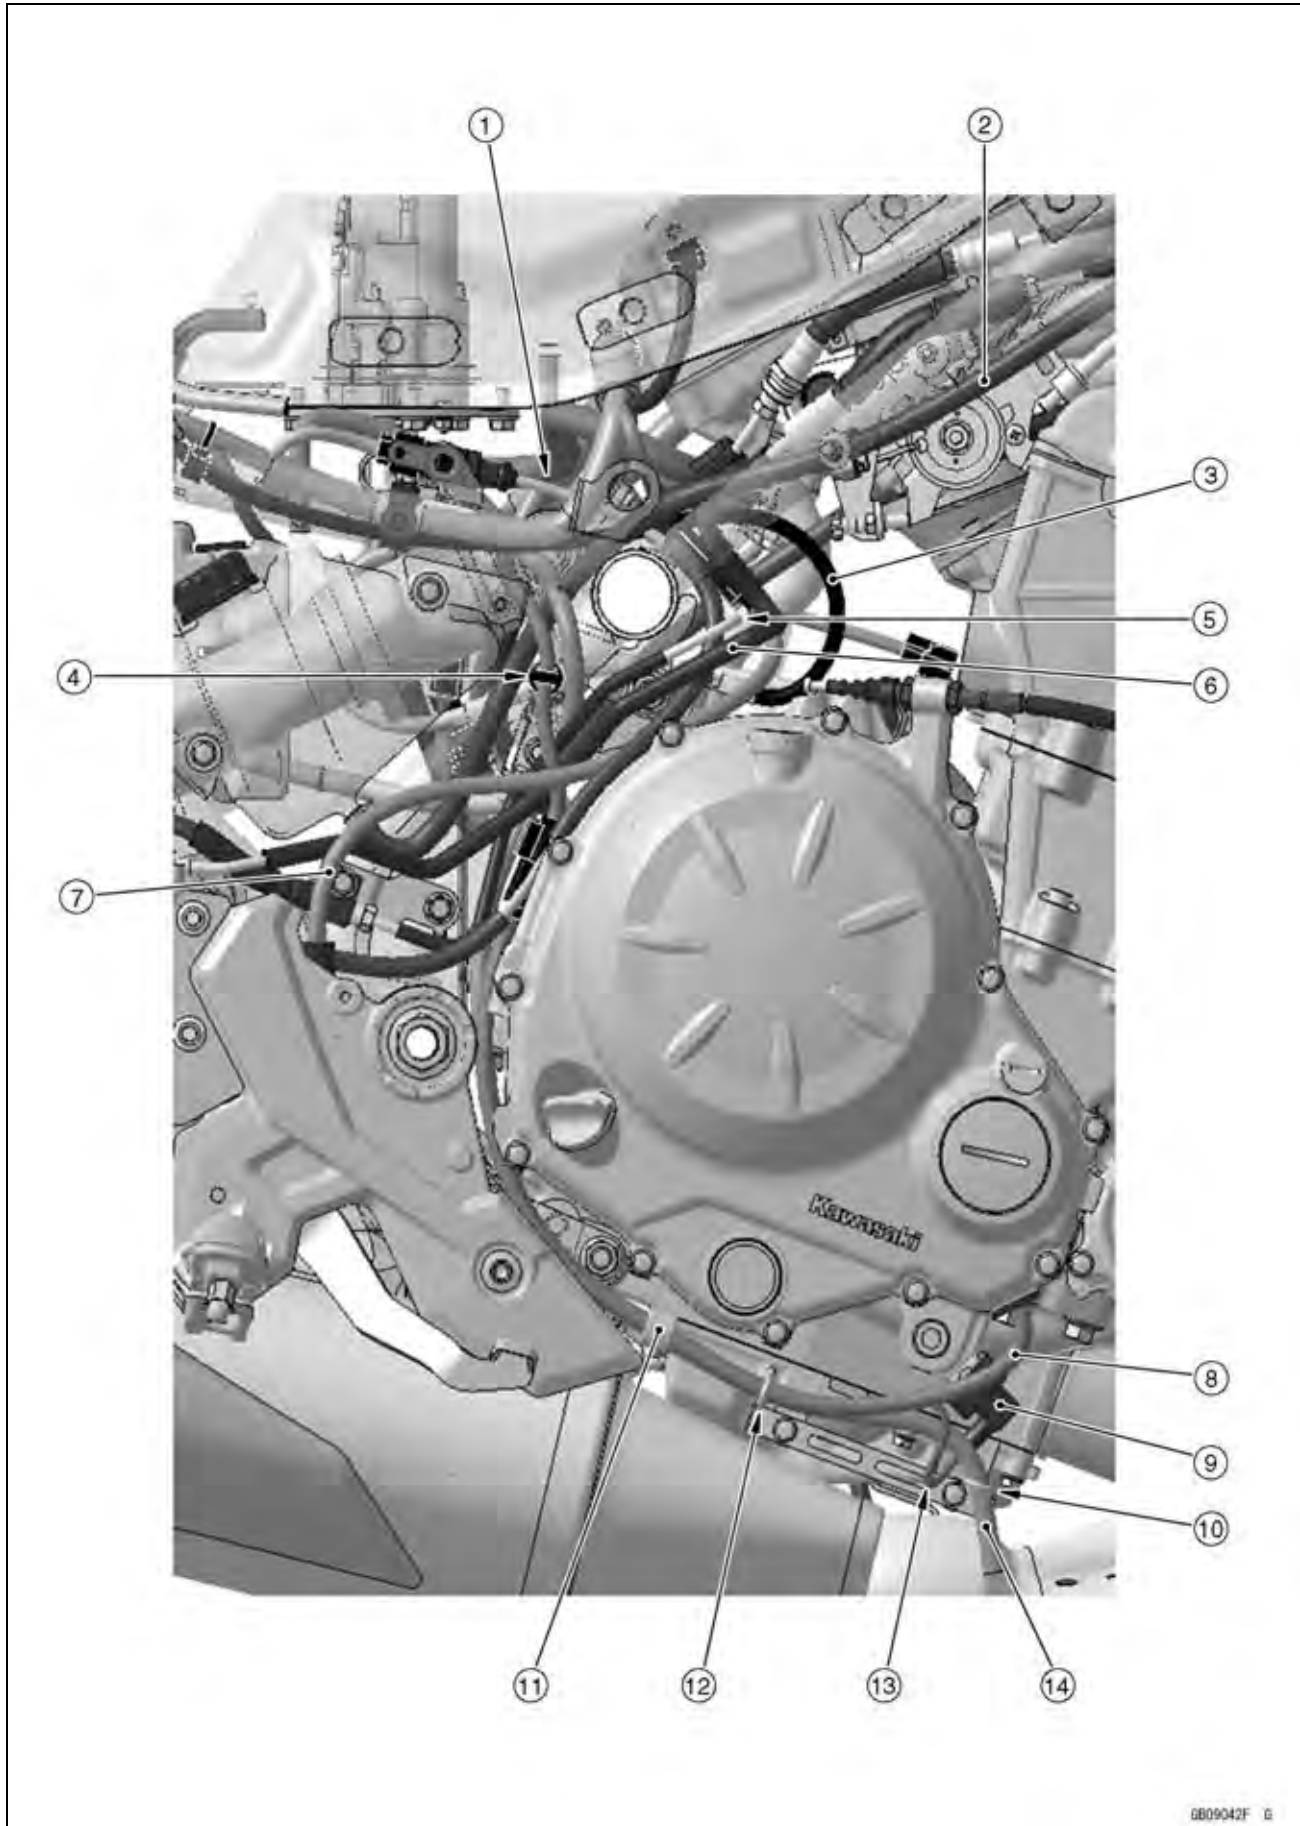



---



**Cable, Wire, and Hose Routing**

---

1. Rear Wheel Rotation Sensor Lead
2. Reserve Tank Hose
3. Battery Negative (-) Cable
4. Clamp (Hold the crankshaft sensor/oil pressure switch lead, and insert the clamp to the frame pipe.)
5. Rear Brake Pipe (ABS Hydraulic Unit ~ Rear Caliper) (ABS Equipped Models)
6. Rear Brake Pipe (ABS Hydraulic Unit ~ Rear Master Cylinder) (ABS Equipped Models)
7. Rear Brake Light Switch Lead
8. Crankshaft Sensor Lead
9. Oil Pressure Switch
10. Bracket (Hold the reserve tank overflow hose to the guide of the bracket.)
11. Clamp (Hold the crankshaft sensor/oil pressure switch lead and reserve tank overflow hose.)
12. Bracket (Hold the crankshaft sensor/oil pressure switch lead and reserve tank overflow hose to the guide of the bracket.)
13. Oil Pressure Switch Lead
14. Reserve Tank Overflow Hose

# 17-30 APPENDIX

## Cable, Wire, and Hose Routing

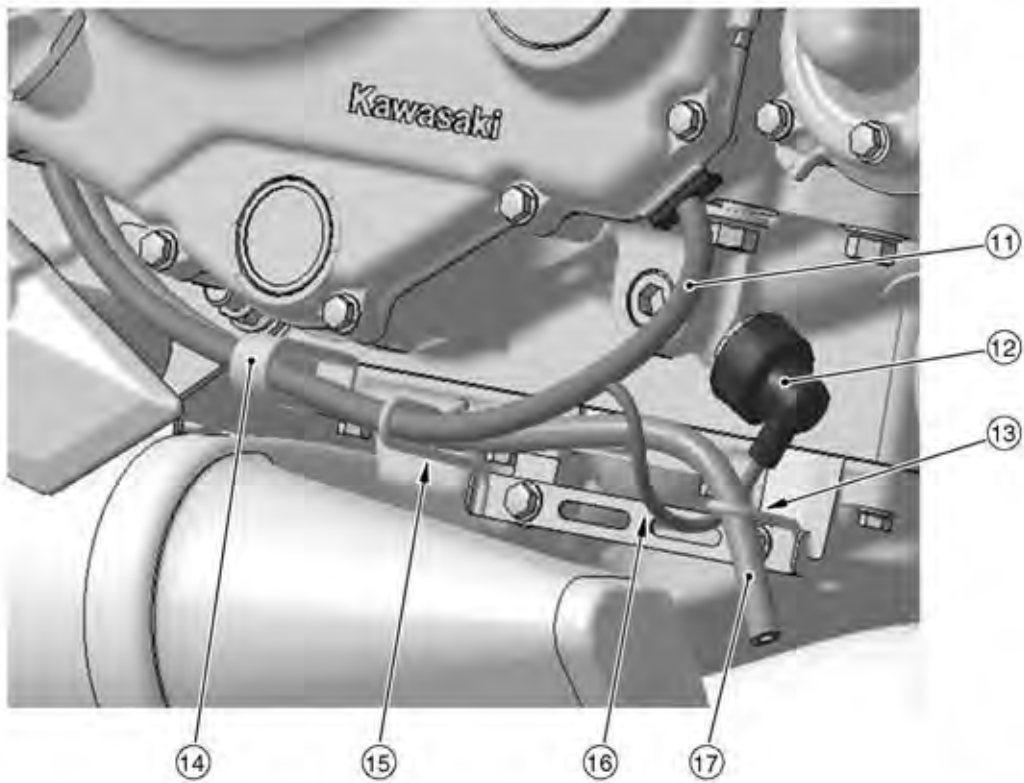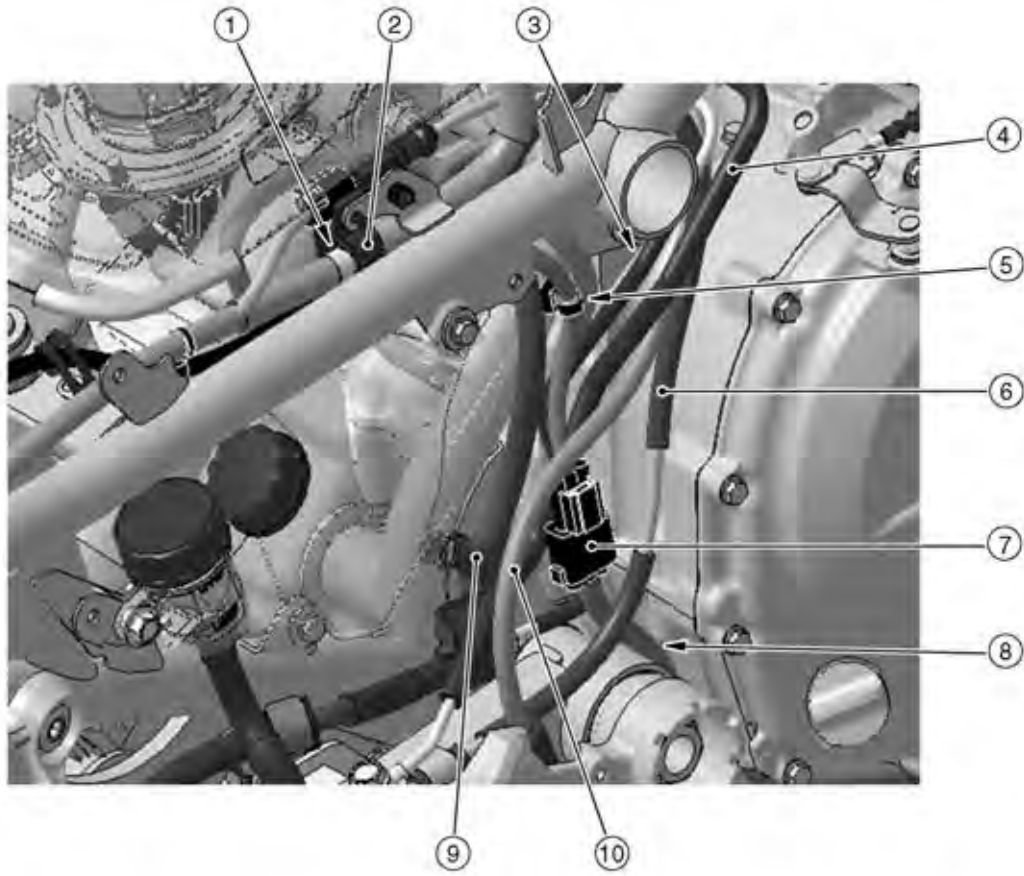

---



**Cable, Wire, and Hose Routing**

---

1. White Tape
2. Clamp (Hold the main harness at the white tape, and hold the battery negative (–) cable. Insert the clamp to the frame pipe. Position the clamp so that the open side faces upward.)
3. Rear Brake Pipe (ABS Hydraulic Unit ~ Rear Caliper)
4. Rear Brake Pipe (ABS Hydraulic Unit ~ Rear Master Cylinder)
5. Clamp (Hold the crankshaft sensor/oil pressure switch lead, and insert the clamp to the frame pipe.)
6. Rear Wheel Rotation Sensor Lead
7. Crankshaft Sensor/Oil Pressure Switch Lead Connector
8. Crankshaft Sensor/Oil Pressure Switch Lead
9. Reserve Tank Hose
10. Rear Brake Light Switch Lead
11. Crankshaft Sensor Lead
12. Oil Pressure Switch
13. Bracket (Hold the reserve tank overflow hose to the guide of the bracket.)
14. Clamp (Hold the crankshaft sensor/oil pressure switch lead and reserve tank overflow hose.)
15. Bracket (Hold the crankshaft sensor/oil pressure switch lead and reserve tank overflow hose to the guide of the bracket.)
16. Oil Pressure Switch Lead
17. Reserve Tank Overflow Hose (Do not close the hose at the vending portion.)

# 17-32 APPENDIX

## Cable, Wire, and Hose Routing

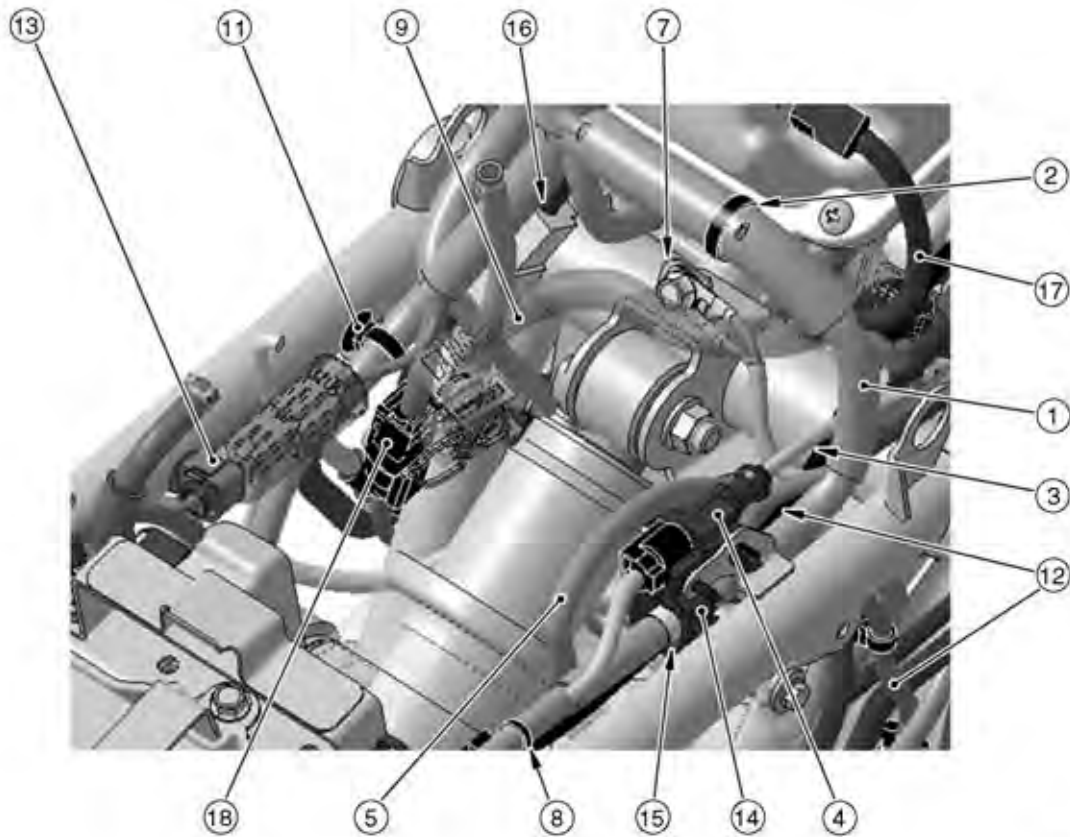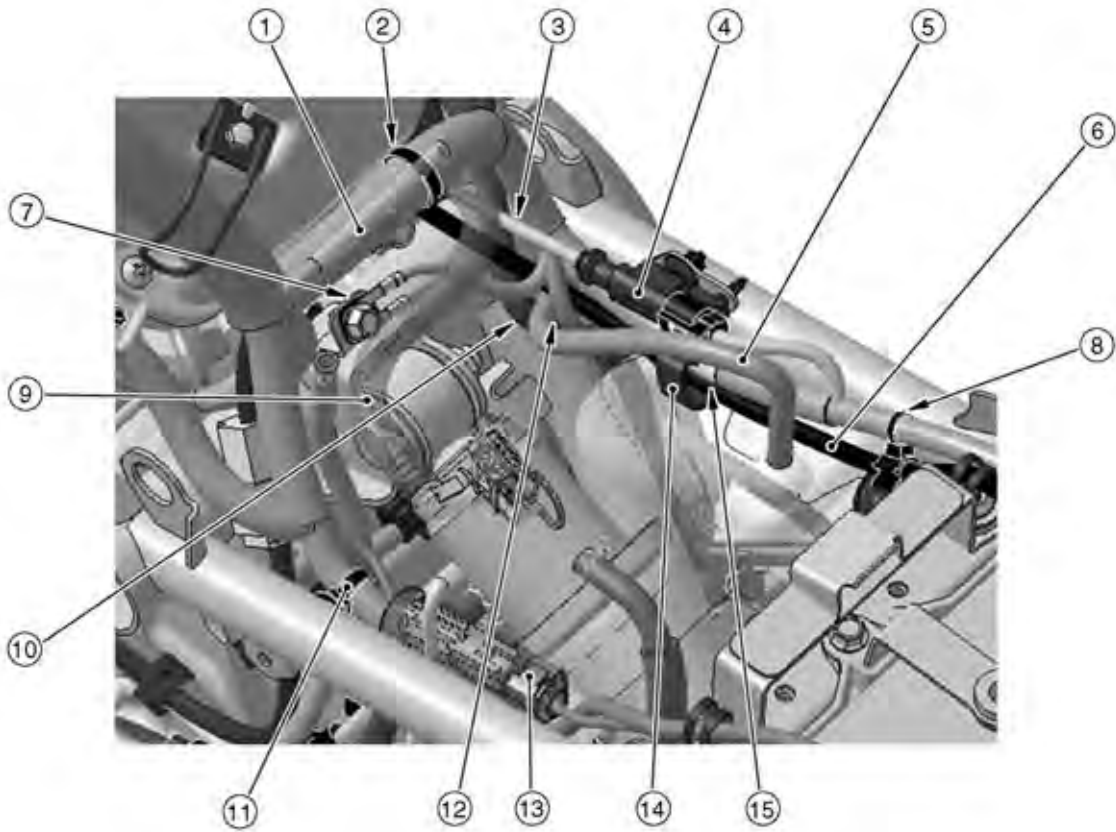

---


**Cable, Wire, and Hose Routing**

---

1. Main Harness
2. Clamp (Hold the main harness, and insert the clamp to the air cleaner housing.)
3. Rear Wheel Rotation Sensor Lead
4. Rear Wheel Rotation Sensor Lead Connector (Insert the rear wheel rotation sensor lead connector to the frame bracket.)
5. Reserve Tank Overflow Hose
6. Battery Negative (–) Cable
7. Frame Ground Terminal
8. Clamp (Hold the main harness and battery negative (–) cable.)
9. Fuel Hose
10. Reserve Tank Hose
11. Clamp (Hold the main harness, and insert the clamp to the frame pipe.)
12. Crankshaft Sensor/Oil Pressure Switch Lead
13. Clamp (Hold the battery positive (+) lead. Insert the clamp to the frame pipe. Position the clamp so that the open side faces upward.) (ABS Equipped Models)
14. Clamp (Hold the main harness at the white tape, and hold the battery negative (–) cable. Insert the clamp to the frame pipe. Position the clamp so that the open side faces upward.)
15. White Tape
16. Alternator Lead
17. Intake Air Temperature Sensor Lead
18. Gear Position Sensor Lead

# 17-34 APPENDIX

## Cable, Wire, and Hose Routing

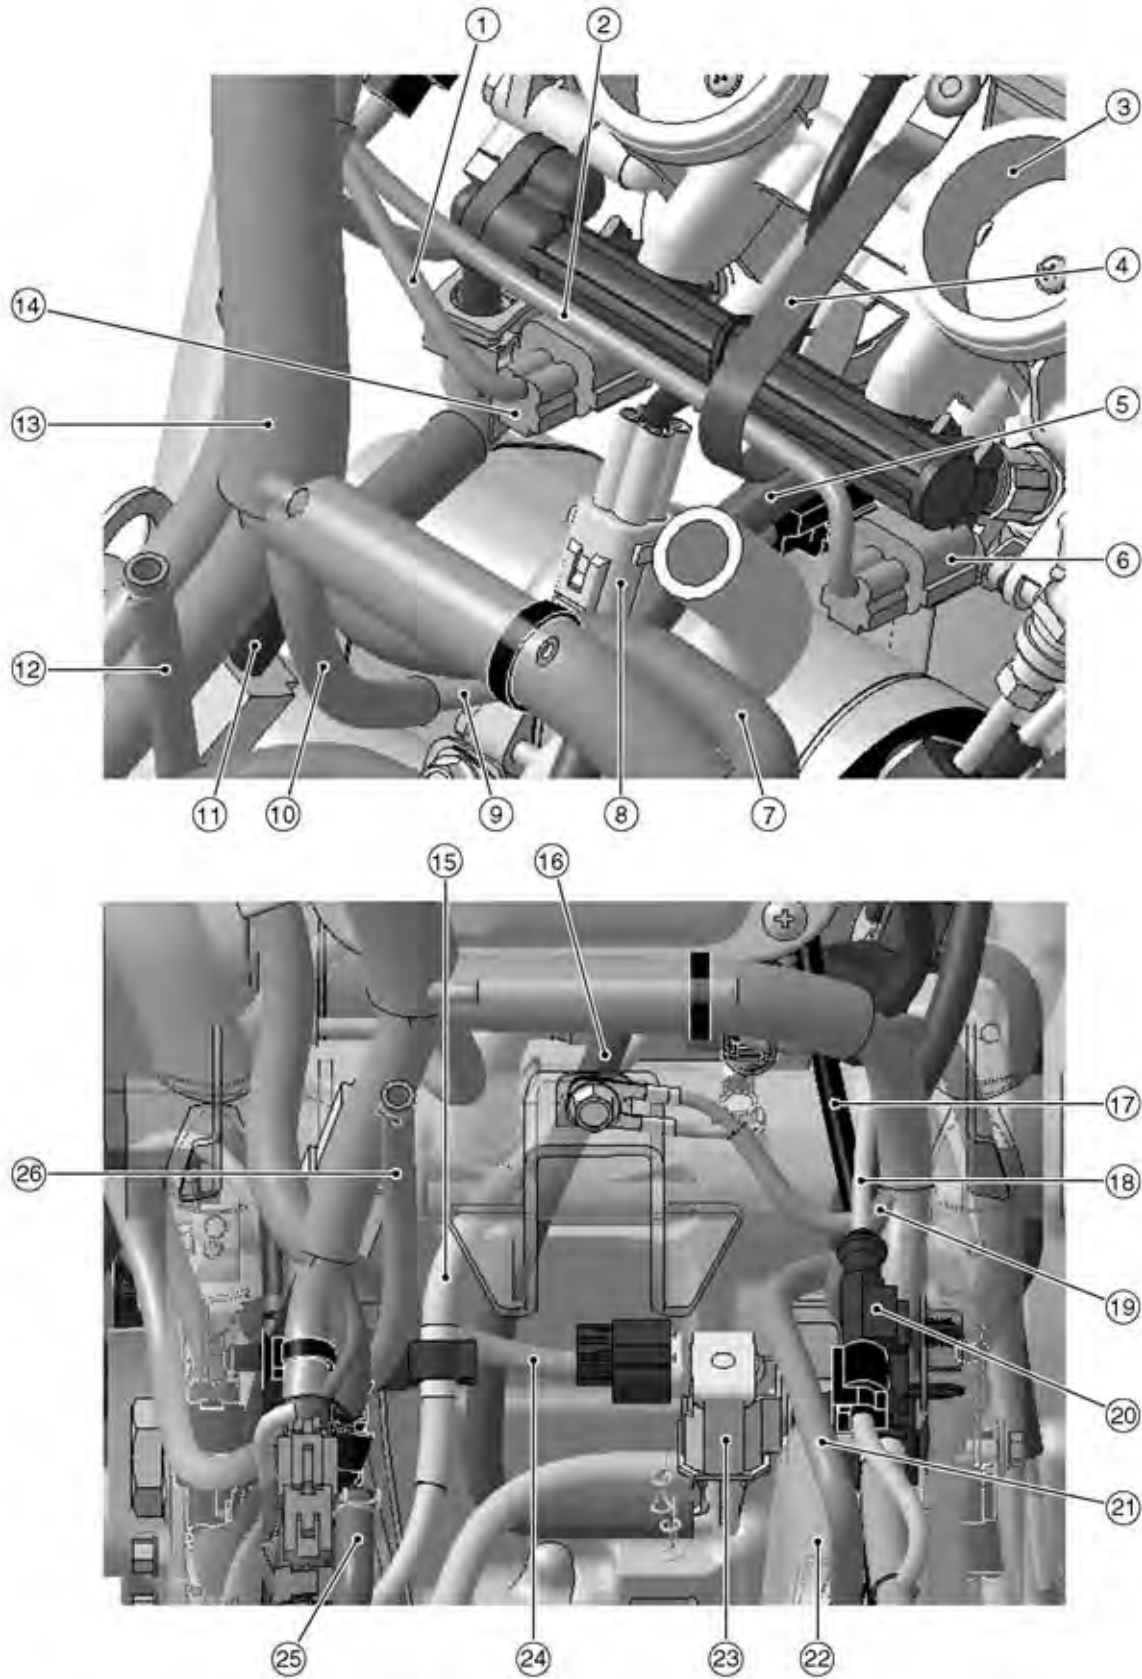

---



**Cable, Wire, and Hose Routing**

---

1. Fuel Injector #1 Lead
2. Fuel Injector #2 Lead
3. Throttle Body Assy
4. Clamp (Hold the fuel injector #2 lead.)
5. Purge Hose (Purge Valve ~ Throttle Body Assy)
6. Fuel Injector #2 Lead Connector
7. Fuel Hose
8. Subthrottle Valve Actuator Lead Connector
9. Run the subthrottle valve actuator lead under the fuel hose.
10. Subthrottle Valve Actuator Lead
11. Alternator Lead
12. Fuel Tank Drain Hose
13. Main Harness
14. Fuel Injector #1 Lead Connector
15. Starter Motor Cable
16. Purge Hose (Canister ~ Purge Valve) (Evaporative Emission Control System Equipped Models)
17. Battery Negative (-) Cable
18. Rear Wheel Rotation Sensor Lead
19. Crankshaft Sensor Lead
20. Rear Wheel Rotation Sensor Lead Connector (Insert the rear wheel rotation sensor lead connector to the frame pipe.)
21. Reserve Tank Overflow Hose
22. Reserve Tank
23. Purge Valve (Evaporative Emission Control System Equipped Models)
24. Purge Valve Lead (Evaporative Emission Control System Equipped Models)
25. Fuel Tank Breather Hose
26. Fuel Tank Drain Hose

# 17-36 APPENDIX

## Cable, Wire, and Hose Routing

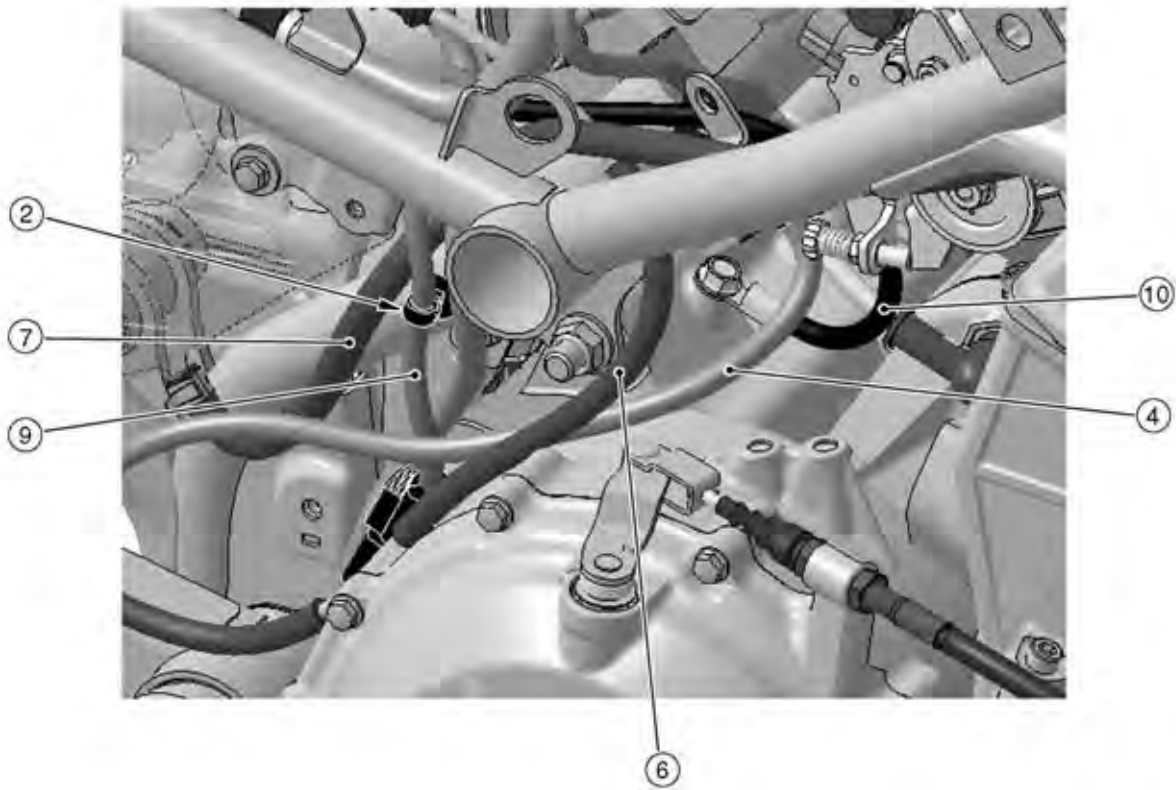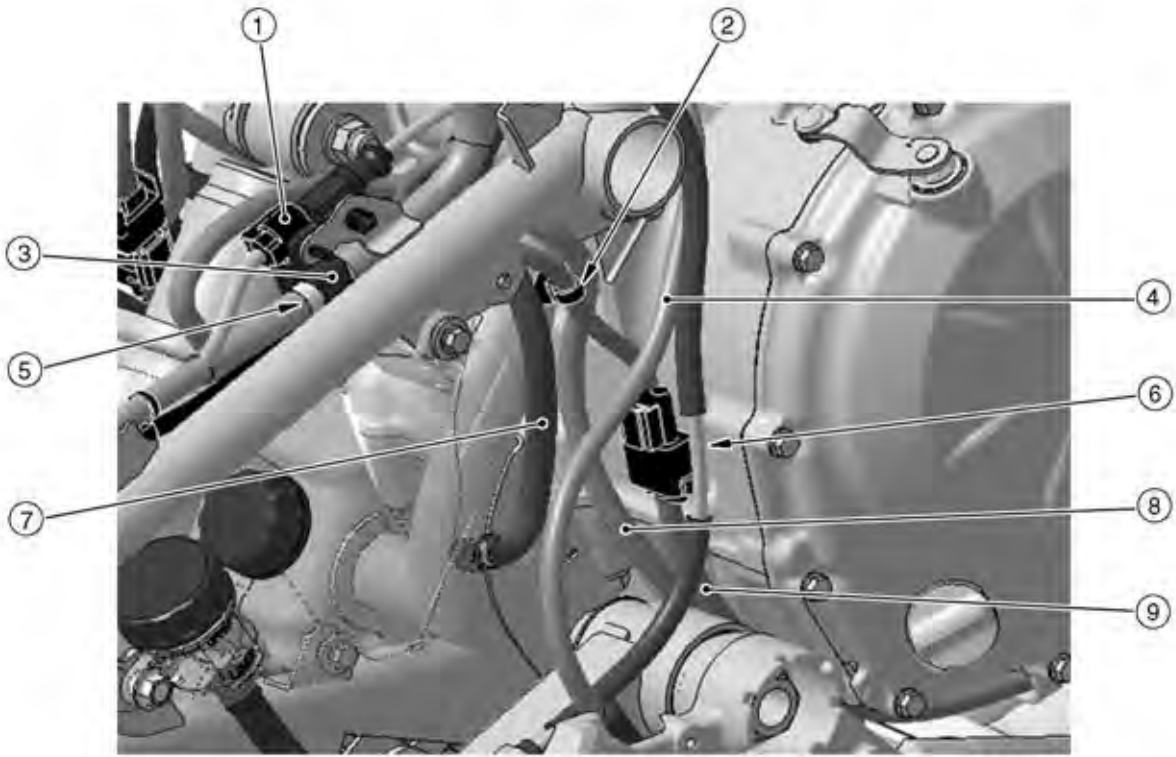



---

**Cable, Wire, and Hose Routing**



---

1. Rear Wheel Rotation Sensor Lead Connector (Insert the rear wheel rotation sensor lead connector to the frame bracket.)
2. Clamp (Hold the crankshaft sensor/oil pressure switch lead, and insert the clamp to the frame pipe.)
3. Clamp (Hold the main harness at the white tape, and hold the battery negative (-) cable. Insert the clamp to the frame pipe. Position the clamp so that the open side faces upward.)
4. Rear Brake Light Switch Lead
5. White Tape
6. Rear Wheel Rotation Sensor Lead
7. Reserve Tank Hose
8. Reserve Tank Overflow Hose
9. Crankshaft Sensor/Oil Pressure Switch Lead
10. Battery Negative (-) Cable

# 17-38 APPENDIX

## Cable, Wire, and Hose Routing

### ABS Equipped Models

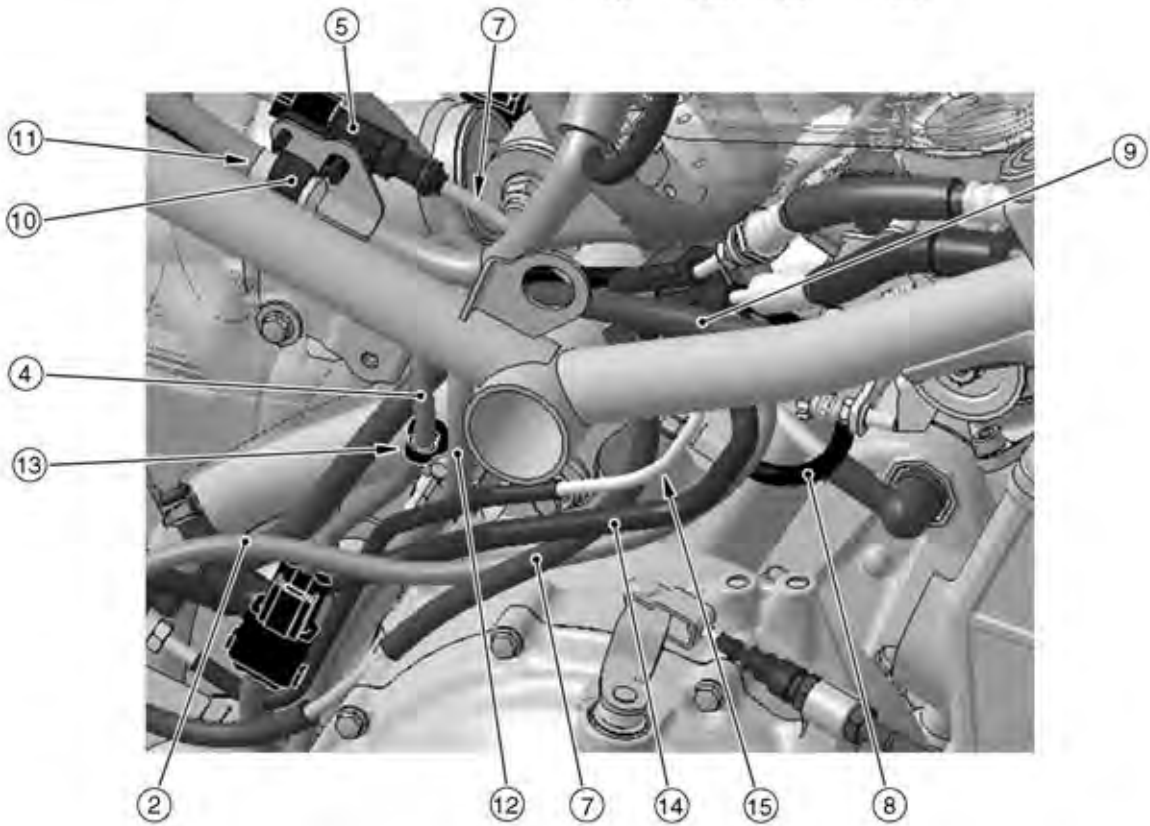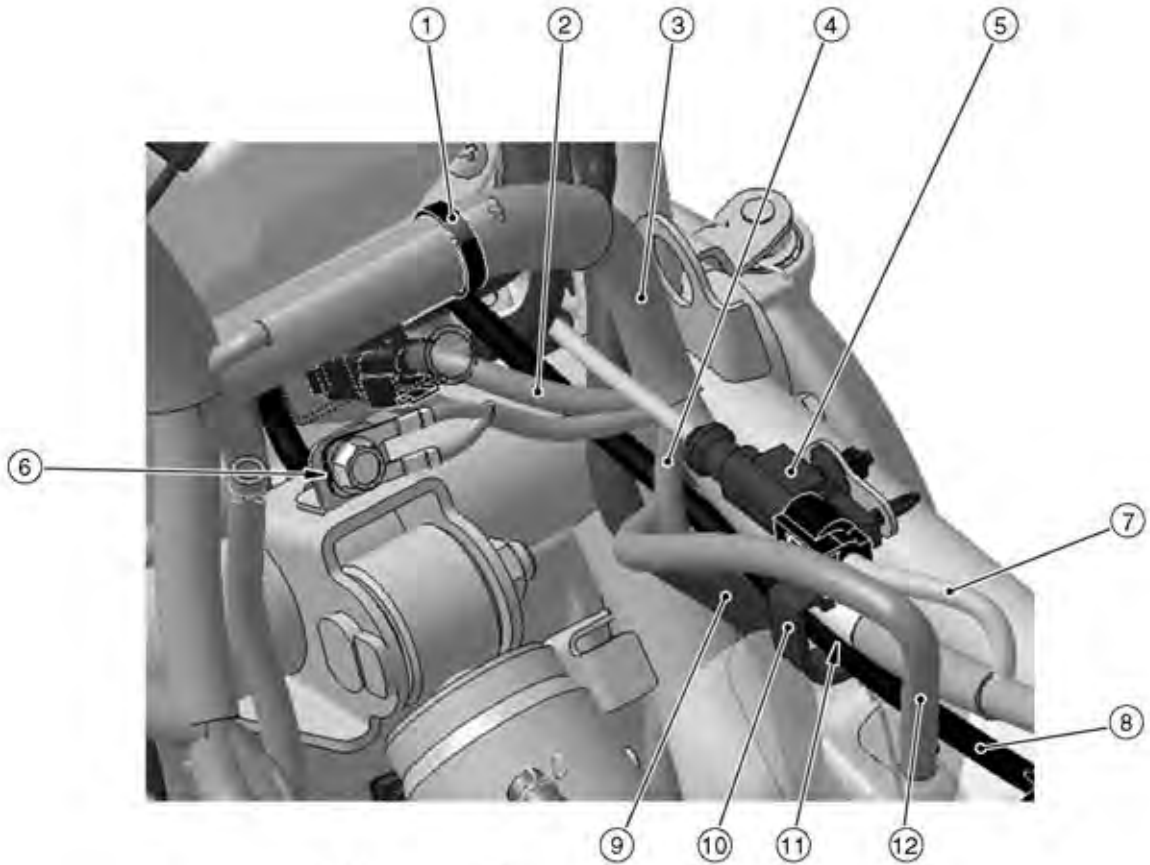

---



**Cable, Wire, and Hose Routing**

---

1. Clamp (Hold the main harness, and insert the clamp to the air cleaner housing.)
2. Rear Brake Light Switch Lead
3. Main Harness
4. Crankshaft Sensor/Oil Pressure Switch Lead
5. Rear Wheel Rotation Sensor Lead Connector (Insert the rear wheel rotation sensor lead connector to the frame bracket.)
6. Frame Ground Terminal
7. Rear Wheel Rotation Sensor Lead
8. Battery Negative (-) Cable
9. Reserve Tank Hose
10. Clamp (Hold the main harness at the white tape, and hold the battery negative (-) cable. Insert the clamp to the frame pipe. Position the clamp so that the open side faces upward.)
11. White Tape
12. Reserve Tank Overflow Hose
13. Clamp (Hold the crankshaft sensor/oil pressure switch lead, and insert the clamp to the frame pipe.)
14. Rear Brake Pipe (ABS Hydraulic Unit ~ Rear Master Cylinder)
15. Rear Brake Pipe (ABS Hydraulic Unit ~ Rear Caliper)

# 17-40 APPENDIX

## Cable, Wire, and Hose Routing

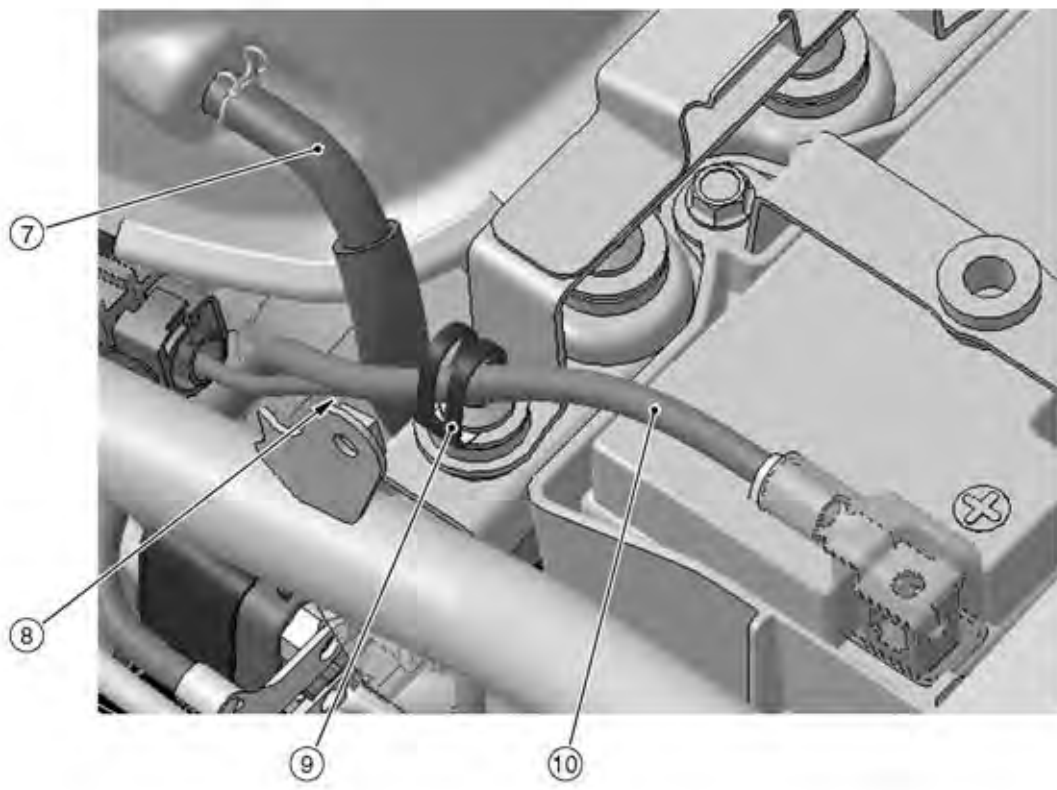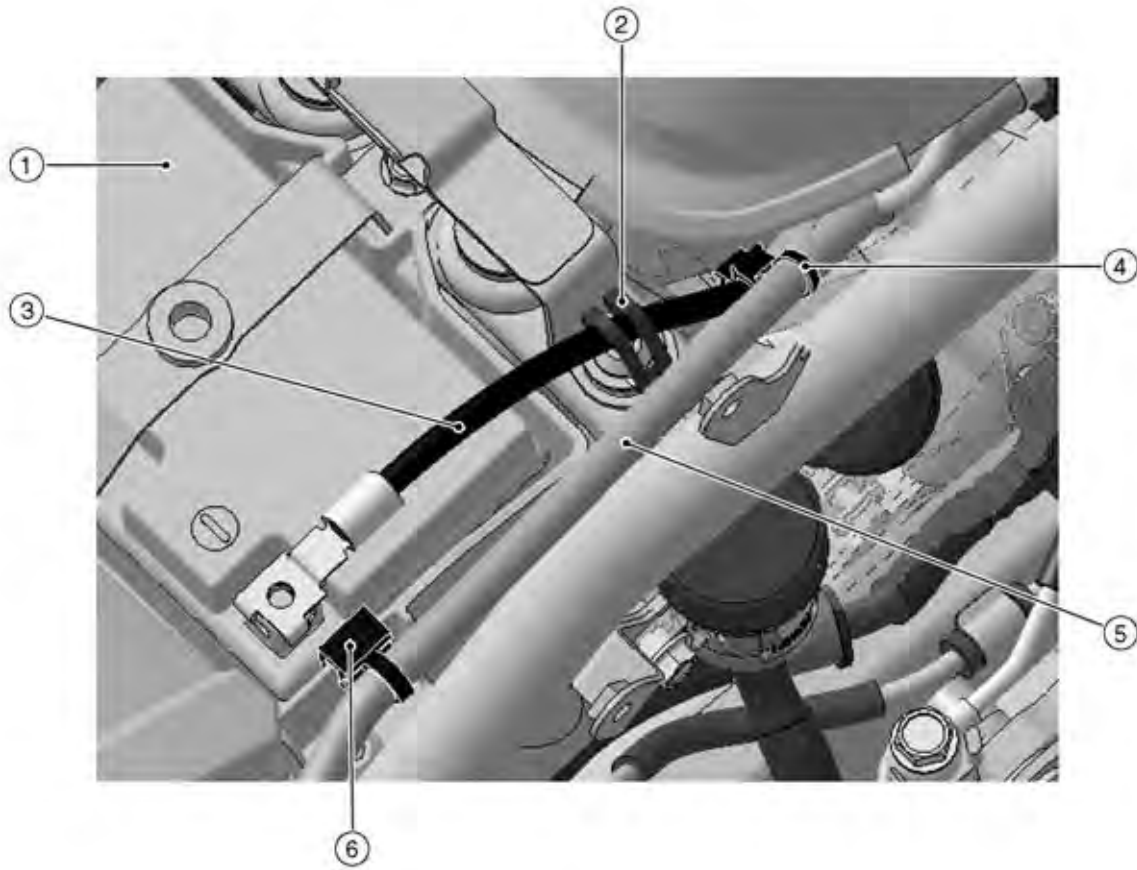

---



**Cable, Wire, and Hose Routing**

---


1. Battery
2. Clamp (Hold the battery negative (-) cable.)
3. Battery Negative (-) Cable
4. Clamp (Hold the battery negative (-) cable and main harness.)
5. Main Harness
6. Clamp (Hold the main harness.)
7. Fuel Tank Breather Hose
8. Run the batter (+) cable to the outside of the fuel tank breather hose.
9. Clamp (Hold the battery (-) cable.)
10. Battery (-) Cable

# 17-42 APPENDIX

## Cable, Wire, and Hose Routing

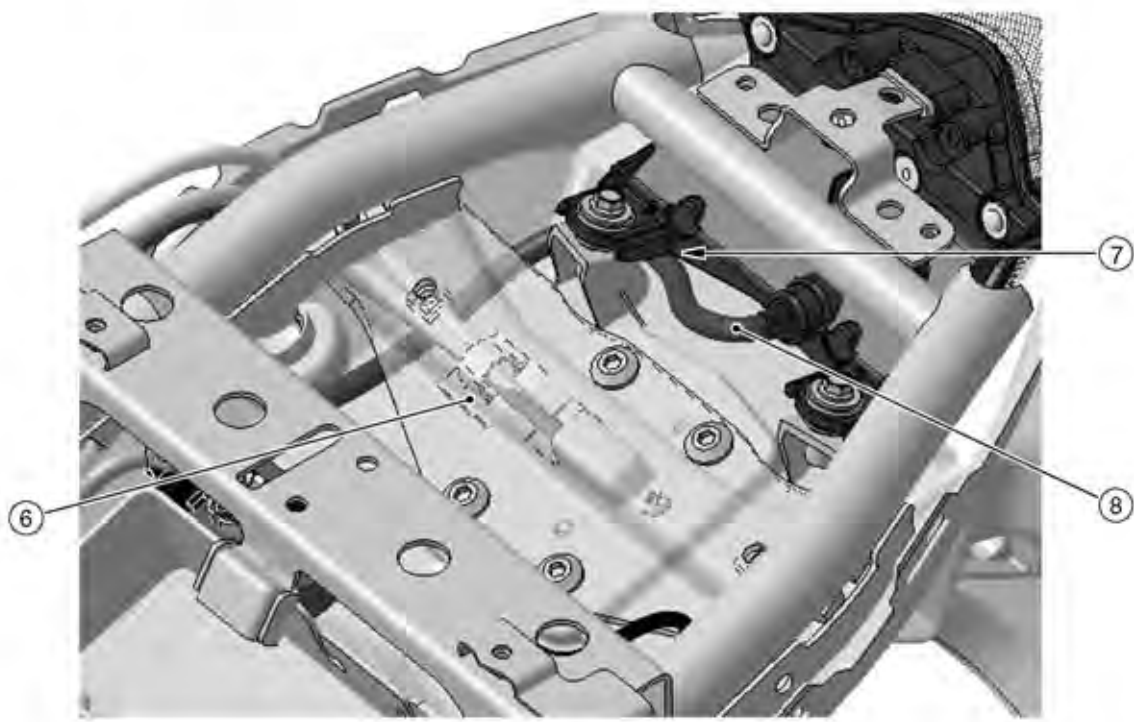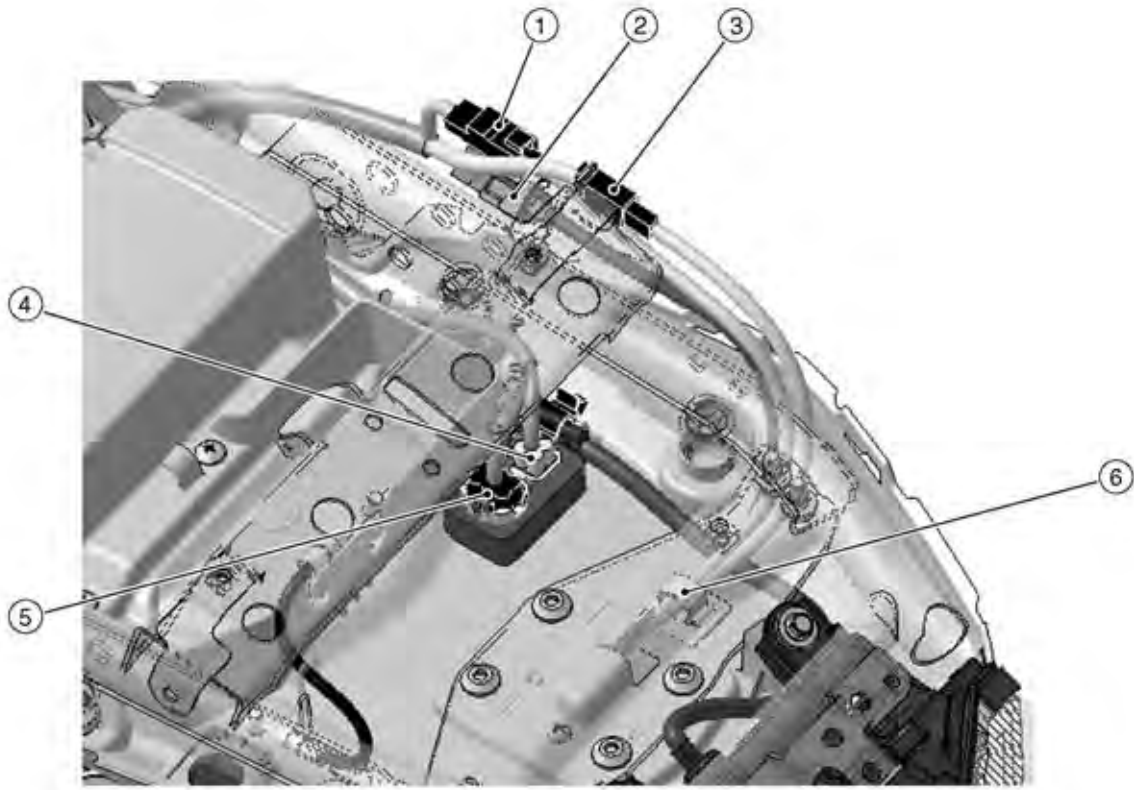


## Cable, Wire, and Hose Routing

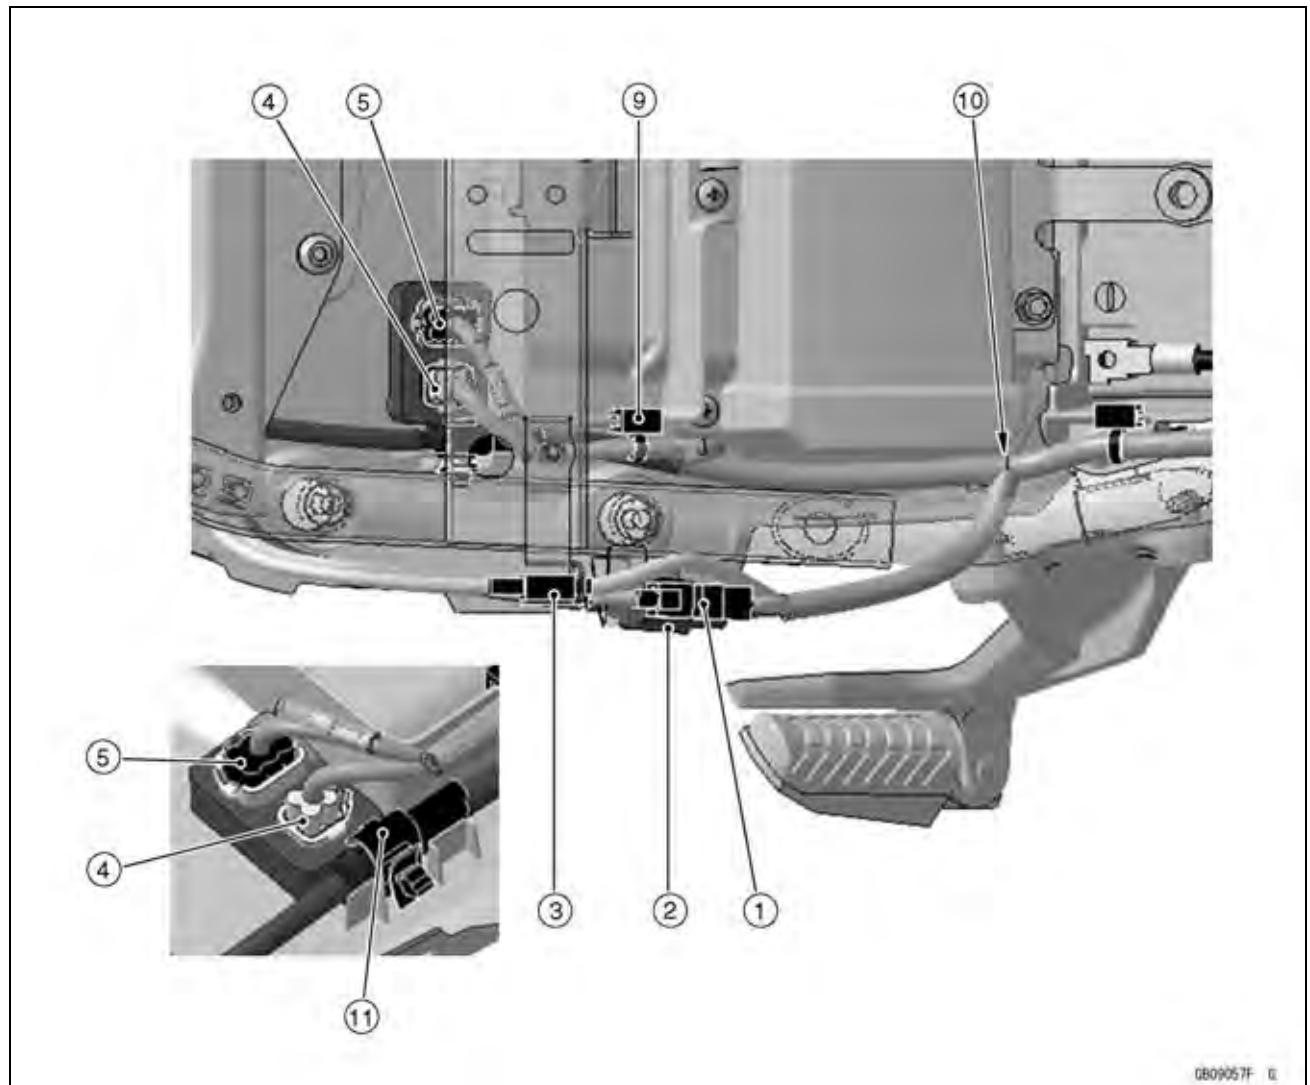

1. Left Turn Signal Light Lead Connector (Insert the connector to the bracket of the frame.)
2. Right Turn Signal Light Lead Connector (Insert the connector to the bracket of the frame.)
3. License Plate Light Lead Connector (Insert the connector to the bracket of the frame.)
4. Kawasaki Diagnostic System Connector
5. ABS Kawasaki Diagnostic System Connector (ABS Equipped Model)
6. Clamp (Run the turn signal light leads and license plate light through the clamp. The open side of the clamp faces backward.)
7. Run the tail/brake light lead to the back side of the bracket.
8. Tail/Brake Light Lead
9. Clamp (Hold the main harness.)
10. Do not twist the main harness around here.
11. Tail/Brake Light Lead Connector

# 17-44 APPENDIX

## Cable, Wire, and Hose Routing

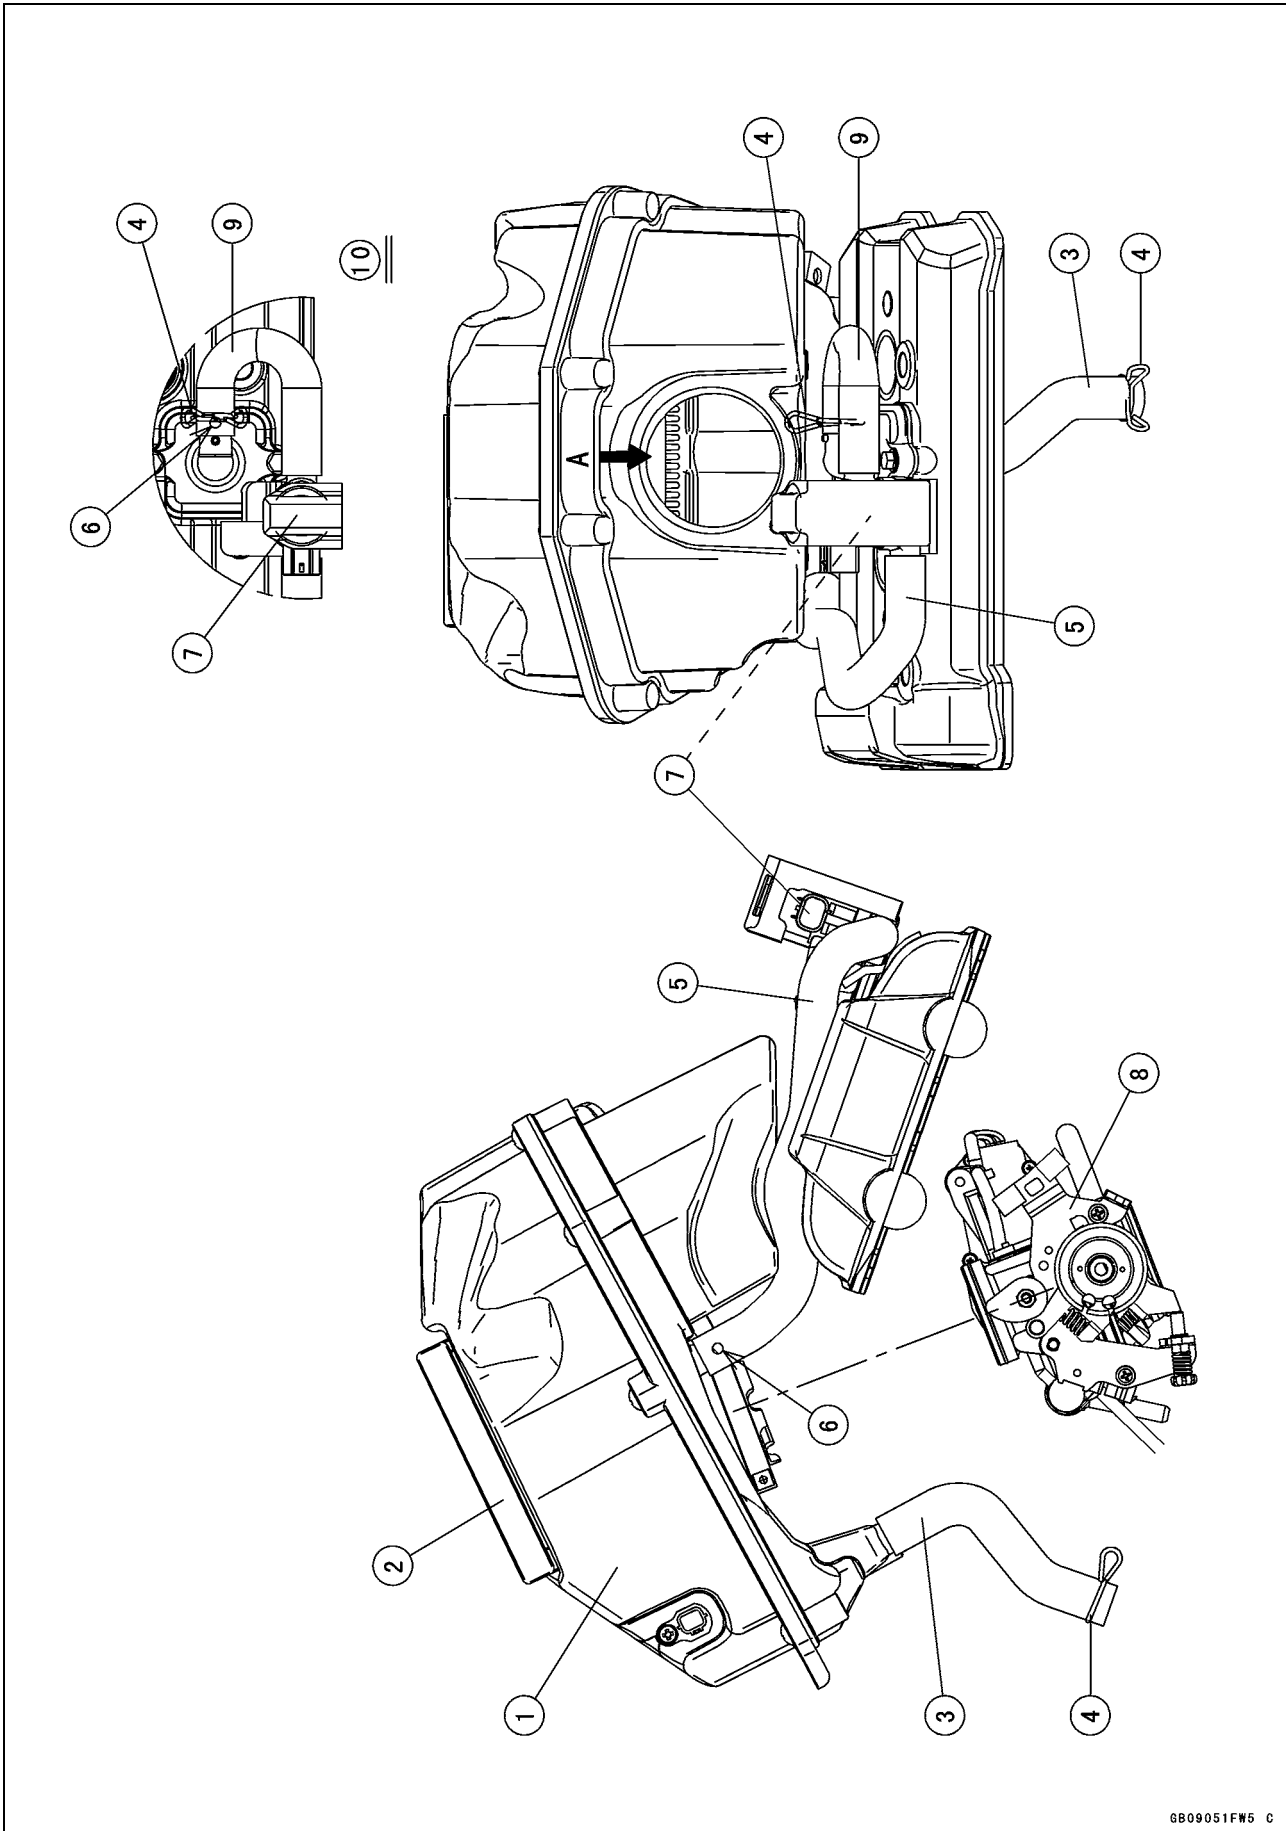



---


**Cable, Wire, and Hose Routing**

---

1. Air Cleaner Housing
2. ECU
3. Breather Hose
4. Clamps
5. Air Switching Valve Hose (Install the air switching valve hose so that the white paint mark faces right side of vehicle.)
6. White Paint Marks
7. Air Switching Valve
8. Throttle Body Assy
9. Air Switching Valve Hose (Install the air switching valve hose so that the white paint mark faces upward of vehicle.)
10. Viewed from A

# 17-46 APPENDIX

## Cable, Wire, and Hose Routing

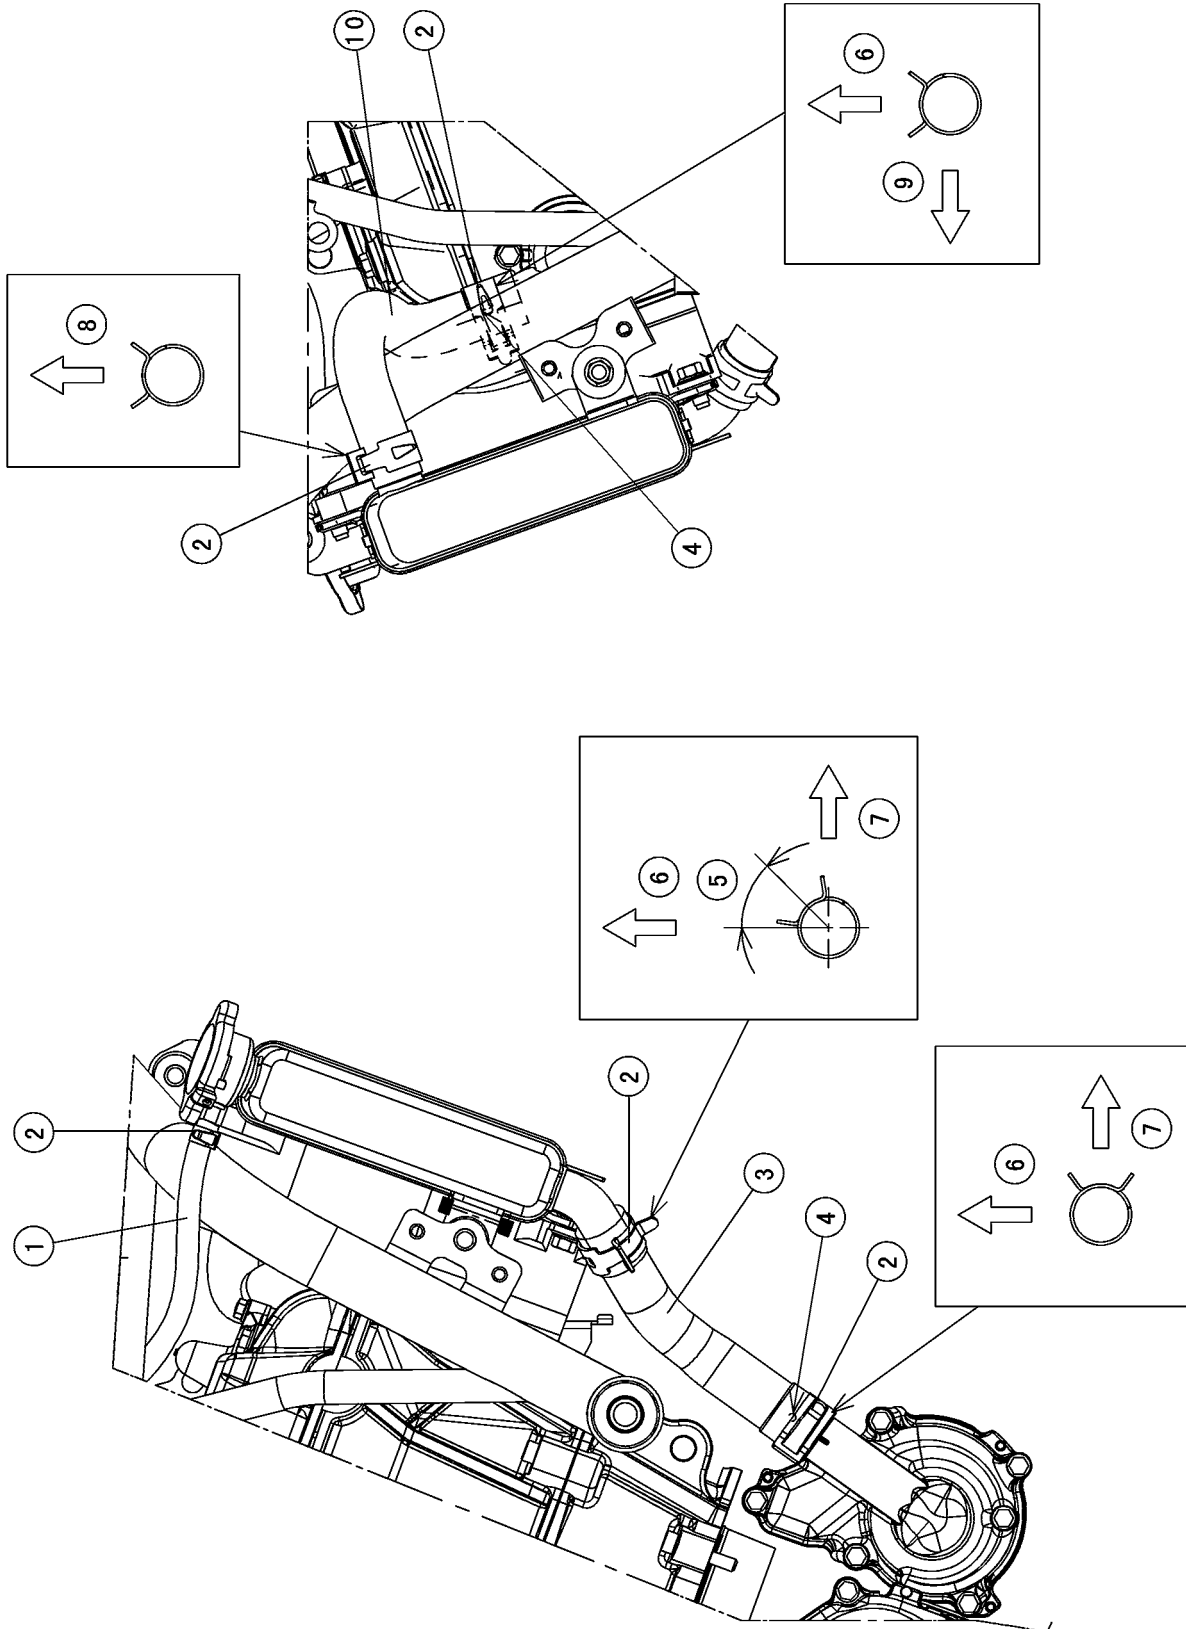

---


**Cable, Wire, and Hose Routing**

---

1. Reserve Tank Hose
2. Install the clamps as shown.
3. Water Hose (Install the water hose so that the white paint mark faces right side of vehicle.)
4. White Paint Marks
5. 45°
6. Front Side of Vehicle
7. Right Side of Vehicle
8. Upper Side of Vehicle
9. Left Side of Vehicle
10. Water Hose (Install the water hose so that the white paint mark faces left side of vehicle.)

# 17-48 APPENDIX

## Cable, Wire, and Hose Routing

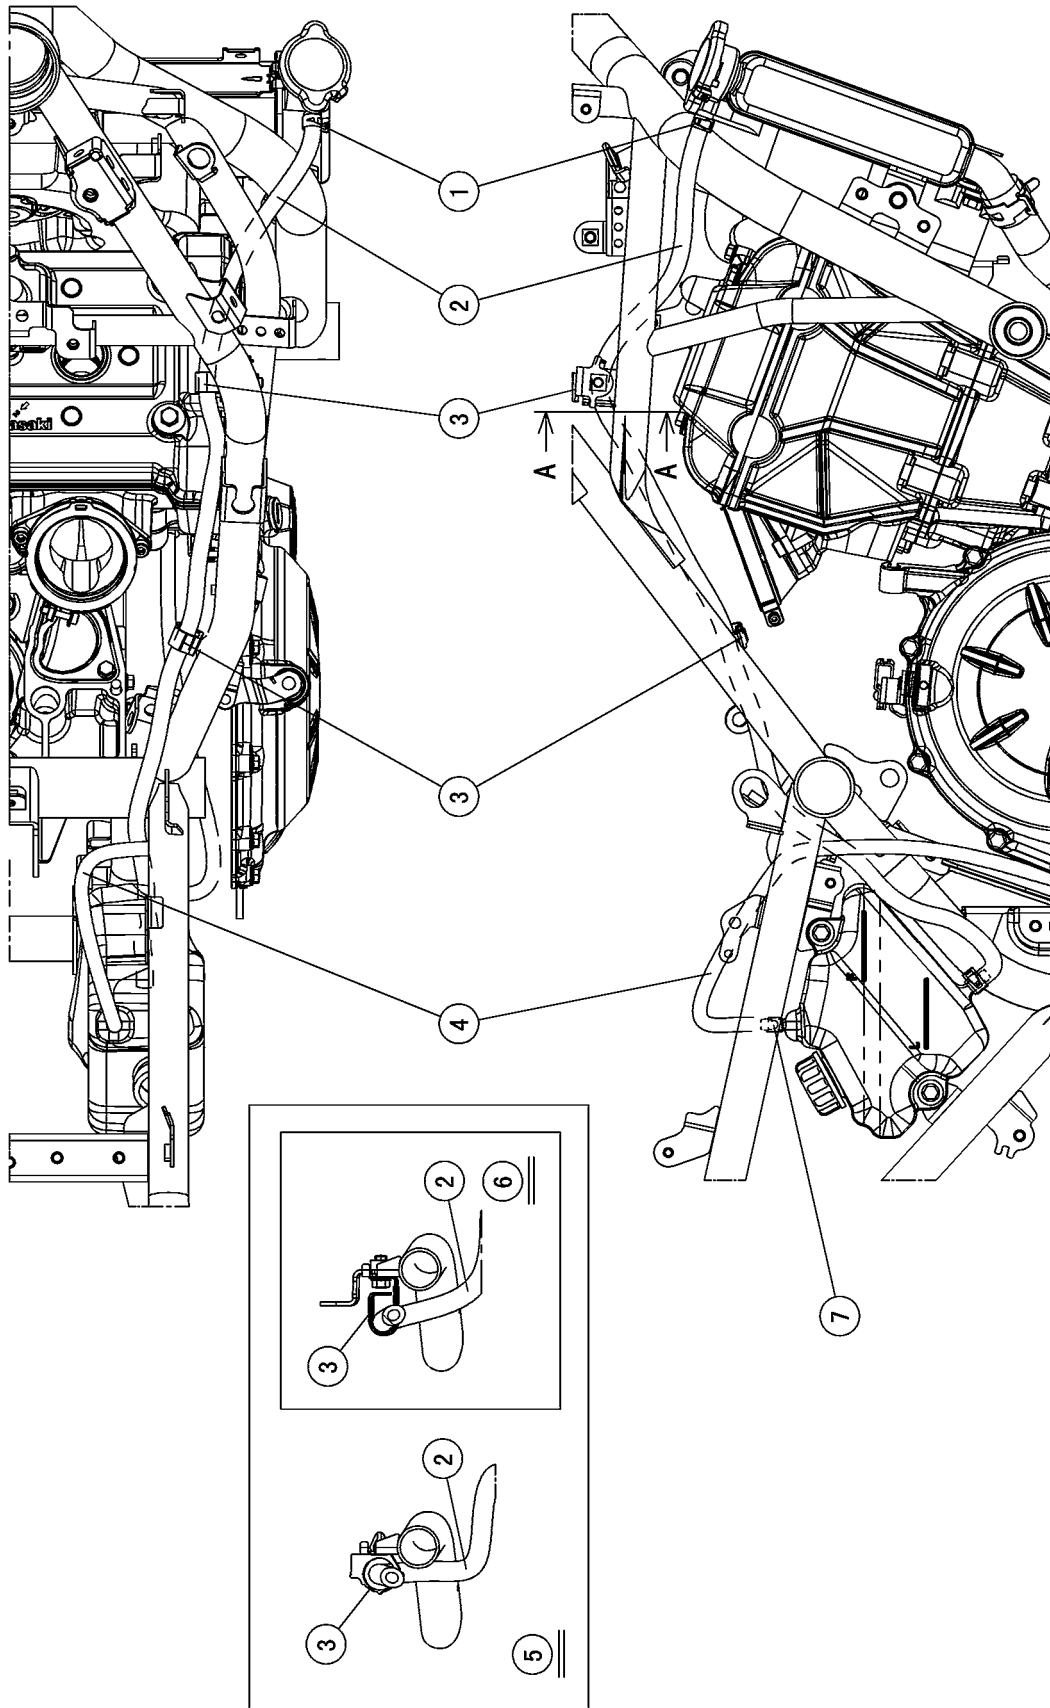

---


**Cable, Wire, and Hose Routing**

---

1. Clamps
2. Reserve Tank Hose
3. Clamps (Hold the reserve tank hose.)
4. Reserve Tank Overflow Hose
5. Section A - A
6. ABS Equipped Models
7. White Paint Mark (The white paint mark faces outside.)


# 17-50 APPENDIX

## Cable, Wire, and Hose Routing

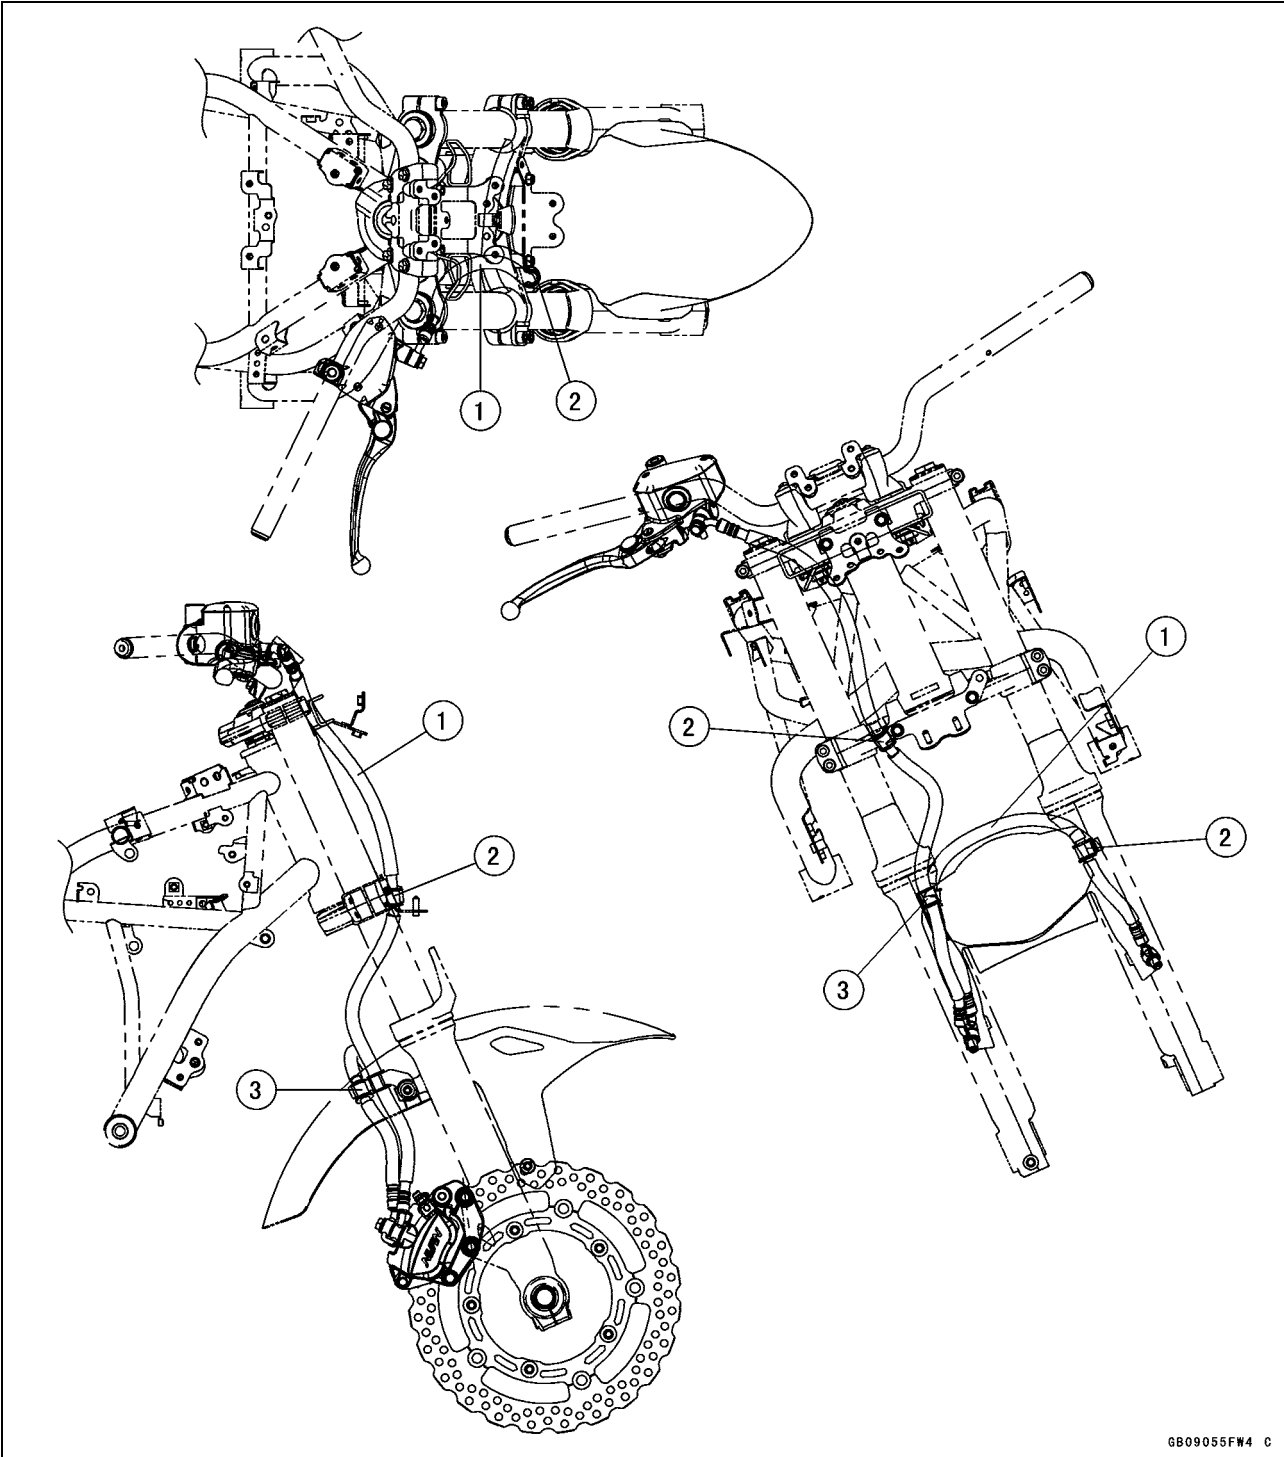

- 1. Front Brake Hoses
- 2. Clamps (Hold the front brake hose.)
- 3. Clamp (Hold the front brake hoses.)


## Cable, Wire, and Hose Routing

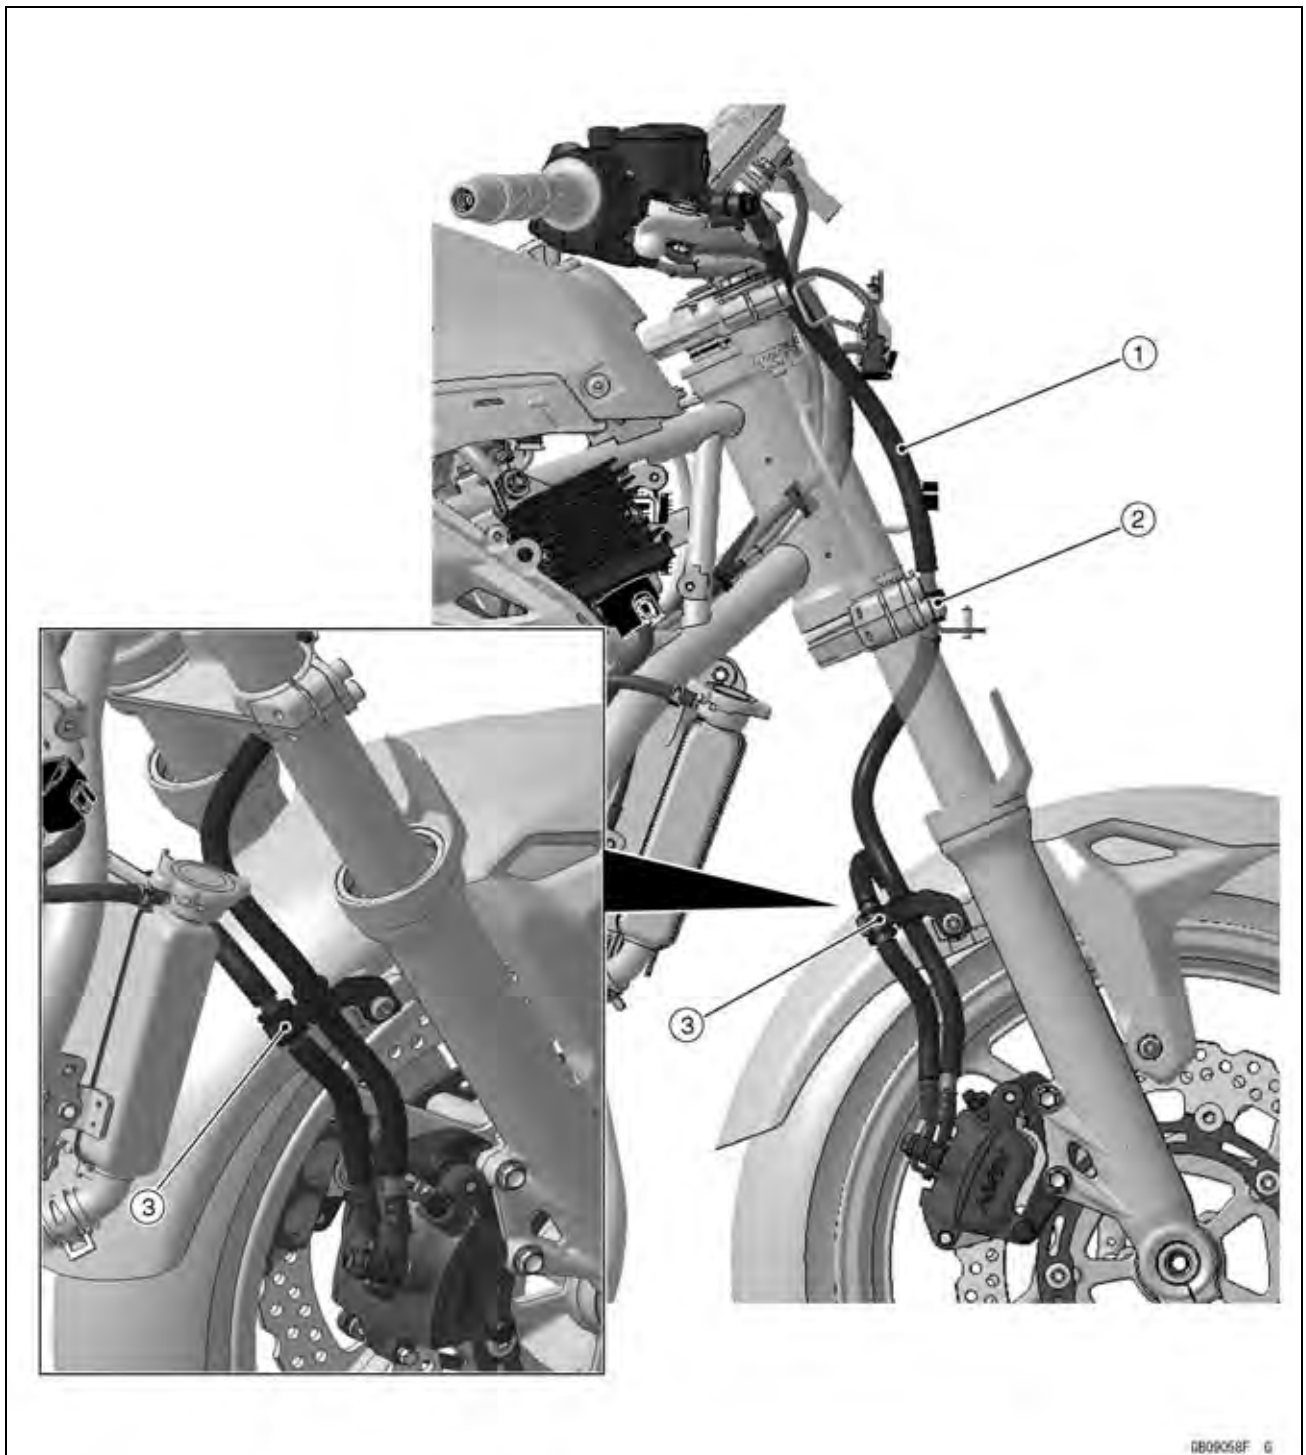

1. Front Brake Hoses
2. Clamp (Hold the front brake hose.)
3. Clamp (Hold the front brake hoses.)


# 17-52 APPENDIX

## Cable, Wire, and Hose Routing

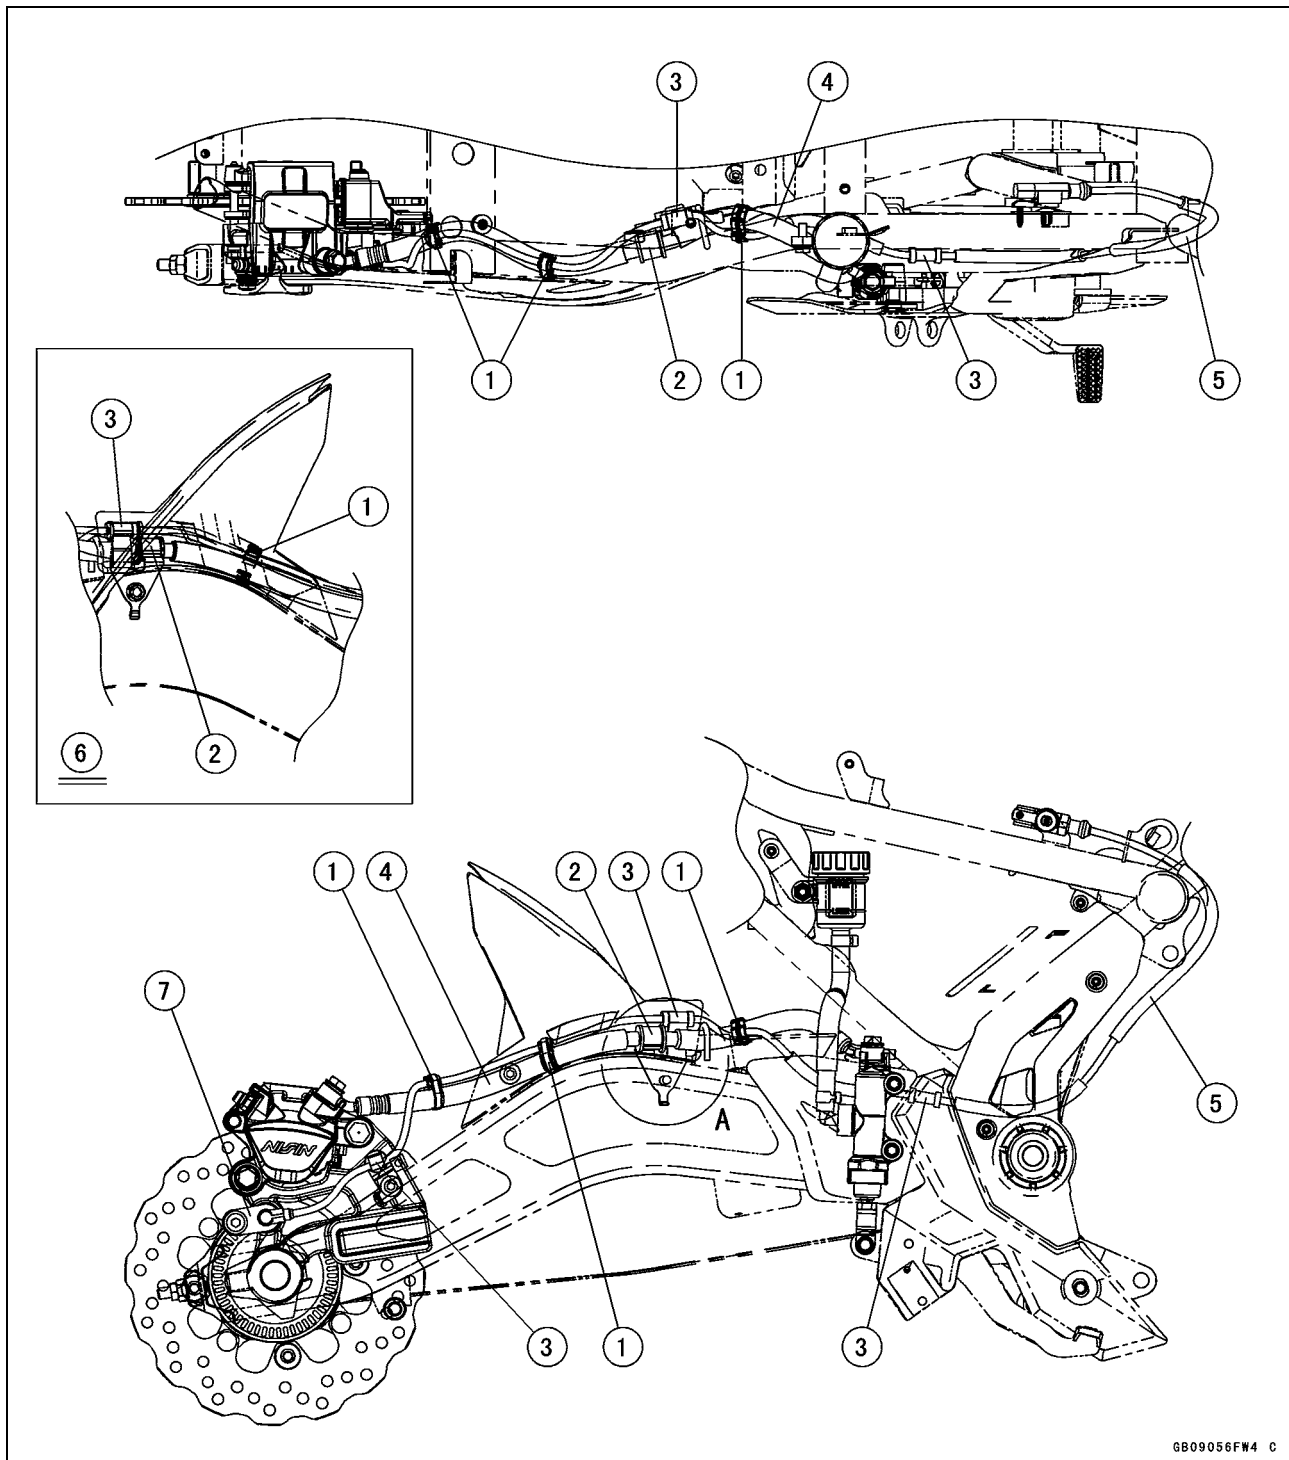

- 1. Clamps (Hold the rear brake hose and rear wheel rotation sensor lead at the white marks.)
- 2. Clamp (Hold the rear brake hose.)
- 3. Clamps (Hold the rear wheel rotation sensor lead.)
- 4. Rear Brake Hose
- 5. Rear Wheel Rotation Sensor Lead
- 6. Detail A (Viewed from the inside)
- 7. Rear Wheel Rotation Sensor

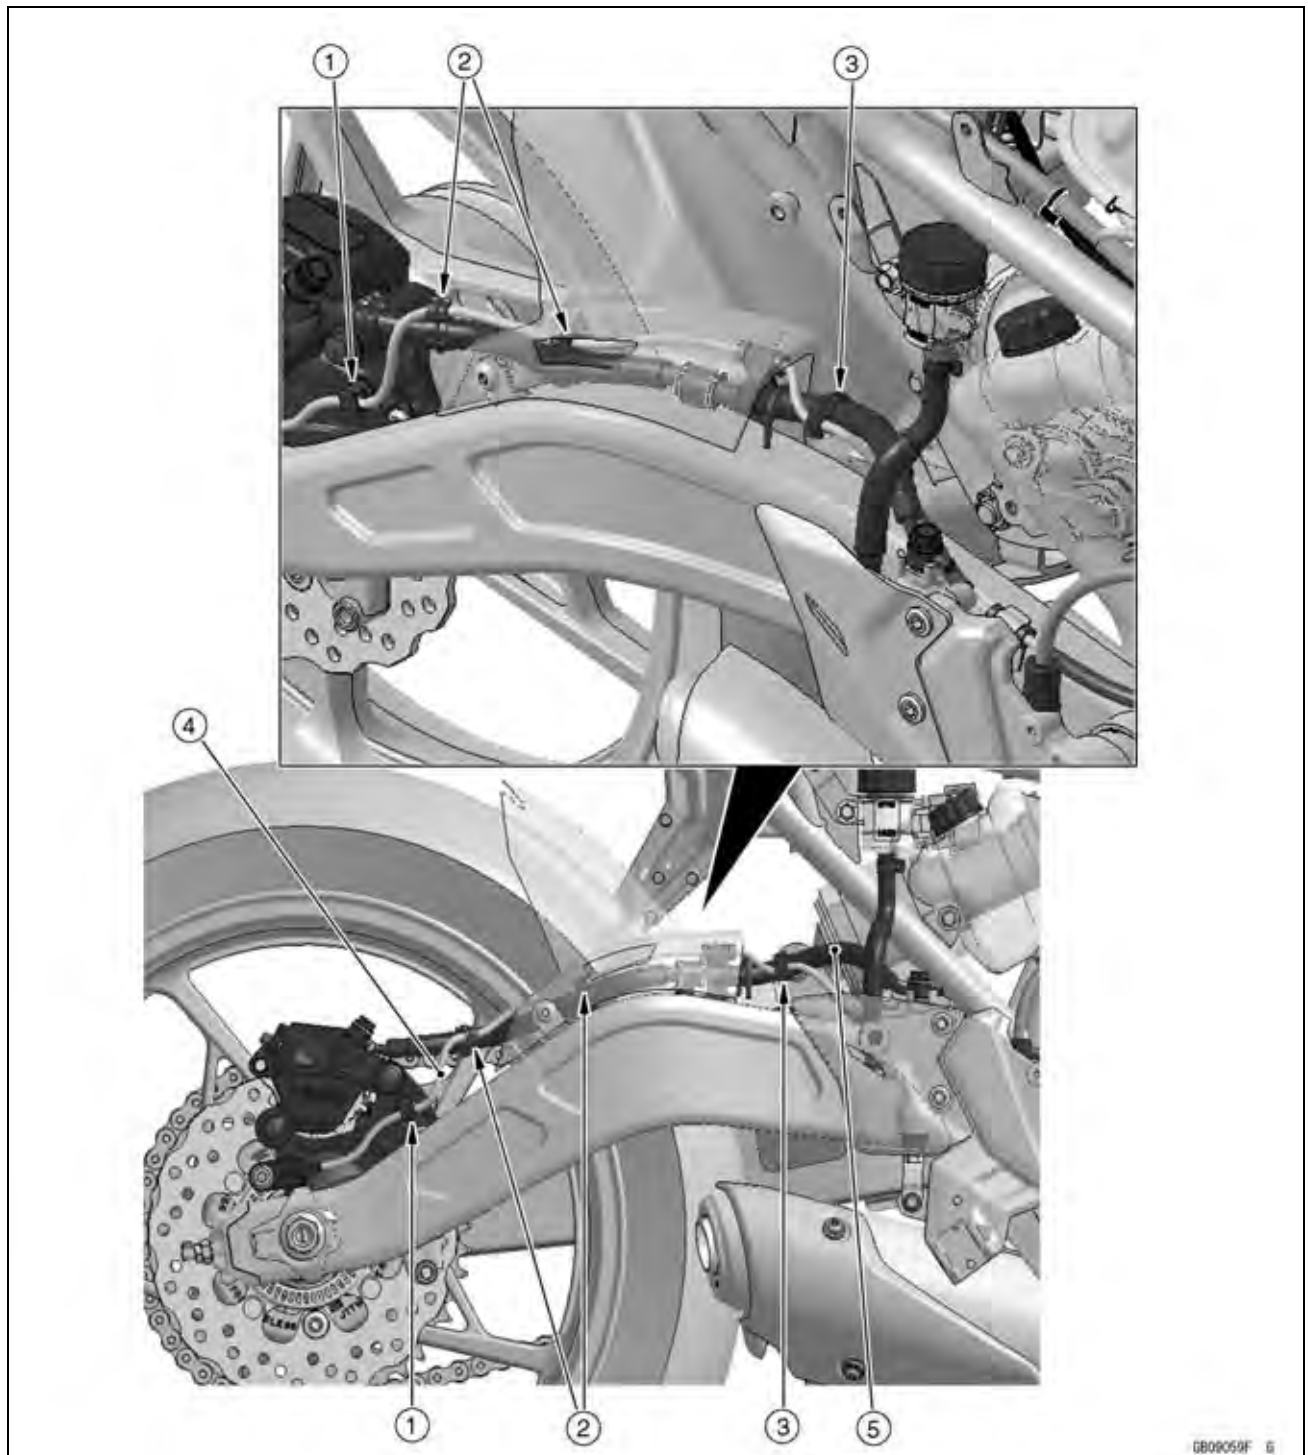


**Cable, Wire, and Hose Routing**

1. Clamp (Insert the clamp so that its open side faces upward.)
2. Clamps (Insert the clamp from the outside.)
3. Clamp (Insert the clamp from the upside.)
4. Rear Wheel Rotation Sensor Lead
5. Rear Brake Hose

# 17-54 APPENDIX

## Cable, Wire, and Hose Routing


### ABS Equipped Models

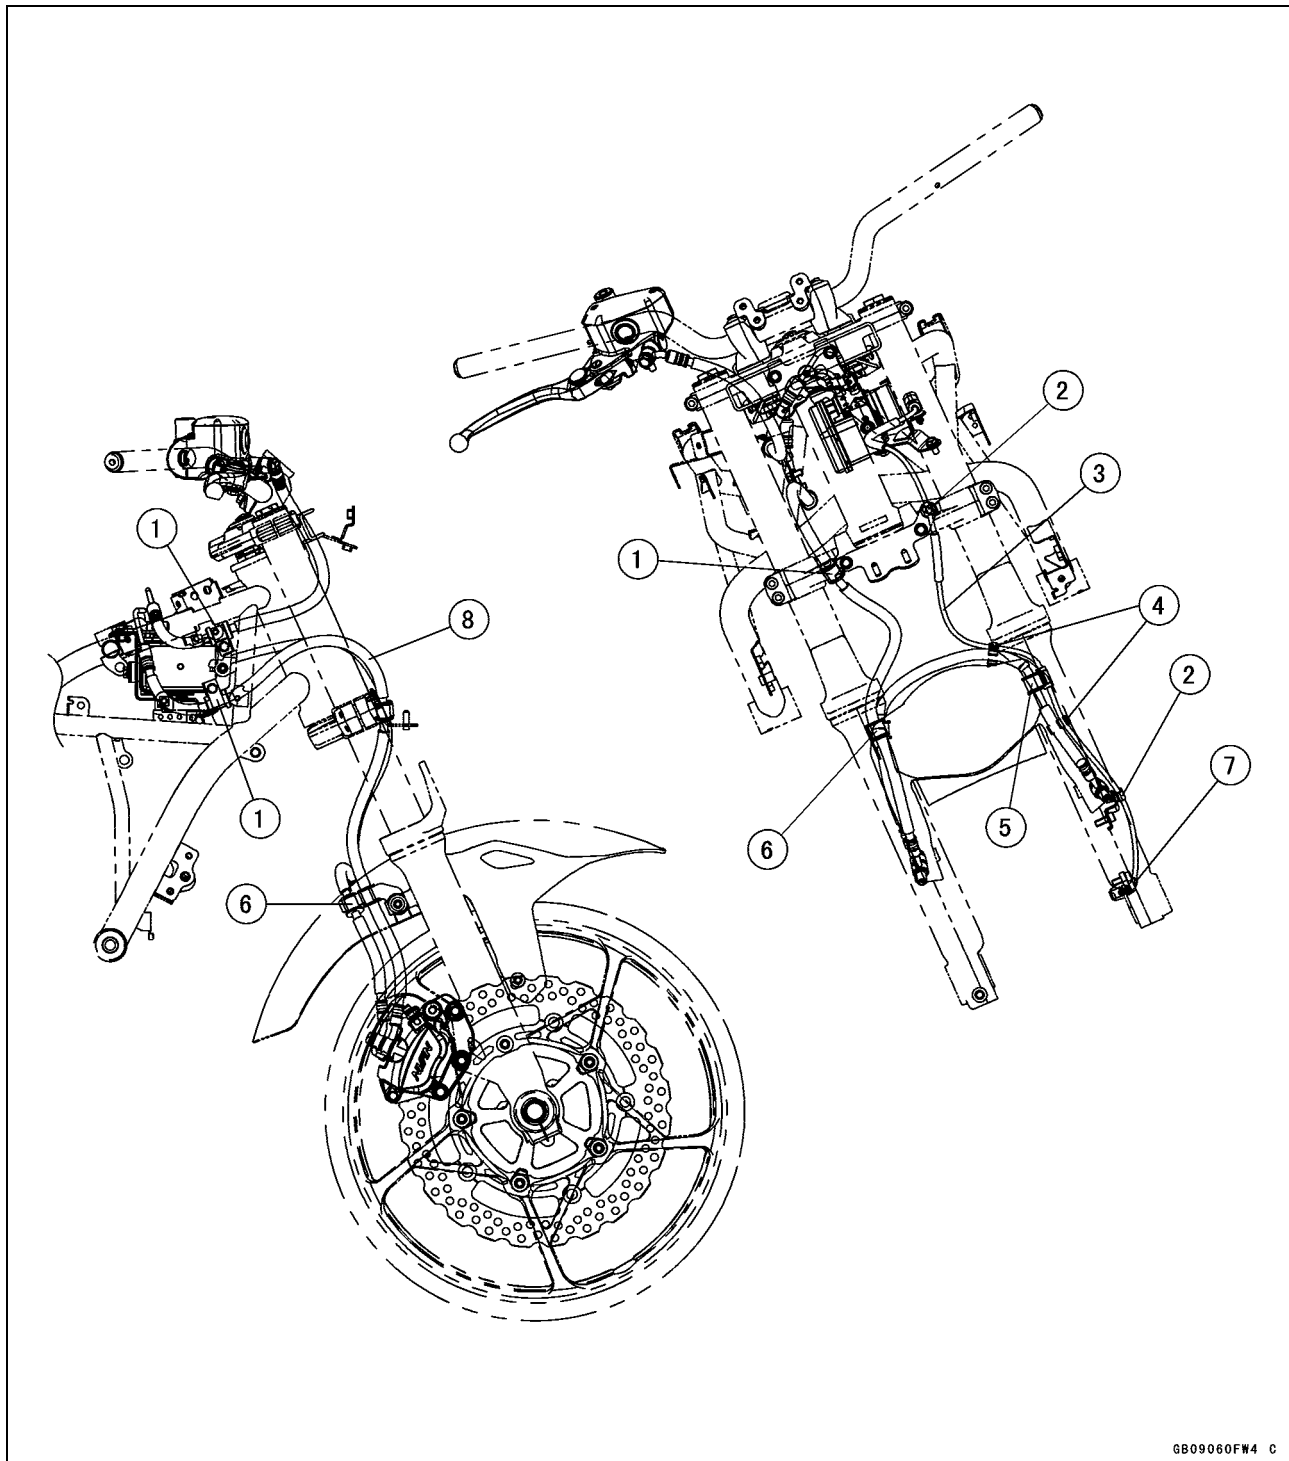

1. Clamps (Hold the front brake hose.)
2. Clamps (Hold the front wheel rotation sensor lead.)
3. Front Wheel Rotation Sensor Lead
4. Clamps (Hold the front brake hose and front wheel rotation sensor lead at the white mark of the front wheel rotation sensor lead.)
5. Clamp (Hold the front brake hose and front wheel rotation sensor lead.)
6. Clamp (Hold the front brake hoses.)
7. Front Wheel Rotation Sensor
8. Front Brake Hose

## Cable, Wire, and Hose Routing

## ABS Equipped Models

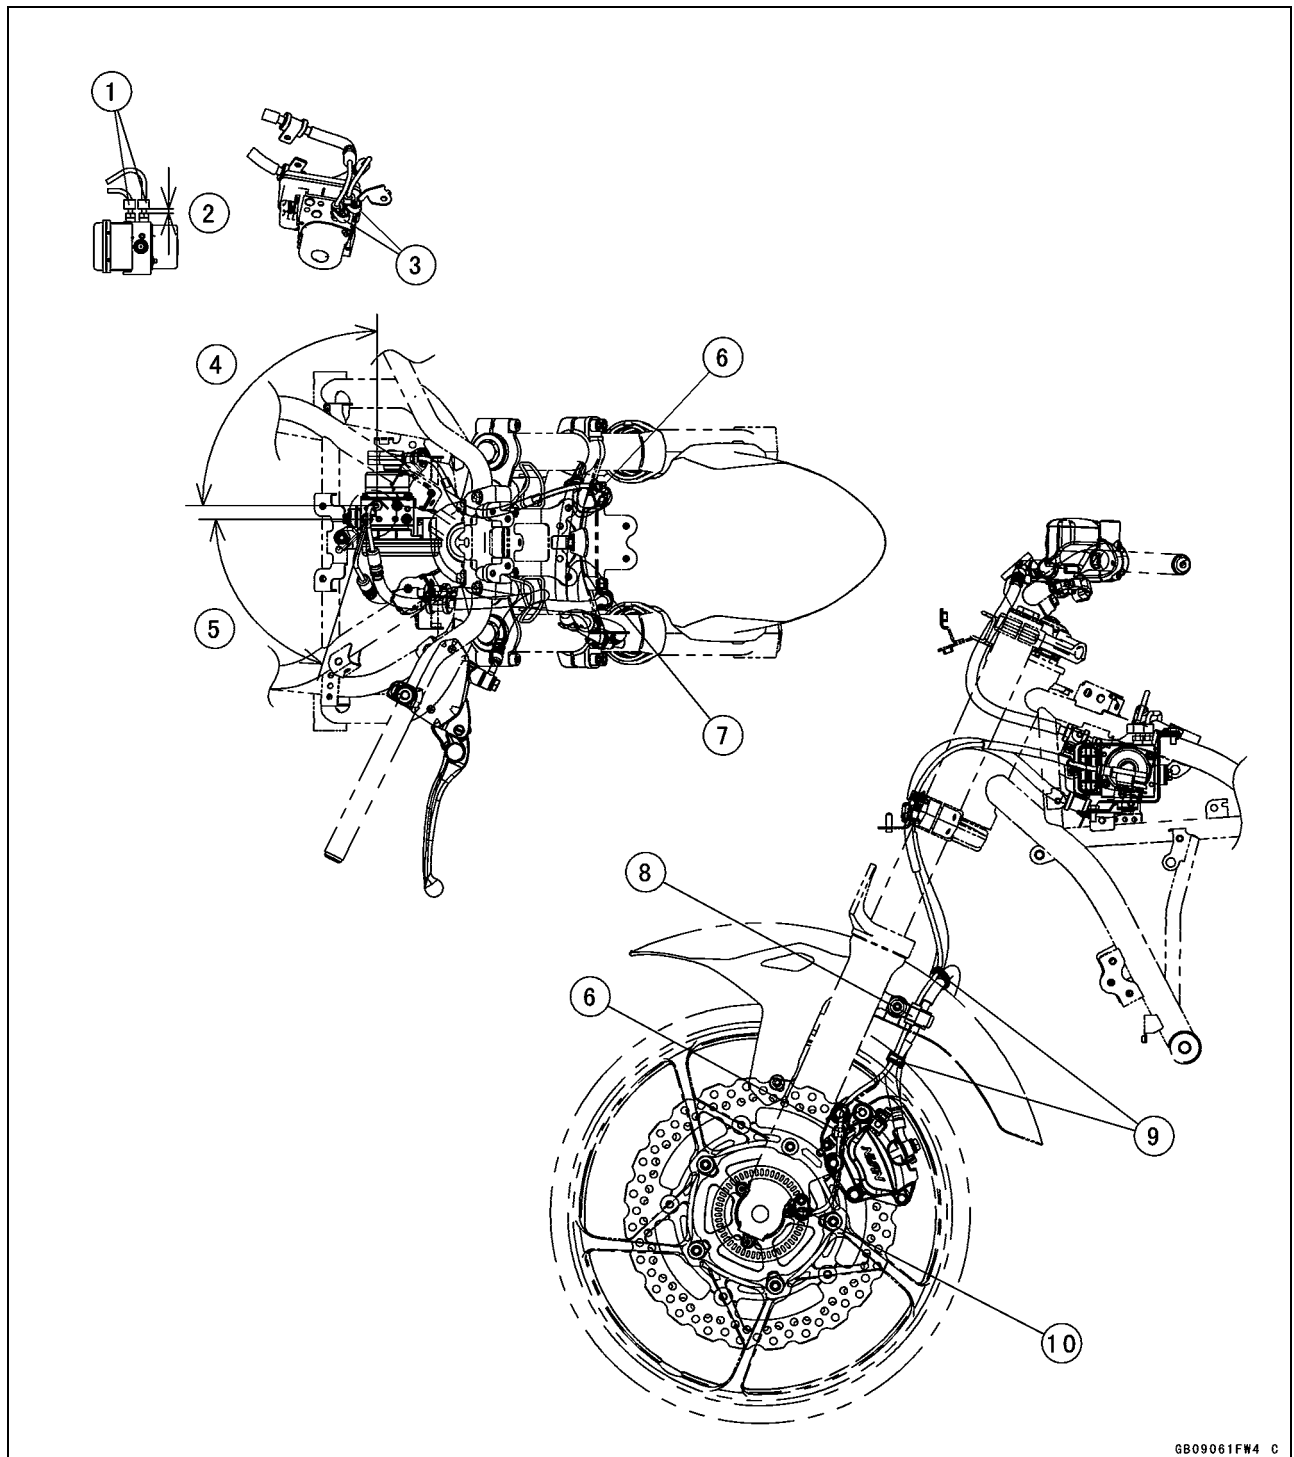


GB09061FW4 C

1. Pads
2. 5 mm (0.20 in.)
3. Contact the side of the pad with the bracket.
4. 90°
5. 72.6°
6. Clamps (Hold the front wheel rotation sensor lead.)
7. Clamp (Hold the front brake hose.)
8. Clamp (Hold the front brake hose and front wheel rotation sensor lead.)
9. Clamps (Hold the front brake hose and front wheel rotation sensor lead at the white mark of the front wheel rotation sensor lead.)
10. Front Wheel Rotation Sensor

# 17-56 APPENDIX

## Cable, Wire, and Hose Routing


### ABS Equipped Models

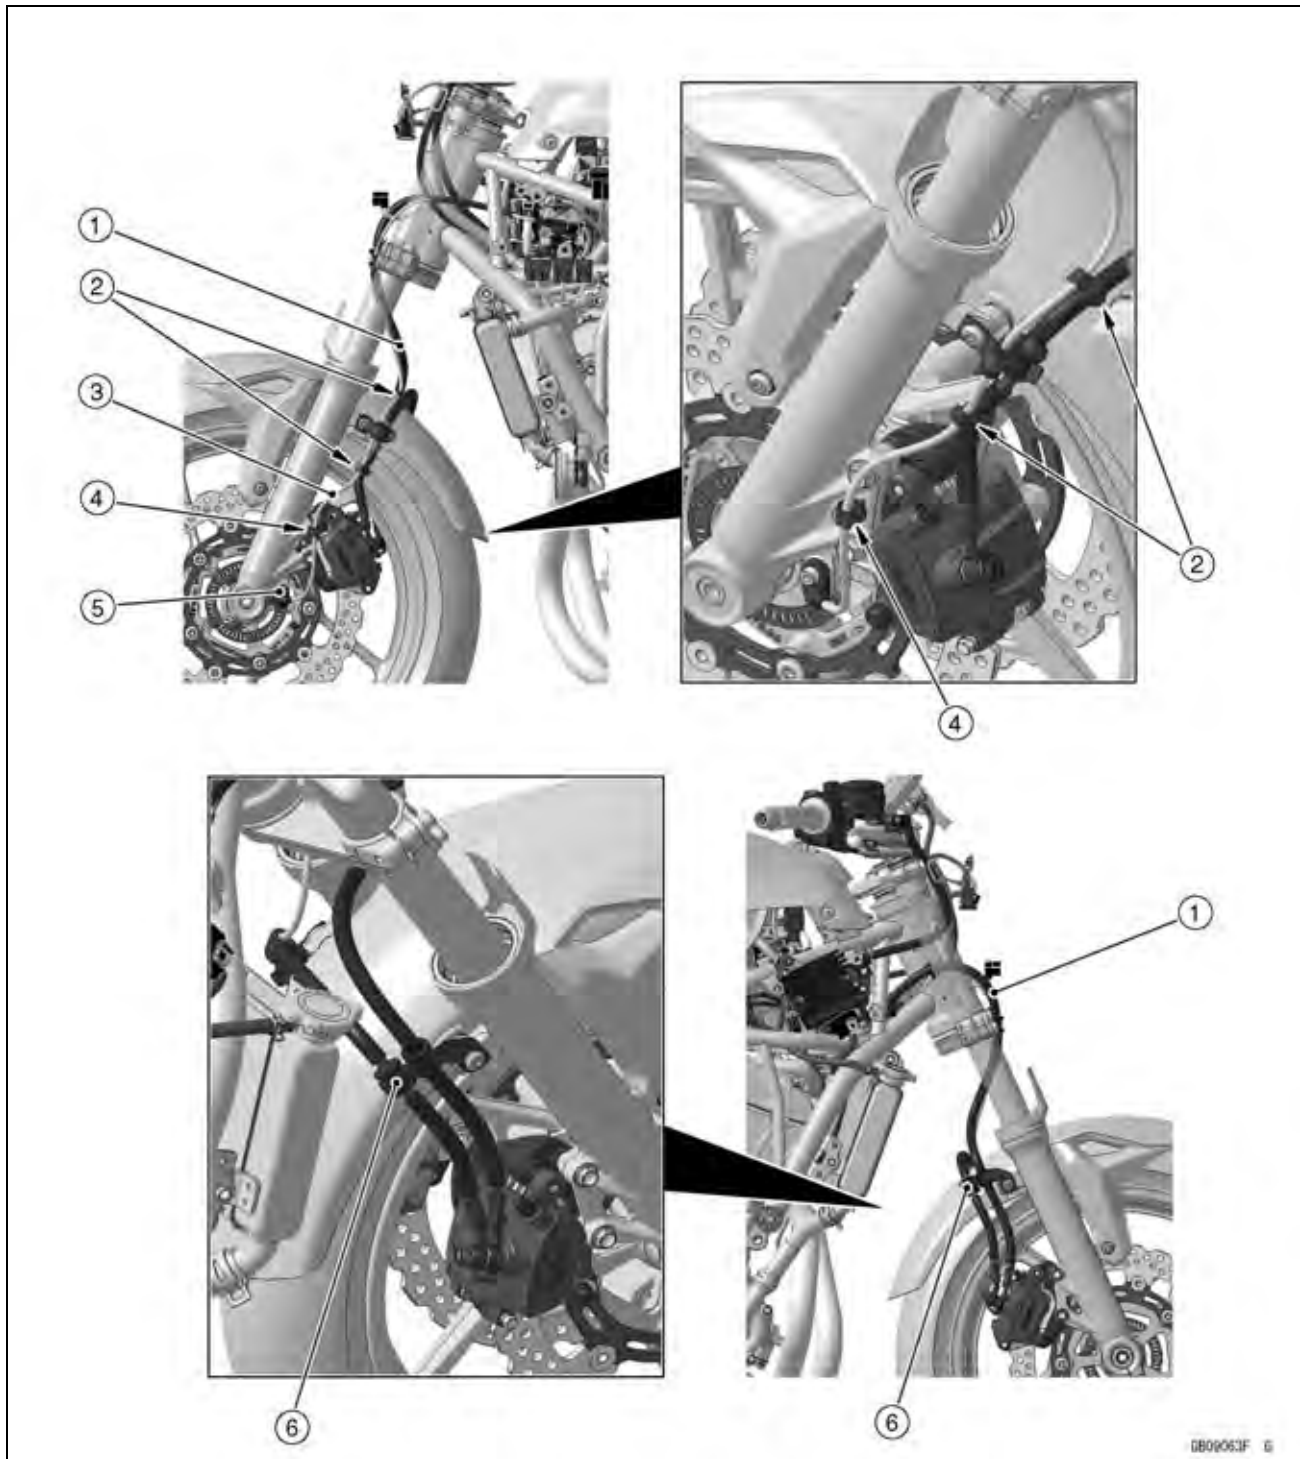

- 1. Front Brake Hose
- 2. Clamps (Insert the clamp from the back side.)
- 3. Front Wheel Rotation Sensor Lead
- 4. Clamp (Insert the clamp so that its open side faces backward.)
- 5. Front Wheel Rotation Sensor
- 6. Clamp (Hold the front brake hoses.)

## Cable, Wire, and Hose Routing

## ABS Equipped Models

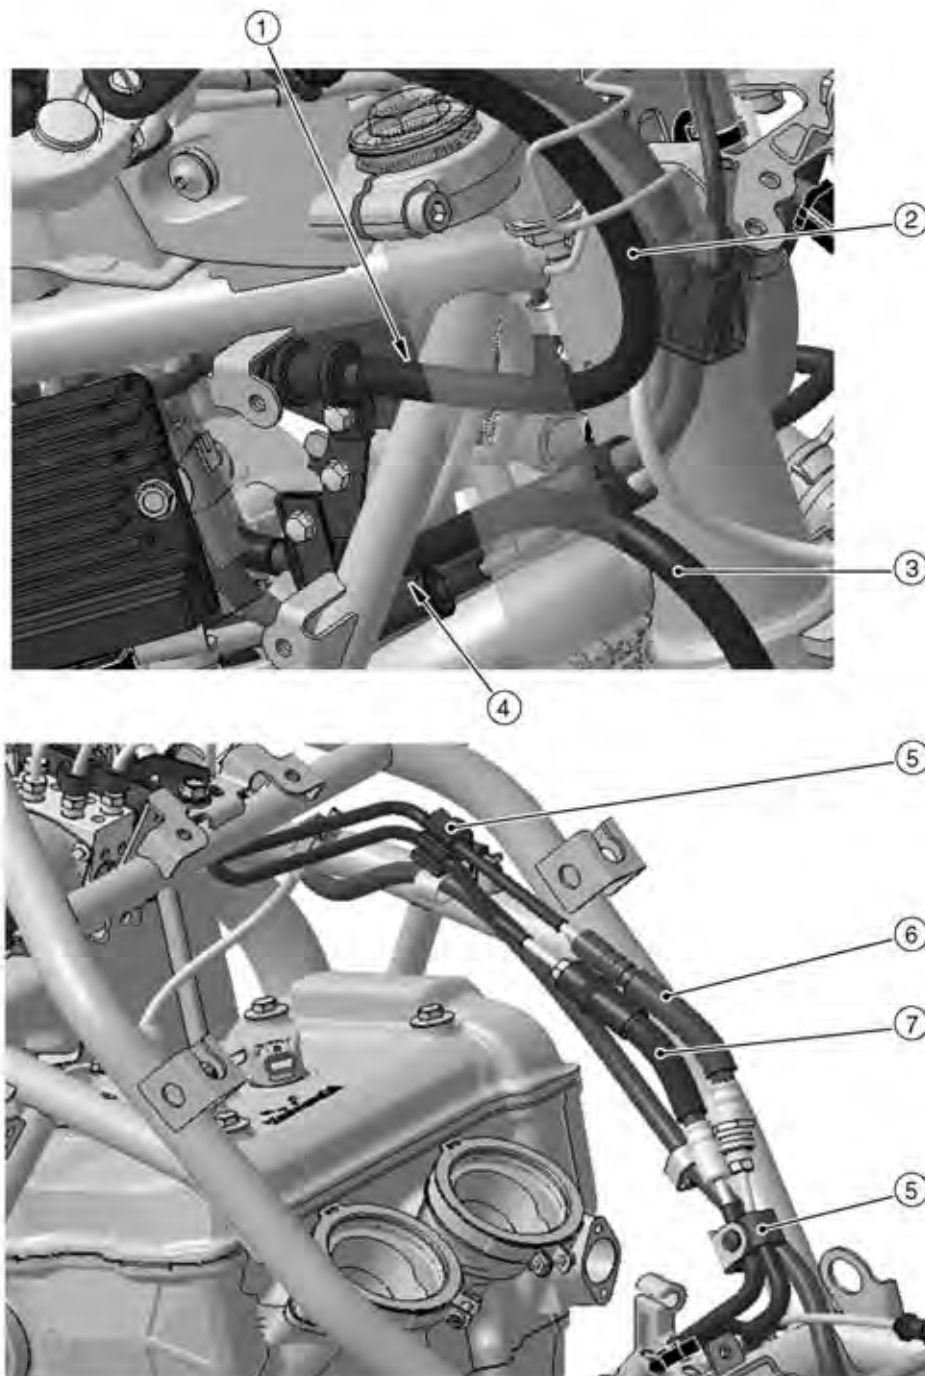


DB09064F G

1. Run the front brake hose to the outside of the frame pipe.
2. Front Brake Hose (Front Master Cylinder ~ ABS Hydraulic Unit)
3. Front Brake Hose (ABS Hydraulic Unit ~ Front Caliper)
4. Run the front brake hose to the inside of the frame pipe.
5. Clamps (Hold the brake pipes.)
6. Rear Brake Hose (ABS Hydraulic Unit ~ Rear Caliper)
7. Rear Brake Hose (Rear Master Cylinder ~ ABS Hydraulic Unit)

# 17-58 APPENDIX

## Cable, Wire, and Hose Routing

### ABS Equipped Models

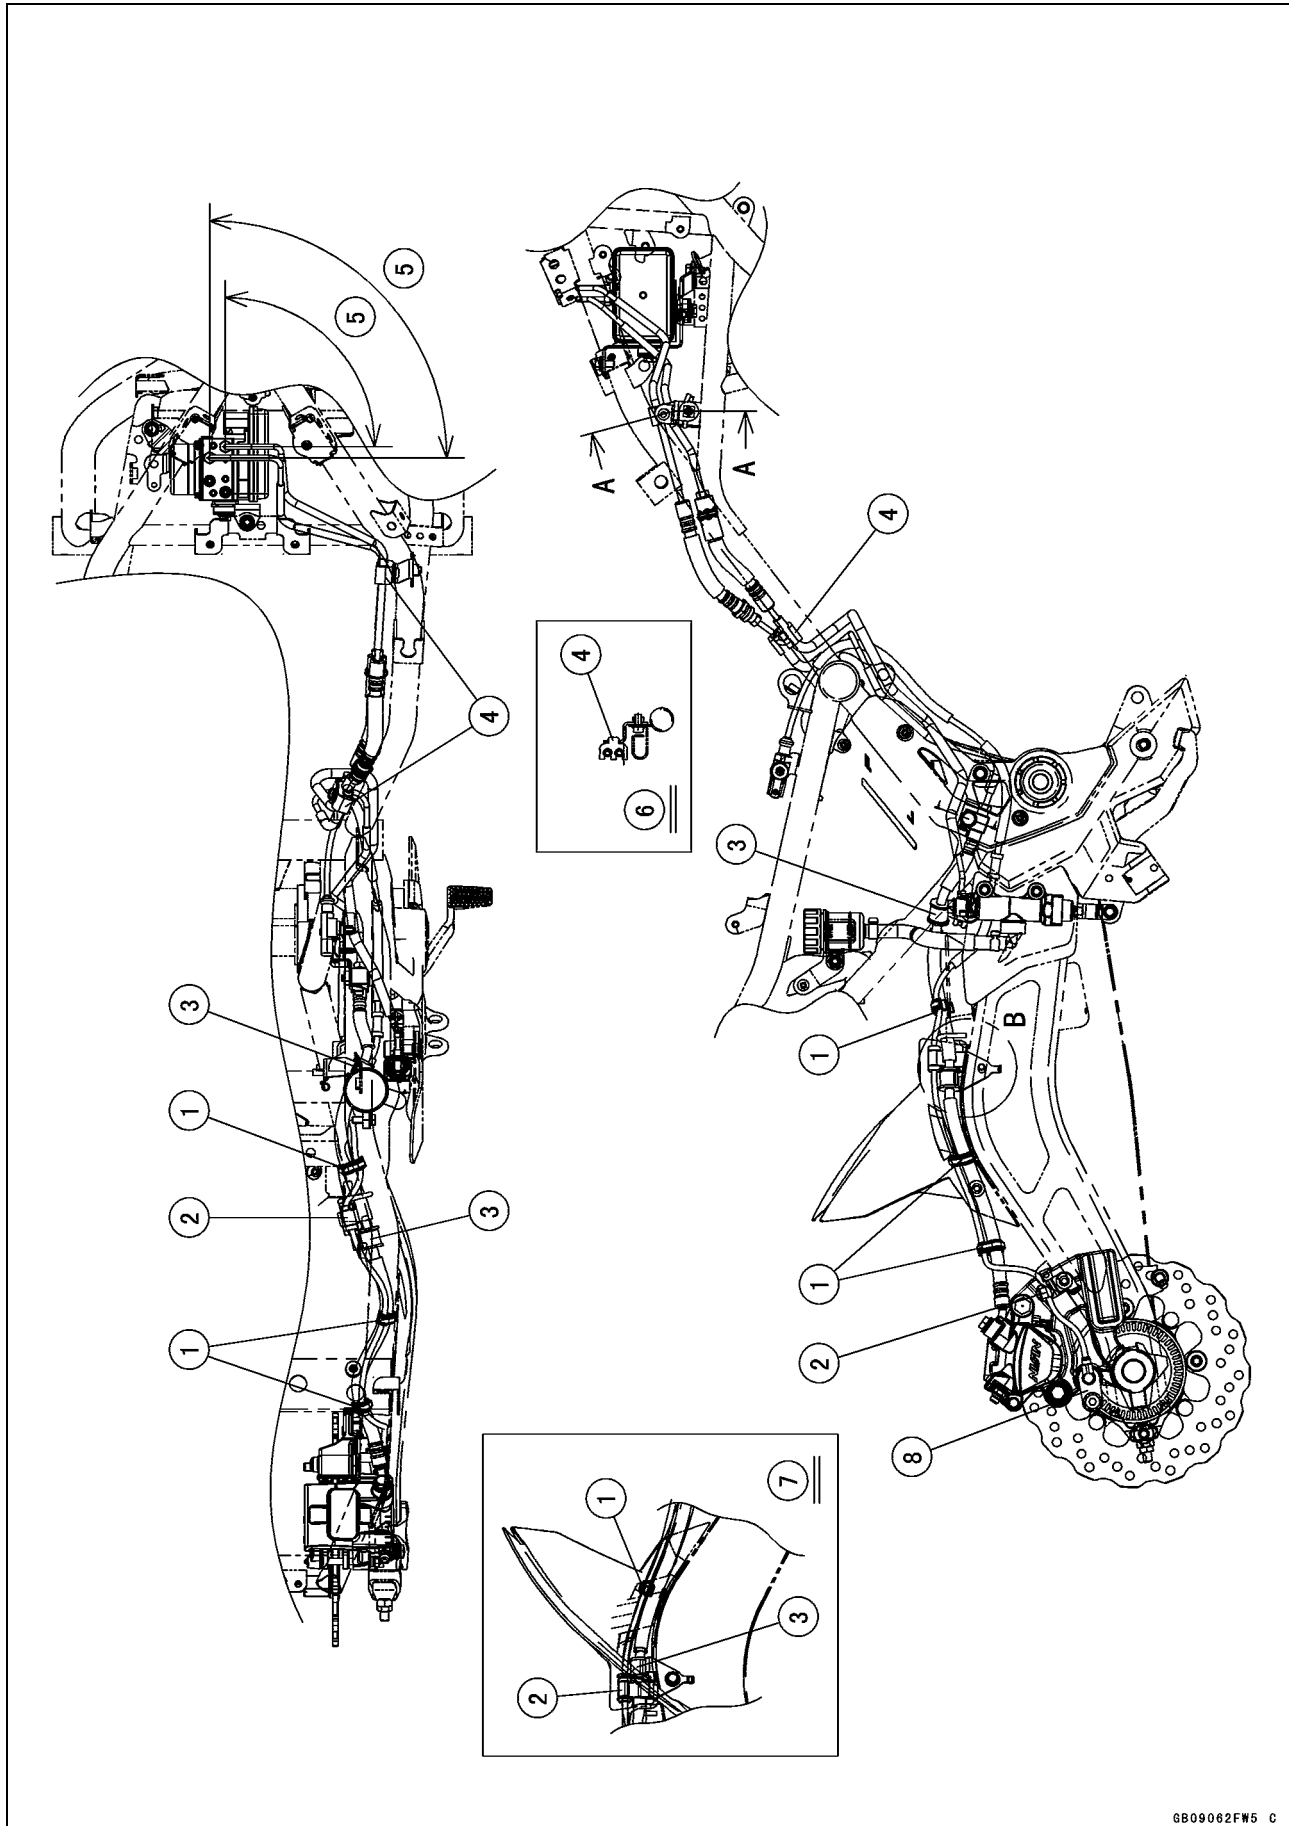

---

**Cable, Wire, and Hose Routing**


---

1. Clamps (Hold the rear brake hose and rear wheel rotation sensor lead at the white marks.)
2. Clamps (Hold the rear wheel rotation sensor lead.)
3. Clamps (Hold the rear brake hose.)
4. Clamps (Hold the brake pipes.)
5. 90°
6. Section A - A
7. Detail B (Viewed from the inside)
8. Rear Wheel Rotation Sensor

## 17-60 APPENDIX

### Cable, Wire, and Hose Routing

#### ABS Equipped Models

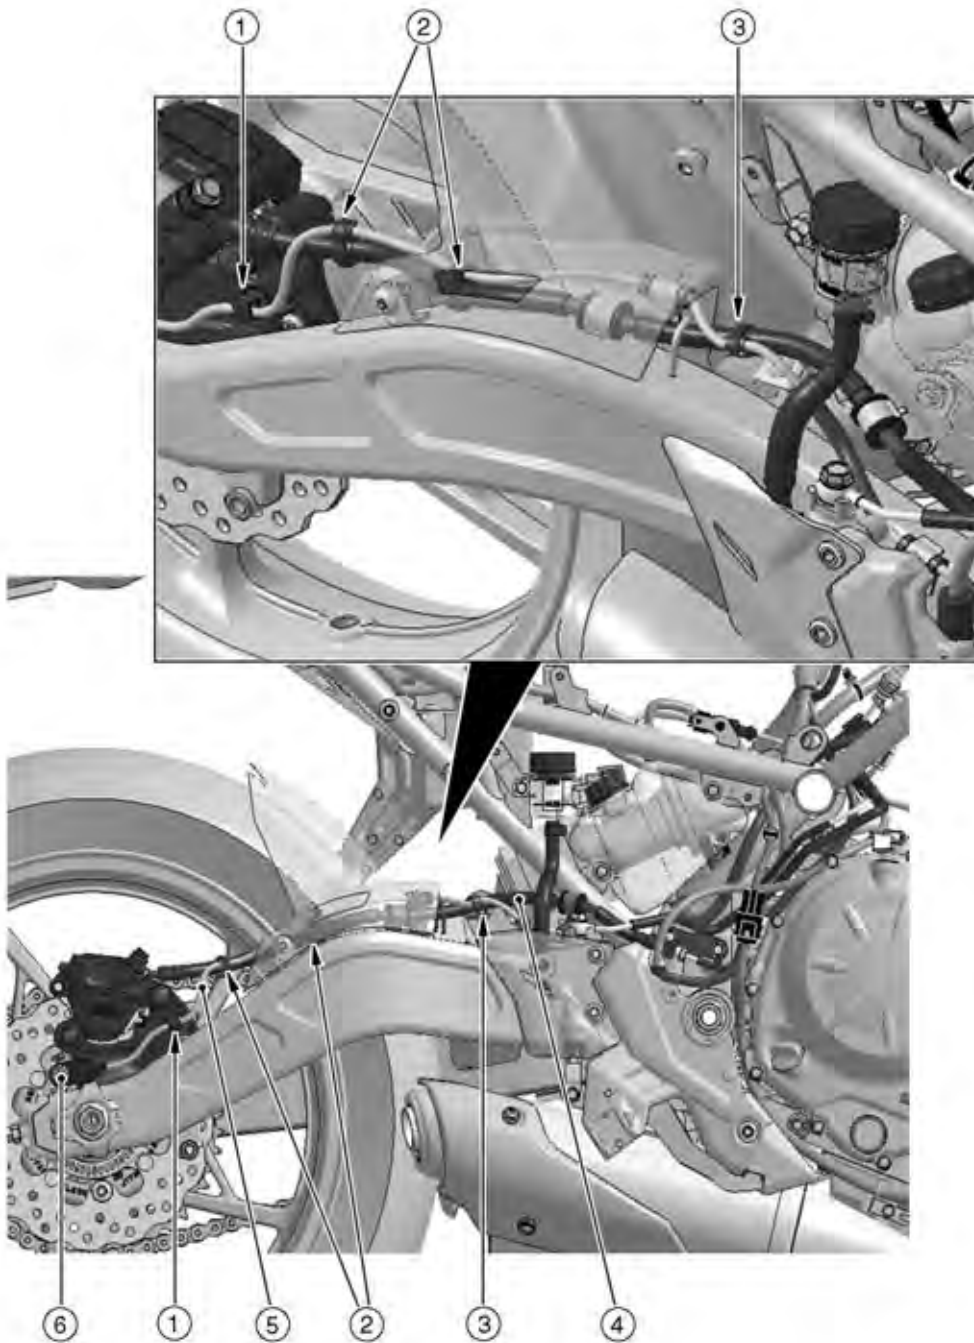


0B00055F 6

1. Clamp (Insert the clamp so that its open side faces upward.)
2. Clamps (Insert the clamp from the outside.)
3. Clamp (Insert the clamp from the upside.)
4. Rear Brake Hose
5. Rear Wheel Rotation Sensor Lead
6. Rear Wheel Rotation Sensor



## Cable, Wire, and Hose Routing

## Evaporative Emission Control System Equipped Models

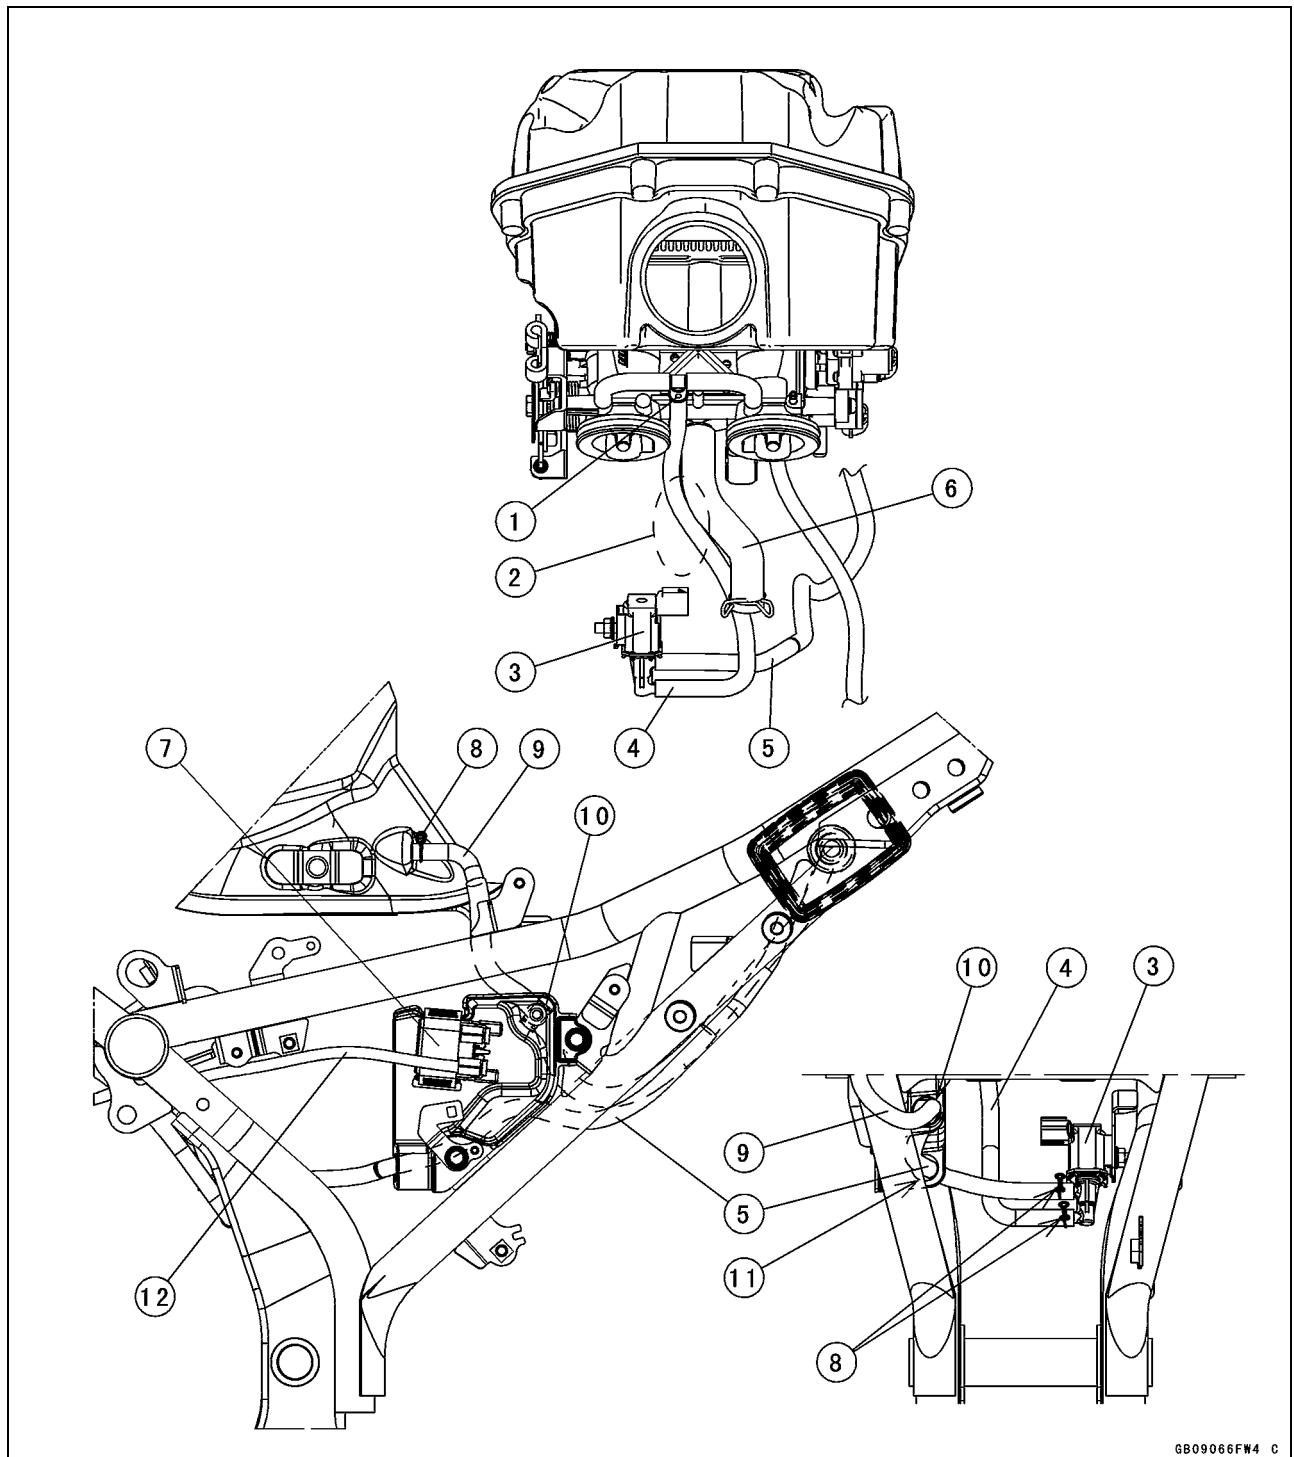


GB09066FW4 C

1. Green Paint
2. Run the purge hose to the right side of the breather hose.
3. Purge Valve
4. Purge Hose (Purge Valve ~ Throttle Body Assy)
5. Purge Hose (Canister ~ Purge Valve)
6. Breather Hose
7. Starter Relay
8. Install the clamps as shown.
9. Fuel Tank Breather Hose (Fuel Tank ~ Canister)
10. Clamp (Hold the fuel tank breather hose.)
11. Run the purge hose through the hole of the starter relay holder.
12. Starter Motor Cable

## 17-62 APPENDIX

### Cable, Wire, and Hose Routing

#### Evaporative Emission Control System Equipped Models

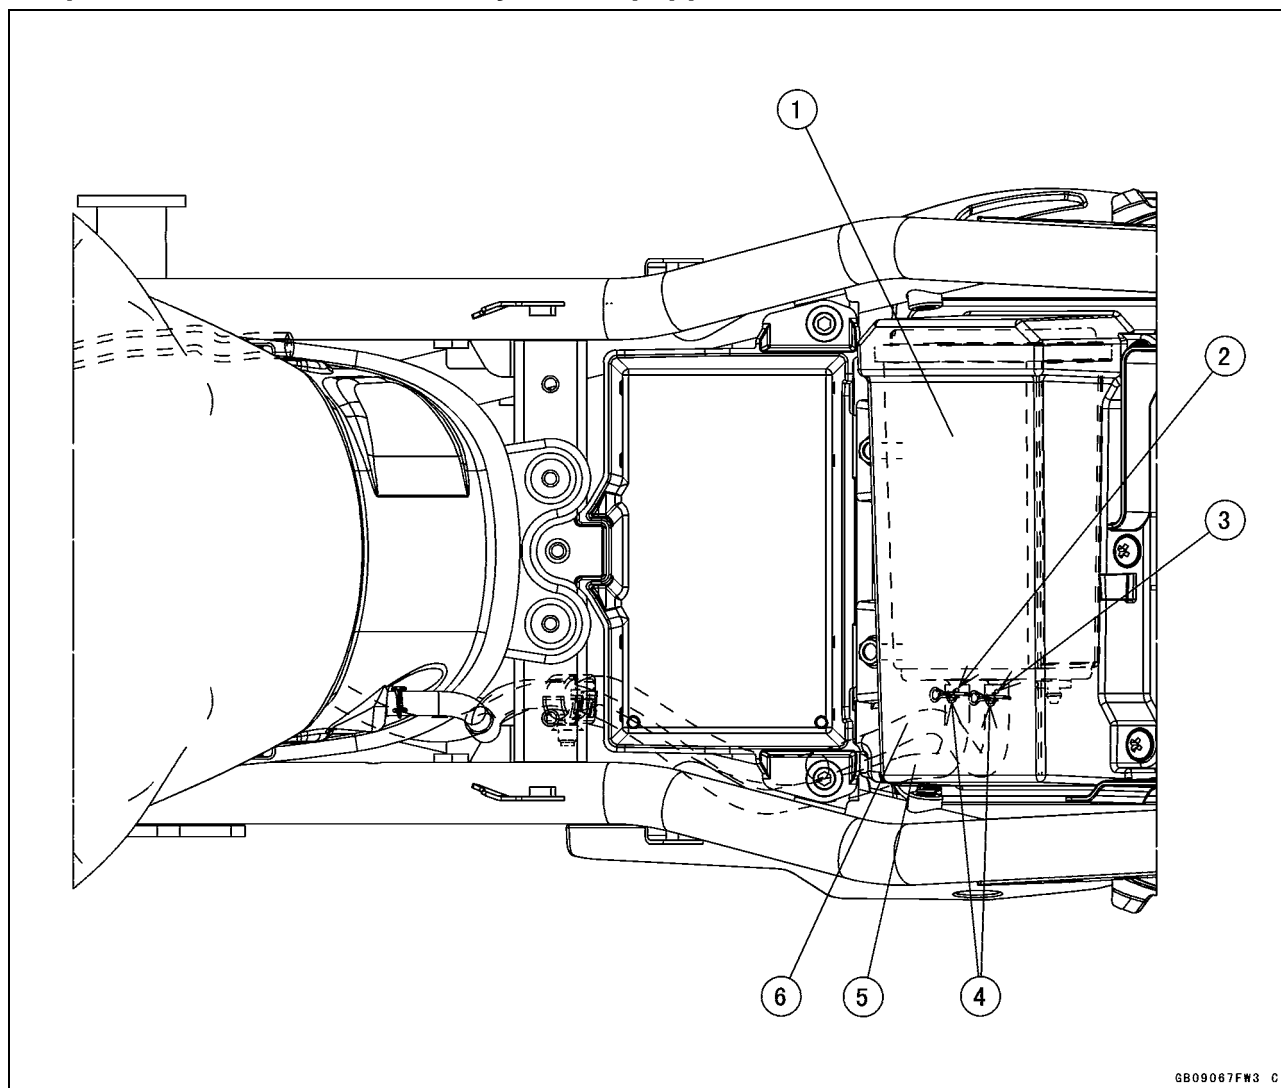


6B09067FW3 C

1. Canister
2. Install the purge hose so that the green paint mark faces upward.
3. Install the fuel tank breather hose so that the blue paint mark faces upward.
4. Install the clamps as shown.
5. Purge Hose (Canister ~ Purge Valve)
6. Fuel Tank Breather Hose (Fuel Tank ~ Canister)

## Cable, Wire, and Hose Routing

### Evaporative Emission Control System Equipped Models

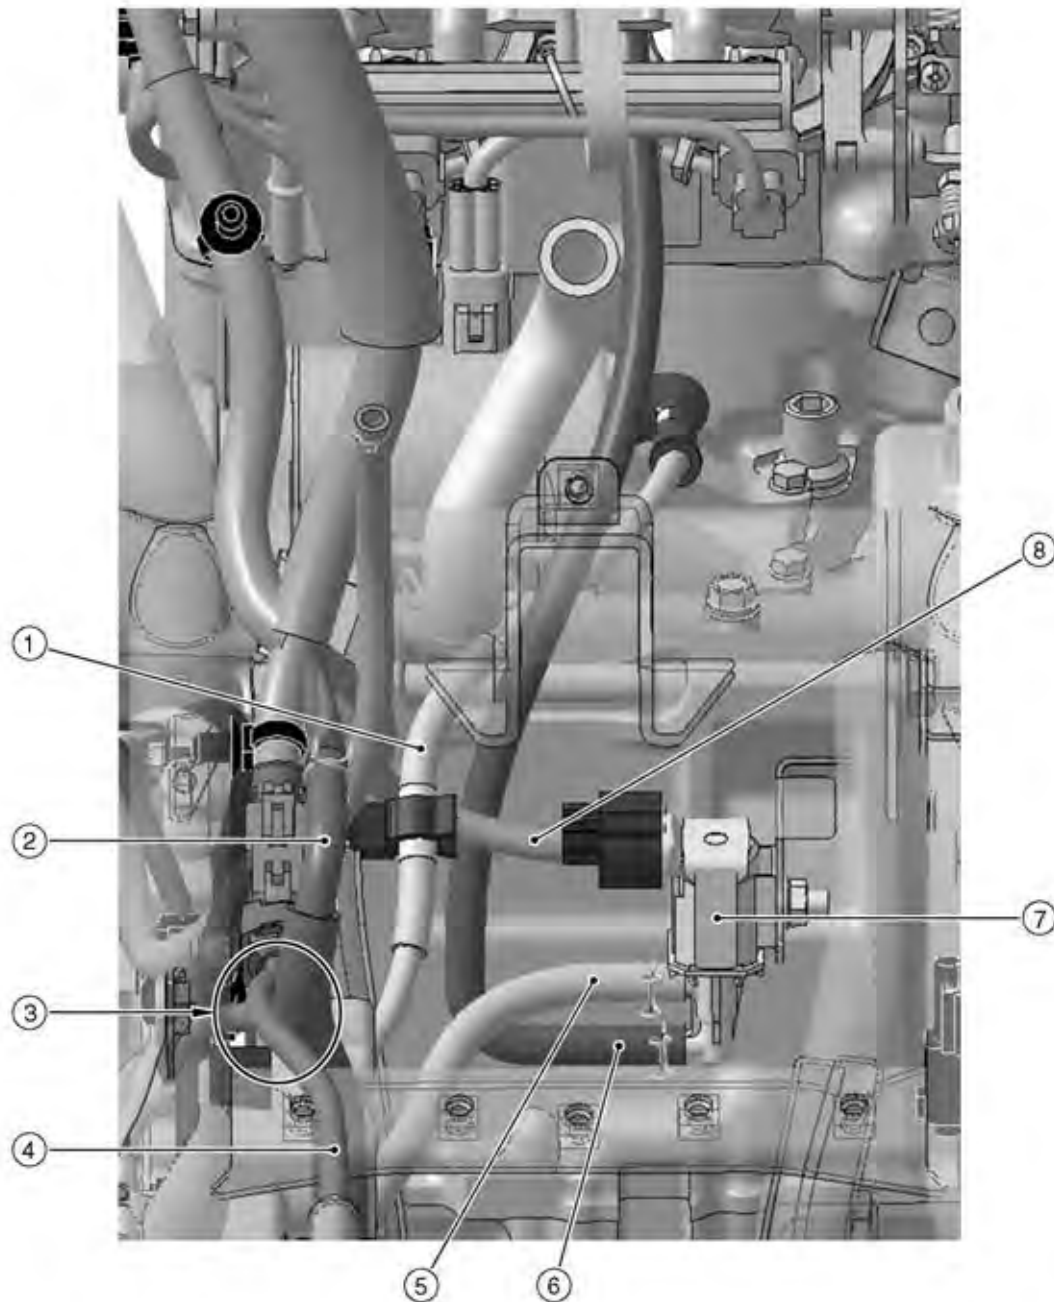


GB09068F 6

1. Starter Motor Cable
2. Fuel Tank Breather Hose (Fuel Tank ~ Canister)
3. Run the battery positive (+) cable to the outside of the fuel tank breather hose.
4. Battery Positive (+) Cable
5. Purge Hose (Canister ~ Purge Valve)
6. Purge Hose (Purge Valve ~ Throttle Body Assy)
7. Purge Valve
8. Purge Valve Lead

# 17-64 APPENDIX

## Cable, Wire, and Hose Routing

### Evaporative Emission Control System Equipped Models

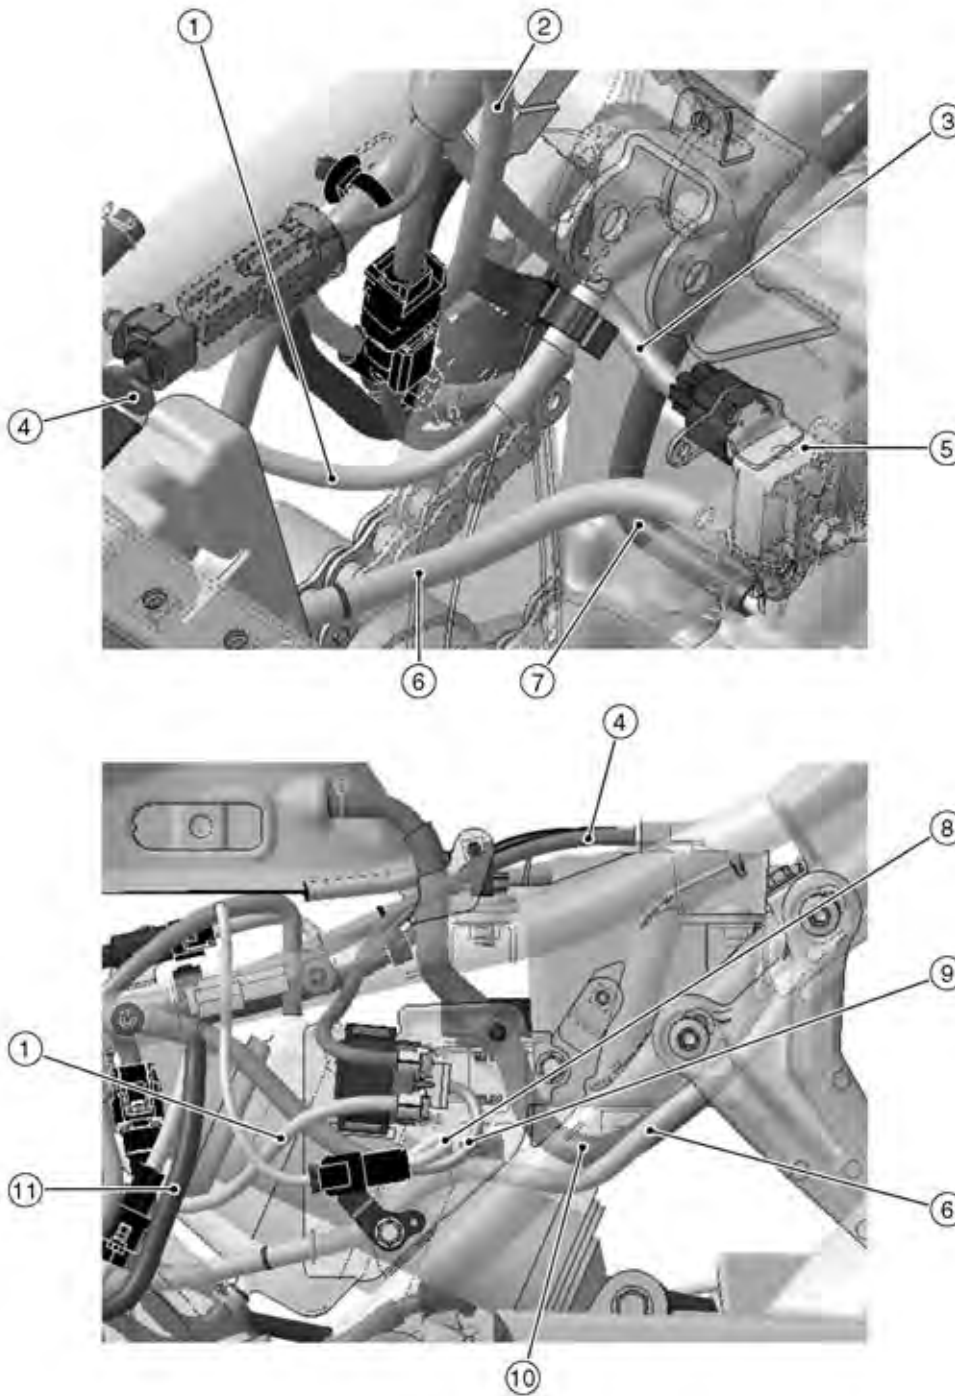

0B09069F G

1. Starter Motor Cable
2. Fuel Tank Drain Hose
3. Purge Valve Lead
4. Battery Positive (+) Cable
5. Purge Valve
6. Purge Hose (Canister ~ Purge Valve)
7. Purge Hose (Purge Valve ~ Throttle Body Assy)
8. Fuel Pump Lead
9. Starter Relay Lead
10. Fuel Tank Breather Hose (Fuel Tank ~ Canister)
11. Oxygen Sensor Lead

## Troubleshooting Guide

### NOTE

- Refer to the *Fuel System (DFI)* chapter for most of DFI trouble shooting guide.
- This is not an exhaustive list, giving every possible cause for each problem listed. It is meant simply as a rough guide to assist the troubleshooting for some of the more common difficulties.

### Engine Doesn't Start, Starting Difficulty:

#### Starter motor not rotating:

- Ignition and engine stop switch not on
- Starter lockout switch or gear position sensor trouble
- Starter motor trouble
- Battery voltage low
- Starter relay not contacting or operating
- Starter button not contacting
- Starter system wiring shorted or open
- Ignition switch trouble
- Engine stop switch trouble
- Main 30 A or ignition fuse blown

#### Starter motor rotating but engine doesn't turn over:

- Vehicle-down sensor (DFI) coming off
- Starter clutch trouble
- Starter idle gear trouble

#### Engine won't turn over:

- Valve seizure
- Valve lifter seizure
- Cylinder, piston seizure
- Crankshaft seizure
- Connecting rod small end seizure
- Connecting rod big end seizure
- Transmission gear or bearing seizure
- Camshaft seizure
- Starter idle gear seizure
- Balancer bearing seizure

#### No fuel flow:

- No fuel in tank
- Fuel pump trouble
- Fuel tank air vent obstructed
- Fuel filter clogged
- Fuel line clogged

#### No spark; spark weak:

- Vehicle-down sensor (DFI) coming off
- Ignition switch not on
- Engine stop switch turned to stop position
- Clutch lever not pulled in or gear not in neutral
- Battery voltage low
- Spark plug dirty, broken, or gap maladjusted
- Spark plug incorrect
- Stick coil shorted or not in good contact
- Stick coil trouble

ECU trouble

Gear position sensor, starter lockout, or side stand switch trouble

Crankshaft sensor trouble

Ignition switch or engine stop switch shorted

Starter system wiring shorted or open

Main 30 A or ignition fuse blown

#### Fuel/air mixture incorrect:

- Bypass screw maladjusted
- Air passage clogged
- Air cleaner clogged, poorly sealed, or missing
- Leak from oil filler cap, crankcase breather hose or air cleaner drain hose.

#### Compression Low:

- Spark plug loose
- Cylinder head not sufficiently tightened down
- Cylinder, piston worn
- Piston ring bad (worn, weak, broken, or sticking)
- Piston ring/groove clearance excessive
- Cylinder head gasket damaged
- Cylinder head warped
- Valve spring broken or weak
- No valve clearance
- Valve not seating properly (valve bent, worn, or carbon accumulation on the seating surface)

### Poor Running at Low Speed:

#### Spark weak:

- Battery voltage low
- Stick coil trouble
- Stick coil shorted or not in good contact
- Spark plug dirty, broken, or maladjusted
- Spark plug incorrect
- ECU trouble
- Crankshaft sensor trouble

#### Fuel/air mixture incorrect:

- Bypass screw maladjusted
- Air passage clogged
- Air bleed pipe bleed holes clogged
- Pilot passage clogged
- Air cleaner clogged, poorly sealed, or missing
- Fuel tank air vent obstructed
- Fuel pump trouble
- Fuel to injector insufficient
- Fuel line clogged
- Throttle body assy holder loose
- Air cleaner housing holder loose

#### Compression low:

- Spark plug loose
- Cylinder head not sufficiently tightened down

## 17-66 APPENDIX

### Troubleshooting Guide

---

No valve clearance  
Cylinder, piston worn  
Piston ring bad (worn, weak, broken, or sticking)  
Piston ring/groove clearance excessive  
Cylinder head gasket damaged  
Cylinder head warped  
Valve spring broken or weak  
Valve not seating properly (valve bent, worn, or carbon accumulation on the seating surface)  
Camshaft cam worn

#### **Run-on (dieseling):**

Ignition switch trouble  
Engine stop switch trouble  
Fuel injector trouble  
Carbon accumulating on valve seating surface  
Engine overheating

#### **Other:**

ECU trouble  
Throttle body assy not synchronizing  
Engine oil viscosity too high  
Drive train trouble  
Brake dragging  
Clutch slipping  
Engine overheating  
Air suction valve trouble  
Air switching valve trouble

#### **Poor Running or No Power at High Speed:**

##### **Firing incorrect:**

Spark plug dirty, broken, or maladjusted  
Spark plug incorrect  
Stick coil shorted or not in good contact trouble  
Stick coil trouble  
ECU trouble

##### **Fuel/air mixture incorrect:**

Air cleaner clogged, poorly sealed, or missing  
Air cleaner housing holder loose  
Water or foreign matter in fuel  
Throttle body assy holder loose  
Fuel to injector insufficient  
Fuel tank air vent obstructed  
Fuel line clogged  
Fuel pump trouble

##### **Compression low:**

Spark plug loose  
Cylinder head not sufficiently tightened down  
No valve clearance  
Cylinder, piston worn  
Piston ring bad (worn, weak, broken, or sticking)

Piston ring/groove clearance excessive  
Cylinder head gasket damaged  
Cylinder head warped  
Valve spring broken or weak  
Valve not seating properly (valve bent, worn, or carbon accumulation on the seating surface.)

#### **Knocking:**

Carbon built up in combustion chamber  
Fuel poor quality or incorrect  
Spark plug incorrect  
ECU trouble

#### **Miscellaneous:**

Throttle valve won't fully open  
Brake dragging  
Clutch slipping  
Engine overheating  
Engine oil level too high  
Engine oil viscosity too high  
Drive train trouble  
Camshaft cam worn  
Air suction valve trouble  
Air switching valve trouble  
Catalytic converter melt down due to muffler overheating (KLEEN)

#### **Overheating:**

##### **Firing incorrect:**

Spark plug dirty, broken, or maladjusted  
Spark plug incorrect  
ECU trouble

##### **Muffler overheating:**

For KLEEN, do not run the engine even if with only one cylinder misfiring or poor running (Request the nearest service facility to correct it)

For KLEEN, do not push-start with a dead battery (Connect another full-charged battery with jumper cables, and start the engine using the electric starter)

For KLEEN, do not start the engine under misfire due to spark plug fouling or poor connection of the stick coil

For KLEEN, do not coast the motorcycle with the ignition switch off (Turn the ignition switch on and run the engine)

ECU trouble

##### **Fuel/air mixture incorrect:**

Throttle body assy holder loose  
Air cleaner housing holder loose  
Air cleaner poorly sealed, or missing  
Air cleaner clogged

##### **Compression high:**

Carbon built up in combustion chamber

##### **Engine load faulty:**

Clutch slipping  
Engine oil level too high

## Troubleshooting Guide

Engine oil viscosity too high  
 Drive train trouble  
 Brake dragging

### Lubrication inadequate:

Engine oil level too low  
 Engine oil poor quality or incorrect

### Coolant incorrect:

Coolant level too low  
 Coolant deteriorated  
 Wrong coolant mixed ratio

### Cooling system component incorrect:

Radiator fin damaged  
 Radiator clogged  
 Thermostat trouble  
 Radiator cap trouble  
 Radiator fan relay trouble  
 Fan motor broken  
 Fan blade damaged  
 Water pump not turning  
 Water pump impeller damaged

### Over Cooling:

#### Cooling system component incorrect:

Thermostat trouble  
 Radiator fan relay trouble

### Clutch Operation Faulty:

#### Clutch slipping:

Friction plate worn or warped  
 Steel plate worn or warped  
 Clutch spring broken or weak  
 Clutch hub or housing unevenly worn  
 No clutch lever play  
 Clutch inner cable trouble  
 Clutch release mechanism trouble

#### Clutch not disengaging properly:

Clutch plate warped or too rough  
 Clutch spring compression uneven  
 Engine oil deteriorated  
 Engine oil viscosity too high  
 Engine oil level too high  
 Clutch housing frozen on drive shaft  
 Clutch hub nut loose  
 Clutch hub spline damaged  
 Clutch friction plate installed wrong  
 Clutch lever play excessive  
 Clutch release mechanism trouble

### Gear Shifting Faulty:

#### Doesn't go into gear; shift pedal doesn't return:

Clutch not disengaging  
 Shift fork bent or seized  
 Gear stuck on the shaft  
 Gear positioning lever binding  
 Shift return spring weak or broken

Shift return spring pin loose  
 Shift mechanism arm spring broken  
 Shift mechanism arm broken  
 Shift pawl broken

#### Jumps out of gear:

Shift fork ear worn, bent  
 Gear groove worn  
 Gear dogs and/or dog holes worn  
 Shift drum groove worn  
 Gear positioning lever spring weak or broken  
 Shift fork guide pin worn  
 Drive shaft, output shaft, and/or gear splines worn

#### Overshifts:

Gear positioning lever spring weak or broken  
 Shift mechanism arm spring broken

### Abnormal Engine Noise:

#### Knocking:

ECU trouble  
 Carbon built up in combustion chamber  
 Fuel poor quality or incorrect  
 Spark plug incorrect  
 Overheating

#### Piston slap:

Cylinder/piston clearance excessive  
 Cylinder, piston worn  
 Connecting rod bent  
 Piston pin, piston pin hole worn

#### Valve noise:

Valve clearance incorrect  
 Valve spring broken or weak  
 Camshaft bearing worn  
 Valve lifter worn

#### Other noise:

Connecting rod small end clearance excessive  
 Connecting rod big end clearance excessive  
 Piston ring/groove clearance excessive  
 Piston ring worn, broken, or stuck  
 Piston ring groove worn  
 Piston seizure, damage  
 Cylinder head gasket leaking  
 Exhaust pipe leaking at cylinder head connection  
 Crankshaft runout excessive  
 Engine mount loose  
 Crankshaft bearing worn  
 Primary gear worn or chipped  
 Camshaft chain tensioner trouble  
 Camshaft chain, sprocket, guide worn  
 Air suction valve damaged  
 Air switching valve damaged  
 Alternator rotor loose

## Troubleshooting Guide

---

- Catalytic converter melt down due to muffler overheating (KLEEN)
- Balancer gear worn or chipped
- Balancer shaft position maladjusted
- Balancer bearing worn

### Abnormal Drive Train Noise:

#### Clutch noise:

- Clutch housing/friction plate clearance excessive
- Clutch housing gear worn
- Wrong installation of outside friction plate

#### Transmission noise:

- Bearings worn
- Transmission gear worn or chipped
- Metal chips jammed in gear teeth
- Engine oil insufficient

#### Drive line noise:

- Drive chain adjusted improperly
- Drive chain worn
- Rear and/or engine sprocket worn
- Chain lubrication insufficient
- Rear wheel misaligned

### Abnormal Frame Noise:

#### Front fork noise:

- Oil insufficient or too thin
- Spring weak or broken

#### Rear shock absorber noise:

- Shock absorber damaged

#### Disc brake noise:

- Pad installed incorrectly
- Pad surface glazed
- Disc warped
- Caliper trouble

#### Other noise:

- Bracket, nut, bolt, etc. not properly mounted or tightened

### Warning Indicator (LED) (Oil Pressure Warning) Doesn't Go OFF:

- Engine oil pump damaged
- Engine oil screen clogged
- Engine oil filter clogged
- Engine oil level too low
- Engine oil viscosity too low
- Camshaft bearing worn
- Crankshaft bearing worn
- Oil pressure switch damaged
- Wiring faulty
- Relief valve stuck open
- O-ring at the oil passage in the crankcase damaged

### Exhaust Smokes Excessively:

#### White smoke:

- Piston oil ring worn
- Cylinder worn
- Valve oil seal damaged
- Valve guide worn
- Engine oil level too high

#### Black smoke:

- Air cleaner clogged

#### Brown smoke:

- Air cleaner housing holder loose
- Air cleaner poorly sealed or missing

### Handling and/or Stability

#### Unsatisfactory:

##### Handlebars hard to turn:

- Cable routing incorrect
- Hose routing incorrect
- Wiring routing incorrect
- Steering stem nut too tight
- Steering stem bearing damaged
- Steering stem bearing lubrication inadequate
- Steering stem bent
- Tire air pressure too low

##### Handlebars shakes or excessively vibrates:

- Tire worn
- Swingarm pivot bearing worn
- Rim warped, or not balanced
- Wheel bearing worn
- Handlebar holder bolt loose
- Steering stem nut loose
- Front, rear axle runout excessive
- Engine mounting bolt loose

##### Handlebars pulls to one side:

- Frame bent
- Wheel misalignment
- Swingarm bent or twisted
- Swingarm pivot shaft runout excessive
- Steering maladjusted
- Front fork bent
- Right and left front fork oil level incorrect

##### Shock absorption unsatisfactory:

- (Too hard)
  - Front fork oil excessive
  - Front fork oil viscosity too high
  - Rear shock absorber adjustment too hard
  - Tire air pressure too high
  - Front fork bent
- (Too soft)
  - Tire air pressure too low
  - Front fork oil insufficient and/or leaking
  - Front fork oil viscosity too low
  - Rear shock adjustment too soft
  - Front fork, rear shock absorber spring weak
  - Rear shock absorber oil leaking



---

**Troubleshooting Guide**

---

**Brake Doesn't Hold:**

- Air in the brake line
- Pad or disc worn
- Brake fluid leakage
- Disc warped
- Contaminated pad
- Brake fluid deteriorated
- Primary or secondary cup damaged in master cylinder
- Master cylinder scratched inside

**Battery Trouble:****Battery discharged:**

- Charge insufficient

- Battery faulty (too low terminal voltage)
- Battery cable making poor contact
- Load excessive (e.g., bulb of excessive wattage)
- Ignition switch trouble
- Alternator trouble
- Wiring faulty
- Regulator/rectifier trouble

**Battery overcharged:**

- Alternator trouble
- Regulator/rectifier trouble
- Battery faulty

### MODEL APPLICATION

Year	Model	Beginning Frame No.
2017	ER650GH	JKAEREG1□HDA00001 JKAER650GGDA00001
2017	ER650HH	JKAEREH1□HDA00001 JKAER650HHDA00001

□:This digit in the frame number changes from one machine to another.