



NC700X

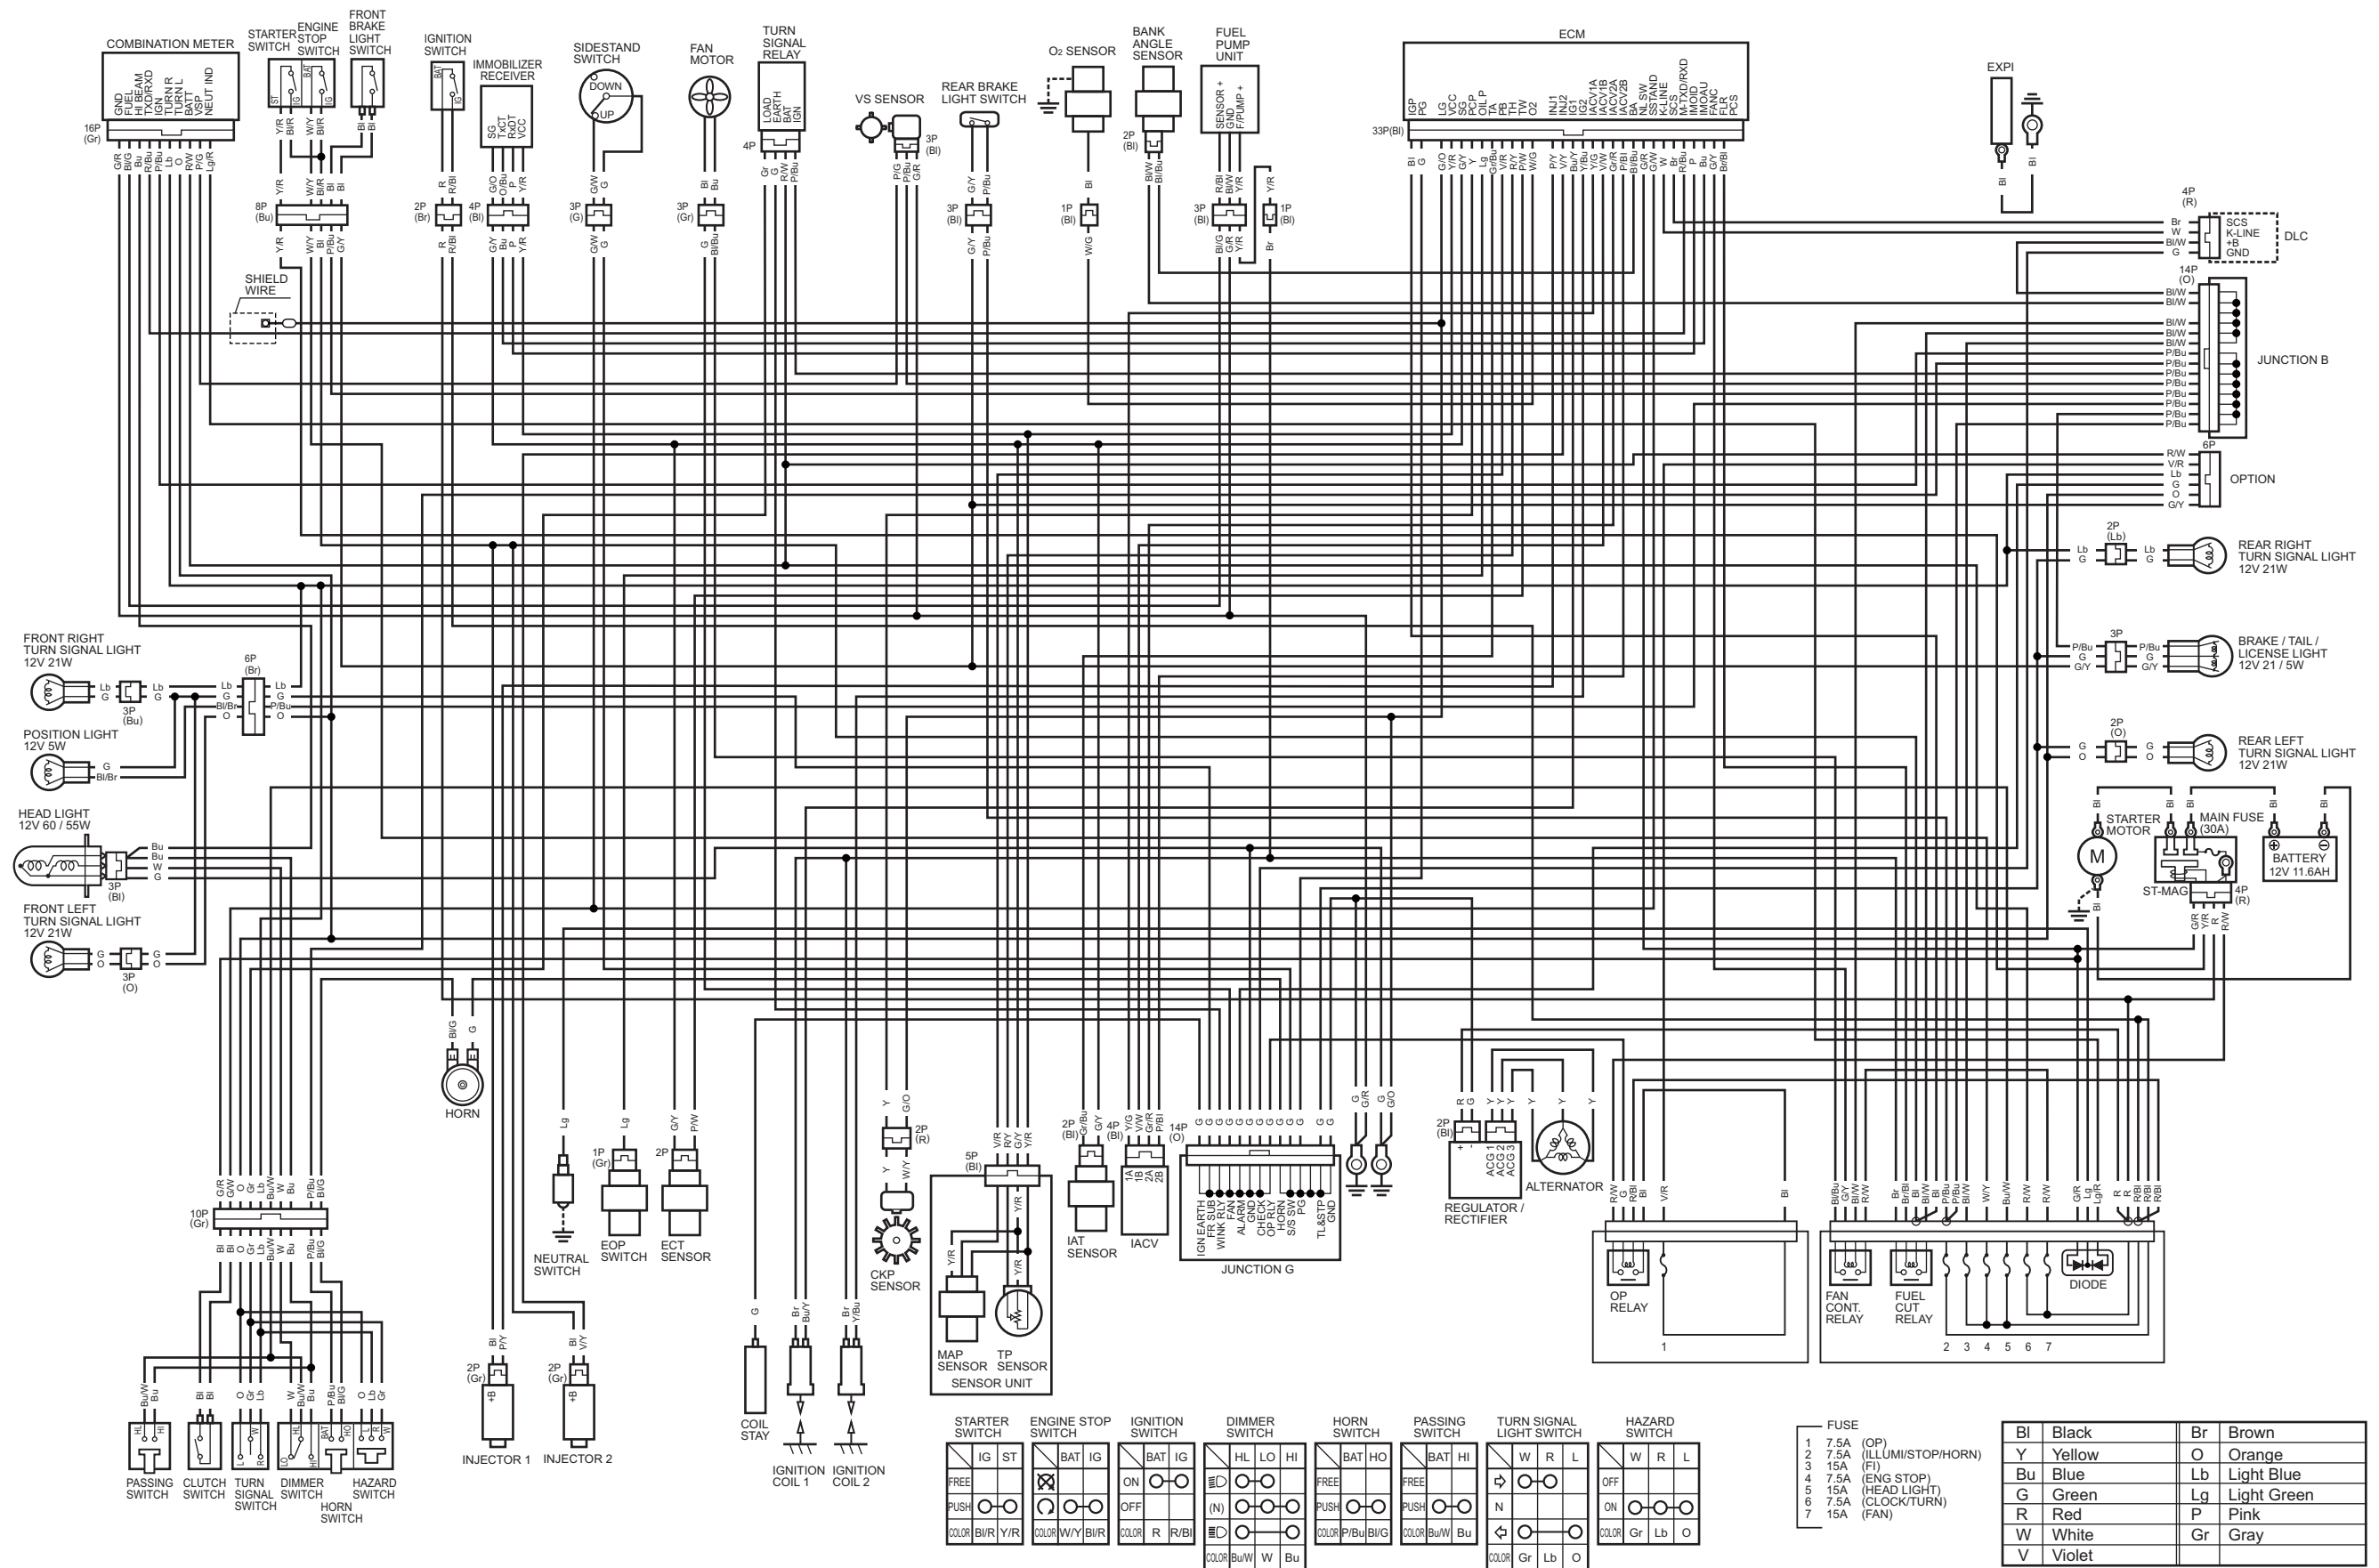


# WIRING DIAGRAM

## NC700XA

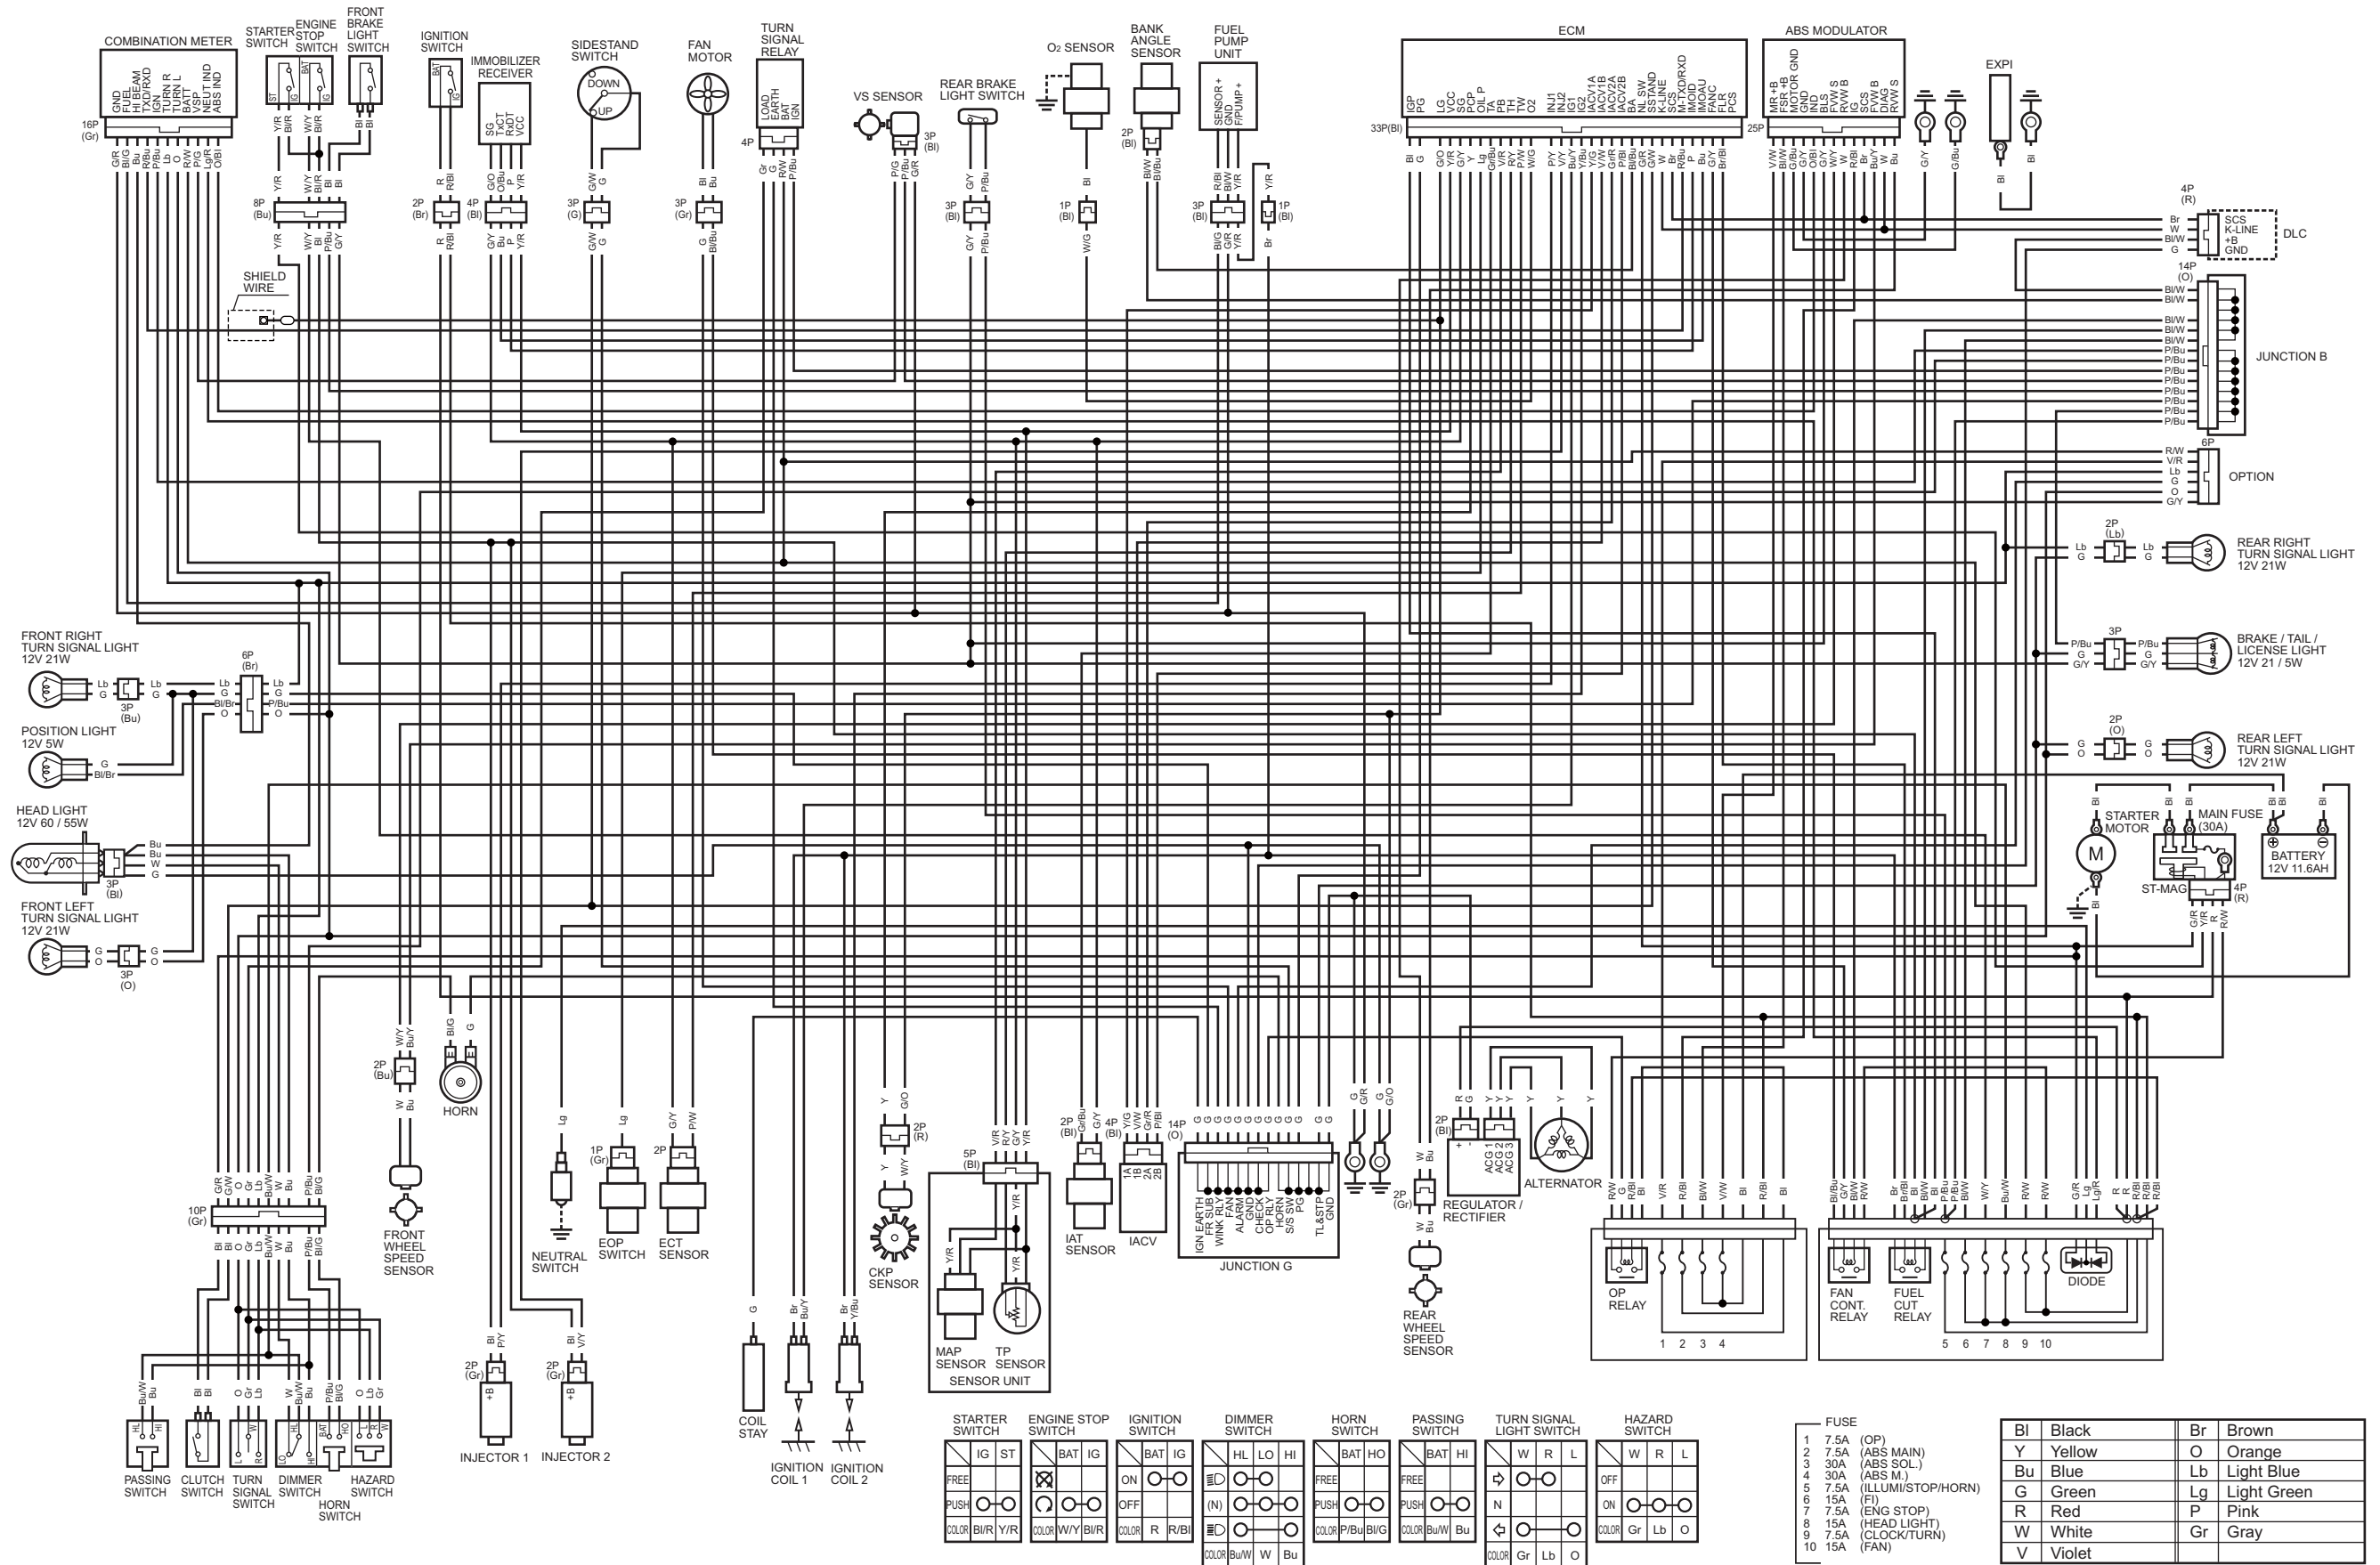

# NC700XD

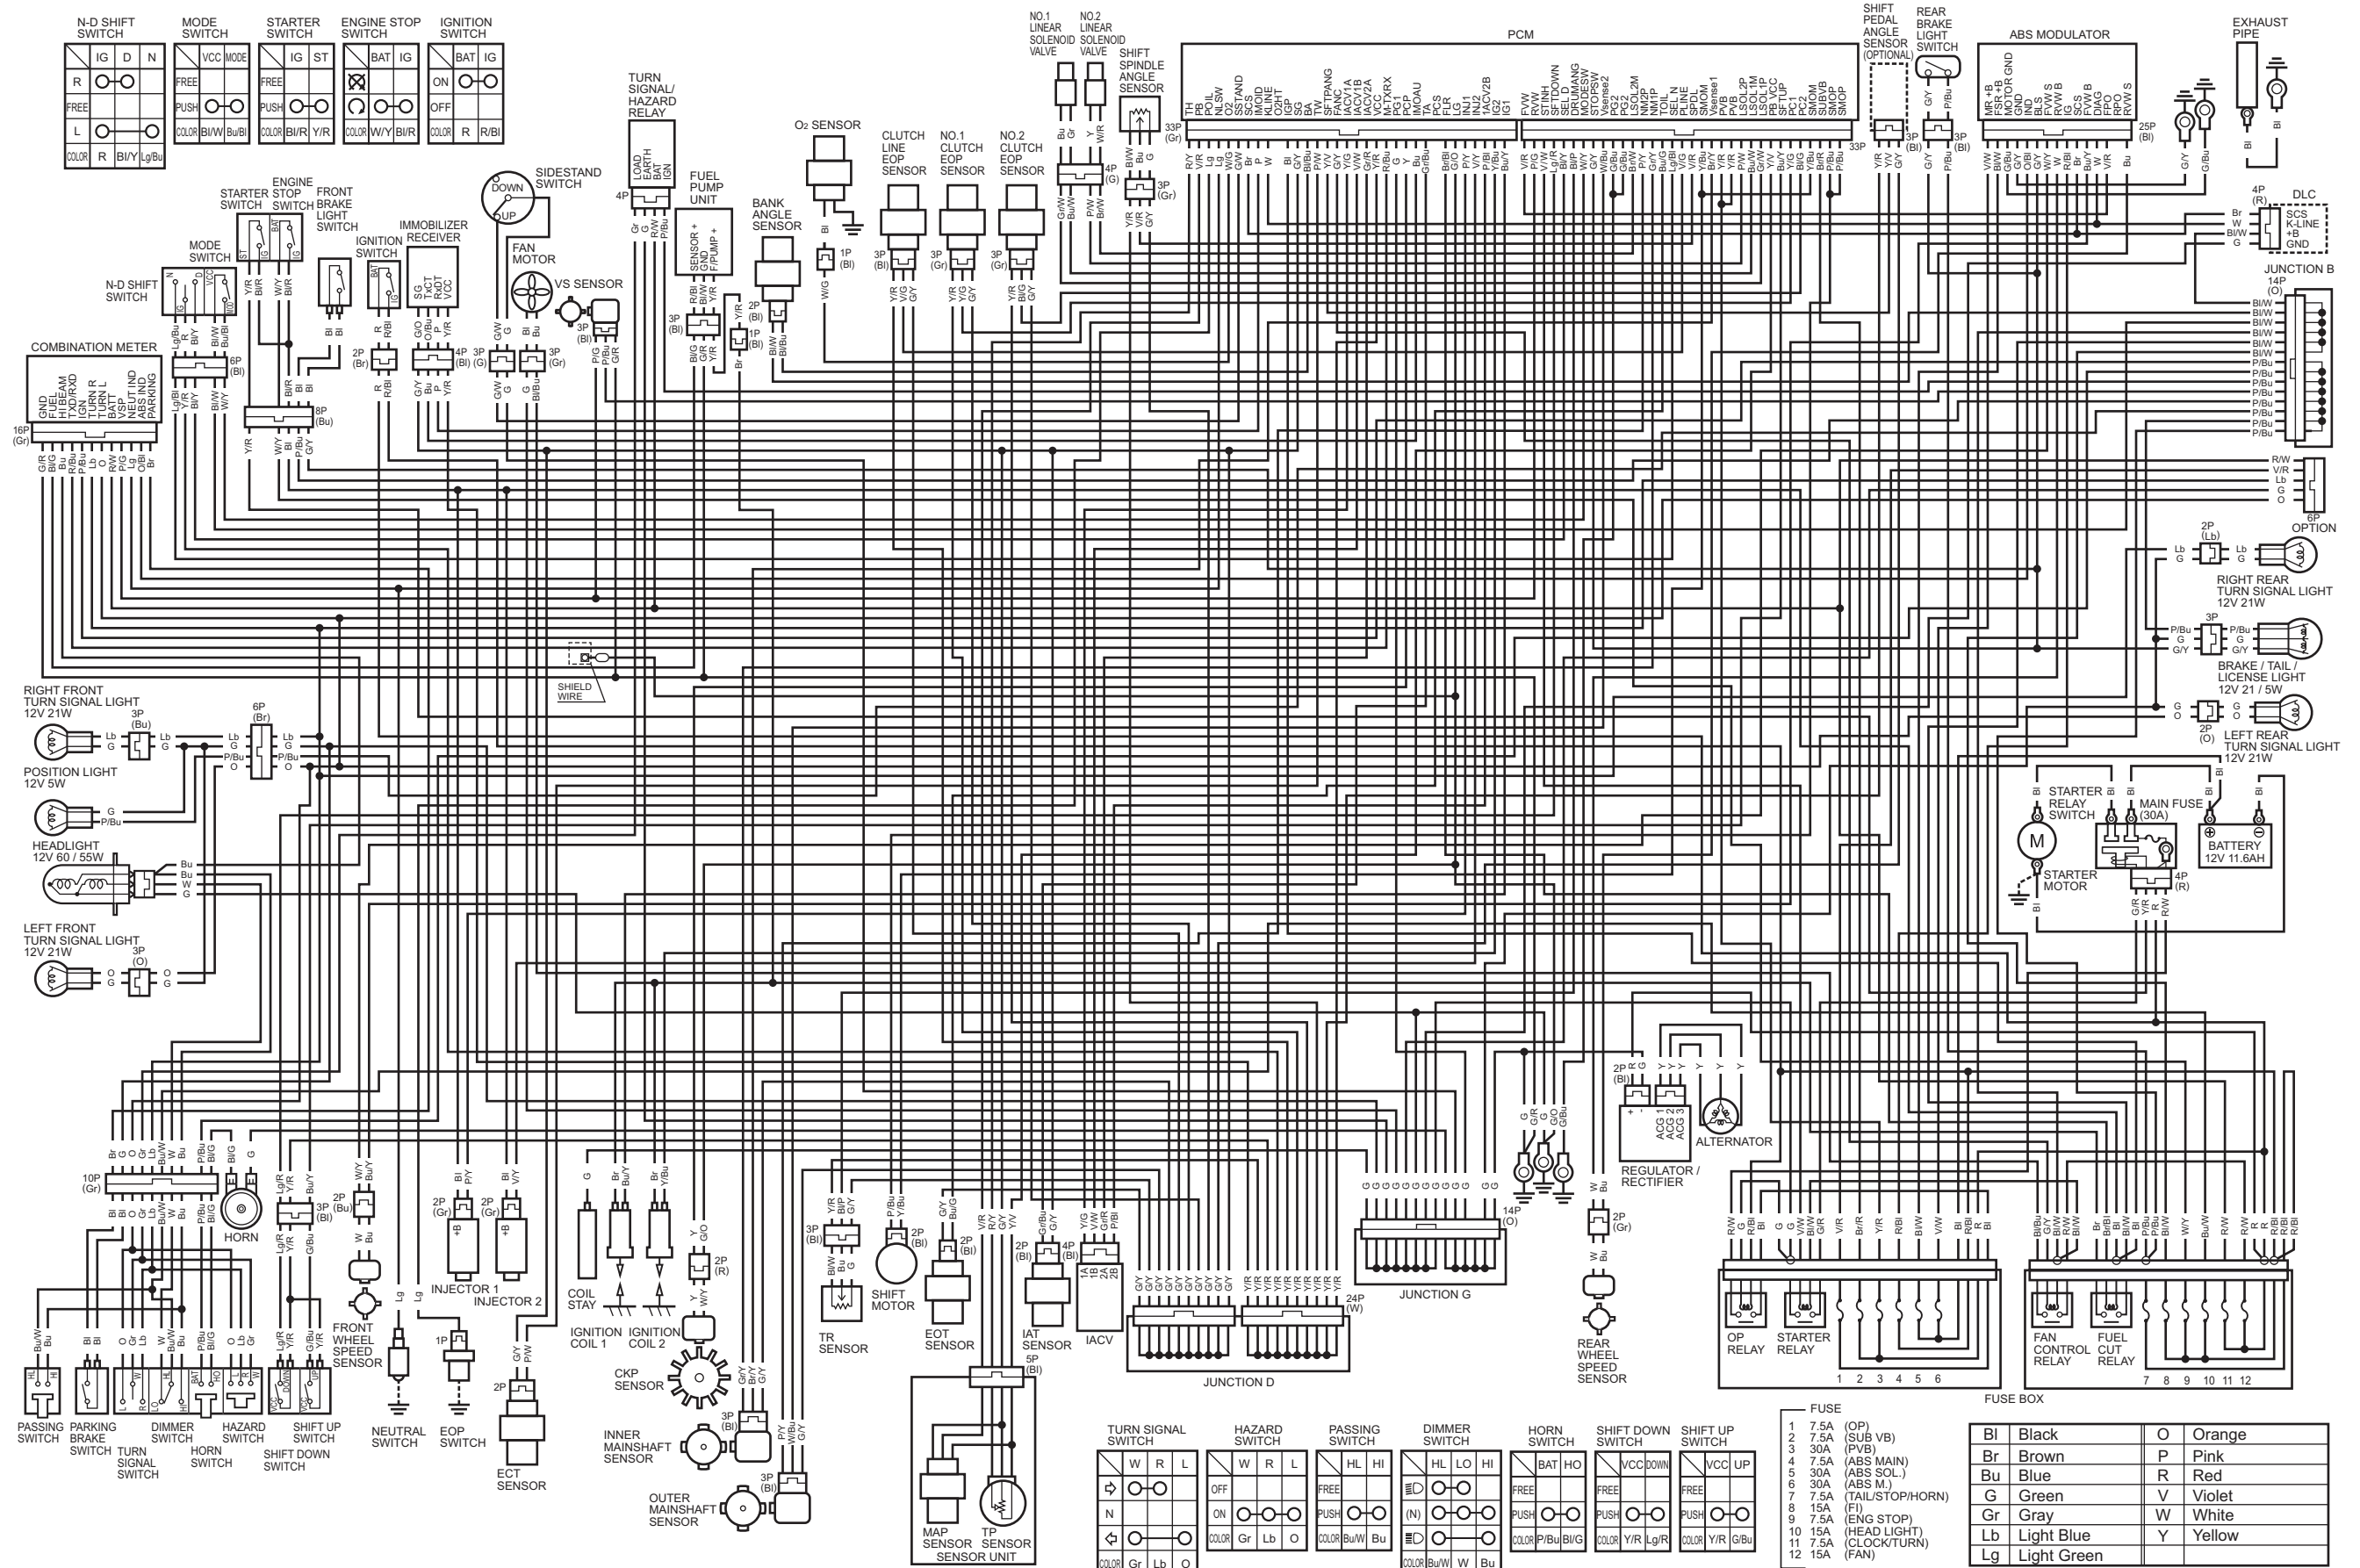

**FUSE**


|    |                       |
|----|-----------------------|
| 1  | 7.5A (OP)             |
| 2  | 7.5A (SUB VB)         |
| 3  | 30A (PVB)             |
| 4  | 7.5A (ABS MAIN)       |
| 5  | 30A (ABS SOL.)        |
| 6  | 30A (ABS M.)          |
| 7  | 7.5A (TAIL/STOP/HORN) |
| 8  | 15A (FI)              |
| 9  | 7.5A (ENG STOP)       |
| 10 | 15A (HEAD LIGHT)      |
| 11 | 7.5A (CLOCK/TURN)     |
| 12 | 15A (FAN)             |

|    |             |   |        |
|----|-------------|---|--------|
| Bl | Black       | O | Orange |
| Br | Brown       | P | Pink   |
| Bu | Blue        | R | Red    |
| G  | Green       | V | Violet |
| Gr | Gray        | W | White  |
| Lb | Light Blue  | Y | Yellow |
| Lg | Light Green |   |        |


| TURN SIGNAL SWITCH | HAZARD SWITCH | PASSING SWITCH | DIMMER SWITCH   | HORN SWITCH     | SHIFT DOWN SWITCH | SHIFT UP SWITCH |
|--------------------|---------------|----------------|-----------------|-----------------|-------------------|-----------------|
| W R L              | OFF           | FREE           | HL LO HI        | FREE            | FREE              | FREE            |
| W R L              | ON            | PUSH           | (N)             | PUSH            | PUSH              | PUSH            |
| COLOR Gr Lb O      | COLOR Gr Lb O | COLOR Bu/W Bu  | COLOR Bu/W W Bu | COLOR P/Bu/Bu G | COLOR Y/R Lg/R    | COLOR Y/R G/Bu  |

# WIRING DIAGRAM

## NC700S

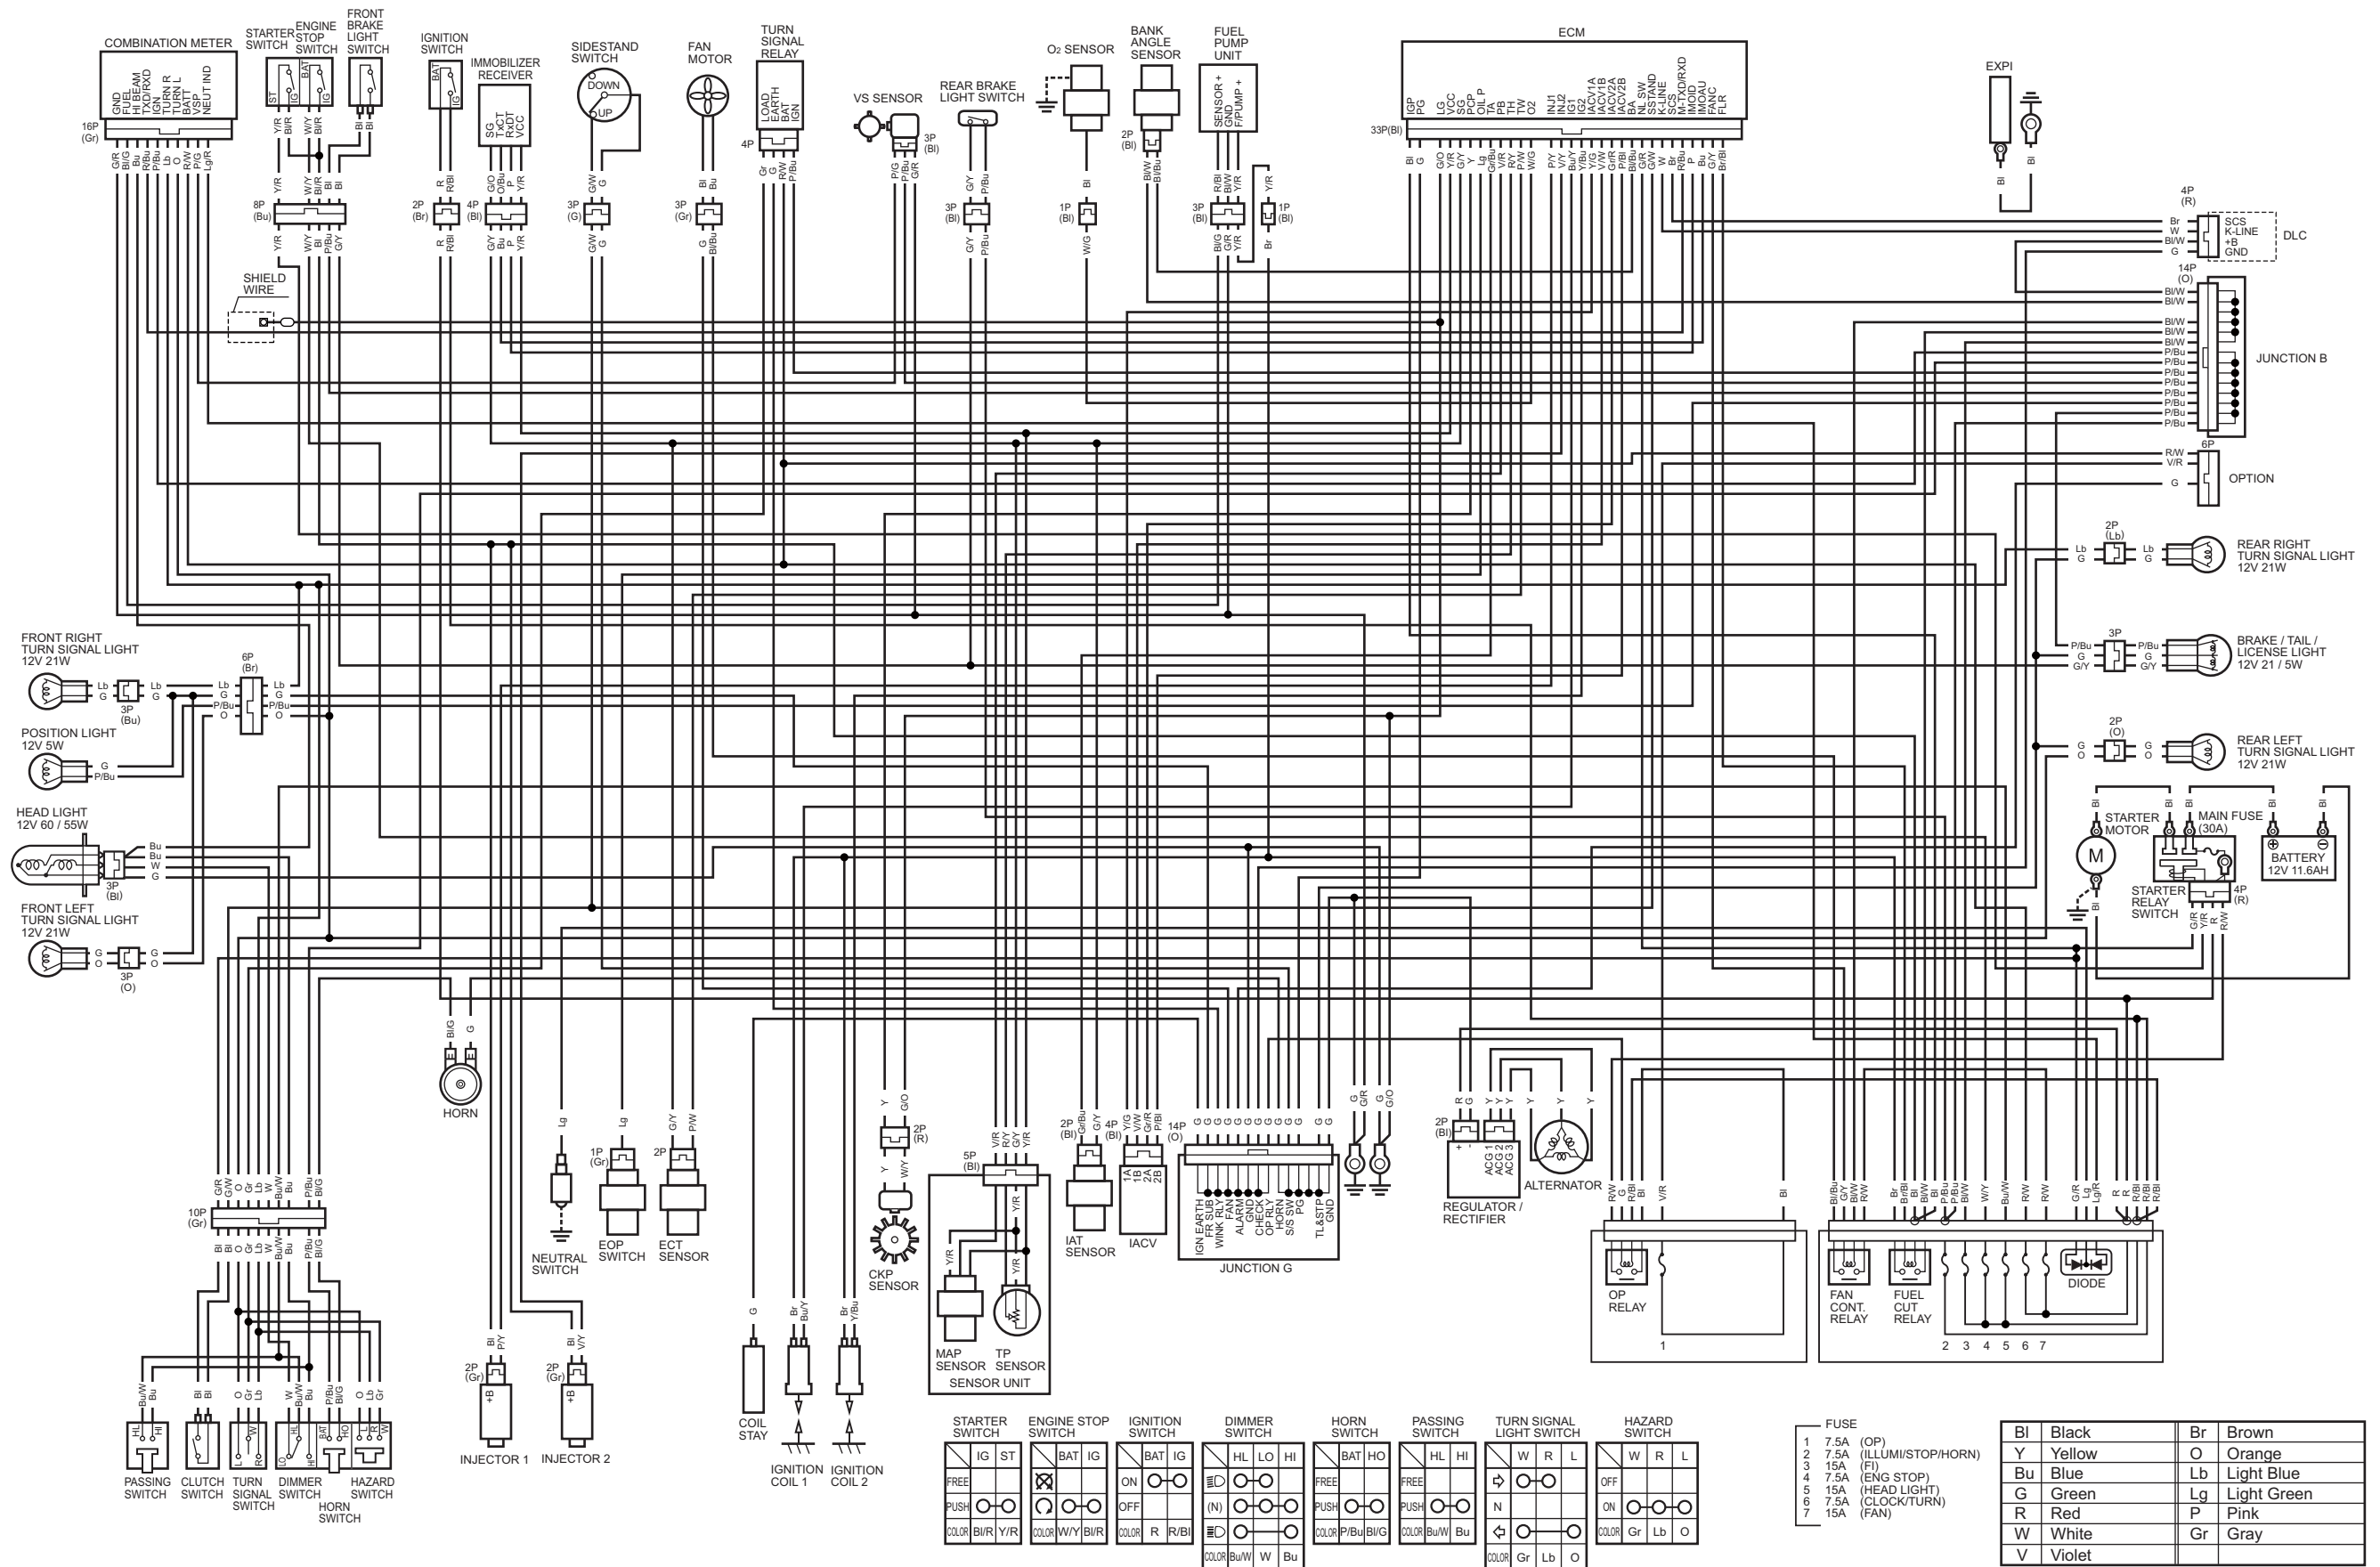

NC700SA

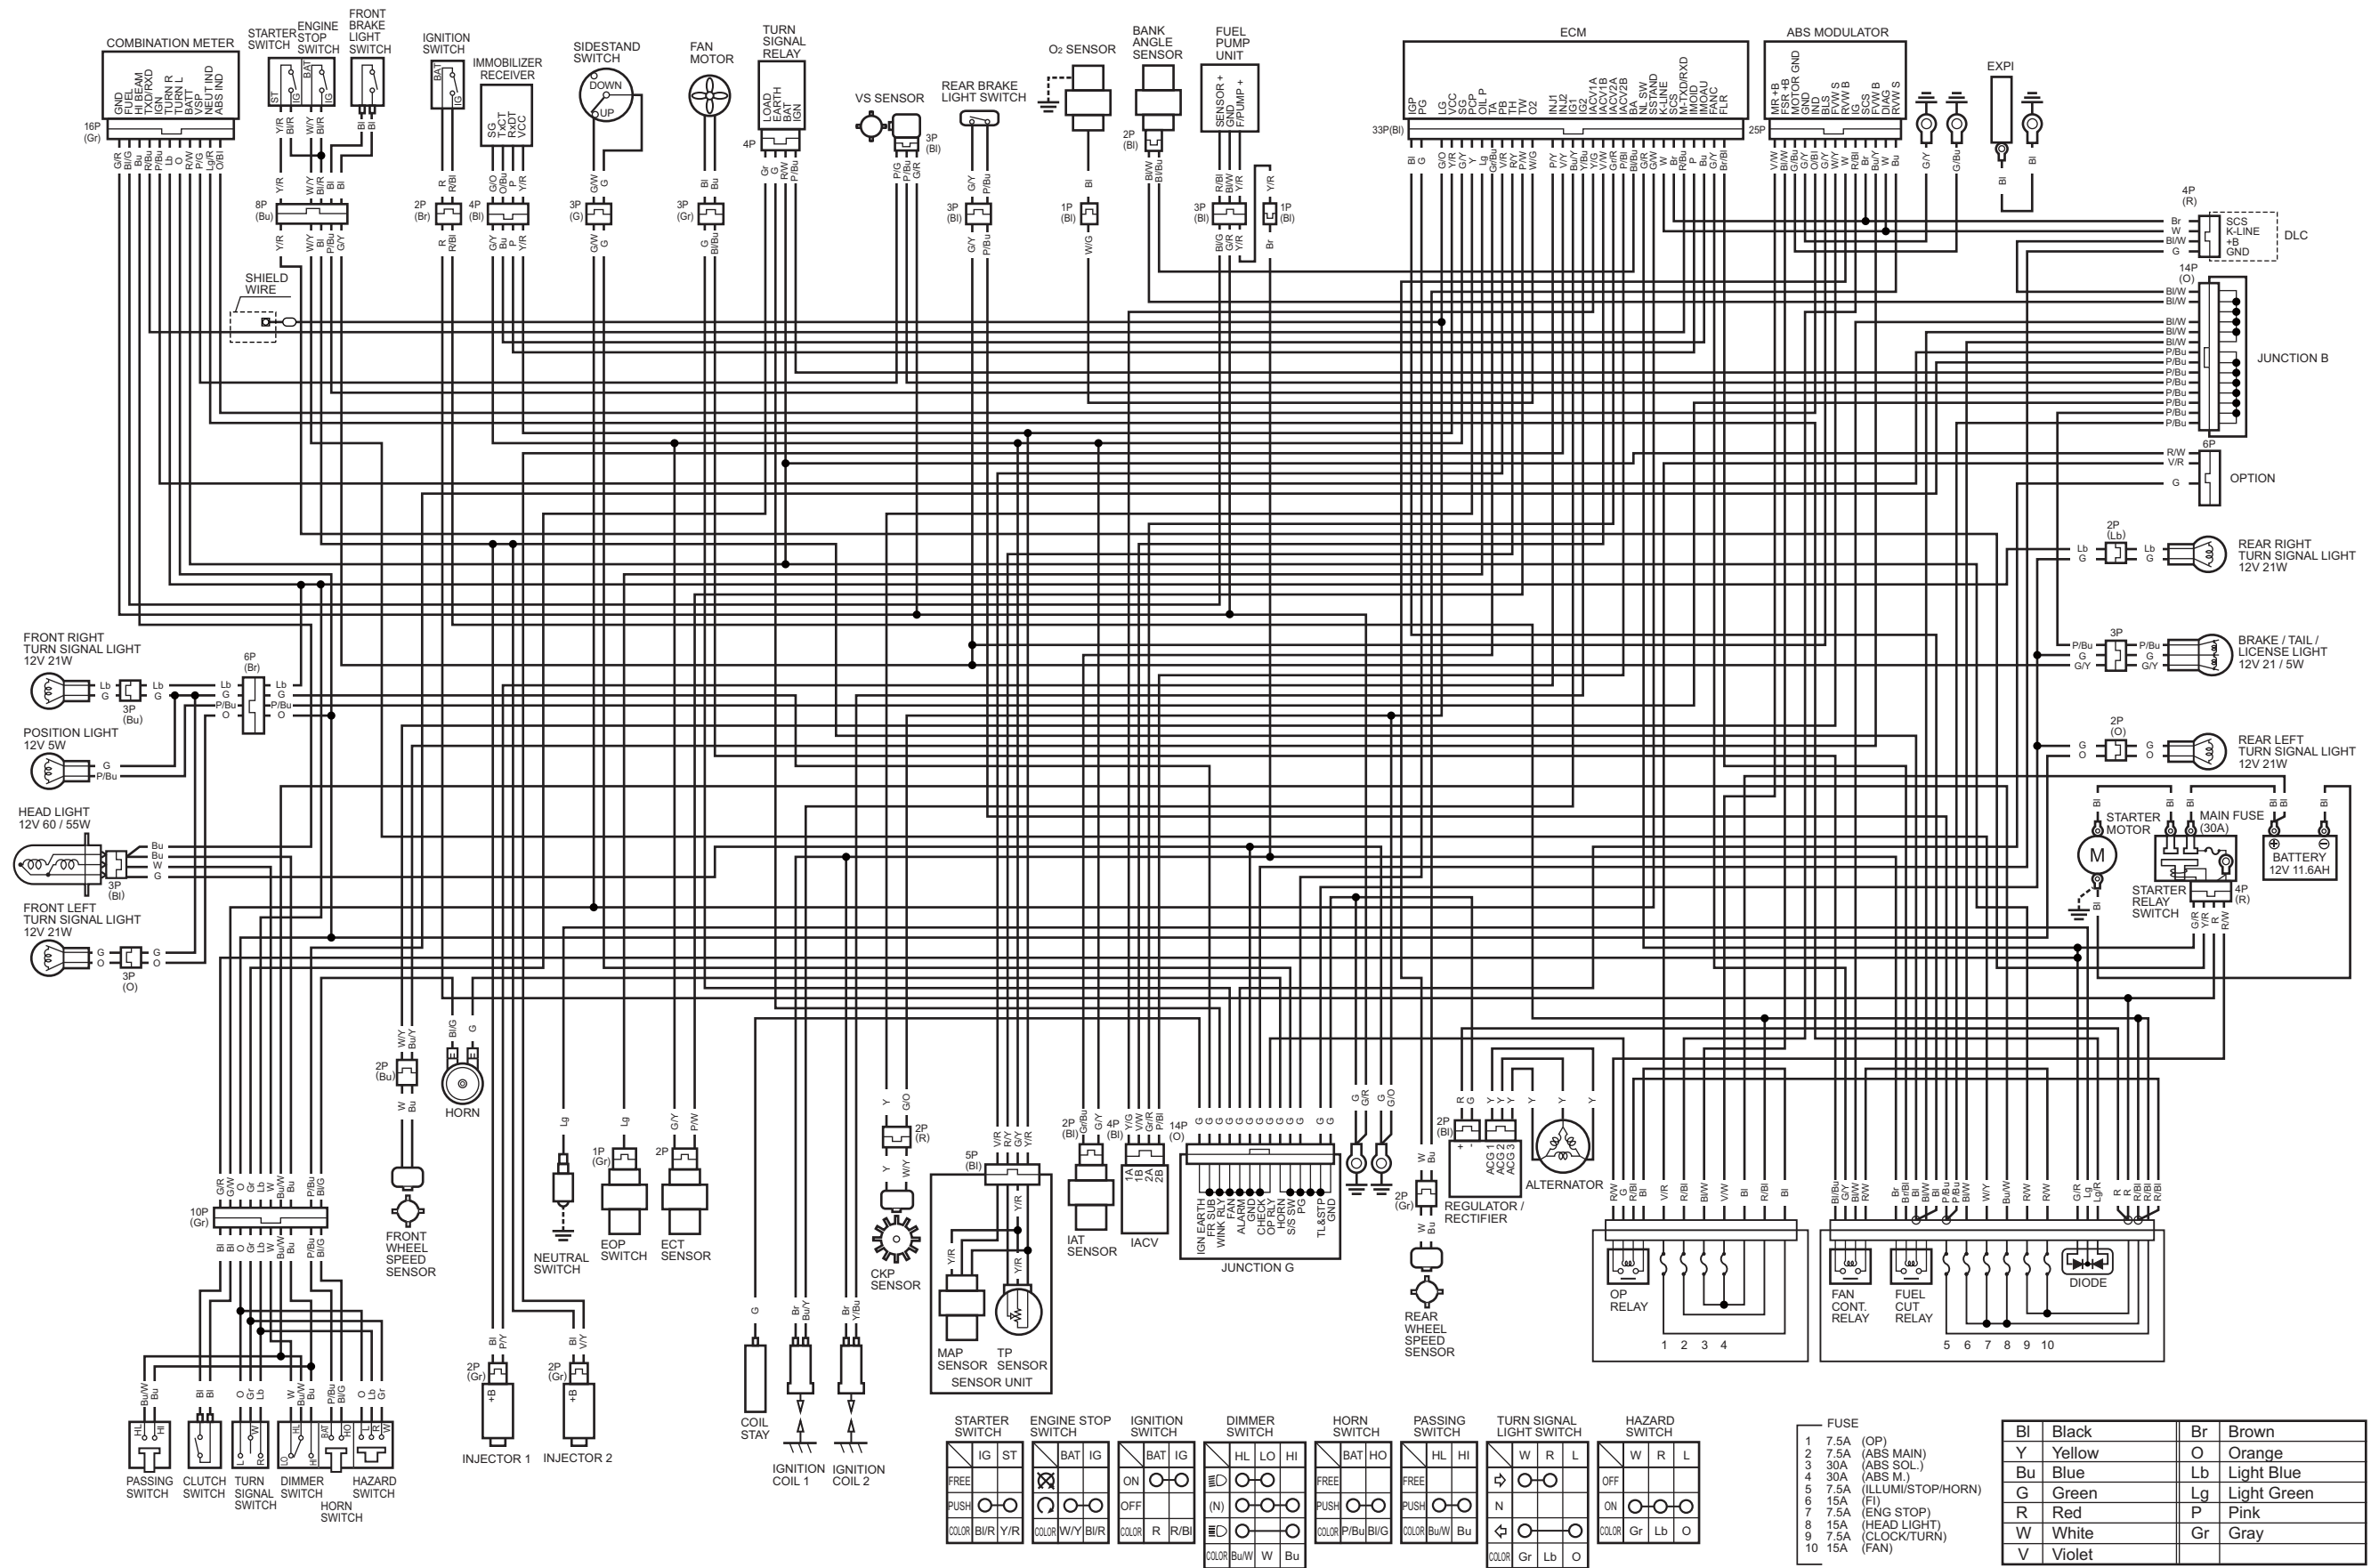



# WIRING DIAGRAM

## NC700SD

