

A Few Words About Safety Service Information

The service and repair information contained in this manual is intended for use by qualified, professional technicians. Attempting service or repairs without the proper training, tools, and equipment could cause injury to you or others. It could also damage the vehicle or create an unsafe condition.

This manual describes the proper methods and procedures for performing service, maintenance, and repairs. Some procedures require the use of specially designed tools and dedicated equipment. Any person who intends to use a replacement part, service procedure or a tool that is not recommended by Honda, must determine the risks to their personal safety and the safe operation of the vehicle.

If you need to replace a part, use genuine Honda parts with the correct part number or an equivalent part. We strongly recommend that you do not use replacement parts of inferior quality.

For Your Customer's Safety

Proper service and maintenance are essential to the customer's safety and the reliability of the vehicle. Any error or oversight while servicing a vehicle can result in faulty operation, damage to the vehicle, or injury to others.

For Your Safety

Because this manual is intended for the professional service technician, we do not provide warnings about many basic shop safety practices (e.g., Hot parts — wear gloves). If you have not received shop safety training or do not feel confident about your knowledge of safe servicing practice, we recommended that you do not attempt to perform the procedures described in this manual.

Some of the most important general service safety precautions are given below. However, we cannot warn you of every conceivable hazard that can arise in performing service and repair procedures. Only you can decide whether or not you should perform a given task.

A WARNING

Improper service or repairs can create an unsafe condition that can cause your customer or others to be seriously hurt or killed.

Follow the procedures and precautions in this manual and other service materials carefully.

A WARNING

Failure to properly follow instructions and precautions can cause you to be seriously hurt or killed.

Follow the procedures and precautions in this manual carefully.

Important Safety Precautions

Make sure you have a clear understanding of all basic shop safety practices and that you are wearing appropriate clothing and using safety equipment. When performing any service task, be especially careful of the following:

- Read all of the instructions before you begin, and make sure you have the tools, the replacement or repair parts, and the skills required to perform the tasks safely and completely.
- Protect your eyes by using proper safety glasses, goggles or face shields any time you hammer, drill, grind, pry or work
 around pressurized air or liquids, and springs or other stored-energy components. If there is any doubt, put on eye protection.
- Use other protective wear when necessary, for example gloves or safety shoes. Handling hot or sharp parts can cause severe burns or cuts. Before you grab something that looks like it can hurt you, stop and put on gloves.
- Protect yourself and others whenever you have the vehicle up in the air. Any time you lift the vehicle, either with a hoist or a jack, make sure that it is always securely supported. Use jack stands.

Make sure the engine is off before you begin any servicing procedures, unless the instruction tells you to do otherwise. This will help aliminate several potential hazards:

- · Carbon monoxide poisoning from engine exhaust. Be sure there is adequate ventilation whenever you run the engine.
- . Burns from hot parts or coolant, Let the engine and exhaust system cool before working in those areas.
- Injury from moving parts. If the instruction tells you to run the engine, be sure your hands, fingers and clothing are out of the way.

Gasoline vapors and hydrogen gases from batteries are explosive. To reduce the possibility of a fire or explosion, be careful when working around gasoline or batteries.

- · Use only a nonflammable solvent, not gasoline, to clean parts.
- Never drain or store gasoline in an open container.
- . Keep all cigarettes, sparks and flames away from the battery and all fuel-related parts.

HOW TO USE THIS MANUAL

This service manual describes the service procedures for the CB900F.

Follow the Maintenance Schedule (Section 3) recommendations to ensure that the vehicle is in peak operating condition.

Performing the first scheduled maintenance is very important. It compensates for the initial wear that occurs during the break-in period.

Sections 1 and 3 apply to the whole motorcycle. Section 2 illustrates procedures for removal/installation of components that may be required to perform service described in the following sections.

form service described in the following sections.

Sections 4 through 19 describe parts of the motorcycle, grouped according to location.

Find the section you want on this page, then turn to the table of contents on the first page of that section.

Most sections start with an assembly or system illustration, service information and troubleshooting for the section. The subsequent pages give detailed procedure.

If you don't know the source of the trouble, go to section 22, Troubleshooting.

Your safety, and the safety of others, is very important. To help you make informed decisions we have provided safety messages and other information throughout this manual. Of course, it is not practical or possible to warn you about all the hazards associated with servicing this vehicle. You must use your own good judgement.

- You will find important safety information in a variety of forms including:

 Safety Labels on the vehicle
- Safety Messages preceded by a safety alert symbol
 \(\Delta\) and one of three signal words, DANGER, WARNING, or CAUTION.

 These signal words mean:
- ▲ DANGER You WILL be KILLED or SERIOUSLY HURT If you don't follow instructions.
- A WARNING You CAN be KILLED or SERIOUSLY HURT If
- A CAUTION You CAN be HURT if you don't follow instructions.
- instructions.

 Instructions how to service this vehicle correctly and safely.

As you read this manual, you will find information that is preceded by a NONCE symbol. The purpose of this message is to help prevent damage to your vehicle, other property, or the environment.

ALL INFORMATION, ILLUSTRATIONS, DIRECTIONS AND SPECIFICATIONS INCLUDED IN THIS PUBLICATION ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF APPROVAL FOR PRINTING, Honds Motor Co., Ltd. RESERVES THE RIGHT TO MAKE CHANGES AT ANY TIME WITHOUT NOTICE AND WITHOUT INCURRING ANY OBLIGATION WHATEVER. NO PART OF THIS PUBLICATION MAY BE REPRODUCED WITHOUT WRITTEN PERMISSION. THIS MANUAL IS WRITTEN FOR PERSONS WHO HAVE ACQUIRED BASIC KNOWLEDGE OF MAINTENANCE ON HONDS MOTOR CYCLES, MOTOR SCOTCHES OR ATVS.

Honda Motor Co., Ltd. SERVICE PUBLICATION OFFICE

CONTENTS

	GENERAL INFORMATION	1
	FRAME/BODY PANELS/EXHAUST SYSTEM	2
	MAINTENANCE	3
	LUBRICATION SYSTEM	4
,	FUEL SYSTEM (Programmed Fuel Injection)	5
RAIL	COOLING SYSTEM	6
IVE	ENGINE REMOVAL/INSTALLATION	7
D DR	CYLINDER HEAD/VALVES	8
E AN	CLUTCH/GEARSHIFT LINKAGE	9
ENGINE AND DRIVE TRAIN	ALTERNATOR/STARTER CLUTCH	10
	CRANKCASE/TRANSMISSION	11
	CRANKSHAFT/PISTON/CYLINDER	12
2	FRONT WHEEL/SUSPENSION/ STEERING	13
CHASSIS	REAR WHEEL/SUSPENSION	14
S	HYDRAULIC BRAKE	15
	BATTERY/CHARGING SYSTEM	16
AL	IGNITION SYSTEM	17
ELECTRICAL	ELECTRIC STARTER	18
ELEC	LIGHTS/METERS/SWITCHES	19
	WIRING DIAGRAMS	20
	TROUBLESHOOTING	21

SYMBOLS

The symbols used throughout this manual show specific service procedures. If supplementary information is required pertaining to these symbols, it will be explained specifically in the text without the use of the symbols.

	Replace the part(s) with new one(s) before assembly.
78	Use the recommended engine oil, unless otherwise specified.
	Use molybdenum oil solution (mixture of the engine oil and molybdenum grease in a ratio of 1:1)
GREASE	Use multi-purpose grease (Lithium based multi-purpose grease NLGI #2 or equivalent
- TOMBH	Use molybdenum disulfide grease (containing more than 3% molybdenum disulfide, NLGI #2 or equivalent. Example: Molykote® BR-2 plus manufactured by Dow Corning U.S.A. Multi-purpose M-2 manufactured by Mitsubishi Oil, Japan
FICMPIN	Use molybdenum disulfide paste (containing more than 40% molybdenum disulfide, NLGI #2 or equivalent. Example: Molykote® G-n Paste manufactured by Dow Corning U.S.A. Honda Moly 60 (U.S.A. only) Rocol ASP manufactured by Rocol Limited, U.K. Rocol Paste manufactured by Sumico Lubricant, Japan
FISH	Use silicone grease.
LOCK	Apply a locking agent. Use a medium strength locking agent unless otherwise specified.
SEAL	Apply sealant.
RUID	Use DOT 4 brake fluid. Use the recommended brake fluid unless otherwise specified.
FORK	Use fork or suspension fluid.

1. GENERAL INFORMATION

SERVICE RULES	1-1	LUBRICATION & SEAL POINTS	1-18
MODEL IDENTIFICATION	1-2	CABLE & HARNESS ROUTING	1-22
SPECIFICATIONS	1-3	EMISSION CONTROL SYSTEMS	1-35
TORQUE VALUES	1-12	EMISSION CONTROL INFORMATION	
TOOLS	1-17	LABELS	1-38

SERVICE RULES


- Use genuine Honda or Honda-recommended parts and lubricants or their equivalents. Parts that don't meet Honda's design specifications may cause damage to the motorcycle.
- 2. Use the special tools designed for this product to avoid damage and incorrect assembly.
- Use only metric tools when servicing the motorcycle. Metric bolts, nuts and screws are not interchangeable with English fasteners.
- 4. Install new gaskets, O-rings, cotter pins, and lock plates when reassembling.
- When tightening bolts or nuts, begin with the larger diameter or inner bolt first. Then tighten to the specified torque diagonally in incremental steps unless a particular sequence is specified.
- 6. Clean parts in cleaning solvent upon disassembly. Lubricate any sliding surfaces before reassembly.
- 7. After reassembly, check all parts for proper installation and operation.
- 8. Route all electrical wires as shown on pages 1-22 through 1-32. Cable and Harness Routing.

MODEL IDENTIFICATION






The engine serial number is stamped on the right side of the upper crankcase.

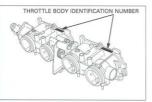


The throttle body identification number is stamped on the intake side of the throttle body as shown.



The Vehicle Identification Number (VIN) is located on the left side of the frame near the steering head.

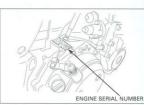

The frame serial number is stamped on the right side of the steering head.

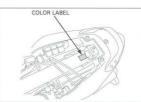

The color label is attached as shown. When ordering color-coded parts, always specify the designated color code.

SPECIFICATIONS

	ITEM	SPECIFICATIONS
DIMENSIONS	Overall length Overall width Overall width Overall width Overall height Footpee height Ground clearance Dry weight Curb weight Except California type California type California type California type California type Maximum weight capacity	2,125 mm (93,7 in) 750 mm (29,5 in) 1,085 mm (42,27 in) 1,480 mm (57,5 in) 795 mm (31,3 in) 345 mm (13,6 in) 145 mm (5,7 in) 145 mm (5,7 in) 145 mg (430 lbs) 195 kg (430 lbs) 219 kg (430 lbs)
FRAME	Frame type Front suspension Front axle travel Front six Eravel Front travel Rear axle travel Front tire sixe Rear tire sixe Rear tire sixe Front tire brand Front brake Rear travel Front brake Rear brake Front brake	Diamond Talescopic fork 19 mm (A.3 in) 19 mm (A.3 in) 19 mm (A.3 in) 128 mm (4.7 in) 128 mm (4.7 in) 128 mm (4.7 in) 129 mm (4.7 in) 129 mm (4.7 in) 129 mm (4.7 in) 120 m 27 i 7 (88W), 120/70 ZR 17 M/C (73W) 180/95 ZR 17 (73W), 180/95 ZR 17 M/C (73W) 180/95 ZR 17 (73W), 180/95 ZR 17 M/C (73W) 180/95 ZR 17 (73W), 180/95 ZR 17 M/C (73W) 180/95 ZR 17 (73W), 180/95 ZR 17 M/C (73W) 180/95 ZR 17 (73W), 180/95 ZR 17 M/C (73W) 180/95 ZR 17 (73W), 180/95 ZR 17 M/C (73W) 180/95 ZR 17 (73W), 180/95 ZR 17 M/C (73W) 180/95 ZR 17 M/C (7
ENGINE	Cylinder arrangement Bore and stroke Displacement Compression ratio Valve train Intake valve closes Exhaust valve opens closes Lubrication system Oil pump type Cooling system Air filtration Engine dry weight Firing order	4 cylinders in-line, inclined 30' from vertical 71.0 X \$8.0 mm (2.80 X 2.28 in) 919 cm' [66.1 cu-sin] 10.8 : 1 1 Chain driven, DOHC 10' 8TDC 30' ABDC 30' ABDC 5' ATDC Forced pressure and wet sump Trochoid Liquid cooled Paper element 68 kg (150 lbs) 1. 2 - 4 - 3

	ITEM	SPECIFICATIONS
CARBURATION	Type Throttle bore	PGM-FI (Programmed Fuel Injection) 36 mm (1.4 in)
DRIVE TRAIN	Clutch system Clutch operation system Transmission Primary reduction Final reduction Gear ratio 1st 2nd 3rd 4th 5th 6th Gearshift pattern	Multi-plate, wet Cable operating Constant mesh, 6-speeds 1.52 (*P60) 2.688 (43/16) 2.688 (43/16) 3.000 (26/13) 1.000 (24/15) 1.388 (26/19) 1.227 (27/22) 1.130 (26/23) Left foot operated return system, 1 – N – 2 – 3 – 4 – 5 – 6
ELECTRICAL	Ignition system Starting system Charging system Regulator/rectifier	Computer-controlled digital transistorized with electric advance Electric starter motor Triple phase output alternator SCR shorted/triple phase, full wave rectification Battog.

LUBRICATION SY	ITEM	STANDARD	SERVICE LIMIT
Engine oil capacity	After draining	3.5 liter (3.7 US qt, 3.1 Imp qt)	OLIVIOL LIMIT
ang an expectity	After draining/filter change	3.6 liter (3.8 US qt, 3.2 Imp qt)	_
	After disassembly	4.4 liter (4.6 US qt, 3.9 Imp qt)	_
After disassembly Recommended engine oil		Pro Honda GN4 or HP4 (without molybdenum additives) 4-stroke oil (USA & Canada), or Honda 4-stroke oil (USA & Canada), or Honda 4-stroke oil (Canada only), or an equivalent motor oil API service classification SG or Higher except oils labeled as energy conserving on the API service label. JASO T903 standard MA Viscosity: SAE 10W-40	_
Oil pressure at oil pressure switch		490 kPa (5.0 kgf/cm², 71 psi) at 6,000 min ⁻¹ (rpm)/(80°C/176°F)	_
Oil pump rotor	Tip clearance	0.15 (0.006)	0.20 (0.008)
	Body clearance	0.15 - 0.22 (0.006 - 0.009)	0.35 (0.014)
	Side clearance	0.02 - 0.07 (0.001 - 0.003)	0.10 (0.004)

FUEL SYSTEM (Programmed Fuel Injection) ITEM		SPECIFICATIONS	
Throttle body identification	Except California type	GQ34C	
number	California type	GQ34B	
Starter valve vacuum differer	nce	2664 Pa (20 mm Hg)	
Base throttle valve for synchr	onization	No.2	
Idle speed		1,200 ± 100 min ⁻¹ (rpm)	
Throttle grip free play		2 - 4 mm (1/16 - 3/16 in)	
Intake air temperature sensor resistance (at 20°C/68°F)		1 – 4 kΩ	
Engine coolant temperature sensor resistance (at 20°C/68°F)		2.3 – 2.6 kΩ	
Fuel injector resistance (at 20	°C/68°F)	11.1 – 12.3 Ω	
PAIR solenoid valve resistance	e (at 20°C/68°F)	20 – 24 Ω	
Cam pulse generator peak vo	Itage (at 20°C/68°F)	0.7 V minimum	
Ignition pulse generator peak	voltage (at 20°C/68°F)	0.7 V minimum	
Manifold absolute pressure at idle		200 – 250 mm Hg	
Fuel pressure at idle		343 kPa (3.5 kgf/cm², 50 psi)	
Fuel pump flow (at 12 V)		256 cm3 (8.7 US oz, 9.0 lmp oz) minimum/10 seconds	

	ITEM	SPECIFICATIONS	
Coolant capacity	Radiator and engine	3.2 liter (3.38 US qt, 2.82 lmp qt)	
	Reserve tank	0.8 liter (0.85 US qt, 0.70 lmp qt)	
Radiator cap relief press	ure	108 - 137 kPa (1.1 - 1.4 kgf/cm², 16 - 20 psi)	
Thermostat	Begin to open	80 - 84 °C (176 - 183 °F)	
	Fully open	95°C (203 °F)	
	Valve lift	8 mm (0.3 in) minimum	
Recommended antifreeze		Pro Honda Coolant or an equivalent high quality ethylene gly col antifreeze containing corrosion protection inhibitors specifically recommended for use in aluminum engines	
Standard coolant concentration		50 - 50% mixture with soft water	

CVLINDER	HEAD/VALVES			Unit: mm (
ITEM			STANDARD	SERVICE LIMIT
Cylinder comp	pression		1,275 kPa (13.0 kgf/cm², 185 psi) at 350 min ⁻¹ (rpm)	
Valve clearand	e	IN	0.16 ± 0.03 (0.006 ± 0.001)	
		EX	0.25 ± 0.03 (0.010 ± 0.001)	_
Camshaft	Cam lobe height	IN	36.040 - 36.280 (1.419 - 1.428)	36.01 (1.42)
		EX	35.800 - 36.040 (1.409 - 1.419)	35.77 (1.41)
	Runout			0.05 (0.002)
	Oil clearance		0.020 - 0.062 (0.008 - 0.0025)	0.10 (0.004)
Valve lifter	Valve lifter O.D.		25.978 - 25.993 (1.0228 - 1.0233)	25.97 (1.022)
	Valve lifter bore I.D.		26.010 - 26.026 (1.0240 - 1.0246)	26.04 (1.025)
Valve,	Valve stem O.D.	IN	4.475 - 4.490 (0.1762 - 0.1768)	4.465 (0.1758)
valve guide		EX	4.465 - 4.480 (0.1758 - 0.1764)	4.455 (0.1754)
	Valve guide I.D.	IN/EX	4.500 - 4.512 (0.1772 - 0.1776)	4.540 (0.1787)
	Stem-to-guide clearance	IN	0.010 - 0.037 (0.0004 - 0.0015)	0.075 (0.0030)
		EX	0.020 - 0.047 (0.0008 - 0.0019)	0.085 (0.0033)
	Valve guide projection above	IN	14.5 - 14.7 (0.57 - 0.58)	_
	cylinder head	EX	14.8- 15.0 (0.58 - 0.59)	
	Valve seat width	IN/EX	0.90 - 1.10 (0.035 - 0.043)	1.5 (0.06)
Valve spring f	ree length	IN	40.9 (1.61)	40.08 (1.578)
		EX	40.9 (1.61)	40.08 (1.578)
Cylinder head	warpage		_	0.10 (0.004)

CLUTCH/GEARSHIFT LINKAGE		STANDARD	SERVICE LIMIT	
Clutch lever t	Clutch lever free play		10 - 20 (3/8 - 13/16)	_
Clutch		Spring free length	48.8 (1.92)	47.5 (1.87)
		Disc thickness	2.92 - 3.08 (0.115 - 0.121)	2.6 (0.10)
	Plate warpage		_	0.30 (0.012)
Clutch outer	guide	I.D.	24.994 - 25.004 (0.9840 - 0.9844)	25.01 (0.985)
		O.D.	34.975 - 34.991 (1.3770 - 1.3776)	34.97 (1.377)
Mainshaft O.	D. at clutch outer guid	ie	24.980 - 24.993 (0.9835 - 0.9840)	24.96 (0.983)
Shift fork,	1.D.		12.000 - 12.021 (0.4724 - 0.4733)	12.03 (0.474)
fork shaft	Claw thickness		5.93 - 6.00 (0.233 - 0.236)	5.9 (0.23)
	Shift fork shaft O.	D.	11.957 - 11.968 (0.4707 - 0.4712)	11,95 (0,470)

Init: mm (in)

Unit: mm (in)

ALTERNATOR (CTARTER CLUTCH	Onit; min (
ALTERNATOR/STARTER CLUTCH ITEM	STANDARD	SERVICE LIMIT	
Starter driven gear boss O.D.	51.699 - 51.718 (2.0354 - 2.0361)	51.684 (2.0348)	

ITEM		STANDARD	SERVICE LIMIT	
Cylinder	I.D.		71.000 - 71.015 (2.7953 - 2.7963)	71.10 (2.795)
	Out of round		_	0.10 (0.004)
	Taper			0.10 (0.004)
	Warpage		_	0.05 (0.002)
iston, piston	Piston mark direction	Ú.	"IN" mark facing toward the intake side	_
ings	Piston O.D.		70.965 - 70.985 (2.7939 - 2.7947)	70.90 (2.791)
	Piston O.D. measurement point		15 mm (0.6 in) from bottom of skirt	
	Piston pin bore I.D.		17.002 - 17.008 (0.6694 - 0.6696)	17.03 (0.670)
	Piston pin O.D.		16.993 - 17.000 (0.6690 - 0.6693)	16.98 (0.669)
	Piston-to-piston pin clearance		0.002 - 0.015 (0.0001 - 0.0006)	_
	Piston ring-to-ring groove clearance	Тор	0.030 - 0.065 (0.0012 - 0.0026)	0.08 (0.003)
		Second	0.015 - 0.045 (0.0006 - 0.0018)	0.07 (0.003)
	Piston ring end gap	Тор	0.28 - 0.38 (0.011 - 0.015)	0.5 (0.02)
		Second	0.40 - 0.55 (0.016 - 0.022)	0.7 (0.03)
		Oil (side rail)	0.2 - 0.7 (0.01 - 0.03)	0.9 (0.04)
Cylinder-to-piston clearance		0.015 - 0.050 (0.0006 - 0.0020)	_	
Connecting rod small end I.D.		17.016 - 17.034 (0.6699 - 0.6706)	17.04 (0.671)	
Connecting rod-to-piston pin clearance		0.016 - 0.041 (0.0006 - 0.0016)	_	
Crankpin oil clearance		0.030 - 0.052 (0.0012 - 0.0020)	0.06 (0.002)	

	ITEM		STANDARD	SERVICE LIMIT
Crankshaft	Side clearance		0.05 - 0.20 (0.002 - 0.008)	0.30 (0.012)
	Runout			0.30 (0.012)
	Main journal oil cl	learance	0.017 - 0.035 (0.0007 - 0.0014)	0.04 (0.002)
Transmission	Gear I.D.	M5, M6	28.000 - 28.021 (1.1024 - 1.1032)	28.04 (1.104)
		C1	24.000 - 24.021 (0.9449 - 0.9547)	24.04 (0.946)
		C2, 3, 4	31.000 - 31.025 (1.2205 - 1.2215)	31.04 (1.222)
	Bushing O.D.	M5, 6	27.959 - 27.980 (1.1007 - 1.1016)	27.94 (1.100)
		C2	30.955 - 30.980 (1.2187 - 1.2197)	30.93 (1.218)
		C3, 4	30.950 - 30.975 (1.2185 - 1.2195)	30.93 (1.218)
	Bushing I.D.	M5	24.985 - 25.006 (0.9837 - 0.9845)	25.02 (0.985)
		C2	27.985 - 28.006 (1.1018 - 1.1026)	28.02 (1.103)
	Gear-to-bushing clearance	M5, 6	0.020 - 0.062 (0.0008 - 0.0024)	0.10 (0.004)
		C2 0.020 - 0.070 (0.000		0.11 (0.004)
		C3, 4	0.025 - 0.075 (0.0010 - 0.0030)	0.11 (0.004)
	Mainshaft O.D.	M5	24.967 - 24.980 (0.9830 - 0.9835)	24.96 (0.983)
		Clutch outer guide	24.980 - 24.993 (0.9835 - 0.9840)	24.96 (0.983)
	Countershaft O.D.	C2	27.967 - 27.980 (1.1011 - 1.1016)	27.96 (1.101)
	Bushing-to-shaft	M5	0.005 - 0.039 (0.0002 - 0.0015)	0.08 (0.003)
	clearance	C2	0.005 0.030 (0.0003 0.0015)	0.00 (0.000)

GENERAL INFORMATION

PROINT WHEEL	SUSPENSION/STEERING -	STANDARD	SERVICE LIMIT	
HEW		STANDARD	SERVICE LIVITI	
Minimum tire tread	depth	_	1.5 (0.06)	
Cold tire pressure Driver only		250 kPa (2.50 kgf/cm², 36 psi)	_	
	Driver and passenger	250 kPa (2.50 kgf/cm², 36 psi)	_	
Axle runout			0.2 (0.01)	
Wheel rim runout	Radial	_	2.0 (0.08)	
	Axial	_	2.0 (0.08)	
Wheel balance weigl	ht	_	60 g (2.1 oz) max.	
Fork	Spring free length	282.3 (11.1)	276.7 (10.89)	
	Tube runout	_	0.20 (0.008)	
	Recommended fork fluid	Pro Honda Suspension Fluid SS-8	_	
	Fluid level	155 (6.1)		
Fluid capacity		463 ± 2.5 cm ³ (15.7 ± 0.08 US oz, 16.3 ± 0.09 lmp oz)	-	
Steering head bearing	ig pre-load	10 - 15 N·m (1.0 - 1.5 kgf)		

ITEM			STANDARD	SERVICE LIMIT	
Minimum tire tread depth			<u></u>	2.0 (0.08)	
Cold tire pressure	Driver only		290 kPa (2.90 kgf/cm², 42 psi)		
	Driver and passe	enger	290 kPa (2.90 kgf/cm², 42 psi)	<u> </u>	
Axle runout		_	0.2 (0.01)		
Wheel rim runout	Radial		_	2.0 (0.08)	
	Axial		_	2.0 (0.08)	
Wheel balance weigl	nt		_	60 g (2.1 oz) max.	
Drive chain Size/link DID		DID	DID50VA8-114LE		
	RK		RK50HFOZ5-114LE	_	
	Slack		30 - 40 (1.2 - 1.6)	_	

Unit: mm (in)

	ITEM		STANDARD	SERVICE LIMIT
Front	Specified brake fluid		DOT 4	
	Brake disc thickness		4.3 - 4.7 (0.17 - 0.19)	3.5 (0.14)
	Brake disc runout		_	0.3 (0.012)
	Master cylinder I.D.		14.000 - 14.043 (0.5512 - 0.5529)	14.055 (0.5533)
	Master piston O.D.		13.957 - 13.984 (0.5495 - 0.5506)	13.945 (0.5490)
	Caliper cylinder I.D.	A	30.230 - 30.280 (1.1902 - 1.1921)	30.29 (1.193)
		В	27.000 - 27.050 (1.0630 - 1.0650)	27.06 (1.065)
	Caliper piston O.D.	A	30.148 - 30.198 (1.1869 - 1.1889)	30.14 (1.187)
		В	26.918 - 26.968 (1.0598 - 1.0617)	26.91 (1.059)
Rear	Specified brake fluid		DOT 4	_
	Brake disc thickness		4.8 - 5.2 (0.19 - 0.20)	4.0 (0.16)
	Brake disc runout		_	0.30 (0.012)
	Master cylinder I.D.		12.700 - 12.743 (0.49999 -0.5017)	12.755 (0.5022)
	Master piston O.D.		12.657 - 12.684 (0.4983 - 0.4994)	12.645 (0.4978)
	Caliper cylinder I.D.		38.180 - 38.230 (1.053 - 1.505)	38.24 (1.506)
	Caliper piston O.D.		38.098 - 38.148 (1.4999 - 1.5019)	38.09 (1.500)

BATTERY/CHARGING SYSTEM

DATIENT	ITEM	IVI	SPECIFICATIONS	
Battery	Capacity		12V - 8.6 Ah	
	Current leakage		1.2 mA max.	
	Voltage (20°C/68°F)	Fully charged	13.0 - 13.2 V	
		Needs charging	Below 12.3 V	
Alternator	Charging current	Normal	1.2 A/5 - 10 h	
	Quick		5.0 A/1 h	
	Capacity		0.38 kW/5,000 min ⁻¹ (rpm)	
	Charging coil resista	nce (20°C/68°F)	0.1 – 1.0 Ω	

- IGNITION SYSTEM -

ITEM		SPECIFICATIONS		
Spark plug	NGK	CR8EH-9 (Standard) / CR9EH-9 (For high speed running)		
	DENSO	U24FER9 (Standard) / U27FER9 (For high running)		
Spark plug gap		0.8 - 0.9 mm (0.03 - 0.04 in)		
Ignition coil peak voltage		100 V minimum		
Ignition pulse generator peak voltage		0.7 V minimum		
Ignition timing ("F" mark)		8° BTDC at idle		

2.1 - 2.6 k Ω

0.62 - 0.76 k Ω

	ITEM		STANDARD	SERVICE LIMIT		
Starter mo	otor brush length		12.0 - 13.0 (0.47 - 0.51)	4.5 (0.18)		
LIGHTO	(NASTEDO (CIA/ITOLISO					
LIGHTS	METERS/SWITCHES		SPECIFICATIO	ONS		
Bulbs	Headlight	Hi	12V - 60 V	V		
		Lo	12V - 55 V	V		
	Brake/tail light		12V – 21/5 W X 2			
	Turn signal light	Front	12V - 23/8 W X 2			
		Rear	12V – 21 V	1		
	License light		12V – 5 W			
	Instrument light		12V – 1.7 W X 3			
	Turn signal indicator		12V – 1.7 W X 2			
	High beam indicator		LED			
	Neutral indicator		LED			
	Oil pressure indicator		LED			
	PGM-FI warning indica	ator	LED			
	Fuel reserve indicator		LED			
use	Main fuse		30 A			
	PGM-FI fuse		20 A			
Sub fuse		20 A X 1, 10A X 4				
Tachomet	er peak voltage		10.5 V minim	num		

80 °C

120 °C

ECT sensor resistration

TORQUE VALUES

FASTENER TYPE	TORQUE N-m (kgf-m, lbf-ft)	FASTENER TYPE	TORQUE N·m (kgf·m, lbf·ft)
5 mm hex bolt and nut 6 mm hex bolt and nut 8 mm hex bolt and nut 10 mm hex bolt and nut 12 mm hex bolt and nut 12 mm hex bolt and nut	5 (0.5, 3.6) 10 (1.0, 7) 22 (2.2, 16) 34 (3.5, 25) 54 (5.5, 40)	5 mm screw 6 mm screw 6 mm flange bolt (8 mm head, small flange) 6 mm flange bolt (8 mm head, large flange) 6 mm flange bolt (10 mm head) and nut 8 mm flange bolt and nut 10 mm flange bolt and nut	4 (0.4, 2.9) 9 (0.9, 6.5) 10 (1.0, 7) 12 (1.2, 9) 12 (1.2, 9) 26 (2.7, 20) 39 (4.0, 29)

Torque specifications listed below are for important fasteners.

Others should be tightened to standard torque values listed above.

NOTES: 1. Apply sealant to the threads.

2. Apply a locking agent to the threads.

Stake

4. Apply oil to the threads and flange surface.

5. U-nut.

6. ALOC bolt/screw: replace with a new one.

7. Apply grease to the threads.

8. Apply molybdenum disulfide oil to the threads and seating surface

9. CT bolt


- ENGINE -


ITEM	QTY	THREAD DIA. (mm)	TORQUE N•m (kgf•m, lbf•ft)	REMARKS
MAINTENANCE:				
Spark plug	4	10	12 (1,2, 9)	
Timing hole cap	1	45	18 (1.8, 13)	NOTE 7
Engine oil filter cartridge	1	20	26 (2.7, 20)	NOTE 4
Engine oil drain bolt	1	12	29 (3.0, 22)	110124
LUBRICATION SYSTEM:			20 (010) 22)	
Oil main gallery sealing bolt (20mm)	1	20	29 (3.0, 22)	NOTE 2
Oil pump cover bolt	1	6	8 (0.8, 5.8)	NOTE 9
Oil cooler bolt (filter boss)	1 -	20	64 (6.5, 47)	NOTE 4
FUEL SYSTEM (Programmed Fuel Injection):			04 (0.0, 47)	HOIL
ECT (Engine Coolant Temperature)/thermo sensor	1	12	23 (2.3, 17)	
Throttle body insulator band screw	8		See page 1-14	
Starter valve lock nut	4	5 10 3 6	2 (0.18, 1.3)	
Starter valve cable stay screw	4	3	1 (0.09, 0.7)	
Pressure regulator mounting bolt	2	6	10 (1.0, 7)	
COOLING SYSTEM:	-		10 (11.0, 1)	
Water pump cover flange bolt	2	6	12 (1.2, 9)	NOTE 9
ENGINE MOUNTING:	-		12 (1.2, 0)	140123
Drive sprocket special bolt	1	10	54 (5.5, 40)	

─ ENGINE (Cont'd) —

ITEM	QTY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
CYLINDER HEAD/VALVES:			2000 NO. 100 N	
Cylinder head mounting bolt/washer	10	9	48 (4.9, 35)	NOTE 8
Camshaft holder flange bolt	20	6	12 (1.2, 9)	NOTE 4
Cylinder head cover bolt	6	6	10 (1.0, 7)	
Breather plate flange bolt	3	6	12 (1.2, 9)	NOTE 2, 9
PAIR reed valve cover SH bolt	4	6	12 (1.2, 9)	NOTE 9
Cam sprocket flange bolt	4	7	20 (2.0, 14)	NOTE 2
Cam pulse generator rotor flange bolt	2	6	12 (1.2, 9)	NOTE 2
Cylinder head stud bolt (exhaust pipe stud bolt)	8	8	See page 1-14	
CLUTCH/GEARSHIFT LINKAGE:				
Clutch center lock nut	1	22	128 (13.1, 95)	NOTE 3, 4
Clutch spring bolt	5	6	12 (1.2, 9)	
Oil pump driven sprocket bolt	1	6	15 (1.5, 11)	NOTE 2
Shift drum center socket bolt	1	8	23 (2.3, 17)	NOTE 2
Shift drum stopper arm pivot bolt	1	6	12 (1.2, 9)	
Gearshift spindle return spring pin	1	8	22 (2.2, 16)	
ALTERNATOR/STARTER CLUTCH:				
Alternator stator socket bolt	4	6	12 (1.2, 9)	
Starter clutch outer socket bolt	6	8	16 (1.6, 12)	NOTE 2
Flywheel flange bolt	1	10	103 (10.5, 76)	NOTE 4
Starter wire clamp flange bolt	1	6	10 (1.0, 7)	NOTE 9
CRANKCASE/TRANSMISSION:				
Mainshaft bearing set plate bolt	2	6	12 (1.2, 9)	NOTE 2
Gearshift drum bearing/fork shaft set bolt	2	6	12 (1.2, 9)	NOTE 2
Crankcase bolt (Main journal)	10	9	27 (2.8, 20)	NOTE 8
Crankcase bolt	1	10	39 (4.0, 29)	
Crankcase bolt	14	6	12 (1.2, 9)	
Crankcase bolt	2	8	24 (2.4, 17)	
CRANKSHAFT/PISTON/CYLINDER:				
Connecting rod nut	8	8	34 (3.5, 25)	NOTE 4
IGNITION SYSTEM:	100			
Ignition pulse generator rotor cover bolt	6	8	10 (1.0, 7)	
Ignition pulse generator rotor special bolt	1	10	59 (6.0, 43)	
ELECTRIC STARTER:				
Starter motor terminal nut	1	6	12 (1.2, 9)	
LIGHTS/METERS/SWITCHES:	1	(5)	//ID 1/2001/05	
Oil pressure switch	1	PT 1/8	12 (1.2, 9)	NOTE 1
Oil pressure switch wire terminal bolt/washer	1	4	2 (0.2, 1.4)	
Neutral switch	1	10	12 (1.2, 9)	

GENERAL INFORMATION

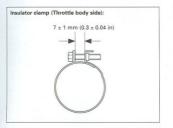

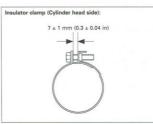



ITEM	QTY	THREAD DIA. (mm)	TORQUE N•m (kgf•m, lbf•ft)	REMARKS
FRAME BODY PANELS/EXHAUST SYSTEM:			Commence with	
Exhaust pipe joint flange nut	8	6	20 (2.0, 14)	
Exhaust pipe mounting nut	1	8	27 (2.8, 20)	
Muffler mounting flange bolt	2	8	27 (2.8, 20)	
Muffler band flange bolt	3	8	27 (2.8, 20)	
UEL SYSTEM (Programmed Fuel Injection):				
Fuel tube banjo bolt (fuel tank side)	1	12	22 (2.2, 16)	
Fuel tube sealing nut (throttle body side)	1	12	22 (2.2, 16)	
Fuel pump mounting nut	6	6	12 (1.2, 9)	
FUEL PUMP MOUNTING NUT				
COOLING SYSTEM: Cooling fan mounting nut	1	5	3 (0.27, 2.0)	NOTE 2
Fan motor mounting nut	3	5	5 (0.5, 3.6)	
ENGINE MOUNTING:	1000			
Front engine hanger bolt/nut	2	10	50 (5.1, 37)	See page 7-1
Rear upper engine hanger bolt/nut	1	10	50 (5.1, 37)	
Rear lower engine hanger bolt/nut	1	10	50 (5.1, 37)	
Gear shift linkage bolt	1	5	20(2.0,14)	
FRONT WHEEL/SUSPENSION/STEERING:				
Handlebar weight mounting screw	2	6	10 (1.0, 7)	NOTE 6
Front brake disc bolt	12	6	20 (2.0, 14)	NOTE 6
Front axle bolt	1	14	59 (6.0, 43)	
Front axle holder flange bolt	4	8	22 (2.2, 16)	
Front brake hose clamp flange bolt (left front)	1	6	12 (1.2, 9)	
Front brake hose clamp flange bolt (right front)	1	6	12 (1.2, 9)	
Fork socket bolt	2	8	20 (2.0, 14)	NOTE 2
Fork bolt	2	39	22 (2.2, 16)	
Fork top bridge pinch socket bolt	2	8	22 (2.2, 16)	
Fork bottom bridge pinch flange bolt	2	10	39 (4.0, 29)	70000
Steering bearing adjusting nut	1	26	25 (2.5, 18)	See page 13-2
Steering bearing adjusting nut lock nut	1	26		
Steering stem nut	1	24	103 (10.5, 76)	
Front brake hose clamp bolt (steering stem)	1	6	10 (1.0, 7)	

- FRAME (Cont'd) -

ITEM	QTY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
REAR WHEEL/SUSPENSION:				
Rear brake disc bolt	. 4	8	42 (4.3, 31)	NOTE 6
Final driven sprocket nut	5	12	108 (11.0, 80)	NOTE 5
Rear axle nut	1	18	93 (9.5, 69)	NOTE 5
Rear shock absorber upper mounting bolt	1	10	42 (4.3, 31)	
Rear shock absorber upper mounting nut	1	10	42 (4.3, 31)	NOTE 5
Drive chain slider flange bolt	2	6	9 (0.9, 6.5)	NOTE 6
Swingarm pivot nut	1	18	93 (9.5, 69)	
HYDRAULIC BRAKE:				
Front master cylinder reservoir cap screw	2	4	1 (0.1, 0.7)	
Front brake lever pivot bolt	1	6	1 (0.1, 0.7)	
Front brake lever pivot nut	1	6	6 (0.6, 4.3)	
Front brake light switch screw	1	4	1 (0.1, 0.7)	
Front master cylinder mounting bolt	2	6	12 (1.2, 9)	
Front brake caliper assembly torx bolt	8	8	32 (3.3, 24)	NOTE 2
Front brake caliper mounting flange bolt	4	8	30 (3.1, 22)	NOTE 6
Rear master cylinder push rod lock nut	1	8	17 (1.7, 12)	
Rear master cylinder mounting bolt	2	6	10 (1.0, 7)	
Rear brake caliper bracket bolt	1	8	23 (2.3, 17)	
Rear brake caliper pin bolt	1	12	27 (2.8, 20)	
Pad pin	3	10	17 (1.7, 12)	
Pad pin plug	1	10	3 (0.3, 2.2)	
Brake hose oil bolt	3	10	34 (3.5, 25)	
Brake caliper bleeder valve	3 3 4	8	6 (0.6, 4.3)	
Step holder mounting bolt		8	27 (2.8, 20)	
Rear master cylinder hose joint screw LIGHTS/METERS/SWITCHES:	2	6	10 (1.0, 7)	
Side stand switch bolt	1	6	10 (1,0, 7)	NOTE 6
Ignition switch mounting bolt	2	8	25 (2.5, 18)	10120000000
Fan motor switch	1	16	18 (1.8, 13)	NOTE 1
OTHERS:			,, 107	
Side stand pivot bolt	1	10	10 (1.0, 7)	
Side stand pivot lock nut	1	10	39 (4.0, 29)	


TOOLS

NOTES: 1. Equivalent commercially available.

- 2. Alternative tool.
- 3. Newly designed tool.
- 4. Not available in U.S.A

DESCRIPTION	TOOL NUMBER	REMARKS	REF. SEC.
Fuel pressure gauge	07406-0040003	NOTE 2: 07406-0040002	5
Oil pressure gauge set	07506-3000000	NOTE 1	4
Oil pressure gauge attachment	07510-MJ10100	NOTE 1	4
Clutch center holder	07724-0050002	NOTE 1	9
lywheel holder	07725-0040000	NOTE 1	10
Rotor puller	07733-0020001	NOTE 2: 07933-3950000	10
Attachment, 32 X 35 mm	07746-0010100	NOTE 2. 07933-3930000	9. 14
Attachment, 37 X 40 mm	07746-0010100		9, 14
Attachment, 42 X 47 mm	07746-0010200		13, 14
Attachment, 52 X 55 mm	07746-0010300		13, 14
Attachment, 28 X 30 mm	07746-0010400		14
Attachment, 28 X 30 mm	07746-0010800		14
nner driver C			11
	07746-0030100		
Attachment, 25 mm I.D.	07746-0030200		12
Outer driver, 37mm	07ZMD-MBW0200		14
Pilot, 17 mm	07746-0040400		9, 14
ilot, 20 mm	07746-0040500		13, 14
Pilot, 35 mm	07746-0040800		9
Pilot, 28 mm	07746-0041100		14
Bearing remover shaft	07GGD-0010100		13, 14
Bearing remover head, 20 mm	07746-0050600		13, 14
Driver	07749-0010000		9, 13, 14
/alve spring compressor	07757-0010000		8
/alve seat cutter	WOOD ON A COURT OF THE PARTY OF	NOTE 1	8
Seat cutter, 27.5 mm (45° IN/EX)	07780-0010200		
Flat cutter, 27 mm (32° EX)	07780-0013300		
Flat cutter, 30 mm (32' IN)	07780-0012200		
Interior cutter, 24 mm (60° IN/EX)	07780-0010600		
Cutter holder, 4.5 mm	07781-0010600		
Snap ring pliers	07914-SA50001		15
Steering stem socket	07916-3710101	NOTE 2: 07916-3710100	13
Ball race remover set	07953-MJ10000		13
- Attachment, 40 mm	07953-MJ10100		
- Driver shaft	07953-MJ10200		
Ball race remover, 40 x 245L	07953-4250002		
Ball race remover, 44.5 mm	07946-3710500		
Steering stem driver	07946-MB00000		13
ork seal driver weight	07947-KA50100		13
ork seal driver attachment	07946-KA40200		13
Valve spring compressor attachment	07959-KM30101		8
Oil filter wrench	07HAA-PJ70100		3
Peak voltage adaptor	07HGJ-0020100	NOTE 2	5, 17, 19
out voitage adaptor	071100 0020100	NOTE 3: Peak voltage tester	8
		(U.S.A. only)	
Tappet hole protector	07HMG-MR70002	(O.O.A. Olly)	
Drive chain tool set	07HMH-MR10103	NOTE 3: 07HMH-MR1010B or	3
Silve chant tool set	3711WH 1-WH 10 103	07HMH-MR1010C	3
		(U.S.A. only)	
/alve guide driver	07HMD-ML00101	(U.S.A. Only)	8
/alve guide driver /alve guide reamer, 4.508 mm	07HMH-ML00101		8
Compression gauge attachment	07RMJ-MY50100	NOTE 1	8
nspection adaptor	07KMZ-MBW0101	NOTET	20
nspection adaptor ECM test harness	07XMZ-MBW0101 07YMZ-0010100	Two required	5
/alve guide driver	07743-0020000	Iwo required	8
valve guide driver Driver shaft B	07/43-0020000 07964-MB00200		
		110.41	12
Christie battery chrger	MC1012/2	U.S.A. only	17

LUBRICATION & SEAL POINTS

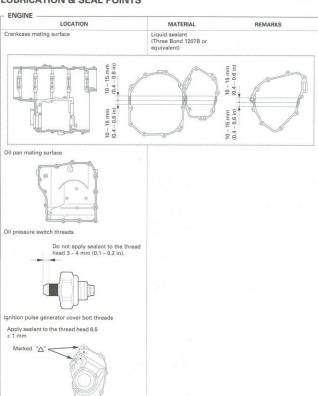

ENGINE (Cont'd)

LOCATION	MATERIAL	REMARKS
Ignition pulse generator grommet ECT (engine coolant temperature sensor) threads Cam pulse generator rotor boil threads Cower crankcase sealing boil threads Cylinder head semi-circular cut-out APPLIED POSITION	Sealant	Crankcase mating surface Coating width: 6.5 ± 1 mm
Main journal bearing surface Piston pin sliding surface Connecting root bearing surface Connecting root small end linner surface Crankshaft thrust surface Crankshaft thesisjournals and thrust surface Valve stem (valve guide sliding surface) Valve litter outer sliding surface) Clutch outer/primary driven gear sliding surface Clutch outer/primary driven gear sliding surface Clutch outer/primary driven gear sliding surface Clutch outer guide sliding surface M3/4, CS, CS shifter gear (shift fork grooves) Starter reduction gear shaft outer surface	Molybdenum disulfide oil (a mixture of 1/2 engine oil and 1/2 molybdenum disulfide grease	
Piston ring sliding area Oil strainer packing Clutch disc surface Strainer on-way clutch sliding surface Connecting rod nut threads Flywheel boilt threads and seating surface Main journal 8 mm boilt threads and seating surface (after removing anti-rust oil additive) Clutch center lock nut threads Oil filter cartridge threads and O-ring Camshath holder boilt threads and seating surface Cam chain tensioner, tensioner collar seating surface Each bearing Each O-ring Other rotating area and sliding surface	Engine oil	


GENERAL INFORMATION


ENGINE (Cont'd)


LOCATION	MATERIAL	REMARKS
Timing hole cap threads Each oil seal lip	Multi-purpose grease	
Lower crankcase sealing bott threads Cylinder head cover breather plate bolt threads Cam pulse generator rotor bolt threads Starter one-way clutch outer bolt threads Shift drum bearing set plate bolt threads Mainshaft bearing set plate bott threads Cam sprocket bolt threads Shift drum center bolt threads Spindle plate tightening bolt threads Spindle plate tightening bolt threads Oli filter boss threads	Locking agent	Coating width: 6.5 ± 1 mm


FRAME -


LOCATION	MATERIAL	REMARKS	
Seat catch hook sliding area Front wheel dust seal lips Rear wheel dust seal lips Clutch lever pivot both sliding area Rear brake pedal pivot sliding area Gearshift pedal pivot Slide stand pivot Steering head bearing sliding surface Steering head bearing sliding surface Steering head bearing sliding surface Swingarm pivot bearings Swingarm pivot bearings Shock absorber needle bearings Shock absorber dust seal lips Shock absorber dust seal lips	Multi-purpose grease		
Throttle cable A, B outer inside Clutch cable outer inside	Cable lubricant		
Handlebar grip rubber inside	Honda bond A, Honda Hand Grip Cement (U.S.A. only or equivalent)		
Steering bearing adjustment nut threads	Engine oil		
Front brake lever-to-master piston contacting area Front brake lever pivot. Rear master brake master piston-to-push rod contacting area Brake caliper dust seals Rear brake caliper pion boot inside.	Silicone grease		
Brake master piston and cups Brake caliper piston and piston seals	DOT 4 brake fluid		
Fork cap O-ring Fork dust seal and oil seal lips	Pro Honda Suspension Fluid SS-8		
Rear brake reservoir hose joint screw threads Front brake caliper assembly bolt threads Rear brake caliper pin bolt threads Front fork socket bolt threads	Locking agent		

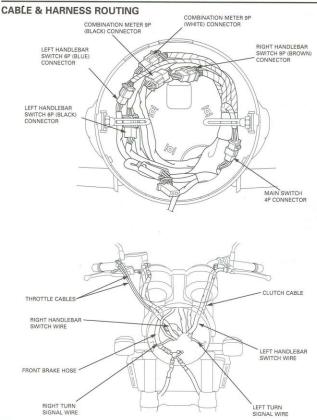


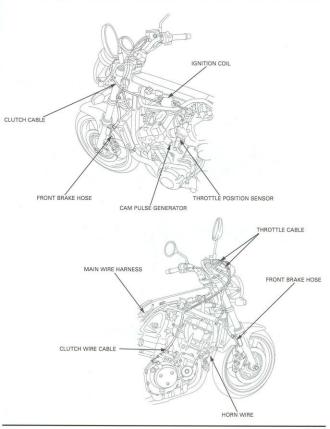


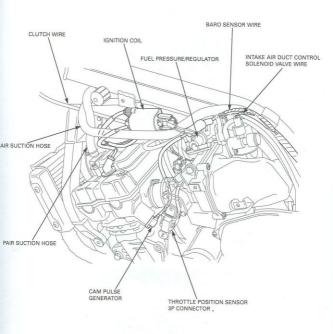


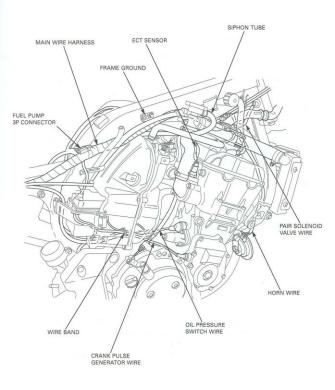


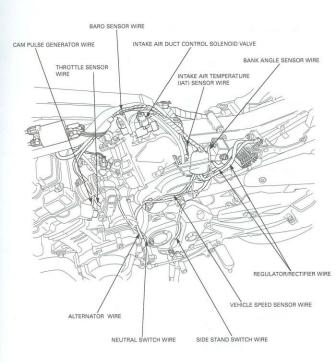


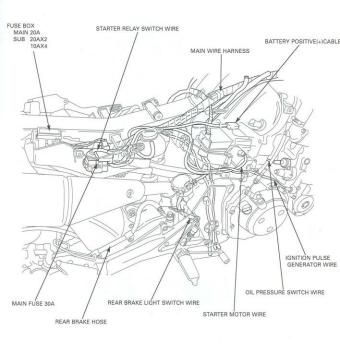


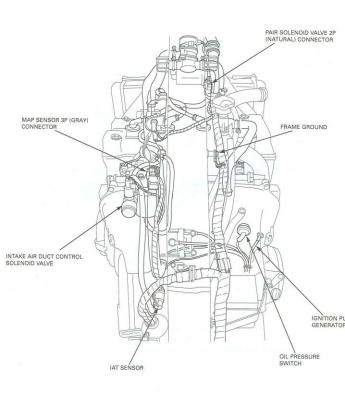


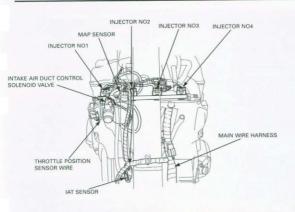


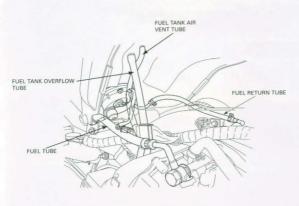

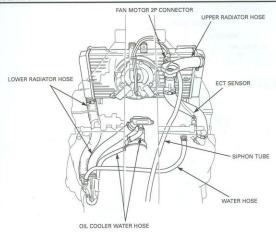


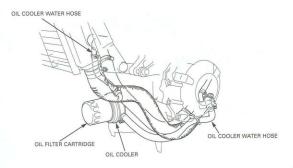


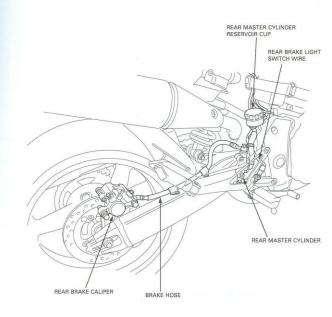

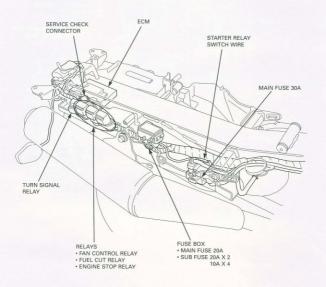


California type only

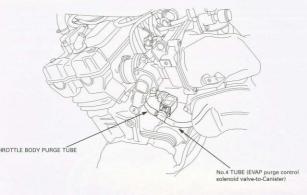

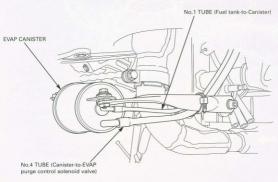

California type only

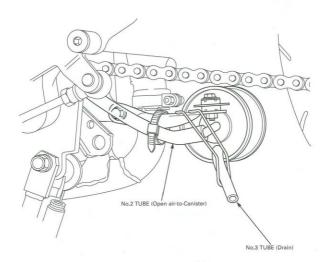

EMISSION CONTROL SYSTEMS


SOURCE OF EMISSIONS

The combustion process produces carbon monoxide and hydrocarbons. Control of hydrocarbons is very important because, under certain conditions, they react to form photochemical smog when subjected to sunlight. Carbon monoxide does not react in the same way, but it is toxic.

Honda Motor Co., Ltd. utilizes lean injection settings as well as other systems, to reduce carbon monoxide and hydrocarbons.

CRANKCASE EMISSION CONTROL SYSTEM

The engine is equipped with a closed crankcase system to prevent discharging crankcase emissions into the atmosphere. Blow-by gas is returned to the combustion chamber through the air cleaner and throttle body.

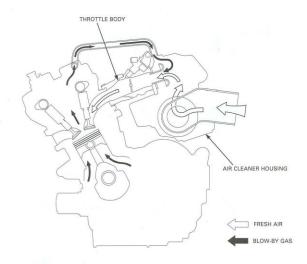

EXHAUST EMISSION CONTROL SYSTEM (SECONDARY AIR SUPPLY SYSTEM)


The exhaust emission control system is composed of a lean fuel injection setting, and no adjustments should be made except idle speed adjustment with the throttle stop screw. The exhaust emission control system is separate from the crankcase emission control system.

The exhaust emission control system consists of a secondary air supply system that introduces filtered air into the exhaust gases in the exhaust port. Fresh air is drawn into the exhaust port by the function of the PAIR (Pulse Secondary Air Injection) control valve.

This charge of fresh air promotes burning of the unburned exhaust gases and changes a considerable amount of hydrocarbons and carbon monoxide into relatively harmless carbon dioxide and water vapor.

The read valve prevents reverse air flow through the system. The PAIR control valve is operated by the solenoid valve. The solenoid valve is controlled by the PGM-FI unit, and the fresh air passage is opened/closed according to the running condition (ECTI/AITP/MAP sensor and engine revolution).


No adjustments to the secondary air supply system should be made, although periodic inspection of the components is recommended.

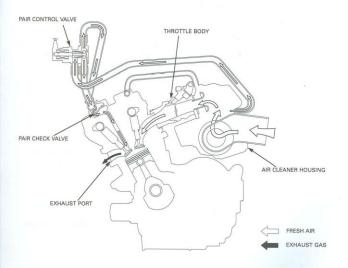

EVAPORATIVE EMISSION CONTROL SYSTEM (CALIFORNIA TYPE ONLY)

This model complies with California Air Resources Board evaporative emission requirements.

Fuel vapor from the fuel tank is routed into the evaporative emission (EVAP) canister where it is absorbed and stored while the engine is stopped. When the engine is running and the evaporative emission (EVAP) purge control solenoid valve is open, fuel vapor in the EVAP canister is drawn into the engine through the throttle body.

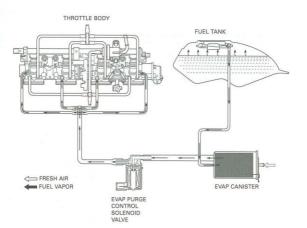

NOISE EMISSION CONTROL SYSTEM

TAMPERING WITH THE NOISE CONTROL SYSTEM IS PROHIBITED: Local law prohibits the following acts or the causing therefr. (1) The removal or rendering inoperative by any person, other than for purposes of maintenance, repair or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use; (2) the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

AMONG THOSE ACTS PRESUMED TO CONSTITUTE TAMPERING ARE THE ACTS LISTED BELOW:


- Removal of, or puncturing of the muffler, baffles, header pipes or any other component which conducts exhaust gases.
 Removal of, or puncturing of any part of the intake system.
- 3. Lack of proper maintenance.
- Replacing any moving parts of the vehicle, or parts of the exhaust or intake system, with parts other then those specified by the manufacturer.

EMISSION CONTROL INFORMATION LABELS (U.S.A. ONLY)

An Emission Control Information Label is located on the main frame as shown. It gives base tune-up spec-

Refer to page 3-15 for fuel tank opening.


The fuel tank must be lifted up to read it.

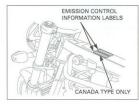


VACUUM HOSE ROUTING DIAGRAM LABEL (CALIFORNIA TYPE ONLY)


The Vacuum Hose Routing Diagram Label is on the main frame as shown.

The fuel tank must be lifted up to read it. Refer to page 3-15 for fuel tank opening.

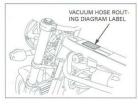

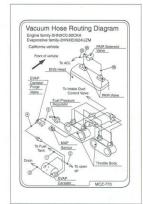

BODY PANEL LOCATIONS

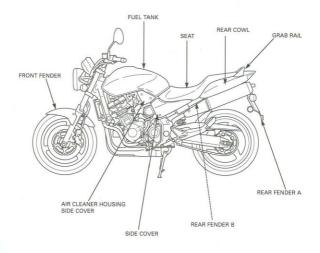

2. FRAME/BODY PANELS/EXHAUST SYSTEM

BODY PANEL LOCATIONS	2-0	REAR COWL	2-3
SERVICE INFORMATION	2-1	FRONT FENDER	2-3
TROUBLESHOOTING	2-1	REAR FENDER A	2-4
SEAT	2-2	REAR FENDER B	2-4
SIDE COVER	2-2	MUFFLER/EXHAUST PIPE	2-5
AIR CLEANER HOUSING SIDE CO	OVER 2-2		

SERVICE INFORMATION

GENERAL

- · Work in a well ventilated area. Smoking or allowing flames or sparks in the work area or where gasoline is stored can cause a fire or explosion.
- · This section covers removal and installation of the body panels and exhaust system.
- · Serious burns may result if the exhaust system is not allowed to cool before components are removed or serviced.
- · Always replace the exhaust pipe gaskets after removing the exhaust pipe from the engine.

TORQUE VALUES

Exhaust pipe joint flange nut	20 N·m (2.0 kgf·m, 14 lbf·ft)
Exhaust pipe mounting bolt	27 N·m (2.8 kgf·m, 20 lbf·ft)
Exhaust pipe band bolt	27 N·m (2.8 kgf·m, 20 lbf·ft)
Muffler band flange bolt	27 N·m (2.8 kgf·m, 20 lbf·ft)
Muffler mounting bolt	27 N·m (2.8 kgf·m, 20 lbf·ft)

TROUBLESHOOTING

Excessive exhaust noise

- · Broken exhaust system
- · Exhaust gas leak Poor performance

- · Deformed exhaust system
- · Exhaust gas leak
- · Clogged muffler

SEAT

REMOVAL


Unhook the seat with the ignition key.

Pull the seat back and remove it.

INSTALLATION

Align the seat hooks with the frame hooks and push the seat forward.

Push the seat down until it locks.

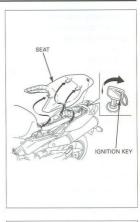

SIDE COVER

REMOVAL

Remove the seat (page 2-2).

Remove the side cover bolt.

Remove the front tab from the fuel tank and remove the rear tab from the grommet of the frame.

Remove the side cover.

Installation is in the reverse order of removal.



AIR CLEANER HOUSING SIDE COVER

REMOVAL/INSTALLATION

Remove the socket bolts and air cleaner housing side cover.

Installation is in the reverse order of removal.



REAR COWL


REMOVAL/INSTALLATION

Remove the seat and side cover (page 2-2).

Remove the tail/brake light 3P connector. Remove the caps from the socket bolts. Remove the four socket bolts and grab rail.

Remove the two trim clips and socket bolts. Remove the rear cowl by pulling it back.

Installation is in the reverse order of removal.

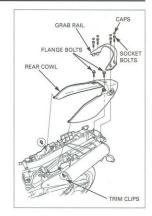


FRONT FENDER

REMOVAL/INSTALLATION

Remove the brake hose clamp bolts and reflectors. Remove the front fender mounting socket bolts/nuts and flange bolts. Remove the front fender.

Installation is in the reverse order of removal.

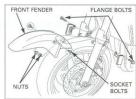

REAR FENDER A


REMOVAL/INSTALLATION

Remove the rear cowl (page 2-3).

Remove the following:

- R./L. turn signal light 2P connector.
- License light 2P connector.

Remove the socket bolts/nuts and flange bolts. Remove the rear fender A Installation is in the reverse order of removal.

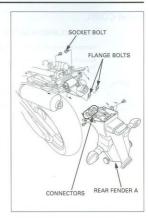

REAR FENDER B

REMOVAL/INSTALLATION

Remove the rear fender A (see upper).

- Remove the following: - Rear shock absorber reserve tank
- Starter relay switch
- Fuse box
- Fan control relay
- PGM-FI/IGN Fuel cut relay
 - Engine stop relay

 - Turn signal relay
 - PGM-FI/IGN unit/Engine control module(ECM)

Do not let the


hana free.

unit/Engine con-

trol module(ECM)

Remove the socket bolts and flange bolts. Remove the rear fender B from the frame.

Installation is in the reverse order of removel.

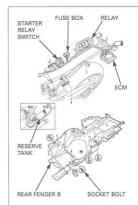

MUFFLER/EXHAUST PIPE

MUFFLER

REMOVAL


Remove the rear cowl (page 2-3).

Remove the socket bolt and remove the front muffler protector by pulling it forward.


Loosen the muffler band bolt.

Remove the muffler mounting bolt and washer.

Remove the muffler.

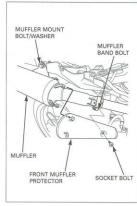

DISASSEMBLY/ASSEMBLY

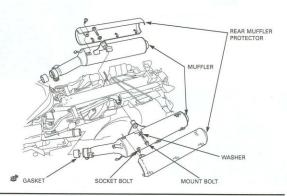

INSTALLATION

Make sure the clearance of the muffler protector and rear fender B is equal on both sides. Install the muffler and loosely tighten the muffler mounting bolts/washer.

Tighten the muffler mounting bolts first, then tighten the muffler band bolts to the specified torque.


TORQUE:


Muffler mounting bolt: 27 N·m (2.8 kgf·m, 20 lbf·ft)
Muffler band bolt: 27 N·m (2.8 kgf·m, 20 lbf·ft)

Recheck the clearance of the muffler and protector.

Install the front muffler protector and tighten the socket bolt securely.

Install the rear cowl (page 2-3).

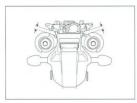

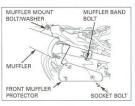

If you remove the exhaust joint pipe, remove the swingarm (refer to section 14).

EXHAUST PIPE

REMOVAL


Remove the muffler (page 2-5).

Remove the two radiator mounting bolts. Remove the radiator guide from the frame and move the radiator forward.

Do not damage the water hoses.



Loosen the exhaust pipe band bolt and exhaust pipe mounting bolts/nuts.

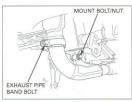

Do not damage the swingarm by the exhaust joint pipe when removing the exhaust pipe.

by the exhaust

installing the exhaust pipe.

Remove the exhaust pipe joint nuts, exhaust pipe mounting bolt, washer and nut.

Remove the exhaust pipe and gaskets.


INSTALLATION

Always replace Install the new exhaust pipe gaskets and exhaust joint pipe gaskets with new

ones.

Do not damage the swingarm washers and nuts,

joint pipe when Install the muffler (page 2-6).

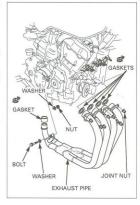


Tighten the bolt/nut to the specified torque as follows.

TOROUE:

- 1. Exhaust pipe joint nut:
- 20 N·m (2.0 kgf·m, 14 lbf·ft)
 2. Exhaust pipe band bolt:
- 27 N·m (2.8 kgf·m, 20 lbf·ft)
- Exhaust pipe mount bolt/nut: 27 N·m (2.8kgf·m, 20 lbf·ft)

Recheck the clearance of the muffler and protector (page 2-6).

Install the radiator to the frame. Install and tighten the radiator mounting bolts securely.

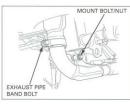



3. MAINTENANCE

SERVICE INFORMATION	3-1	DRIVE CHAIN	3-16
MAINTENANCE SCHEDULE	3-3	DRIVE CHAIN SLIDER	3-20
FUEL LINE	3-4	BRAKE FLUID	3-20
THROTTLE OPERATION	3-4	BRAKE PAD WEAR	3-21
CHOKE OPERATION	3-5	BRAKE SYSTEM	3-21
AIR CLEANER	3-5	BRAKE LIGHT SWITCH	3-22
CRANKCASE BREATHER	3-6	HEADLIGHT AIM	3-22
SPARK PLUG	3-6	CLUTCH SYSTEM	3-23
VALVE CLEARANCE	3-7	SIDE STAND	3-24
ENGINE OIL/OIL FILTER	3-12	SUSPENSION	3-24
ENGINE IDLE SPEED	3-13	NUTS, BOLTS, FASTENERS	3-25
RADIATOR COOLANT	3-13	WHEELS/TIRES	3-25
COOLING SYSTEM	3-14	STEERING HEAD BEARINGS	3-26
SECONDARY AIR SUPPLY SYSTEM	3-15		
EVAPORATIVE EMISSION CONTROL SYSTEM (California type only)	3-15		

SERVICE INFORMATION

GENERAL

- · Place the motorcycle on a level ground before starting any work.
- Gasoline is extremely flammable and is explosive under certain conditions.
- Work in a well ventilated area. Smoking or allowing flames or sparks in the work area or where the gasoline is stored can cause a fire or explosion.
- If the engine must be running to do some work, make sure the area is well ventilated. Never run the engine in an enclosed area.
- The exhaust contains poisonous carbon monoxide gas that may cause loss of consciousness and may lead to death. Run
 the engine in an open area or with an exhaust evacuation system in an enclosed area.

SPECIFICATIONS

ITEM			SPECIFICATIONS								
Throttle grip free play		2 - 4 mm (1/16 - 3/16 in)									
Spark plug	NGK DENSO		CR8EH-9 (STANDARD)	CR9EH-9 (HIGH SPEED)							
			U24FER9 (STANDARD)	U27FER9 (HIGH SPEED)							
Spark plug gap			0.80 - 0.90 mm (0.03 - 0.04 in)								
Valve clearance IN			0.16 ± 0.03 mm (0.006 ± 0.001 in)								
	EX		0.25 ± 0.03 mm (0.010 ± 0.001 in)								
Engine oil capacity After draining			3.5 liter (3.7 US at, 3.1 Imp at)								
After draining/oil filter change			3.6 liter (3.8 US qt, 3.2 Imp qt)								
Recommended engi	ne oil		Pro Honda GN4 or HP4 (withot 4-stroke oil (USA & Canada), o (Canada only), or an equivalen API service classification SG o energy conserving on the API: JASO T903 standard MA Viscosity: SAE 10W-40	or Honda 4-stroke oil at motor oil r Higher except oils labeled as							
Engine idle speed		1,200 ± 100 min ⁻¹ (rpm)									
Drive chain slack		30 - 40 mm (1.2 - 1.6 in)									
Recommended brake	e fluid		DOT 4 10 – 20 mm (3/8 – 13/16 in)								
Clutch lever free pla-	у										
Tire size		Front	120/70 ZR 17 (58W), 120/70 ZR 17M/C (58W)								
		Rear	180/55 ZR 17 (73W), 180/55 ZR 17 M/C(73W)								
Tire brand	Bridgestone	Front	BT56F RADIAL N								
		Rear	BT56R RADIAL G								
	Michelin	Front	TX15								
		Rear	TX25								
Tire air pressure	Driver only Front		250 kPa (2.50 kgf/cm², 36 psi)								
		Rear	290 kPa (2.90 kgf/cm², 42 psi)								
	Driver and passenger	Front	250 kPa (2.50 kgf/cm², 36 psi)								
		Rear	290 kPa (2.90 kgf/cm², 42 psi)								
		Front	1.5 mm (0.06 in)								
		Rear	2.0 mm (0.08 in)								

TORQUE VALUES

Timing hole cap Spark plug Cylinder head cover bolt Engine oil drain bolt Engine oil filter cartridge Rear axle nut Drive sprocket special bolt Driven sprocket nut 18 N·m (1.8 kgf·m, 13 lbf·ft) Apply grease to the threads

12 N·m (1.2 kgf·m, 9 lbf·ft) 10 N·m (1.0 kgf·m, 7 lbf·ft) 29 N·m (3.0 kgf·m, 22 lbf·ft)

26 N·m (2.7 kgf·m, 20 lbf·ft) Apply clean engine oil to the O-ring 93 N·m (9.5 kgf·m, 69 lbf·ft) U-nut

93 N+m (9.5 kgf+m, 69 lbf+ft) U-nut 54 N+m (5.5 kgf+m, 40 lbf+ft)

108 N+m (11.0 kgf+m, 80 lbf+ft)

TOOLS

Oil filter wrench Drive chain tool set 07HAA-PJ70100 07HMH-MR10103

MAINTENANCE SCHEDULE

Perform the Pre-ride inspection in the Owner's Manual at each scheduled maintenance period.

I: Inspect and Clean, Adjust, Lubricate or Replace if necessary. C: Clean. R: Replace. A: Adjust. L: Lubricate.

The following items require some mechanical knowledge. Certain items (particularly those marked * and **) may require more technical information and tools. Consult their authorized Honda dealer.

FREQUENCY		WHICHEV- ER COMES	COMES				TE	1)	REFER			
		FIRST	X1,000 mi	0.6	4	8	12	16	20	24	TO PAGE	
		NOTE	X1,000 km	10	64	128	192	256	320	384		
	*	FUEL LINE					1		1		1	3-4
	*	THROTTLE OPERATION					1		1		1	3-4
ITEMS	*	CHOKE OPERATION					1		1		1	3-5
		AIR CLEANER	NOTE 2					С			C	3-5
		CRANKCASE BREATHER	NOTE 3			C	C	С	С	С	С	3-6
H 0		SPARK PLUG					R		R		R	3-6
RELATED	*	VALVE CLEARANCE							1			3-7
E		ENGINE OIL			R		R		R		R	3-12
2		ENGINE OIL FILTER			R		R		R		R	3-12
EMISSION	*	ENGINE IDLE SPEED			1	1	1	1	1	1	1	3-13
ISS		RADIATOR COOLANT	NOTE 5				1		1		R	3-13
EM	*	COOLING SYSTEM					1		I		1	3-14
	*	SECONDARY AIR SUPPLY SYSTEM					1		1		1	3-15
		EVAPORATIVE EMISSION	NOTE 4								10	
	*	CONTROL SYSTEM						1			1	
		DRIVE CHAIN			EVERY 500 mi (800 km) I, L						3-15	
MS		BRAKE FLUID	NOTE 5			1	1	R	1	1	R	3-20
TE		BRAKE PAD WEAR				1	1	1	1	1	1	3-20
0		BRAKE SYSTEM			1		1		1		1	3-21
ATE	*	BRAKE LIGHT SWITCH					1		1		1	3-22
NON-EMISSION RELATED ITEMS	*	HEADLIGHT AIM					1		1		1	3-22
		CLUTCH SYSTEM			1	1	1	1	1	1	1	3-22
		SIDE STAND					1		1		1	3-23
	*	SUSPENSION					1		1		1	3-24
	*	NUTS, BOLTS, FASTENERS			1		1		1		1	3-24
	**	WHEELS/TIRES					1		1		1	3-25
-	**	STEERING HEAD BEARINGS			1		1		1		1.	3-25

Should be serviced by an authorized Honda dealer, unless the owner has proper tools and service data and is mechanically qualified.

In the interest of safety, we recommend these items be serviced only by an authorized Honda dealer.

NOTES: 1. At higher odometer readings, repeat at the frequency interval established here.

^{2.} Service more frequently if the motorcycle is ridden in unusually wet or dusty areas.

^{3.} Service more frequently if the motorcycle is ridden often at full throttle or in the rain.


^{4.} California type only.

^{5.} Replace every 2 years, or at indicated odometer interval, whichever comes first. Replacement requires mechanical skill,

FUEL LINE

Remove the side covers (page 2-2).

Loosen the fuel tank mounting bolt/nut.

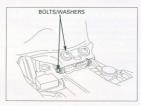

Move the fuel tank back.

Do not remove the maintenance wire. Open and support the front end of the fuel tank using a suitable support as shown.



Check the fuel lines for deterioration, damage or leakage. Replace the fuel line if necessary.

Install the fuel tank in the reverse order of removal.



THROTTLE OPERATION

Check for smooth throttle grip full opening and automatic full closing in all steering positions. Check the throttle cables and replace them if they are deteriorated, kinked or damaged. Lubricate the throttle cables, if throttle operation is

not smooth.

Measure the free play at the throttle grip flange.

FREE PLAY: 2 - 4 mm (1/16 - 1/6 in)



Throttle grip free play can be adjusted at either end of the throttle cable.

Minor adjustment are made with the upper adjuster. Adjust the free play by loosening the lock nut and turning the adjuster.




Major adjustments are made with the lower adjuster.

Open and support the front end of the fuel tank (page 3-4).

Adjust the free play by loosening the lock nut and turning the adjuster.

After adjustment, tighten the lock nut securely. Recheck the throttle operation.

Replace any damaged parts, if necessary.

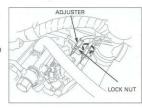

CHOKE OPERATION

Check for smooth opening and closing of the choke knob.

Check the choke cable and replace them if they are deteriorated, kinked or damaged.


Lubricate the choke cable, if throttle operation is not smooth.



AIR CLEANER


Remove the left side cover (page 2-2).

Disconnect the variable intake air control vacuum tube from the air cleaner housing cover. Remove the screws and air cleaner housing cover. Remove and check the air cleaner element in accordance with the maintenance schedule (page 3-3).

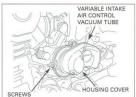

Clean the air cleaner element using compressed air anytime it is excessively dirty or damage.


Install the removed parts in the reverse order of removal.

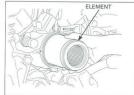

CRANKCASE BREATHER

Remove the side cover (page 2-2).

Disconnect and clean the drain tube. Connect the drain tube.

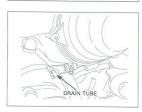

SPARK PLUG

ing, and be sure

that no debris is

allowed to enter

the combustion

chamber.

REMOVAL

Clean around the Open and support the front end of the fuel tank spark plug bases (page 3-4). with compressed Remove the radiator from the frame boss by

air before removmoving it to the right, then move the radiator forward (page 2-6).

Disconnect the ignition coil connectors. Remove the spark plug using a spark plug wrench or

an equivalent tool. Inspect or replace as described in the maintenance


schedule.



Check the following and replace if necessary (recommended spark plug: page 3-2)

- · Insulator for damage
- · Electrodes for wear
- · Burning condition, coloration



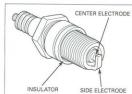

REUSING A SPARK PLUG

Clean the spark plug electrodes with a wire brush or spark plug cleaner.

Check the gap between the center and side electrodes with a wire-type feeler gauge.

If necessary, adjust the gap by bending the side electrodes carefully.

SPARK PLUG GAP: 0.8 - 0.9 mm (0.03 - 0.04 in)

Reinstall the spark plugs in the cylinder head and hand tighten, then torque to specification.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

REPLACING A SPARK PLUG

Set the plug to specification with a wire-type feeler gauge (see above).

Install and hand tighten the new spark plug, then tighten it about 1/2 turn after the sealing washer contacts the seat of the plug hole.

Install the radiator onto the frame boss (page 2-6).





VALVE CLEARANCE


INSPECTION


Open and support the front end of the fuel tank (page 3-4). Remove the cylinder head cover (page 8-4)

Inspect and adjust Remove the cam chain tensioner lifter sealing bolt the valve clearance while the engine is cold (below 35°C/95°F).

and sealing washer.

Turn the cam chain tensioner lifter shaft fully and secure it using the tensioner stopper tool (Refer to page 8-7).

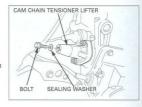

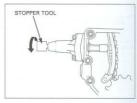

Remove the timing hole cap and O-ring.



Turn the crankshaft clockwise, align the "T" mark on the ignition pulse generator rotor with the index mark on the right crankcase cover.



The timing marks ("IN" and "EX") on the cam sprockets must be flush with the cylinder head surface and facing outward as shown.

If the timing marks on the cam sprocket facing inward, turn the crankshaft clockwise one full turn (360") and realign the timing marks with the cylinder head surface so they are facing outward.




Record the clearance for each valve for reference in shim selection if adjustInsert the feeler gauge between the valve lifter and the cam lobe.

Check the valve clearance for the No 1 and No 3 cyling.

Check the valve clearance for the No.1 and No.3 cylinder intake valves using a feeler gauge.

ment is required. VALVE CLEARANCE:

IN: 0.16 ± 0.03 mm (0.006 ± 0.001 in)

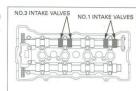

Turn the crankshaft clockwise 1/2 turn (180'), align the index line on the ignition pulse generator rotor so that it is facing up as shown.




Record the clearance for each valve for reference in shim selection if adjustment is required.

Check the valve clearance for the No.2 and No.4 cylinder exhaust valves using a feeler gauge.

VALVE CLEARANCE:

EX: 0.25 ± 0.03 mm (0.010 ± 0.001 in)

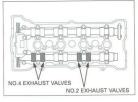


Turn the crankshaft clockwise 1/2 turn (180'), align the "T" mark on the ignition pulse generator rotor with the index mark on the right crankcase cover.



Record the clearance for each valve for reference in shim selection if adjustment is required. Check the valve clearance for the No.2 and No.4 cylinder intake valves using a feeler gauge.

VALVE CLEARANCE:

IN: 0.16 ± 0.03 mm (0.006 ± 0.001 in)

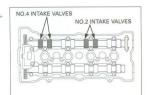

Turn the crankshaft clockwise 1/2 turn (180"), align the index line on the ignition pulse generator rotor so that it is facing up as shown.




Record the clearance for each valve for reference in shim selection if adjustment is required.

Check the valve clearance for the No.1 and No.3 cylinder exhaust valves using a feeler gauge.

VALVE CLEARANCE:

EX: 0.25 ± 0.03 mm (0.010 ± 0.001 in)

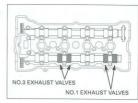

ADJUSTMENT

Remove the camshaft (page 8-6).

Remove the valve lifters and shims.



- Shim may stick to the inside of the valve lifter. Do not allow the shims to fall into the crankcase.
- Mark all valve lifters and shims to ensure correct reassembly in their original locations.
- The valve lifter can be easily removed with a valve lapping tool or magnet.
- The shims can be easily removed with a tweezers or magnet.

Clean the valve shim contact area in the valve lifter with compressed air.



Sixty-five different shim thicknesses are available from 1.200 mm to 2.800 mm in intervals of 0.025 mm.

Install the shims

locations.

and valve lifters in their original

Sixty-five different Measure the shim thickness and record it.



Calculate the new shim thickness using the equation below.

A = (B - C) + D

- A: New shim thickness
- B: Recorded valve clearance
- C: Specified valve clearance D: Old shim thickness
- Make sure of the correct shim thickness by measuring the shim by micrometer.
- Reface the valve seat if carbon deposit result in a calculated dimension of over 2.800 mm.

Install the newly selected shim on the valve retainer.

Apply molybdenum disulfide oil to the valve lifters.


Install the valve lifters into the valve lifter holes.

Install the camshaft (page 8-23).

Rotate the camshafts by rotating the crankshaft clockwise several times. Recheck the valve clearance.


Remove the cam chain tensioner stopper tool.

1.80 mm 1.825 mm 1.85 mm 1.875 mm

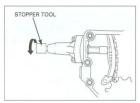

Install the new sealing washer and cam chain tensioner lifter sealing bolt.
Tighten the bolt securely.

Install the removed parts in the reverse order of removal,

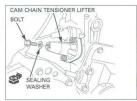


ENGINE OIL/OIL FILTER

OIL LEVEL INSPECTION

Start the engine and let it idle for 2 – 3 minutes. Turn off the engine and support the motorcycle level surface.

Check the oil level through the inspection window.

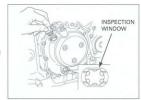

Other viscosities shown in the chart may be used when the average temperature in your riding area is within the indicated range.

Change the

cle on level ground to assure

> complete draining.

engine oil with

the engine warm and the motorcyIf the level is below the lower line, remove the oil filler cap and fill the crankcase with recommended oil up to the upper level line.

Remove the oil filler cap.

Fill the recommended engine oil up to the upper level line.

RECOMMENDED ENGINE OIL:

Pro Honda GN4 or HP4 (without molybdenum additives) 4-stroke oil (USA & Canada), or Honda 4-stroke oil (Canada only), or an equivalent motor oil API service classification SG or Higher except oils labeled as energy conserving on the API service label.

JASO T903 standard MA Viscosity: SAE 10W-40

Reinstall the filler cap.

ENGINE OIL & FILTER CHANGE

Warm up the engine.

Stop the engine and remove the oil filler cap.

Remove the drain bolt, drain the oil completely.

Check that the sealing washer on the drain bolt is in


good condition, and replace if necessary. Install and tighten the drain bolt.

TORQUE: 29 N-m (3.0 kgf-m, 22 lbf-ft)
Remove and discard the oil filter cartridge using the special tool.

TOOL:

Oil filter wrench

07HAA-PJ70100

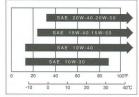





Apply clean engine oil to the new oil filter O-ring.

Install the new oil filter and tighten it to the specified torque.

TOOL: Oil filter wrench

07HAA-PJ70100

TORQUE: 26 N·m (2.7 kgf·m, 20 lbf·ft)


Fill the crankcase with recommended engine oil.

OIL CAPACITY:

3.5 liter (3.7 US qt, 3.1 Imp qt) after draining 3.6 liter (3.8 US qt, 3.2 Imp qt) after draining/filter change

Install the oil filler cap.

Start the engine and let it idle for 2 to 3 minutes. Stop the engine and recheck the oil level. Make sure there are no oil leaks.

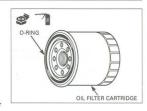

ENGINE IDLE SPEED

Open and support the front end of fuel tank (page 3-4).

- Inspect and adjust the idle speed after all other engine maintenance items have been performed and are within specifications.
- The engine must be warm for accurate idle speed inspection and adjustment.

Warm up the engine for about ten minutes. Turn the throttle stop screw as required to obtain the specified idle speed.

IDLE SPEED: 1.200 ± 100 min-1 (rpm)



RADIATOR COOLANT

Check the coolant level of the reserve tank with the engine running at normal operating temperature. The level should be between the "UPPER" and "LOWER" level lines.




If necessary, add recommended coolant.

RECOMMENDED ANTIFREEZE:

Pro Honda Coolant or an equivalent high quality ethylene glycol antifreeze containing corrosion protection inhibitors specifically recommended for use in aluminum engines.

Remove the reserve tank filler cap and fill to the "UPPER" level line with a 50/50 mixture of distilled water and antifreeze.

Reinstall the filler cap.

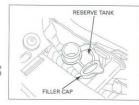

COOLING SYSTEM

Remove the lower cowl and inner half cowl (page 2-4).

Check the radiator air passages for clogging or

Straighten bent fins, and remove insects, mud or other obstructions with compressed air or low water pressure.

Replace the radiator if the air flow is restricted over more than 20% of the radiating surface.

Inspect the radiator hoses for cracks or deterioration, and replace if necessary.


Check the tightness of all hose clamps and fasteners.



SECONDARY AIR SUPPLY SYSTEM


- This model is equipped with a built-in secondary air supply system. The pulse secondary air supply system is located on the cylinder head cover.
- The secondary air supply system introduces filtered air into exhaust gases in the exhaust port. The secondary air is drawn into the exhaust port whenever there is negative pressure puise in the exhaust system. This charged secondary air promotes burning of the unburned exhaust gases and changes a considerable amount of hydrocarbons and carbon monoxide into relatively harmless carbon dioxide and water.

If the hoses show any signs of heat damage, inspect the PAIR check valve in the PAIR reed valve cover for damage. Check the PAIR (pulse secondary air injection) tubes between the PAIR control solenoid valve and cylinder head cover for deterioration, damage or loose connections. Make sure that the hoses are not cracked.

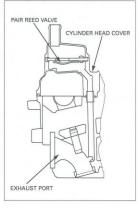


Check the air suction hose between the air cleaner housing and PAIR control solenoid valve for deterioration, damage or loose connections.

Make sure that the hoses are not kinked, pinched or cracked.

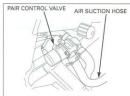

EVAPORATIVE EMISSION CONTROL SYSTEM (California type only)

Check the evaporative emission (EVAP) canister for cracks or damage.

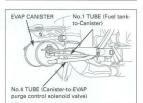

Check the tubes between the fuel tank, EVAP canister, EVAP purge control valve and throttle body for deterioration, damage or loose connections. Also check that the tubes are not kinked or pinched.

Refer to the Vacuum Hose Routing Diagram Label and Cable & Harness Routing (page 1-27) for tube connections and routing.

Check the air suction hose between the air cleaner housing and PAIR control solenoid valve for deterioration, damage or loose connections.

Make sure that the hoses are not kinked, pinched or cracked.

PURGE CONTROL SOLENOID VALVE No.4 TUBE (EVAP purge control solenoid PURGE TUBE valve-to-Canister)

DRIVE CHAIN

DRIVE CHAIN SLACK INSPECTION

Never inspect and adjust the drive chain while the engine is running.

Turn the ignition switch OFF, place the motorcycle on its side stand and shift the transmission into neutral. Check the slack in the drive chain lower run midway between the sprockets.

CHAIN SLACK: 30 - 40 mm (1.2 - 1.6 in)

NOTICE

Excessive chain slack, 50 mm (2.0 in) or more, may damage the frame.

ADJUSTMENT.


Loosen the rear axle nut.

Turn both adjusting bolts until the correct drive chain slack is obtained.

Make sure the index marks on both adjusting plate are aligned with the end of the swingarm. Tighten the rear axle nut to the specified torque.

TORQUE: 93 N·m (9.5 kgf·m, 69 lbf·ft)

Recheck the drive chain slack and free wheel rotation.

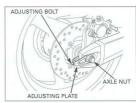


30 - 40 mm (1,2 - 1,6 in)

Lubricate the drive chain with #80 - 90 gear oil or drive chain lubricant designed specifically for use with 0-ring chains. Wipe off the excess oil or chain lubricant.

Check the drive chain wear indicator label attached on the left drive chain adjusting plate.

If the swingarm index mark reaches the red zone of the indicator label, replace the drive chain with a new one (page 3-21).

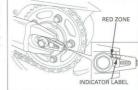

CLEANING AND LUBRICATION


Clean the chain with non-flammable or high flash point solvent and wipe it dry.


Be sure the chain has dried completely before lubricating.

Inspect the drive chain for possible damage or wear. Replace any chain that has damaged rollers, loose fitting links, or otherwise appears unserviceable. Installing a new chain on badly worn sprockets will cause the new chain to wear quickly.

Inspect and replace sprocket as necessary.

Lubricate the drive chain with #80 - 90 gear oil or drive chain lubricant designed specifically for use with O-ring chains. Wipe off the excess oil or chain

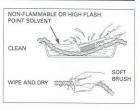


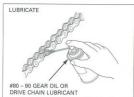

SPROCKET INSPECTION

Inspect the drive and driven sprocket teeth for wear or damage, replace if necessary.

Never use a new drive chain on worn sprockets. Both chain and sprockets must be in good condition, or the new replacement chain will wear rapidly.

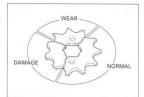

Check the attaching bolts and nuts on the drive and driven sprockets.

If any are loose, torque them.

TORQUE:

lubricant.

Drive sprocket bolt: 54 N·m (5.5 kgf·m, 40 lbf·ft)
Driven sprocket nut: 108 N·m (11.0 kgf·m,
80 lbf·ft)



REPLACEMENT

This motorcycle uses a drive chain with a staked master link.


Loosen the drive chain (page 3-16).

Assemble the special tool as shown.

TOOL:

Drive chain tool set

07HMH-MR10103

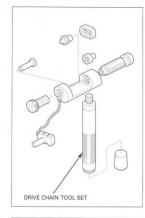

When using the special tool, follow the manufacturer's instruction.


Locate the crimped pin ends of the master link from the outside of the chain, and remove the link with the drive chain tool set.

TOOL:

Drive chain tool set


07HMH-MR10103

Remove the drive chain.

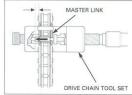

Include the master link when you count the drive chain links. Remove the excess drive chain links from the new drive chain with the drive chain tool set.

STANDARD LINKS: 114 links REPLACEMENT CHAIN: DID: DID50VA8-114LE RK: RK50HFOZ5-114LE

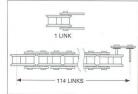

Never reuse the old drive chain, master link, master link plate and O-rings.


Assemble the new master link, O-rings and plate.

Assemble and set the drive chain tool set.

TOOL:

Drive chain tool set

07HMH-MR10103

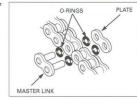

Insert the master link from the inside of the drive chain, and install the plate with the identification mark facing the

outside.


Make sure that the master link pins are installed properly.

Measure the master link pin length projected from the plate.

STANDARD LENGTH:

DID: 1.15 - 1.55 mm (0.045 - 0.061 in) RK: 1.2 - 1.4 mm (0.05 - 0.06 in)


Stake the master link pins.

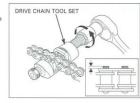

A drive chain with a clip-type master link must not be used. Make sure that the pins are staked properly by measuring the diameter of the staked area using a slide caliper.


DIAMETER OF THE STAKED AREA: DID: 5.50 - 5.80 mm (0.217 - 0.228 in)

DID: 5.50 – 5.80 mm (0.217 – 0.228 in) RK: 5.55 – 5.85 mm (0.219 – 0.230 in)

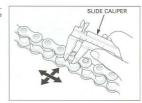

After staking, check the staked area of the master link for cracks.


If there is any cracking, replace the master link, Orings and plate.

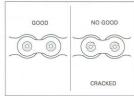

DRIVE CHAIN GUIDE PLATE INSPECTION

Remove the drive sprocket cover and guide plate.

Check the drive chain guide plate for wear or damage and replace if necessary.

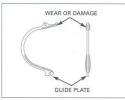

BRAKE FLUID

NOTE:

- Do not mix different types of fluid, as they are not compatible with each other.
- Do not allow foreign material to enter the system when filling the reservoir.
- Avoid spilling fluid on painted, plastic or rubber parts. Place a rag over these parts whenever the system is serviced.

When the fluid level is low, check the brake pads for wear (see next page). A low fluid level may be due to wear of the brake pads. If the brake pads are worn, the calipre piston is pushed out, and this accounts for a low reservoir level. If the brake pads are not worn and the fluid level is low, check entire system for leaks (see next page).

FRONT BRAKE

Turn the handlebar so that the reservoir is level and check the front brake fluid reservoir level.

If the level is near the lower level line, check the brake pad wear (see below).

REAR BRAKE

Place the motorcycle on a level surface, and support it in an upright position.

Check the rear brake fluid reservoir level.

If the level is near the lower level line, check the brake pad wear (see below).






BRAKE PAD WEAR

FRONT BRAKE PADS

Check the brake pad for wear.

Replace the brake pads if either pad is worn to the bottom of the wear limit groove.

Refer to page 15-7 for brake pad replacement.

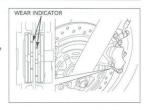


REAR BRAKE PADS

Check the brake pad for wear.

Replace the brake pads if either pad is worn to the bottom of the wear limit groove.

Refer to page 15-8 for brake pad replacement.

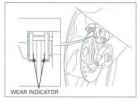

BRAKE SYSTEM

INSPECTION

Firmly apply the brake lever or pedal, and check that no air has entered the system.

If the lever or pedal feels soft or spongy when operated, bleed the air from the system.

Inspect the brake hose and fittings for deterioration, cracks and signs of leakage.


Tighten any loose fittings.


Replace hoses and fittings as required.

Refer to page 15-5 for brake bleeding procedures.




The distance between the top of the brake lever and the grip can be adjusted by turning the adjuster.

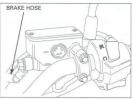

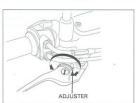

BRAKE PEDAL HEIGHT ADJUSTMENT

Loosen the lock nut and turn the push rod until the correct pedal height is obtained.

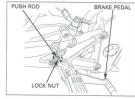


BRAKE LIGHT SWITCH

light switch does not require adjustment.

The front brake Adjust the brake light switch so that the brake light comes on just prior to the brake actually being engaged. If the light fails to come on, adjust the switch so that

the light comes on at the proper time. Hold the switch body and turn the adjuster. Do not turn the switch body.

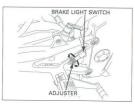


HEADLIGHT AIM

light beam as specified by local laws and regulations.

Adjust the head- Place the motorcycle on a level surface.

Adjust the headlight beam vertically by loosening the headlight mount bolts.

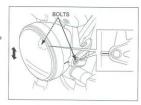


HORIZONTAL BEAM ADJUSTING SCREW

Adjust the headlight beam horizontally by turning the horizontal beam adjusting screw. A clockwise rotation moves the beam toward the right side of the rider.

CLUTCH SYSTEM

Measure the clutch lever free play at the end of the clutch lever.

FREE PLAY: 10 - 20 mm (3/8 - 13/16 in)

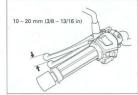

Minor adjustments are made using the upper adjuster at the clutch lever.


Loosen the lock nut and turn the adjuster.

NOTICE

The adjuster may be damaged if it is positioned too far out, leaving minimal thread engagement.


If the adjuster is threaded out near its limit and the correct free play cannot be obtained, turn the adjuster all the way in and back out one turn.

Tighten the lock nut and make a major adjustment as described below.

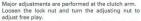

Hold the adjusting nut securely while tightening the lock nut.

If proper free play cannot be obtained, or the clutch slips during a test ride, disassemble and inspect the clutch (see section 9).

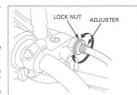



SIDE STAND

Support the motorcycle on a level surface.


Check the side stand spring for damage or loss of tension.

Check the side stand assembly for freedom of movement and lubricate the side stand pivot if necessary.

Check the side stand ignition cut-off system:

- Sit astride the motorcycle and raise the side stand.
 Start the engine with the transmission in neutral, then shift the transmission into gear, with the clutch lever squeezed.
- Move the side stand full down.
- The engine should stop as the side stand is lowered.

If there is a problem with the system, check the side stand switch (section 19).

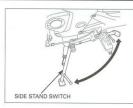



SUSPENSION

Loose, worn or damaged suspension parts impair motorcycle stability and control.

FRONT SUSPENSION INSPECTION

Check the action of the forks by compressing the front suspension several times.

Check the entire fork assembly for signs of leaks, damage or loose fasteners.

Replace damaged components that cannot

be repaired.

Tighten all nuts and bolts (page 1-13). Refer to section 13 for fork service.

REAR SUSPENSION INSPECTION

Check the action of the shock absorber by compressing it several times.

Check the entire shock absorber assembly for signs of leaks, damage or loose fasteners.

Replace damaged components that cannot be repaired.

Tighten all nuts and bolts (page 1-13).

Place the motorcycle on a work stand or box to raise the rear wheel off the ground and support the motorcycle securely. Check for worn swingarm bearings by grabbing the swingarm and attempting to move the wheel side to side. Replace the bearings if any looseness is noted.





Refer to section 14 for shock absorber and swingarm service.



REAR SUSPENSION ADJUSTMENT

SPRING PRE-LOAD ADJUSTER

Spring preload can be adjusted by turning the adjuster using a pin spanner.

NUTS, BOLTS, FASTENERS

Check that all chassis nuts and bolts are tightened to their correct torque values (page 1-12). Check that all safety clips, hose clamps and cable stays are in place and properly secured.

WHEELS/TIRES

NOTICE

Tire pressure should be checked when the tires are COLD.

RECOMMENDED TIRE PRESSURE AND TIRE SIZE:

		FRONT	REAR
Tire pressure kPa (kgf/cm², psi)		250 (2.50, 36) 290 (2.90,	
Tire size		120/70 ZR 17 (58W)	180/55 ZR 17 (73W)
		120/70 ZR 17 M/C (58W)	180/55 ZR 17 M/C (73W)
Tire bland	Bridgestone	BT56F RADIAL N	BT56R RADIAL G
	Michelin	TX15	TX25



MAINTENANCE

Check the tires for cuts, embedded nails, or other damage.

Check the front and rear wheels for trueness (refer to section 13 and 14).

Measure the tread depth at the center of the tires. Replace the tires when the tread depth reaches the following limits.

MINIMUM TREAD DEPTH: FRONT: 1.5 mm (0.06 in) REAR: 2.0 mm (0.08 in)

STEERING HEAD BEARINGS

Check that the control cables do not interfere with handlebar rotation.


Support the motorcycle securely and raise the front wheel off the ground.

Check that the handlebar moves freely from side to side.

If the handlebar moves unevenly, binds, or has vertical movement, inspect the steering head bearings (Section 13).



LUBRICATION SYSTEM DIAGRAM

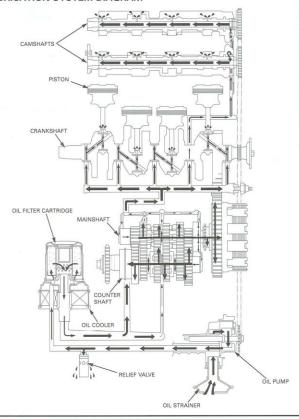

OIL PRESSURE INSPECTION SERVICE INFORMATION

TROUBLESHOOTING

GENERAL

A CAUTION

Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.

- The oil pump can be serviced with the engine installed in the frame.
- The service procedures in this section must be performed with the engine oil drained.
- · When removing and installing the oil pump, use care not to allow dust or dirt to enter the engine.

4-3

- . If any portion of the oil pump is worn beyond the specified service limits, replace the oil pump as an assembly.
- · After the oil pump has been installed, check that there are no oil leaks and that oil pressure is correct.

SPECIFICATIONS

Unit: mm (in)

	ITEM	STANDARD	SERVICE LIMIT
Engine oil capacity	After draining	3.5 liter (3.7 US qt, 3.1 Imp qt)	_
	After draining/filter change	3.6 liter (3.8 US qt, 3.2 Imp qt)	_
	After disassembly	4.4 liter (4.6 US qt, 3.9 Imp qt)	_
Recommended engine	oil	Pro Honda GN4 or HP4 (without molybdenum additives) 4-stroke oil (USA & Canada), or Honda 4-stroke oil (Canada only), or an equivalent motor oil API service classification SG or Higher except oils labeled as energy conserving on the API service label. JASO 1903 standard MA Viscosity: SAE 10W-40	_
Oil pressure at oil press	sure switch	490 kPa (5.0 kgf/cm², 71 psi) at 6,000 min ⁻¹ (rpm)/(80°C/176°F)	_
Oil pump rotor	Tip clearance	0.15 (0.006)	0.20 (0.008)
	Body clearance	0.15 - 0.22 (0.006 - 0.009)	0.35 (0.014)
	Side clearance	0.02 - 0.07 (0.001 - 0.003)	0.10 (0.004)

TOROUF VALUES

Oil main gallery sealing bolt (20 mm) 29 N·m (3.0 kgf·m, 22 lbf·ft)

Oil pump cover bolt 8 N·m (0.8 kgf·m, 5.8 lbf·ft) Oil cooler bolt (filter boss) 64 N·m (6.5 kgf·m, 47 lbf·ft)

Engine oil filter cartridge 26 N+m (2.7 kgf+m, 20 lbf+ft)

29 N·m (3.0 kgf·m, 22 lbf·ft) Engine oil drain bolt

Apply a locking agent to the threads CT bolt

Apply oil to the threads and flange surface

Apply oil to the threads and flange surface and O-ring

TOOLS

Oil pressure gauge set

Oil pressure gauge attachment Oil filter wrench 07506-3000000 07510-MJ10100 07HAA-PJ70100 Equivalent commercially available in U.S.A Equivalent commercially available in U.S.A

TROUBLESHOOTING

Oil level too low

- Oil consumption
 External oil leak
- External oil leak
- Worn piston rings
 Improperly installed piston rings
- Worn cylinders
- · Worn stem seals
- Worn valve guide

Low oil pressure

- Oil level low
- · Clogged oil strainer
- Faulty oil pump
- Internal oil leak
- Incorrect oil being used

No oil pressure

- Oil level too low
 Oil pressure relief valve stuck open
- · Broken oil pump drive chain
- · Broken oil pump drive or driven sprocket
- · Damaged oil pump
- Internal oil leak

High oil pressure

- · Oil pressure relief valve stuck closed
- · Clogged oil filter, gallery or metering orifice
- Incorrect oil being used

Oil contamination

- · Oil or filter not changed often enough
- Worn piston rings

Oil emulsification

- · Blown cylinder head gasket
- Leaky coolant passage
- · Entry of water

OIL PRESSURE INSPECTION

If the oil pressure indicator light remains on a few seconds, check the indicator system before checking the oil pressure.

If the oil pressure Check the oil level (page 3-16).

Warm up the engine to normal operating temperature (approximately 80°C/176°F).

Stop the engine and remove the oil main gallery sealing bolt.



Connect an oil pressure gauge and attachment to the main gallery.

TOOLS:

Oil pressure gauge set

07506-3000000 (Equivalent commercially available in U.S.A)

Oil pressure gauge attachment

nent 07510-MJ10100 (Equivalent commercially available in U.S.A)

Start the engine and increase the rpm to 6,000 min⁻¹ (rpm) and read the oil pressure.

OIL PRESSURE:


490 kPa (5.0 kgf/cm², 71 psi) at 6,000 min⁻¹ (rpm)/ (80°C/176°F)

Stop the engine and remove the tools.

Apply a locking agent to the sealing plug threads. Install and tighten the sealing plug to the specified torque.

TORQUE: 29 N·m (3.0 kgf·m, 22 lbf·ft)



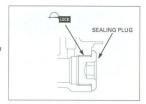

OIL STRAINER/PRESSURE RELIEF VALVE

REMOVAL

Drain the engine oil (page 3-17). Remove the exhaust pipe (page 2-6).

Remove the oil pan flange bolts and oil pan.



Remove the pressure relief valve.



Remove the oil strainer and packing.

Clean the oil strainer screen.




INSPECTION

Check the operation of the pressure relief valve by pushing on the piston.

Disassemble the relief valve by removing the snap ring.

Inspect the piston for wear, sticking or damage. Inspect the spring for weakness or damage.

Assemble the relief valve in the reverse order of disassembly.

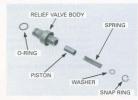

INSTALLATION

Apply oil to the new packing and install it onto the oil strainer.

Install the oil strainer into the crankcase while aligning its boss with the groove of the crankcase.




Apply oil to the new O-ring and install it onto the relief valve.

Install the relief valve into the crankcase.



Do not apply more sealant than necessary. Clean the oil pan mating surface thoroughly. Apply Three Bond 1207B or an equivalent to the mating surface.

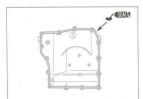

Install the oil pan onto the lower crankcase. Install the oil pan mounting bolts.

Tighten the all bolts in a crisscross pattern in 2 - 3 steps.

Install the exhaust pipe (page 2-7). Fill the crankcase with recommended oil (page 3-17).

After installation, check that there are no oil leaks.



OIL PUMP

REMOVAL

Remove the clutch and oil pump driven sprocket (page 9-9).

Remove the three flange bolts and oil pump assembly.




DISASSEMBLY

Remove the dowel pins.
Remove the oil pump cover bolt and oil pump cover.



Remove the thrust washer, drive pin, oil pump shaft, outer rotor and inner rotor from the oil pump body.

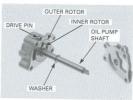

INSPECTION

If any portion of the oil pump is worn beyond the service limit, replace the oil pump as an assembly. Temporarily install the oil pump shaft. Install the outer and inner rotors into the oil pump body.

Measure the rotor tip clearance.

SERVICE LIMIT: 0.20 mm (0.008 in)



Measure the pump body clearance.

SERVICE LIMIT: 0.35 mm (0.014 in)




Measure the side clearance using a straight edge and feeler gauge.

SERVICE LIMIT: 0.10 mm (0.004 in)



ASSEMBLY

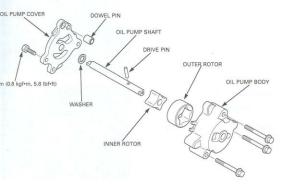


rotor with its punch mark facing the oil pump cover.

punch mark facing the oil pump cover. Install the inner rotor into the outer rotor with its drive

pin groove facing the oil pump cover. Install the oil pump shaft through the inner rotor and oil pump body.

Install the drive pin into the hole in the pump shaft and align the pin with the groove in the inner rotor as shown.

Install the thrust washer. Install the dowel pin.

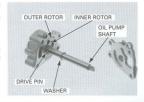

Install the oil pump cover and tighten the bolt to the specified torque.

TORQUE: 8 N-m (0.8 kgf-m, 5.8 lbf-ft)

Check the oil pump operation by turning the pump shaft.

If necessary, reassemble the oil pump.



INSTALLATION

Install the oil pump onto the crankcase while aligning the pump shaft lug with the water pump shaft groove by turning the oil pump shaft.



Install and tighten the three flange bolt securely.

Install the clutch assembly (page 9-10).

After installation, fill the crankcase with recommended oil and check that there are no oil leaks (page 3-12). Check the oil pressure (page 4-3).



OIL COOLER

REMOVAL

Drain the engine oil and remove the oil filter cartridge (page 3-12).

Drain the coolant from the system (page 6-4).

Loosen the hose bands and disconnect the oil cooler water hoses from the cooler.



Remove the oil cooler bolt (filter boss), washer and oil cooler.


Remove the O-ring from the oil cooler.

INSPECTION

Check the oil cooler for damage.



INSTALLATION

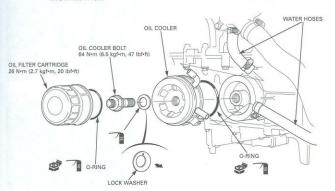

Coat a new O-ring with engine oil and install it into the oil cooler groove.


Install the oil cooler aligning its guide groove with the lug on the crankcase.



LUBRICATION SYSTEM

Install the lock washer with its concave side ("o" mark) facing the oil cooler. Apply oil to the oil cooler bolt threads and seating surface.

Install the lock washer and oil cooler bolt.

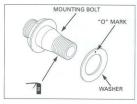

Be sure the oil cooler bolt collar slides inside the oil cooler.

Tighten the oil cooler bolt to the specified torque.


** TORQUE: 64 N-m (6.5 kgf-m, 47 lbf-ft)



Connect the oil cooler water hoses, tighten the hose bands securely.

Install the oil filter cartridge and fill the crankcase with recommended oil (page 3-12).
Fill the cooling system and bleed air (page 6-5),



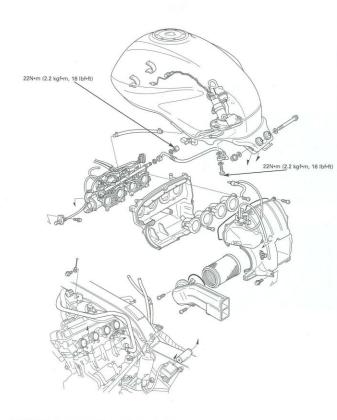

5. FUEL SYSTEM (Programmed Fuel Injection)

SERVICE INFORMATION	5-1	PRESSURE REGULATOR	5-63	
TROUBLESHOOTING	5-3	STARTER VALVE CABLE/		
SYSTEM LOCATION	5-4	THROTTLE STOP CONTROL KNOB	5-64	
SYSTEM DIAGRAM	5-5	STARTER VALVE	5-65	
PGM-FI (PROGRAMMED FUEL INJECTION) SYSTEM	5-6	STARTER VALVE SYNCHRONIZATION	5-68	
PGM-FI SELF-DIAGNOSIS MALFUNC-		MAP SENSOR	5-70	
TION INDICATOR LAMP (MIL)		IAT SENSOR	5-71	
FAILURE CODES	5-10	ECT SENSOR	5-71	
FUEL LINE INSPECTION	5-44	CAM PULSE GENERATOR	5-72	
FUEL PUMP	5-47	TP SENSOR	5-73	
FUEL CUT RELAY	5-48	BANK ANGLE SENSOR	5-74	
FUEL TANK	5-49	ENGINE STOP RELAY		
AIR CLEANER HOUSING	5-53		5-75	
THROTTLE BODY	5-58	ECM (ENGINE CONTROL MODULE)	5-76	
INJECTOR	5-62	PAIR SOLENOID VALVE	5-77	

SERVICE INFORMATION

GENERAL

- Be sure to relieve the fuel pressure while the engine is OFF.
 Bending or twisting the control cables will impair smooth operation and could cause the cables to stick or bind, resulting
- in loss of vehicle control.

 Work in a well ventilated area. Smoking or allowing flames or sparks in the work area or where gasoline is stored can
- cause a fire or explosion.

FUEL SYSTEM (Programmed Fuel Injection)

- Do not apply commercially available carburetor cleaners to the inside of the throttle bore, which is coated with molybdenum.
- Do not snap the throttle valve from full open to full close after the throttle cable has been removed. It may cause incorrect idle operation.
- Idle operation.

 Seal the cylinder head intake ports with tape or a clean cloth to keep dirt and debris from entering the intake ports after the throttle body has been removed.
- · Do not apply excessive force to the fuel pipe on the throttle body while removing or installing the throttle body.
- . Do not damage the throttle body. It may cause incorrect throttle and idle valve synchronization.
 - Prevent dirt and debris from entering the throttle bore, fuel tube and return tube, clean them using compressed air.
 - The throttle body is factory pre-set. Do not disassemble in a way other than shown in this manual.
- Do not loosen or tighten the white painted bolts and screws of the throttle body. Loosening or tightening them can cause throttle and idle valve synchronization failure.
- Do not push the fuel pump base under the fuel tank when the fuel tank is stored.
- · Always replace the packing when the fuel pump is removed.
- The programmed fuel injection system is equipped with the Self-Diagnostic System described on page 5-6. If the malfunc
 - tion indicator lamp (MIL) blinks, follow the Self-Diagnostic Procedures to remedy the problem.
 - · When checking the PGM-FI, always follow the steps in the troubleshooting flow chart (page 5-10).
- The PGM-FI system is provided with fail-safe function to secure a minimum running capability even when there is any truble in the system. When any abnormality is detected by the self-diagnosis function, running capability is secured by making use of the numerical values of a situation preset in advance in the simulated program map. It must be remembered, however, that when any abnormality is detected in four injectors and/or the ignition and cam pulse generator, the fail safe function stops the engine from the standpoint of protecting it.
 - For PGM-FI system location, see page 5-4.
- A faulty PGM-FI system is often related to poorly connected or corroded connectors. Check those connections before
 proceeding.
- For fuel reserve sensor inspection, see section 19.
- The vehicle speed sensor sends digital pulse signals to the ECM (PGM-FI unit) for computation. For vehicle speed sensor inspection, see section 19.
- When disassembling the programmed fuel injection parts, note the location of the O-rings. Replace them with new ones
 upon reassembly.
- · Before disconnecting the fuel tube, release the fuel pressure by loosening the fuel tube banjo bolt at the fuel tank.
- Always replace the sealing washers when the fuel tube banjo bolt is removed or loosened.
- Use a digital tester for PGM-FI system inspection.

SPECIFICATIONS

ITEM		SPECIFICATIONS	
Throttle body identification	Except California type	GQ34C	
number	California type	GO34B	
Starter valve vacuum differer	nce	2664 Pa (20 mm Hg)	
Base throttle valve for synchr	ronization	No.2	
Idle speed		1,200 ± 100 min ⁻¹ (rpm)	
Throttle grip free play		2 - 4 mm (1/16 - 3/16 in)	
Intake air temperature sensor resistance (at 20°C/68°F)		1 – 4 kΩ	
Engine coolant temperature se	nsor resistance (at 20°C/68°F)	2.3 – 2.6 kΩ	
Fuel injector resistance (at 20)'C/68'F)	11.1 – 12.3 Ω	
PAIR solenoid valve resistant	ce (at 20°C/68°F)	20 – 24 Ω	
Cam pulse generator peak voltage (at 20°C/68°F)		0.7 V minimum	
Ignition pulse generator peak voltage (at 20°C/68°F)		0.7 V minimum	
Manifold absolute pressure at idle		200 – 250 mm Hg	
Fuel pressure at idle		343 kPa (3.5 kgf/cm², 50 psi)	
Fuel pump flow (at 12 V)		256 cm3 (8.7 US oz, 9.0 lmp oz) minimum/10 seconds	

TORQUE VALUES

ECT/thermo sensor Throttle body insulator band screw Starter valve cable stay screw

Starter valve lock nut Pressure regulator mounting bolt Fuel tube banjo bolt (fuel tank side)

Fuel tube sealing nut (throttle body side)
Fuel pump mounting nut

23 N·m (2.3 kgf·m, 17 lbf·ft) See page 1-14

1 N·m (0.09 kgf·m, 0.7 lbf·ft) 2 N·m (0.18 kgf·m, 1.3 lbf·ft) 10 N·m (1.0 kgf·m, 7 lbf·ft)

22 N·m (2.2 kgf·m, 16 lbf·ft) 22 N·m (2.2 kgf·m, 16 lbf·ft) 12 N·m (1.2 kgf·m, 9 lbf·ft)

See page 5-54 for tightening sequence

TOOLS

Fuel pressure gauge Peak voltage tester (U.S.A. only) or

Peak voltage adaptor ECU test harness 07406-0040003

or 07406-0040002

07HGJ-0020100 (not available in U.S.A.) with commercially available

digital multimeter (impedance 10 M /DCV minimum) 07YMZ-0010100 (two required)

TROUBLESHOOTING

Engine won't start

- Intake air leak
- · Fuel contaminated/deteriorated
- · Pinched or clogged fuel tube
- Faulty fuel pump
- · Clogged fuel filter
- Clogged fuel injector filter
 Sticking fuel injector needle
- Faulty fuel pump operating system


Engine stalls, hard to start, rough idling

- Intake air leak
- Fuel contaminated/deteriorated
 Pinched or cloqged fuel tube
- Idle speed misadjusted
- · Starter valve synchronization misadjusted

Backfiring or misfiring during acceleration


- · Ignition system malfunction
- Poor performance (driveability) and poor fuel economy
- Pinched or clogged fuel tube
- · Faulty pressure regulator

SYSTEM LOCATION

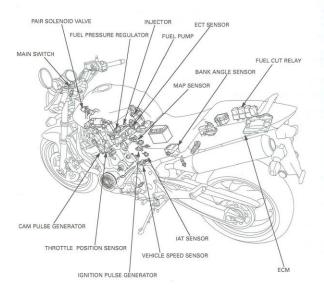

FULL NAME	ABBREVIATIONS
Manifold absolute pressure sensor	MAP sensor
Throttle position sensor	TP sensor
Intake air temperature sensor	IAT sensor
Engine coolant temperature sensor	ECT sensor
Engine control module	ECM

SYSTEM DIAGRAM

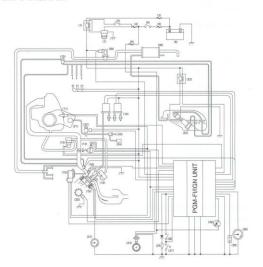

- Engine stop relay (2) PGM-FI fuse (20A) (3) Engine stop switch
- (4) Sub-fuse (10A)
- Ignition switch (6) Main fuse A (30A)
- (7) Bank angle sensor
- Sub-fuse (10A) (8)
- (9) Battery
- (10) Fuel Pressure regulator
- (11) IAT sensor (12) Ignition coil/spark plug
- (13) PAIR solenoid valve
- (14) TP sensor
- (15) MAP sensor
- (16) Injector
- (17) Cam pulse generator (18) PAIR check valve
- (19) ECT sensor

- (20) Ignition pulse generator (21) Water temperature
- (22) Fuel cut relay
- (23) Fuel pump
- Vehicle speed sensor (24)
- (25) Neutral switch
- (26) Clutch switch
- (27) Side stand switch
- (28) Malfunction indicator lamp (MIL)
- (29) Service check connector
- (30) Tachometer
- (31) Intake air duct control diaphragm
- (32) By-pass solenoid valve
- (33) One-way valve
- (34) Chamber
- (35) EVAP purge control solenoid valve
- (California type only)
- (36) EVAP canister (California type only)

PGM-FI (PROGRAMMED FUEL INJECTION) SYSTEM

the side stand

down and with

the engine off (engine stop

switch is set to

RUN) or engine revs are below

5,000 min¹ (rpm). In any other conditions, the MIL will illuminate and stay on.


SELF-DIAGNOSTIC PROCEDURES

Place the motorcycle on its side stand. Start the engine and let it idle.

The malfunction indicator blinks, note how many indicator large (MILL) will state the MIL blinks, and determine the cause of the problem (page 5-10 through 5-49).


If the system is not malfunctioning, the MIL (indicator lamp) will not light or blink.

If you wish to read the PGM-FI memory for trouble data, perform the following to reard the stored problem data.

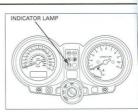


To read the stored problem data

Turn the ignition switch OFF.

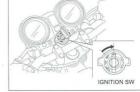

Remove the seat (page 2-2).

Short the PGM-FI system service check connector terminals using a jumper wire.

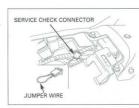


Turn the ignition switch ON and engine stop switch to RUN.


Even if the PGM-FI has memory data, the MIL does not blink while the engine is running.

If the ECM has no self diagnosis memory data, the MIL will illuminate when you turn the ignition switch

If the ECM has self diagnosis memory data, the MIL will start blinking when you turn the ignition switch

Note how many times the MIL blinks, and determine the cause of the problem (page 5-10 through 5-49).

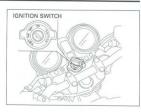


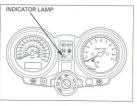


SELF-DIAGNOSIS RESET PROCEDURE

- 1. Turn the engine stop switch to RUN and ignition switch OFF.
- 2. Short the service check connector of the PGM-FI system using a jumper wire.
- 3. Turn the ignition switch ON.
- 4. Remove the jumper wire from the service check connector 5. The MIL lights for about 5 seconds.
- While the indicator lights, short the service check connector again with the jumper wire. Self diagnosis memory data is erased, if the MIL turns off and starts blinking.
- · The service check connector must be jumped while the indicator lights. If not, the MIL will not start blinking.
- · Note that the self diagnosis memory data cannot be erased if you turn off the ignition switch before the MIL starts blinking.

If the MIL blinks 20 times, the data has not been erased, so try again.

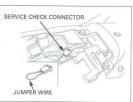

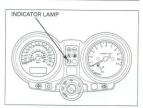

PEAK VOLTAGE INSPECTION PROCEDURE

- · Use this procedure for the ignition pulse generator and cam pulse generator inspection. · Check all system connections before inspection. If
- the system is disconnected, incorrect peak voltage might be measured.
- · Check cylinder compression and check that all the spark plugs are installed correctly. · Use the recommended digital multimeter or com-
- mercially available digital multimeter with an impedance of 10 M /DCV minimum.
- · If the Imrie diagnostic tester (model 625) is used, follow the manufacturer's instruction.
- · The display value differs depending upon the internal impedance of the multimeter.
- · Disconnect the fuel pump connector before checking the peak voltage.

Open and support the front end of fuel tank (page 3-4).

Disconnect the fuel pump/reserve sensor 3P connector.

Avoid touching Connect the peak voltage adaptor to the digital the tester probes multimeter. to prevent electric shock.


TOOLS:


Peak voltage tester (U.S.A. only) or Peak voltage adaptor 07HGJ-0020100 (not available in U.S.A.) with commercially available digital multimeter (impedance 10 M /DCV minimum)


TEST HARNESS CONNECTION


Remove the rear cowl (page 2-2). Remove the two bolts from the rear fender.

Disconnect the ECM 22P (Black) and 22P (Light gray) connectors from the unit.

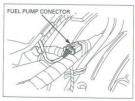

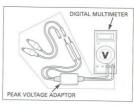

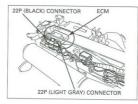


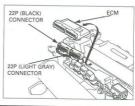

Connect the ECU test harnesses between the main wire harness and the ECM.


TOOL: ECU test harness

07YMZ-0010100 (two required)

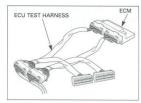


TEST HARNESS TERMINAL LAYOUT

The ECM connector terminals are numbered as shown in the illustration.

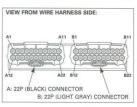

The test harness terminals are same layout as for the ECM connector terminals as shown.

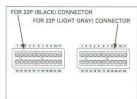

PGM-FI SELF-DIAGNOSIS MALFUNCTION INDICATOR LAMP (MIL) FAILURE CODES


- The PGM-FI MIL denotes the failure codes (the number of blinks from 0 to 33). When the indicator lights for 1.3 seconds it is equivalent to ten blinks. For example, a 1.3 second illumination and two blinks (0.5 second X 2) of the indicator equals 12 blinks. Follow code 12 on page 5-26).
- When more than one failure occurs, the MIL shows the blinks in the order of lowest number to highest number. For example, if the indicator blinks once, then two times, two failures have occurred. Follow codes 1 and 2 on page 5-12).


Numb MIL bl	er of PGM-FI inks	Causes	Symptoms (Fail-safe contents)	Refer to page
0	∰ Stay lit	Open circuit at the power input wire of the ECM FMU FMU FMU FAUIty bank angle sensor related circuit in bank angle sensor related circuit. Faulty engine stop relay Open circuit in engine stop relay related wires Faulty engine stop switch Open circuit in engine stop switch related wires Faulty leginie stop switch Faulty ignition switch Faulty ECM Blown PGM-FI fuse (20 A) Open circuit in engine stop switch ground Blown circuit in engine stop switch ground Spen science in the fuse full of Starter/ignition)	Engine does not start	_
	O No blinks	Open or short circuit in MIL wire Faulty ECM	Engine operates normally	
	∯ Stay lit	Short circuit in service check connector Faulty ECM Short circuit in service check connector wire	Engine operates normally	-
1	-⇔ Blinks	Loose or poor contacts on MAP sensor connector Open or short circuit in MAP sensor wire Faulty MAP sensor	Engine operates normally	5-12
2	-Ö- Blinks	Loose or poor connection of the MAP sensor vacuum tube Faulty MAP sensor	Engine operates normally	5-14
7	-⇔ Blinks	Loose or poor contact on ECT sensor Open or short circuit in ECT sensor wire Faulty ECT sensor	Hard start at a low temperature (Simulate using numerical values; 90°C/194°F)	5-16
8	- Ch Blinks	Loose or poor contact on TP sensor connector Open or short circuit in TP sensor wire Faulty TP sensor	Poor engine response when operating the throttle quickly (Simulate using numerical values; Throttle opens 0")	5-18
9	-Ö- Blinks	Loose or poor contact on IAT sensor Open or short circuit in IAT sensor wire Faulty IAT sensor	Engine operates normally (Simulate using numerical values; 25°C/77°F)	5-22

FUEL SYSTEM (Programmed Fuel Injection)

Number of PGM-FI malfunction indicator blinks		Causes	Symptoms (Fail-safe contents)	Refer to page
11	-Ö- Blinks	Loose or poor contact on vehicle speed sensor connector Open or short circuit in vehicle speed sensor connector Faulty vehicle speed sensor	Engine operates normally	5-24
12	- 💢 Blinks	Loose or poor contact on No.1 injector connector Open or short circuit in No.1 injector wire Faulty No.1 injector	Engine does not start	5-26
13	Blinks	Loose or poor contact on No.2 injector connector Open or short circuit in No.2 injector wire Faulty No.2 injector	Engine does not start	5-29
14	Blinks	Loose or poor contact on No.3 injector connector Open or short circuit in No.3 injector wire Faulty No.3 injector	Engine does not start	5-32
15	- 💢- Blinks	Loose or poor contact on No.4 injector connector Open or short circuit in No.4 injector wire Faulty No.4 injector	Engine does not start	5-35
18	-Ö- Blinks	Loose or poor contact on cam pulse generator Open or short circuit in cam pulse generator Faulty cam pulse generator	Engine does not start	5-38
19	-Ö- Blinks	Loose or poor contact on ignition pulse generator connector Open or short circuit in ignition pulse generator Faulty ignition pulse generator	Engine does not start	5-40
20	-Ö- Blinks	Faulty E ² -PROM in ECM	Engine operates normally Does not hold the self- diagnosis data	5-48

PGM-FI MIL 1 BLINK (MAP SENSOR)

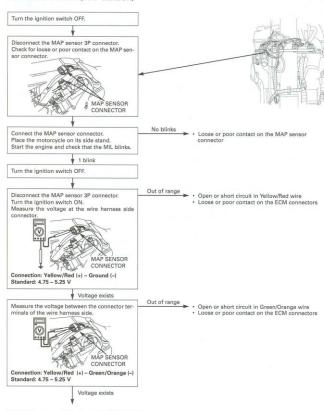

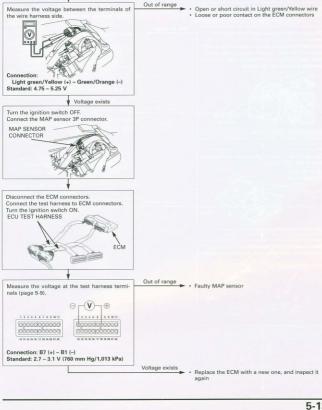


PGM-FI MIL 2 BLINKS (MAP SENSOR)


Turn the ignition switch OFF. Disconnect the vacuum tube from the MAP sensor Connect the vacuum gauge between the throttle body and the MAP sensor using a 3-way joint. Start the engine and measure the manifold absolute pressure at idle speed. VACUUM GAUGE Standard: 200 - 250 mm Hg Disconnect the vacuum gauge and connect the tube to the MAP sensor. MAP SENSOR CONNECTOR Disconnect the ECM connectors. Connect the test harness to the ECM connector. **ECU TEST HARNESS**


Out of range

• Check the tube installation

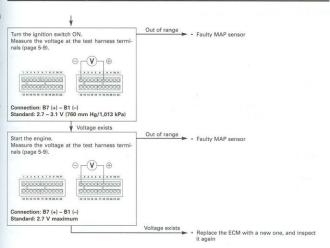



PGM-FI MIL 7 BLINKS (ECT SENSOR)

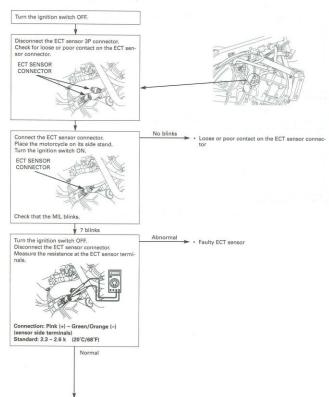


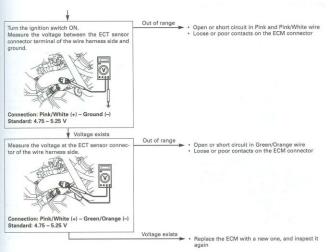

PGM-FI MIL 8 BLINKS (TP SENSOR)

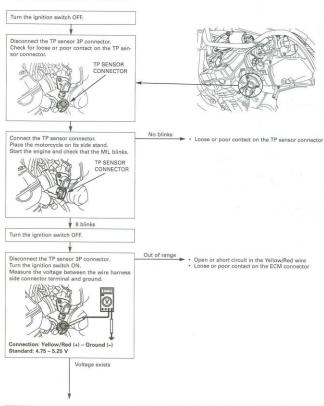

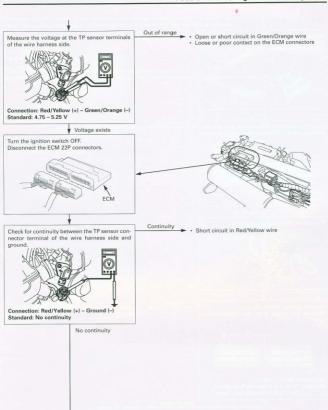

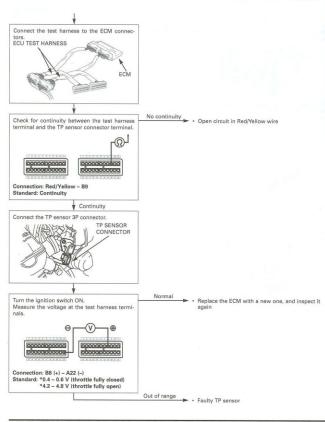

A voltage marked * refers to the value when the voltage reading at the TP sensor 3P connector (page 5-19) shows 5 V. When the reading shows other than 5 V, derive a voltage at the test harness as follows:


In the case of a voltage of 4.75 V at the TP sensor 3P connector:


0.4 X 4.75/5.0 = 0.38 V 0.6 X 4.75/5.0 = 0.57 V

Thus, the solution is "0.38 - 0.57 V" with the throttle fully closed.


Replace 0.4 and 0.6 with 4.2 and 4.8 respectively, in the above equations to determine the throttle fully open range.


PGM-FI MIL 9 BLINKS (IAT SENSOR)

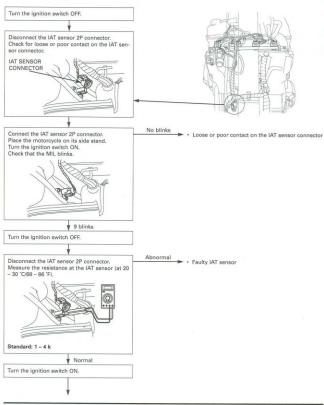

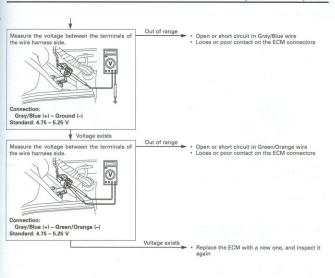

PGM-FI MIL 11 BLINKS (VEHICLE SPEED SENSOR)

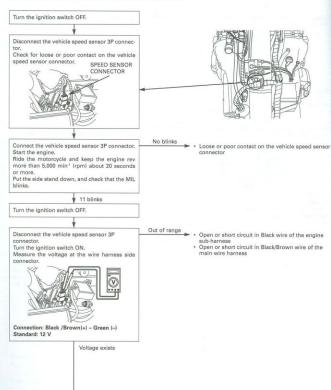

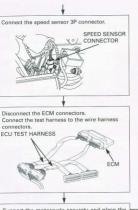

Support the motorcycle securely and place the rear wheel off the ground.

Shift the transmission into gear.

Measure the voltage at the test harness terminals with the ignition switch is ON while slowly turning the rear wheel by hand.




Abnormal


Open or short circuit in Pink/Green wire of the main wire harness


Normal Replace the ECM with a new one, and inspect it

again


PGM-FI MIL 12 BLINKS (No.1 INJECTOR)

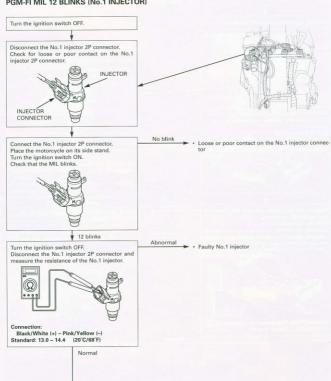


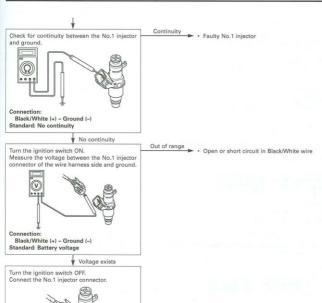

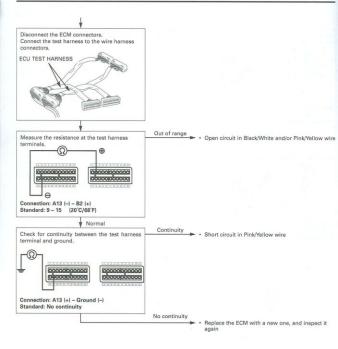


PGM-FI MIL 13 BLINKS (No.2 INJECTOR)

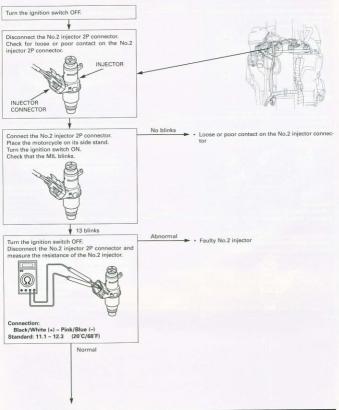

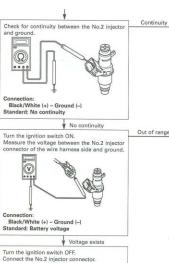



Out of range - Open or short circuit in Black/White wire

· Faulty No.2 injector

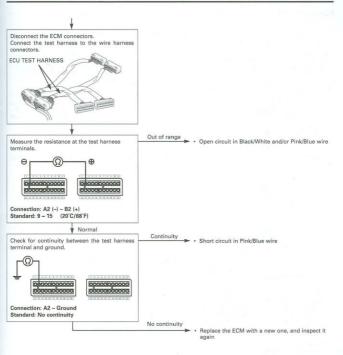

PGM-FI MIL 14 BLINKS (No.3 INJECTOR)

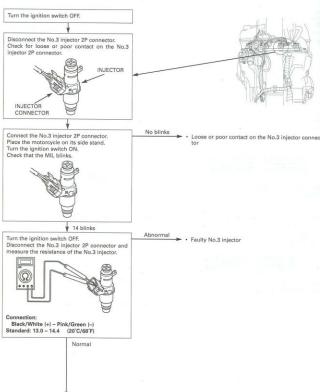

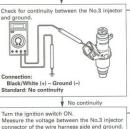

Continuity Faulty No.3 injector




Connection: Black/White (+) - Ground (-) Standard: Battery voltage

Voltage exists


Turn the ignition switch OFF. Connect the No.3 injector connector.





Out of range
Open or short circuit in Black/White wire

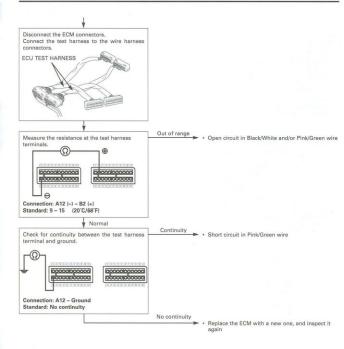


PGM-FI MIL 15 BLINKS (No.4 INJECTOR)

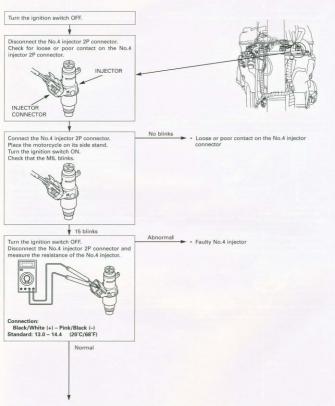


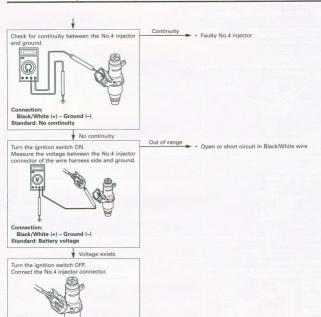

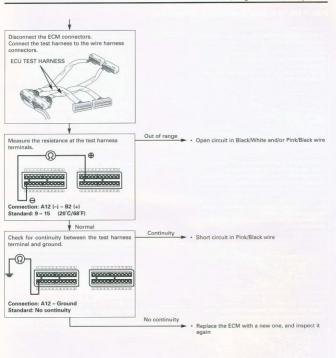



PGM-FI MIL 18 BLINKS (CAM PULSE GENERATOR)

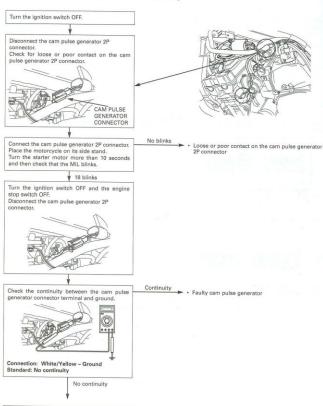

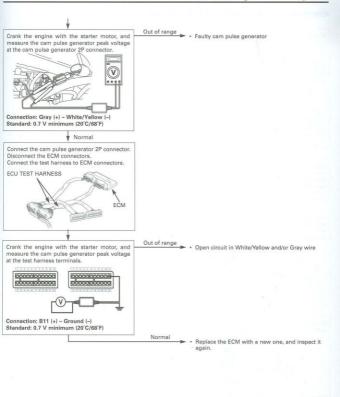



PGM-FI MIL 19 BLINKS (IGNITION PULSE GENERATOR)

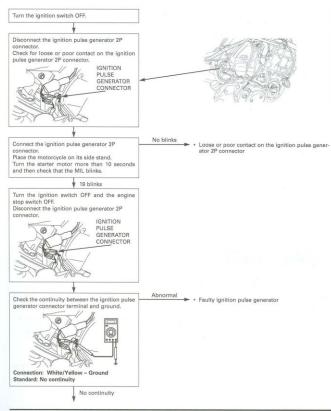

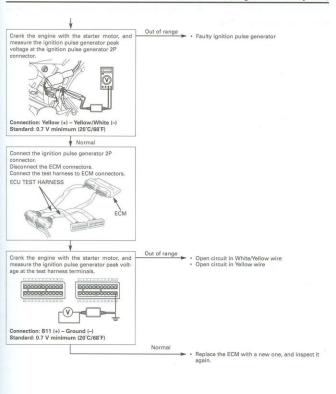

PGM-FI MIL 20 BLINKS (E2-PROM)

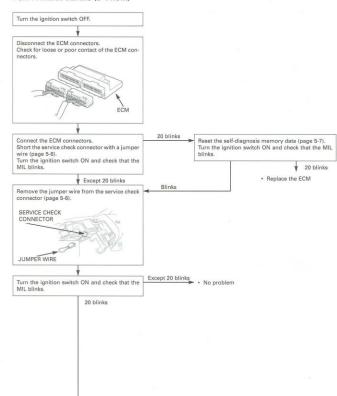

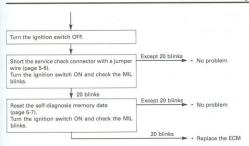

FUEL LINE INSPECTION

FUEL PRESSURE INSPECTION

NOTICE


- Before disconnecting fuel tubes, release the fuel pressure by loosening the service check bolt at the fuel tank.
- Always replace the sealing washers when the service check bolt is removed or loosened.

Open and support the front end of the fuel tank (page 3-4),

Remove the air cleaner housing side cover (page 2-2).

Unhook the battery cover retainers, then open the battery cover,

Disconnect the battery negative cable from the battery terminal.

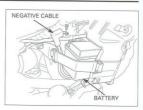

Disconnect the pressure regulator vacuum tube and plug the vacuum tube.



Cover the fuel hose sealing nut with a rag or shop towel.

Slowly loosen the fuel hose sealing nut and catch the remaining fuel using a approved gasoline container.



Remove the fuel tube sealing nut. Install the special nut (Honda Genuine part) and attach the fuel pressure gauge.

Special nut:


Part No. 90201-90A-003

TOOL:

Fuel pressure gauge

07406-0040002

07406-0040003

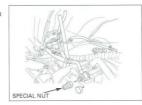

Connect the battery negative cable. Start the engine. Read the fuel pressure at idle speed.

IDLE SPEED: 1,200 ± 100 min-1 (rpm) STANDARD: 343 kPa (3.5 kgf/cm², 50 psi)

If the fuel pressure is higher than specified, inspect the following:

- Pinched or clogged fuel return hose - Pressure regulator
- Fuel pump (page 5-47)

If the fuel pressure is lower than specified, inspect the following:

- Fuel line leaking

Always replace

the sealing wash-

er when the fuel


rail sealing nut is removed or

loosened.

- Clogged fuel filter
- Pressure regulator
- Fuel pump (page 5-47)

After inspection, remove the fuel pressure gauge and reinstall and tighten the fuel hose sealing nut using the new sealing washer.

TORQUE: 22 N·m (2.2 kgf·m, 16 lbf·ft)

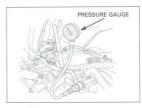



Connect the pressure regulator vacuum tube.


Install the removed parts in the reverse order of removal.



FUEL FLOW INSPECTION

Remove the seat (page 2-2). Open and support the front end of the fuel tank (page 3-15).


Disconnect the fuel cut relay connector.

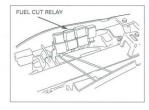

Check the wire color when you select the fuel cut relay.

Jump the Brown and Black/White wire terminals of the wire harness side using a jumper wire.

- · When the fuel return hose is disconnected, gasoline will spill out from the hose. Use an approved gasoline container to drain the gasoline.
- · Wipe off spilled gasoline.

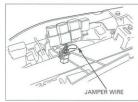

Disconnect the fuel return hose at the fuel tank, plug the fuel tank inlet joint.

Turn the ignition switch ON for 10 seconds. Measure the amount of fuel flow.

Amount of fuel flow: 256 cm3 (8.7 US oz, 9.0 lmp oz) minimum /10 seconds at 12 V

If the fuel flow is less than specified, inspect the following:

- Pinched or clogged fuel hose and fuel return hose
- Clogged fuel filter
- Pressure regulator
- Fuel pump (page 5-47)

After inspection, connect the fuel return hose, Start the engine and check for leaks.





FUEL PUMP

INSPECTION

Turn the ignition switch ON and confirm that the fuel pump operates for a few seconds. If the fuel pump does not operate, inspect as follows:

Open and support the front end of the fuel tank

(page 3-15).

Disconnect the fuel pump 3P connector.

Turn the ignition switch ON and measure the voltage between the terminals.

Connection: Brown (+) - Green (-)

There should be battery voltage for a few seconds.

If there is battery voltage, replace the fuel pump.

- If there is no battery voltage, inspect the following:
- Main fuse 30A
 Sub fuse 10A
- Engine stop switch (page 19-19)
- Fuel cut relay (page 5-48)
- Engine stop relay (page 5-76)
- Bank angle sensor (page 5-75)
- ECM (page 5-76)

REMOVAL


NOTE:

- Before disconnecting the fuel hose, release the fuel pressure by loosening the fuel hose sealing nut at the throttle body.
- Always replace the sealing washers when the fuel hose sealing nut is removed or loosened.


Remove the fuel tank (page 5-49).

Remove the fuel pump mounting nuts.

Remove the fuel pump assembly and packing.

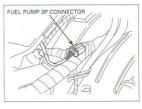



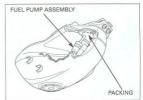

FUEL FILTER REPLACEMENT


Disconnect the fuel tubes from the fuel filter. Remove the screws and fuel filter.

Note the direction of the fuel filter.

Do not damage the fuel reverye

sensor


Install the fuel filter in the reverse order of removal.

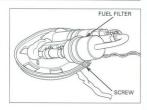

INSTALLATION


Always replace packing with a new one. Place new packing onto the fuel tank.

Install the fuel pump, being careful not to damage the fuel pump wire.

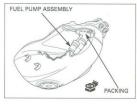

Install and tighten the fuel pump mounting nuts in the sequence shown.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

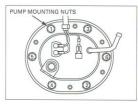


FUEL CUT RELAY

INSPECTION

Remove the rear cowl (page 2-3).

Check the wire color when you select the fuel cut relay.

Disconnect the fuel cut relay 4P connector, remove the fuel cut relay.

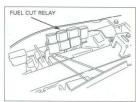

Connect the ohmmeter to the fuel cut relay connector terminals.


CONNECTION: Black/White - Brown

Connect the 12V battery to the following fuel cut relay connector terminals.

CONNECTION: Brown/Black - Black/White

There should be continuity only when the 12V battery is connected.

If there is no continuity when the 12V battery is connected, replace the fuel cut relay.

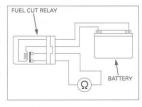


FUEL TANK

REMOVAL

Remove the side cover (page 2-2).

Loosen the fuel tank mounting bolt/nut.

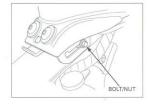

Do not remove the maintenance wire bolt yet.

Slide the fuel tank to the backward.

Open the front end of the fuel tank and support it using a suitable support.

Tighten the fuel tank mounting bolt/nut to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

Release the fuel pressure (page 5-44).



Disconnect the fuel tank air vent hose and overflow tube.

Remove the fuel hose sealing nut and sealing washers, then disconnect the fuel hose (page 5-44).

NOTE:

- . Do not apply excessive force to the fuel pipe.
- Always hold the fuel pipe nut while removing the fuel hose sealing nut.


Temporarily install the 12 X 30 mm bolt (pitch 1.25) and sealing washers to the fuel hose banjo, then tighten the sealing nut.



Remove the following:

- fuel tank over flow hose
- fuel tank air vent hose
- fuel pump/reserve sensor 3P connector


Clamp the the fuel return hose.
Disconnect the fuel return hose at the pressure regulator.

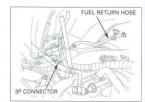

Remove the bolt and maintenance wire.



Close the fuel tank. Remove the fuel tank mounting bolt/nut and fuel tank.

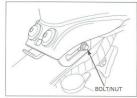

Place the fuel tank upside down.


NOTICE

Do not damage the fuel tank.

Disconnect the fuel return tube from the fuel pump. Remove the fuel hose banjo bolt and sealing washers, then remove the fuel hose from the fuel pump.

Refer to page 5-47 for fuel pump removal.



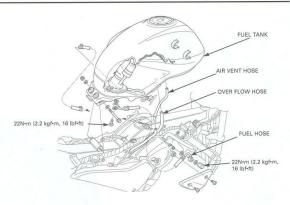

Connect the fuel hose to the fuel pump with new sealing washers.

Install and tighten the fuel hose banjo bolt to the specified torque.

TORQUE: 22 N·m (2.2 kgf·m, 16 lbf·ft)


Connect the fuel return hose to the fuel pump.



Align the fuel hose eyelet joint with the stopper on the fuel pump.

Install the fuel tank onto the frame. Loosely install the fuel tank mounting bolt/nut.

Support the front end of the fuel tank.

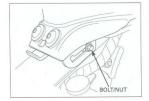


FUEL SYSTEM (Programmed Fuel Injection)

Install the following:

- fuel tank over flow hose
- fuel tank air vent hose
- fuel pump/reserve sensor 3P connector

Connect the fuel return tube to the pressure regulator. Connect the fuel pump/reserve sensor 3P (Black) connector.

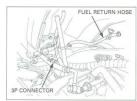

Install and tighten the fuel tank maintenance bolt. Support the front end of the fuel tank,



Connect the fuel hose banjo to the throttle body with new sealing washers.

While pushing the fuel hose banjo stopper to the throttle body, install and tighten the sealing nut to the specified torque.

NOTE:

- Do not apply excessive force to the fuel pipe.
 Always hold the fuel pipe nut while tightening the
- fuel hose sealing nut.

TORQUE: 22 N·m (2.2 kgf·m, 16 lbf·ft)

Remove the supporting tool and close the fuel tank.

Slide the fuel tank forward and install the fuel tank stay to the frame rubber.

Tighten the fuel tank mounting bolt/nut to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

Install the side cover (page 2-2).





AIR CLEANER HOUSING

REMOVAL

Remove the throttle cables from the right handlebar switch housing (page 13-3).

Remove the following:

- fuel tank (page 5-49)
- air cleaner element (page 3-5)

Remove the vacuum tubes from the intake air duct control solenoid valve.

Disconnect the intake air duct control solenoid valve 2P connector.

Disconnect the cam pulse generator 2P connector.

Disconnect the crankcase breather tube from the air cleaner housing.

Carifornia type only: Disconnect the No.5 tube from the five way joint.





Disconnect the fuel injector 8P connector.

Disconnect the No 4 fuel injector 2P connector.




Remove the starter valve knob stay bolt.



FUEL SYSTEM (Programmed Fuel Injection)


Remove the IAT sensor 2P connector.

Remove the air cleaner housing mounting bolt.

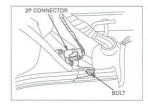

Loosen the insulator band screws (cylinder head side).

Disconnect the throttle body from the cylinder head. Remove the air cleaner housing/throttle body from the left side of the frame.

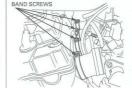

NOTE:

Seal the cylinder head intake ports with tape or a clean cloth to keep dirt and debris from entering the intake ports after the throttle body has been removed.

DISASSEMBLY

Remove the vacuum tube from the one-way valve.




Remove the screws from the air cleaner housing and separate the housing.



Remove the air funnel mounting screws, then remove the air funnels.

Remove the air cleaner housing.

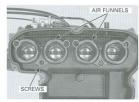

ASSEMBLY


Check the rubber seals for damage and replace if necessary.

Check the rubber seals (air cleaner housing mating surface side) for damage and replace if necessary.



Check the rubber seals (air cleaner housing mating surface side) for damage and replace if necessary.

Install the air cleaner housing onto the throttle body. Install the air funnels in their proper locations. Install and tighten the air funnel mounting screws securely.

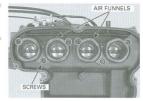

Assemble the air cleaner housing halves. Install and tighten the screws securely.



Connect the vacuum tube to the one-way valve.

Connect the crankcase breather tube to the air cleaner housing.

Connect the PAIR control valve air suction tube and intake vacuum tubes to the air cleaner housing.

Connect the MAP sensor connector and vacuum tube.




INSTALLATION

Install the air cleaner housing/throttle body from the left side of the frame.

Tighten the cylinder head side insulator band so that the insulator band distance is 4 ± 1 mm (0.2 \pm 0.04 in).



Install the IAT sensor 2P connector.
Install the air cleaner housing mounting bolt.

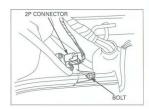

Install and tighten the by-starter valve knob stay bolt.



Connect the fuel injector 8P connector.
Connect the No.4 fuel injector 2P connector.



Connect the crankcase breather tube to the air cleaner housing.



Install the vacuum tubes to the intake air duct control solenoid valve.

Connect the intake air duct control solenoid valve 2P connector.

Connect the cam pulse generator 2P connector.

Install the following:

- air cleaner element (page 3-5)

- fuel tank (page 5-51)

Connect the throttle cables to the throttle pipe (page 13-9).



THROTTLE BODY

body.

REMOVAL

NOTE:

· Before disconnecting the fuel hose, release the fuel pressure by loosening the service check bolt.

· Always replace the sealing washer when the service check bolt is removed or loosened.

DISASSEMBLY

Remove the throttle body sub-harness from the TP Refer to page (Throttle position) sensor. 5-54 for removal Disconnect the fuel injector connector from the of the throttle throttle body.


Disconnect the vacuum tubes from the throttle body.





Do not snap the throttle valve from full open to full close after the throttle cable has been removed. It may cause incorrect idle operation.

Loosen the insulator band screws and remove the insulators from the throttle body.

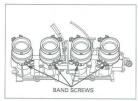


Disconnect the throttle cable ends from the throttle drum.




NOTICE

- · Do not damage the throttle body. It may cause incorrect throttle and idle valve synchronization.
- The throttle body is factory pre-set. Do not disassemble in a way other than shown in this manual.
 Do not loosen or tighten the white painted bolts and screws of the throttle body. Loosening or tightening them can cause throttle and idle valve synchronization failure.

TOP VIEW:

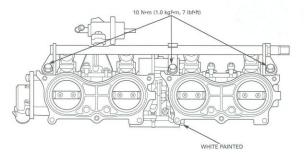


REAR VIEW:

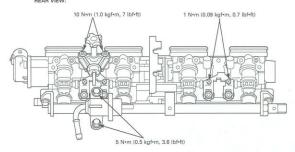


RIGHT SIDE VIEW:

CALIFORNIA TYPE ONLY:

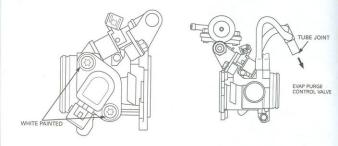

THROTTLE BODY VACUUM TUBE ROUTING

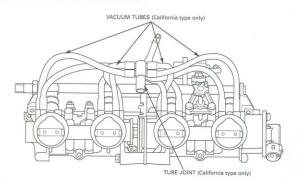


ASSEMBLY

Connect the throttle cable ends to the throttle drum.



Check the insulator band angle. Install the insulators onto the throttle body.

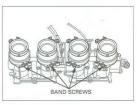

Tighten the throttle body side insulator band so that the insulator band distance is $7 \pm 1 \text{ mm}$ (0.3 \pm 0.04 in).

Apply oil to the insulator inside surfaces for ease of throttle body installation.



Connect the vacuum tube to the throttle body.



FUEL SYSTEM (Programmed Fuel Injection)

Route the throttle body sub-harness properly and connect the injector connectors and TP sensor connector,

Install the throttle body to the air cleaner case (page 5-55).




INJECTOR

INSPECTION

Start the engine and let it idle. Confirm the injector operating sounds with a sounding rod or stethoscope.


If the injector does not operate, replace the injector.

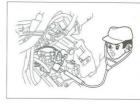


REMOVAL

Remove the throttle body (page 5-58).

Remove the bolts and fuel rail assembly.

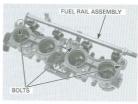


Remove the injectors from the fuel rail.

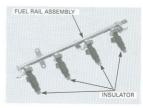

Remove the O-rings.

INSTALLATION

Replace the Orings with new ones as a set. Apply oil to the new O-rings.
Install the new O-rings and being careful not to damage the O-ring.

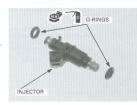

Install the fuel injectors into the fuel rail, being careful not to damage the O-rings.



Install the fuel rail assembly onto the throttle body, being careful not to damage the O-rings. Install and tighten the fuel rail mounting bolts to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

Install the throttle body (page 5-66).



PRESSURE REGULATOR

REMOVAL/INSTALLATION

NOTE:

Do not apply excessive force to the fuel rail.

Hold the fuel rail securely, remove the pressure regulator mounting bolts, then remove the pressure regulator.



Disconnect the vacuum tube from the pressure regulator.

Install a new O-ring into the pressure regulator body. Install the pressure regulator onto the fuel pipe.

Connect the vacuum tube to the pressure regulator.



Hold the fuel pipe securely, tighten the pressure regulator mounting bolts to the specified torque.

TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)



STARTER VALVE CABLE/THROTTLE STOP CONTROL KNOB

REMOVAL

Do not turn the throttle stop control knob. Remove the cable stay mounting screws.

Remove the starter valve cable end from the link arm.


Remove the cable stay/throttle stop control knob.

CABLE STAY SCREWS

INSTALLATION

Connect the starter valve cable end to the link arm.

Install the starter valve cable to the cable stay and tighten the cable stay mounting screws securely.

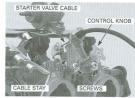


STARTER VALVE

DISASSEMBLY

Remove the fuel rail and injectors (page 5-62).

Turn each starter valve adjusting screw in, counting the number of turns until it seats lightly. Record the number of turns.

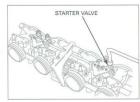

STARTER VALVE ARM

Remove the starter valve cable/throttle stop control knob (page 5-62).

Remove the starter valve arm screws and starter valve arm.




LINK ARM

Remove the screws and link arm.



Remove the starter valve shaft and three collars.

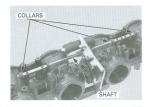

FUEL SYSTEM (Programmed Fuel Injection)


Loosen the lock nut and remove the starter valve assembly,




Do not apply commercially available carburetor cleaners to the inside of the throttle bore, which is coated with molybdenum.

Do not apply com- Clean the starter valve bypass using compressed air.



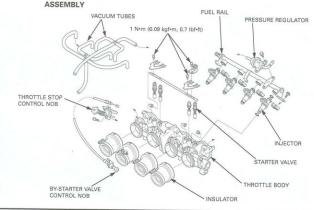


Check the starter valve and spring for damage.

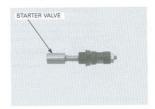


Install the starter valve assembly into the valve hole.

Tighten the starter valve lock nut to the specified torque.

TORQUE: 2 N·m (0.18 kgf·m, 1.3 lbf·ft)

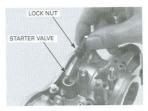

Install the starter valve shaft and three collars.

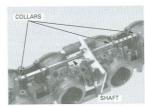

LINK ARM

Install the link arm to the starter valve shaft and tighten the mounting screws to the specified torque.

TORQUE: 1 N·m (0.09 kgf·m, 0.7 lbf·ft)




STARTER VALVE ARM

Install the starter valve arms onto the starter valves. Install and tighten the starter valve arm mounting screws to the specified torque.


TORQUE: 1 N·m (0.09 kgf·m, 0.7 lbf·ft)

Install the starter valve cable/throttle stop control nob (page 5-64).

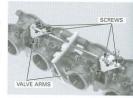

Turn the starter valve screw until it seats lightly, then back it out as noted during removal.

Install the throttle body (page 5-66).

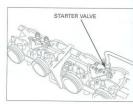

STARTER VALVE SYNCHRONIZATION

NOTE

- Synchronize the starter valve with the engine at the normal operating temperature and with the transmission in neutral.
- Use a tachometer with graduations of 50 rpm or smaller that will accurately indicate 50 rpm change.


Open and support the front end of fuel tank (page 3-15).

Remove the No.1 and No.4 vacuum tubes from the throttle body.


Connect the tubes to the vacuum gauge.

Connect the tachometer.



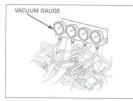

Disconnect the PAIR air suction hoses from the reed valve covers and plug the cover.

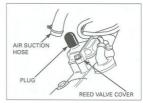

Start the engine and adjust the idle speed.

IDLE SPEED: 1,200 ± 100 min-1 (rpm)

The No.2 starter

valve cannot be

adjusted, it is the base starter valve.


Adjust each intake vacuum pressure with the No.2 cylinder.



Remove the plugs and connect the PAIR air suction hoses to the reed valve covers.


Adjust the idle speed if the idle speed differs from the specified speed.

IDLE SPEED: 1,200 ± 100 min-1 (rpm)

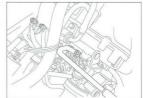

Remove the vacuum gauge from the vacuum tubes. Connect the pressure regulator vacuum tubes to the 3-way joint.

Connect the No.1 and No.4 cylinder vacuum tube to the throttle body.

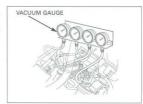

MAP SENSOR

OUTPUT VOLTAGE INSPECTION


Connect the test harness to the ECM (page 5-8).

Measure the voltage at the test harness terminals (page 5-9).

CONNECTION: B7 (+) - B1 (-) STANDARD: 2.7 - 3.1 V

The MAP sensor output voltage (above) is measured under the standard atmosphere (1 atm = 1,030 hPa). The MAP sensor output voltage is affected by the distance above sea level, because the output voltage is changed by atmosphere.

Check the sea level measurement and be sure that the measured voltage falls within the specified value.

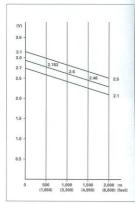

MAP SENSOR REMOVAL/INSTALLA-TION

Remove the fuel tank (page 5-49).

Disconnect the MAP sensor connector.

Disconnect the vacuum tube from the MAP sensor.



Remove the air cleaner housing (page 5-53).

Remove the screw and MAP sensor from the air cleaner housing.

Installation is in the reverse order of removal.



IAT SENSOR

REMOVAL/INSTALLATION

Open and support the front end of the fuel tank (page 3-4).


Disconnect the IAT sensor connector.

Remove the screws and IAT sensor from the air cleaner housing cover.

Check the O-ring for damage and replace if necessary.

Installation is in the reverse order of removal.



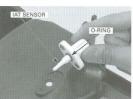

ECT SENSOR

REMOVAL/INSTALLATION


Drain the coolant from the system (page 6-5). Remove the thermostat (page 6-6).

Replace the ECT sensor while the engine is cold.

Always replace a sealing washer

with a new one.

Disconnect the ECT sensor connector from the sensor.

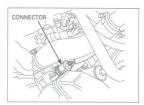

Remove the ECT sensor and sealing washer. Install the new sealing washer and ECT sensor. Tighten the ECT sensor to the specified torque.

TORQUE: 23 N-m (2.3 kgf-m, 17 lbf-ft)

Connect the ECT sensor connector.

Fill the cooling system with recommended coolant (page 6-5).



CAM PULSE GENERATOR

REMOVAL/INSTALLATION

Open and support the front end of fuel tank (page 3-4).

Disconnect the cam pulse generator 2P connector.



Remove the bolt and cam pulse generator from the cylinder head.




Install the new O-ring onto the cam pulse generator. Install the cam pulse generator into the cylinder head.

Install and tighten the mounting bolt securely.



Route the cam pulse generator wire properly, connect the 2P connector.

Install the removed parts in the reverse order of removal.

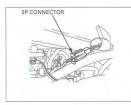

TP SENSOR

INSPECTION

Remove the rear cowl (page 2-3).

Disconnect the ECM 22P (Black) and 22P (Light gray)

Check the connector for loose or corroded terminals.

Connect the ECU test harness between the ECM and main wire harness.

TOOL:

ECU test harness

07YMZ-0010100 (two required)

1. INPUT VOLTAGE INSPECTION


Turn the ignition switch ON and measure and record the input voltage at the test harness terminals using a digital multimeter.

CONNECTION:

B1 (+) - A22 (-) Standard: 4.5 - 5.5 V

If the measurement is out of specification, check the following:

- Loose connection of the ECM multi-connector
- Open circuit in wire harness

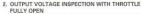


Turn the ignition switch ON and measure and record the output voltage at the test harness terminals.


CONNECTION:


B1 (+) - B9 (-)

MEASURING CONDITION:

At throttle fully open

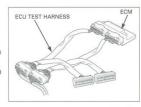

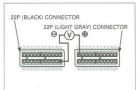

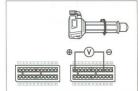


3. OUTPUT VOLTAGE INSPECTION WITH THROTTLE FULLY CLOSED

Turn the ignition switch ON and measure and record the output voltage with the throttle fully closed.

CONNECTION:

B1 (+) - B9 (-)

MEASURING CONDITION: At throttle fully closed

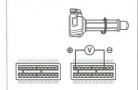

4. CALCULATE RESULT COMPARISON

Compare the measurement to the result of the following calculation.

With the throttle fully open: Measured input voltage X 0.824= Vo

The sensor is normal if the measurement output voltage measured in step 2 is within 10% of Vo.

With the throttle fully closed: Measured input voltage X 0.1 = Vc

The sensor is normal if the throttle closed output voltage measured in step 3 is within 10% of Vc.

Using an analog meter, check that the needle of the voltmeter swings slowly when the throttle is opened gradually.


CONTINUITY INSPECTION

Open and support the front end of fuel tank (page 3-4).

Disconnect the ECM 22P (Light gray) connector and the TP sensor 3P connector.

Check for continuity between the wire harness and TP sensor.

If there is no continuity, check for an open or short circuit in the wire harness.

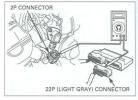


BANK ANGLE SENSOR

INSPECTION

Support the motorcycle on a level surface. Remove the rear cowl (page 2-3).


Turn the ignition switch ON and measure the voltage between the following terminals of the bank angle sensor connector with the connector connected.

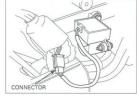

TERMINAL	STANDARD
White (+) - Green (-)	Battery voltage
Red/Green (+) - Green (-)	0 - 1 V

Do not disconnect the bank angle sensor connector during inspection.

Turn the ignition switch OFF. Remove the screws, washers, nuts and bank angle sensor.

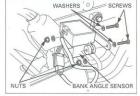


Place the bank angle sensor horizontal as shown, and turn the ignition switch ON.

The bank angle sensor is normal if the engine stop relay clicks and power supply is closed.

Incline the bank angle sensor approximately 60 degrees to the left or right with the ignition switch ON.

The bank angle sensor is normal if the engine stop relay clicks and power supply is open.


If you repeat this test, first turn the ignition switch OFF, then turn the ignition switch ON.

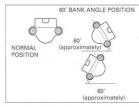

REMOVAL/INSTALLATION

Disconnect the bank angle sensor 3P (Green) connector.


Remove the two screws, nuts and bank angle sensor.

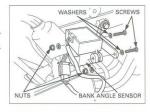

Install the bank angle sensor with its "UP" mark facing up.

Installation is in the reverse order of removal.

Tighten the mounting screws securely.

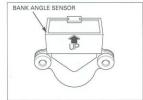


ENGINE STOP RELAY

INSPECTION

Check the wire color when you select the engine stop relay.

Disconnect the engine stop relay 4P connector.

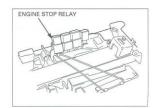

Connect the ohmmeter to the engine stop relay connector terminals.


CONNECTION: Red/White - Black/White

Connect the 12 V battery to the following engine stop relay connector terminals.

CONNECTION: Red/Orange - Black

There should be continuity only when the 12 V battery is connected.

If there is no continuity when the 12 V battery is connected, replace the engine stop relay.

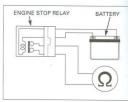


ECM (ENGINE CONTROL MODULE)

REMOVAL/INSTALLATION

Remove the rear cowl (page 2-2).

Disconnect the ECM 22P (Black) and 22P (Light gray) connectors.

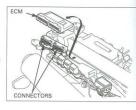

POWER/GROUND LINE INSPECTION

Connect the test harness between the main wire harness and ECM (page 5-7). TOOL .

ECU test harness

07YMZ-0010100 (two required)

GROUND LINE

Check for continuity between the ECM test harness connector A9 terminal and ground, between the A20 terminal and ground, and between the A12 terminal and ground.

There should be continuity at all times.

If there is no continuity, check for an open circuit in Green/Pink wire and Green wire.


POWER INPUT LINE Turn the ignition switch ON with the engine stop switch in the RUN position.


Measure the voltage between the ECM test harness.

connector B6 terminal (+) and ground. There should be battery voltage.

If there is no voltage, check for an open circuit in Black/White wire between the ECM and bank angle sensor/relay.

If the wire is OK, check for the bank angle sensor/relay (page 5-76).

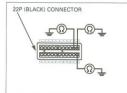

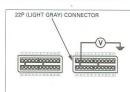


PAIR SOLENOID VALVE

REMOVAL/INSTALLATION


Remove the air cleaner housing (page 5-60).

Disconnect the PAIR solenoid valve 2P (Black) connector.

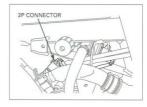

Disconnect the PAIR air suction hose and air injection hoses.

Remove the bolt and PAIR solenoid valve.

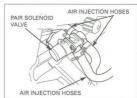


Installation is in the reverse order of removal.

INSPECTION

Remove the PAIR solenoid valve.


Check that air flows (A) to (B) only when the 12 V battery is connected to the PAIR solenoid valve terminals.

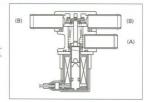

Check the resistance between the terminals of the PAIR solenoid valve.

STANDARD: 20 - 24 (20 °C/68°F)

If the resistance is out of specification, replace the PAIR solenoid valve.

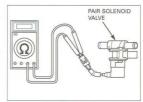

EVAPORATIVE EMISSION CONTROL SYSTEM (California type only)


Note:


 Refer to the Vacuum Hose Routing Diagram and Cable & Harness Routing (page 1-33) for the tube connections and routing.

EVAPORATIVE EMISSION (EVAP) CANISTER REMOVAL/INSTALLATION

Disconnect the No.1 and No.4 tube from the EVAP canister and remove them from the clamp. Remove the bolts, nuts and the EVAP canister from the bracket.

Install the EVAP canister in the reverse order of removal.

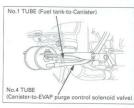

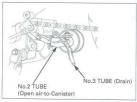

EVAP PURGE CONTROL SOLENOID VALVE

REMOVAL/INSTALLATION

Disconnect the No.4 and No.5 tubes from the EVAP purge control solenoid valve.

Remove the bolts, nuts and solenoid valve from the

stay.

Disconnect the 2P connector from the solenoid valve.

Install the solenoid valve in the reverse order of removal.

INSPECTION

Remove the solenoid valve.

Check air flow from tube fitting (A) (input port) to tube fitting (B) (output port).


Air should not flow out.


Connect the 12 V battery to the solenoid valve connector.

CONNECTION:


Battery (+) - Black/White terminal Battery (-) - Yellow/Black terminal

Air should flow when the battery is connected.

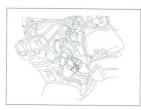

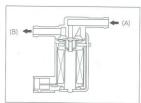

SYSTEM FLOW PATTERN

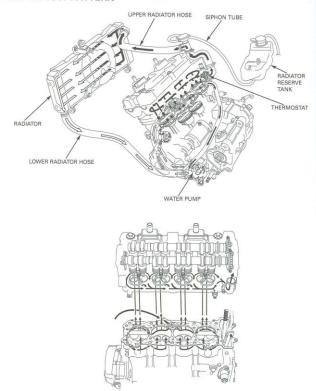

6. COOLING SYSTEM

SYSTEM FLOW PATTERN	6-0	THERMOSTAT	6-6
SERVICE INFORMATION	6-1	RADIATOR	6-7
TROUBLESHOOTING	6-2	WATER PUMP	6-12
SYSTEM TESTING	6-3	RADIATOR RESERVE TANK	6-15
COOLANT REPLACEMENT	6-4		

SERVICE INFORMATION

GENERAL

WARNING

Removing the radiator cap while the engine is hot can cause the coolant to spray out, seriously scalding you.

Always let the engine and radiator cool down before removing the radiator cap.

- · If any coolant gets in your eyes, rinse them with water and consult a doctor immediately.
- If any coolant is swallowed, induce vomiting, gargle and consult a physician immediately.
 If any coolant gets on your skin or clothes, rinse thoroughly with plenty of water.
- in unity cooluin

NOTICE

Using coolant with silicate inhibitors may cause premature wear of water pump seals or blockage of radiator passages. Using tap water may cause engine damage.

- Add coolant at the reserve tank. Do not remove the radiator cap except to refill or drain the system.
- · All cooling system services can be done with the engine in the frame.
- · Avoid spilling coolant on painted surfaces.
- · After servicing the system, check for leaks with a cooling system tester.
- . Refer to section 19 for fan motor relay and coolant temperature sensor inspection.

SPECIFICATIONS

ITEM		SPECIFICATIONS						
Coolant capacity	Radiator and engine	3.2 liter (3.38 US qt, 2.82 Imp qt)						
	Reserve tank	0.8 liter (0.85 US qt, 0.70 Imp qt)						
Radiator cap relief press	sure	108 - 137 kPa (1.1 - 1.4 kgf/cm², 16 - 20 psi)						
	Begin to open	80 - 84 °C (176 - 183 °F)						
	Fully open	95°C (203 °F)						
	Valve lift	8 mm (0.3 in) minimum						
Recommended antifreez	e	Pro Honda Coolant or an equivalent high quality ethylene gly- col antifreeze containing corrosion protection inhibitors specifically recommended for use in aluminum engines						
Standard coolant concer	ntration	50/50% mixture with soft water						

TORQUE VALUES

Water pump cover flange bolt Thermostat cover flange bolt ECT/thermo sensor Cooling fan mounting nut Fan motor mounting nut

12 N+m (1.2 kgf+m, 9 lbf+ft) 12 N·m (1.2 kgf·m, 9 lbf·ft)

23 N+m (2.3 kgf+m, 17 lbf+ft) 3 N·m (0.27 kgf·m, 2.0 lbf·ft) 5 N·m (0.5 kaf·m, 3.6 lbf·ft)

CT bolt CT bolt

Apply a locking agent to the threads

TROUBLESHOOTING

Engine temperature too high

- · Faulty temperature gauge or ECT/thermo sensor · Thermostat stuck closed
- · Faulty radiator cap
- · Insufficient coolant
- · Passages blocked in radiator, hoses or water jacket
- · Air in system
- · Faulty cooling fan motor
- · Faulty fan motor relay
- · Faulty water pump

Engine temperature too low

- · Faulty temperature gauge or ECT/thermo sensor
- · Thermostat stuck open
- · Faulty cooling fan motor relay

Coolant leak


- · Faulty water pump mechanical seal
- · Deteriorated O-rings
- · Faulty radiator cap
- · Damaged or deteriorated cylinder head gasket
- · Loose hose connection or clamp
- · Damaged or deteriorated hose

SYSTEM TESTING

COOLANT (HYDROMETER TEST)

Open and support the front end of fuel tank (page 3-4).


Remove the radiator cap.

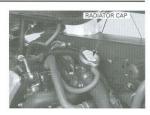

Test the coolant gravity using a hydrometer (see below for "Coolant gravity chart").

For maximum corrosion protection, a 50-50% solution of ethylene glycol and distilled water is recommended (page 6-4).

Look for contamination and replace the coolant if necessary.

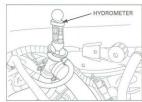

COOLANT GRAVITY CHART

Coolant temperature °C (°F)		_		15 (59)	20 (68)	25 (77)	30 (86)	35 (95)	40 (104)	45 (113)	50 (122)
Coolant ratio %	(32)	5 (41)	10 (50)								
5	1.009	1.009	1.008	1.008	1.007	1.006	1.005	1.003	1.001	0.999	0.997
10	1.018	1.017	1.017	1.016	1.015	1.014	1.013	1.011	1.009	1.007	1.005
15	1.028	1.027	1.026	1.025	1.024	1.022	1.020	1.018	1.016	1.014	1.012
20	1.036	1.035	1.034	1.033	1.031	1.029	1.027	1.025	1.023	1.021	1.019
25	1.045	1.044	1.043	1.042	1.040	1.038	1.036	1.034	1.031	1.028	1.025
30	1.053	1.052	1.051	1.047	1.046	1.045	1.043	1.041	1.038	1.035	1.032
35	1.063	1.062	1.060	1.058	1.056	1.054	1.052	1.049	1.046	1.043	1.040
40	1.072	1.070	1.068	1.066	1.064	1.062	1.059	1.056	1.053	1.050	1.047
45	1.080	1.078	1.076	1.074	1.072	1.069	1.066	1.063	1.060	1.057	1.054
50	1.086	1.084	1.082	1.080	1.077	1.074	1.071	1.068	1.065	1.062	1.059
55	1.095	1.093	1.091	1.088	1.085	1.082	1.079	1.076	1.073	1.070	1.067
60	1.100	1.098	1.095	1.092	1.089	1.086	1.083	1.080	1.077	1.074	1.071

Before installing the cap in the tester, wet the sealing surfaces.

RADIATOR CAP/SYSTEM PRESSURE INSPECTION

Remove the radiator cap (see previous page).

Pressure test the radiator cap.

Replace the radiator cap if it does not hold pressure, or if relief pressure is too high or too low. It must hold specified pressure for at least 6 seconds.

RADIATOR CAP RELIEF PRESSURE:

108 - 137 kPa (1.1 - 1.4 kgf/cm², 16 - 20 psi)

Pressure the radiator, engine and hoses, and check for leaks

NOTICE

Excessive pressure can damage the cooling system components. Do not exceed 137 kPa (1.4 kgf/cm², 20 psi).

Repair or replace components if the system will not hold specified pressure for at least 6 seconds.





COOLANT REPLACEMENT

PREPARATION

- The effectiveness of coolant decreases with the accumulation of rust or if there is a change in the mixing proportion during usage. Therefore, for best performance change the coolant regularly as specified in the maintenance schedule.
- Mix only distilled, low mineral water with the anti-freeze.

RECOMMENDED ANTIFREEZE:


Pro Honda Coolant or an equivalent high quality ethylene glycol antifreeze containing corrosion protection inhibitors specifically recommended for use in aluminum engines

RECOMMENDED MIXTURE:

50-50% (Distilled water and antifreeze)

REPLACEMENT/AIR BLEEDING

Remove the radiator cap.

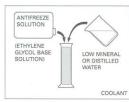



coolant level , place the motorcycle in a vertical position on a flat, level surface.

When filling the

system or reserve tank with coolant.

Remove the lower cowl (page 2-4).

Remove the drain bolt on the water pump cover and drain the system coolant.

Reinstall the drain bolt with the new sealing washer. Tighten the water pump drain bolt to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)



Drain the reserve tank coolant. Empty the coolant and rinse the inside of the reserve tank with water.

Reinstall the radiator siphon tube.






Fill the system with the recommended coolant through the filler opening up to filler neck.



Remove the radiator reserve tank cap and fill the reserve tank to the upper level line.

Bleed air from the system as follows:

- Shift the transmission into neutral. Start the engine and let it idle for 2 – 3 minutes.
- Snap the throttle 3 4 times to bleed air from the system.
- Stop the engine and add coolant up to the proper level if necessary. Reinstall the radiator cap.
- Check the level of coolant in the reserve tank and fill to the upper level if it is low.

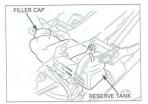

THERMOSTAT

THERMOSTAT REMOVAL

Open and support the front end of fuel tank (page 3-4).

Drain the coolant (page 6-5).

Remove the bolts and thermostat housing cover. Remove the O-ring from the thermostat housing cover.

Remove the thermostat from the housing.





INSPECTION

Wear insulated gloves and adequate eye protection. Keep flammable materials away from the electric heating element.

Visually inspect the thermostat for damage.

readily inspect the thermostat for damage

Heat the water with an electric heating element to operating temperature for 5 minutes.


Suspend the thermostat in heated water to check its


operation.

Replace the thermostat if the valve stays open at room temperature, or if it responds at temperatures other than those specified.

THERMOSTAT BEGIN TO OPEN: 80 - 84 °C (176 - 183 °F) VALVE LIFT:

8 mm (0.3 in) minimum at 95 °C (203 °F)

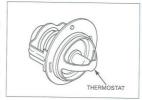

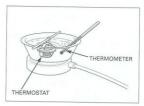

Do not let the

thermostat or

thermometer

you will get a

false reading.

touch the pan, or

THERMOSTAT INSTALLATION

Install the thermostat housing onto the cylinder head.



Install the new O-ring onto the thermostat housing cover.



Install the thermostat housing cover onto the cylinder head and tighten the housing cover bolts.

TORQUE: 12 N-m (1.2 kgf-m, 9 lbf-ft)

Fill the coolant and bleed air from the system (page 6-5).



RADIATOR

REMOVAL

Open and support the front end of fuel tank (page 3-4).

Drain the coolant (page 6-5).

Disconnect the lower radiator hose.



Disconnect the fan-motor 2P connector.



Disconnect the upper radiator hose. Remove the radiator lower mounting bolt/nut and washer.

Remove the radiator upper mounting bolt.

Slide the radiator to the right, then release the upper grommet from the frame boss.

Remove the radiator assembly.



DISASSEMBLY

Be careful not to damage the radiator core.


Remove the radiator grille.




Remove the bolts and side cover.




Remove the bolts and fan motor assembly.

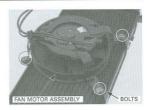


Remove the nut and cooling fan.

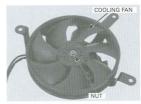

Remove the fan motor wire from the clamp. Remove the flange nuts and fan motor from the fan motor shroud.

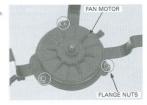


ASSEMBLY

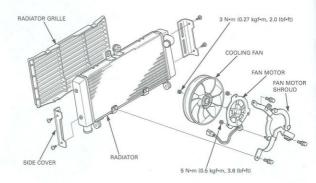


Install the fan motor onto the fan motor shroud and tighten the flange nuts to the specified torque.

TORQUE: 5 N-m (0.5 kgf-m, 3.6 lbf-ft)

Install the fan motor wire to the clamp.

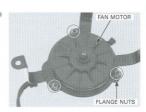

Install the cooling fan onto the fan motor shaft by aligning the flat surfaces.

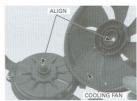

Apply a locking agent to the cooling fan nut threads. Install and tighten the nut to the specified torque.

TORQUE: 3 N·m (0.27 kgf·m, 2.0 lbf·ft)



Install the cooling fan motor assembly onto the radiator. Install and tighten the bolts.



Install the side cover and tighten the bolts.



to damage the radiator core.

Be careful not Install the hook of the radiator grille to the radiator.



INSTALLATION

Install the radiator assembly, aligning its grommet with the frame boss.

Install the washer and upper mounting bolt, then tighten the bolt.

Install the radiator lower mounting bolt/nut, tighten the nut securely.

Connect the upper radiator hose and tighten hose band screw securely.

UPPER RADIATOR HOSE BOLT

Connect the lower radiator hose and tighten hose band screw securely.



Connect the fan motor 2P connector. Fill the system with recommended coolant (page 6-5).



WATER PUMP

MECHANICAL SEAL INSPECTION

Inspect the inspection hole for signs of coolant leakage.

If there is leakage, the mechanical seal is defective. Replace the water pump as an assembly.




REMOVAL

Drain the coolant (page 6-4).

Disconnect the lower radiator hose and bypass hose from the water pump cover.

Remove the bolts and water pump cover.

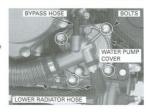


Remove the O-ring from the water pump body. Disconnect the water pump-to-water joint hose and oil cooler water hose from the water pump body.



Remove the water pump body from the crankcase.




INSTALLATION

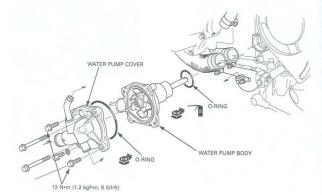

Apply engine oil to a new O-ring and install it onto the stepped portion of the water pump.

Install the water pump into the crankcase while aligning the water pump shaft groove with the oil pump shaft end by turning the water pump impeller.

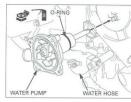

Install a new O-ring into the groove in the water pump body.

Connect the water hose.



Connect the water pump-to-water joint hose Install the water pump cover, two SH bolts and two flange bolts.


Tighten the flange bolts to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

Tighten the two SH bolts.

Connect the lower radiator hose and bypass hose, then tighten the clamp screws.

Fill the system with recommended coolant (page 6-5). Install the lower cowl (page 2-5).

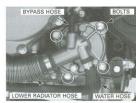

RADIATOR RESERVE TANK

REMOVAL

Remove the rear shock absorber (page 14-10).

Disconnect the siphon tube and drain coolant from the reserve tank.


Remove the radiator reserve tank. Drain the coolant.


INSTALLATION

Installation is in the reverse order of removal.

Install the flange collar and washer as shown.

Install the rear shock absorber (page 14-13).

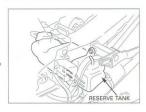

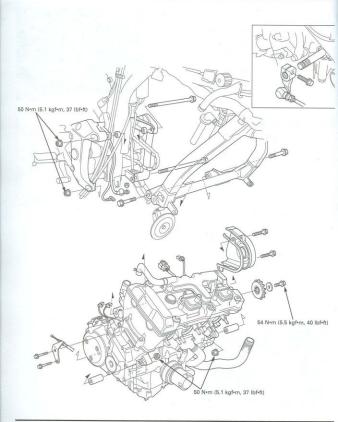

7. ENGINE REMOVAL/INSTALLATION

SERVICE INFORMATION	7-1	ENGINE INSTALLATION	7-6
DRIVE SPROCKET REMOVAL	7-3	DRIVE SPROCKET INSTALLATION	7-8
ENGINE REMOVAL	7-4		

SERVICE INFORMATION

GENERAL

- A hoist or equivalent is required to support the motorcycle when removing and installing the engine.
- A floor jack or other adjustable support is required to support and maneuver the engine.
 - Do not use the oil filter as a jacking point.
- The following components require engine removal for service.
- Crankcase, transmission (Section 11)
- Crankshaft piston/cylinder (Section 12)
- Shift fork, shift drum (Section 12)
- When installing the engine, be sure to tighten the engine mounting fasteners to the specified torque in the specified sequence. If you mistake the tighten torque or sequence, loosen all mounting fasteners, then tighten them again to the specified torque in the correct sequence.

SERVICE DATA

	ITEM	SPECIFICATIONS	
Engine dry weight		68 kg (149 lbs)	
Engine oil capacity	After disassembly	4.4 liter (4.6 US qt, 3.9 Imp qt)	
Coolant capacity	Radiator and engine	3.2 liter (3.38 US qt, 2.82 Imp qt)	

TORQUE VALUES

Front engine hanger bolts/nuts	50 N·m (5.1 kgf·m, 37 lbf·ft)
Rear upper engine hanger bolt/nut	50 N+m (5.1 kgf+m, 37 lbf+ft)
Rear lower engine hanger bolt/nut	50 N·m (5.1 kgf·m, 37 lbf·ft)
Drive sprocket special bolt	54 N·m (5.5 kgf·m, 40 lbf·ft)
Gear shift linkage bolt	20 N·m (2.0 kgf·m, 14 lbf·ft)

DRIVE SPROCKET REMOVAL

Loosen the drive chain (page 3-16).

Remove the drive sprocket cover bolts and sprocket cover.

Remove the drive chain guide plate.





Loosen the swingarm pivot cover mounting bolts if necessary. Remove the drive sprocket, washer and the drive sprocket with the drive chain from the countershaft.



ENGINE REMOVAL

Drain the engine oil (page 3-11). Drain the coolant (page 6-4).

Remove the following:

- clutch cable (page 9-3) - air cleaner housing (page 5-53)

- radiator (page 6-7)

- exhaust pipe/muffler (page 2-5)

- starter motor terminal nut (page 18-4)

Disconnect the upper water hose.

Disconnect the PAIR air supply hoses from the reed valve covers.

Disconnect the ignition plug caps.

Disconnect the crankcase breather tube.

Disconnect the following:


- crank pulse generator 2P connector
- regulator/rectifier 3P/4P connector
- speed sensor 3P connector
- oil pressure/neutral switch 2P connector
- side stand switch 2P connector
 ECT sensor 3P connector
- ECT Selisor of connecto

wire band
 cam pulse generator 2P connector







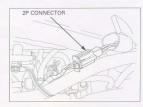

Remove the gearshift arm pinch bolt, then remove the gearshift arm from the gearshift spindle.



Support the engine using a jack or other adjustable support to ease engine hanger bolts removal.

NOTE:


Do not support the engine at the oil filter.

Remove the bolts and water by-pass cover. Remove the right side of the front engine hanger bolt, nut and distance collar.

Remove the left side of the front engine hanger bolt, nut and distance collar.



Remove the rear upper and lower engine hanger bolts /nuts. Remove the engine.

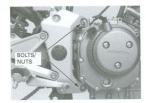

Note the direction and position of the hanger bolts, nuts and distance collars.



ENGINE INSTALLATION

- The jack height must be continually adjusted to relieve stress from the mounting fasteners.
- Route the wire and cables properly (page 1-23).


NOTE:

Be sure to tighten all engine mounting fasteners to the specified torque.

Carefully install the engine into the frame. Loosely install the rear upper and rear lower engine hanger bolts/nuts.

Loosely install the right and left side of the front engine hanger bolt, nut and distance collar.



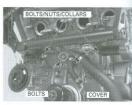

Tighten all the engine hanger bolts to the specified torque.

TORQUE:

R./L. front engine hanger bolts/nuts:

50 N•m (5.1 kgf•m, 37 lbf•ft) Rear lower engine hanger bolts/nuts:

50 N+m (5.1 kgf+m, 37 lbf+ft) Rear upper engine hanger bolts/nuts: 50 N+m (5.1 kgf+m, 37 lbf+ft)

Tighten the right side of the front engine hanger bolt to the specified torque.

REAR LOWER ENGINE HANGER
BOLT/NUT

REAR LOWER ENGINE HANGER
BOLT/NUT

FRONT ENGINE HANGER BOLT/NUT

Install the new O-ring to the water by-bass cover.



Install the water by-pass cover to the cylinder and tighten the cover bolts securely.



Install the gearshift linkage to the spindle by aligning the slit of the shift pedal and the punch mark of the spindle.


Tighten the bolt to the specified torque.

TORQUE: 20 N·m (2.0 kgf·m, 14 lbf·ft)



Install the following:

- wire band
- cam pulse generator 2P connector

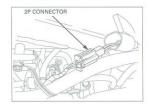

- crank pulse generator 2P connector - regulator/rectifier 3P/4P connector
- speed sensor 3P connector
- oil pressure/neutral switch 2P connector
- side stand switch 2P connector



Install the ignition coil caps. Connect the PAIR air supply hoses to the reed valve covers.

Pour recommended engine oil up to the proper level (page 3-12).

Fill the cooling system with recommended coolant and bleed the air (page 6-4).



DRIVE SPROCKET INSTALLATION

Install the drive chain on to the sprocket. Install the drive sprocket to the counter shaft with the punch mark facing out and align the teeth of the drive sprocket and counter shaft.



Install the the washer and tighten the special bolt to the specified torque.

TORQUE: 54 N·m (5.5 kgf·m, 40 lbf·ft)




Install the drive chain guide plate.



Install the drive sprocket cover and tighten the cover bolts securely.



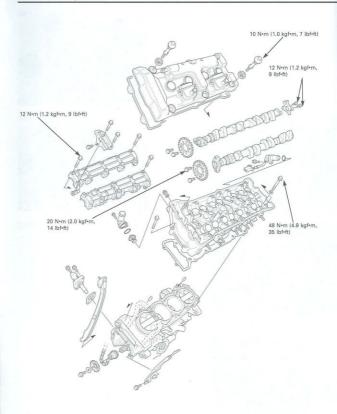

SERVICE INFORMATION	8-1	VALVE GUIDE REPLACEMENT	8-16
TROUBLESHOOTING	8-3	VALVE SEAT INSPECTION/	
CYLINDER COMPRESSION TEST	8-4	REFACING	8-17
CYLINDER HEAD COVER REMOVAL	8-4	CYLINDER HEAD ASSEMBLY	8-20
	0-4	CYLINDER HEAD INSTALLATION	8-21
CYLINDER HEAD COVER DISASSEMBLY/ASSEMBLY	8-5	CAMSHAFT INSTALLATION	8-23
CAMSHAFT REMOVAL	8-6	CYLINDER HEAD COVER	
CYLINDER HEAD REMOVAL	8-11	INSTALLATION	8-28
CYLINDER HEAD DISASSEMBLY	8-12	CAM CHAIN TENSIONER LIFTER	8-29
	75.5007500		
CYLINDER HEAD INSPECTION	8-13		

SERVICE INFORMATION

GENERAL

- · This section covers service of the cylinder head, valves and camshaft.
- The camshaft services can be done with the engine installed in the frame. The cylinder head service requires engine removal.
- When disassembling, mark and store the disassembled parts to ensure that they are reinstalled in their original locations.
 Clean all disassembled parts with cleaning solvent and dry them by blowing them off with compressed air before
- inspection.

 Camshaft lubricating oil is fed through oil passages in the cylinder head. Clean the oil passages before assembling the cylinder head.
- Be careful not to damage the mating surfaces when removing the cylinder head cover and cylinder head.

SPECIFICATIONS

Unit: mm (in)

ITEM Cylinder compression		STANDARD	SERVICE LIMIT	
			1,275 kPa (13.0 kgf/cm², 185 psi) at 350 min ⁻¹ (rpm)	-
Valve clearance		IN	0.16 ± 0.03 (0.006 ± 0.001)	_
		EX	0.25 ± 0.03 (0.010 ± 0.001)	
Camshaft	Cam lobe height	IN	36.040 - 36.280 (1.419 - 1.428)	36.01 (1.42)
		EX	35.800 - 36.040 (1.409 - 1.419)	35.77 (1.41)
	Runout			0.05 (0.002)
	Oil clearance		0.020 - 0.062 (0.008 - 0.0025)	0.10 (0.004)
Valve lifter O.D. Valve lifter bore I.D.	Valve lifter O.D.		25.978 - 25.993 (1.0228 - 1.0233)	25.97 (1.022)
		26.010 - 26.026 (1.0240 - 1.0246)	26.04 (1.025)	
Valve, valve guide	Valve stem O.D.	IN	4.475 - 4.490 (0.1762 - 0.1768)	4.465 (0.1758)
		EX	4.465 - 4.480 (0.1758 - 0.1764)	4.455 (0.1754)
	Valve guide I.D.	IN/EX	4.500 - 4.512 (0.1772 - 0.1776)	4.540 (0.1787)
	Stem-to-guide clearance	IN	0.010 - 0.037 (0.0004 - 0.0015)	0.075 (0.0030)
		EX	0.020 - 0.047 (0.0008 - 0.0019)	0.085 (0.0033)
	Valve guide projection above cylinder head	IN	14.5 - 14.7 (0.57 - 0.58)	1 1
		EX	14.8- 15.0 (0.58 - 0.59)	_
	Valve seat width	IN/EX	0.90 - 1.10 (0.035 - 0.043)	1.5 (0.06)
Valve spring free length IN EX		IN	40.9 (1.61)	40.08 (1.578)
		EX	40.9 (1.61)	40.08 (1.578)
Cylinder head	warpage			0.10 (0.004)

TORQUE VALUES

	holt/washe

Camshaft holder flange bolt

Cylinder head cover bolt Breather plate flange bolt

PAIR reed valve cover SH bolt Cam sprocket flange bolt Cam chain lifter mounting socket bolt Cam chain tensioner pivot socket bolt

Cylinder head stud bolt (exhaust pipe stud bolt) See page 1-14

48 N+m (4.9 kgf+m, 35 lbf+ft)

12 Nem (1.2 kgfem, 9 lbfeft) 10 N+m (1.0 kgf+m, 7 lbf+ft)

12 N·m (1.2 kgf·m, 9 lbf·ft)

12 N+m (1.2 kgf+m, 9 lbf+ft) 20 N·m (2.0 kgf·m, 14 lbf·ft) 10 Nem (1.0 kgfem, 7 lbfeft) 10 N+m (1.0 kgf+m, 7 lbf+ft)

Apply molybdenum disulfide oil to the threads and seating surface Apply oil to the threads

Apply a locking agent to the threads CT bolt

CT bolt

Apply a locking agent to the threads

Apply a locking agent to the threads

TOOLS

Compression gauge attachment	07RMJ-MY50100	Equivalent commercially available
Valve spring compressor	07757-0010000	
Valve spring compressor attachment	07959-KM30101	
Tappet hole protector	07HMG-MR70002	
Valve quide driver	07743-0020000	
Valve guide reamer, 4.508 mm	07HMH-ML00101	
Valve seat cutters		- these are commercially available
Seat cutter, 27.5 mm (45° IN/EX)	07780-0010200	
Flat cutter, 27 mm (32° EX)	07780-0013300	
Flat cutter, 30 mm (32° IN)	07780-0012200	
Interior cutter, 24 mm (60° IN/EX)	07780-0010600	
Cutter holder, 4.5 mm	07781-0010600	

TROUBLESHOOTING

- · Engine top-end problems usually affect engine performance. These problems can be diagnosed by a compression test or by tracing engine noises to the top-end with a sounding rod stethoscope.
- . If the performance is poor at low speeds, check for white smoke in the crankcase breather tube. If the tube is smoky, check for a seized piston ring (Section 12).

Compression too low, hard starting or poor performance at low speed

- · Valves:
 - Incorrect valve adjustment
 - Burned or bent valve
 - Incorrect valve timing
 - Broken valve spring
- Uneven valve seating
- · Cylinder head:
- Leaking or damaged head gasket - Warped or cracked cylinder head
- · Worn cylinder, piston or piston rings (section 12)
- Compression too high, overheating or knocking · Excessive carbon build-up on piston crown or on combus
 - tion chamber
- Excessive smoke
- · Cylinder head:
 - Worn valve stem or valve guide
- Damaged stem seal
- · Worn cylinder, piston or piston rings (section 12)
- Excessive noise
- · Cylinder head:
- Incorrect valve adjustment

- Sticking valve or broken valve spring
- Damaged or worn camshaft
- Loose or worn cam chain
- Worn or damaged cam chain
 - Worn or damaged cam chain tensioner - Worn cam sprocket teeth
- · Worn cylinder, piston or piston rings (section 12)

Rough idle

· Low cylinder compression

CYLINDER COMPRESSION TEST

Warm up the engine to normal operating temperature.

Stop the engine and remove all direct ignition coil/spark plug caps and spark plugs (page 3-6). Open and support the front end of fuel tank (page 3-4).

Disconnect the fuel pump/reserve sensor 3P connector.

Install a compression gauge into the spark plug hole.

TOOL

starter motor for

more than seven

seconds.

Compression gauge attachment

07RMJ-MY50100 (Equivalent commercially available)

Open the throttle all the way and crank the engine with the starter motor until the gauge reading stops rising.

To avoid discharging the battery, do seconds, not operate the

Compression pressure:

1,275 kPa (13.0 kgf/cm², 185 psi) at 350 min⁻¹ (rpm)

Low compression can be caused by:

- Blown cylinder head gasket
- Improper valve adjustment
- Valve leakage
- Worn piston ring or cylinder

High compression can be caused by:

 Carbon deposits in combustion chamber or on piston head



CYLINDER HEAD COVER REMOVAL

Remove the following:

- Ignition coil (page 5-62)
- Spark plug cap (page 3-6)

Remove the crankcase breather tube. Disconnect the PAIR air suction tubes from the PAIR reed valve covers.



Remove the cylinder head cover bolts and rubber-



Remove the cylinder head cover. Remove the cylinder head cover packing.



CYLINDER HEAD COVER DISASSEMBLY/ASSEMBLY

Remove the bolts and PAIR check valve cover.




Check the PAIR check valve for wear or damage, replace if necessary.

Installation is in the reverse order of removal.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)



Remove bolts and breather separate and gasket.

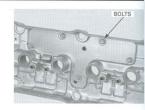

Install the new gasket to the cover.

Install the breather plate.

Apply the locking agent to the bolt threads and tighten it to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)



CAMSHAFT REMOVAL

Remove the cylinder head cover (page 8-4).

Avoid damaging the cam pulse generator while removing the camshafts. Remove the bolt and cam pulse generator from the cylinder head.



Remove the timing hole cap and O-ring.



Turn the crankshaft clockwise, align the "T" mark on the ignition pulse generator rotor with the index mark on the right crankcase cover.


Make sure the No.1 piston is at TDC (Top Dead Center) on the compression stroke.




Remove the cam chain tensioner lifter sealing bolt and sealing washer.

Turn the tensioner lifter shaft fully in (clockwise) and secure it using the following tool.

This tool can easily be made from a thin (1 mm thickness) piece of steel.

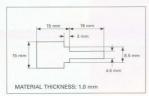



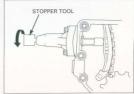

It is not necessary to remove the cam sprocket from the camshaft except when replacing the camshaft

and/or cam sprocket. If you plan to replace the camshaft and/or cam sprocket, loosen the cam sprocket bolts as follow:

Remove the cam sprocket bolts from intake and exhaust camshafts.



Be careful not to drop the cam sprocket bolts into the crankcase. Turn the crankshaft one full turn (360"), remove the other cam sprocket bolts from the camshafts.



- Remove the bolt.



- Remove the bolts and cam pulse generator rotor.



Suspend the cam chain with a piece of wire to prevent the chain from falling into the crankcase.

Loosen and remove the camshaft holder bolts, then remove the cam sprocket, cam chain guide B, camshaft holder and camshaft.

NOTICE

From outside to inside, loosen the bolts in a crisscross pattern in several steps or the camshaft holder might break.

Do not forcibly remove the dowel pins from the camshaft holder.



Remove the valve lifters and shims.

- · Be careful not to damage the valve lifter bore.
- . Shim may stick to the inside of the valve lifter. Do not allow the shims to fall into the crankcase.
- · Mark all valve lifters and shims to ensure correct reassembly in their original locations.
- · The valve lifter can be easily removed with a valve lapping tool or magnet.
- . The shims can be easily removed with tweezers or a magnet.



INSPECTION

CAMSHAFT

Check the cam and journal surfaces of the camshaft for scoring, scratches or evidence of insufficient lubrication.

Check the oil holes in the camshaft for clogging.

Support both ends of the camshaft with V-blocks and check the camshaft runout with a dial gauge.

SERVICE LIMIT: 0.05 mm (0.002 in)



Using a micrometer, measure each cam lobe height.

SERVICE LIMITS:

IN: 36.01 mm (1.42 in) EX: 35.77 mm (1.41 in)



CAMSHAFT HOLDER

Inspect the bearing surface of camshaft holder for scoring, scratches, or evidence of insufficient lubrication

Inspect the oil orifices of the holders for clogging.



CAM CHAIN GUIDE B

Inspect the cam chain slipper surface of the cam chain guide for wear or damage.



CAMSHAFT OIL CLEARANCE

Wipe any oil from the journals of the camshaft, cylinder head and camshaft holders.

Lay a strip of plastigauge lengthwise on top of each

Lay a strip of plastigauge lengthwise on top of each camshaft journal.



Do not rotate the camshaft when using plastigauge.

Install the camshaft holder onto the camshafts.

Apply engine oil to the threads and seating surfaces

of the camshaft holder bolts.

Install the twenty holder bolts with the eight sealing

Install the twenty holder bolts with the eight sealing washers.

The camshaft holder have the number "1 thru. 20". Temporarily tighten the four bolts of the center area gradually in the sequence 6-5-8-7 until the dowel pins on the camshaft holder inserts into the pin holes in the cylinder head (the clearance between the holder and head is $1-5 \, \text{mm}$).

Next, tighten all the holder bolts in the numerical order cast on the camshaft holder (1 thru. 20) in several steps, then tighten them to the specified torque.



Remove the camshaft holders and measure the width of each plastigauge.


The widest thickness determines the oil clearance.



When the service limits are exceeded, replace the camshaft and recheck the oil clearance.

Replace the cylinder head and camshaft holders as a

Replace the cylinder head and camshaft holders as a set if the clearance still exceeds the service limit.

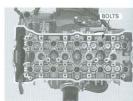



CYLINDER HEAD REMOVAL

Drain the coolant (page 6-4).

Remove the camshaft (page 8-6). Remove the cylinder drain bolt and sealing washer. Drain coolant from cylinder head and cylinder block.

Check that the sealing washer is in good condition, replace if necessary.


Reinstall the sealing washer and drain bolt.

Remove the socket bolts, sealing washers and cam chain tensioner lifter and gasket.

Remove the cap nut, sealing washer and cam chain tensioner.

Disconnect the water hose.

Remove the thermostat housing cover and thermostat.

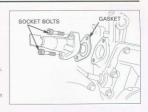



bolts in a crisscross pattern in 2 – 3 steps.

Loosen the 9 mm Remove the ten 9 mm bolts/washers.




Remove the two 6 mm flange bolts.



Remove the cylinder head.

Remove the gasket and dowel pins.

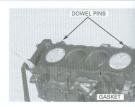

Remove the right crankcase cover and ignition pulse generator rotor (page 17-7).

Remove the socket bolt, cam chain guide and collar.

Remove the cam chain and timing sprocket from the crankshaft.



CYLINDER HEAD DISASSEMBLY

Remove the spark plugs from the cylinder head.

Install the tappet hole protector into the valve lifter bore.


TOOL:

Tappet hole protector

07HMG-MR70002



An equivalent tool can easily be made from a plastic 35 mm film container as shown.

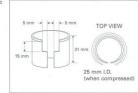

Remove the valve spring cotters using the special tools as shown.

TOOLS:

Valve spring compressor 07757-0010000

Valve spring compressor attachment

07959-KM30101

NOTICE

To prevent loss of tension, do not compress the valve springs more than necessary to remove the cotters.

VALVE SPRING COMPRESSOR

Mark all parts during disassembly so they can be


Remove the following: - Spring retainer

- Valve spring

placed back - Valve in their original

- Stem seal

- Valve spring seat

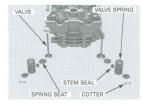

CYLINDER HEAD INSPECTION

CYLINDER HEAD

Avoid damaging the gasket surface.

Remove carbon deposits from the combustion chamber, being careful not to damage the gasket surface. Check the spark plug hole and valve areas for cracks.



Check the cylinder head for warpage with a straight edge and feeler gauge.

SERVICE LIMIT: 0.10 mm (0.004 in)



VALVE LIFTER BORE

Inspect each valve lifter bore for scratches or abnormal wear.

Measure each valve lifter bore I.D.

SERVICE LIMIT: 26.04 mm (1.025 in)



VALVE LIFTER

Inspect each valve lifter for scratches or abnormal wear.

Measure each valve lifter O.D.

SERVICE LIMIT: 25.97 mm (1.022 in)



VALVE SPRING

Measure the the valve spring free length.


SERVICE LIMITS: 40.8 mm (1.578 in)

Replace the springs if they are shorter than the service limits.



CAM CHAIN TENSIONER/CAM CHAIN GUIDE

Inspect the cam chain tensioner and cam chain guide for excessive wear or damage, replace if necessary.

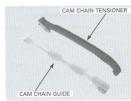

VALVE/VALVE GUIDE

Check that the valve moves smoothly in the guide. Inspect each valve for bending, burning or abnormal stem wear.

Check valve movement in the guide, measure and record each valve stem O.D.

SERVICE LIMITS:


IN: 4.465 mm (0.1758 in) EX: 4.455 mm (0.1754 in)



Ream the guides to remove any carbon deposits before checking clearances.

Insert the reamer from the combustion chamber side of the head and always rotate the reamer clockwise.

Valve guide reamer, 4.508 mm 07HMH-ML00101

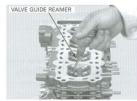

Measure and record each valve guide I.D.

SERVICE LIMIT: IN/EX: 4.540 mm (0.1787 in)

Subtract each valve stem O.D. from the corresponding guide I.D. to obtain the stem-to-guide clearance.

SERVICE LIMITS:

IN: 0.075 mm (0.0030 in) EX: 0.085 mm (0.0033 in)

seats whenever the value guides are replaced (page 8-17).

Reface the valve If the stem-to-guide clearance is out of standard, determine if a new guide with standard dimensions would bring the clearance within tolerance. If so, replace any guides as necessary and ream to fit. If the stem-to-guide clearance is out of standard with the new guides, replace the valves and guides.



VALVE GUIDE REPLACEMENT

Chill the replacement valve guides in the freezer section of a refrigerator for about an hour. Heat the cylinder head to 100 – 150°C (212 – 300°F) with a hot plate or oven.

NOTICE

Do not use a torch to heat the cylinder head; it may cause warping.

Support the cylinder head and drive out the valve guides from the combustion chamber side of the cylinder head,

TOOL:

Valve guide driver

07HMD-ML00101

Drive in the guide to the specified depth from the top of the cylinder head.

TOOL:

Valve guide driver


07743-0020000



VALVE GUIDE DRIVER

SPECIFIED DEPTH:

IN: 14.5 - 14.7 mm (0.57 - 0.58 in) EX: 14.8 - 15.0 mm (0.58 - 0.59 in)

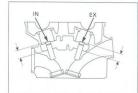

Use cutting oil on the reamer during this operation. Let the cylinder head cool to room temperature.

Ream the new valve guide after installation. Insert the reamer from the combustion chamber side of the head and always rotate the reamer clockwise.

TOOL:

Valve guide reamer, 4.508 mm 07HMH-ML00101

Clean the cylinder head thoroughly to remove any metal particles.

Reface the valve seat (see following steps).



VALVE SEAT INSPECTION/REFACING

The valves cannot be ground. If a valve face is burned or badly worn or if it contacts the seat unevenly, replace the valve.

The valves cannot be ground. If a remove carbon deposits.

Apply a light coating of Prussian Blue to the valve seats. Tap the valves and seats using a rubber hose or other

Remove the valve and inspect the valve seat face.




Inspect the valve seat face for:

· Uneven seat width:

hand-lapping tool.

- Replace the valve and reface the valve seat.
- · Damaged face:
 - Replace the valve and reface the valve seat.

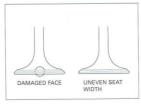


- · Contact area (too high or too low)
 - Reface the valve seat.



The valve seat contact should be within the specified width and even all around the circumference.


STANDARD: 0.90 – 1.10 mm (0.035 – 0.043 in)
SERVICE LIMIT: 1.5 mm (0.06 in)
If the seat width is not within specification, reface the

If the seat width is not within specification, reface the valve seat (page 8-18).

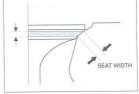

VALVE SEAT REFACING


Valve seat cutters/grinders or equivalent valve seat refacing equipment are recommended to correct worn valve seats.

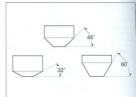

Follow the refacing manufacturer's operating instructions.

If the contact area is too high on the valve, the seat must be lowered using a 32' flat cutter.

If the contact area is too low on the valve, the seat must be raised using a 60° interior cutter.

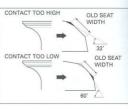


Use a 45-degree cutter to remove any roughness or irregularities from the seat.

TOOLS:

Seat cutter, 27.5 mm (45° IN/EX) Cutter holder, 4.5 mm


07780-0010200 07781-0010600 or equivalent commercially available

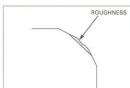

Use a 32-degree cutter to remove the top 1/4 of the existing valve seat material.

TOOLS:


Flat cutter, 27 mm (32° EX) Flat cutter, 30 mm (32° IN) Cutter holder, 4.5 mm 07780-0013300 07780-0012200 07781-0010600 or equivalent commercially available

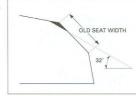

Use a 60-degree cutter to remove the bottom 1/4 of the old seat.

TOOLS: Interior cutter, 24 mm (60° IN/EX) Cutter holder, 4.5 mm

07780-0010600 07781-0010600 or equivalent commercially available

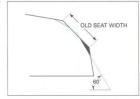


Using a 45' seat cutter, cut the seat to the proper width.
Make sure that all pitting and irregularities are removed.
Refinish if necessary.

After cutting the seat, apply lapping compound to the valve face, and lap the valve using light pressure.

NOTICE


- Excessive lapping pressure may deform or damage the seat.
- Change the angle of lapping tool frequently to prevent uneven seat wear.
- · Do not allow lapping compound to enter the guides.

After lapping, wash all residual compound off the cylinder head and valve.

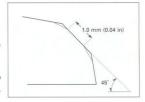



CYLINDER HEAD ASSEMBLY

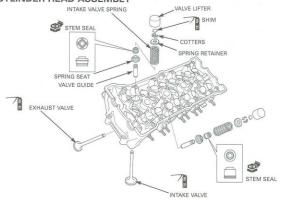

Blow through all oil passages in the cylinder head with compressed air.

Install the tappet hole protector into the valve lifter bore.

TOOL:

Tappet hole protector


07HMG-MR70002



Grease the cotters to ease installation. Install the valve spring seats. Install the new stem seals.

Lubricate the valve stems with molybdenum

oil solution. Insert the valve into the valve guide while turning it slowly to avoid damage to the stem seal.

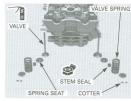

Support the cylinder head above the work bench surface to prevent possible valve damage. Install the valve spring with the tightly wound coils facing the combustion chamber.



Install the valve spring retainer.

Install the valve cotters using the special tool as shown.

NOTE:

To prevent loss of tension, do not compress the valve spring more than necessary.

TOOLS:

Valve spring compressor

Valve spring compressor attachment

07757-0010000 ment 07959-KM30101 VALVE SPRING COMPRESSOR

Tap the valve stems gently with two plastic hammers as shown to seat the cotters firmly.

Install and tighten the spark plugs.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)




CYLINDER HEAD INSTALLATION

Install the timing sprocket by aligning the wide teeth between the crankshaft and sprocket.

Install the cam chain.



Install the cam chain guide and bolt/washer.

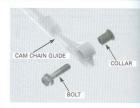

Install the washer, cam chain tensioner and socket bolt.

Tighten the cam chain guide bolt to the specified torque.

TORQUE:


Cam chain guide bolt:

12 N·m (1.2 kgf·m, 9 lbf·ft)

Install the ignition pulse generator rotor and right crankcase cover (page 17-7).

CAM CHAIN GUIDE

Install the dowel pins and a new cylinder head gasket as shown.

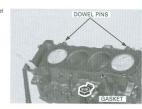


Install the cylinder head onto the cylinder block.

Apply molybdenum disulfide oil solution to the threads and seating surface of the 9 mm bolts/washers and install them.

Install the two 6 mm flange bolts.

Tighten the 9 mm bolts in a crisscross pattern in 2-3 steps to the specified torque.

TORQUE: 48 N·m (4.9 kgf·m, 35 lbf·ft)

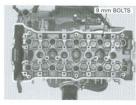

Tighten the 6 mm flange bolts.



Install the cam chain tensioner onto the cylinder head.

Tighten the nut to the specified torque.

TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)

Connect the water hose.

Remove the following:

- Thermostat housing (page 6-7)
- Camshaft (see below)




CAMSHAFT INSTALLATION

Install the new gasket and cam chain tensioner onto the cylinder.

Install the new sealing washers and tighten the socket bolts to the specified torque.

TORQUE: 10 N-m (1.0 kgf-m, 7 lbf-ft)

Install the camshaft (see below).

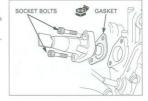

Install the shims and valve lifters in their original locations. Apply molybdenum oil solution to the outer surface of the each valve lifter.

Install the shims and valve lifters into the valve lifter bores.




CYLINDER HEAD/VALVES

If the cam sprockets are removed, install the cam sprockets onto the camshafts.

Install the cam pulse generator rotor with the No.1 camshaft lobes facing up and rotor "OUT" mark facing down as shown.

- Install the intake cam sprocket with the timing mark (IN) facing outward and the No.1 cam lobes facing up and out as shown.
- Install the exhaust cam sprocket with the timing mark (EX) facing outward and the No.1 cam lobes facing up and out as shown.

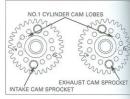


Clean and apply a locking agent to the cam sprocket bolt threads.

Install the cam sprocket bolts.



Clean and apply a locking agent to the cam cam pulse generator rotor threads.

Install the cam pulse generator rotor and mounting bolts.

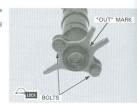

Turn the crankshaft clockwise and align the "T" mark on the ignition pulse generator rotor with the index mark on the right crankcase cover.



Apply molybdenum oil solution to the camshaft journals of the cylinder head and camshaft holder.

Install the cam chain over the cam sprockets and then install the intake and exhaust camshafts.

- Install each camshaft to the correct locations with the identification marks.
 "IN": Intake camshaft
- "EX": Exhaust camshaft
- Make sure that the timing marks on the cam sprockets are facing outward and flush with the cylinder head upper surface as shown.



Be sure the dowel pins in the camshaft holder align properly with the holes in the cylinder head.

Apply molybdenum oil solution to the camshaft holder as shown.



Install the camshaft holder onto the camshafts.

Apply engine oil to the threads and seating surfaces of the camshaft holder bolts.

Install the cam shaft holder B and holder bolt (color: silver) from the front side of the cam sprockets. Install the twenty bolts to the cam shaft holder. Finger tighten the bolts.




The camshaft holder has the number "1 through 20 cast into it.

Gradually tighten the #6, #5, #8, and #7 bolts (in that order) 1/4 to 1/2 turn at a time to draw the holder down evenly until the clearance between the cylinder head and the holder is 2 – 3 mm all the way around.

If the holder tilts toward the #1 cylinder during this process, readjust bolts #6, #5, #8, and #7 as necessary to keep the holder level.

When the holder is parallel with the cylinder head, resume tightening the bolts in the sequence specified above.

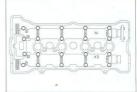

Once the clearance is within 2 – 3 mm, begin tightening all the bolts in numerical order (#1, #2, #3....#20) 1/4 turn at a time until the holder is fully seated against the cylinder head.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)



Install the cam chain guide B, and tighten the bolts.



In case the cam sprockets were removed, tighten the cam sprocket bolts to the specified torque.

TORQUE: 20 N·m (2.0 kgf·m, 14 lbf·ft)

Turn the crankshaft clockwise one full turn (360') and tighten the other cam sprocket bolts.




In case the cam pulse generator rotor bolts were removed, tighten the rotor bolts to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)




Remove the stopper tool from the cam chain tensioner lifter.

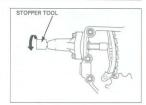

Install a new sealing washer and tighten the sealing bolt.

Recheck the valve timing.

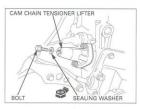

Apply oil to the new O-ring, and install it onto the cam pulse generator.

Install the cam pulse generator into the cylinder head.




Install and tighten the mounting bolt securely.



CYLINDER HEAD COVER INSTALLATION

Apply sealant to the cylinder head semi-circular cutouts as shown.

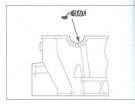


Install the cylinder head packing into the groove of the cylinder head cover.

Install the cylinder head cover onto the cylinder head.



Install the washers with their "UP" mark facing up.

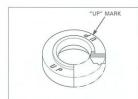

Install and tighten the cylinder head cover special bolts to the specified torque.

TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)



Connect the air supply hoses to the PAIR reed valve covers.

Install the following:

- ignition coil (#2-#3)(page 17-7)
- spark plug cap (page 3-7)



CAM CHAIN TENSIONER LIFTER


REMOVAL

Remove the cam chain tensioner sealing bolt and sealing washer.




Turn the tensioner shaft fully in (clockwise) and secure it using the stopper tool to prevent damaging the cam chain.

See page 8-7 for details of the tool.

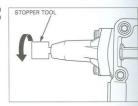


Note the installation direction of the gasket. Remove the bolts and cam chain tensioner lifter. Remove the gasket.

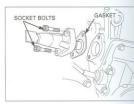

INSTALLATION

Install the new gasket onto the cam chain tensioner lifter. Install the cam chain tensioner lifter into the cylinder head.

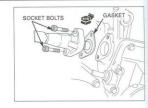

Install and tighten the mounting bolts securely.

Remove the stopper tool.

Install a new sealing washer and tighten the sealing bolt securely.

Install the removed parts in the reverse order of removal.



MEMO

9. CLUTCH/GEARSHIFT LINKAGE

SERVICE INFORMATION	9-1	CLUTCH	9-4
TROUBLESHOOTING	9-2	GEARSHIFT LINKAGE	9-12
RIGHT CRANKCASE COVER		SHIFT FORK/SHIFT DRUM	9-13
REMOVAL	9-3	RIGHT CRANKCASE COVER	
LIFTER LEVER	9-4	INSTALLATION	9-14

SERVICE INFORMATION

GENERAL

- This section covers service of the clutch, gearshift linkage, shift drum and shift forks. All service can be done with the
 engine installed in the frame.
 Transmission oil viscosity and level have an effect on clutch disengagement. When the clutch does not disengage or the
- Transmission oil viscosity and level have an effect on clutch disengagement. When the clutch does not disengage or the
 motorcycle creeps with clutch disengaged, inspect the transmission oil level before servicing the clutch system.

SPECIFICATIONS

Unit: mm (in)

ITE	M	STANDARD	SERVICE LIMIT
Clutch lever free play		10 - 20 (3/8 - 13/16)	
Clutch	Spring free length	48.8 (1.92)	47.5 (1.87)
	Disc thickness	2.92 - 3.08 (0.115 - 0.121)	2.6 (0.10)
	Plate warpage	_	0.30 (0.012)
Clutch outer guide	I.D.	24.994 - 25.004 (0.9840 - 0.9844)	25.01 (0.985)
	O.D.	34.975 - 34.991 (1.3770 - 1.3776)	34.97 (1.377)
Mainshaft O.D. at clutch out	ter guide	24.980 - 24.993 (0.9835 - 0.9840)	24.96 (0.983)

TOROUE VALUES

Clutch center lock nut

Clutch spring bolt/washer Oil pump driven sprocket bolt

Shift drum center socket bolt Shift drum stopper arm pivot bolt Gearshift spindle return spring pin 128 N·m (13.1 kgf·m, 95 lbf·ft)

12 N·m (1.2 kgf·m, 9 lbf·ft) 15 N·m (1.5 kgf·m, 11 lbf·ft) 23 N·m (2.3 kgf·m, 17 lbf·ft)

12 N·m (1.2 kgf·m, 9 lbf·ft) 22 N·m (2.2 kgf·m, 16 lbf·ft) Apply oil to the threads Stake the nut

Apply a locking agent to the threads Apply a locking agent to the threads

TOOLS

Clutch center holder Driver Attachment, 32 X 35 mm Attachment, 37 X 40 mm Pilot, 17 mm Pilot, 35 mm 07724-0050002 07749-0010000 07746-0010100 07746-0010200 07746-0040400 07746-0040800 Equivalent commercially available

TROUBLESHOOTING

Clutch lever too hard to pull in

- Damaged clutch lifter mechanism
- Faulty clutch lifter bearing
- · Clutch lifter piece installed improperly

Clutch slips when accelerating

- Worn clutch disc
- · Weak clutch springs
- Transmission oil mixed with molybdenum or graphite additive

Clutch will not disengage or motorcycle creeps with clutch disengaged

- · Clutch plate warped
- Loose clutch lock nut
- Oil level too high
- Improper oil viscosity
- Damaged clutch lifter mechanism
- Clutch lifter piece installed improperly

Hard to shift

- · Improper clutch operation
- · Improper oil viscosity
- · Bent shift fork
- · Bent shift fork shaft
- · Bent fork claw
- · Damaged shift drum cam groove
- · Loose stopper plate bolt
- · Damaged stopper plate and pin
- · Damaged gearshift spindle

Transmission jumps out of gear

- · Worn shift drum stopper arm
- · Weak or broken shift arm return spring
- Loose stopper plate bolt
 Bent shift fork shaft
- Bent shift fork shaft
- Damaged shift drum cam groove
 Damaged or bent shift forks
- · Worn gear engagement dogs or slots


Gearshift pedal will not return

- · Weak or broken gearshift spindle return spring
- Bent gearshift spindle

RIGHT CRANKCASE COVER REMOVAL

Drain the engine oil (page 3-15).

Remove the bolts and clutch cable guide, then disconnect the clutch cable end from the clutch lifter lever.

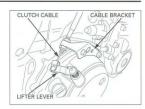


The lifter arm spindle is engaged with the clutch lifter piece inside the right crankcase cover. Remove the right crankcase cover SH bolts and clutch cable guide.



Remove the right crankcase cover while turning the clutch lifter arm counterclockwise to disengage the lifter arm spindle from the lifter piece.

Remove the two dowel pins and gasket.

Clean the right crankcase cover mating surfaces.

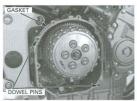

CLUTCH LIFTER LEVER

Remove the clutch lifter lever, return spring and washer from the right crankcase cover.

Check the lifter lever spindle for wear or damage. Check the return spring for fatigue or damage.



Check the lifter lever oil seal and needle bearings for wear or damage.

Install the clutch lifter lever with the washer and spring in the reverse order of removal.



CLUTCH

REMOVAL

Remove the right crankcase cover (page 9-3).


Remove the clutch spring bolts, springs and pressure plate.

Remove the clutch lifter piece from the lifter bearing.



Remove the following:

- Clutch discs
- Clutch plates
- Spring seat
- Judder spring

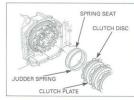

Unstake the clutch center lock nut.



Hold the clutch center with the clutch center holder, then remove the lock nut.

TOOL:

Clutch center holder

07724-0050002 (Equivalent commercially available)



Discard the lock nut.

Remove the lock washer, thrust washer and clutch center.



Remove the washer.



CLUTCH/GEARSHIFT LINKAGE


Be careful not to bend the ignition pulse generator rotor tangs. Align the gear teeth of the scissors gears (primary drive gear and sub-gear) by inserting a screwdriver into the gear hole indicated by the punch mark on the sub-gear through the hole in the crankcase, and remove the clutch outer.

Remove the clutch outer guide.

CLUTCH OUTER

PRIMARY DRIVE GEAR/SUB-GEAR

Remove the oil pump driven sprocket bolt/washer. Remove the oil pump drive/driven sprocket and drive chain as an assembly.

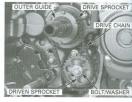

INSPECTION

Clutch lifter bearing

Turn the inner race of the lifter bearing with your finger.

The bearing should turn smoothly and quietly.

Also check that the outer race of the bearing fits tightly in the pressure plate.

Replace the bearing if the inner race does not turn smoothly, quietly, or if the outer race fits loosely in the pressure plate.

Drive the bearing out of the pressure plate.

Drive a new bearing into the pressure plate with its mark side facing out.

TOOLS:


Driver Attachment, 32 X 35 mm Pilot, 17 mm 07749-0010000 07746-0010100 07746-0040400

Replace the clutch spring as a set. Clutch spring

Measure the clutch spring free length.

SERVICE LIMIT: 47.5 mm (1.87 in)



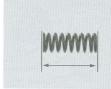

Clutch center

Check the grooves of the clutch center for damage or wear caused by the clutch plates.

Replace if necessary.



Clutch lifter piece

Check the clutch lifter piece for damage or abnormal wear.




Clutch disc

Replace the clutch discs and plates as a set. Replace the clutch discs if they show signs of scoring or discoloration.

Measure the disc thickness of each disc.

SERVICE LIMIT: 2.6 mm (0.10 in)

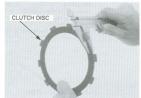

Clutch plate

Replace the clutch discs and plates as a set. Check each disc plate for warpage on a surface plate using a feeler gauge.

SERVICE LIMIT: 0.30 mm (0.012 in)



Clutch outer/clutch outer guide

Check the slots of the clutch outer for damage or wear caused by the clutch discs.

Replace if necessary.



Measure the O.D. and I.D. of the clutch outer guide.

SERVICE LIMITS:

O.D.: 34.97 mm (1.377 in) I.D.: 25.01 mm (0.985 in)



Mainshaft

Measure the mainshaft O.D. at the clutch outer guide sliding surface.

SERVICE LIMIT: 24.96 mm (0.983 in)




CLUTCH OUTER NEEDLE BEARING REPLACEMENT

Press the needle bearing out of the clutch outer using the special tools.

TOOLS:


Driver Attachment, 37 X 40 mm Pilot, 35 mm 07749-0010000 07746-0010200 07746-0040800

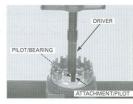


Press a new needle bearing into the clutch outer so that the casing of the needle bearing is below 0.4 – 0.6 mm (0.016 – 0.023 in) from the oil pump drive sprocket side of the clutch outer surface as shown.


TOOLS:

Attachment, 37 X 40 mm Pilot, 35 mm 07749-0010000 07746-0010200 07746-0040800

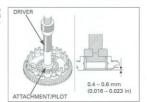

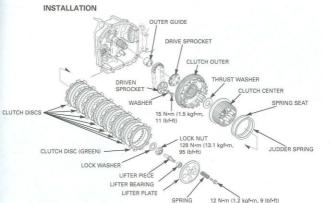

Install the oil pump driven sprocket with its "OUT" mark facing out. Install the clutch outer guide, oil pump drive/driven sprocket and drive chain as an assembly.

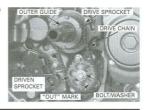

Apply a locking agent to the threads of the oil pump driven sprocket bolt.

Tighten the driven sprocket bolt to the specified torque.

TORQUE: 15 N·m (1.5 kgf·m, 11 lbf·ft)



CLUTCH OUTER

Be careful not to bend the ignition pulse generator rotor tangs.

Align the primary drive gear and sub-gear teeth with a screwdriver as shown.

Install the clutch outer.

Be sure the clutch outer sits securely onto the positioning tabs of the oil pump drive sprocket. Rotate the oil pump drive chain while installing the clutch outer to properly seat it.

Make sure that the primary driven gear of the clutch outer is flush with the primary drive sub-gear. Release the cam chain tensioner (page 8-26). PRIMARY DRIVE GEAR/SUB-GEAR

Install the washer onto the clutch outer.



Install the clutch center.

Install the thrust washer.
Install the lock washer with its "OUTSIDE" mark facing out.



Install the new lock nut.

Hold the clutch center with the clutch center holder. then tighten the lock nut to the specified torque.

TOOL: Clutch center holder


07724-0050002 (Equivalent commercially available)

TORQUE: 128 N·m (13.1 kgf·m, 95 lbf·ft)




damage the mainshaft threads.


Be careful not to Stake lock nut into the mainshaft groove with a punch.

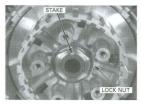

Apply engine oil and install the spring seat and judder spring.

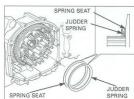

Coat the clutch discs and plates with clean engine oil. Stack the clutch discs and plates alternately.

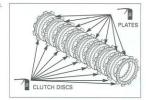

CLUTCH/GEARSHIFT LINKAGE

Install the outer clutch disc colored "Green" in the shallow slot on the clutch outer.

Install the clutch lifter piece.



Install the pressure plate. Install the clutch springs and spring bolts. Tighten the bolts in a crisscross pattern in 2 – 3 steps, then tighten the bolts to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

Install the right crankcase cover (page 9-14).



GEARSHIFT LINKAGE

GEARSHIFT LINKAGE REMOVAL

Remove the following:
- Right crankcase cover (page 9-3)

- Clutch assembly (page 9-4)

ciator describely (page 6-4)

Remove the bolt and gearshift pedal link.




Pull the gearshift spindle assembly and thrust washer out of the crankcase.



Remove the following:


- Stopper arm socket bolt
- Stopper arm
- Return springWasher
- Dowel pins
- Socket bolt
- Gearshift cam

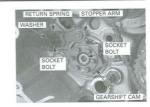

GEARSHIFT LINKAGE INSPECTION

Check the gearshift spindle for wear, damage or bending.

Check the return spring for fatigue or damage.

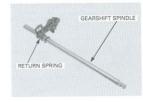

SHIFT FORK/SHIFT DRUM

Align the dowel pin on the shift drum center with the wide groove on the gearshift REMOVAL

Separate the crankcase halves (page 11-3).

Remove the shift drum bearing set plate bolt/washer.

SHIFT FORK SHAFT

Remove the shift fork shaft and shift forks.



Remove the shift drum.



SHIFT DRUM/SHIFT FORK INSPECTION

Check the shift fork guide pin for abnormal wear or damage

Measure the shift fork I.D.

SERVICE LIMIT: 12.03 mm (0.474 in)

Measure the shift fork claw thickness.

SERVICE LIMIT: 5.9 mm (0.23 in)

Measure the shift fork shaft O.D.

SERVICE LIMIT: 11.95 mm (0.470 in)





Inspect the shift drum guide grooves for abnormal wear or damage.

Turn the outer race of the shift drum bearing with your finger.

The bearing should turn smoothly and freely without excessive play.

If necessary replace the bearing.




INSTALLATION

Install the shift drum into the lower crankcase.




The shift forks have location marks:

- "R" for right
- "L" for left
- "C" for center

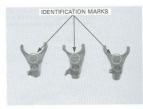

Install the shift forks into the shift drum guide groove with the identification marks facing toward the right side of the engine and insert the fork shaft.

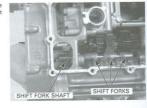

GEARSHIFT LINKAGE INSTALLATION

Install the following:

- Washer
- Return spring
- Stopper arm
- Socket bolt

Tighten the stopper arm socket bolt to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)



Install the dowel pin onto the shift drum.
Install the gearshift cam while holding the stopper arm using a screwdriver as shown.

Apply a locking agent to the gearshift cam socket bolt threads.

Install and tighten the socket bolt to the specified torque.

TORQUE: 23 N·m (2.3 kgf·m, 17 lbf·ft)

Install the thrust washer and gearshift spindle assembly into the crankcase while aligning the spring ends with the crankcase stopper pin.

Install the thrust washer and gearshift spindle assembly into the crankcase while aligning the spring ends with the crankcase stopper pin.





Install the gearshift pedal link aligning its slit with the punch mark on the gearshift spindle, Install and tighten the pinch bolt to the specified torque.


TORQUE: 20 N·m (2.0 kgf·m, 14 lbf·ft)

Install the clutch assembly (page 9-9).




RIGHT CRANKCASE COVER INSTALLATION


Apply a sealant to the mating surfaces of the crankcase as shown.

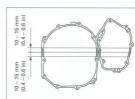

Install the two dowel pins.

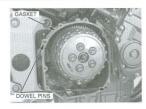

Install the right crankcase cover while turning the lifter arm clockwise to engage the lifter arm groove with the lifter piece flange.

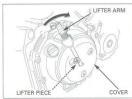

Set the clutch cable guide onto the right crankcase cover.





Install and tighten the right crankcase cover SH bolts in 2 or 3 steps.

Connect the clutch cable end to the clutch lifter lever.

Pour the recommended engine oil (page 3-14).

Install the removed parts in the reverse order of removal.

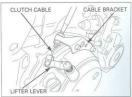

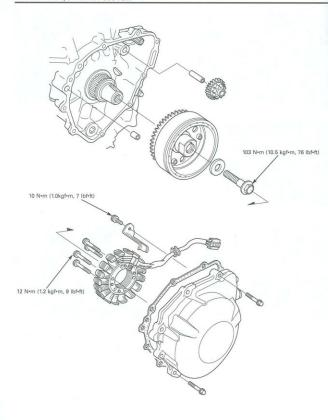

10. ALTERNATOR/STARTER CLUTCH

SERVICE INFORMATION	10-1	FLYWHEEL REMOVAL	10-3
TROUBLESHOOTING	10-1	STARTER CLUTCH	10-5
ALTERNATOR COVER REMOVAL	10-2	FLYWHEEL INSTALLATION	10-7
STATOR	10-2	ALTERNATOR COVER INSTALLATION	10-8

SERVICE INFORMATION

GENERAL

- This section covers service of the alternator stator, flywheel and starter clutch. All service can be done with the engine installed in the frame.
- · Refer to section 16 for alternator stator inspection.

Refer to section 18 for starter motor servicing.

ITEM	STANDARD	SERVICE LIMIT
Starter driven gear boss O.D.	51.699 - 51.718 (2.0354 - 2.0361)	51.684 (2.0348)

TORQUE VALUES

Alternator stator socket bolt 12 N-m (1.2 kgf-m, 9 lbf-ft)
Starter clutch outer socket bolt 16 N-m (1.5 kgf-m, 12 lbf-ft)
Flywheel flange bolt 103 N-m (10.5 kgf-m, 7 lbf-ft)
Stator wire clamp flange bolt 10 N-m (1.0 kgf-m, 7 lbf-ft)

12 N-m (1.2 kgl-m, 19 lbf-tt)
103 N-m (10.5 kgf-m, 76 lbf-tt)
104 Apply a locking agent to the threads
105 N-m (10.5 kgf-m, 7 lbf-tt)
CT bolt

CT bolt

TOOLS

Flywheel holder Rotor puller 07725-0040000 07733-0020001 Equivalent commercially available or 07933–3950000

TROUBLESHOOTING

Engine does not turn


Faulty starter clutch

Damaged reduction gear/shaft

ALTERNATOR COVER REMOVAL

Remove the left side cover (page 2-2).

Disconnect the alternator 3P connector.

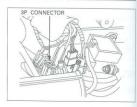

The alternator cover (stator) is magnetically attached to the flywheel, be careful during removal. Remove the alternator cover SH bolts and alternator cover.

The engine oil will run out when the alternator cover is removed. Set a clean oil pan under the engine and add the recommended oil to the specified level after installation.



Remove the gasket and dowel pin.





STATOR

REMOVAL

Remove the alternator wire grommet from the alternator cover.

Remove the socket bolt and stator wire clamp. Remove the socket bolts and stator.

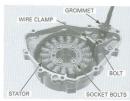

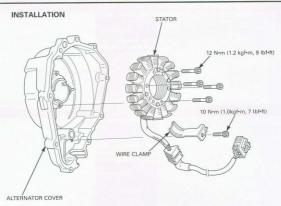

Install the stator into the alternator cover.

Apply sealant to the wire grommet, then install the wire grommet into the alternator groove securely. Install and tighten the stator mounting socket bolts to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

Install the wire clamp and tighten the bolt to the specified torque.

TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)



FLYWHEEL REMOVAL

Remove the alternator cover (page 10-2).

Remove the starter reduction gear shaft and reduction gear.



ALTERNATOR/STARTER CLUTCH

Hold the flywheel using the flywheel holder, then remove the flywheel bolt.

TOOL:

Flywheel holder

07725-0040000 (Equivalent commercially available)

Remove the washer.



Remove the flywheel using the special tool.

TOOL:

Rotor puller


07733-0020001 or 07933-3950000



Remove the woodruff key.



Check the starter reduction gear and shaft for wear or damage.

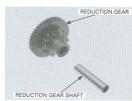

STARTER CLUTCH

INSPECTION

Check the operation of the one-way clutch by turning the driven gear.

You should be able to turn the driven gear counterclockwise smoothly, but the gear should not turn clockwise.

DISASSEMBLY

Remove the starter driven gear by turning it counterclockwise.

Hold the flywheel with a flywheel holder, and remove the starter clutch mounting torx bolts.


TOOL:

Flywheel holder

07725-0040000 (Equivalent commercially available)

Remove the starter one-way clutch assembly.



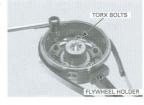

Check the starter driven gear for abnormal wear or damage.


Measure the starter driven gear boss O.D.

SERVICE LIMIT: 51.684 mm (2.0348 in)



Check the one-way clutch for wear or damage and replace if necessary.



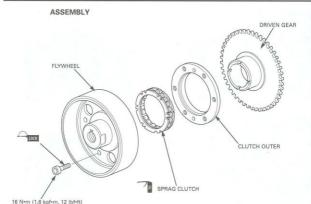

Apply engine oil to the sprag clutch contacting surfaces.

Install the sprag clutch into the starter clutch outer with the flange side facing out.



Install the starter one-way clutch assembly onto the flywheel.



Apply a locking agent to the starter clutch outer mounting bolt threads.

Hold the flywheel with a flywheel holder, and tighten the starter clutch mounting torx bolts.

TOOL:

Flywheel holder

07725-0040000 (Equivalent commercially available in U.S.A)

TORQUE: 16 N·m (1.6 kgf·m, 12 lbf·ft)



Install the starter driven gear into the one-way clutch while turning it counterclockwise.

Recheck the one-way clutch operation.

You should be able to turn the driven gear counterclockwise smoothly, but the gear should not turn clockwise.



FLYWHEEL INSTALLATION


Clean any oil from the crankshaft taper. Install the woodruff key on the crankshaft.



Install the flywheel aligning the key way in the flywheel with the woodruff key on the crankshaft.

Apply oil to the flywheel bolt threads and seating surface.

Install the washer and flywheel bolt.

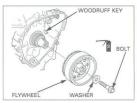

ALTERNATOR/STARTER CLUTCH

Hold the flywheel using the flywheel holder, then tighten the bolt to the specified torque.

TOOL:

Flywheel holder

07725-0040000 (Equivalent commercially available in U.S.A)

TORQUE: 103 N·m (10.5 kgf·m, 76 lbf·ft)



Apply molybdenum oil solution to the starter reduction gear shaft.


Apply oil to the starter reduction gear.

Install the starter idle gear and shaft onto the crankcase.



ALTERNATOR COVER INSTALLATION

Apply sealant to the mating surface of the crankcase as shown.

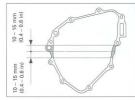

Install the dowel pin and new gasket.



The alternator cover (stator) is magnetically attached to the flywheel, be careful during installation.


The alternator Install the alternator cover.


Install and tighten the bolts securely.



Connect the alternator 3P (Natural) connector.

Install the left side cover (page 2-2)

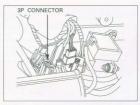

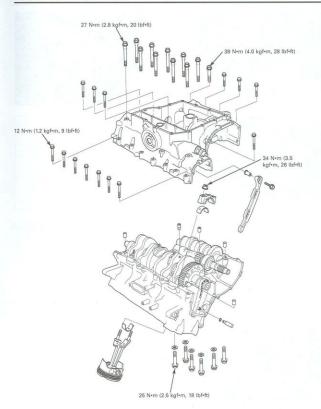

11. CRANKCASE/PISTON/CYLINDER

SERVICE INFORMATION	11-1	PISTON/CONNECTING ROD	11-4
TROUBLESHOOTING	11-2	CRANKSHAFT	11-7
CRANKCASE SEPARATION	11-3	CRANKCASE COMBINATION	11-12

SERVICE INFORMATION

GENERAL

- . This section covers crankcase separation for service of the crankshaft and piston.
- The following parts must be removed before separating the crankcase.
 - Alternator/flywheel (Section 10)
 - Clutch/gearshift linkage (Section 9)

disulfide oil to the crank pin during assembly.

- Cylinder head (Section 8) - Engine (Section 6)
- Oil pump (Section 4)
- Mark and store the disassembled parts to ensure that they are installed in their original locations.
- Mark and store the bearing inserts to ensure that the parts are installed in the correct locations during reassembly. If the
 inserts are improperly installed, they will block the oil hole, causing insufficient lubrication and eventual engine seizure.
- The connecting rod bearing inserts are select fit and are identified by color codes. Select replacement bearings from the code tables. After installing new bearings, recheck them with a plastiquate to verify clearance. Apply molybdenum

SPECIFICATIONS

nit: mm (in)

ITEM		STANDARD	SERVICE LIMIT	
Cylinder I.D.			71.000 - 71.015 (2.7953 - 2.7963)	71.10 (2.795)
	Out of round			0.10 (0.004)
	Taper		-	0.10 (0.004)
	Warpage			0.05 (0.002)
Piston, piston Piston mark direction			"IN" mark facing toward the intake side	
rings	Piston O.D.		70.965 - 70.985 (2.7939 - 2.7947)	70.90 (2.791)
	Piston O.D. measurement point		15 mm (0.6 in) from bottom of skirt	_
	Piston pin bore I.D.		17.002 - 17.008 (0.6694 - 0.6696)	17.03 (0.670)
	Piston pin O.D.		16.993 - 17.000 (0.6690 - 0.6693)	16.98 (0.669)
	Piston-to-piston pin clearance		0.002 - 0.015 (0.0001 - 0.0006)	
	Piston ring-to-ring groove clearance	Тор	0.030 - 0.065 (0.0012 - 0.0026)	0.08 (0.003)
		Second	0.015 - 0.045 (0.0006 - 0.0018)	0.07 (0.003)
	Piston ring end gap	Тор	0.28 - 0.38 (0.011 - 0.015)	0.5 (0.02)
		Second	0.40 - 0.55 (0.016 - 0.022)	0.7 (0.03)
		Oil (side rail)	0.2 - 0.7 (0.01 - 0.03)	0.9 (0.04)
Cylinder-to-piston clearance		0.015 - 0.050 (0.0006 - 0.0020)	_	
Connecting rod small end I.D.		17.016 - 17.034 (0.6699 - 0.6706)	17.04 (0.671)	
Connecting rod-to-piston pin clearance		0.016 - 0.041 (0.0006 - 0.0016)	_	
Crankpin oil clearance		0.030 - 0.052 (0.0012 - 0.0020)	0.06 (0.002)	

TOROUE VALUES

Crankcase bolt, 10 mm 39 N·m (4.0 kgf·m, 29 lbf·ft) 27 N+m (2.8 kgf+m, 20 lbf+ft) 9 mm Apply oil to the threads 8 mm 25 N+m (2.5 kgf+m, 18 lbf+ft) 6 mm 12 N·m (1.2 kgf·m, 9 lbf·ft) Connecting rod nut 33 N·m (3.4 kgf·m, 25 lbf·ft) Apply oil to the threads

TROUBLESHOOTING

Cylinder compression is too low, or engine is hard to start

- Blown cylinder head gasket
- · Worn, stuck or broken piston ring
- · Worn or damaged cylinder or piston
- · Bent valve, or bent and deteriorated valve seat

Cylinder compression is too high, or engine overheats or knocks

- · Carbon deposites on the cylinder head and/or piston crown

Piston sounds

- · Worn Cylinder, piston and/or piston ring
- · Worn piston pin hole and piston pin
- · Worn connecting rod small end

Excessive smoke

- · Worn, stuck or broken piston ring
- · Worn valve stem seal

Excessive noise

- · Worn connecting rod big end bearing
- · Bent connecting rod
- · Worn crankshaft main journal bearing
- · Worn transmission bearing

Engine vibration

· Excessive crankshaft runout

CRANKCASE SEPARATION

Remove the speed sensor before separating the crankcase. Do not separate or assemble the crankcase with the speed sensor installed.

Refer to Service Information (page 11-1) for removal of necessary parts before separating the crankcase.

Remove the sealing plug and O-ring.



Loosen the seven 6 mm bolts and 8 mm bolts in a crisscross pattern in 2 or 3 steps.


Remove the bolts and sealing washers.



Place the engine with the upper side down. Loosen the 6 mm bolts, 9 mm bolts and 10 mm bolts in a crisscross pattern in 2 or 3 steps. Remove the bolts and sealing washers.

Separate the lower crankcase from the upper crankcase.

Remove the three dowel pins and two oil orifices.

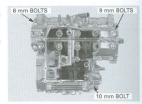

Clean any sealant off of the crankcase mating surface.



PISTON/CONNECTING ROD

Be careful not to damage the crankpin, main journal and bearing inserts.

PISTON/CONNECTING ROD REMOVAL

Mark the bearing caps and bearings as you remove them to indicate the correct cylinder for reassembly.

Remove the connecting rod bearing cap nuts and bearing caps.

Tap the side of the cap lightly if the bearing cap is hard to remove.

Remove the crankshaft.

Remove the piston/connecting rod assembly from the top of the cylinder.



Remove the piston pin clip with pliers.

Push the piston pin out of the piston and connecting rod, and remove the piston.






PISTON DISASSEMBLY

Do not damage the piston ring by spreading the ends too far. Spread each piston ring and remove it by lifting up at a point opposite the gap.



Clean carbon deposits from the ring grooves with a ring that will be discarded. Never use a wire brush; it will scratch the groove. Remove any carbon deposits from the piston ring grooves.

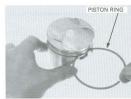

PISTON INSPECTION

Temporarily install the piston rings to their proper position with the mark facing up.

Measure the piston ring-to-ring groove clearance with the rings pushed into the grooves.

SERVICE LIMITS:

Top: 0.08 mm (0.003 in) Second: 0.07 mm (0.003 in)



Insert the piston ring squarely into the bottom of the cylinder and measure the ring end gap.

SERVICE LIMITS:

Top: 0.5 mm (0.02 in) Second: 0.7 mm (0.03 in) Oil (side rail): 0.9 mm (0.04 in)



Measure the piston pin bore.

SERVICE LIMIT: 17.03 mm (0.670 in)



Measure the diameter of the piston at 15 mm (0.6 in) from the bottom and 90 degrees to the piston pin hole.

SERVICE LIMIT: 70.90 mm (2.791 in)




CRANKCASE/PISTON/CYLINDER

Measure the O.D. of the piston pin.

SERVICE LIMIT: 16.98 mm (0.669 in)

Calculate the piston-to-piston pin clearance.


STANDARD: 0.002 - 0.015 mm (0.0001 - 0.0006 in)

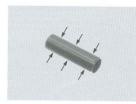

CYLINDER INSPECTION

Inspect the top of the cylinder for warpage.

SERVICE LIMIT: 0.05 mm (0.002 in)

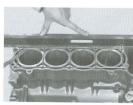

CYLINDER INSPECTION

Inspect the cylinder bore for wear or damage. Measure the cylinder I.D. in X and Y axis at three levels.

Take the maximum reading to determine the cylinder wear.

SERVICE LIMIT: 71.10 mm (2.795 in)

Calculate the piston-to-cylinder clearance.

Take a maximum reading to determine the clearance.

Refer to page 11-5 for measurement of the piston O.D.

STANDARD: 0.015 - 0.050 mm (0.0006 - 0.0020 in)



Calculate the taper and out of round at three levels in X and Y axis, Take the maximum reading to determine them.

SERVICE LIMITS:

Taper: 0.10 mm (0.004 in) Out of round: 0.10 mm (0.004 in)

The cylinder must be rebored and an oversize piston fitted if the service limits are exceeded.


The following oversize pistons are available: 0.25 mm (0.010 in)

The piston to cylinder clearance for the oversize piston must be: 0.015 - 0.050 mm (0.0006 - 0.0020 in).

CONNECTING ROD INSPECTION

Measure the connecting rod small end I.D.

SERVICE LIMIT: 17.03 mm (0.670 in)

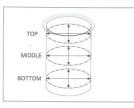



SIDE CLEARANCE INSPECTION

Measure the connecting rod side clearance.

SERVICE LIMIT: 0.30 mm (0.012 in)

If the clearance exceeds the service limit, replace the connecting rod.

Recheck and if still out of limit, replace the crankshaft.



CRANKPIN BEARING INSPECTION

Clean off any oil from the bearing inserts and crankpin.

Carefully install the crankshaft onto the upper crankcase.

Set the connecting rods onto the crankpin.

Put a strip of plastigauge lengthwise on the crankpin, avoiding the oil hole.



CRANKCASE/PISTON/CYLINDER

Carefully install the bearing caps by aligning the I.D. code.

Apply engine oil to the connecting rod bearing cap nut threads and seating surfaces and install them. Tighten the cap nuts in 2 or 3 steps.

TORQUE: 34 N·m (3.5 kgf·m. 25 lbf·ft)



Remove the nuts and bearing cap.

Measure the compressed plastigauge at its widest point on the crankpin to determine the oil clearance.

If the oil clearance exceeds the service limit, select the correct replacement bearings.



CRANKPIN BEARING SELECTION

Record the connecting rod I.D. code number (1 or 2) or measure the I.D. with the bearing cap installed without bearing inserts.

If you are replacing the crankshaft, record the corresponding crankpin O.D. code number (A or B),



Letters (A or B) on the crank weight are the codes for the crankpin O.D.s from left to right.

Numbers (1 or 2)

on the connecting rods are the

codes for the con-

necting rod I.D.

If you are reusing the crankshaft, measure the crankpin O.D. with the micrometer.

Cross-reference the crankpin and rod codes to determine the replacement bearing color.



CRANKPIN BEARING SELECTION TABLE:

Unit: mm (in)

			CON	INECTING ROD I.D. C	ODE
			1	2	3
			39.000 - 39.006 (1.5354 - 1.5357)	39.006 - 39.012 (1.5357 - 1.5359)	39.012 - 39.018 (1.5359 - 1.5361)
	А	36.497 - 36.503 (1.4369 - 1.4371)	E (Yellow)	D (Green)	C (Brown)
CRANKPIN O.D. CODE	В	36.491 - 36.497 (1.4367 - 1.4369)	D (Green)	C (Brown)	B (Black)
	С	36.485 - 36.491 (1.4364 - 1.4367)	C (Brown)	B (Black)	A (Blue)

BEARING THICKNESS:

- A (Blue) Thick
- B (Black):
- C (Brown):
- D (Green):
- E (Yellow) Thin


NOTICE

After selecting new bearings, recheck the clearance with a plastigauge. Incorrect clearance can cause severe engine damage.

BEARING INSTALLATION

Clean the bearing outer surfaces, bearing cap and connecting rod.

Install the crankpin bearing inserts onto the bearing cap and connecting rod, aligning each tab with each groove

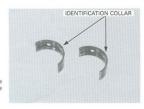




PISTON ASSEMBLY

Carefully install the piston rings into the piston ring grooves with their marking facing up.

- · Apply oil to the piston rings.
- Avoid piston and piston ring damage during installation.
- Install the piston rings with the marking facing up.
 Do not mix the top and second rings; top ring is narrower than the second ring in width.

Stagger the piston ring end gaps 120' apart from each other.

Stagger the side rail end gaps as shown.

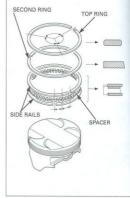

PISTON INSTALLATION

Apply molybdenum oil solution to the connecting rod small end inner surfaces and piston pin outer surfaces.


Install the piston pin into the piston and connecting rod.

Install new piston pin clips into the grooves of the piston pin hole.

- Make sure that the piston pin clips seat securely.
 Do not align the piston pin clip and gap with the pin
- Do not align the piston pin clip end gap with the piston cut-out.

Apply engine oil to the cylinder wall, piston and piston rings.

Install the piston/connecting rod assembly into the cylinder using a commercially available piston ring compressor tool.

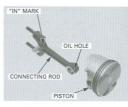



Install the piston

so that the "IN" mark faces the same direction as

the oil hole in the

connecting rod.

NOTICE

Install the piston/connectina rod assembly with the piston "IN: mark facing to the intake side.

- · While installing the piston, be careful not to damage the top surface of the cylinder, especially around the cylinder bore.
- · Be careful not to damage the cylinder sleeve and crankpin with the connecting rod bolt threads.

into the cylinder.

Apply molybdenum oil solution to the crankpin bearing surfaces.

Install the bearing cap.

Make sure the ring compressor tool sits flush with the top surface of the cylinder. Insure that the marks on the caps are aligned with the marks on the connecting rods.

Apply oil to the connecting rod nut threads and seating surfaces.






Install the connecting rod nuts and tighten the nuts gradually and alternately, then tighten them to the specified torque.

TORQUE: 34 N·m (3.5 kgf·m, 25 lbf·ft)




CRANKCASE COMBINATION

Apply a light, but through, coating of liquid sealant to the crankcase mating surface except to the main bearing journal bolt (lower crankcase bolt, 8 mm) area and the oil passage area as shown.

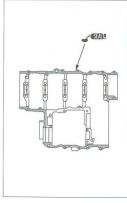

Install the three dowel pins.
Install oil orifices aligning their cut-out with the groove in the upper crankcase.

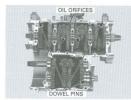

Install the lower crankcase onto the upper crankcase. Clean the new crankcase 9 mm bolts thoroughly with solvent and blow them dry.

Apply oil to the 9 mm bolt threads and seating surface and install them.

Install the 10 mm bolt, 6 mm bolts.

Make sure the upper and lower crankcase are seated securely.


From the inside to outside, tighten the lower crankcase 9 mm bolts (main journal bolts) in a criss-cross pattern in 2 or 3 steps.

TORQUE: 27 N·m (2.8 kgf·m, 20 lbf·ft)

Tighten the 10 mm bolt to the specified torque, and then tighten 6 mm.

TORQUE: 10 mm bolt: 39 N·m (4.0 kgf·m, 29 lbf·ft)

6 mm bolt: 12 N·m (1.2 kgf·m, 9 lbf·ft)

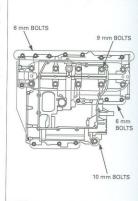

The sealing washer locations are indicated on the upper crankcase using the "\Delta" mark. Install the upper crankcase 8 mm bolts and 6 mm bolts with new sealing washers.

Tighten the 8 mm bolts in a crisscross pattern in 2 or 3 steps.


TORQUE: 24 N+m (2.4 kgf+m, 17 lbf+ft)

Tighten the 6 mm bolts in a crisscross pattern in 2 or 3 steps securely.

Apply a locking agent to the set plate bolt threads. Install the mainshaft bearing set plate with its "OUT SIDE" mark facing out.

Install and tighten the bolts to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

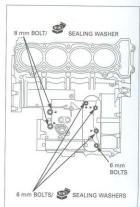


CRANKCASE/PISTON/CYLINDER

Apply clean engine oil to the new O-ring and install it to the sealing plug.

Install the sealing plug to the crankcase.

Install the removed parts in the reverse order of removal.



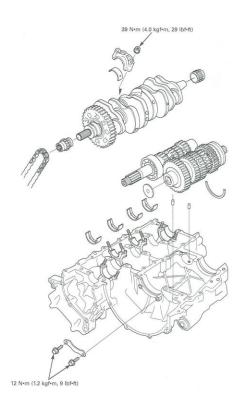

12. CRANKSHAFT/TRANSMISSION

SERVICE INFORMATION	12-1	CRANKSHAFT	12-3
TROUBLESHOOTING	12-2	TRANSMISSION	12-9

SERVICE INFORMATION

GENERAL

- The crankcase must be separated to service the crankshaft and transmission. Refer to section 11 for crankcase separation/assembly.
- · Be careful not to damage the crankshaft main journal bearing while removing or installing the crankshaft.
- Mark and store the disassembled parts to ensure that they are installed in their original locations. · Mark and store the bearing inserts to ensure that the parts are in their correct locations during reassembly. If the inserts
- are improperly installed, they wil block the oil hole, causing insufficient lubrication and eventual engine seizure. · The main journal bearing inserts are a select fit and are identified by color codes. Select replacement bearings from the
- code tables. After installing new bearings, recheck them with a plastiquage to verify clearance. Apply molybdenum disulfide oil to the main journal during assembly.

SPECIFICATIONS

	ITEM		STANDARD	SERVICE LIMIT
Crankshaft	Side clearance		0.05 - 0.20 (0.002 - 0.008)	0.30 (0.012)
	Runout			0.30 (0.012)
	Main jounal oil cle	arance	0.017 - 0.035 (0.0007 - 0.0014)	0.04 (0.002)
Transmission	Gear I.D.	M5, M6	28.000 - 28.021 (1.1024 - 1.1032)	28.04 (1.104)
		C1	24.000 - 24.021 (0.9449 - 0.9547)	24.04 (0.946)
		C2, 3, 4	31.000 - 31.025 (1.2205 - 1.2215)	31.04 (1.222)
	Bushing O.D.	M5, 6	27.959 - 27.980 (1.1007 - 1.1016)	27.94 (1.100)
		C2	30.955 - 30.980 (1.2187 - 1.2197)	30.93 (1.218)
		C3, 4	30.950 - 30.975 (1.2185 - 1.2195)	30.93 (1.218)
	Bushing I.D.	M5	24.985 - 25.006 (0.9837 - 0.9845)	25.02 (0.985)
		C2	27.985 - 28.006 (1.1018 - 1.1026)	28.02 (1.103)
	Gear-to-bushing clearance	M5, 6	0.020 - 0.062 (0.0008 - 0.0024)	0.10 (0.004)
		C2	0.020 - 0.070 (0.0008 - 0.0028)	0.11 (0.004)
		C3, 4	0.025 - 0.075 (0.0010 - 0.0030)	0.11 (0.004)
	Mainshaft O.D.	M5	24.967 - 24.980 (0.9830 - 0.9835)	24.96 (0.983)
		Clutch outer guide	24.980 - 24.993 (0.9835 - 0.9840)	24.96 (0.983)
	Countershaft O.D.	C2	27.967 - 27.980 (1.1011 - 1.1016)	27.96 (1.101)
	Bushing-to-shaft	M5	0.005 - 0.039 (0.0002 - 0.0015)	0.08 (0.003)
	clearance	C2	0.005 - 0.039 (0.0002 - 0.0015)	0.08 (0.003)

TORQUE VALUES

Connecting rod nut Mainshaft bearing set plate bolt

TOOLS

Driver, 40 mm I. D. Attachment, 25 mm I.D. Attachment "B" collar

TROUBLESHOOTING

Excessive noise

- · Worn connecting rod big end bearing
- Bent connecting rod
 Worn crankshaft main journal bearing
- Worn transmission bearing

Hard to shift

- · Improper clutch operation
- Incorrect transmission oil weight
- Incorrect clutch adjustment
- Bent shift fork
- Bent fork shaft
- Bent fork claw
- · Damaged shift drum cam groove
- · Bent shift spindle

33 N·m (3.3 kgf·m, 25 lbf·ft) Apply oil to the threads and seating surface 12 N·m (1.2 kgf·m, 9 lbf·ft) Apply a locking agent to the threads

07746-0030100 07746-0030200 07964-MB00200

Transmission jumps out of gear

- Worn gear dogs and slots
- · Bent fork shaft
- · Broken shift drum stopper
- Worn or bent shift forks
 Broken shift linkage return spring

Engine vibration

· Excessive crankshaft runout

CRANKSHAFT

Be careful not to damage the crankpin, main journal and bearing inserts.

REMOVAL

Mark the bearing caps and bearings as you remove them to indicate the correct cylinder for reassembly.

Remove the connecting rod bearing cap nuts and bearing caps.

Tap the side of the cap lightly if the bearing cap is hard to remove.

Remove the crankshaft.





Remove the main journal bearings from both the crankcases.



Check the primary drive gear and sub-gear teeth for abnormal wear or damage.

PRIMARY DRIVE SUB-GEAR REMOVAL

Remove the special snap ring and friction spring.

Remove the primary drive sub-gear, gear springs and stopper pins.




PRIMARY DRIVE SUB-GEAR INSTALLATION


Install the stopper pins and gear springs onto the primary drive gear as shown.

Apply molybdenum oil solution to the sub-gear sliding surface and friction spring sliding surface. Temporarily install the sub-gear by aligning the punch mark with the hole in the primary drive gear.


Install the friction spring onto the sub-gear.

Install the sub-gear onto the primary drive gear so that it evenly touches the primary drive gear by prying the sub-gear with a 5 mm pin or screwdriver that is the stoppers on the reverse side of the sub-gear are pushes against the gear springs.

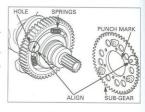

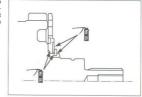

Install with the large tab facing the right and the chamfered side facing the gear. Install a new snap ring into the ring groove in the crankshaft securely with the end gap at right angle to the crankshaft cut-outs by aligning the large tab edge with the sub-gear groove as shown.

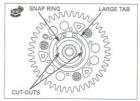

STARTER CLUTCH NEEDLE BEARING REPLACEMENT


To protect the crankshaft main journal from the bearing puller claws, cover the mainshaft journal properly; worn main journal bearings are usable

Remove the needle bearing with a commercially available universal bearing puller.

TOOI ·

Universal bearing puller

07631-0010000 (Equivalent commercially available)

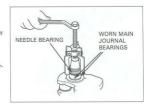

Press with the marking side facing up.


protectors.

Press a new needle bearing onto the crankshaft using a hydraulic press and special tools until its edge is flush with the groove in the crankshaft.

Make sure that the height from the crankshaft end is 27.6 – 27.9 mm (1.09 – 1.10 in).

TOOLS: Driver shaft B

07964-MB00200

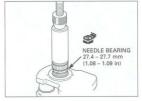

INSTALLATION

Do not get the molybdenum oil solution on the connecting rod bolts and bearing cap nuts. Apply molybdenum oil solution to the main journal bearing sliding surfaces on the upper crankcase and the crankpin bearing sliding surfaces on the connecting rods.



Apply molybdenum oil solution to the thrust surfaces of the crankshaft as shown.



Lower all pistons to the top dead center to avoid damaging the crankpin by the connecting rod bolts. Carefully install the crankshaft onto the upper crankcase.

Set the connecting rods onto the crankpins.



INSPECTION

Hold both ends of the crankshaft. Set a dial gauge on the center main journal of the crankshaft. Rotate the crankshaft two revolutions and read the runout.

SERVICE LIMIT: 0.30 mm (0.012 in)



MAIN JOURNAL BEARING

NOTICE

Do not interchange the bearing inserts. They must be installed in their original locations or the correct bearing oil clearance may not be obtained, resulting in engine damage.

Remove the crankshaft (page 12-3).

BEARING INSPECTION

Inspect the main journal bearing inserts on the upper and lower crankcase for unusual wear or peeling. Check the bearing tabs for damage.



OIL CLEARANCE INSPECTION

Clean off any oil from the bearing inserts and main journals.

Install the crankshaft onto the upper crankcase.

Put a strip of plastigauge lengthwise on each main journal avoiding the oil hole.





Install the dowel pins and oil orifices.

Carefully install the lower crankcase on the upper crankcase.

Apply engine oil to the main journal 8 mm bolt threads and seating surfaces and install them. Tighten the 8 mm bolts in a crisscross pattern in 2 or 3 steps.

TORQUE: 27 N·m (2.8 kgf·m, 20 lbf·ft)



Remove the 8 mm bolts and lower crankcase. Measure the compressed plastigauge at its widest point on each main journal to determine the oil clearance.

SERVICE LIMITS: 0.04 mm (0.002 in)

If main bearing clearance is exceeds the service limit, select the correct replacement bearings.



on the left side of upper crankcase are the codes for the bearing support I.D.s from left to right.

Letters (A, B or C) BEARING SELECTION

Record the crankcase bearing support I.D. code letters from the pad on the left side of the upper crankcase as shown.



Numbers (1, 2 or 3) on the crank weight are the codes for the main journal O.D.s from left to right.

Record the corresponding main journal O.D. code numbers from the crank weight.

Cross reference the main journal and bearing support codes to determine the replacement bearing color code.



MAIN JOURNAL BEARING SELECTION TABLE:

Unit: mm (in)


			BEARING SUPPORT I.D. CODE			
			A	В	С	
			37.000 - 37.006 (1.4566 - 1.4569)	37.006 - 37.012 (1.4569 - 1.4572)	37.012 - 37.018 (1.4572 - 1.4574)	
CRANKSHAFT O.D. CODE	1	34.000 - 34.006 (1.3386 - 1.3388)	E (Pink)	D (Yellow)	C (Green)	
	2	33.994 - 34.000 (1.3383 - 1.3386)	D (Yellow)	C (Green)	B (Brown)	
	3	33.988 - 33.994 (1.3381 - 1.3383)	C (Green)	B (Brown)	A (Black)	
	3	33.988 - 33.994	С	В		

BEARING THICKNESS:

A (Black) Thick
B (Brown):
C (Green):
D (Yellow):
V
E (Pink) Thin

NOTICE

After selecting new bearings, recheck the clearance with a plastigauge. Incorrect clearance can cause severe engine damage.

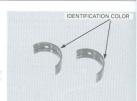

BEARING INSTALLATION

Clean the bearing outer surfaces and crankcase bearing supports.

Install the main journal bearing inserts onto the crankcase bearing supports, aligning each tab with each groove.



Install the crankshaft.



CRANKSHAFT/TRANSMISSION

Apply molybdenum oil solution to the crankpin bearing sliding surfaces on the bearing caps.

Install the bearing caps by aligning the I.D. code on the connecting rod and bearing cap. Be sure each part is installed in its original position, as

Be sure each part is installed in its original position, as noted during removal.



Apply oil to the bearing cap nut threads and seating surfaces and install the cap nuts.

Tighten the nut in 2 or 3 steps and torque them.

TORQUE: 34 N·m (3.5 kgf·m, 25 lbf·ft)

Assemble the crankcase halves (page 11-12).



TRANSMISSION


REMOVAL/DISASSEMBLY

Separate the crankcase halves (page 11-3).

Remove the bolts and bearing set plate.
Remove the mainshaft and countershaft assemblies.



Remove the mainshaft and countershaft assemblies.

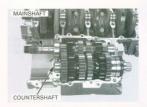

Remove the dowel pins and countershaft bearing set ring.

Disassemble the mainshaft and countershaft. Clean all disassembled parts in solvent thoroughly.

Check the mainshaft and countershaft needle bearings for abnormal wear or damage.



Check the gear shifter groove for abnormal wear or damage.



Check the gear dogs, dog holes and teeth for abnormal wear or lack of lubrication.

Measure the I.D. of each gear.

SERVICE LIMITS:

M5, M6: 28.04 mm (1.104 in) 24.04 mm (0.946 in) C2, C3, C4: 31.04 mm (1.222 in)

Measure the O.D. of each gear bushing.

SERVICE LIMITS:

M5, M6: 27.94 mm (1.100 in) 30.93mm (1.218 in) C3, C4: 30.93 mm (1.218 in)

Calculate the gear-to-bushing clearance.

SERVICE LIMITS:

M5, M6: 0.10 mm (0.004 in) 0.11 mm (0.004 in)

C3, C4: 0.11 mm (0.004 in)





Check the mainshaft and countershaft for abnormal wear or damage.

Measure the mainshaft O.D. at the M5 gear.

SERVICE LIMIT: 24.96 mm (0.983 in)

Measure the countershaft O.D. at the C2 gear.

SERVICE LIMIT: 27.96 mm (1.101 in)

Calculate the gear bushing-to-shaft clearance.

SERVICE LIMITS:

M5: 0.08 mm (0.003 in) C2: 0.08 mm (0.003 in)


Turn the outer race of each bearing with your finger. The bearings should turn smoothly and quietly. Also check that the bearing inner race fits tightly on

the shaft. Remove and discard the mainshaft bearing if the race

does not turn smoothly, quietly, or fits loosely on the mainshaft.

Replace the countershaft, collar, and bearing as an


Replace the countershaft, collar, and bearing as an assembly if the race does not turn smoothly, quietly, or fits loosely on the countershaft.

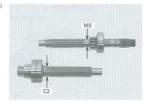



MAINSHAFT BEARING REPLACEMENT

Press out the mainshaft from the bearing using a hydraulic press.

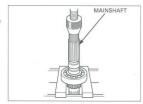



Install with the groove side facing up.


Install a new mainshaft bearing onto the mainshaft by pressing the mainshaft bearing inner race using the special tools.

TOOLS:

Inner driver C Attachment, 25 mm I.D. 07746-0030100 07746-0030200

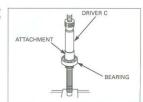

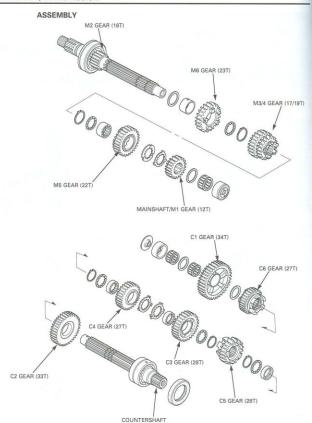

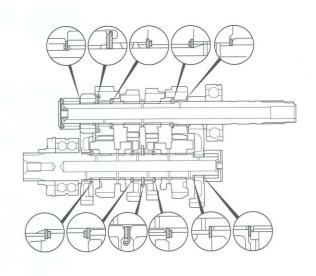


- Align the lock washer tabs with the spline washer grooves.
- Always install the thrust washer and snap ring with the chamfered (rolled) edge facing away from the thrust load.
- Install the snap ring so that its end gap aligns with the groove in the splines.
- Make sure that the snap ring is fully seated in the shaft groove after installing it.

Assemble the transmission gear and shafts.

Coat each gear with clean engine oil and check for smooth movement.

Align the oil holes in the M6 bushing and mainshaft, and the C3, C4 spline bushings and countershaft.

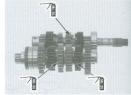

INSTALLATION

Apply molybdenum oil solution to the shift fork grooves in the M3/4, C5 and C6 gear.

Install the dowel pins in the upper crankcase holes. Install the countershaft bearing set ring into the upper crankcase groove.



Install the mainshaft and countershaft by aligning the countershaft bearing groove with the set ring on the crankcase, and aligning the bearing cap holes with the dowel pins.

Also align the countershaft bearing stopper pin with the groove in the crankcase.




Apply a locking agent to the mainshaft bearing set plate bolt threads.

Install the mainshaft bearing set plate with its "OUT SIDE" mark facing out and tighthen the bolts to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

Assemble the crankcase (page 11-12).



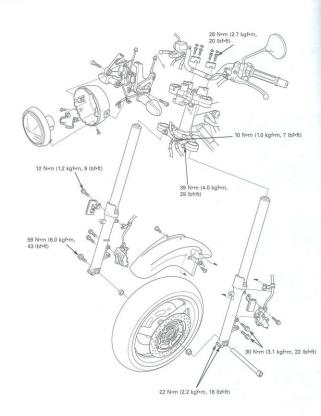

13. FRONT WHEEL/SUSPENSION/STEERING

SERVICE INFORMATION	13-1	FRONT WHEEL	13-10
TROUBLESHOOTING	13-2	FORK	13-15
HANDLEBARS	13-3	STEERING STEM	13-25

SERVICE INFORMATION

GENERAL

- · When servicing the front wheel, fork or steering stem, support the motorcycle using a safety stand or hoist · A contaminated brake disc or pad reduces stopping power. Discard contaminated pads and clean a contaminated disc with a high quality brake degreasing agent.
- · After the front wheel installation, check the brake operation by applying the brake lever. · Refer to section 15 for brake system information.
- Use only tires marked "TUBELESS" and tubeless valves on rims marked "TUBELESS TIRE APPLICABLE".

SPECIFICATIONS Unit: mm				
ITEM Minimum tire tread depth		STANDARD	SERVICE LIMIT 1.5 (0.06)	
		_		
Cold tire pressure	Driver only	250 kPa (2.50 kgt/cm², 36 psi)	_	
	Driver and passenger	250 kPa (2.50 kgt/cm², 36 psi)		
Axle runout		_	0.2 (0.01)	
Wheel rim runout	Radial	_	2.0 (0.08)	
	Axial	_	2.0 (0.08)	
Wheel balance weight			60 g (2.1 oz) max.	
Fork	Spring free length	282.3 (11.1)	276.7 (10.89)	
	Tube runout		0.20 (0.008)	
	Recommended fork fluid	Pro Honda Suspension Fluid SS-8	_	
	Fluid level	155 (6.1)	_	
	Fluid capacity	463 ± 2.5 cm ³ (15.7 ± 0.08 US oz, 16.3 ± 0.09 lmp oz)	_	
Steering head bear	ing pre-load	10 - 15 N+m (1.0 - 1.5 kgf)		

TOROUE VALUES Front brake disc bolt

Front axle bolt Front axle holder flange bolt 22 Nem (2.2 kgfem, 16 lbfeft) Front brake hose clamp flange bolt (left fork) 12 N+m (1.2 kgf+m, 9 lbf+ft) Front brake hose clamp flange bolt (right fork) 12 N·m (1,2 kgf·m, 9 lbf·ft) Fork socket bolt 20 Nem (2.0 kgfem, 14 lbfeft) Fork bolt 22 Nem (2.2 kgfem, 16 lbfeft) Fork top bridge pinch socket bolt 22 N+m (2.2 kgf+m, 16 lbf+ft) Fork bottom bridge pinch flange bolt 39 N·m (4.0 kgf·m, 29 lbf·ft) Steering bearing adjustment nut 25 N·m (2.5 kgf·m, 18 lbf·ft)

Steering stem nut Front brake hose clamp bolt (steering stem) Front master cylinder holder bolt

Front brake caliper mounting bolt TOOLS

Bearing remover head, 20 mm Attachment, 42 X 47 mm Pilot, 20 mm Fork seal driver weight Fork seal driver attachment Steering stem socket Ball race remover set - Remover attachment, - Driver shaft Steering stem driver Ball race remover

Ball race remover TROUBLESHOOTING

Bearing remover shaft

07953-3710500 07953-4250002

103 N+m (10.5 kgf+m, 76 lbf+ft)

10 N·m (1.0 kgf·m, 7 lbf·ft)

12 N·m (1.2 kgf·m, 9 lbf·ft)

07GGD-0010100

07746-0050600 07749-0010000

07746-0010300

07746-0040500

07947-KA50100

07947-KA40200

07916-3710101

07953-MJ10000

07953-MJ10100

07953-MJ10200

07946-MB00000

30 N·m (3.1 kgf·m, 22 lbf·ft)

Hard steering

- · Steering head bearing adjustment nut too tight · Worn or damaged steering head bearings
- · Bent steering stem
- Insufficient tire pressure
- Steers to one side or does not track straight
- · Damaged or loose steering head bearings
- · Bent forks
- · Bent axle
- · Wheel installed incorrectly
- · Bent frame
- · Worn or damaged wheel bearings
- · Worn or damaged swingarm pivot bearings

Front wheel wobbling

- · Bent rim
- · Worn or damaged front wheel bearings
- · Faulty tire
- · Unbalanced front tire and wheel

Front wheel turns hard

· Faulty front wheel bearing

- 20 N+m (2.0 kgf+m, 14 lbf+ft) ALOC bolt; replace with a new one 59 N·m (6.0 kgf·m, 43 lbf·ft)
 - Apply a locking agent to the threads
 - Apply oil to the threads and seating
 - surface See page 13-29
 - ALOC bolt: replace with a new one

- · Bent front axle · Front brake drag

Soft suspension

- · Insufficient fluid in fork
- Incorrect fork fluid weight
- · Weak fork springs
- · Insufficient tire pressure

Hard suspension

- · Rent fork tubes
- · Too much fluid in fork
- · Incorrect fork fluid weight
- · Clogged fork fluid passage


Front suspension noise

- · Insufficient fluid in fork
- . I nose fork fasteners

HANDLEBARS

HANDLEBAR REMOVAL

Remove the screw from the right grip end.

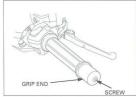


Keep the brake master cylinder upright to prevent air from entering the hydraulic system. Remove the right rearview mirror.

Disconnect the front brake light switch wire connectors from the switch.

upright to prevent
air from entering
Tisconnect the front brake switch wire connectors
from the switch.


Remove the master cylinder holder bolts, holder and master cylinder assembly.

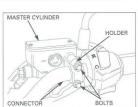

Remove the right handlebar switch/throttle housing screws.




Loosen the throttle cable lock nuts and adjusting nut.

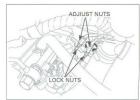

Disconnect the throttle cable ends from the throttle pipe and remove the housing.




Remove the throttle pipe.

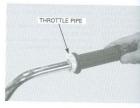

Remove the right rearview mirror.

Disconnect the clutch switch wire connectors from the switch.

Remove the clutch lever bracket holder bolts, holder and clutch lever bracket assembly.

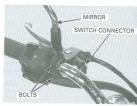

Remove the screws and left handlebar switch housing.



Remove the left handleber switch housing.



Remove the screw from the left grip end.



Remove the caps, bolts and handlebar upper holders. Remove the handlebar.



INSTALLATION

Install the handlebar and upper holders with their punch marks facing forward.

Temporarily tighten the upper holder socket bolts.

Loosen the upper holder socket bolts and align the punch marks on the handlebar with the slits of the handlebar holders.

Tighten the forward bolts first, then tighten the rear

bolts.

TORQUE: 26 N·m (2.7 kgf·m, 20 lbf·ft)



Install the caps to the handlebar upper holder bolts.



INNER WEIGHT REPLACEMENT


Apply lubricant spray through the

the rubber for easy removal.

tab locking hole to

Remove the grip from the handlebar. Straighten the weight retainer tab with a screwdriver or punch.

Temporarily install the grip end and screw, then remove the inner weight by turning the grip end.

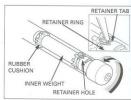


Remove the grip end from the inner weight. Discard the retainer and grip end screw.


Install the new retainer to the inner weight.

Install the grip end onto the inner weight, aligning its boss with the slot in the inner weight.


Install a new grip end mounting screw.

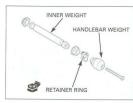

Insert the inner weight assembly into the handlebar. Turn the inner weight and hook the retainer tab with the hole in the handlebar.

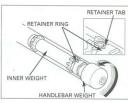


Install the left handlebar switch spacer onto the left handlebar.

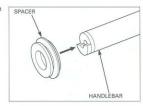

Apply Honda Bond A or equivalent adhesive to the inside of the grip and to the clean surfaces of the left handlebar and throttle grip.

Wait 3 – 5 minutes and install the grip.

Rotate the grip for even application of the adhesive.

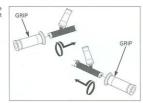

Install the grip end onto the inner weight, aligning its boss with the slot in the inner weight.

Install a new grip end mounting screw to the specified

TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)

torque.



Install the spacer into the handlebar switch groove.

hour before using.

Install the left handlebar switch housing, aligning its locating pin with the hole in the handlebar.



Tighten the forward screw first, then the rear screw.



Install the clutch lever bracket assembly by aligning the end of the bracket with the punch mark on the handlebar.


Install the clutch lever bracket holder with the "UP" mark facing up.

Tighten the upper bolt first, then the lower bolt.


TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)



Connect the clutch switch wire connectors. Install the rearview mirror.

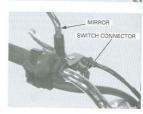

Apply grease to the throttle grip inner surface. Install the throttle grip to the handlebar.

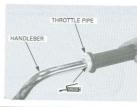

Install the right handlebar switch/throttle housing by aligning its locating pin with the hole in the handlebar.

Apply grease to the throttle cable ends.

Connect the throttle cables to the throttle grip.




Tighten the forward screw first, then the rear screw. Install the grip end (page 13-7).



Adjust the throttle free play by turning the adjuster and tighten the lock nut.

Recheck the throttle operation (page 3-4).

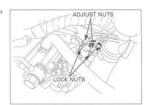


Install the master cylinder by aligning the end of the master cylinder with the punch mark on the handlebar.

Install the master cylinder holder with the "UP" mark


facing up.

Tighten the upper bolt first, then tighten the lower bolt.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

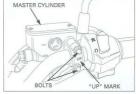

Connect the brake switch wire connectors.
Install the rearview mirror.

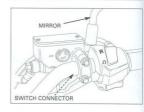

FRONT WHEEL

REMOVAL

Support the motorcycle securely using a safety stand or a hoist.

Do not operate the brake lever after the brake caliper is removed.

Remove the mounting bolts and both brake calipers.


Support the brake caliper with a piece of wire so that it does not hang from the brake hose. Do not twist the brake hose.

Loosen the right axle pinch bolts. Remove the axle bolt.





Loosen the left axle pinch bolts. Remove the axle and the front wheel.

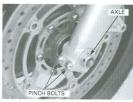


INSPECTION

Axle

Set the axle in a V-block and measure the runout. Actual runout is 1/2 the total indicator reading.

SERVICE LIMIT: 0.2 mm (0.01 in)

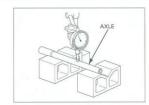


Wheel bearing

Turn the inner race of each bearing with your finger. The bearings should turn smoothly and quietly. Also check that the bearing outer race fits tightly in the hub.

Remove and discard the bearings if they do not turn smoothly, quietly, or if they fit loosely in the hub.

Install the new bearings into the hub using the special tools (page 13-12).

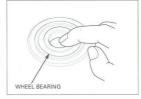

Wheel rim runout

Check the rim runout by placing the wheel in a turning stand.

Spin the wheel by hand, and read the runout using a dial indicator.

Actual runout is 1/2 the total indicator reading.

SERVICE LIMITS:

Radial: 2.0 mm (0.08 in) Axial: 2.0 mm (0.08 in)



DISASSEMBLY

Remove the bolts and brake discs.

Remove the collars and dust seals.



Install the bearing remover head into the bearing. From the opposite side, install the bearing remover shaft and drive the bearing out of the wheel hub. Remove the distance collar and drive out the other bearing.


TOOLS:

Bearing remover head, 20 mm 07746-0050600 Bearing remover shaft

07GGD-0010100



ASSEMBLY

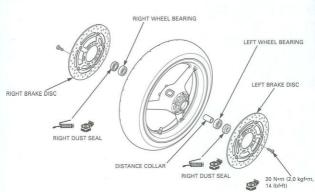


Drive in a new right bearing. Install the distance collar, then drive in the left bearing using the special tool.

Never install the old bearings. Once the bearings have been removed, they must be replaced with new ones.

TOOLS: Driver Attachment, 42 X 47 mm Pilot, 20 mm

07749-0010000 07746-0010300 07746-0040500

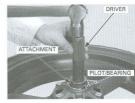

Install the brake discs with the arrow mark facing in the normal rotating direction.

Install and tighten the new mounting bolts to the specified torque.

TORQUE: 20 N·m (2.0 kgf·m, 14 lbf·ft)

on the brake discs or stopping power into the wheel hub.



WHEEL BALANCE

Do not get grease

Wheel balance

directly affects

wheel.

the stability, handling and overall safety of the motorcycle. Carefully check balance before reinstalling the

- The wheel balance must be checked when the tire is remounted.
- For optimum balance, the tire balance mark(a paint dot on the side wall) must be located next to the valve stem. Remount the tire if necessary.



Note the rotating direction marks on the wheel and tire.



Mount the wheel, tire and brake disc assembly on an inspection stand.

Spin the wheel, allow it to stop, and mark the lowest(heaviest) part of the wheel with chalk.

Do this two or three times to verify the heaviest area. If the wheel is balanced, it will not stop consistently in the same position.

To balance the wheel, install balance weights on the lightest side of the rim, the side opposite the chalk marks. Add just enough weight so the wheel will no longer stop in the same position when it is spun.

Do not add more than 60 g (2.1 oz) to the front wheel.



INSTALLATION

Install the side collars.



Install the front wheel between the fork legs.

Apply a thin layer of grease to the front axle surface. Install the front axle from the left side.



Hold the axle and tighten the axle bolt to the specified torque.

TORQUE: 59 N·m (6.0 kgf·m, 43 lbf·ft)

Tighten the right axle pinch bolts to the specified torque.

TORQUE: 22 N-m (2.2 kgf-m, 16 lbf-ft)



Install both brake calipers and tighten the new mounting bolts to the specified torque.

TORQUE: 30 N·m (3.1 kgf·m 22 lbf·ft)



With the front brake applied, pump the fork up and down several times to seat the axle and check brake operation by applying the brake lever.



Tighten the left axle pinch bolts to the specified torque.

TORQUE: 22 N·m (2.2 kgf·m, 16 lbf·ft)



Check the clearance between the brake disc and caliper bracket on each side after installation.

The clearance should be at least 0.7 mm (0.03 in).



FORK

REMOVAL

Remove the following: - Front wheel (page 13-10)

- Front fender (page 2-3)




Loosen the top bridge pinch bolts.



When the fork leg will be disassembled, loosen the fork bolt, but do not remove it yet.



Loosen the fork bottom pinch bolts and remove the fork tube from the fork top bridge and steering stem.

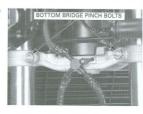


Be careful not to scratch the fork tube or damage the dust seal.

DISASSEMBLY

Remove the fork protector by prying it carefully using a screwdriver.



Remove the fork bolt from the fork tube.

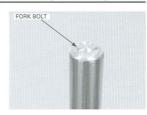

Hold the damper rod lock nut with a 14 mm spanner, then loosen and remove the fork bolt from the damper rod.

Remove the spring.



Remove the following:

- Spring collar
- Spring seat



- Fork spring



Pour out the fork fluid by pumping the fork tube several times.



bolt, temporarily install the fork spring, spring seat, onto collar and fork bolt.

If the fork damper Hold the caliper bracket in a vice with soft jaws or a turns together shop towel. with the socket Remove the fork damper socket bolt and sealing washer.



Remove the dust seal.



the fork tube sliding surface.

Do not scratch Remove the oil seal stopper ring.



Remove the fork damper assembly and oil lock piece from the fork tube.



Pull the fork tube out until you feel resistance from the slider bushing. Then move it in and out, tapping the bushing lightly until the fork tube separates from the fork slider.

The slider bushing will be forced out by the fork tube bushing.

Do not remove the fork tube bushing unless it is necessary to replace it with a new one. Remove the oil seal, back-up ring and guide bushing from the fork tube.




INSPECTION

Fork spring

Measure the fork spring free length.

SERVICE LIMIT: 276.7 mm (10.89 in)

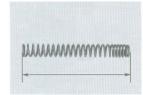

Fork tube/slider/damper

Check the fork tube and fork slider for score marks, scratches, or excessive or abnormal wear.

Replace any components that are worn or damaged.


Check the fork damper for damage. Check the oil lock valve for wear or damage.

Replace the fork damper assembly, if any component are damaged.



Place the fork tube in a V-block and measure the runout. Actual runout is 1/2 the total indicator reading.


SERVICE LIMIT: 0.20 mm (0.008 in)

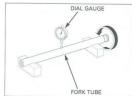


Fork tube bushing

Visually inspect the slider and fork tube bushings. Replace the bushings if there is excessive scoring or scratching, or if the teflon is worn so that the copper surface appears on more than 3/4 of the entire surface.

Check the back-up ring; replace it if there is any distortion at the points shown.

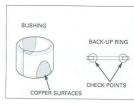

ASSEMBLY

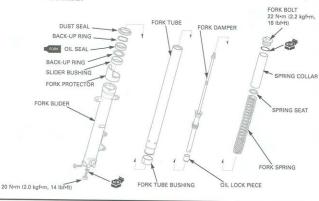

Before assembly, wash all parts with a high flash or non-flammable solvent and wipe them dry.

Install a new fork tube bushing if the tube bushing has been removed.

NOTICE

- Be careful not to damage the fork tube bushing coating.
- Do not open the fork tube bushing more than necessary.
- Remove the burrs from the bushing mating surface, being careful not to peel off the coating.

Install the new slider bushing being careful not to damage the coating of the bushing if it has been removed.

Remove the burrs from the bushing mating surface, being careful not to peel off the coating.

Install the slider bushing, back-up ring and new oil seal onto the fork slider.





Install the fork slider into the fork tube.

Drive the oil seal in using the special tools.

TOOL:

Fork seal driver weight 07947-KA50100 Fork seal driver attachment 07947-KA40200



Apply a locking agent to the fork socket bolt threads. Install the socket bolt with a new sealing washer.

Hold the axle holder in a vise with soft jaws or a shop towel

Tighten the fork socket bolt to the specified torque.

TORQUE: 20 N·m (2.0 kgf·m, 14 lbf·ft)



If the fork damper turns together with the socket bolt, temporarily install the fork spring, spring seat, onto collar and fork bolt.

Install the oil seal

with its marked side facing up. Install the fork damper assembly and oil lock piece into the fork tube.



Install the stopper ring into the fork slider groove securely.



Install the dust seal.



Pour the specified amount of recommended fork fluid into the fork tube.

RECOMMENDED FORK FLUID: Pro Honda Suspension Fluid SS-8

FORK FLUID CAPACITY: 463 ± 2.5 cm³ (15.7 ± 0.08 US oz, 16.3 ± 0.09 Imp


Pump the damper rod several times.



Be sure the oil level is the same in both forks.

Measure the oil level from the top of the fork tube while compressing the tube all the way after stroking the fork tube slowly more than 5 times and the damper rod more than 10 times.

FORK OIL LEVEL: 155 mm (6.1 in)

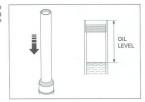

Pull the damper rod up and install the fork spring with the tapered end facing down.

Screw the damper rod end nut fully by hand.



Install the spring seat and spring collar.



Install a new O-ring onto the fork bolt. Apply fork fluid to the new O-ring.


Hold the damper rod and screw the fork bolt onto the damper rod until it seats on the damper rod lock nut.

Hold the fork bolt and tighten the lock nut to the specified torque.

TORQUE: 22 N·m (2.2 kgf·m, 16 lbf·ft)



Screw the fork bolt in to the fork tube.

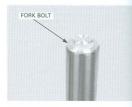

Install the fork protector onto the fork slider, aligning the protector boss with the groove in the fork slider.



INSTALLATION

Install the fork tube into the bottom bridge. Align the top end of the fork tube with the upper surface of the top bridge.



Tighten the bottom bridge pinch bolt to the specified torque.

TORQUE: 39 N·m (4.0 kgf·m, 29 lbf·ft)



Tighten the fork bolt to the specified torque if it was removed.

TORQUE: 22 N·m (2.2 kgf·m, 16 lbf·ft)

Install the following:

- Front fender (page 2-3)
- Front wheel (page 13-14)



STEERING STEM

REMOVAL


Remove the following:

- Handlebar (page 13-3)
 front wheel (page 13-10)
- Combination meter (page 19-8)
- Fork (page 13-15)


Remove the socket bolts/nuts and headlight/meter mount stay.

Remove the bolt and front brake hose clamp.



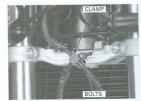

Remove the stem nut, washer and the top bridge.

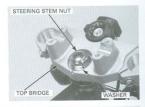

Remove the turn signal light bracket from the steering stem.



Straighten the tabs of the lock washer.

Remove the lock washer and lock nut.



Remove the steering stem bearing adjusting nut using the special tool.

TOOL:


Steering stem socket

07916-3710101



Remove the following:

- Dust seal
- Upper bearing inner race
- Upper bearing

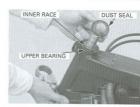

Note the installa- - Steering stem the assembly base.

tion direction of - Lower bearing



BEARING RACE REPLACEMENT

Replace the upper bearing outer races using the special tool.

TOOLS

Always replace the bearing races as a set.

Ball race remover Ball race remover set

07953-4250002 or 07953-MJ10000 07946-MJ10100 - Remover attachment - Driver shaft 07946-MJ10200



Replace the lower bearing outer races using the special tool.

TOOLS:


Ball race remover Ball race remover 07953-3710500 07953-4250002



Temporarily install the steering stem nut onto the stem to prevent the threads from being damaged when removing the lower bearing inner race from the stem.

Remove the lower bearing inner race with a chisel or equivalent tool, being careful not to damage the stem. Remove the dust seal.



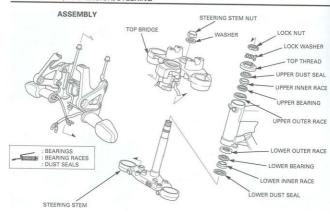


Apply grease to the new dust seal lips and install it over the steering stem.

Install a new lower bearing inner race using a special tool and a hydraulic press.

TOOL:

Steering stem driver

07946-MB00000

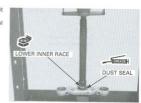

Remove the lower bearing outer race using the special tools.

TOOLS:


Driver handle 07749-0010000 Attatchment 42x47 07749-0010300

Remove the upper bearing outer race using the spe-

cial tools.

TOOLS:

Driver handle Attatchment 42x47 07749-0010000

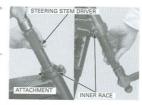


Apply grease to the lower bearing and bearing race.

Insert the steering stem into the steering head pipe.



Apply grease to the upper bearing bearing race and dust seal lip.

Install the upper bearing, upper inner race and dust seal.

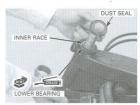

Apply oil to the bearing adjustment nut threads. Install and tighten the stem bearing adjusting nut to the initial torque.

TOOL:

Steering stem socket

07916-3710101

TORQUE: 25 N·m (2.5 kgf·m, 18 lbf·ft)



Move the steering stem right and left, lock-to-lock, five times to seat the bearings.

Make sure that the steering stem moves smoothly, without play or binding; then loosen the top thread.



Retighten the bearing adjusting nut to the specified torque.

TORQUE: 25 N·m (2.5 kgf·m, 18 lbf·ft)

Recheck that the steering stem moves smoothly without play or binding.



Install the new lock washer onto the steering stem.

Align the tabs of the lock washer with the grooves in the adjustment nut and bend two opposite tabs (shorter) down into the adjustment nut groove.



Install and finger tighten the lock nut. Hold the lock nut and further tighten the lock nut within 1/4 turn (90') enough to align its grooves with the lock washer tabs.

Bend the lock washer tabs up into the lock nut groove.



Install the turn signal light bracket.



Install the top bridge, stem nut and washer.



Temporarily install the front fork.

Tighten the steering stem nut to the specified torque.

TORQUE: 103 N·m (10.5 kgf·m, 76 lbf·ft)



Install the front brake hose clamp, tighten the bolt to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)



Install the headlight case/meter mount stay and tighten the socket bolt/nut.

Install the following:

- Front fork (page 13-15)
- Handlebar (page 13-5)
- Combination meter (page 19-8)



interference.

STEERING HEAD BEARING PRE-LOAD


Jack-up the motorcycle to raise the front wheel off the ground.


Position the steering stem to the straight ahead

Make sure that Hook a spring scale to the fork tube and measure the there is no cable steering head bearing pre-load.

The pre-load should be within 10 - 15 N*m (1.0 - 1.5 kgf*m).

If the readings do not fall within the limits, lower the front wheel to the ground and adjust the steering bearing adjusting nut.

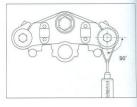

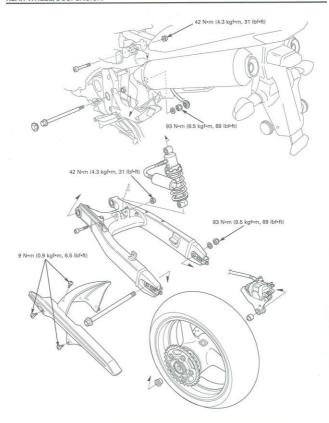

14. REAR WHEEL/SUSPENSION

14-1	SHOCK ABSORBER	14-10
14-2	SWINGARM	14-14
14-3		
	14-2	14-2 SWINGARM

SERVICE INFORMATION

GENERAL

- A contaminated brake disc or pad reduces stopping power. Discard contaminated pads and clean a contaminated disc with a high quality brake degreasing agent.
- · After the rear wheel installation, check the brake operation by applying the brake pedal.
- · The shock absorber contains nitrogen under high pressure. Do not allow fire or heat near the shock absorber.
- · Before disposal of the shock absorber, release the nitrogen (page 14-13).
- · When servicing the rear wheel and suspension, support the motorcycle using a safety stand or hoist.
- Use only tires marked "TUBELESS" and tubeless valves on rims marked "TUBELESS TIRE APPLICABLE."
 Use genuine Honda replacement bolts and nuts for all suspension pivot and mounting point.
- Refer to section 15 for brake system information.

SPECIFICATIONS

Unit: mm (in)

ITEM Minimum tire tread depth		STANDARD	2.0 (0.08)	
				Cold tire pressure
	Driver and passe	nger	290 kPa (2.90 kgf/cm², 42 psi)	
Axle runout			0.2 (0.01)	
Wheel rim runout	Radial		_	2.0 (0.08)
	Axial			2.0 (0.08)
Wheel balance weight		_	60 g (2.1 oz) max.	
Drive chain	Size/link	DID	DID525VM2-112LE	_
		RK	RKGB525ROZ1-112LE	
	Slack		25 - 35 (1 - 1-3/8)	

1

TORQUE VALUES

Rear brake disc bolt Final driven sprocket nut

Rear shock absorber mounting nut Drive chain slider flange bolt Swingarm pivot nut

42 N·m (4.3 kgf·m, 31 lbf·ft) 108 N·m (11.0 kgf·m, 80 lbf·ft)

93 N·m (9.5 kgf·m, 69 lbf·ft) 42 N·m (4.3 kgf·m, 31 lbf·ft) 9 N·m (0.9 kgf·m, 6.5 lbf·ft) 93 N·m (9.5 kgf·m, 69 lbf·ft)

ALOC bolt: replace with a new one U-nut U-nut

U-nut

ALOC bolt: replace with a new one U-nut

TOOLS

Rear axle nut

Bearing remover shaft Bearing remover head, 20 mm Driver Attachment, 32 X 35 mm Attachment, 42 X 47 mm Attachment, 52 X 55 mm Attachment, 37 X 40 mm Attachment, 22 X 24 mm

Pilot, 17 mm Pilot, 20 mm Pilot, 28 mm Attachment, 28 X 30 mm Bearing remover handle Bearing remover head Remover weight Outer driver, 37 mm

07GGD-0010100 07746-0050600 07749-0010000 07746-0010100 07746-0010300 07746-0010400 07746-0010200 07746-0010800 07746-0040400 07746-0040500 07746-0041100 07946-1870100 07936-3710100

> 07936-3710600 07741-0010201 07ZMD-MBW0200

TROUBLESHOOTING

Soft suspension

- · Weak shock absorber spring · Incorrect suspension adjustment
- · Oil leakage from damper unit
- · Insufficient tire pressure

Hard suspension

- · Incorrect suspension adjustment
- · Damaged rear suspension pivot bearings
- · Bent damper rod
- · Incorrect swingarm pivot fasteners tightening · Tire pressure too high

Rear wheel wobbling

- · Bent rim · Worn or damaged rear wheel bearings
- · Faulty rear tire · Unbalanced rear tire and wheel
- · Insufficient rear tire pressure
- · Faulty swingarm pivot bearings
- Rear wheel turns hard
- · Faulty rear wheel bearings
- · Bent rear axle · Rear brake drag
- · Drive chain too tight

Rear suspension noise


- · Faulty rear shock absorber
- · Loose rear suspension fasteners
- · Worn rear suspension pivot bearings

REAR WHEEL

REMOVAL

Support the motorcycle using a safety stand or a hoist, raise the rear wheel off the ground.

Remove the axle nut and washer.

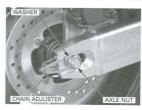

Remove the rear axle.

Derail the drive chain from the driven sprocket, then remove the rear wheel.



Remove the right side collar and dust seal from the wheel right side.



Remove the left side collar and dust seal from the wheel left side.




INSPECTION

Axle

Place the axle in V-blocks and measure the runout. Actual runout is 1/2 the total indicator reading.

SERVICE LIMIT: 0.2 mm (0.01 in)

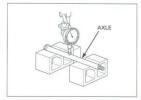

Replace the wheel bearings in


Wheel bearing

Turn the inner race of each bearing with your finger.

Bearings should turn smoothly and quietly.

Also check that the bearing outer race fits tightly in the hub.

Remove and discard the bearings if the races do not turn smoothly and quietly, or if they fit loosely in the hub.

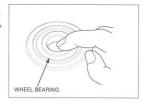


Wheel rim runout

Check the rim runout by placing the wheel in a turning stand.

Spin the wheel slowly and read the runout using a dial indicator.

Actual runout is 1/2 the total indicator reading.

SERVICE LIMITS: Radial: 2.0 mm (0.08 in) Axial: 2.0 mm (0.08 in)

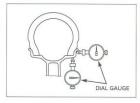


If the final driven sprocket requires replacement, inspect the drive chain and drive sprocket. Never install a

chain and drive sprocket. Never install a new drive chain on a worn sprocket or a worn chain on new sprockets. Both chain and sprocket must be in good condition or the replacement

chain or sprocket will wear rapidly.

Driven sprocket

Check the condition of the final driven sprocket teeth. Replace the sprocket if worn or damaged.

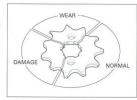

DISASSEMBLY

Remove the bolts and brake disc.



If you will be disassembling the driven flange, loosen the driven sprocket nuts before removing the driven flange from the wheel

hub.

Remove the driven flange assembly from the left wheel hub.




Remove the wheel damper rubbers. Remove the O-ring.



Driven flange bearing removal Loosen the driven sprocket nuts.

Remove the driven flange from the wheel hub, then remove the driven sprocket nuts and sprocket.

Remove the driven flange bearing and collar.

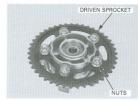

Wheel bearing removal


Install the bearing remover head into the bearing. From the opposite side install the bearing remover shaft and drive the bearing out of the wheel hub. Remove the distance collar and drive out the other bearing.

TOOLS:

Bearing remover head, 20 mm 07746-0050600 Bearing remover shaft 07746-0050100





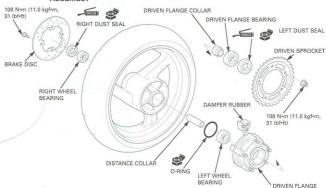

Wheel bearing installation

Drive in a new right bearing.

TOOLS: Driver

Driver Attachment, 42 X 47 mm Pilot, 20 mm 07749-0010000 07746-0010300 07746-0040500



Never install the old bearings, once the bearings have been removed, the bearings must be replaced with new ones.

Never install the Install the distance collar

Drive in the left side bearing using the same tools.


Drive the driven flange bearing out using the special tools.

TOOLS:

Driver Attachment, 28 X 30 mm

Attachment, 28 X 30 mm Pilot, 20 mm

07749-0010000 07746-1870100 07746-0040500

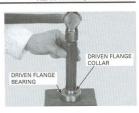


Driven flange bearing installation

Drive the new driven flange bearing into the driven flange using the special tools.

TOOLS:

Driver Attachment, 52 X 55 mm Pilot, 20 mm 07749-0010000 07746-0010400 07746-0040500

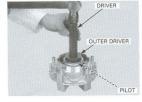

Install the wheel damper rubbers into the wheel hub. Apply oil to the new O-ring and install it into the groove of the wheel hub.



If the driven sprocket was removed, install the driven sprocket and temporarily tighten the nuts.



Install the driven flange assembly into the left wheel hub,

TORQUE: 108 N·m (11.0kgf·m, 80 lbf·ft)



Install the brake disc with its rotating direction mark facing out.

Install and tighten the new bolts to the specified torque.


TORQUE: 42 N·m (4.3 kgf·m, 31 lbf·ft)



WHEEL BALANCE

The wheel balance must be checked when the tire is remounted.

For optimum balance, the tire balance mark (a paint dot on the side wall) must be located next to the valve stem. Remount the tire if necessary.

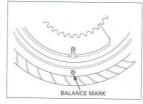

Note the rotating direction marks on the wheel and tire.



Mount the wheel, tire and brake disc assembly on an inspection stand.

Spin the wheel, allow it to stop, and mark the lowest(heaviest) part of the wheel with chalk.

Do this two or three times to verify the heaviest area. If the wheel is balanced, it will not stop consistently in the same position.

To balance the wheel, install balance weights on the lightest side of rim, the side opposite the chalk marks. Add just enough weight so the wheel will no longer stop in the same position when it is spun.

Do not add more than 60 g (2.1 oz) to the rear wheel.



INSTALLATION

Apply grease and install the new dust seal to the right side.



Apply grease and install the dust seal to the left side.




Apply grease to the side collars inside and grooves.

Install the side collars.



Install the rear brake caliper bracket onto the guide of the swingarm.

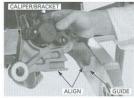

damage the brake pads.

Be careful not to Place the rear wheel into the swingarm. Install the drive chain over the driven sprocket. Install the rear axle from the left side.



Install the washer and axle nut.

Adjust the drive chain slack (page 3-10).

Tighten the axle nut to the specified torque.

TORQUE: 93 N·m (9.5 kgf·m, 69 lbf·ft)



SHOCK ABSORBER


REMOVAL

Remove the seat (page 2-2).

Remove the side cover (page 2-2).

Secure the motorcycle using a hoist or an equivalent.

Loosen the shock absorber reservoir band screw and remove the reservoir from the inner fender.

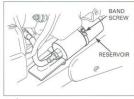

Remove the shock absorber lower mounting bolt/nut.



Remove the shock absorber upper mounting bolt/nut and the shock absorber.



INSPECTION

Check the damper unit, reservoir hose and reservoir for leakage or other damage. Check the upper joint bushing for wear or damage.

Inspect all the other parts for wear or damage.

Replace the shock absorber assembly if necessary.



NEEDLE BEARING REPLACEMENT


Remove the pivot collar and dust seals.



Press out the needle bearing out of the shock absorber lower mount using the special tools.


TOOLS: Driver

Attachment, 22 X 24 mm Pilot, 17 mm 04949-3710001 or 07946-MJ00100 07746-0010800 07746-0040400

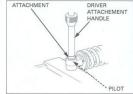

Press the needle bearing into the lower mount with the marked side facing out.

Press a new needle bearing into the lower mount so that the needle bearing surface is lower 7.4 – 8.0 mm (0.29 – 0.32 in) from the end of the lower mount using the same tools.

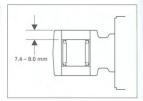

Apply grease to the new dust seal lips, install them into the lower mount.
Install the pivot collar.



SHOCK ABSORBER DISPOSAL PROCEDURE

Remove the damper reservoir cap.

Release the nitrogen from the reservoir by depressing the valve core.

NOTICE

- Point the valve away from you to prevent debris getting in your eyes.
- Before disposal of the shock absorber, release the nitrogen by pressing the valve core. Then remove the valve from the shock absorber reservoir.

INSTALLATION


Install the shock absorber into the frame with the reserve tank outlet facing to the left.


Install the upper and lower mounting bolt/nut. Tighten the upper mounting nut to the specified torque.

TORQUE: 42 N·m (4.3 kgf·m, 31 lbf·ft)


Tighten the lower mounting nut to the specified torque.

TORQUE: 42 N·m (4.3 kgf·m, 31 lbf·ft)

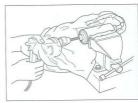


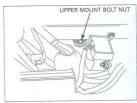



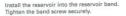

Install the removed parts in the reverse order of removal.

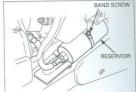


SWINGARM


REMOVAL

Remove the rear wheel (page 14-3).

Remove the socket bolts and drive chain case.

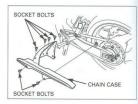


Remove the swingarm pivot cover.

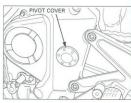

Remove the swingarm pivot nut and washer.

Remove the swingarm pivot bolt and swingarm.

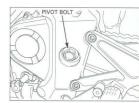


DISASSEMBLY/INSPECTION

Remove the bolts and drive chain adjuster.




Remove the bolts and drive chain slider.

Check the drive chain slider for wear or damage.

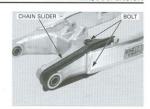

Remove the pivot collar and dust seals from the swingarm left pivot.

Check the dust seals and collars for damage or fatigue.

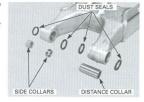


Turn the inner race of right pivot bearings with your finger.

The bearings should turn smoothly and quietly. Also check that the bearing outer race fits tightly in the bub.

Remove and discard the bearings if the races do not turn smoothly and quietly, or if they fit loosely in the pivot.



PIVOT BEARING REPLACEMENT

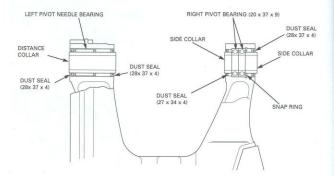

Remove the snap ring.



Remove the right pivot radial ball bearing using the special tools.

TOOLS:


Bearing remover handle 07936–3710100
Bearing remover shaft set, 20mm 07936–3710600
Remover weight 07741–0010201




Press the left pivot needle bearing out using the special tools and a hydraulic press.

TOOLS: Driver

Attachment, 32 X 35 mm Pilot, 28 mm 07949-3710001 07746-0010001 07746-0041100

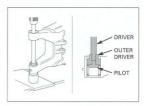

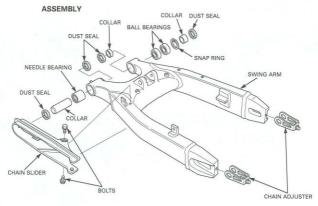


Press the needle bearing into the pivot with the marked side facing out. Pack the new needle bearing with grease.

Press the needle bearing into the swingarm left pivot until it seats using the special tools and a hydraulic press.

TOOLS: Driver

Driver Attachment, 37 mm Pilot, 28 mm 07749-0010000 07ZMD-MBW0200 07746-0041100

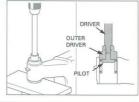


Press the radial ball bearing in using the special tools and a hydraulic press.

TOOLS: Driver

Attachment, 32 X 35 mm

Pilot, 20 mm

07749-0010000 07746-0010100 07746-0040500

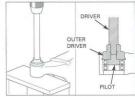

Install the snap ring into the groove securely.




Apply grease to the dust seal lips, then install the dust seals into the left swingarm pivot.

Fill the grease up between the inner dust seal and needle bearing.

Install the pivot distance collar.

Apply grease to the dust seal lips, then install the dust seals and pivot collar into the right swingarm pivot.

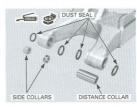


Install the bolts and drive chain adjusters.



Install the drive chain slider, aligning the slit with the boss on the swingarm.

Install the drive chain slider bosses into the hole in the swingarm.

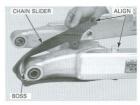

Install and tighten the new drive chain slider mounting bolts to the specified torque

TORQUE: 9 N·m (0.9 kgf·m, 6.5 lbf·ft)



INSTALLATION

Apply a thin coat of grease to the swingarm pivot bolt sliding surface.


Install the swingarm onto the frame.


Install the swingarm pivot bolt to the frame and swingarm pivot.

Install and tighten the swingarm pivot nut to the specified torque.

TORQUE: 93 N·m (9.5 kgf·m, 69 lbf·ft)


Install the pivot bolt collar.

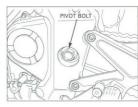

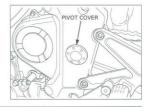



REAR WHEEL/SUSPENSION

Install the socket bolts and drive chain case.
Install the rear wheel (page 14-9).

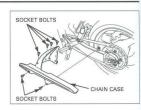

FRONT:

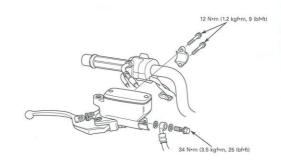


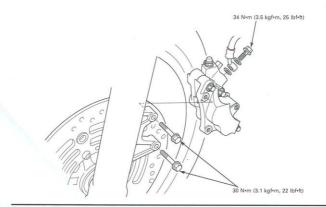

15. HYDRAULIC BRAKE

SERVICE INFORMATION	15-2	FRONT MASTER CYLINDER	15-10
TROUBLESHOOTING	15-3	REAR MASTER CYLINDER	15-15
BRAKE FLUID REPLACEMENT/		FRONT BRAKE CALIPER	15-19
AIR BLEEDING BRAKE PAD/DISC	15-4	REAR BRAKE CALIPER	15-23
	15-7	BRAKE PEDAL	15-26

REAR:

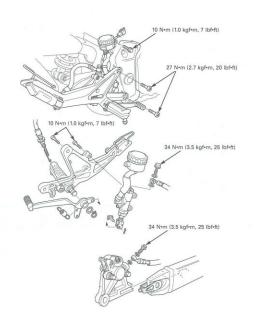

SERVICE INFORMATION

GENERAL

A CAUTION

Frequent inhalation of brake pad dust, regardless of material composition could be hazardous to your health.

Avoid breathing dust particles.

- Never use an air hose or brush to clean brake assemblies. Use an OSHA-approved vacuum cleaner.
- A contaminated brake disc or pad reduces stopping power. Discard contaminated pads and clean a contaminated disc with a high quality brake digressing agent.
- Check the brake system by applying the brake lever or pedal after the air bleeding.
- Spilled brake fluid will severely damage instrument lenses and painted surfaces. It is also harmful to some rubber parts. Be careful whenever you remove the reservoir cap; make sure the front reservoir is horizontal first.
- Never allow contaminates (dirt, water, etc.) to get into an open reservoir.
- · Once the hydraulic system has been opened, or if the brake feels spongy, the system must be bled.
- Always use fresh DOT 4 brake fluid from a sealed container when servicing the system. Do not mix different types of fluid
- as they may not be compatible.

 Always check brake operation before riding the motorcycle.

SPECIFICATIONS

Unit: mm

				Unit: mm (
ITEM			STANDARD	SERVICE LIMIT
Brake disc thickno Brake disc runout Master cylinder I. Master piston O.C Caliper cylinder I.	Specified brake fluid		DOT 4	
	Brake disc thickness		4.3 - 4.7 (0.17 - 0.19)	3.5 (0.14)
	Brake disc runout		_	0.3 (0.012)
	Master cylinder I.D.		14.000 - 14.043 (0.5512 - 0.5529)	14.055 (0.5533)
	Master piston O.D.		13.957 - 13.984 (0.5495 - 0.5506)	13.945 (0.5490)
	Caliper cylinder I.D.	A	30.230 - 30.280 (1.1902 - 1.1921)	30.29 (1.193)
		В	27.000 - 27.050 (1.0630 - 1.0650)	27.06 (1.065)
	Caliper piston O.D.	A	30.148 - 30.198 (1.1869 - 1.1889)	30.14 (1.187)
		В	26.918 - 26.968 (1.0598 - 1.0617)	26.91 (1.059)
Brake Brake Mast Mast Calip	Specified brake fluid		DOT 4	_
	Brake disc thickness		4.8 - 5.2 (0.19 - 0.20)	4.0 (0.16)
	Brake disc runout		_	0.30 (0.012)
	Master cylinder I.D.		12.700 - 12.743 (0.49999 -0.5017)	12.755 (0.5022)
	Master piston O.D.		12.657 - 12.684 (0.4983 - 0.4994)	12.645 (0.4978)
	Caliper cylinder I.D.		38.180 - 38.230 (1.053 - 1.505)	38.24 (1.506)
	Caliper piston O.D.		38.098 - 38.148 (1.4999 - 1.5019)	38.09 (1.500)

TORQUE VALUES

Front master cylinder reservoir cap screw Brake lever pivot bolt

Brake lever pivot nut Front brake light switch screw

Front master cylinder mounting bolt Front brake caliper assembly torx bolt Front brake caliper mounting flange bolt

Rear master cylinder joint nut Rear master cylinder mounting bolt

Rear brake caliper bolt

Rear brake caliper pin bolt Pad pin

Pad pin plug Brake hose oil bolt

Brake caliper bleeder valve

Footpeg bracket mounting bolt Rear master cylinder hose joint screw

TOOL

Snap ring pliers

1 N·m (0.1 kgf·m, 0.7 lbf·ft) 1 Nem (0.1 kafem, 0.7 lbfeft) 6 N·m (0.6 kaf·m, 4.3 lbf·ft) 1 N+m (0.1 kgf+m, 0.7 lbf+ft) 12 N·m (1.2 kgf·m, 9 lbf·ft) 32 N·m (3.3 kgf·m, 24 lbf·ft) 30 N·m (3.1 kgf·m, 22 lbf·ft) 17 N·m (1.7 kgf·m, 12 lbf·ft) 10 N·m (1.0 kgf·m, 7 lbf·ft) 23 N·m (2.3 kgf·m, 17 lbf·ft) 27 N·m (2.8 kgf·m, 20 lbf·ft) 17 N·m (1.7 kgf·m, 12 lbf·ft) 3 N·m (0,3 kgf·m, 2,2 lbf·ft) 34 N·m (3.5 kgf·m, 25 lbf·ft) 6 N·m (0.6 kgf·m, 4.3 lbf·ft) 27 N·m (2.7 kgf·m, 2.0 lbf·ft) 1 N+m (0.1 kgf+m, 0.7 lbf+ft)

Apply a locking agent to the threads ALOC holt

07914-SA50001

TROUBLESHOOTING

Brake lever/pedal soft or spongy · Air in hydraulic system

- · Leaking hydraulic system
- · Contaminated brake pad/disc
- · Worn caliper piston seal
- · Worn master cylinder piston cups
- · Worn brake pad/disc Contaminated caliper
- · Caliper not sliding properly (rear)
- · Low brake fluid level
- · Clogged fluid passage
- · Warped/deformed brake disc
- · Sticking/worn caliper piston
- · Sticking/worn master cylinder piston
- · Contaminated master cylinder · Bent brake lever/pedal

Brake lever/pedal hard

- · Clogged/restricted brake system
- · Sticking/worn caliper piston
- · Caliper not sliding properly (rear)
- Clogged/restricted fluid passage
- · Worn caliper piston seal
- · Sticking/worn master cylinder piston
- · Bent brake lever/pedal

Brake drags

- · Contaminated brake pad/disc
- · Misaligned wheel
- Clogged/restricted brake hose joint
- Warped/deformed brake disc · Caliper not sliding properly (rear)
- Clogged/restricted brake hydraulic system · Sticking/worn caliper piston
- · Clogged master cylinder port

BRAKE FLUID REPLACEMENT/AIR BLEEDING

NOTICE


- Do not allow foreign material to enter the system when filling the reservoir.
- Avoid spilling fluid on painted, plastic, or rubber parts. Place a rag over these parts whenever the system is serviced.


BRAKE FLUID DRAINING

For the front brake, turn the handlebar until the reservoir is parallel to the ground, before removing the reservoir cap.

Remove the screws and reservoir cap.

Remove the diaphragm plate and diaphragm.

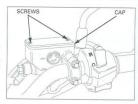


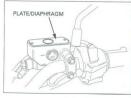

Remove the reservoir cap.



Remove the diaphragm plate and diaphragm.

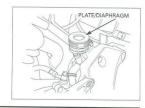

Connect a bleed hose to the caliper bleed valve.



Loosen the bleed valve and pump the brake lever or pedal.

Stop pumping the lever or pedal when no more fluid flows out of the bleed valve.



BRAKE FLUID FILLING/BLEEDING

Close the bleed valve.

Fill the reservoir with DOT 4 brake fluid from a sealed container.

NOTE:

- Use only DOT 4 brake fluid from a sealed container.
 Do not mix different types of fluid. They are not
 - compatible.

Connect a commercially available brake bleeder to the bleed valve.


Pump the brake bleeder and loosen the bleed valve, adding fluid when the fluid level in the master cylinder reservoir is low.

When using a brake bleeding tool, follow the manfacturer's operating instructions.

Repeat the previous step procedures until air bubbles do not appear in the plastic hose.

Close the bleed valve and operate the brake lever or pedal.

If it still feels spongy, bleed the system again.

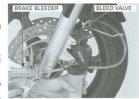

Check the fluid level often while bleeding the brakes to prevent air from being pumped into the system.

If air is entering the bleeder from around the bleed valve threads, seal the threads with teflon tape. Do not release the brake lever or If a brake bleeder is not available, use the following procedure. Pump up the system pressure with the lever or pedal

until lever or pedal resistance is felt.

Connect a bleed hose to the bleed valve and bleed the system as follows:

 Squeeze the brake lever or depress the brake pedal, open the bleed valve 1/2 turn and then close it.

pedal until the 2. Release the brake lever or pedal until the bleed bleed valve has been closed. been closed.


Repeat steps 1 and 2 until bubbles cease to appear in the fluid coming out of the bleed valve.

Tighten the bleed valve.


TORQUE: 6 N·m (0.6 kgf·m, 4.3 lbf·ft)

Fill the fluid reservoir to the upper level.



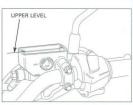


Reinstall the diaphragm and diaphragm plate.

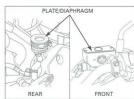

On the front brake, install the reservoir cap, and tighten the screws to the specified torque.

TORQUE: 2 N·m (0.2 kgf·m, 1.4 lbf·ft)

On the rear brake, install the reservoir cap securely,

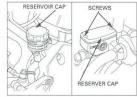

BRAKE PAD/DISC

Always replace the brake pads in paris to assure even disc pressure.

FRONT BRAKE PAD REPLACEMENT

Remove the pad pin plug.



fluid level in the brake master cylinder reservoir as this operation causes the level to rise.

Check the brake Loosen the pad pins. Remove the bolts and brake caliper. Push the caliper pistons all the way in to allow installation of new brake pads. Remove the pad pin and pad spring.



Remove the brake pads.



Install the new brake pads. Install the pad spring with its arrow mark facing up as shown.



HYDRAULIC BRAKE

Push the pad spring, then install the pad pin.

Tighten the pad pin.

TORQUE: 17 N·m (1.7 kgf·m, 12 lbf·ft)



Install and tighten the pad pin plug.

TORQUE: 3 N·m (0.3 kgf·m, 2.2 lbf·ft)



Always replace the brake pads in paris to assure even disc pressure. Check the brake

fluid level in the brake master cylinder reservoir as this operation causes the level to rise.

REAR BRAKE PAD REPLACEMENT

Push the caliper pistons all the way in by pushing the caliper body inward to allow installation of new brake pads.



Remove the pad pin plug.



Remove the pad pin. Remove the caliper bracket bolt.



Pivot the caliper up. Remove the pad pin and brake pads.

Install the new brake pads.



Make sure the brake pad spring is in place.

Lower the caliper while pushing the pads against the pad spring so that the pad ends are positioned onto the retainer on the caliper bracket.

Install the pad pin.



Install and tighten the caliper bracket bolt.

TORQUE: 23 N-m (2.3 kgf-m, 17 lbf-ft)

Tighten the pad pin.

TORQUE: 17 N·m (1.7 kgf·m, 12 lbf·ft)



Install and tighten the pad pin plug.

TORQUE: 3 N·m (0.3 kgf·m, 2.2 lbf·ft)



BRAKE DISC INSPECTION

Visually inspect the brake disc for damage or cracks.

Measure the brake disc thickness with a micrometer.

SERVICE LIMITS:

FRONT: 3.5 mm (0.14 in) REAR: 4.0 mm (0.16 in) less than the service limit.




Measure the brake disc warpage with a dial indicator.

SERVICE LIMITS:

FRONT: 0.30 mm (0.012 in) REAR: 0.30 mm (0.012 in)

Check the wheel bearings for excessive play. If the warpage exceeds the service limit, replace the brake disc if the wheel bearings are normal.

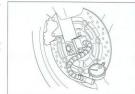

FRONT MASTER CYLINDER

REMOVAL


Avoid spilling fluid on painted, plastic, or rubber parts. Place a rag over these parts whenever the system is serviced

Drain the front hydraulic system (page 15-4).

Disconnect the brake light switch wire connectors. Remove the brake hose oil bolt, sealing washers and brake hose eyelet.




Remove the bolts from the master cylinder holder and remove the master cylinder assembly.

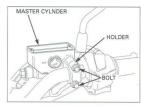

DISASSEMBLY

Remove the pivot bolt/nut and brake lever assembly.

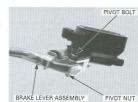

Remove the screw and brake light switch.



Remove the boot.



Remove the snap ring from the master cylinder body using the special tool as shown.

TOOL:

Snap ring pliers

07914-SA50001



Remove the master piston and spring.

Clean the inside of the cylinder and reservoir with brake fluid.



INSPECTION

Check the piston boot, primary cup and secondary cup for fatigue or damage.

Check the master cylinder and piston for abnormal scratches.

Measure the master cylinder I.D.


SERVICE LIMIT: 14.055 mm (0.5533 in)



Measure the master cylinder piston O.D.

SERVICE LIMIT: 13.945 mm (0.5490 in)



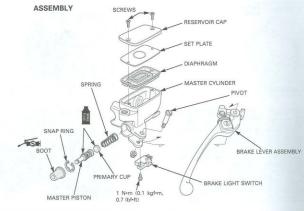

Keep the piston, cups, spring, snap ring and boot as a set; do not substitute individual

tute individual parts.

When installing the cups, do not allow the lips to turn inside out. Coat all parts with clean brake fluid before assembly.

Dip the piston in brake fluid. Install the spring into the piston. Install the piston assembly into the master cylinder.



Be certain the snap ring is firmly seated in the

Be certain the Install the snap ring.

TOOL:

Snap ring pliers

07914-SA50001




Apply silicon grease to the boot inside. Install the boot.



Install the brake light switch and tighten the screw to the specified torque.

TORQUE: 1 N·m (0.1 kgf·m, 0.7 lbf-ft)

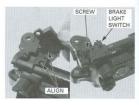

Apply silicone grease to the contact surfaces of the brake lever and piston tip.


Install the brake lever assembly, tighten the pivot bolt to the specified torque.

TORQUE: 1 N·m (0.1 kgf·m, 0.7 lbf·ft)



Hold the pivot bolt and tighten the pivot nut to the specified torque.

TORQUE: 6 N·m (0.6 kgf·m, 4.3 lbf-ft)

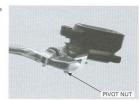


Place the master cylinder assembly on the handlebar.

Align the end of the master cylinder with the punch
mark on the handlebar.

Install the master cylinder holder with the "UP" mark facing up.

Tighten the upper bolt first, then the lower bolt to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

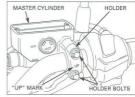

Install the brake hose eyelet with the oil bolt and new sealing washers.

Push the eyelet joint against the stopper, then tighten the oil bolt to the specified torque.

TORQUE: 34 N·m (3.5 kgf·m, 25 lbf·ft)

Connect the brake light switch wire connectors.

Fill the reservoir to the upper level and bleed the brake system (page 15-4).




REAR MASTER CYLINDER

REMOVAL

Drain the rear hydraulic system (page 15-4).


Disconnect the brake light switch 2P connector. Remove the rear master cylinder reservoir mounting bolt/nut.

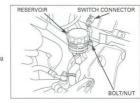

Avoid spilling fluid on painted, plastic, or rubber parts. Place a rag over these parts whenever the system is serviced.


Remove the brake hose oil bolt, sealing washers and brake hose.

Loosen the rear master cylinder mounting bolts. Remove the socket bolts and footpeg bracket assembly.

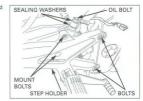

Remove and discard the brake pedal joint cotter pin. Remove the joint pin.


Remove the master cylinder mounting bolts, step guard and master cylinder.

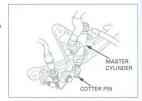

DISASSEMBLY

Disconnect the reservoir hose from the reservoir hose joint.

Remove the screw and reservoir hose joint from the master cylinder.

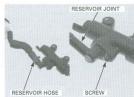


Remove the boot.

Remove the snap ring from the master cylinder body using the special tool as shown.

TOOL:


Snap ring pliers

07914-SA50001

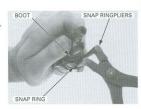

Remove the push rod, master piston, primary cup and spring.

Clean the inside of the cylinder with brake fluid.

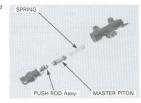

INSPECTION

Check the piston boot, primary cup and secondary cup for fatigue or damage.

Check the master cylinder and piston for abnormal scratches.


Measure the master cylinder I.D.

SERVICE LIMIT: 12.755 mm (0.5022 in)

Measure the master cylinder piston O.D.

SERVICE LIMIT: 12.645 mm (0.4978 in)



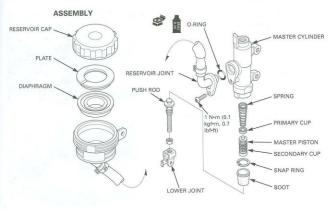

Keep the piston, cups, spring, snap ring and boot as a set; do not substitute individual parts.

When installing the cups, do not allow the lips to turn inside out. Coat all parts with clean brake fluid before assembly.

Dip the piston in brake fluid. Install the spring to the primary cup. Install the spring/primary cup and master piston

assembly.

Apply silicone grease to the piston contact area of the push rod.




HYDRAULIC BRAKE

Be certain the snap ring is firmly seated in the groove. Install the push rod into the master cylinder. Install the snap ring.

TOOL: Snap ring pliers

07914-SA50001

Apply silicone grease to the boot inside. Install the boot.

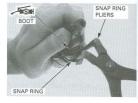


Apply brake fluid to a new O-ring and install it onto the reservoir joint.

Install the reservoir joint into the master cylinder.



Install and tighten the screw securely.


Connect the reservoir hose to the reservoir joint.

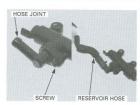

If the push rod is disassembled, adjust the push rod length as shown.

After adjustment, tighten the lock nut to the specified torque.


TORQUE: 17 N·m (1.7 kgf·m, 12 lbf·ft)

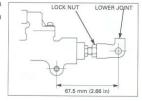

INSTALLATION

Place the master cylinder onto the main footpeg bracket, install the master cylinder mounting bolts.

Connect the brake pedal to the push rod lower joint. Install the joint pin and secure it with a new cotter pin.

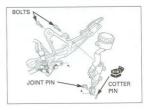

Install the driver footpeg bracket onto the frame, tighten the socket bolts to the specified torque.

TORQUE: 27 N·m (2.8 kgf·m, 20 lbf·ft)

Tighten the master cylinder mounting bolts to the specified torque.

TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)

Install the brake hose with the oil bolt and new sealing washers.

Push the eyelet joint against the stopper, then tighten the oil bolt to the specified torque.


TORQUE: 34 N-m (3.5 kgf-m, 25 lbf-ft)


Install and tighten the brake reservoir mounting bolt/nut to the specified torque.

TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)

Connect the brake light switch 2P (Black) connector.

Fill the reservoir to the upper level and bleed the brake system (page 15-4).

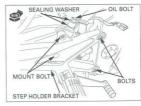

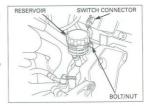

FRONT BRAKE CALIPER

REMOVAL

Drain the front brake hydraulic system (page 15-4).

Avoid spilling fluid on painted, plastic, or rubber

parts. Place a rag over these parts whenever the system is

serviced.

Remove the oil bolt, sealing washers and brake hose evelet joint.

Remove the caliper mounting bolts and caliper. Remove the brake pads (page 15-7).



DISASSEMBLY

Do not use high pressure air or bring the nozzle too close to the inlet.

Install corrugated cardboard or soft wood sheet between the pistons.

Apply small squirts of air pressure to the fluid inlet to remove the pistons.




Remove the four caliper assembly bolts and separate the caliper halves.



to ensure correct reassembly.

Mark the pistons Remove the following: - Joint seals



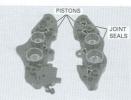

damage the piston sliding surface.

Be careful not to Push the dust seals and piston seals in and lift them out.

Clean the seal grooves with clean brake fluid.




INSPECTION

Check the caliper cylinder for scoring or other damage.

Measure the caliper cylinder I.D.

SERVICE LIMITS:

A: 30.29 mm (1.192 in) B: 27.060 mm (1.065 in)

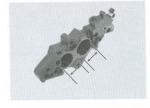

Check the caliper pistons for scratches, scoring or other damage.


Measure the caliper piston O.D.

SERVICE LIMITS:

A: 30.14 mm (1.187 in)

B: 26.91 mm (1.059 in)




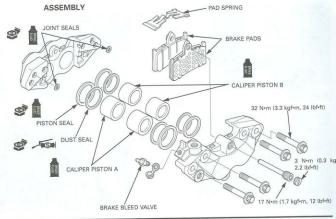


Coat the new piston seals with clean brake fluid. Coat the new dust seals with silicone grease.

Install the piston and dust seal into the groove of the caliper body.

Coat the caliper pistons with clean brake fluid and install them into the caliper cylinder with their opening ends toward the pad.

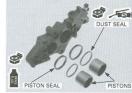

Install the new joint seals into the fluid passages on the caliper.

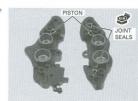

Assemble the caliper halves.

Apply a locking agent to the caliper assembly bolt threads.

Install and tighten the caliper assembly bolts to the specified torque.

TORQUE: 32 N·m (3.3 kgf·m, 24 lbf·ft)



INSTALLATION

Install the brake pads (page 15-6).

Install the brake caliper onto the fork leg.
Install and tighten the new caliper mounting bolts to the specified torque.

TORQUE: 30 N·m (3.1 kgf·m, 22 lbf·ft)

Install the brake hose eyelet to the caliper body with two new sealing washers and the oil bolt.



Push the brake hose eyelet to the stopper on the caliper, then tighten the oil bolt to the specified torque.

TORQUE: 34 N·m (3.5 kgf·m, 25 lbf·ft)

Fill and bleed the front brake hydraulic system (page 15-4).



REAR BRAKE CALIPER

REMOVAL

Drain the rear brake hydraulic system (page 15-5).

Avoid spilling fluid on painted, plastic, or rubber parts. Place a rag over these parts whenever the system is serviced.

Loosen the caliper bracket bolt.

Remove the rear wheel (page 14-3).

parts. Place a rag over these parts eyelet joint.




DISASSEMBLY

Remove the caliper bracket bolt and the brake pads (page 15-8).

Remove the pad spring, collar and boot from the caliper body.

Remove the caliper body from the caliper bracket. Remove the retainer from the caliper bracket.

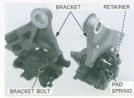

Do not use high pressure air or bring the nozzle too close to the inlet. Place a shop towel over the piston.

Position the caliper body with the piston down and apply small squirts of air pressure to the fluid inlet to remove the piston.



HYDRAULIC BRAKE

damage the piston sliding surface.

Be careful not to Push the dust seal and piston seal in and lift them out. Clean the seal grooves with clean brake fluid.



INSPECTION

Check the caliper cylinder for scoring or other damage.

Measure the caliper cylinder I.D.

SERVICE LIMIT: 38.24 mm (1.506 in)




Check the caliper pistons for scratches, scoring or other damage.

Measure the caliper piston O.D.

SERVICE LIMIT: 38.09 mm (1.500 in)



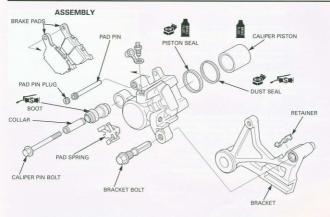

Coat the new piston seal with clean brake fluid. Coat the new dust seal with silicone grease.

Install the piston seal and dust seal into the groove of the caliper body.

Coat the caliper piston with clean brake fluid and install it into the caliper cylinder with its opening end toward the pad.

If the caliper and bracket pin boots are hard or deteriorated, replace them with new ones. Apply silicone grease to the inside of the bracket pin

boot.


Install the bracket pin boot and collar into the caliper.


Install the pad retainer into the bracket.

Apply silicone grease to the caliper pin and install the caliper body to the bracket.

Install the pad spring into the caliper bracket.

Install the caliper bracket bolt and brake pads (page 15-8).

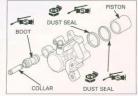

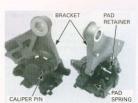

INSTALLATION

Install the wheel (page 14-9).

Install the brake caliper/bracket assembly onto the guide of the swingarm (page 14-10).

Install and tighten the caliper bracket bolt to the specified torque.

TORQUE: 23 N·m (2.3 kgf·m, 17 lbf·ft)



Install the brake hose eyelet to the caliper body with two new sealing washers and oil bolt.

Push the brake hose eyelet to the stopper on the caliper, then tighten the oil bolt to the specified torque.

TORQUE: 34 N-m (3.5 kgf-m, 25 lbf-ft)

Fill and bleed the rear brake hydraulic system (page 15-4).

BRAKE PEDAL

REMOVAL


Remove the footpeg bracket mounting bolts and bracket assembly from the frame.




Remove and discard the brake pedal joint cotter pin. Remove the joint pin.

Unhook the return spring and remove the brake light switch from the step holder. Unhook the brake pedal return spring.

Remove the snap ring and thrust washer, Remove the brake pedal from the pivot.

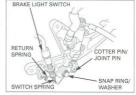


INSTALLATION

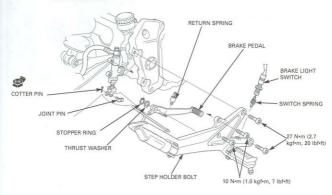

Apply grease to the sliding surface of the brake pedal and footpeg.

Install the brake pedal and thrust washer to the pedal pivot.


Secure the pedal pivot with a snap ring.

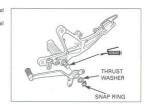

Hook the brake pedal return spring. Install the brake light switch and hook the switch spring.

Connect the brake pedal to the push rod lower joint. Install the joint pin and secure it with a new cotter pin.

Install the right driver footpeg bracket assembly onto the frame.

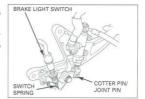


HYDRAULIC BRAKE


Install and tighten the right footpeg bracket socket bolts to the specified torque.

TORQUE: 27 N·m (2.8 kgf·m, 20 lbf·ft)



SYSTEM DIAGRAM

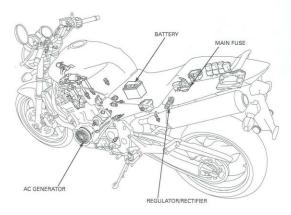

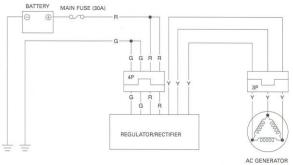

16. BATTERY/CHARGING SYSTEM

SYSTEM DIAGRAM	16-0	CHARGING SYSTEM INSPECTION	16-8
SERVICE INFORMATION	16-1	ALTERNATOR CHARGING COIL	16-9
TROUBLESHOOTING	16-3	REGULATOR/RECTIFIER	16-9
BATTERY	16-5		

SERVICE INFORMATION

GENERAL

- · The battery gives off explosive gases; keep sparks, flames and cigarettes away. Provide adequate ventilation when charging.
- The battery contains sulfuric acid (electrolyte). Contact with skin or eyes may cause severe burns. Wear protective clothing and a face shield.
 - If electrolyte gets on your skin, flush with water.
- If electrolyte gets in your eyes, flush with water for at least 15 minutes and call a physician immediately. · Electrolyte is poisonous.
- If swallowed, drink large quantities of water or milk and call your local Poison Control Center or a call a physician immediately.
- · Always turn off the ignition switch before disconnecting any electrical component.
- · Some electrical components may be damaged if terminals or connectors are connected or disconnected while the ignition switch is ON and current is present. . For extended storage, remove the battery, give it a full charge, and store it in a cool, dry space. For maximum service life,
- charge the stored battery every two weeks.
- · For a battery remaining in a stored motorcycle, disconnect the negative battery cable from the battery terminal.
- The maintenance free battery must be replaced when it reaches the end of its service life.
- The battery can be damaged if overcharged or undercharged, or if left to discharge for a long period. These same conditions contribute to shortening the "life span" of the battery. Even under normal use, the performance of the battery deteriorates after 2-3 years.
- Battery voltage may recover after battery charging, but under heavy load, battery voltage will drop quickly and eventually die out. For this reason, the charging system is often suspected as the problem. Battery overcharge often results from problems in the battery itself, which may appear to be an overcharging symptom. If one of the battery cells is shorted and battery voltage does not increase, the regulator/rectifier supplies excess voltage to the battery. Under these conditions, the electrolyte level goes down quickly.
- · Before troubleshooting the charging system, check for proper use and maintenance of the battery. Check if the battery is frequently under heavy load, such as having the headlight and taillight ON for long periods of time without riding the motorcycle.
- · The battery will self-discharge when the motorcycle is not in use. For this reason, charge the battery every two weeks to prevent sulfation from occurring.
- . When checking the charging system, always follow the steps in the troubleshooting flow chart (page 16-3).
- . For battery charging, do not exceed the charging current and time specified on the battery. Use of excessive current or charging time may damage the battery.

BATTERY TESTING

Refer to the instruction of the Operation Manual for the recommended battery tester. The recommended battery tester puts a "load" on the battery so that the actual battery condition of the load can be measured.

Recommended battery tester BM-210-AH or BM-210

BATTERY/CHARGING SYSTEM

SPECIFICATIONS

	ITEM		SPECIFICATIONS	
Battery	Capacity		12V - 8.6 Ah	
Current leakage			1.2 mA max.	
Voltage (20°C/68°F)	Fully charged	13.0 - 13.2 V		
	Needs charging	Below 12.3 V		
	Charging current	Normal	1.2 A/5 - 10 h	
		Quick	5.0 A/0.5 h	
Alternator Capacity Charging coil resistan			0.38 kW/5,000 min ⁻¹ (rpm)	
		nce (20°C/68°F)	0.1 – 1.0 Ω	

TOOLS

Digital multimeter Commercially available or available through American Honda Tool and Equipment Program

Battery tester BM-210-AH available through American Honda Tool and Equipment Program


Christy battery charger MC1012/2 available thr

available through American Honda Tool


and Equipment Program

TROUBLESHOOTING

BATTERY IS DAMAGED OR WEAK

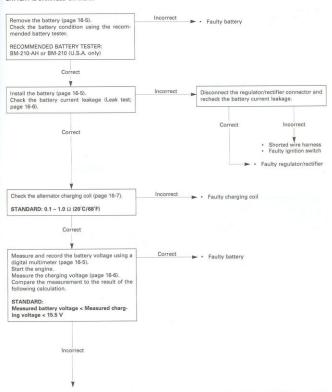

BATTERY/CHARGING SYSTEM

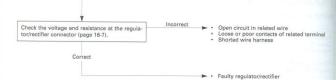

BATTERY

REMOVAL/INSTALLATION

Always turn the ignition switch OFF before removing the battery. Remove the side cover (page 2-2).

Disconnect the battery band and pull out the battery from the battery case.

Disconnect the negative cable and then the positive cable, and remove the battery.

Connect the positive terminal first and then the negative cable.

Install the battery in the reverse order of removal.

After installing the battery, coat the terminals with clean grease.

Install the side cover (page 2-2).



Measure the battery voltage using a digital multimeter.


VOLTAGE:

Fully charged: 13.0 - 13.2V Under charged: Below 12.3V

TOOL: Digital multimeter

Commercially available or available through American Honda Tool and Equipment Program



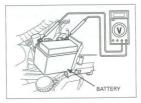

BATTERY TESTING

Remove the battery (page 17-4).

For accurate test results, be sure the tester's cables and clamps are in good working condition and that a secure connection can be made


at the battery.

Securely connect the tester's positive (+) cable first, then connect the negative (-) cable.


TOOL: Battery t

Battery tester

BM-210-AH or BM-210(U.S.A. only)

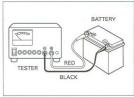

Set the temperature switch to "HIGH" or "LOW" depending on the ambient temperature.

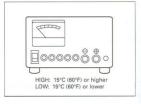



For the first check, DO NOT charge the battery before testing test it in an "as is" condition. Push in the appropriate test button for 3 seconds and read the condition of the battery on the meter.

NOTICE

- To avoid damaging the tester, only test batteries with an amperage rating of less than 30 Ah.
- Tester damage can result from overheating when:
 The test button is pushed in for more than 3 seconds.
 - The tester is used without being allowed to cool for at least 1 minute when testing more than one battery.
 - More than ten consecutive tests are performed without allowing at least a 30-minute cool-down period.

The result of a test on the meter scale is relative to the amp. hour rating of the battery. Any battery reading in the green zone is OK. Batteries should only be charged if they register in the YELLOW or RED zone.

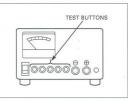

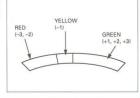

BATTERY CHARGING

Remove the battery (page 17-4).


NOTICE

- Make sure the area around the charger is well ventilated, clear of flammable materials, and free from heat, humidity, water and dust.
- Clean the battery terminals and position the battery as far away from the charger as the leads will permit.
- Do not place batteries below the charger gases from the battery may corrode and damage the charger.
- Do not place batteries on top of the charger. Be sure the air vents are not blocked.

Turn the power ON/OFF at the charger, not at the battery terminals. Turn the "POWER" switch to "OFF".
 Set the "BATTERY AMP. HR. SELECTOR SWITCH" for the size of the battery being charged.

TOOL: Christie battery charger


MC1012/2 (U.S.A. only)

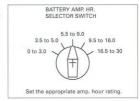

- 3. Set the "TIMER" to the position indicated by the Honda Battery Tester; RED-3, RED-2 or YELLOW 1. If you are charging a new battery, set the switch to the NEW BATT position.
- Attach the clamps to the battery terminals: red to positive, black to negative.

Connecting the cables with the POWER switch turned to "ON" can produce a spark which could ignite or explode the battery.

Connect the battery cables only when the "POWER" switch is turned to "OFF".

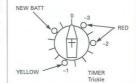

The charger will automatically switch to the "Trickle" mode after the set charging time has elapsed.

5. Turn the "POWER" switch to "ON".

 When the timer reaches the "Trickle" position, the charging cycle is complete. Turn the "POWER" switch to "OFF" and disconnect the clamps.

- Let the battery cool for at least 10 minutes or until gassing subsides after charging.
- Retest the battery using the Honda battery tester and recharge if necessary using the above steps.

CHARGING SYSTEM INSPECTION

CURRENT LEAKAGE INSPECTION

Do not disconnect Remove the battery (page 15-5). out first switching off the ignition

switch. Failure to follow this precaution can damage the

components.

the battery or any Turn the ignition switch off and disconnect the negacable in the charg- tive battery cable from the battery.

ing system with- Connect the ammeter (+) probe to the ground cable and the ammeter (-) probe to the battery (-) terminal. With the ignition switch off, check for current leakage.

NOTICE

tester or electrical . When measuring current using a tester, set it to a high range, and then bring the range down to an appropriate level. Current flow higher than the range selected may blow out the fuse in the tester.

· While measuring current, do not turn the ignition on. A sudden surge of current may blow out the fuse in the tester.

SPECIFIED CURRENT LEAKAGE: 1.2 mA max.

If current leakage exceeds the specified value, a shorted circuit is likely.

Locate the short by disconnecting connections one by one and measuring the current.

CHARGING VOLTAGE INSPECTION

Be sure the battery is in good condition before performing this test.

Warm up the engine to normal operating temperature.


Stop the engine, and connect the multimeter as shown.


To prevent a short, make absolutely certain which are the positive and negative terminals or cable.

Restart the engine.


With the headlight on Hi beam, measure the voltage on the multimeter when the engine runs at 5,000 rpm.

Standard: Measured battery voltage (page 16-5) < Measured charging voltage (see above) < 15.5 V at 5,000 rpm

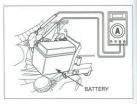

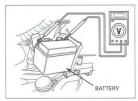

It is not necessary to remove the stator coil to make this test.

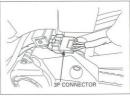

ALTERNATOR CHARGING COIL


INSPECTION

Remove the left side cowl (page 2-4).

Disconnect the alternator 3P connector.

Check the resistance between all three Yellow terminals.

STANDARD: 0.1 - 1.0 Ω (at 20°C/68°F)

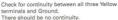

If readings are far beyond the standard, or if any wire has continuity to ground, replace the alternator stator. Refer to section 10 for stator removal.





SYSTEM INSPECTION

Remove the rear cowl (page 2-3).

Item	Terminal	Specification
Battery charging line	Red/White (+) and ground (-)	Battery voltage should register
Charging coil line	Yellow and Yellow	0.1 – 1.0 Ω (at 20°C/68°F)
Ground line	Green and ground	Continuity should exist


Disconnect the regulator/rectifier 3P, 4P connectors, and check it for loose contact or corroded terminals.

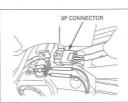

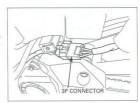




If the regulated voltage reading (see page 16-6) is out of the specification, measure the voltage between connector terminals (wire harness side) as follows: If all components of the charging system are normal and there are no loose connections at the regulator/rectifier connectors, replace the regulator/rectifier unit.

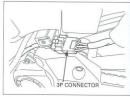

REMOVAL/INSTALLATION

Disconnect the alternator 3P (White) connector.

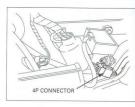


Disconnect the alternator 4P (White) connector. Remove the two nuts and regulator/rectifier.


Installation is in the reverse order of removal.



MEMO

SYSTEM DIAGRAM

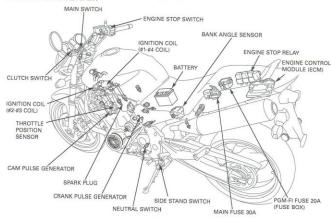

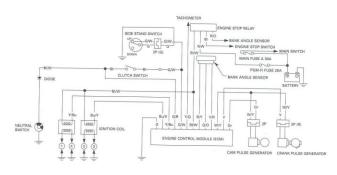

17. IGNITION SYSTEM

SYSTEM DIAGRAM	17-0	ICGNITION COIL	17-7
SERVICE INFORMATION	17-1	IGNITION PULSE GENERATOR	17-7
TROUBLESHOOTING	17-3	IGNITION TIMING	17-10
IGNITION SYSTEM INSPECTION	17-4	ECM (ENGINE CONTROL MODULE)	17-11

SERVICE INFORMATION

GENERAL

- Some electrical components may be damaged if terminals or connectors are connected or disconnected while the ignition switch is ON and current is present.
- · When servicing the ignition system, always follow the steps in the troubleshooting sequence on page 17-3.
- . This motorcycle's Ignition Control Module (ICM) is built into the Engine Control Module (ECM).
- The ignition timing does not normally need to be adjusted since the ECM is factory preset.
- The ECM may be damaged if dropped. Also if the connector is disconnected when current is flowing, the excessive voltage may damage the module. Always turn off the ignition switch before servicing.
- A faulty ignition system is often related to poor connections. Check those connections before proceeding. Make sure the battery is adequately charged. Using the starter motor with a weak battery results in a slower engine cranking speed as well as no soark at the spark oluc.
- . Use spark plug of the correct heat range. Using spark plug with an incorrect heat range can damage the engine.
- Refer to section 5 for Throttle Position (TP) sensor, cam pulse generator and ECM inspection.

SPECIFICATIONS

ITE	M	SPECIFICATIONS	
Spark plug (Iridium)	NGK	CR8EH-9 (Standard) / CR9EH-9 (For extended high speed running	
	DENSO	U24FER9 (Standard) / U27FER9 (For extended high speed running	
Spark plug gap		0.80 - 0.90 mm (0.031 - 0.035 in)	
Ignition coil peak voltage		100 V minimum	
Ignition pulse generator peak voltage		0.7 V minimum	
Ignition timing ("F" mark)		8' BTDC at idle	

1

TORQUE VALUES

Timing hole cap Spark plug Ignition pulse generator cover Ignition pulse generator rotor special bolt 18 N·m (1.8 kgf·m, 13 lbf·ft) 12 N·m (1.2 kgf·m, 9 lbf·ft) 10 N·m (1.0 kgf·m, 7 lbf·ft) 59 N·m (6.0 kgf·m, 43 lbf·ft)

Apply grease to the threads

Apply sealant to the threads

TOOLS

Peak voltage tester (U.S.A. only) Peak voltage adaptor

07HGJ-0020100 (not available in U.S.A.) with commercially available digital multimeter (impedance 10 M Ω /DCV minimum)

TROUBLESHOOTING

- · Inspect the following before diagnosing the system.
- Faulty spark plug
- Loose spark plug cap or spark plug wire connection
- Water in the direct ignition coil (leaking ignition coil secondary voltage)
- If there is no spark at either cylinder, temporarily exchange the ignition coil with a known-good one and perform the spark test.
 - If there is spark, the exchanged ignition coil is faulty.

Harris I am distan

 "Initial voltage" of the ignition primary coil is the battery voltage with the ignition switch ON and engine stop switch at RUN (The engine is not cranked by the starter motor).

Unusual condition		Probable cause (Check in numerical order)	
Ignition coil primary voltage	No initial voltage with ignition and engine stop switches ON. (Other electri- cal components are normal)	Faulty engine stop switch. An open circuit in Black/white wire between the ignition coil and engine stop switch. Loose or poor connect of the ignition coil primary wire terminal, or an open circuit in primary coil (Check at the ECM connector).	
	Initial voltage is normal, but it drops down to 2 – 4 V while cranking the engine.	Incorrect peak voltage adaptor connections. Undercharged battery. No voltage between the Black/white (+) and Body ground (-) at the ECM multi-connector or loose ECM connection. An open circuit or loose connection in Blue/black and Yellow/blue wires between the ignition coils and ECM. Short circuit in ignition primary coil. Faulty side stand swirton in or neutral switch. Court wires. Side stand swirton in: Green/white wire volumers of the court wires. Side stand swirton line: Light green wire Neutral switch line: Light green wire Paulty signition pulse generator (measure the peak voltage). Faulty signition pulse generator (measure the peak voltage). Faulty signition pulse generator (measure the peak voltage). Faulty signition pulse generator (measure the peak voltage).	
	Initial voltage is normal, but no peak voltage while cranking the engine.	Faulty peak voltage adaptor connections. Faulty peak voltage adaptor. Faulty ECM (in case when above No.1, 2 are normal).	
	Initial voltage is normal, but peak voltage is lower than standard value.	The multimeter impedance is too low; below 10 Ma/DCV. Cranking speed is too low (battery under-charged). The sampling timing of the tester and measured pulse were not synchronised (system is normal if measured voltage is over the standard voltage at least once). Faulty ECM (in case when above No. 1 – 3 are normal).	
	Initial and peak voltage are normal, but does not spark.	Faulty spark plug or leaking ignition coil secondary current ampere. Faulty ignition coil (s).	
Ignition pulse generator	Peak voltage is lower than standard value.	 The multimeter impedance is too low; below 10 MQ/DCV. Cranking speed is too low (battery under charged). The sampling timing of the tester and measured pulse were not synchronised (system is normal if measured voltage is over the standard voltage at least once). Faulty ECM (when above No. 1 – 3 are normal). 	
	No peak voltage.	Faulty peak voltage adaptor. Faulty ignition pulse generator.	

IGNITION SYSTEM INSPECTION


- If there is no spark at any plug, check all connections for loose or poor contact before measuring each peak voltage.
- Use a recommended digital multimeter or commercially available digital multimeter with an impedance of 10 MΩ/DCV minimum.
- The display value differs depending upon the internal impedance of the multimeter.
- If the Imrie diagnostic tester (model 625) is used, follow the manufacturer's instruction.

Connect the peak voltage tester or peak voltage adaptor to the digital multimeter.



Peak voltage tester (U.S.A. only)
Peak voltage adaptor 07HGJ-0020100

(not available in U.S.A.)
with commercially available digital multimeter
(impedance 10 MΩ/DCV minimum)

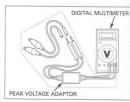

IGNITION COIL PRIMARY PEAK VOLTAGE

- Check all system connections before inspection. If the system is disconnected, incorrect peak voltage might be measured.
 Check cylinder compression and check that the
- spark plugs are installed correctly.

Open and support the front end of the fuel tank (page 3-4).

Shift the transmission into neutral and disconnect all the spark plug caps from the spark plug.

Connect known good spark plugs to the spark plug caps and ground the spark plugs to the cylinder head as done in a spark test.



With the ignition coil primary wire connected, connect the peak voltage adaptor or Imrie tester to the ignition coil.

CONNECTION:

No.1/NO.4 coil:

Yellow/Blue terminal (+) - Body ground (-) No.2/NO.3 coil:

Blue/Yellow terminal (+) - Body ground (-)

Turn the ignition switch "ON" and engine stop switch to "RUN"

Check for initial voltage at this time.

The battery voltage should be measured. If the initial voltage cannot be measured, check the power supply circuit (refer to Troubleshooting, page 17-3).

Shift the transmission into neutral.

Avoid touching Crank the engine with the starter motor and read ignithe spark plugs and tester probes tion coil primary peak voltage.

to prevent electric shock. PEAK VOLTAGE: 100V minimum


If the peak voltage is abnormal, check for an open circuit or poor connection in Yellow/blue and Blue/yellow wires.


If no defects are found in the harness, refer to the troubleshooting chart on page 17-3.

IGNITION PULSE GENERATOR PEAK VOLTAGE

- · Check all system connections before inspection. If the system is disconnected, incorrect peak voltage might be measured.
- · Check cylinder compression and check that the spark plugs are installed correctly.

Disconnect the 22P (Gray) connector from the ECM (page 5-76).

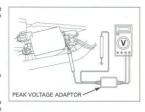

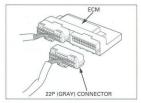

Connect the peak voltage tester or peak voltage adaptor probes to the connector terminal of the wire harness side and ground.

TOOLS:

Peak voltage tester (U.S.A. only)
Peak voltage adaptor 07HGJ-0020100
(not available in U.S.A.)

with commercially available digital multimeter (impedance 10 MΩ/DCV minimum)

CONNECTION:

Yellow terminal (+) - White/yellow (-)

Avoid touching the spark plugs and tester probes to prevent electric shock. Shift the transmission into neutral. Crank the engine with the starter motor and read the peak voltage.

PEAK VOLTAGE: 0.7 V minimum

If the peak voltage measured at the ECM multi-connector is abnormal, measure the peak voltage at the ignition pulse generator connector.


Remove the right side cover (page 2-2).


Disconnect the ignition pulse generator 2P (Red) connector and connect the tester probes to the terminal (Yellow and White/yellow).

In the same manner as at the ECM connector, measure the peak voltage and compare it to the voltage measured at the ECM connector.

- If the peak voltage measured at the ECM is abnormal and the one measured at the ignition pulse generator is normal, the wire harness has an open circuit or loose connection.
- If the peak voltage is lower than standard value, follow the checks described in the troubleshooting chart (page 17-3).

Install the removed parts in the reverse order of removal.

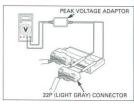

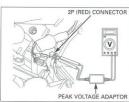

IGNITION COIL

REMOVAL/INSTALLATION

NO.1/NO.4 coil

Open and support the front end of the fuel tank (page 3-4).

Remove the spark plug cap.

Disconnect the ignition primary wires. Remove the bolts, clamp, spacers, collars, and ignition coil.

Installation is in the reverse order of removal.


NO.2/NO.3 coil


Open and support the front end of the fuel tank (page 3-4).

Remove the spark plug cap. Disconnect the ignition primary wires.

Remove the bolts and ignition coil assembly. Remove the bolts, spacer and bracket from the ignition coil.

Installation is in the reverse order of removal.

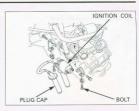

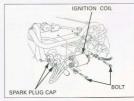

IGNITION PULSE GENERATOR

REMOVAL

Remove the side cover (page 3-4).

Disconnect the ignition pulse generator 2P (Red) connector.



Remove the bolts and ignition pulse generator cover.



Remove the dowel pins and gasket.



Remove the wire grommet from the cover. Remove the bolts and ignition pulse generator.



If the engine is out of the frame, remove the alternator cover (page 10-2) and hold the flywheel with the flywheel holder (07725-0040000), then remove the

bolt.

Shift the transmission into 6th gear and apply the rear brake.

Remove the ignition pulse generator rotor bolt.



INSTALLATION

Install the ignition pulse generator rotor by aligning the wide groove with the wide teeth of the crankshaft.

Install the washer and rotor bolt.



If the engine is out of frame, remove the alternator cover (page 10-2) and hold the flywheel with the flywheel holder (07725–004000), then tighten the bolt.

Shift the transmission into 6th gear and apply the rear

Tighten the ignition pulse generator rotor bolt to the specified torque.

TORQUE: 59 N·m (6.0 kgf·m, 43 lbf·ft)




Install the ignition pulse generator into the cover.


Apply sealant to the wire grommet, then install it into the groove of the cover.



Apply sealant to the crankcase as shown.

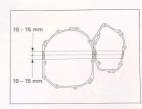

Apply sealant to the bolt threads, then install the bolts into the mark of the ignition pulse generator cover.

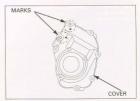

Install the right crankcase cover.
Install and tighten the ignition pulse generator cover bolts to specified torque.

TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)



Route the ignition pulse generator wire properly, connect the 2P (Red) connector.

Install the removed parts in the reverse order of removal.



IGNITION TIMING

Warm up the engine.

Stop the engine and remove the timing hole cap.



Read the instructions for timing light operation.




Start the engine and let it idle.

IDLE SPEED: 1,200 ± 100 min-1 (rpm)

The ignition timing is correct if the index mark on the ignition pulse generator cover align with the index line of the "F" mark and center line on the ignition pulse generator rotor.

Increase the engine speed by turning the throttle stop screw and make sure the "F" mark begins to move counterclockwise.

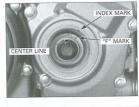

Check that the O-ring is in good condition, replace if necessary.

Apply grease to the timing hole cap threads and install the O-ring and timing hole cap.

Tighten the timing hole cap to the specified torque.

TORQUE: 18 N·m (1.8 kgf·m, 13 lbf·ft)




ECM (ENGINE CONTROL MODULE)

REMOVAL/INSTALLATION


Remove the rear cowl (page 2-2). Remove the rear side bolts of the rear fender. Disconnect the ECM 22P(black), 22P(Gray) connectors.

Remove the ECM.

Install the removed parts in the reverse order of removal,

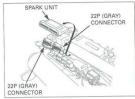

SYSTEM DIAGRAM

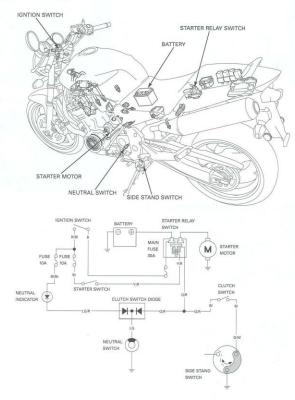

18. ELECTRIC STARTER

SYSTEM DIAGRAM	18-0	STARTER MOTOR	18-4
SERVICE INFORMATION	18-1	STARTER RELAY SWITCH	18-10
TROUBLESHOOTING	18-2	DIODE	18-11

SERVICE INFORMATION

GENERAL

- Always turn the ignition switch OFF before servicing the starter motor. The motor could suddenly start, causing serious injury.
- When checking the starter system, always follow the steps in the troubleshooting flow chart (page 18-2).
- A weak battery may be unable to turn the starter motor quickly enough, or supply adequate ignition current.
- If the current is kept flowing through the starter motor to turn it while the engine is not cranking over, the starter motor may be damaged.
- See section 10 for starter clutch servicing.
 See section 19 for following components:
- See section 19 for for - Ignition switch
- Ignition switch
- Starter switch
- Neutral switch
- Side stand switch
- Clutch switch

SPECIFICATION

Unit: mm (in)

ITEM	STANDARD	SERVICE LIMIT
Starter motor brush length	12.0 - 13.0 (0.47 - 0.51)	4.5 (0.18)

TORQUE VALUE


Starter motor terminal nut

12 N·m (1.2 kgf·m, 9 lbf·ft)


TROUBLESHOOTING

Starter motor does not turn

- · Check for a blown main or sub fuse before servicing.
- · Make sure the battery is fully charged and in good condition.

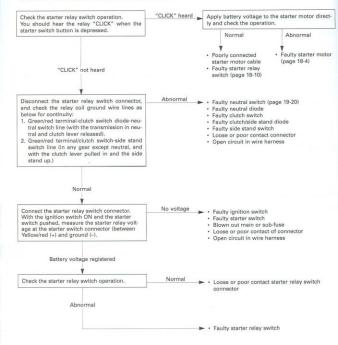

The starter motor turns when the transmission is in neutral, but does not turn with the transmission in any position except neutral, with the side stand up and the clutch lever pulled in.

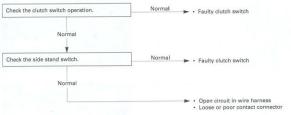

Starter motor turns engine slowly

- · Low battery voltage
- Poorly connected battery terminal cable
 Poorly connected starter motor cable
- Faulty starter motor
- · Poorly connected battery ground cable

Starter motor turns, but engine does not turn

- Starter motor is running backwards

 Case assembled improperly
 - Terminals connected improperly
- Faulty starter clutch
- Damaged or faulty starter drive gear

Starter relay switch "Clicks," but engine does not turn over

· Crankshaft does not turn due to engine problems

STARTER MOTOR

REMOVAL

With the ignition switch turned to "OFF", remove the negative cable at the battery before servicing the starter motor.

Remove the air cleaner housing (page 5-53).

With the ignition switch OFF, remove the negative cable at the battery before servicing the starter motor.

Remove the nut and the starter motor cable from the starter motor.

Remove the starter motor mounting bolts and ground cable.

Pull the starter motor out of the crankcase.





MOTOR CASE

REAR COVER

SEAL RING

DISASSEMBLY

Remove the following:

- Starter motor case bolts
- Rear cover
- Front cover
- Seal ring
- Lock washer
- Insulated washer
- Shims
- Armature



SHIMS

FRONT COVER

Becord the loca-

tion and number

of shims.

INSPECTION


Check for continuity between the brush and cable terminal (the indigo colored wire on the insulated brush holder).

There should be continuity.



Check for continuity between the motor case and cable terminal.

There should be no continuity.

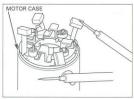


Inspect the brushes for damage and measure the brush length.


SERVICE LIMIT: 4.5 mm (0.18 in)



Check the bushing in the rear cover for wear or damage.

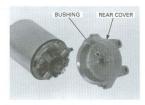

Check the oil seal and needle bearing in the front cover for deterioration, wear or damage.

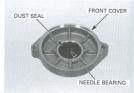

Do not use emery or sand paper on the commutator.

Check the commutator bars of the armature for discoloration.



Check for continuity between pairs of commutator bars.

There should be continuity.




Check for continuity between each commutator bar and the armature shaft. There should be no continuity.




Remove the following:

- Nut
- Washer
- Insulators
- O-ring
- Brush holder assembly
- Brush/terminal

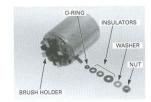

ASSEMBLY

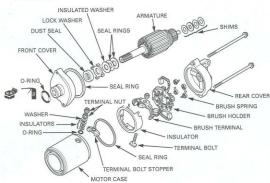


Align the terminal holder boss with the groove in the motor case. Install the brushes into the brush holder.

Install the cable terminal and brush holder into the rear cover, aligning the holder tab with the rear cover groove.



Install the insulators properly as noted during removal. Install the following:

- New O-ring - Insulated washers
- Washer
- Nut

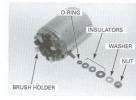

The coil may be damage if the magnet pulls the armature against the case. Install the shims

properly as noted

during removal.

Install the armature in the motor case. When installing the armature into the motor case, hold the armature tightly to keep the magnet of the case from pulling the armature against it.

NOTICE

The coil may be damaged if the magnet pulls the armature against the case.

When installing the cover, take care to prevent damaging the oil seal lip with the shaft.

Install the same number of shims in the same location as noted during disassembly. Install a new seal ring onto the motor case.

Install the rear cover, while pushing in the brushes into the brush holder and aligning the brush holder tab with the motor case groove.





Install the shims properly as noted during removal.

Install the shims and insulated washer onto the armature shaft.

Install a new seal ring onto the motor case. Apply grease to the oil seal lip and needle bearing in the front cover.

Install the lock washer onto the front cover. Install the front cover.



Make sure the index lines are aligned.



Install and tighten the case bolts securely.



INSTALLATION

Be careful not to damage the water hose. Coat a new O-ring with oil and install it into the starter motor groove.

Install the starter motor into the crankcase.



Route the starter motor cable and ground cable. Install the ground cable and mounting bolts, and tighten the bolts securely.



Install the starter motor cable, then tighten the terminal nut to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

Install the rubber cap securely.



STARTER RELAY SWITCH

OPERATION INSPECTION

Remove the right side cover (page 2-2).

Shift the transmission into neutral. Turn the ignition switch ON and engine stop switch to RUN.

Push the starter switch button.

The coil is normal if the starter relay switch clicks.


If you don't hear the switch "CLICK, " inspect the relay switch using the procedure below.

GROUND LINE INSPECTION

Disconnect the starter relay switch 4P connector.

Check for continuity between the Green/red wire (ground line) and ground.

If there is continuity when the transmission is in neutral or when the clutch is disengaged and the side stand switch is retracted, the ground circuit is normal (In neutral, there is a slight resistance due to the diode).

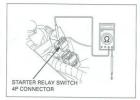

STARTER RELAY VOLTAGE INSPECTION

Connect the starter relay switch 4P connector.

Shift the transmission into neutral.

Measure the voltage between the Yellow/red wire terminal (+) and ground (-).

If the battery voltage appears only when the starter switch is pushed with the ignition switch ON and engine stop switch at RUN, it is normal.




REMOVAL/INSTALLATION

Remove the right side cover (page 2-2).

Disconnect the starter relay 4P connector. Disconnect the cables from the starter relay.

Remove the starter relay assembly from the frame guide.

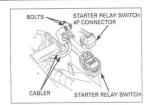


DIODE

REMOVAL

Remove the right side cover (page 2-2).

Open the fuse box and remove the diode.

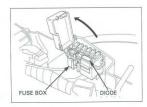


INSPECTION

Check for continuity between the diode terminals. When there is continuity, a small resistance value will register.


If there is continuity, in one direction, the diode is normal.

INSTALLATION

Install the diode in the reverse order of removal.

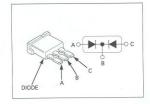

SYSTEM LOCATION

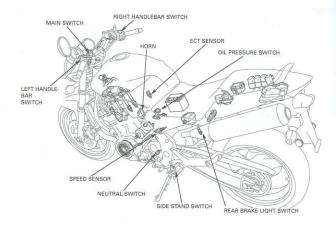

19. LIGHTS/METERS/SWITCHES

SYSTEM LOCATION	19-0	OIL PRESSURE SWITCH	19-16
SERVICE INFORMATION	19-1	FAN MOTOR CONTROL RELAY	19-18
TROUBLESHOOTING	19-3	FUEL RESERVE SENSOR	19-18
HEADLIGHT	19-4	IGNITION SWITCH	19-19
TURN SIGNAL	19-6	HANDLEBAR SWITCHES	19-20
TAIL/BRAKE LIGHT	19-7	BRAKE LIGHT SWITCH	19-21
LICENSE LIGHT	19-8	CLUTCH SWITCH	19-21
COMBINATION METER	19-8	NEUTRAL SWITCH	19-21
TACHOMETER	19-11	SIDE STAND SWITCH	19-22
SPEEDOMETER/SPEED SENSOR	19-12	HORN	19-23
COOLANT TEMPERATURE GAUGE/ SENSOR	19-14	TURN SIGNAL RELAY	19-23

SERVICE INFORMATION

GENERAL

A halogen headlight bulb becomes very hot while the headlight is ON, and remains hot for a while after it is turned OFF. Be sure to let it cool down before servicing.

- · Note the following when replacing the halogen headlight bulb.
 - Wear clean gloves while replacing the bulb. Do not put finger prints on the headlight bulb, as they may create hot spots on the bulb and cause it to fail.
 - If you touch the bulb with your bare hands, clean it with a cloth moistened with alcohol to prevent its early failure.
- Be sure to install the dust cover after replacing the bulb.
- Check the battery condition before performing any inspection that requires proper battery voltage. · A continuity test can be made with the switches installed on the motorcycle.
- The following color codes are used throughout this section.
 - Bu = Blue
- G = Green Lg = Light Green R = Red
 - W = White O = Orange BI = Black Gr = Grav Br = Brown Lb = Light Blue P = Pink Y = Yellow

SPECIFICATIONS

	ITEM		SPECIFICATIONS	
Bulbs	Headlight	Hi	12V - 60 W	
		Lo	12V – 55 W	
	Brake/tail light		12V - 21/5 W X 2	
	Turn signal light	Front	12V - 23/8 W X 2	
		Rear	12V – 21 W	
	License light		12V – 5 W	
	Instrument light		12V - 1.7 W X 3	
	Turn signal indicator		12V – 1.7 W X 2	
	High beam indicator		LED	
	Neutral indicator		LED	
	Oil pressure indicator		LED	
	PGM-FI warning indicator		LED	
	Fuel reserve indicator		LED	
Fuse	Main fuse		30 A	
	PGM-FI fuse		20 A	
	Sub fuse		20 A X 1, 10A X 4	
Tachometer peak voltage			10.5 V minimum	
ECT sensor	80 °C		2.1 – 2.6 k Ω	
resistration	120 °C		0.62 – 0.76 k Ω	

TORQUE VALUES

Coolant temperature/ECT sensor Side stand switch bolt Ignition switch mounting bolt Fan motor switch Oil pressure switch Oil pressure switch wire terminal bolt/washer Neutral switch 23 N·m (2.3 kgf·m, 17 lbf·ft) 10 N·m (1.0 kgf·m, 7 lbf·ft) 25 N·m (2.5 kgf·m, 18 lbf·ft) 18 N·m (1.8 kgf·m, 13 lbf·ft) 12 N·m (1.2 kgf·m, 9 lbf·ft) 2 N·m (0.2 kgf·m, 9 lbf·ft) 12 N·m (1.2 kgf·m, 9 lbf·ft)

ALOC bolt; replace with a new one

Apply sealant to the threads Apply sealant to the threads

TROUBLESHOOTING

SPEED SENSOR/SPEEDOMETER


The odometer/trip meter operate normally, but the speedometer does not operate

- · Faulty speedometer
- The speedometer operate normally, but the odometer/trip meter does not operate

 Faulty odometer/trip meter

The speedometer operation is abnormal

- · Check for the following before diagnosing.
 - Blown main or sub fuses
 - Loose or corroded terminals of the connectors
 - Discharged battery

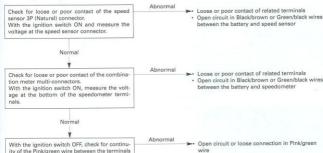

Abnormal

of the speed sensor and speedometer.

Support the motorcycle using a hoist or other support to rise the rear wheel off the ground. Measure the output voltage (sensor signal) at the speedometer with the ignition switch is ON while slowly turning the rear wheel by your hand.

Normal

➤ Faulty speed sensor


Faulty speed sensor
 Loose speed sensor mounting bolts

HEADLIGHT

BULB REPLACEMENT

Remove the headlight unit (page 19-5). Disconnect the headlight bulb connector. Remove the dust cover.

Remove the position light bulb from the socket.

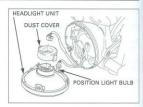

If you touch the bulb with your bare hands, clean it with cloth moistened with denatured alcohol to prevent early bulb failure.

Unhook the bulb retainer and remove the headlight bulb.

NOTICE

Avoid touching halogen headlight bulbs. Finger prints can create hot spots that cause a bulb to break.

Install a new bulb into the socket.


Install the new headlight bulb/socket aligning its tabs with the groove in the headlight unit.


Hook the bulb retainer into the headlight unit groove.

Install the dust cover tightly against the headlight unit with its arrow mark facing up.

Connect the headlight connector.

Install the headlight unit (page 19-5).

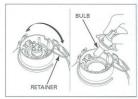

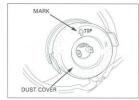

REMOVAL

Remove the screws and headlight unit.

Disconnect the headlight bulb connector (page 19-4). Remove the position light bulb socket (page 19-4).



Remove the wires from the clamps.
Remove the bolts, clamps/nuts and headlight case.
Remove the wires from the headlight case.



INSTALLATION

Install the wires to the headlight hole.

Install the headlight case, then align the index line of the headlight case and turn signal light bracket.

Install the bolts, nuts/clamps and tighten them.




Route the wires properly (page 1-22).

Route the wires Install the wires to the clamp as shown.



LIGHTS/METERS/SWITCHES

Connect the headlight bulb connector. Install the position bulb socket.

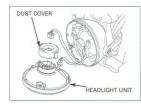

Install the headlight unit and tighten the screws.


Adjust the headlight AIM (page 3-22).



TURN SIGNAL


BULB REPLACEMENT

Remove the screw and turn signal lens.

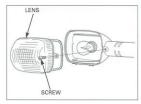

While pushing in, turn the bulbs counterclockwise to remove them and replace with new ones.

Install the turn signal lens in the reverse order of removal.

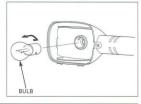

REMOVAL/INSTALLATION

Remove the headlight case (page 19-5). Disconnect the turn signal wire connectors.



Remove the turn signal mounting nut. Release the turn signal wire and remove the turn signal unit.

Route the turn signal wire properly (page 1-25).


Install the turn signal unit in the reverse order of removal.



TAIL/BRAKE LIGHT

BULB REPLACEMENT

Remove the screws and tail/brake light lens.

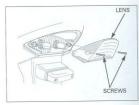

Remove the tail/brake light bulbs and replace with new ones.

Install the tail/brake light lens in the reverse order of removal.




LICENSE LIGHT

BULB REPLACEMENT


Remove the screws and license light lens.

Align the tail/brake light unit tabs with the bracket holes.

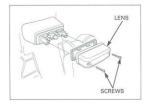

Remove the license light bulb and replace with a new one.

Install the tail/brake light lens in the reverse order of removal.

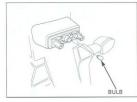

COMBINATION METER

REMOVAL

Remove the headlight case (page 19-5).

Disconnect the combination meter 9P connectors.




Remove the combination meter mounting nuts and combination meter.




DISASSEMBLY

Remove the screws and combination meter lower case.

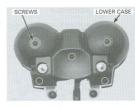


Remove the rubber cover and bulb sockets.

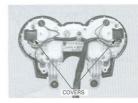

Remove the screws and combination meter upper case.



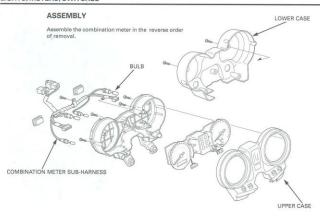

INSTALLATION

Install the combination meter onto the stay. If you remove the rubber collar which is on the stay, install it to the original position. Install and tighten the combination meter mounting nuts securely.

Install the headlight case(page 19-5).



Connect the combination meter 9P connectors.



9P CONNECTOR

TACHOMETER

SYSTEM INSPECTION

Remove the headlight unit (page 19-5).

Disconnect the combination meter 9P (Black)

Check for loose or poor contact terminals of the combination meter.

With the ignition switch ON, measure the voltage at the combination meter 9P (black) connector.

CONNECTION:

Black/brown (+) - Ground (-) Standard: Battery voltge

If there is no voltage, check for the following:

- Circuit in Black/brown wire
- Battery
- fuse (10A)


Connect the peak voltage adaptor (page 17-4).

TOOLS:

Peak voltage tester (U.S.A. only) Peak voltage adaptor 0

07HGJ-0020100 (not available in U.S.A)

(not available in U.S. with commercially available digital multimeter (impedance 10 MΩ/DCV minimum)

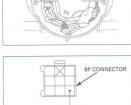




Connect the combination meter 9P (Black) connecter. Connect the peak voltage adaptor to the tachometer Yellow/green (+) terminal and ground.

Start the engine and measure the tachometer input peak voltage.

PEAK VOLTAGE: 10.5 V minimum

If the value is normal, replace the combination meter assembly.

If the measured value is below 10.5 V, replace the FCM.

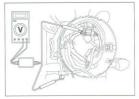


LIGHTS/METERS/SWITCHES

If the value is 0 V, perform the following: Disconnect the combination meter 9P (Black) connector (page 19-8). Disconnect the ECM 22P (Black) connector (page 17-11).

Check for continuity between the combination meter 9P (Black) connectors terminal and the ECM multiconnector Yellow/green terminals.

If there is no continuity, check the wire harness and combination meter sub-harness for an open circuit. If there is continuity, replace the ECM.

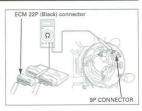

SPEEDOMETER/SPEED SENSOR

SYSTEM INSPECTION

Remove the left side cover (page 2-2)

Disconnect the speed sensor 3P connector and check for loose or poor contact of the connecter.




With the ignition switch is ON and measure the voltage at the speed sensor 3P connnector of the wire harness side.

CONNECTION:


Black/brown (+) - Green/black (-)

Standard: Battery voltge

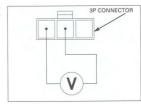

Remove the headlight unit (page 19-5).

Check for loose or poor contact of the combination 9P connecters.

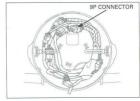

With the ignition switch ON and measure the voltage at the bottom of the combination meter terminals.

CONNECTION:

Black/brown (+) - Green (-) Standard: Battery voltge CONNECTION: Red/green (+) - Green (-)

Standard: Battery voltge

If there is no voltage, check for the following:

- Wire harnessBattery
- fuse (10A)


Disconnect the speed sensor 3P connector.


Disconnect the combination 9P (Black) connector.

With the ignition switch OFF, check for continuity of the Pink/green wire between the speed sensor connector and combination meter terminal.

There should be continuity.

If there is no continuity, check the wire harness.

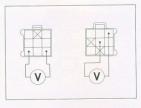

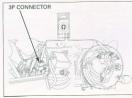


Support the motorcycle using a hoist or other support to rise the rear wheel off the ground.

Measure the voltage at the combination meter terminals with the ignition switch ON while slowly turning the rear wheel by hand.

CONNECTION:

Pink/green (+) - Green (-) Standard: Repeat 0 to 5 V

If the measurement is out of specification, inspect the open circuit in wire harness.

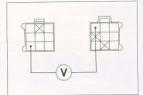

SPEED SENSOR REMOVAL/INSTALLATION

Remove the air cleaner housing (page 5-53).

Disconnect the speed sensor 3P connector and check for loose or poor contact of the connector.



Remove the bolts and speed sensor.



Remove the O-ring.

Route the speed sensor wire properly (page 1-28).

Installation is in the reverse order of removal.




COOLANT TEMPERATURE GAUGE /SENSOR

INSPECTION

Disconnect the ECT (engine coolant temperature) sensor wire connector from the sensor.

Ground the ECT sensor connector Green/blue terminal with a jumper wire at the wire harness side.

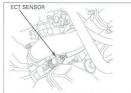

Turn the ignition switch ON and check the coolant temperature gauge.

Disconnect the thermo sensor wire connector from the ground immediately if the gauge needle moves fully to H.



Immediately disconnect the sensor wire connecter from the ground when the needle move to H (hot) to prevent damage to the guage.



If the needle moves, check the ECT sensor unit (see below).

If the needle does not move, check for voltage between the sensor wire connector and ground.

If the voltage is measured, the coolant temperature gauge unit is faulty.

If there is no valtage, check for voltage between the Black/Brown and Green/Blue wire terminal.

If there is no voltage between the terminal, coolant temperature gauge unit is faulty.

If a voltage is measured, check for the wire harness.



Remove the ECT sensor (page 6-3).


Disconnect the wire connector from the ECT sensor and remove the sensor.


Suspend the ECT sensor in a pan of coolant (50 - 50 mixture) an electric heating element and measure the resistance through the sensor as the coolant heats up.


- . Soak the ECT sensor in coolant up to its threads with at least 40 mm (1.6 in) from the bottom of the pan to the bottom of the sensor.
- · Keep the temperature constant for 3 minutes before testing. A sudden change of temperature will result in incorrect readings. Do not let the thermometer or ECT sensor touch the pan.

Γ	Temperature	80°C (68°F)	120°C (248°F)	
Г	Resistance	2.1 – 2.6 k Ω	0.62 - 0.76 k Ω	

Replace the sensor if it is out of specification by more than 10% at any temperature listed.

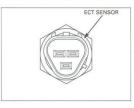

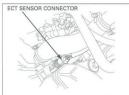


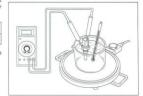

the sealing washer with a new one.


Always replace Install and tighten the ECT sensor to the specified

TORQUE: 23 N·m (2.3 kgf·m, 17 lbf·ft)

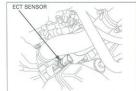

Connect the ECT/thermo sensor connector.

Fill the system and bleed the air (page 6-4).

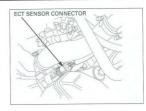

OIL PRESSURE SWITCH

INSPECTION

If the oil pressure warning indicator stays on while the engine is running, check the engine oil level before inspection.


Make sure that the oil pressure warning indicator come on with the ignition switch ON.



If the indicator does not come on, inspect as follows.

Remove the dust cover.

Remove the bolt and oil pressure switch terminal.

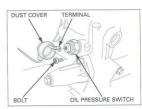

Short the oil pressure switch wire terminal to ground using a jumper wire.

The oil pressure warning indicator comes on when

The oil pressure warning indicator comes on wh the ignition switch is ON.

If the light does not comes on, check the sub-fuse (10A).



Check for continuity between the combination meter 9P connectors terminal and the oil pressure switch wire Blue/red terminals.

If there is no continuity, check the wire harness and combination meter sub-harness for an open circuit.




With the ignition switch ON, measure the voltage at the bottom of the combination meter terminals.

CONNECTION:

Blue/red (+) - Green (-) Standard: Battery voltge


If the value is normal, replace the combination meter assembly.

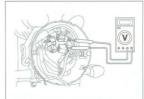

REMOVAL/INSTALLATION

Remove the boot, terminal bolt and wire terminal. Remove the oil pressure switch from the crankcase.

Apply sealant to the oil pressure switch threads as shown.

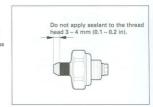


Install the oil pressure switch onto the crankcase, tighten it to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

Connect the oil pressure switch terminal to the switch and tighten the screw to the specified torque.

TORQUE: 2 N·m (0.2 kgf·m, 1.4 lbf·ft)

Install the dust cover.

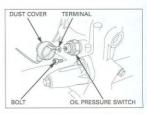

FAN MOTOR CONTROL RELAY

INSPECTION

Open and support the front end of the fuel tank (page 3-4).

Check for a blown fuse before inspection.

Fan motor does not stop

Turn the ignition switch OFF, disconnect the fan motor control relay 4P connector and turn the ignition switch ON again,

If the fan motor does not stop, check for a shorted wire between the fan motor and relay.

If the fan motor stops, replace the fan motor control

If the fan motor stops, replace the fan motor contro relay.

Fan motor does not start

Before testing, warm up the engine to the operating temperature.

Check the wire color when you select the fan motor control relay.

Disconnect the fan motor control relay 4P connector and short the Red/green and Black/blue terminals of the connector with a jumper wire.

Turn the ignition switch ON and check the fan motor.

If the motor does not start, check the connection at the fan motor 2P connector, and between the Open circuit in Black/blue wire.

Wire harness is OK, Check for below

With the ignition switch is ON and measure the voltage at the fan motor control relay 4P connector.

CONNECTION:

Black/white (+) - Ground (-) Standard: Battery voltge

If there is no voltage, check for open circuit in Black/white wire.


If the value is normal, replace the fan motor control relay.


FUEL RESERVE SENSOR


INSPECTION


Turn the ignition switch is ON and make sure the fuel reserve indicator come ON.

If the fuel reserve indicator does not indicate properly, check for the following.

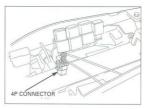

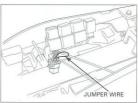

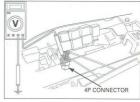

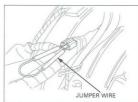

Disconnect the fuel reserve sensor 3P connector. Short the wire harness side connector Red/black and Green terminals with a jumper wire.


Turn the ignition switch is ON and make sure the fuel reserve indicator come ON.

If the indicator comes ON, replace the fuel pump assembly.

If the indicator still comes ON, check for an open or

short circuit in wire harness.

If the wire harness is OK, replace the combination meter.

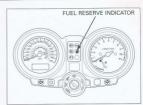


IGNITION SWITCH

INSPECTION

Remove the headlight unit (page 19-5).


Disconnect the ignition switch wire 4P connector.

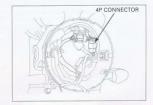

Check for continuity between the wire terminals of the ignition switch connector in each switch position. Continuity should exist between the color coded wires as follows:

IGNITION SWITCH

	FAN	IG	BAT1	DIODE	KEY
ON	0	0	0		KEY ON
OFF		0		0	KEY OFF
LOCK		0		0	KEY OFF LOCKPIN
COLOR		R/BI	R	Р	

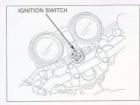

REMOVAL/INSTALLATION

Remove the top bridge (page 13-25).

Remove the bolts and ignition switch.

Install the ignition switch in the reverse order of removal.

Tighten the ignition switch mounting bolt to the specified torque.


TORQUE: 25 N·m (2.5 kgf·m, 18 lbf· ft)



HANDLEBAR SWITCHES

Remove the headlight unit (page 19-5).

Disconnect the handlebar switch connectors.

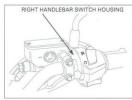

Check for continuity between the wire terminals of the handlebar switch connector.

Continuity should exist between the color coded wire terminals as follows:



ENGINE STOP SWITCH

	IG	BAT2
OFF		
RUN	0	0
COLOR	BI	W/BI

STARTER SWITCH

	ST	IG	BAT4	HL
FREE			0	0
PUSH	0	0		
COLOR	Y/R	BI	BI/R	Bu/W

TURN SIGNAL SWITCH

I OILIA OIL	JIMAL O	VVIICII				
	W	R	L	Р	PR	PL
R	0-	-0		0-		0
N						
L	0		0	0-	-0	
COLOR	GR	Lb	0	W/BI	Sb/W	O/W

	BAT	Hi
FREE	11	
PUSH	0	0
COLOR	BI/R	1

DIMMED CWITCH PASSING SWITCH

	HL	Lo	Hi
Lo	0	0	
(N)	0	0	0
Hi	0		0
COLOR	Bu/w	W	Bu

HORN SWITCH

	Но	BAT
FREE		
PUSH	0	-0
COLOR	Lg	BI/Br

BRAKE LIGHT SWITCH

FRONT

Disconnect the front brake light switch connectors and check for continuity between the terminals.

There should be continuity with the brake lever applied, and there should be no continuity when the brake lever is released.



REAR

Remove the seat (page 2-2).

Disconnect the rear brake light switch connector and check for continuity between the terminals.

There should be continuity with the brake pedal applied, and there should be no continuity when the brake pedal is released.



CLUTCH SWITCH

Disconnect the clutch switch connectors.

There should be continuity with the clutch lever applied, and there should be no continuity when the clutch lever is released.



NEUTRAL SWITCH

Disconnect the neutral switch connector from the

Shift the transmission into neutral and check for continuity between the Light green wire terminal and ground.


There should be continuity when the transmission is in neutral, and no continuity when the transmission is in gear.



SIDE STAND SWITCH


INSPECTION

Disconnect the side stand switch 2P (Green) connector.

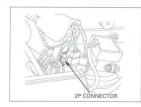

Check for continuity between the wire terminals of the side stand switch connector.


Continuity should exist only when the side stand is

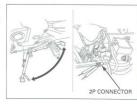

REMOVAL

Disconnect the side stand switch 2P (Green) connector.

Remove the bolt and side stand switch.

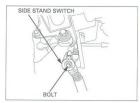


INSTALLATION

Install the side stand switch by aligning the switch pin with the side stand hole and the switch groove with the return spring holding pin.

Secure the side stand switch with a new bolt.

TORQUE: 10 N·m (1.0 kgf-m, 7 lbf-ft)

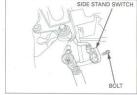

Connect the side stand switch 2P (Green) connector.

Install the side cover (page 2-2).



HORN

Disconnect the wire connectors from the horn.

Connect the 12V battery to the horn terminal directly. The horn is normal if it sounds when the 12 V battery is connected across the horn terminals.

TURN SIGNAL RELAY INSPECTION

Check the following:

- Battery condition
- Burned out bulb or non-specified wattage
- Burned fuse
- Ignition switch and turn signal switch function
- Loose connectors

If the above items are all normal, check the following:

Remove the rear cowl (page 2-3).

Disconnect the turn signal connectors from the relay.

Short the White/green and Gray terminals of the turn signal relay connector with a jumper wire.

Start the engine and check the turn signal light by turning the switch ON.

Light comes on


Light does not come on


Broken wire harness


Check for continuity between the Green terminal of the relay connector and ground.



- · Faulty turn signal relay.
- · Poor connection of the connector.

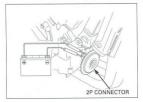


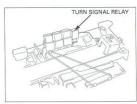

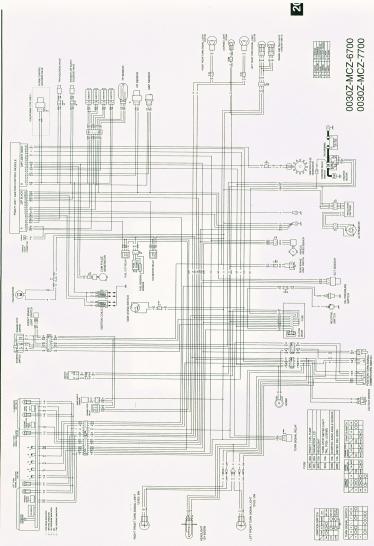

21. TROUBLESHOOTING

ENGINE DOES NOT START OR IS		POOR PERFORMANCE AT HIGH	
HARD TO START	21-1	SPEED	21-4
ENGINE LACKS POWER	21-2	POOR HANDLING	21-4
POOR PERFORMANCE AT LOW AND IDLE SPEED	21-3		

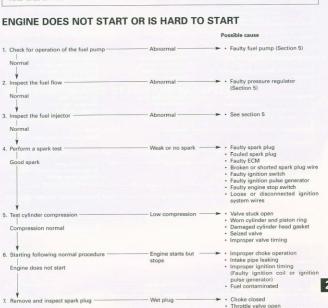


· Clogged air cleaner


ENGINE LACKS POWER

Possible cause

1.	Raise wheel off the ground and spin by ——hand	— Wheels do not spin —— freely	Brake dragging Worn or damaged wheel bearing
	Wheel spins freely		
2.	Check tire pressure	— Pressure low —	Faulty tire valve Punctured tire
120	\		Clutch slipping
3.	Accelerate rapidly from low to second Engine speed reduced when clutch is released	 Engine speed does- n't change accord- ingly when clutch is released 	Worn clutch discs/plates Warped clutch discs/plates Weak clutch spring Additive in engine oil
4	Accelerate lightly —	Engine speed does	Air cleaner dirty
	Engine speed increase	not increase	Restricted fuel flow Clogged muffler Pinched fuel tank breather
5	Check ignition timing	- Incorrect	➤ • Faulty ECM
J.	Correct		Faulty ignition pulse generator
6.	Test cylinder compression Normal	Incorrect —	 Valve stuck open Worn cylinder and piston rings Leaking head gasket Improper valve timing
7.	Inspect fuel flow	— Abnormal —	➤ • Faulty pressure regulator (Section
	Normal		
8.	Inspect the fuel injector	— Abnormal —	➤ • See section 5
	Normal		
9.	Remove spark plugs	— Fouled or discolored —	➤ • Faulty spark plug
	Not fouled or discolored		
10.	Check oil level and condition	Incorrect —	Oil level too high Oil level too low
	Correct		Contaminated oil
11.	Remove cylinder head cover and inspect — lubrication	Valve train not lubri- cated properly	 Clogged oil passage Clogged oil control orifice
	Valve train lubricated properly		

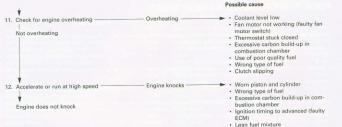

POOR PERFORMANCE AT LOW AND IDLE SPEED

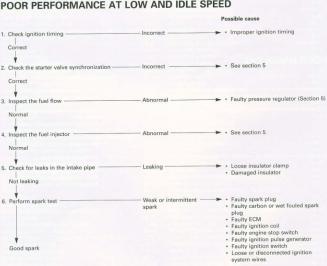

POOR PERFORMANCE AT HIGH SPEED

		Possible cause
1. Check ignition timing	Incorrect	➤ • Faulty ECM
Correct		
1		
2. Inspect the fuel flow	Abnormal -	➤ • Faulty pressure regulator (Section 5)
Normal		
\		
Inspect the fuel injector	Abnormal —	➤ • See section 5
Normal		
Check valve timing	Incorrect —	Camshaft not installed properly
Correct		
•		
5. Check valve spring	Weak	➤ • Faulty valve spring
Not weak		
POOR HANDLING		
		Possible cause
1. If steering is heavy —		 Steering stem adjusting nut too tight Damaged steering head bearings
2. If either wheel is wobbling		Excessive wheel bearing play
		Bent rim Improper installed wheel hub
		Swingarm pivot bearing excessively worn
		Bent frame
3. If the motorcycle pulls to one side ——		Faulty shock absorber
		Front and rear wheel not aligned Bent fork
		Dent fork

Bent swingarm
 Bent axle

INDEX

AIR CLEANER	3-5	ENGINE STOP RELAY	5-75
AIR CLEANER HOUSING	5-53	FAN MOTOR CONTROL SENSOR	19-18
AIR CLEANER HOUSING SIDE COVER	2-2	FLYWHEEL INSTALLATION	10-7
	16-9	FLYWHEEL REMOVAL	10-3
	10-8	FORK	13-15
	10-2	FRONT BRAKE CALIPER	15-19
BANK ANGLE SENSOR	5-74	FRONT FENDER	2-3
	16-5	FRONT MASTER CYLINDER	15-10
BRAKE FLUID	3-20	FRONT WHEEL	13-10
	15-4	FUEL CUT RELAY	5-48
			3-40
BRAKE LIGHT SWITCH	3-22	FUEL LINE	5-44
BRAKE LIGHT SWITCH	19-21	FUEL LINE INSPECTION	5-44
BRAKE PAD WEAR	3-20	FUEL PUMP	
BRAKE PAD/DISC	15-7	FUEL RESERVE SENSOR	19-18
	15-26	FUEL TANK	5-49
BRAKE SYSTEM	3-21	GEARSHIFT LINKAGE	9-12
BY-STARTER OPERATION	3-5	HANDLEBAR SWITCHES	19-20
CABLE & HARNESS ROUTING	1-22	HANDLEBARS	13-3
CAM CHAIN TENSIONER LIFTER	8-29	HEADLIGHT	19-4
CAM PULSE GENERATOR	5-72	HEADLIGHT AIM	3-22
CAMSHAFT INSTALLATION	8-23	HORN	19-23
CAMSHAFT REMOVAL	8-6	IAT SENSOR	5-71
CHARGING SYSTEM INSPECTION	16-6	IGNITION COIL	17-7
CLUTCH	9-4	IGNITION PULSE GENERATOR	17-7
CLUTCH SWITCH	19-21	IGNITION SWITCH	19-19
CLUTCH SYSTEM	3-22	IGNITION SYSTEM INSPECTION	17-4
COMBINATION METER	19-8	IGNITION TIMING	17-10
COOLANT REPLACEMENT	6-4	INJECTOR	5-62
COOLANT TEMPERATURE GAUGE/SENSOR	19-14	LICENSE LIGHT	19-8
COOLING SYSTEM	3-14	LIFTER LEVER	9-4
CRANKCASE ASSEMBLY	11-12	LUBRICATION & SEAL POINTS	1-18
CRANKCASE BREATHER	3-6	LUBRICATION SYSTEM DIAGRAM	4-0
CRANKCASE SEPARATION	11-3	MAIN JOURNAL BEARING	12-6
CRANKPIN BEARING	12-8	MAINTENANCE SCHEDULE	3-3
CRANKSHAFT	12-3	MAP SENSOR	5-70
CYLINDER COMPRESSION TEST	8-4	MODEL IDENTIFICATION	1-1
CYLINDER HEAD ASSEMBLY	8-20	MUFFLER/EXHAUST PIPE	2-5
CYLINDER HEAD COVER DISASSEMBLY/ASSEMBLY	8-5	NEUTRAL SWITCH	19-21
CYLINDER HEAD COVER INSTALLATION	8-28	NUTS, BOLTS, FASTENERS	3-24
CYLINDER HEAD COVER REMOVAL	8-4	OIL COOLER	4-8
CYLINDER HEAD DISASSEMBLY	8-12	OIL PRESSURE INSPECTION	4-3
CYLINDER HEAD INSPECTION	8-13	OIL PRESSURE SWITCH	19-16
CYLINDER HEAD INSTALLATION	8-21	OIL PUMP	4-5
CYLINDER HEAD REMOVAL	8-11	OIL STRAINER/PRESSURE RELIEF VALVE	4-3
DIAGNOSTIC CODE INDICATION	20-5	PAIR SOLENOID VALVE	5-77
DIODE	18-11	PGM-FI (PROGRAMMED FUEL INJECTION)	
DRIVE CHAIN	3-15	SYSTEM	5-6
ECM (ENGINE CONTROL MODULE)	5-76	PGM-FI SELF-DIAGNOSIS MALFUNCTION	
ECM (ENGINE CONTROL MODULE)	17-11	INDICATOR LAMP (MIL) FAILURE CODES	5-10
ECT SENSOR	5-71	PISTON/CYLINDER	12-11
EMISSION CONTROL SYSTEMS	1-33	POOR HANDLING	22-4
ENGINE CONTROL MODULE (ECM)	20-10	POOR PERFORMANCE AT HIGH SPEED	22-4
ENGINE DOES NOT START OR IS HARD TO START		POOR PERFORMANCE AT LOW AND IDLE SPEED	22-3
ENGINE IDLE SPEED	3-13	PRESSURE REGULATOR	5-63
ENGINE INSTALLATION	7-10	RADIATOR	6-7
ENGINE LACKS POWER	22-2	RADIATOR COOLANT	3-13
ENGINE OIL/OIL FILTER	3-12	RADIATOR RESERVE TANK	6-15
ENGINE REMOVAL	7-5	REAR BRAKE CALIPER	15-23
LITORIE ILLINOTTIL			

REAR COWL	2-3	SYSTEM TESTING	6-3
REAR FENDER A	2-4	TACHOMETER	19-11
REAR FENDER B	2-4	TAIL/BRAKE LIGHT	19-7
REAR MASTER CYLINDER	15-15	THERMOSTAT	6-6
REAR WHEEL	14-3	THROTTLE BODY	5-58
REGULATOR/RECTIFIER	16-9	THROTTLE OPERATION	3-4
REPLACEMENT PARTS FOR PROBLEM	20-12	TOOLS	1-17
RIGHT CRANKCASE COVER INSTALLATION	9-14	TORQUE VALUES	1-12
RIGHT CRANKCASE COVER INSTALLATION	9-14	TP SENSOR	5-73
SFAT	2-2	TRANSMISSION	11-6
	3-15		11-0
SECONDARY AIR SUPPLY SYSTEM SERVICE INFORMATION	3-15	TROUBLESHOOTING (ALTERNATOR/STARTER CLUTCH)	10-1
(ALTERNATOR/STARTER CLUTCH)	10-1	(BATTERY/CHARGING SYSTEM)	16-3
(BATTERY/CHARGING SYSTEM)	16-1	(CLUTCH/GEARSHIFT LINKAGE)	9-2
(CLUTCH/GEARSHIFT LINKAGE)	9-1	(COOLING SYSTEM)	6-3
(COOLING SYSTEM)	6-1	(CRANKCASE/TRANSMISSION)	11-2
(CRANKCASE/TRANSMISSION)	11-1	(CRANKSHAFT/PISTON/CYLINDER)	12-2
(CRANKSHAFT/PISTON/CYLINDER)	12-1	(CYLINDER HEAD/VALVES)	8-3
(CYLINDER HEAD/VALVES)	8-1	(ELECTRIC STARTER)	18-2
(ELECTRIC STARTER)	18-1	(FRAME/BODY PANELS/EXHAUST SYSTEM)	2-1
(ENGINE REMOVAL/INSTALLATION)	7-1	(FRONT WHEEL/SUSPENSION/STEERING)	13-2
(FRAME/BODY PANELS/EXHAUST SYSTEM)	2-1	(FUEL SYSTEM)	5-3
(FRONT WHEEL/SUSPENSION/STEERING)	13-1	(HYDRAULIC BRAKE)	15-3
(FUEL SYSTEM)	5-1	(IGNITION SYSTEM)	17-3
(HYDRAULIC BRAKE)	15-2	(LIGHTS/METERS/SWITCHES)	19-3
(IGNITION SYSTEM)	17-1	(LUBRICATION SYSTEM)	4-2
(LIGHTS/METERS/SWITCHES)	19-1	(REAR WHEEL/SUSPENSION)	14-2
(LUBRICATION SYSTEM)	4-1	TURN SIGNAL	19-6
(MAINTENANCE)	3-1	TURN SIGNAL RELAY	19-23
(REAR WHEEL/SUSPENSION)	14-1	VALVE CLEARANCE	3-7
SERVICE RULES	1-1	VALVE GUIDE REPLACEMENT	8-16
SHIFT FORK/SHIFT DRUM	11-4	VALVE SEAT INSPECTION/REFACING	8-17
SHOCK ABSORBER	14-10	WATER PUMP	6-13
SHOCK LINK LOWER BRACKET INSTALLATION	7-16	WHEELS/TIRES	3-25
SHOCK LINK LOWER BRACKET REMOVAL	7-3	WIRING DIAGRAMS	20-1
SIDE COVER	2-2	Willing Diagnamo	20 1
SIDE STAND	3-23		
SIDE STAND SIDE STAND SWITCH	19-22		
SPARK PLUG	3-6		
SPECIFICATIONS	1-3		
	19-12		
SPEEDOMETER/SPEED SENSOR			
STARTER CLUTCH	10-5		
STARTER MOTOR	18-4		
STARTER RELAY SWITCH	18-10		
STARTER VALVE	5-65		
STARTER VALVE SYNCHRONIZATION	5-68		
STATOR	10-2		
STEERING HEAD BEARINGS	3-25		
STEERING STEM	13-25		
SUSPENSION	3-24		
SWINGARM	14-14		
SYSTEM DIAGRAM			
(BATTERY/CHARGING SYSTEM)	16-0		
(ELECTRIC STARTER)	18-0		
(FUEL SYSTEM)	5-5		
SYSTEM DIAGRAM	10701276		
(IGNITION SYSTEM)	17-0		
SYSTEM FLOW PATTERN	6-0		
SYSTEM LOCATION	0.0		
(FUEL SYSTEM)	5-4		





MADE FROM 50% RECYCLED PAPER